

PCA-6186-B Socket 478 Pentium 4 SBC w/ VGA, Dual Ethernet (or Dual Gb Ethernet) & HISA

Packing List

Before you begin installing your card, please make sure that the following materials have been shipped:

- 1 PCA-6186-B socket 478 Pentium 4/Celeron® D/Celeron® processor-based single board computer
- 1 FDD cable p/n: 1700340640
- 2 Ultra ATA 66/100 HDD cables p/n: 1701400452
- 1 printer (parallel port) and COM port cable kit p/n: 1701260305
- 1 ivory cable for PS/2 keyboard and mouse (not available for dual layer models) p/n: 1700060202
- 1 USB cable (optional) p/n: 1700100170
- 1 single-slot bracket (only for dual layer models) p/n: 1962159010
- 1 four-pin ATX 12V cable for the CPU p/n: 170304015K
- 1 PCA-6186-B startup manual
- CD disc and manual (in PDF format)
- Warranty certificate

If any of these items are missing or damaged, contact your distributor or sales representative immediately.

- Note 1: For detailed contents of the PCA-6186-B, please refer to the enclosed CD-ROM or disk (in PDF format).
- Note 2: Acrobat Reader is required to view any PDF file. Acrobat Reader can be downloaded at: www.adobe.com/Prodindex/acrobat/read-step.html (Acrobat is a trademark of Adobe.)

For more information on this and other Advantech products, please visit our website at:

<http://www.advantech.com>

<http://www.advantech.com/eplatform>

For technical support and service, please visit our support website at:

<http://www.advantech.com/support>

This manual is for the PCA-6186 series Rev. B1.

Part No. 2002618640
Printed in Taiwan

1st Edition
September 2005

Specifications

Standard SBC Functions

- **CPU:** Socket 478 for Pentium® 4/Celeron® D/Celeron® FSB 400/533 MHz
- **BIOS:** Award 4 Mb Flash memory BIOS
- **Chipset:** Intel 845GV+ICH4
- **System Memory:** Two 184-pin DIMM sockets accepts up to 2 GB DDR 200/266/333 (PC1600/2100/2600)
- **Enhanced IDE Interface:** Supports up to four EIDE devices. BIOS auto-detect, PIO Mode 4, Ultra ATA 100/66/33 transfer
- **FDD interface:** Supports up to two FDDs
- **Serial ports:** Two serial RS-232 ports
- **Parallel port:** One parallel port, supports SPP/EPP/ECP mode
- **Keyboard/mouse connector:** Supports one standard PS/2 keyboard and mouse
- **Watchdog timer:** 255 level timer intervals
- **USB (2.0):** Maximum up to six Universal Serial Bus ports

VGA/LCD Interface

- **Chipset:** Intel 845GV integrated
- **Interface:** Intel® Extreme Graphics Architecture

Ethernet Interface

- **Chipset:** Dual Intel 82562/82551 (or dual Intel 82540)
- **Ethernet interface:** Dual PCI 10/100 Mbps Ethernet (or Dual PCI 10/100/1000 Mbps Ethernet), IEEE 802.3U protocol compatible
- **Connection:** On-board RJ-45 connector x 2

Mechanical and Environmental

- **Dimensions (L x W):** 338 x 122 mm
- **Power supply voltage:** +5 V ± 12 V
- **Power requirements:** Typical: +5 V: 3.23 A, +12 V: 4.64 A (Intel Pentium® 4 2.8 GHz, DDR333 1 GB x 2)
- **Operating temperature:** 0 ~ 60° C (depending on CPU)
- **Weight:** 0.5 kg (weight of board)

Jumpers and Connectors

The board has a number of jumpers that allow you to configure your system to suit your application.

The table below lists the function of each of the jumpers and connectors.

Label	Function
J1	CMOS clear
J2	Watchdog timer output selection

Label	Function
CN1	Primary IDE connector
CN2	Secondary IDE connector
CN3	Floppy drive connector
CN4	Parallel port
CN6	USB port
CN7	VGA connector
CN8	10/100Base-T Ethernet connector 1
CN9	Serial port: COM1
CN10	Serial port: COM2
CN11	PS/2 keyboard and mouse connector
CN12	External keyboard connector
CN13	Infrared (IR) connector
CN14	CPU FAN connector
CN16	Power LED
CN17	External speaker
CN18	Reset connector
CN19	HDD LED connector
CN20	ATX feature connector
CN21	ATX soft power switch
CN22	HW Monitor Alarm Close: Enable OBS Alarm Open: Disable OBS Alarm
CN27	Extension I/O board connector
CN28	Extension I/O board connector
CN29	SM BUS Connector
CN43	Audio Daughter Board
CN65	Front Panel LAN Indicator connector
ATX1	ATX 12V Auxiliary power connector (P4 CPU)

Extension I/O board

Daughter board 1	
CN31	USB port 0, 1
CN32	USB port 2, 3
CN33	PS/2 mouse connector
CN34	10/100Base-T Ethernet connector 2

J1: CMOS clear function

 
Pins	Result
1-2 (open)	Keep CMOS data*
1-2 (close)	Clear CMOS



*default setting

J2: Watchdog timer output option

Closed pins	Result
1-2	IRQ11
2-3	System reset *



Note: Only applies to PCA-6186E2-00B1 and PCA-6186G2-00B1

If your system has only one unused expansion slot to accommodate the CPU card, you can replace the standard dual-slot bracket with the single-slot bracket included in the package.

Software Installation

The CD disc contains a driver installer program that will lead you through the installation of various device drivers needed to take full advantage of your CPU card.


Caution

The computer is supplied with a battery-powered Real-time Clock circuit. There is a danger of explosion if battery is incorrectly replaced. Replace only with same or equivalent type recommended by the manufacturer. Discard used batteries according to manufacturer's instructions


Safety Information

This device complies with the requirements in Part 15 of the FCC rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation

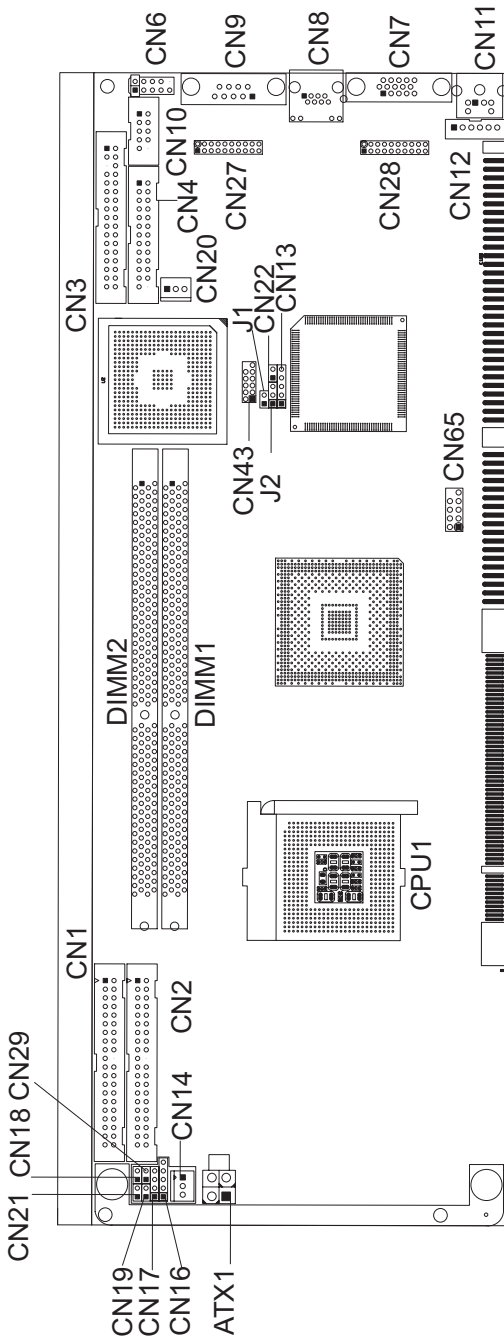

Board Layout: Jumper and Connector Locations

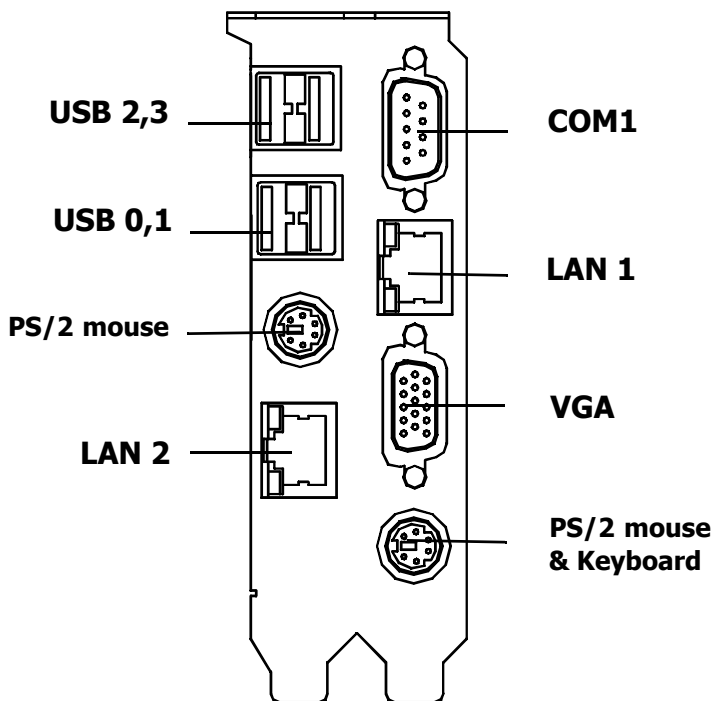

Extension I/O daughter board