

## **PS/2 header pinout for Sowah (Spear) MR-504**

5-pin header, corner of board, near keyboard port.

- 1 = PS2-pin 5 = +CLK
- 2 = PS2-pin 3 = GND
- 3 = PS2-pin 1 = +DATA
- 4 = Not connected
- 5 = PS2-pin 4 = 5V