

R651 Jumper Setting

CPU Type Selector : JP1, JP2, JP7, JP8, JP10 ~ JP13

CPU Type	System CLK	JP1	JP2	JP7	JP8	JP10	JP11	JP12	JP13
150 MHz	60 MHz x 2.5	O	S	O	S	O	S	S	S
166 MHz	66 MHz x 2.5	S	O	S	O	O	S	S	S
180 MHz	60 MHz x 3	O	S	O	S	S	O	S	S
200 MHz	66 MHz x 3	S	O	S	O	S	O	S	S

ATX Power ON/OFF Switch : JP4

ATX Power	JP4
ON	Short
OFF	Open

CMOS Clear Jumper : JP15

Function	JP15
Retain CMOS Data (default)	Open
Clear CMOS data	Short

Flash EPROM Voltage Selector : JP17

EPROM Voltage Mode	JP17
+5V Flash ROM (default)	1-2
+12V Flash ROM	2-3

Flash EPROM Program Mode Selector : JP14

EPROM Program Mode	JP14
Write Protected	1-2
Flash Mode (default)	2-3

Monitor Type Selector : JP16

Monitor Type	JP16
CGA	Short
Mono/VGA	Open (Default)