

R657 & R657E Jumper Setting

Hardware Setting :

CPU Type Selector : SW1

CPU Type		System CLK	1	2	3	4
Pentium II	Deschutes					
3.5X	3.5X	X 3.5	On	Off	Off	On
4.0X	4.0X	X 4	Off	On	On	On
4.5X	4.5X	X 4.5	Off	On	Off	On
5.0X	5.0X	X 5	Off	Off	On	On

SW1: 1-4:Bus Ratio Select

Bus Ratio	SW: 1~4	Bus Ratio	SW: 1~4	Bus Ratio	SW: 1~4
3.0X	ON	5.0X	ON	7.0X	ON
3.5X	ON	5.5X	ON	7.5X	ON
4.0X	ON	6.0X	ON	8.0X	ON
4.5X	ON	6.5X	ON		

SW1: 1-5: Bus Clock Select

BUS Clock	SW 1-5
66MHz	ON
Auto Detect	OFF (Default)

SW1: 1-6: In Order Queue Depth

IOQ Depth SW 1-6	SW 1-6
1	ON
4	OFF (Default)

Keyboard Power On Support: JP2 & JP3

Function	JP2 & JP3
Normal (Default)	1-2
Keyboard Power On	2-3

CMOS Clear Jumper: JP4

Function	JP4
Retain CMOS Data (default)	1-2
Clear CMOS data	2-3

Flash EPROM Voltage Selector: JP5

EPROM Voltage Mode	JP5
+5V Flash ROM (default)	1-2
+12V Flash ROM	2-3

R657E CPU Host Clock Software Setting :

Power on computer, press into BIOS SETUP.

Move to [CHIPSET FEATURES SETUP], <Enter>.

Move to [CPU HOST Clock], use <PageUp / PageDown> to select.

CPU Host Clock : Choose 100, 103*, 112*, 133* MHz (For 350, 400, 450...CPU)
or 66, 68*, 75*, 83* MHz (For 233, 266, 300, 333...CPU)