

Dell® OptiPlex® GXa Systems

**SERVICE MANUAL**



**Information in this document is subject to change without notice.**

**© 1996–1997 Dell Computer Corporation. All rights reserved.**

Reproduction in any manner whatsoever without the written permission of Dell Computer Corporation is strictly forbidden.

Trademarks used in this text: *Dell*, the *DELL* logo, and *OptiPlex* are registered trademarks of Dell Computer Corporation; *Intel* and *Pentium* are registered trademarks and *MMX* is a trademark of Intel Corporation; *Microsoft*, *Windows*, and *MS-DOS* are registered trademarks of Microsoft Corporation; *IBM* is a registered trademark of International Business Machines Corporation; *3Com* is a registered trademark of 3Com Corporation.

Other trademarks and trade names may be used in this document to refer to either the entities claiming the marks and names or their products. Dell Computer Corporation disclaims any proprietary interest in trademarks and trade names other than its own.

August 1997 P/N 51555

# Contents

## Chapter 1

### **System Overview..... 1-1**

Overview of Chassis Configurations .....	1-1
Chassis Differences.....	1-2
Chassis Similarities.....	1-2
Standard Features .....	1-2
Pentium II Microprocessor .....	1-2
Secondary L2 Cache .....	1-3
Main Memory .....	1-3
Upgradable BIOS in Flash Memory .....	1-3
EIDE Subsystem.....	1-3
SMART Technology.....	1-3
Built-In Diskette/Tape Drive Subsystem .....	1-3
Built-In SVGA Subsystem .....	1-4
Built-In Audio Controller .....	1-4
Built-In Ethernet NIC Support .....	1-4
Network Cable Requirements.....	1-5
Full Set of I/O Ports .....	1-5
Universal Power Supply .....	1-5
Location of Major Components .....	1-6
Advanced Expansion Features .....	1-8
Low-Profile Computer's Expansion-Card Slots.....	1-9
Midsize Computer's Expansion-Card Slots .....	1-9
Mini Tower Computer's Expansion-Card Slots .....	1-10
Upgrade Options.....	1-11
Microprocessor/L2 Cache Upgrades.....	1-11
Main Memory Expansion .....	1-11
Video-Memory Upgrade Option.....	1-12

Computer Service Information . . . . .	1-12
Online Documentation . . . . .	1-12
System Diagnostics . . . . .	1-12
System-Board Service Data . . . . .	1-12
System Board Jumpers . . . . .	1-14
Interrupt Assignments . . . . .	1-15
DMA Channel Assignments. . . . .	1-16
Hard-Disk Drive Service Information . . . . .	1-17
Hard-Disk Drive for the Low-Profile Computer . . . . .	1-18
Hard-Disk Drive for the Midsize Computer. . . . .	1-18
Hard-Disk Drive for the Mini Tower Computer . . . . .	1-18
Power-Supply Service Data . . . . .	1-18
Pin Assignments for the DC Power Connectors . . . . .	1-20
DC Power Distribution. . . . .	1-21
Technical Specifications. . . . .	1-27

## **Chapter 2**

### **Basic Troubleshooting . . . . . 2-1**

Initial User Contact . . . . .	2-1
External Visual Inspection . . . . .	2-2
Observing the Boot Routine. . . . .	2-3
Internal Visual Inspection . . . . .	2-4
Eliminating Resource Conflicts . . . . .	2-6
Running the System Diagnostics . . . . .	2-6
Getting Help . . . . .	2-6

## **Chapter 3**

### **Beep Codes and Error Messages . . . . . 3-1**

POST Beep Codes . . . . .	3-1
System Error Messages . . . . .	3-3

## **Chapter 4**

### **Removing and Replacing Parts on the Low-Profile Chassis . . . . . 4-1**

Recommended Tools . . . . .	4-1
Precautionary Measures . . . . .	4-2
Inside the Computer . . . . .	4-3
Computer Cover . . . . .	4-4

Eject, Power, and Reset Buttons . . . . .	4-5
Front-Panel Inserts . . . . .	4-6
Control Panel . . . . .	4-7
Drives . . . . .	4-8
3.5-Inch Diskette Drive Assembly . . . . .	4-9
5.25-Inch Drive Assembly . . . . .	4-10
Hard-Disk Drive Assembly . . . . .	4-11
System Power Supply . . . . .	4-12
Expansion Cards . . . . .	4-13
Expansion-Card Cage . . . . .	4-13
Expansion Card . . . . .	4-14
Riser Board . . . . .	4-15
System Board . . . . .	4-16
System Board Components . . . . .	4-17
DIMMs . . . . .	4-18
Video Memory . . . . .	4-18
Microprocessor . . . . .	4-20
SEC Cartridge/Heat Sink Assembly . . . . .	4-20
System Battery . . . . .	4-21

**Chapter 5**  
**Removing and Replacing Parts on the**  
**Midsize Chassis . . . . . 5-1**

Recommended Tools . . . . .	5-1
Precautionary Measures . . . . .	5-2
Inside the Computer . . . . .	5-3
Floor Stand . . . . .	5-4
Computer Cover . . . . .	5-5
Eject, Power, and Reset Buttons . . . . .	5-6
Front-Panel Inserts . . . . .	5-7
Control Panel . . . . .	5-8
Drives . . . . .	5-9
Externally Accessible Drive Assemblies . . . . .	5-10
3.5-Inch Diskette Drive Assembly . . . . .	5-10
5.25-Inch Drive Assembly . . . . .	5-11
Hard-Disk Drive Bracket . . . . .	5-12
Hard-Disk Drive . . . . .	5-13
System Power Supply . . . . .	5-14

Expansion Cards . . . . .	5-15
Expansion-Card Cage . . . . .	5-15
Expansion Card . . . . .	5-16
Riser Board . . . . .	5-17
System Board . . . . .	5-18
System Board Components . . . . .	5-19
DIMMs . . . . .	5-20
Video Memory . . . . .	5-20
Microprocessor . . . . .	5-22
SEC Cartridge/Heat Sink Assembly . . . . .	5-22
System Battery . . . . .	5-23

**Chapter 6**  
**Removing and Replacing Parts on the**  
**Mini Tower Chassis . . . . . 6-1**

Recommended Tools . . . . .	6-1
Precautionary Measures . . . . .	6-2
Inside the Computer . . . . .	6-3
Computer Cover . . . . .	6-4
Front Bezel . . . . .	6-5
Eject, Power, and Reset Buttons . . . . .	6-6
Front-Panel Inserts . . . . .	6-7
Control Panel . . . . .	6-9
Drives . . . . .	6-10
Externally Accessible Drive Assemblies . . . . .	6-10
3.5-Inch Diskette Drive Assembly . . . . .	6-11
5.25-Inch Drive Assembly . . . . .	6-12
Hard-Disk Drive Bracket . . . . .	6-14
Hard-Disk Drive . . . . .	6-15
System Power Supply . . . . .	6-16
Expansion Cards . . . . .	6-17
Expansion-Card Cage . . . . .	6-17
Expansion Card . . . . .	6-18
Riser Board . . . . .	6-19
System Board . . . . .	6-20

System Board Components . . . . .	6-21
DIMMs . . . . .	6-22
Video Memory . . . . .	6-22
Microprocessor . . . . .	6-24
SEC Cartridge/Heat Sink Assembly . . . . .	6-24
System Battery . . . . .	6-25

## **Appendix A**

### **System Setup Program . . . . . A-1**

System Setup Screens . . . . .	A-2
--------------------------------	-----

## **Index**

### **Figures**

Figure 1-1. Chassis Configurations . . . . .	1-1
Figure 1-2. Front-Panel Features . . . . .	1-6
Figure 1-3. Internal View of the Low-Profile Computer . . . . .	1-7
Figure 1-4. Internal View of the Midsize Computer . . . . .	1-7
Figure 1-5. Internal View of the Mini Tower Computer . . . . .	1-8
Figure 1-6. Riser Board for the Low-Profile Computer . . . . .	1-9
Figure 1-7. Riser Board for the Midsize Computer (Option 1) . . . . .	1-10
Figure 1-8. Riser Board for the Midsize Computer (Option 2) . . . . .	1-10
Figure 1-9. Riser Board for the Mini Tower Computer . . . . .	1-11
Figure 1-10. System Board Components . . . . .	1-13
Figure 1-11. System Board Jumpers . . . . .	1-14
Figure 1-12. Computer Orientation Information . . . . .	1-17
Figure 1-13. DC Power Connector P1 . . . . .	1-20
Figure 1-14. DC Power Connectors P2 (Midsize and Mini Tower Chassis); P3, P4, P5, P6, and P9 (All Chassis) . . . . .	1-20
Figure 1-15. DC Power Connectors P2 (Low-Profile Chassis) and P7 (All Chassis) . . . . .	1-21
Figure 1-16. DC Power Cables for the Low-Profile Computer . . . . .	1-22
Figure 1-17. DC Power Distribution for the Low-Profile Computer . . . . .	1-23
Figure 1-18. DC Power Cables for the Midsize and Mini Tower Computers . . . . .	1-24
Figure 1-19. DC Power Distribution for the Midsize Computer . . . . .	1-25
Figure 1-20. DC Power Distribution for the Mini Tower Computer . . . . .	1-26
Figure 4-1. Internal View of the Low-Profile Computer . . . . .	4-3

Figure 4-2.	Computer Cover Removal . . . . .	4-4
Figure 4-3.	Eject, Power, and Reset Button Removal . . . . .	4-5
Figure 4-4.	Front-Panel Insert Removal . . . . .	4-6
Figure 4-5.	Control Panel Removal . . . . .	4-7
Figure 4-6.	Drive Hardware . . . . .	4-8
Figure 4-7.	3.5-Inch Diskette Drive Removal . . . . .	4-9
Figure 4-8.	5.25-Inch Drive Assembly Removal . . . . .	4-10
Figure 4-9.	Hard-Disk Drive Assembly Removal . . . . .	4-11
Figure 4-10.	System Power-Supply Removal . . . . .	4-12
Figure 4-11.	Expansion-Card Cage Removal . . . . .	4-13
Figure 4-12.	Expansion-Card Removal . . . . .	4-14
Figure 4-13.	Riser Board Removal . . . . .	4-15
Figure 4-14.	System Board Removal . . . . .	4-16
Figure 4-15.	System Board Components . . . . .	4-17
Figure 4-16.	DIMM Removal . . . . .	4-18
Figure 4-17.	DIMM Installation . . . . .	4-18
Figure 4-18.	Installing a Video-Memory Upgrade Module . . . . .	4-19
Figure 4-19.	SEC Cartridge/Heat Sink Removal . . . . .	4-20
Figure 4-20.	System Battery Installation . . . . .	4-21
Figure 5-1.	Internal View of the Midsize Computer . . . . .	5-3
Figure 5-2.	Floor Stand Removal . . . . .	5-4
Figure 5-3.	Computer Cover Removal . . . . .	5-5
Figure 5-4.	Eject, Power, and Reset Button Removal . . . . .	5-6
Figure 5-5.	Front-Panel Insert Removal . . . . .	5-7
Figure 5-6.	Control Panel Removal . . . . .	5-8
Figure 5-7.	Drive Hardware . . . . .	5-9
Figure 5-8.	3.5-Inch Diskette Drive Removal . . . . .	5-10
Figure 5-9.	5.25-Inch Drive Assembly Removal . . . . .	5-11
Figure 5-10.	5.25-Inch Drive Removal . . . . .	5-11
Figure 5-11.	Hard-Disk Drive Bracket Removal . . . . .	5-12
Figure 5-12.	Hard-Disk Drive Removal . . . . .	5-13
Figure 5-13.	System Power-Supply Removal . . . . .	5-14
Figure 5-14.	Expansion-Card Cage Removal . . . . .	5-15
Figure 5-15.	Expansion-Card Removal . . . . .	5-16
Figure 5-16.	Riser Board Removal . . . . .	5-17
Figure 5-17.	System Board Removal . . . . .	5-18
Figure 5-18.	System Board Components . . . . .	5-19
Figure 5-19.	DIMM Removal . . . . .	5-20



Figure 5-20.	DIMM Installation . . . . .	5-20
Figure 5-21.	Installing a Video-Memory Upgrade Module . . . . .	5-21
Figure 5-22.	SEC Cartridge/Heat Sink Removal . . . . .	5-22
Figure 5-23.	System Battery Installation . . . . .	5-23
Figure 6-1.	Internal View of the Mini Tower Computer . . . . .	6-3
Figure 6-2.	Computer Cover Removal . . . . .	6-4
Figure 6-3.	Front-Bezel Removal . . . . .	6-5
Figure 6-4.	Eject, Power, and Reset Button Removal . . . . .	6-6
Figure 6-5.	5.25-Inch Front-Panel Insert Removal . . . . .	6-7
Figure 6-6.	3.5-Inch Front-Panel Insert Removal . . . . .	6-8
Figure 6-7.	Control Panel Removal . . . . .	6-9
Figure 6-8.	Drive Hardware . . . . .	6-10
Figure 6-9.	3.5-Inch Diskette Drive Assembly Removal . . . . .	6-11
Figure 6-10.	3.5-Inch Diskette Drive Bracket . . . . .	6-12
Figure 6-11.	5.25-Inch Drive Assembly Removal . . . . .	6-12
Figure 6-12.	5.25-Inch Drive Removal . . . . .	6-13
Figure 6-13.	Hard-Disk Drive Bracket Removal . . . . .	6-14
Figure 6-14.	Hard-Disk Drive Removal . . . . .	6-15
Figure 6-15.	System Power-Supply Removal . . . . .	6-16
Figure 6-16.	Expansion-Card Cage Removal . . . . .	6-17
Figure 6-17.	Expansion-Card Removal . . . . .	6-18
Figure 6-18.	Riser Board Removal . . . . .	6-19
Figure 6-19.	System Board Removal . . . . .	6-20
Figure 6-20.	System Board Components . . . . .	6-21
Figure 6-21.	DIMM Removal . . . . .	6-22
Figure 6-22.	DIMM Installation . . . . .	6-22
Figure 6-23.	Installing a Video-Memory Upgrade Module . . . . .	6-23
Figure 6-24.	SEC Cartridge/Heat Sink Removal . . . . .	6-24
Figure 6-25.	System Battery Installation . . . . .	6-25
Figure A-1.	System Setup Screens . . . . .	A-2

## **Tables**

Table 1-1.	System-Board Jumper Descriptions . . . . .	1-15
Table 1-2.	Interrupt Assignments . . . . .	1-15
Table 1-3.	DREQ Line Assignments . . . . .	1-16
Table 1-4.	DC Voltage Ranges . . . . .	1-19
Table 1-5.	Technical Specifications . . . . .	1-27
Table 3-1.	POST Beep Codes . . . . .	3-2
Table 3-2.	System Error Messages . . . . .	3-4
Table A-1.	System Setup Categories . . . . .	A-3



## ***Read This First***

A prerequisite for using this manual to service Dell computer systems is a basic knowledge of IBM<sup>®</sup>-compatible PCs and prior training in IBM-compatible PC troubleshooting techniques. In addition to information provided in this manual and the online *System User's Guide*, Dell provides the Diagnostics and Troubleshooting Guide for troubleshooting procedures and instructions on using the Dell diagnostics to test the computer system.

## ***Warnings, Cautions, and Notes***

Throughout this manual, there may be blocks of text printed in bold type or in italic type. These blocks are warnings, cautions, and notes, and they are used as follows:

**WARNING:** A **WARNING** indicates the potential for bodily harm and provides instructions for how to avoid the problem.

**CAUTION:** A **CAUTION** indicates either potential damage to hardware or loss of data and provides instructions for how to avoid the problem.

*NOTE:* A *NOTE* provides helpful information about using the computer system.

# Chapter 1

## System Overview


This manual contains field-servicing information for the Dell® OptiPlex® GXa family of computers. The Dell OptiPlex GXa systems are high-speed (233-, 266-, and 300-MHz), upgradable desktop computers built around the high-performance Intel® Pentium® II microprocessors with MMX™ technology.

Chapters 1 through 3 and Appendix A contain information that applies to all models of the Dell OptiPlex GXa family; Chapters 4, 5, and 6 are chassis-specific.


### Overview of Chassis Configurations

The Dell OptiPlex GXa systems are available in the following chassis configurations:


- Low-profile desktop
- Midsize desktop
- Mini tower

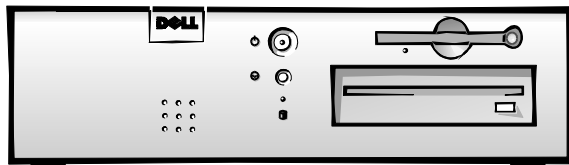

Low-Profile Chassis

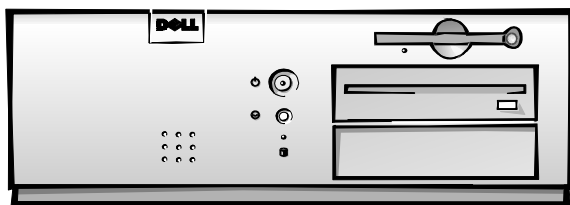

Midsize Chassis

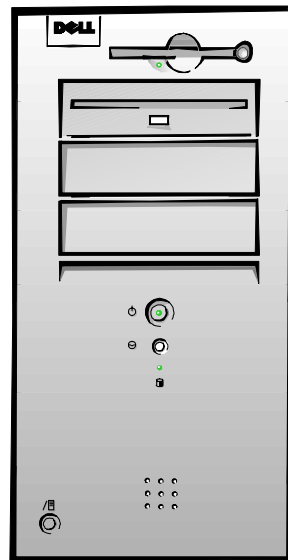

Mini Tower Chassis

Figure 1-1. Chassis Configurations

## ***Chassis Differences***

The three chassis configurations differ primarily in the following expansion features:

- Number of expansion slots available for PCI/ISA expansion cards
- Number of available internal drive bays for EIDE/SCSI drives
- Number of available external drive bays for diskette, CD-ROM, or tape drives
- Physical size and power supply types (the low-profile system contains a smaller power supply than that used in the other two chassis configurations)

Due to the physical differences in the three chassis configurations, separate parts removal and replacement chapters (Chapters 4 through 6) are provided for each chassis type.

## ***Chassis Similarities***

All three chassis configurations have the following similarities:

- Identical system board
- Identical operational characteristics (same BIOS, POST, memory, microprocessor, external I/O ports, and so on)
- Identical diagnostics, diagnostic beep codes, and diagnostic screen error messages (see Chapters 1 through 3 and Appendix A).

## ***Standard Features***

The features described in the following subsections are common to all chassis configurations.

### ***Pentium II Microprocessor***

All systems in the Dell OptiPlex GXa computer family incorporate the Pentium II microprocessor for improved operating speeds and overall performance. Some of the major enhancement features of the Pentium II microprocessor include internal 16-KB data and instruction caches, internal math coprocessor, and the MMX instruction set for high performance in complex multimedia and communications environments. The Pentium II microprocessor also uses a technique called Single Instruction, Multiple Data (SIMD), which permits processing data elements in parallel for additional system performance enhancement.

The microprocessor is physically located in a single-edge contact (SEC) cartridge/heat sink assembly on the system board for ease of upgrading when faster processors are available. Contact Dell Computer Corporation for information about Dell-supported microprocessor upgrades.

## **Secondary L2 Cache**

For additional performance, the Dell OptiPlex GXa systems employ a secondary cache memory subsystem with a cache memory controller and 512 KB of pipeline-burst SRAM cache memory. The L2 cache SRAM is located in the SEC cartridge/heat sink assembly on the system board.

## **Main Memory**

Main memory for the Dell OptiPlex GXa systems range from a minimum of 16 MB of memory to a maximum of 324 MB. All main memory is implemented using high-speed ECC and non-ECC DIMMs. One to three DIMMs ranging in memory capacity sizes from 16 to 128 MB may be used to provide a maximum memory capacity of 324 MB.

## **Upgradable BIOS in Flash Memory**

The system BIOS is implemented in flash ROM, which allows for easy BIOS upgrades using diskette files or downloaded files from Dell's home page on the World Wide Web. The BIOS also incorporates the POST diagnostics that test the system each time the system is started.

## **EIDE Subsystem**

The EIDE subsystem implemented on the system board provides two Mode-4, DMA bus-mastered EIDE interfaces, each of which can support up to two EIDE devices (for example, CD-ROM drive, hard-disk drive, and so on). The EIDE controller attaches to the high-speed PCI local bus.

The primary EIDE interface (IDE1) provides support for up to two high-performance EIDE devices. The computer's boot drive should be connected to the primary EIDE interface.

The secondary EIDE interface (IDE2) also provides support for up to two high-performance EIDE devices, typically EIDE tape drives or CD-ROM drives.

*NOTE: The externally accessible drive bays at the front of the computer are normally used for diskette drives, CD-ROM drives, and/or tape drives.*

*Hard-disk drives should be installed in the internal hard-disk drive positions described in "Hard-Disk Drive Service Information" found later in this chapter.*

## **SMART Technology**

As a standard feature, Dell OptiPlex GXa systems are equipped with Self-Monitoring Analysis Reporting Technology (SMART), which warns you at system start-up if your hard-disk drive has become unreliable. This warning occurs only if you use hard-disk drives with SMART technology.

## **Built-In Diskette/Tape Drive Subsystem**

The Dell OptiPlex GXa systems are equipped with an integrated diskette drive controller (PC87307VUL) that can support a maximum of two non-EIDE diskette and tape drives via a 34-pin DSKT connector located on the system board.

The low-profile chassis can only accommodate one external drive device (diskette drive or tape drive). Other chassis configurations can accommodate two external drive devices.

*NOTE: If the diskette drive and tape drive are both attached to the diskette drive controller on the system board, only the diskette drive is configured in the System Setup program as Drive A or Drive B. The tape drive will then be listed as Not Installed (under either the Drive A or Drive B category).*

### **Built-In SVGA Subsystem**

The Dell OptiPlex GXa systems include a built-in high-performance 64-bit accelerated graphics port (AGP) subsystem, implemented on the system board, which drives an external SVGA monitor. The AGP contains a dedicated bus that bypasses the PCI bus and allows for interconnection of the video subsystem directly to the Pentium chip set for extra high performance required for 3D video subsystems. This architecture also off-loads the PCI bus providing greater performance for devices attached to the PCI bus.

The maximum supported resolutions include 1600 x 1200 pixels with 256 colors noninterlaced and 1024 x 768 pixels with 65,536 colors noninterlaced. The SVGA subsystem consists of the following major components:

- ATI 3D Rage Pro SVGA video controller
- 2-MB synchronous graphics random-access memory (SGRAM) video memory (expandable to 4 MB via a video-memory upgrade kit)
- 15-pin monitor port

### **Built-In Audio Controller**

The built-in audio controller is a single chip that connects to the ISA bus. The audio controller has analog jacks for line-in and microphone input. The single line-out output jack provides stereo output for a line-level input to an external amplifier or drives stereo headphones. See “Technical Specifications” found later in this chapter for audio jack input and output specifications.

### **Built-In Ethernet NIC Support**

The Dell OptiPlex GXa systems have an integrated 10/100-Mbps 3Com<sup>®</sup> PCI 3C905 Ethernet NIC subsystem. The subsystem supports both the 10BASE-T and 100BASE-T standards. The NIC subsystem connects to the Ethernet network through a single RJ45 connector on the back of the computer. The RJ45 connector and the NIC interface circuitry are mounted on the system board.

The NIC connector on the computer’s back panel has the following indicators:

- A yellow *activity indicator* flashes when the system is transmitting or receiving network data. (A high volume of network traffic may make this indicator appear to be in a steady “on” state.)
- A green *link integrity indicator* lights up when there is a good connection between the network and the NIC. When the green indicator is off, the system is not detecting a physical connection to the network.



## ***Network Cable Requirements***

The computer's NIC connector (RJ45) is designed for attaching to an unshielded twisted pair (UTP) Ethernet cable. The other end of the cable connects to an RJ45 jack wall plate or to an RJ45 port on a UTP concentrator or hub, depending on the network configuration.

Chapter 4, "Using Integrated Devices," in the *Reference and Installation Guide* provides instructions for connecting the computer to, and configuring it for, use on an Ethernet network.

## ***Full Set of I/O Ports***

For desktop connectivity, the Dell OptiPlex GXa systems include the following ports:

- 25-pin bidirectional parallel port with EPP/ECP and demand-mode DMA support
- Two Universal Serial Bus (USB) ports
- Two 9-pin serial ports
- Two PS/2 ports (mouse and keyboard)
- One 15-pin monitor connector
- Three audio connectors (microphone jack, line-in jack, and line-out jack)
- One RJ45 Ethernet NIC connector


See Figures 1-3 through 1-5 for I/O port identifiers for the various chassis configurations.

## ***Universal Power Supply***


The Dell OptiPlex GXa systems are equipped with a switch-selectable (115/230 VAC) universal power supply that can operate from standard AC power outlets in the U.S. and all international countries. The power supply used in the midsize and mini tower chassis configurations is a higher capacity power supply than that used in the low-profile chassis configuration. See additional power supply information in "Technical Specifications" found later in this chapter.

## Location of Major Components


Figure 1-2 shows the front-panel features for the three chassis configurations; Figures 1-3 through 1-5 show internal features of the three chassis configurations.

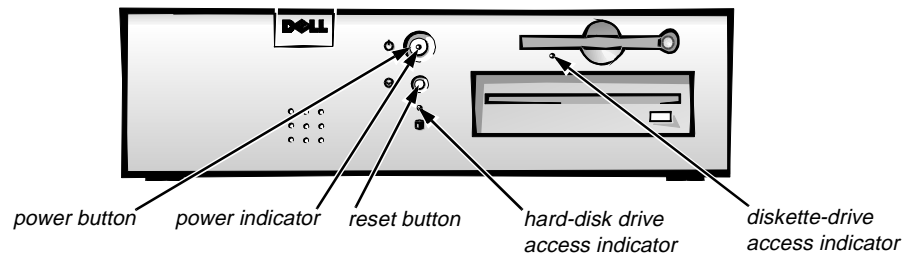

**Low-Profile Computer**

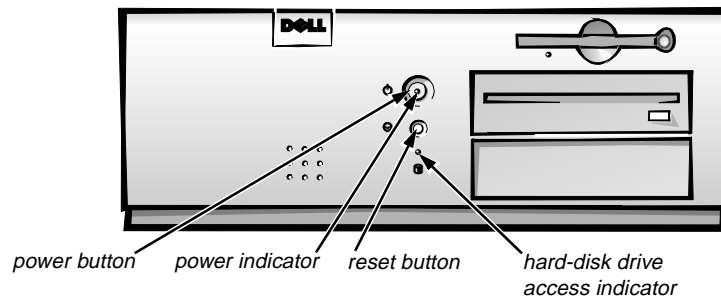


**Midsize Computer**

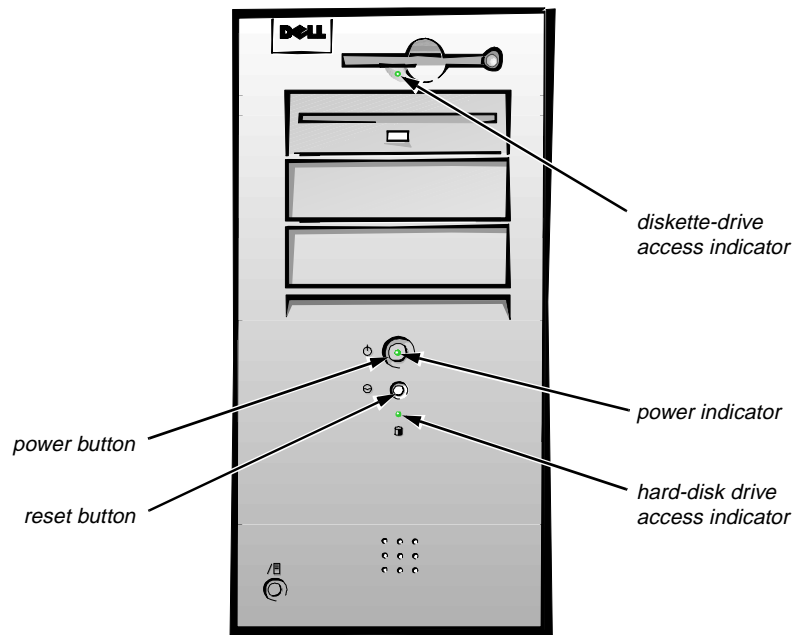


**Mini Tower Computer**


**Figure 1-2. Front-Panel Features**

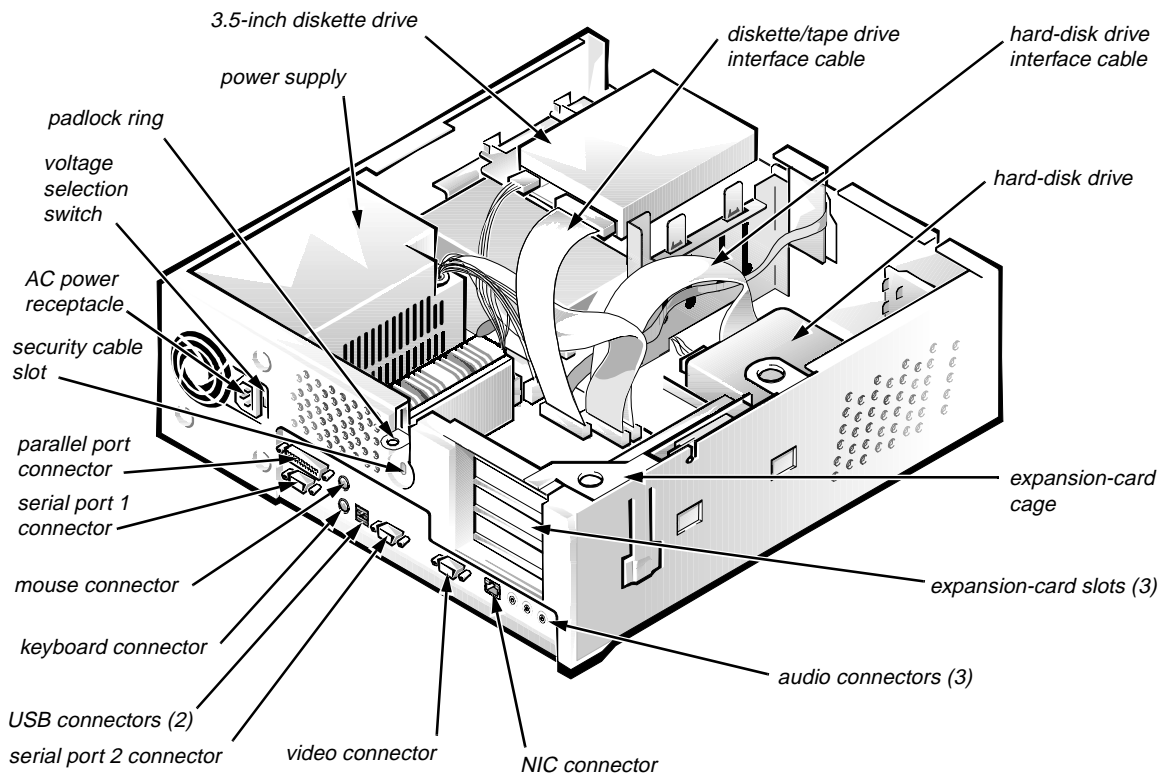

**Figure 1-3. Internal View of the Low-Profile Computer**

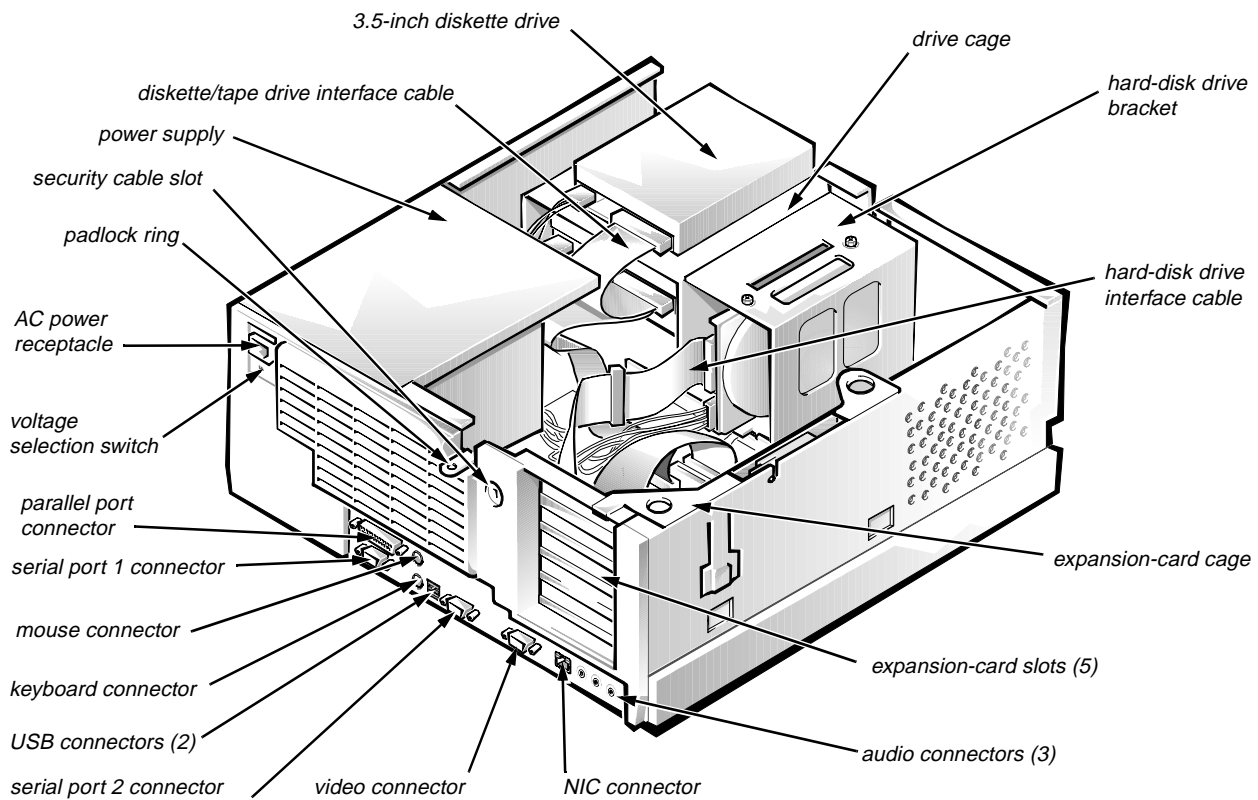

**Figure 1-4. Internal View of the Midsize Computer**

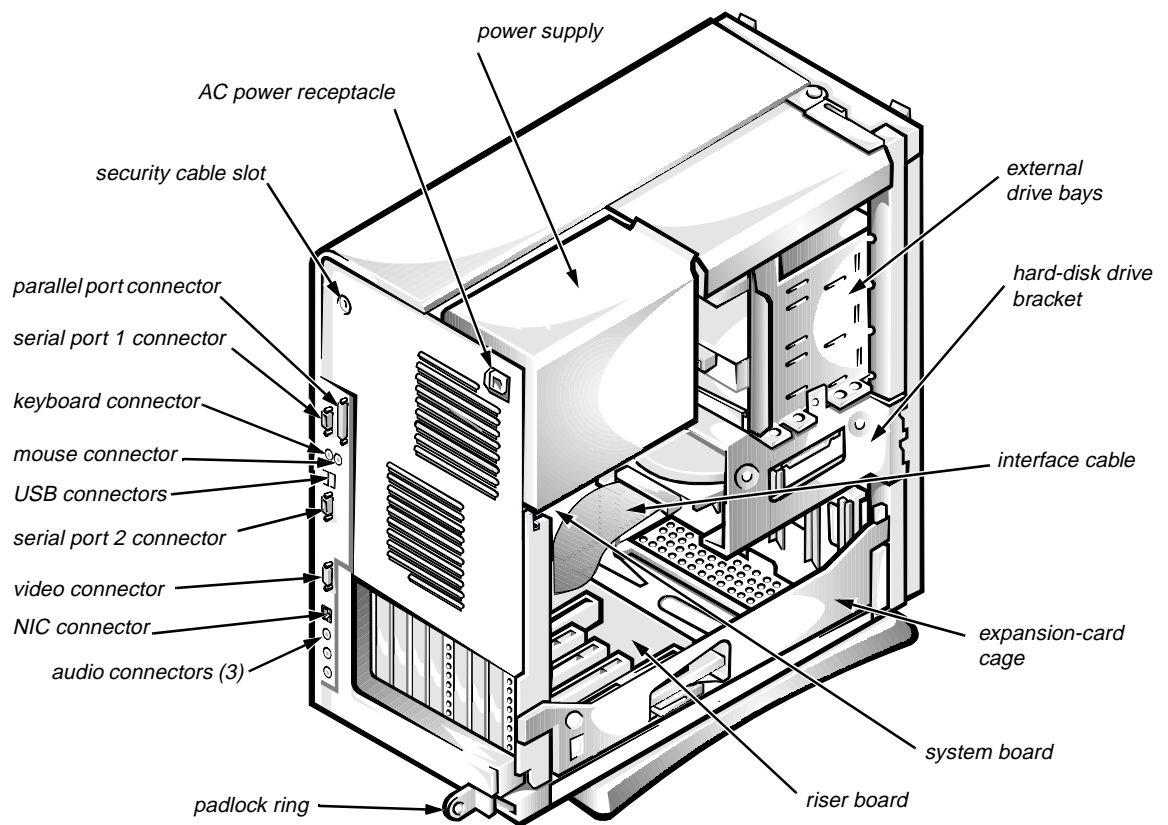

**Figure 1-5. Internal View of the Mini Tower Computer**

## **Advanced Expansion Features**


The Dell OptiPlex GXa systems contain advanced expansion subsystems that can support a mixture of traditional ISA expansion cards (called *legacy* cards), Plug and Play ISA expansion cards, and PCI expansion cards.

For non-Plug and Play operating system environments, an ISA Configuration Utility (ICU) included with the computer provides a means of avoiding resource conflicts. Chapter 3, “Using the ISA Configuration Utility,” in the *Reference and Installation Guide* describes the ICU and provides instructions for using it to configure the computer.

In the Microsoft® Windows® 95 operating system, the functions provided by the ICU are handled by the Device Manager, which can be accessed by double-clicking the System icon in the Control Panel. See your Windows 95 documentation for instructions on using the Device Manager to manage resources and resolve conflicts.

## Low-Profile Computer's Expansion-Card Slots


The low-profile computers have three expansion-card slots. The riser board has two ISA expansion-card connectors and two PCI expansion-card connectors. One PCI expansion-card connector and one ISA expansion-card connector share a single expansion-card slot, resulting in a total of three expansion-card slots (see Figure 1-6). The low-profile computers have a passive riser board, with no PCI-to-PCI bridge.

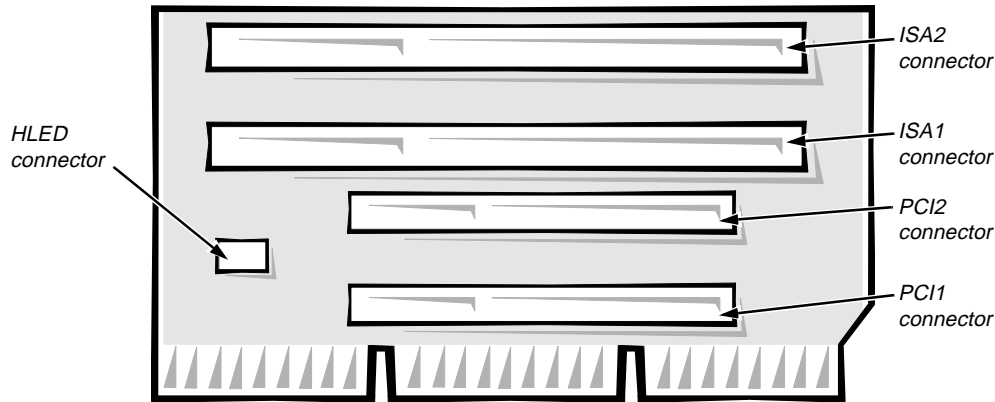


**Figure 1-6. Riser Board for the Low-Profile Computer**

## Midsized Computer's Expansion-Card Slots

The midsized computers have five expansion-card slots. The riser board is offered in two options. Option 1 is a passive riser board, with no PCI-to-PCI bridge. Option 1 has three ISA expansion-card connectors and three PCI expansion-card connectors. One PCI expansion-card connector and one ISA expansion-card connector share a single expansion-card slot, resulting in a total of five expansion-card slots (see Figure 1-7). Option 2 is an active riser board, with a PCI-to-PCI bridge. Option 2 has two ISA expansion-card connectors and five PCI expansion-card connectors. Two PCI/ISA expansion-card connector pairs each share an expansion-card slot, again resulting in a total of five expansion-card slots (see Figure 1-8).

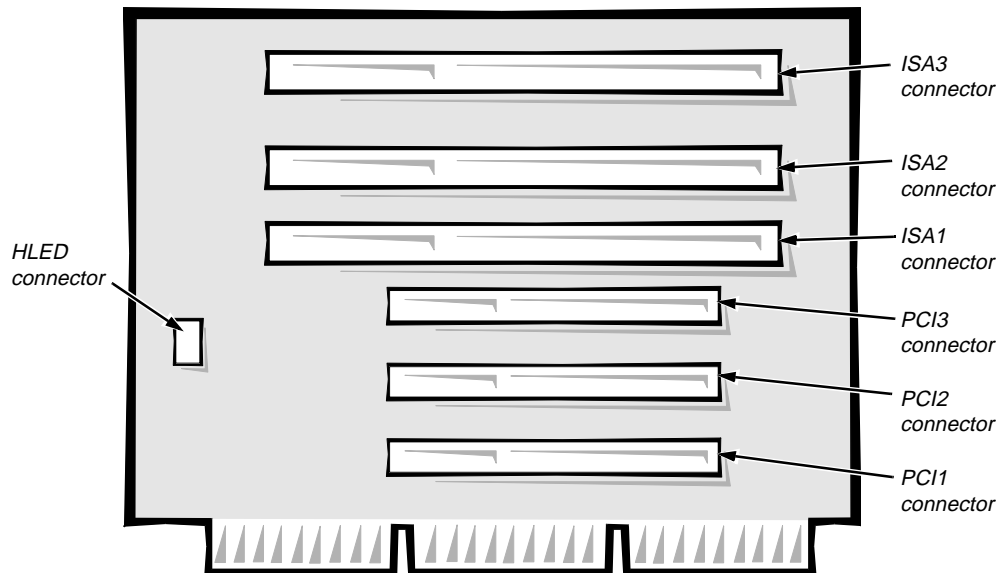


**Figure 1-7. Riser Board for the Midsize Computer (Option 1)**

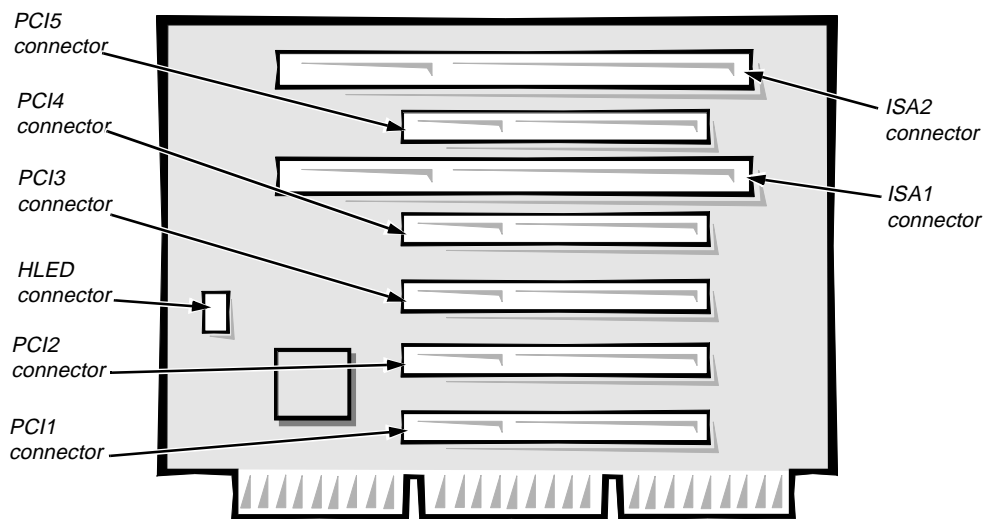

**Figure 1-8. Riser Board for the Midsize Computer (Option 2)**

### **Mini Tower Computer's Expansion-Card Slots**

The mini tower computers have seven expansion-card slots. The riser board has four ISA expansion-card connectors and five PCI expansion-card connectors. Two PCI expansion-card connectors share expansion-card slots with two ISA connectors, resulting in a total of seven expansion-card slots (see Figure 1-9). The riser board is active, incorporating PCI-to-PCI bridging.

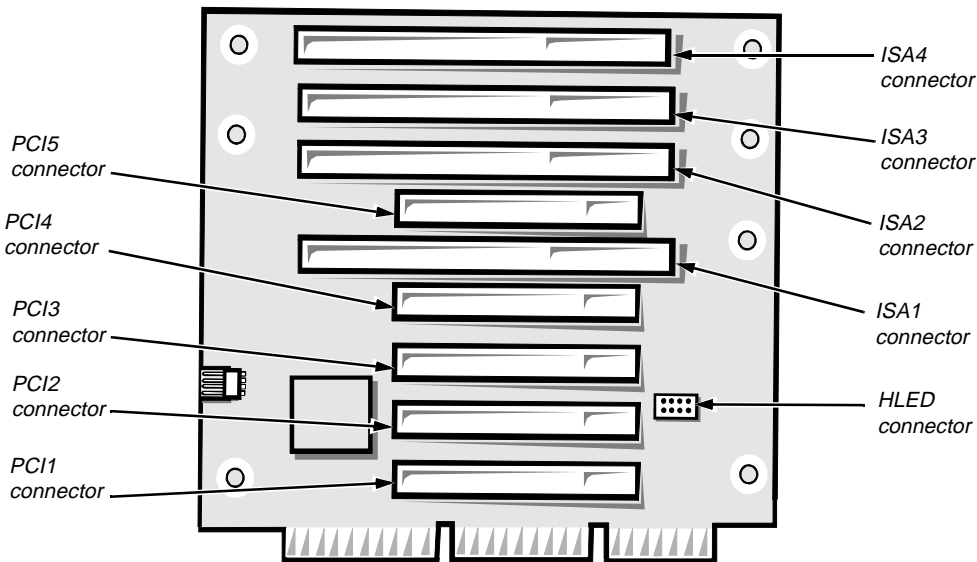

**Figure 1-9. Riser Board for the Mini Tower Computer**

## **Upgrade Options**

The system board has various accommodations for system upgrades including:

- Microprocessor upgrade
- Main memory expansion
- Video memory expansion

These upgrades are summarized in the following subsections, and installation procedures are provided for the various chassis configurations in Chapters 4, 5, and 6.

### **Microprocessor/L2 Cache Upgrades**

On the Dell OptiPlex GXa systems, the microprocessor and secondary L2 cache memory are implemented in an SEC cartridge/heat sink assembly. Upgrade to a higher-performance microprocessor is accomplished by snapping out the old assembly and installing an upgrade assembly as higher-performance microprocessors become available.

### **Main Memory Expansion**

The three DIMM sockets on the system board can accommodate combinations of 16-, 32-, 64-, and 128-MB DIMMs up to a total memory capacity of 324 MB. Main memory can have either 72-bit parity (ECC) DIMMs or 64-bit nonparity DIMMs.

## ***Video-Memory Upgrade Option***

You can also upgrade video memory from 2 to 4 MB by installing an optional video-memory upgrade module into the video-memory upgrade socket on the system board. Adding video memory increases the system's video performance and provides additional modes for high-resolution/expanded color applications.

*NOTE: See the online System User's Guide or Chapter 6, "Installing System Board Options," in the Reference and Installation Guide for additional upgrade information.*

## ***Computer Service Information***

The following subsections provide service-related information about the computer. Unless otherwise specified, the information applies to all chassis configurations.

### ***Online Documentation***

Dell computers are shipped with an online *System User's Guide* (within the Dell Accessories program folder) that provides additional installation and configuration information and Dell contact information.


### ***System Diagnostics***

Supplied with your system is a system diagnostics program containing tests that aid in troubleshooting all major components of the three Dell OptiPlex GXa chassis configurations. This diagnostics diskette should be copied for normal use (save the original diskette in case the copy becomes corrupted). See "Running the System Diagnostics" in Chapter 2 for additional information.

### ***System-Board Service Data***


The following subsections provides service-related information about the system board and components. The same system board is used in the low-profile, midsize, and mini tower computers.



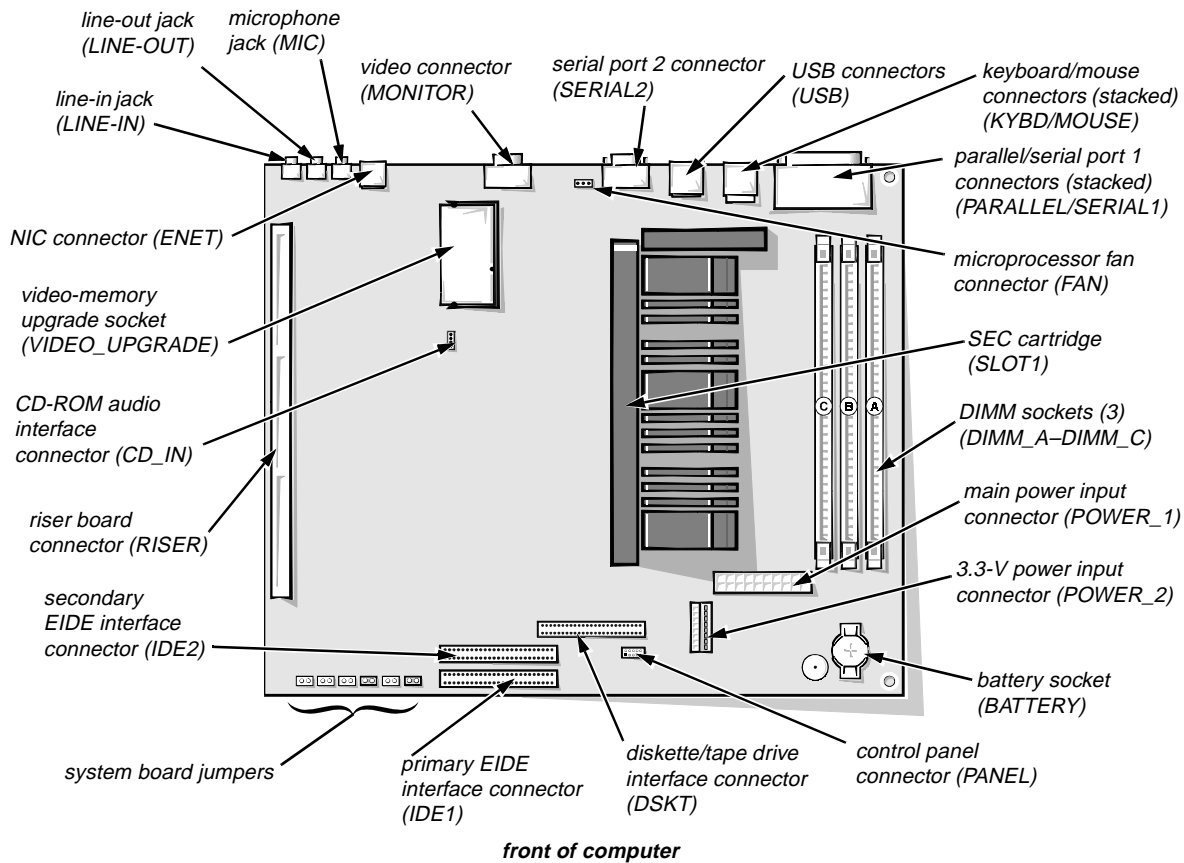

**Figure 1-10. System Board Components**

## System Board Jumpers

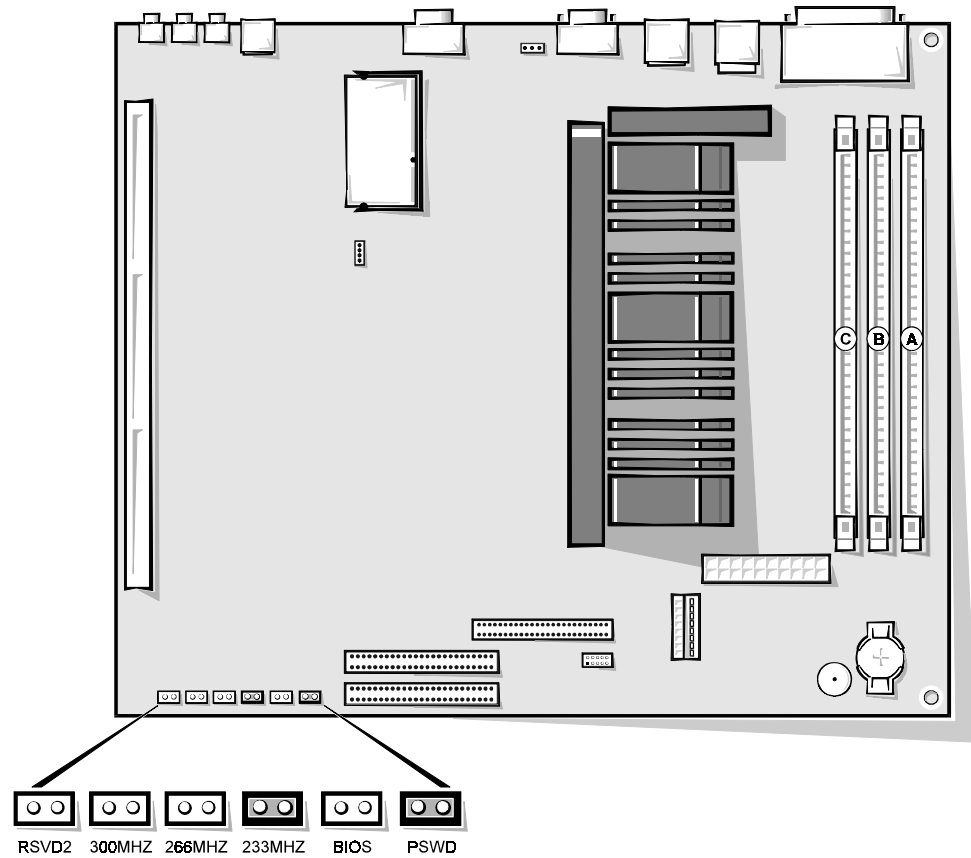

**Figure 1-11. System Board Jumpers**

**Table 1-1. System-Board Jumper Descriptions**

Jumper	Description	Settings
RSVD2	Reserved	Jumper not installed (default).
300MHZ*	Microprocessor speed	Install jumper if the microprocessor's internal speed is 300 MHz; otherwise the jumper should not be installed.
266MHZ*	Microprocessor speed	Install jumper if the microprocessor's internal speed is 266 MHz; otherwise the jumper should not be installed.
233MHZ*	Microprocessor speed	Install jumper if the microprocessor's internal speed is 233 MHz; otherwise the jumper should not be installed.
BIOS	Reserved	Do not install jumper.
PSWD	Password enable or disable	Install to enable the password feature (default).

\* One set of speed jumpers must have a jumper plug installed; otherwise the system defaults to 233 MHz.

## Interrupt Assignments

**Table 1-2. Interrupt Assignments**

IRQ Line	Used By/Available
IRQ0	Generated by system timer.
IRQ1	Generated by keyboard controller to indicate that keyboard's output buffer is full.
IRQ2	Generated internally by interrupt controller to enable IRQ8 through IRQ15.
IRQ3	Available for use by an expansion card.
IRQ4	Generated by super I/O controller to indicate that the device connected to the serial port (COM1 or COM3) requires service.
IRQ5	Available for use by an expansion card.
IRQ6	Generated by super I/O controller to indicate that diskette or tape drive requires service.
IRQ7	Generated by super I/O controller to indicate that device connected to parallel port requires service.

*NOTE: The built-in sound controller and built-in NIC controller are assigned available IRQs automatically during system start-up.*

**Table 1-2. Interrupt Assignments (continued)**

<b>IRQ Line</b>	<b>Used By/Available</b>
IRQ8	Generated by keyboard controller for each tick of RTC.
IRQ9	Available for use by an expansion card.
IRQ10	Available for use by an expansion card.
IRQ11	Available for use by an expansion card.
IRQ12	Generated by keyboard controller to indicate that mouse's output buffer is full.
IRQ13	Generated by math coprocessor to indicate coprocessor error.
IRQ14	Generated by device connected to primary EIDE port to indicate that device requires service. If the EIDE controller is disabled, this line is available for other use.
IRQ15	Generated by device connected to secondary EIDE port to indicate that device requires service. If the EIDE controller is disabled, this line is available for other use.

*NOTE: The built-in sound controller and built-in NIC controller are assigned available IRQs automatically during system start-up.*

## **DMA Channel Assignments**

**Table 1-3. DREQ Line Assignments**




<b>DREQ Line</b>	<b>Used By/Available</b>
DREQ0	Available
DREQ1	Available
DREQ2	Generated by super I/O controller to initiate DMA cycle for attached diskette drive
DREQ3	Available
DREQ4	Generated by bus controller chip to activate second DMA controller
DREQ5	Available
DREQ6	Available
DREQ7	Available

*NOTE: The built-in sound controller, built-in NIC, and built-in video controllers are assigned available DMA channels automatically during system start-up.*

## Hard-Disk Drive Service Information

The following subsections provide service-related information about hard-disk drive options in the low-profile, midsize, and mini tower computers.

*NOTE: Throughout this manual, component-location information references are made that assume the chassis orientations identified in Figure 1-12.*

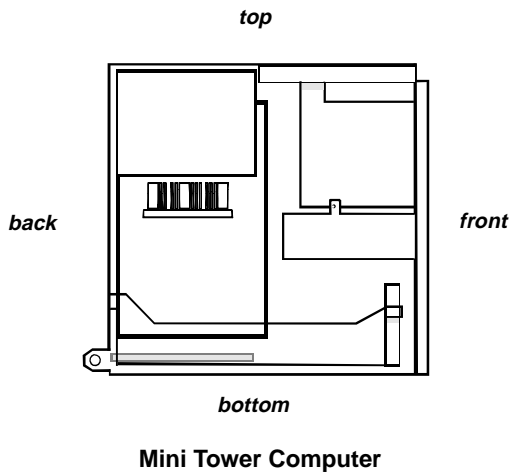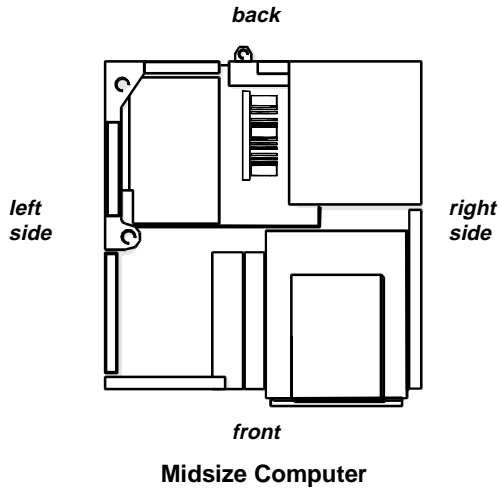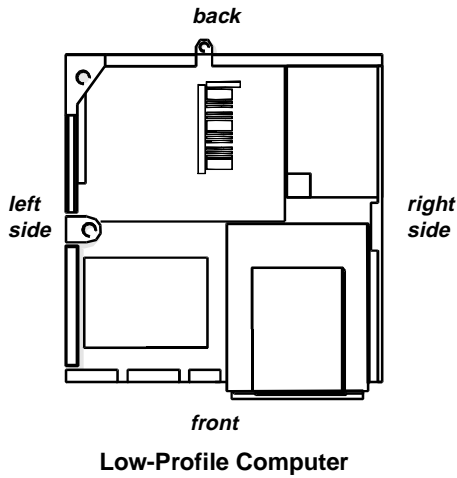

**Figure 1-12. Computer Orientation Information**

### *Hard-Disk Drive for the Low-Profile Computer*

The hard-disk drive assembly (consisting of the hard-disk drive and the hard-disk drive bracket) is located inside the chassis at the left front of the computer and is attached to the bottom of the chassis. One EIDE or SCSI 1-inch-high hard-disk drive can be mounted on the hard-disk drive bracket.

### *Hard-Disk Drive for the Midsize Computer*

The hard-disk drive bracket is located next to the externally accessible drive bays at the front of the computer. The hard-disk drive bracket can contain either one or two 1-inch-high EIDE or SCSI hard-disk drives, or one 1-inch-high EIDE or SCSI hard-disk drive and one 1.6-inch-high EIDE or SCSI hard-disk drive.

### *Hard-Disk Drive for the Mini Tower Computer*

The hard-disk drive bracket is located beneath the externally accessible drive bays at the front of the computer. The hard-disk drive bracket can contain either one or two 1-inch-high EIDE or SCSI hard-disk drives, or one 1-inch-high EIDE or SCSI hard-disk drive and one 1.6-inch-high EIDE or SCSI hard-disk drive.

### ***Power-Supply Service Data***

The low-profile computers have a 145-W system power supply, the midsize computers have a 200-W system power supply, and the mini tower computers have a 230-W power supply. All system power supplies can operate from an AC power source of 115 VAC at 50 to 60 Hz or 230 VAC at 50 to 60 Hz.

<p><b>WARNING: The voltage select switch, located on the back of the power supply assembly, must be set to the correct operating voltage (115 V or 230 V) before you plug the power cable into an AC outlet.</b></p>
--

The system power supply provides the DC operating voltages and currents listed in Table 1-4.

*NOTE: The power supply produces DC voltages only under its loaded condition. Therefore, when you measure these voltages, the DC power connectors must be connected to their corresponding power input connectors on the system board or drives.*

**Table 1-4. DC Voltage Ranges**

<b>Voltage</b>	<b>Range</b>	<b>Maximum Output Current</b>
+3.3 VDC	+3.15 to +3.45 VDC	12.0 A <sup>1</sup> (low-profile computers) 14.0 A <sup>1</sup> (midsize and mini tower computers)
+5 VDC	+4.75 to +5.25 VDC	18.0 A <sup>1</sup> (low-profile computers) 22.0 A <sup>1</sup> (midsize and mini tower computers)
+12 VDC	+11.40 to +12.60 VDC	3.0 A <sup>2</sup> (low-profile computers) 6.0 A <sup>2</sup> (midsize and mini tower computers)
-12 VDC	-10.80 to -13.20 VDC	0.3 A (low-profile computers) 0.3 A (midsize and mini tower computers)
-5 VDC	-4.50 to -5.50 VDC	0.3 A (low-profile computers) 0.3 A (midsize and mini tower computers)
+5 VFP <sup>3</sup>	+4.75 to +5.25 VDC	10 mA


<sup>1</sup> The combined load on the +5-VDC and +3.3-VDC outputs shall not exceed 105 W on the low-profile computers or 140 W on the midsize/mini tower computers.

<sup>2</sup> Withstands surges of up to 11.0 A to support disk start-up operations.

<sup>3</sup> VFP (volts flea power) — sometimes called “standby power.”


## Pin Assignments for the DC Power Connectors

The power-supply output voltages can be measured at the back (wire side) of the connectors without disconnecting them. Figures 1-13 through 1-15 show the wire side of the connectors.

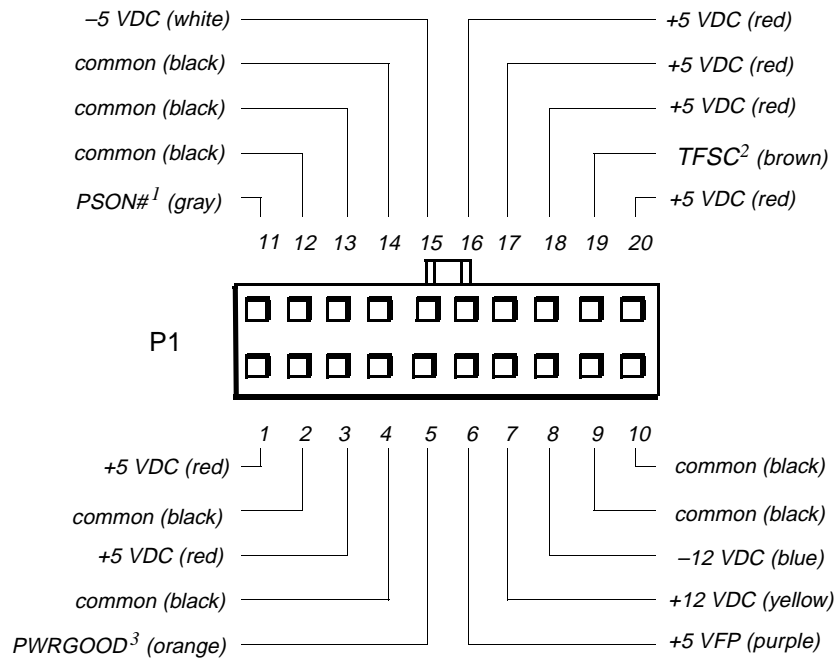


- <sup>1</sup> Pin 11 — PSON# should measure between +4 and +5 VDC except when the power button on the front panel is pressed, taking PSON# to its active-low state.
- <sup>2</sup> Pin 19 — Thermal fan-speed control (TFSC) is a power-supply input signal used to control the power-supply fan speed.
- <sup>3</sup> Pin 5 — PWRGOOD should measure between +4 and +5 VDC when the power supply is on and operating to indicate that all power-supply output voltages are within ranges specified in Table 1-4.

**Figure 1-13. DC Power Connector P1**

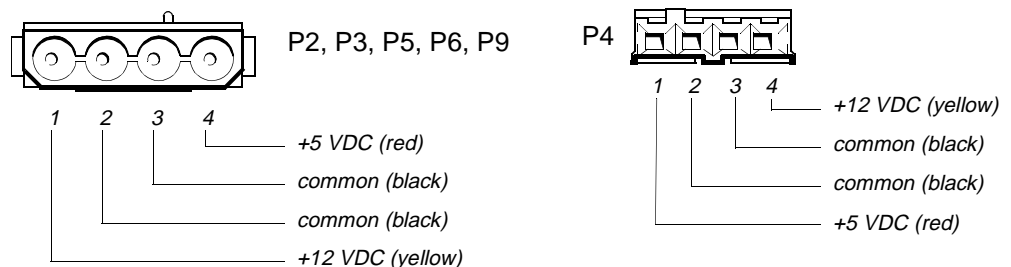

**Figure 1-14. DC Power Connectors P2 (Midsize and Mini Tower Chassis); P3, P4, P5, P6, and P9 (All Chassis)**



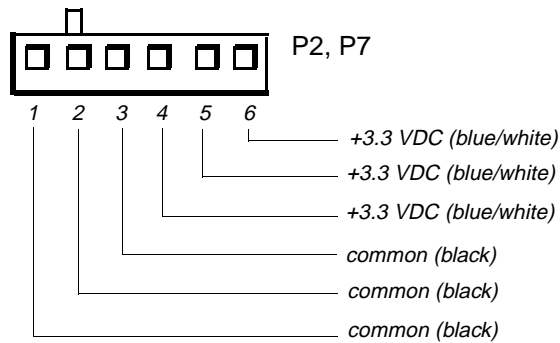


**Figure 1-15. DC Power Connectors P2 (Low-Profile Chassis) and P7 (All Chassis)**


### *DC Power Distribution*

Figures 1-16 through 1-20 provide the following information about DC power distribution:


- Power-supply connector identification
- Power cable connections for diskette, tape, CD-ROM, and hard-disk drives
- Power distribution to sockets and connectors on the system board

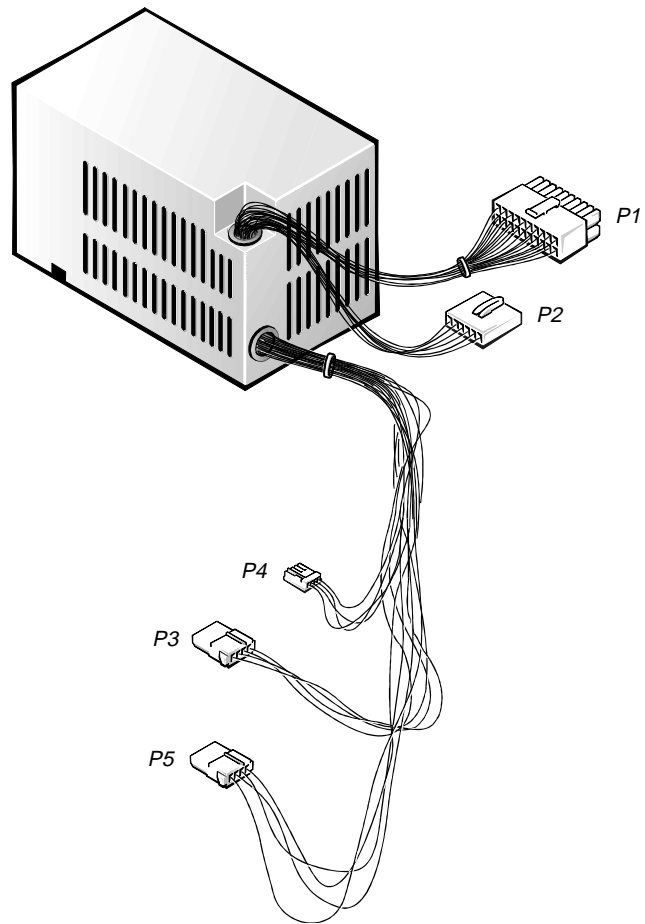


**Figure 1-16. DC Power Cables for the Low-Profile Computer**

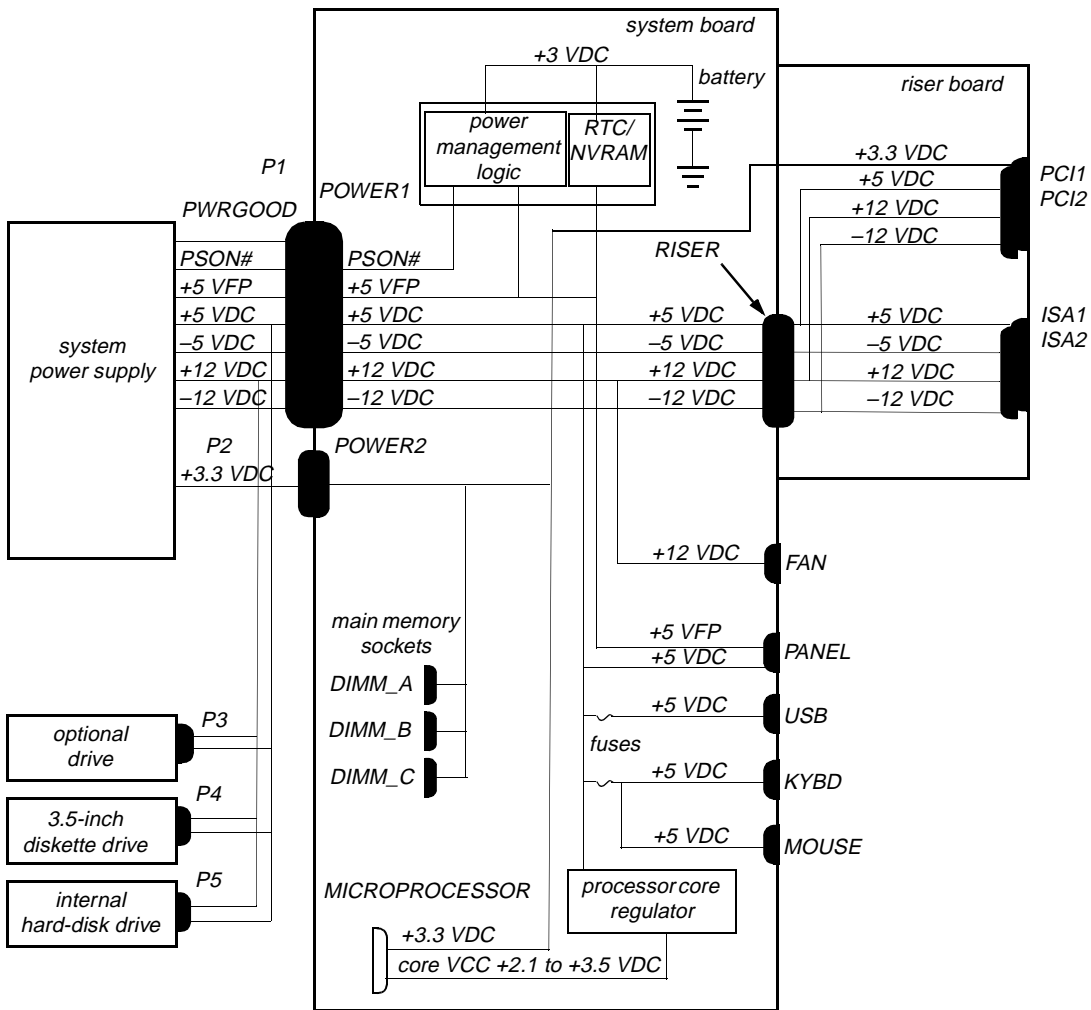


**Figure 1-17. DC Power Distribution for the Low-Profile Computer**

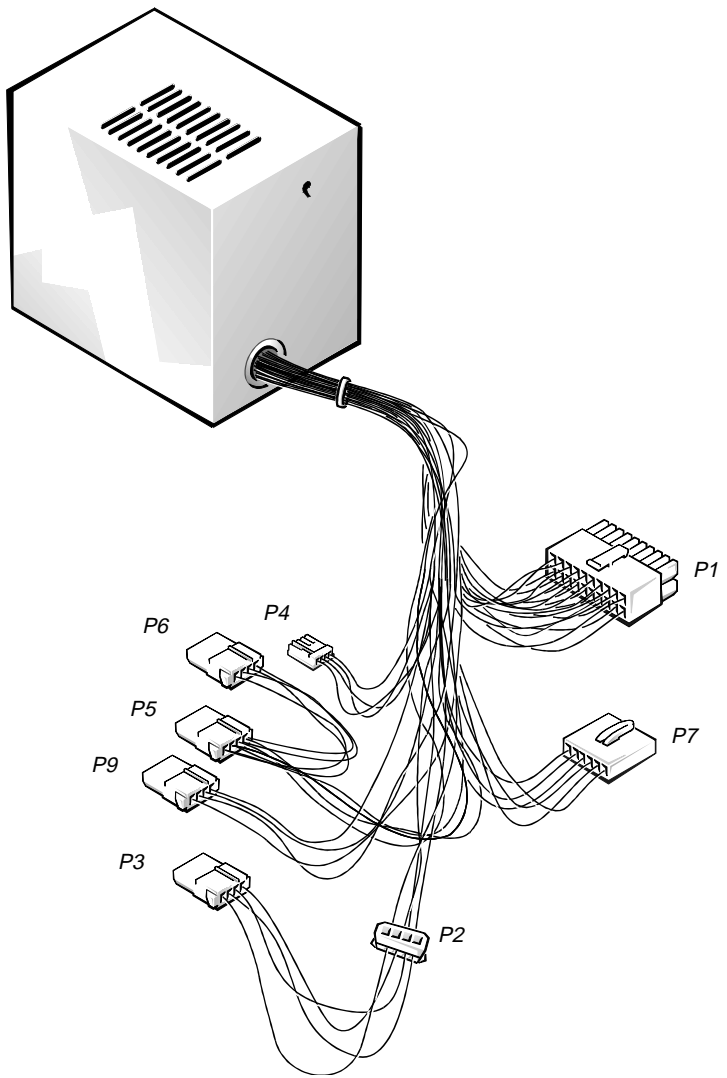

**Figure 1-18. DC Power Cables for the Midsize and Mini Tower Computers**

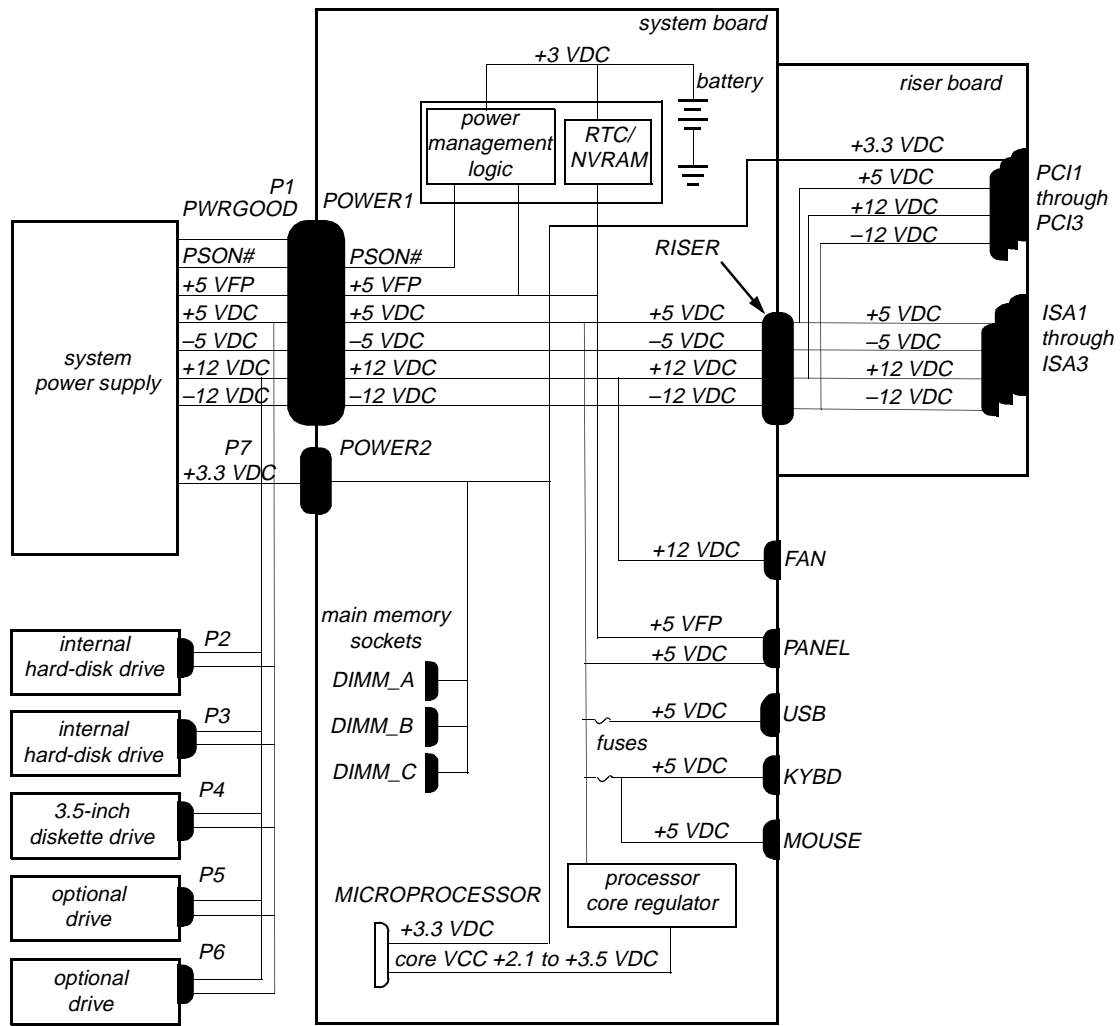

**Figure 1-19. DC Power Distribution for the Midsize Computer**

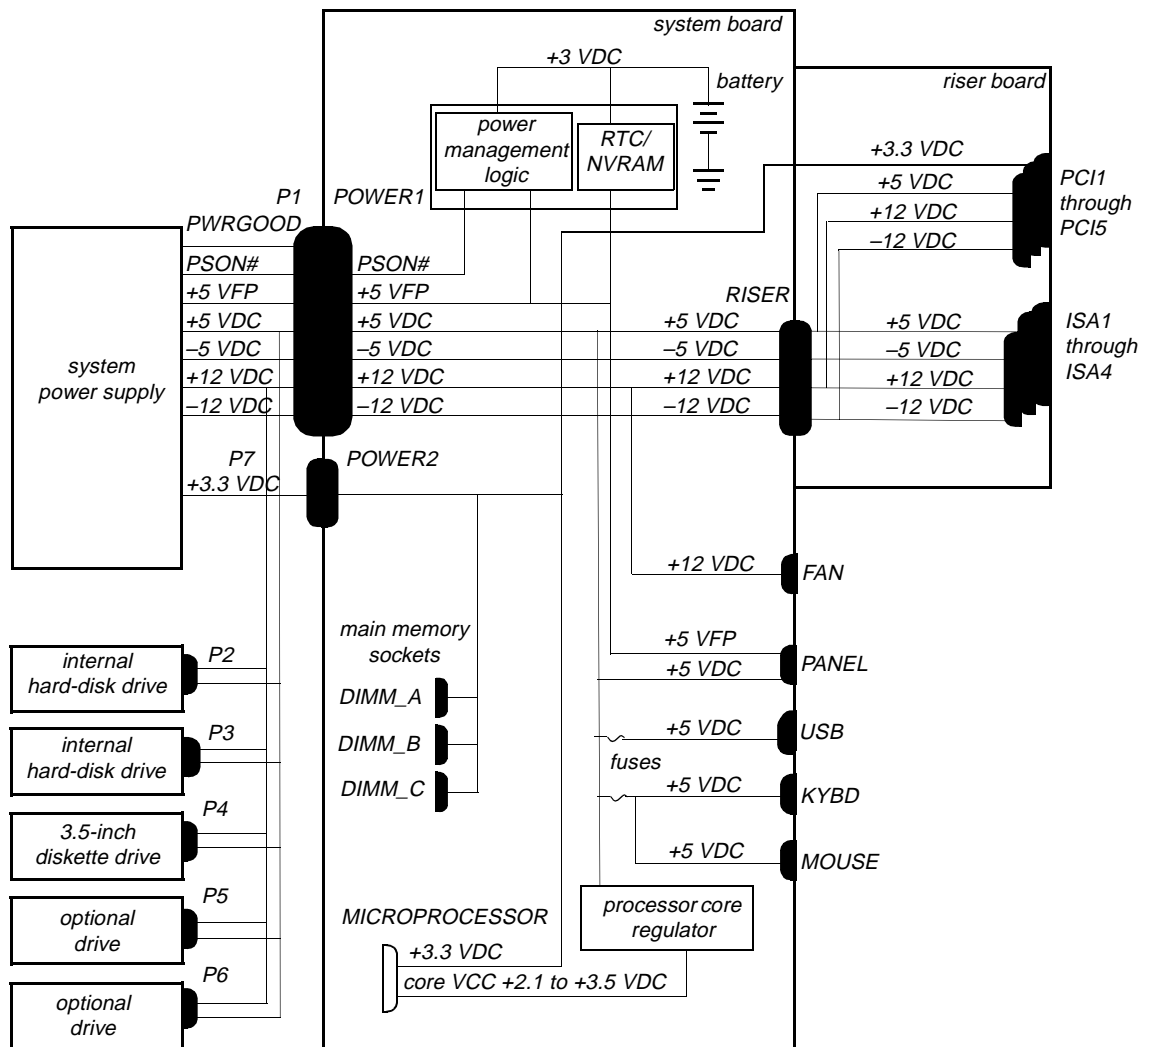

**Figure 1-20. DC Power Distribution for the Mini Tower Computer**

# Technical Specifications

**Table 1-5. Technical Specifications**

<b>Microprocessor</b>	
Microprocessor type . . . . .	Intel Pentium II microprocessor with MMX technology
Microprocessor speed . . . . .	233, 266, or 300 MHz
External system clock . . . . .	66 MHz
Internal cache . . . . .	16-KB data cache and 16-KB instruction cache
Math coprocessor . . . . .	internal to the microprocessor
<b>System Information</b>	
System chip set . . . . .	Intel 440LX chip set
Data bus width . . . . .	64 bits
Address bus width . . . . .	32 bits
DMA channels . . . . .	seven
Interrupt levels . . . . .	15
Flash EPROM (BIOS) . . . . .	2 Mb
<b>Expansion Bus</b>	
Bus types . . . . .	PCI and ISA (PCI bus complies with PCI Specification 2.1)
Bus speeds . . . . .	PCI: 33 MHz; ISA: 8.25 MHz
PCI expansion-card connectors:	
Low-profile computers . . .	two (one PCI connector and one ISA connector share an expansion-card slot)
Midsize computers . . . . .	three (one PCI connector and one ISA connector share an expansion-card slot) <i>or</i> four (two share expansion-card slots)
Mini tower computers . . .	five (two PCI connectors share expansion-card slots with ISA connectors)

**Table 1-5. Technical Specifications (continued)**

<b>Expansion Bus (continued)</b>	
ISA expansion-card connectors:	
Low-profile computers . . .	two (one ISA connector and one PCI connector share an expansion-card slot)
Midsized computers . . . . .	three (one ISA connector and one PCI connector share an expansion-card slot) <i>or</i> two (both share expansion-card slots)
Mini tower computers . . .	four (two ISA connectors share expansion-card slots with PCI connectors)
<b>NIC</b>	
NIC . . . . .	integrated 3Com PCI 3C905 network controller, operating at 10 or 100 Mb/sec
<b>Memory</b>	
Architecture . . . . .	64-bit (nonparity) or 72-bit (parity), non-interleaved
DIMM sockets . . . . .	three (gold contacts)
DIMM capacities . . . . .	16- and 32-MB nonparity SDRAM; 32-, 64-, and 128-MB parity SDRAM
Standard RAM . . . . .	16 MB
Maximum RAM . . . . .	324 MB
L2 cache memory . . . . .	512-MB pipeline-burst direct-mapped write-back SRAM
BIOS address . . . . .	0F0000h
<b>Drives</b>	
Externally accessible bays:	
Low-profile computers . . .	one 3.5-inch bay, dedicated to a 3.5-inch diskette drive; one 5.25-inch bay for a diskette drive, tape drive, or CD-ROM drive
Midsized computers . . . . .	one 3.5-inch bay, dedicated to a 3.5-inch diskette drive; two 5.25-inch bays for diskette drives, tape drives, or CD-ROM drives
Mini tower computers . . .	one 3.5-inch bay, dedicated to a 3.5-inch diskette drive; three 5.25-inch bays for diskette drives, tape drives, or CD-ROM drives



**Table 1-5. Technical Specifications (continued)**

---

<b>Drives (continued)</b>	
Internal hard-disk drive bays:	
Low-profile computers . . .	one bay for a 1-inch-high EIDE or SCSI hard-disk drive
Midsized computers . . . . .	two bays for either one or two 1-inch-high EIDE or SCSI hard-disk drives, or one 1-inch-high EIDE or SCSI hard-disk drive and one 1.6-inch-high EIDE or SCSI hard-disk drive
Mini tower computers . . .	two bays for either one or two 1-inch-high EIDE or SCSI hard-disk drives, or one 1-inch-high EIDE or SCSI hard-disk drive and one 1.6-inch-high EIDE or SCSI hard-disk drive

---

<b>Video</b>	
Video type . . . . .	ATI 3D Rage Pro built-in SVGA controller attached to the AGP bus
Video memory . . . . .	2-MB SGRAM, upgradable to 4 MB
Maximum video resolution . . .	1280 x 1024 pixels, with 256 colors

---

<b>Ports</b>	
Externally accessible:	
Serial (DTE) . . . . .	two 9-pin connectors (16550-compatible)
Parallel . . . . .	one 25-hole connector (bidirectional)
Video . . . . .	one 15-hole connector
PS/2-style keyboard . . . . .	6-pin mini-DIN
PS/2-compatible mouse . . . . .	6-pin mini-DIN
NIC . . . . .	RJ45 connector
USB . . . . .	two USB-compliant connectors
Audio line-in . . . . .	2.0 V rms maximum, stereo signal
Audio microphone . . . . .	89 mV rms maximum, mono signal
Audio line-out . . . . .	1.4 V rms maximum, stereo signal at 32-ohms minimum impedance

---

**Table 1-5. Technical Specifications (continued)**

---

<b>Ports (continued)</b>	
Internally accessible:	
EIDE hard-disk drive . . .	two 40-pin connectors on PCI local bus
Diskette drive . . . . .	34-pin connector
CD-ROM drive. . . . .	4-pin connector

---

<b>Key Combinations</b>	
<Ctrl><Alt><Del>. . . . .	restarts (reboots) the system
<Ctrl><Alt><Enter> . . . . .	starts System Setup program (during the POST only)
<Ctrl><Alt>< > . . . . .	toggles microprocessor speeds on 101-key keyboard (in MS-DOS <sup>®</sup> real mode only)
<Ctrl><Alt><#>. . . . .	toggles microprocessor speeds on 102-key keyboard (in MS-DOS real mode only)

---

<b>Controls and Indicators</b>	
Reset control. . . . .	push button
Power control . . . . .	push button
Power indicator. . . . .	green LED
Diskette-drive access indicator . . . . .	green LED
Hard-disk drive access indicator . . . . .	green LED
Link integrity indicator (on NIC connector). . . . .	green LED
Activity indicator (on NIC connector). . . . .	yellow LED

---

<b>Power</b>	
Power supply wattage:	
Low-profile computers . . .	145 W
Midsize computers . . . . .	200 W
Mini tower computers . . .	230 W

---

**Table 1-5. Technical Specifications (continued)**

---

<b>Power (continued)</b>	
Power-supply heat dissipation:	
Low-profile computers . . .	808 BTU (nominal)
Midsize computers . . . . .	913 BTU (nominal)
Mini tower computers . . .	913 BTU (nominal)
Power supply voltage . . . . .	90 to 135 V at 60 Hz; 180 to 265 V at 50 Hz
Backup battery . . . . .	3-V CR2032 coin cell

---

<b>Physical</b>	
Low-profile computers:	
Height . . . . .	10.9 cm (4.3 inches)
Width. . . . .	40.89 cm (16.1 inches)
Depth. . . . .	43.69 cm (17.2 inches)
Weight (minimum) . . . . .	10.89 kg (24 lb)
Midsize computers:	
Height . . . . .	16.5 cm (6.5 inches)
Width. . . . .	41.9 cm (16.5 inches)
Depth. . . . .	44.5 cm (17.5 inches)
Weight (minimum) . . . . .	12.7 kg (28 lb)
Mini tower computers:	
Height . . . . .	44.4 cm (17.5 inches)
Width. . . . .	20.6 cm (8.1 inches)
Depth. . . . .	43.7 cm (17.2 inches)
Weight (minimum) . . . . .	14.9 kg (33 lb)

---

<b>Environmental</b>	
Temperature:	
Operating . . . . .	10° to 35°C* (50° to 95°F)
Storage . . . . .	-40° to 65°C (-40° to 149°F)
Relative humidity . . . . .	8% to 80% (noncondensing)

---

\* The maximum operating temperature of 35°C (95°F) is for altitudes below 914.6 m (3000 ft). Above 914.6 m (3000 ft) the maximum operating temperature is reduced.

**Table 1-5. Technical Specifications (continued)**

---

<b>Environmental (continued)</b>	
<b>Maximum vibration:</b>	
Operating . . . . .	0.25 G at 3 to 200 Hz at 1 octave/min
Storage . . . . .	0.5 G at 3 to 200 Hz at 1 octave/min
<b>Maximum shock:</b>	
Operating . . . . .	left side (for low-profile and midsize computers operating in a vertical orientation) and bottom half-sine pulse with a change in velocity of 20 inches/sec (50.8 cm/sec)
Storage . . . . .	27-G faired square wave with a velocity change of 200 inches/sec (508 cm/sec)
<b>Altitude:</b>	
Operating . . . . .	-16 to 3048 m* (-50 to 10,000 ft)
Storage . . . . .	-16 to 10,600 m (-50 to 35,000 ft)

---

\* *The maximum operating temperature of 35°C (95°F) is for altitudes below 914.6 m (3000 ft). Above 914.6 m (3000 ft) the maximum operating temperature is reduced.*

## Chapter 2

# Basic Troubleshooting

**T**his chapter provides basic troubleshooting procedures applicable to all systems of the Dell OptiPlex GXa family. A brief explanation of how to load and start the diskette-based diagnostics is also provided at the end of the chapter. Dell recommends that you perform the following procedures in the order they are presented in this manual. Chapter 3, “Beep Codes and Error Messages,” also contains information to assist you in diagnosing computer failures that occur during the POST.

### ***Initial User Contact***

When you first contact a user who has a problem, ask the user to describe the problem and the conditions under which it occurs. In particular, was the user installing new hardware or software when the failure occurred? A verbal description can often indicate the cause of a problem or indicate the appropriate troubleshooting procedure to use. After the user describes the problem, follow these steps:

- 1. Ask the user to back up any data on the hard-disk drive if the system’s condition permits.**

See “Maintaining the System” in the online *System User’s Guide* for information about backing up data.

- 2. Ask the user to try to duplicate the problem by repeating the operations he or she was performing at the time the problem occurred.**

Can the user duplicate the problem?

*Yes.* Proceed to step 3.

*No.* Proceed to the next section, “External Visual Inspection.”

- 3. Observe the user to determine if he or she is making an error, such as typing an incorrect key combination or entering a command incorrectly.**

Is the problem a result of user error?

*Yes.* Instruct the user in the proper procedure, or direct him or her to the appropriate user documentation for the correct procedure.

*No.* Proceed to the next section, “External Visual Inspection.”

## ***External Visual Inspection***

The external visual inspection consists of a quick inspection of the exterior of the computer, the monitor, the keyboard, any peripherals, and cables. While performing the visual inspection, make any necessary corrections. To perform the external visual inspection, follow these steps:

- 1. Turn off the computer, the monitor, and all peripherals.**
- 2. Verify that all power cables are properly connected to the computer, the monitor and peripherals, and their power sources.**
- 3. Verify that the keyboard and mouse interface cables are firmly attached to the proper connectors on the back of the computer.**

For a PS/2-compatible mouse, the keyboard and mouse interface cable connectors are identical except for their labels. For a serial mouse, the mouse interface cable must be firmly attached to one of the serial port connectors, and its captive screws must be secure enough to ensure a firm connection.

- 4. Verify that any devices attached to the serial and parallel port connectors are properly connected.**

Each of the serial and parallel interface cables must be firmly attached to an appropriate connector on the back of the computer as well as to the interface connector on the device. The captive screws that secure these connectors at each end of the interface cable must be secure enough to ensure a firm connection.

- 5. Verify that the video interface cable is firmly attached to the video connector on the back of the computer and to the connector on the back of the monitor.**

For proper connection of the video monitor, see the documentation for the monitor.

- 6. Inspect all external monitor controls for any obvious damage or improper settings.**

For proper settings of the video monitor controls, see the documentation for the monitor.

- 7. Inspect the keyboard to ensure that no keys are sticking.**

If one or more keys are sticking, it may be necessary to replace the keyboard.

- 8. Inspect the exterior of the computer, including all controls and indicators, and all user-accessible data storage devices for any signs of physical damage.**

Does the inspection reveal any problems?

*Yes.* Refer to the parts removal and replacement procedure in Chapters 4, 5, or 6 as appropriate for your chassis type.

*No.* Proceed to the next section, “Observing the Boot Routine.”

## ***Observing the Boot Routine***

After you have performed an external visual inspection as described in the previous section, you should boot the system and, while the boot routine is running, observe the system for any indications of problems.

*NOTE: Most of the steps in this procedure require observation of system functions and indications, some of which can occur simultaneously. It may be necessary to reboot the system several times in order to complete all of these steps.*

To observe problem indications during the boot routine, follow these steps:

- 1. Insert the diagnostics diskette into drive A. Turn on all peripherals and the computer. If the computer is already on, press the reset button or <Ctrl><Alt><Del> to reboot the system.**

- 2. Check the power supply fan.**

Does the fan run normally?

*Yes.* Proceed to step 3.

*No.* Troubleshoot the system power supply.

- 3. Watch the Num Lock, Caps Lock, and Scroll Lock indicators on the upper-right corner of the keyboard. After all three indicators flash momentarily, the Num Lock indicator should light up and remain on.**

Do these indicators flash on and off within approximately ten seconds after the boot routine starts?

*Yes.* Proceed to step 4.

*No.* Troubleshoot the system power supply. If the troubleshooting procedure indicates that the system power supply is operational, troubleshoot the system board.

**4. During the boot routine, observe the system for any of the following:**

- *Diskette-drive and hard-disk drive access indicators:* These indicators light up in response to data being transferred to or from the drives. If either of these indicators fails to light up during the boot routine, troubleshoot the diskette drive or hard-disk drive subsystem, as appropriate.
- *System error messages:* These messages can indicate problems or provide status information. If a system error message is displayed, see Table 3-2.
- *Beep codes:* A beep code is a series of beeps that indicates an error condition. If the system emits a beep code, see Table 3-1.

**5. Observe the monitor screen for the Diagnostics Menu.**

Does the Diagnostics Menu appear?

*Yes.* See “Running the System Diagnostics” found later in this chapter.

*No.* Proceed to step 6.

**6. Insert another copy of the diagnostics diskette into the diskette drive, and reboot the system.**

Does the Diagnostics Menu appear?

*Yes.* See “Running the System Diagnostics” found later in this chapter.

*No.* Proceed to the next section, “Internal Visual Inspection.”

## ***Internal Visual Inspection***

**CAUTION:** Before you proceed with the internal visual inspection described in this section, ensure that the user has saved all open files and exited all open application programs if possible.

A simple visual inspection of a computer’s interior hardware can often lead to the source of a problem, such as a loose expansion card, cable connector, or mounting screw. When you perform the visual inspection, refer to Figures 1-3 through 1-5 as appropriate for your system for component location information.

To perform the internal visual inspection, follow these steps:

- 1. Turn off the system, including any attached peripherals, and disconnect all the AC power cables from their power sources.**
- 2. Remove the computer cover.**



3. **Verify that all chips, DIMMs, and expansion cards are fully seated in their sockets or connectors.**

**WARNING:** The SEC cartridge/heat sink assembly can get extremely hot. Be sure the assembly has had sufficient time to cool before you touch it.

**While reseating the SEC cartridge/heat sink assembly, use a wrist grounding strap or maintain contact with a metal surface on the chassis.**

The microprocessor is physically located in a single-edge contact (SEC) cartridge/heat sink assembly on the system board. To reseat the microprocessor, remove the SEC cartridge/heat sink assembly and reinstall it as described in “Removing the SEC Cartridge/Heat Sink Assembly” in Chapter 4, 5, or 6, as appropriate for your system.

To reseat a DIMM, remove it from its socket and reinstall it as described in “DIMMs” in Chapter 4, 5, or 6, as appropriate for your system.

If you need to reseat an expansion card, remove it from its connector and reinstall it as described in “Expansion Cards” in Chapter 4, 5, or 6, as appropriate for your system.

4. **Verify that all jumpers are set correctly.**

For information about these jumpers, see “System Board Jumpers” in Chapter 1.

5. **Check all cable connectors inside the computer to verify that they are firmly attached to their appropriate connectors.**
6. **Reinstall the computer cover.**
7. **Reconnect the computer and any attached peripherals to their power sources, and turn them on.**

Does the problem appear to be resolved?

*Yes.* No further steps are necessary. Terminate the procedure.

*No.* Proceed to the next sections, “Eliminating Resource Conflicts,” “Running the System Diagnostics,” and “Getting Help.”

## ***Eliminating Resource Conflicts***

Devices within the computer may require dedicated memory spaces, interrupt levels, or DMA channels, all of which must be allocated during installation of the devices. Because a device may be installed at a different time, it is possible that the same resource is assigned to two or more devices.

Resource conflicts can result in disorderly or erratic system operation or failure of the system to operate at all. If you suspect that resource conflicts might exist, check the system and reassign the resources as necessary.

## ***Running the System Diagnostics***

The diskette-based diagnostics (included with the system) contains tests that aid in troubleshooting all major components of the system.

**CAUTION: To prevent damage to the original diagnostics diskette, always use a backup copy of the diagnostics diskette when servicing a user's computer. Dell recommends that users make several copies of this diskette to ensure that one is always available.**

To start the diagnostics, turn off the system, insert a diagnostics diskette into drive A, and then turn on the system.

Starting the diagnostics causes the Dell logo screen to appear on the monitor screen, followed by a message indicating that the diagnostics is loading. Before the diagnostics loads, a program tests the portion of main memory (RAM) required for loading the diagnostics. If a main memory error is detected, a message appears on the screen telling you which DIMM has failed.

If no errors are found in main memory, the diagnostics loads and the Diagnostics Menu appears. This menu lets you choose the following options or exit to the MS-DOS prompt:

- Run Quick Tests — Runs selected tests from all test groups to quickly locate a failure or to indicate where further testing is needed to isolate a failure
- Run All Tests — Runs all tests for a thorough test of the system
- Run Specific Tests — Tests a particular area or subsystem

## ***Getting Help***

If you are unable to determine the source of your problem, call Dell for technical assistance. For instructions, see “Getting Help” in the online *System User's Guide*.

## Chapter 3

# Beep Codes and Error Messages

**T**his chapter describes the beep codes and error messages that are common to all members of the Dell OptiPlex GXa family of computers. These error messages can occur during the POST or, in the case of some failures, during normal system operation. The tables in this chapter list faults that can cause a beep code or system error message to occur and the probable causes of the fault in each case.

If a faulty system does not emit beep codes or display system error messages to indicate a failure, you should use the system diagnostics to run the appropriate tests to help isolate the source of the problem. See “Running the System Diagnostics” in Chapter 2.

## ***POST Beep Codes***

If the monitor cannot display error messages during the POST, the system may emit a series of beeps that identifies the problem or that can help you identify a faulty component or assembly. Table 3-1 lists the beep codes that may be generated during the POST. Most beep codes indicate a fatal error that prevents the system from completing the boot routine until the indicated condition is corrected.

When the system emits a beep code, record the code and then find it in Table 3-1. If the table does not lead to the source of the problem, run the appropriate tests in the system diagnostics to assist in troubleshooting the problem.

**Table 3-1. POST Beep Codes**

<b>Beep Code</b>	<b>Error</b>	<b>Probable Causes</b>
1-1-3	NVRAM write/read failure	Defective system board
1-1-4	BIOS checksum failure	Faulty BIOS or defective system board
1-2-1	Programmable interval-timer failure	Defective system board
1-2-2	DMA initialization failure	
1-2-3	DMA page register write/read failure	
1-3-1	Main-memory refresh verification failure	Faulty or improperly seated DIMM or defective system board
1-3-2	No memory installed	No memory installed or faulty or improperly seated DIMM
1-3-3	Chip or data line failure in the first 64 KB of main memory	Faulty or improperly seated DIMM
1-3-4	Odd/even logic failure in the first 64 KB of main memory	
1-4-1	Address line failure in the first 64 KB of main memory	
1-4-2	Parity failure in the first 64 KB of main memory	
2-1-1 through 2-4-4	Bit failure in the first 64 KB of main memory	
3-1-1	Slave DMA-register failure	Defective system board
3-1-2	Master DMA-register failure	
3-1-3	Master interrupt-mask register failure	
3-1-4	Slave interrupt-mask register failure	
3-2-4	Keyboard-controller test failure	Faulty keyboard controller (defective system board)

**Table 3-1. POST Beep Codes (continued)**

<b>Beep Code</b>	<b>Error</b>	<b>Probable Causes</b>
3-3-4	Screen initialization failure	Faulty video subsystem (defective system board)
3-4-1	Screen-retrace test failure	
3-4-2	Search for video ROM failure	
4-2-1	No timer tick	Defective system board
4-2-2	Shutdown failure	
4-2-3	Gate A20 failure	
4-2-4	Unexpected interrupt in protected mode	
4-3-1	Memory failure above address 0FFFFh	Faulty or improperly seated DIMM
4-3-3	Timer-chip counter 2 failure	Defective system board
4-3-4	Time-of-day clock stopped	Bad battery or defective system board
4-4-1	Serial-port test failure	Faulty I/O chip (defective system board)
4-4-2	Parallel-port test failure	Faulty system board
4-4-3	Math coprocessor failure	Faulty microprocessor chip or system board
4-4-4	Cache test failure	Defective microprocessor or system board

## **System Error Messages**

System error messages typically are presented on the screen during the POST but can occur any time an error is detected by the system. System messages are very useful in troubleshooting the system. Some of these messages require operator intervention to solve; others indicate fatal errors that must be solved before the system will reboot.

Table 3-2 lists the system error messages that can occur and the probable cause for each message.

**Table 3-2. System Error Messages**

<b>Message</b>	<b>Definition</b>	<b>Probable Causes</b>
Address mark not found	BIOS found faulty disk sector or could not find particular disk sector.	Faulty diskette/tape drive subsystem or hard-disk drive subsystem (defective system board).
Attachment failed to respond	Diskette drive or hard-disk drive controller cannot send data to associated drive.	Faulty interface cable or connector.
Bad command or file name	Command entered does not exist or is not in pathname specified.	Bad command.
Bad error-correction code(ECC) on disk read	Diskette drive or hard-disk drive controller detected uncorrectable read error.	Faulty diskette/tape drive subsystem or hard-disk drive subsystem (defective system board).
Controller has failed	Hard-disk drive or associated controller defective.	
Data error	Computer received unrecoverable data-read error from diskette or hard-disk drive.	Faulty diskette, diskette drive, or hard-disk drive.
Decreasing available memory	Read/write failure during POST prevents system from using available memory.	One or more DIMMs faulty or improperly seated.
Diskette drive 0 seek failure  Diskette drive 1 seek failure	Diskette/tape drive controller could not locate specific sector or track.	Faulty or improperly inserted diskette, incorrect configuration settings in System Setup program, loose diskette/tape drive interface cable, or loose power cable.
Diskette read failure	Failure occurred while system attempted to read diskette.	Faulty diskette, faulty or improperly connected diskette/tape drive interface cable, or loose power cable.

**Table 3-2. System Error Messages (continued)**

<b>Message</b>	<b>Definition</b>	<b>Probable Causes</b>
Diskette sub-system reset failed	System could not successfully issue reset command to diskette controller.	Faulty diskette/tape drive controller (defective system board).
Diskette write protected	Diskette write-protect feature activated.	Diskette write-protected.
Drive not ready	Diskette missing from or improperly inserted in diskette drive.	Defective, unformatted, or improperly inserted diskette.
Gate A20 failure	Gate A20 of the keyboard controller malfunctioned.	Faulty keyboard controller (defective system board).
General failure	Operating system cannot execute command.	Operating system corrupted or not installed properly.
Hard disk controller failure	Hard-disk drive failed to initialize.	Incorrect configuration settings in System Setup program, improperly connected hard-disk drive cable, faulty hard-disk drive controller subsystem (defective system board), or loose power cable.
Hard disk drive read failure		
Hard disk failure		
Invalid configuration information - please run SETUP program	System Setup program contains incorrect system configuration settings.	Incorrect configuration settings in System Setup program or faulty battery.
Keyboard clock line failure	System cannot communicate with keyboard.	Keyboard cable connector loose or improperly connected, defective keyboard, or defective keyboard/mouse controller (defective system board).
Keyboard failure		
Keyboard controller failure	Keyboard/mouse controller failed.	Defective keyboard/mouse controller (defective system board).

**Table 3-2. System Error Messages (continued)**

<b>Message</b>	<b>Definition</b>	<b>Probable Causes</b>
Keyboard data line failure	System cannot communicate with keyboard.	Keyboard cable connector loose or improperly connected, defective keyboard, or defective keyboard/mouse controller (defective system board).
Keyboard stuck key failure		
Memory address line failure at <i>address</i> , read <i>value</i> expecting <i>value</i>	During memory test, value read at <i>address</i> was incorrect.	Faulty or improperly seated DIMMs or defective system board.
Memory data line failure at <i>address</i> , read <i>value</i> expecting <i>value</i>		
Memory double word logic failure at <i>address</i> , read <i>value</i> expecting <i>value</i>		
Memory odd/even logic failure at <i>address</i> , read <i>value</i> expecting <i>value</i>		
Memory write/read failure at <i>address</i> , read <i>value</i> expecting <i>value</i>		
Memory allocation error	Software in use conflicts with operating system, application program, or utility.	Faulty application program or utility.
Memory tests terminated by keystroke	Memory test did not complete.	POST memory test terminated by pressing <Spacebar>.



**Table 3-2. System Error Messages (continued)**

<b>Message</b>	<b>Definition</b>	<b>Probable Causes</b>
No boot device available	System does not recognize diskette drive or hard-disk drive from which it is trying to boot.	Faulty diskette, diskette/tape drive subsystem, hard-disk drive, hard-disk drive subsystem, or no boot disk in drive A.
No boot sector on hard-disk drive	Configuration settings in System Setup program incorrect, or operating system corrupted.	Incorrect configuration settings in System Setup program, or no operating system on hard-disk drive.
No timer tick interrupt	Timer on system board malfunctioning.	Defective system board.
Non-system disk or disk error	Diskette in drive A, or hard-disk drive does not have bootable operating system installed on it.	Faulty diskette, diskette/tape drive subsystem, or hard-disk drive subsystem.
Not a boot diskette	No operating system on diskette.	No operating system on diskette.
Plug and Play Configuration Error	System encountered problem in trying to configure one or more expansion cards.	System resource conflict.
Read fault	MS-DOS cannot read from diskette or hard-disk drive.	Faulty diskette, diskette/tape drive subsystem, or hard-disk drive subsystem (defective system board).
Requested sector not found	System could not find particular sector on disk, or requested sector defective.	
Reset failed	Disk reset operation failed.	Improperly connected diskette/tape drive, hard-disk drive interface cable, or power cable.
Sector not found	MS-DOS unable to locate sector on diskette or hard-disk drive.	Defective sectors on diskette or hard-disk drive.
Seek error	MS-DOS unable to locate specific track on diskette or hard-disk drive.	Defective diskette or hard-disk drive.

**Table 3-2. System Error Messages (continued)**

<b>Message</b>	<b>Definition</b>	<b>Probable Causes</b>
Seek operation failed	System could not find particular address mark on disk.	Faulty diskette or hard-disk drive.
Shutdown failure	System board chip faulty.	Defective system board.
Time-of-day clock stopped	Backup battery low.	Defective battery or faulty chip (defective system board).
Time-of-day not set	Time or date setting in System Setup program incorrect, or system battery bad.	Incorrect Time or Date settings or defective system battery.
Timer chip counter 2 failed	Timer circuit on system board malfunctioning.	Defective system board.
Unexpected interrupt in protected mode	Keyboard/mouse controller malfunctioning, or one or more DIMMs improperly seated.	Improperly seated DIMMs or faulty keyboard/mouse controller chip (defective system board).
Write fault Write fault on selected drive	MS-DOS cannot write to diskette or hard-disk drive.	Faulty diskette or hard-disk drive.

## Chapter 4

# Removing and Replacing Parts on the Low-Profile Chassis

**T**his chapter provides procedures for removing the components, assemblies, and subassemblies in the Dell OptiPlex GXa low-profile computer. If you are servicing a Dell OptiPlex GXa midsize or mini tower computer, use Chapter 5, “Removing and Replacing Parts on the Midsize Chassis,” or Chapter 6, “Removing and Replacing Parts on the Mini Tower Chassis.”

Unless otherwise noted, each procedure assumes the following:

- You have performed the steps in “Precautionary Measures” found later in this chapter.
- You have removed the computer cover.
- You can replace or reinstall a part by performing the removal procedure in reverse order unless additional information is provided.

## ***Recommended Tools***

Most of the procedures in this chapter require the use of one or more of the following tools:

- Small flat-blade screwdriver
- Wide flat-blade screwdriver
- #1 and #2 Phillips screwdrivers
- 1/4-inch nutdriver
- Tweezers or long-nose pliers

Also, use a wrist grounding strap as explained in the next section, “Precautionary Measures.”

## ***Precautionary Measures***


Before you perform any of the procedures in this chapter, take a few moments to read the following warning for your personal safety and to prevent damage to the system from ESD.

**WARNING FOR YOUR PERSONAL SAFETY AND PROTECTION OF THE EQUIPMENT:** Before you start to work on the system, perform the following steps in the sequence listed.

- 1. Turn off the computer and any attached peripherals.**
- 2. Disconnect the computer and any attached peripherals from their power sources to reduce the potential for personal injury. Also, disconnect any telephone or telecommunication lines from the computer.**
- 3. Wait 5 seconds after powering down the computer before disconnecting a peripheral from the computer or removing a component from the computer's system board to avoid possible damage to the system board.**
- 4. Wear a wrist grounding strap, and clip it to an unpainted metal surface, such as the padlock loop on the back of the chassis. If a wrist grounding strap is not available, periodically touch an unpainted metal surface on the back of the computer to discharge any static charge from your body. Avoid touching components and contacts on a card, and avoid touching pins on a chip to prevent static electricity damage.**


# Inside the Computer

Figure 4-1 shows an internal view of the interior of the low-profile computer and identifies major components for orientation. Refer to this illustration as needed when performing the component removal/replacement procedures in this chapter.

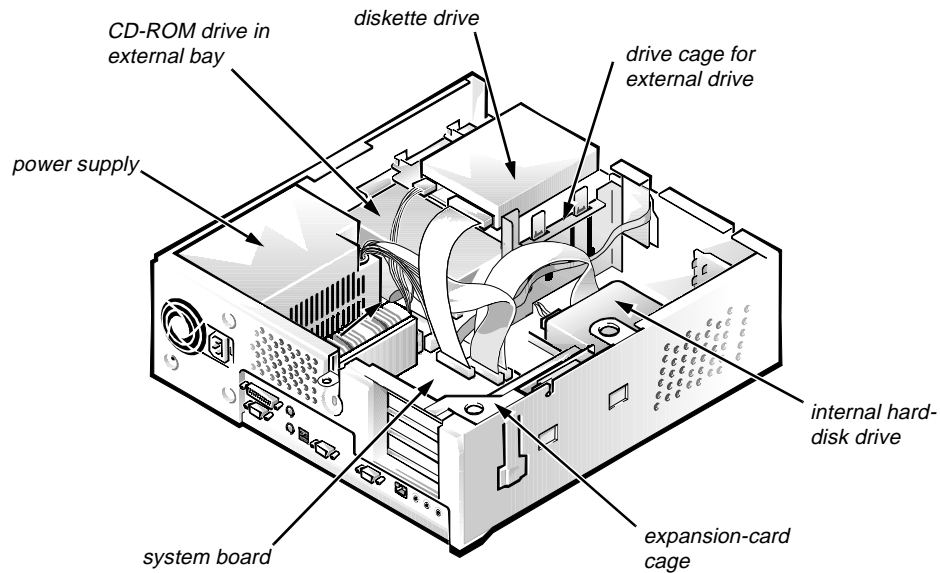

**Figure 4-1. Internal View of the Low-Profile Computer**

# Computer Cover

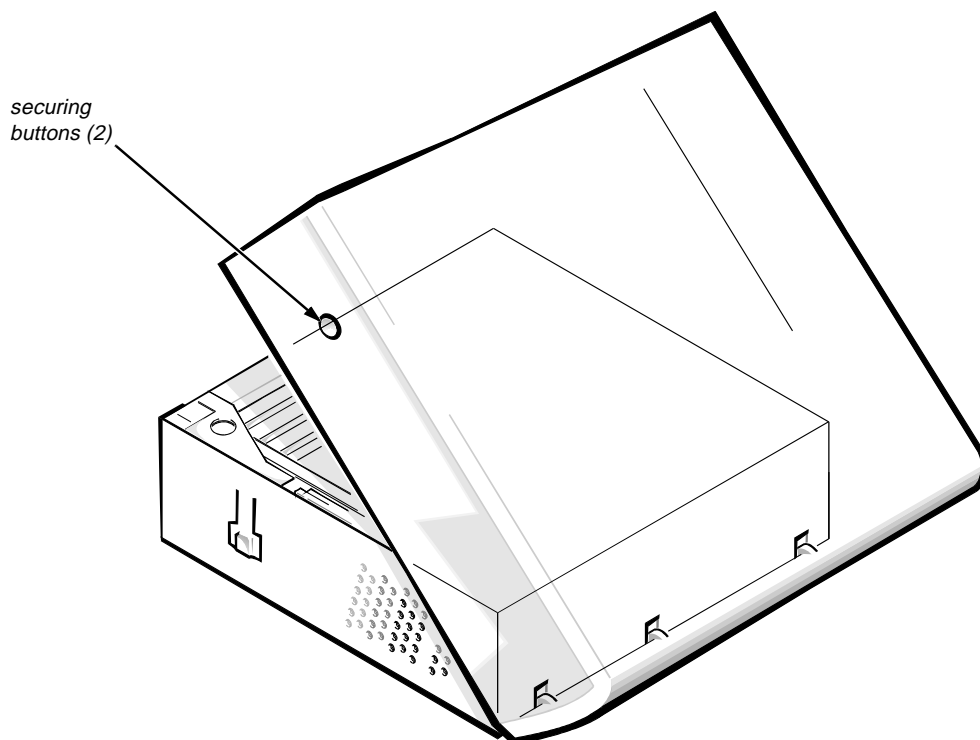

**Figure 4-2. Computer Cover Removal**


To remove the computer cover, follow these steps:

- 1. Turn off power to all peripherals and disconnect the AC power cable from its AC outlet.**
- 2. Remove the padlock if one is installed.**
- 3. Press in on the two securing buttons until the cover is free to swing up.**
- 4. Raise the back of the cover and pivot it toward the front of the computer.**
- 5. Lift the cover off of the hooks at the front of the chassis.**

Three plastic hooks on the inside-front part of the cover secure it to the chassis.

Before you reinstall the cover, fold all cables out of the way so that they do not interfere with the cover or with the proper airflow inside the computer.

# Eject, Power, and Reset Buttons

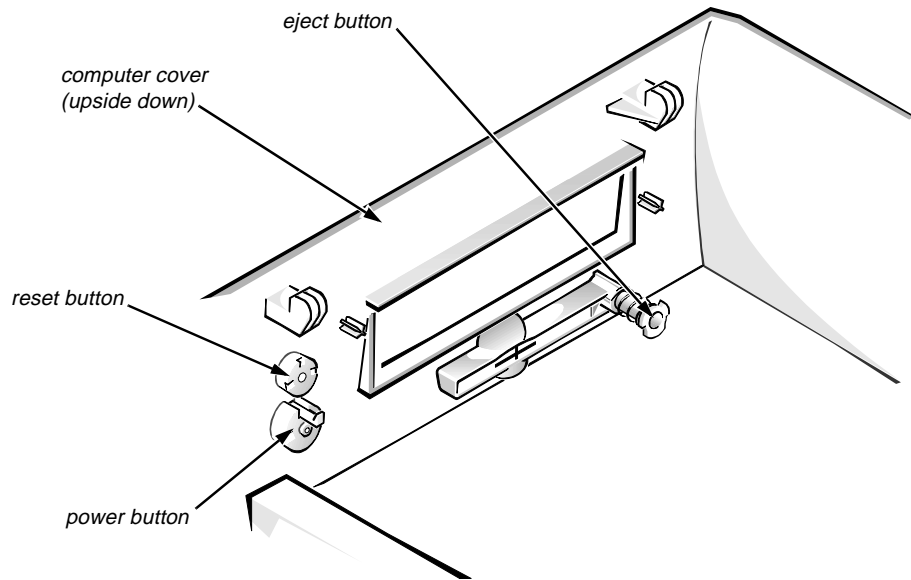


**Figure 4-3. Eject, Power, and Reset Button Removal**

To remove the eject, power, and reset buttons, follow these steps:

- 1. Lay the computer cover upside down on a flat work surface, with the back of the cover facing you.**
- 2. To remove the 3.5-inch diskette-drive eject button, pull gently on the plastic part of the button until it comes free.**
- 3. To remove the power button or the reset button, use a small screwdriver and push in on the two or three plastic clips that hold the button to the computer cover.**

When these clips are released, the button comes free from the front panel of the cover.

## Front-Panel Inserts

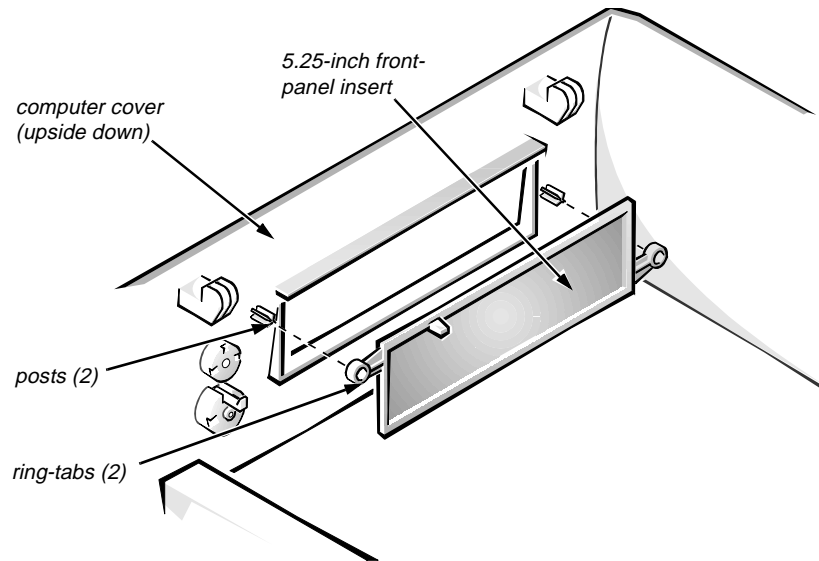

**Figure 4-4. Front-Panel Insert Removal**


To remove a front-panel insert, follow these steps:

- 1. Lay the computer cover upside down on a flat work surface, with the front of the cover facing you.**
- 2. From the front of the cover, use your thumbs to push inward on the insert until it slides off the two posts.**

To replace a front-panel insert, position the front-panel insert, then press the ring-tabs over the posts. If necessary, use a 1/4-inch nutdriver to help push on the ring-tabs.



# Control Panel

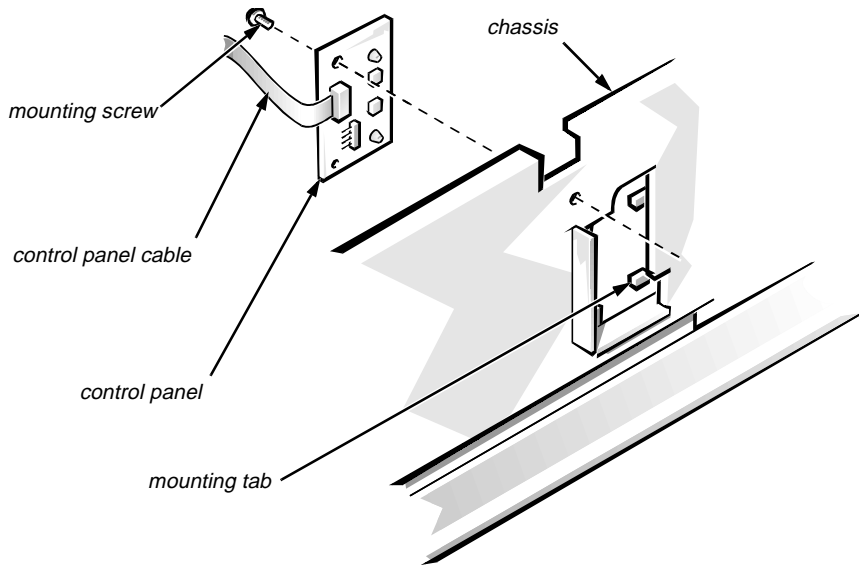

**Figure 4-5. Control Panel Removal**


To remove the control panel, follow these steps:

- 1. Disconnect the control panel cable from the PANEL connector on the system board (see Figure 4-15).**
- 2. From the inside of the chassis, remove the mounting screw holding the control panel to the chassis.**
- 3. Remove the control panel from the chassis.**

When you reinstall the control panel, be sure to put the right side of the control panel behind the mounting tab.


# Drives

Figure 4-6 shows an example of drive hardware that can be installed in the computer. Refer to this figure when you perform any of the procedures in the following subsections.

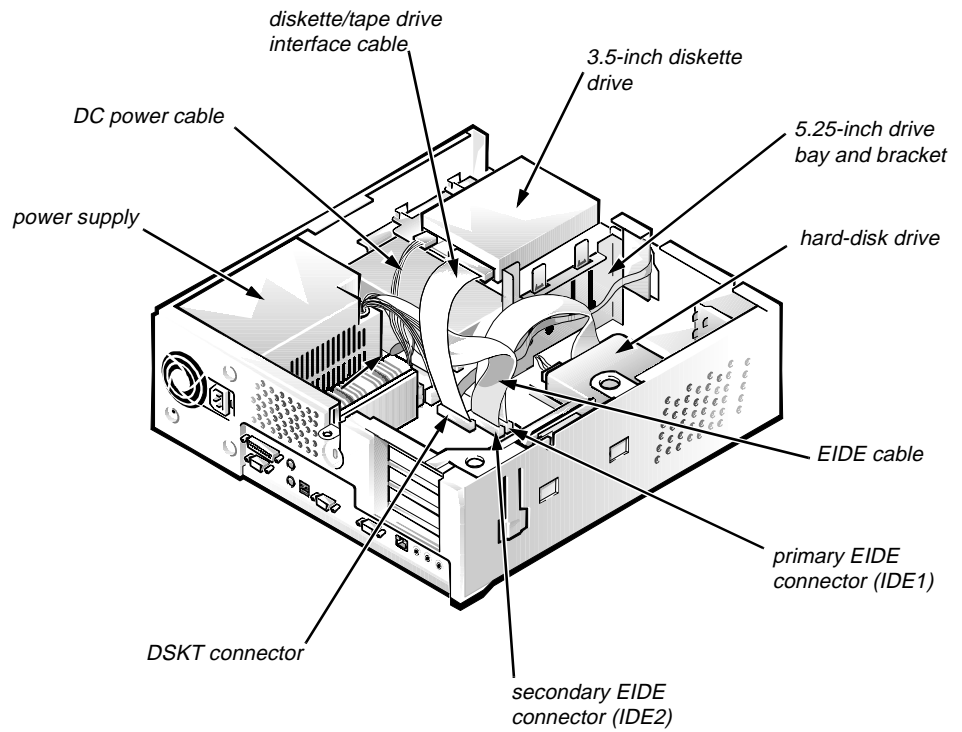

**Figure 4-6. Drive Hardware**

## 3.5-Inch Diskette Drive Assembly

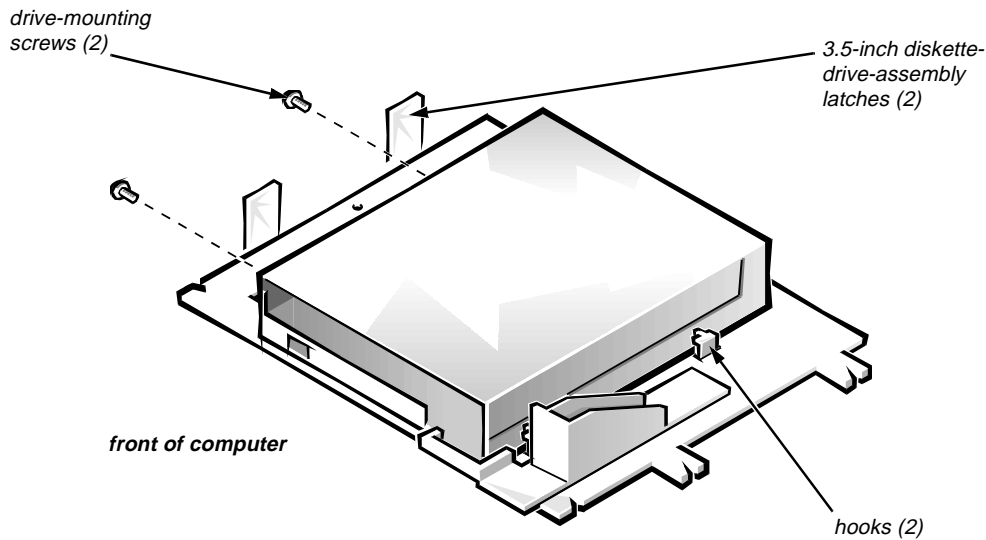


**Figure 4-7. 3.5-Inch Diskette Drive Removal**

To remove the 3.5-inch diskette drive assembly, follow these steps:

- 1. Disconnect the DC power cable and the interface cable from the back of the diskette drive.**
- 2. Press the two 3.5-inch diskette-drive-assembly latches to the left to release the assembly.**  
Rotate the left side of the assembly up, and lift the assembly out of the chassis.
- 3. Remove the two drive-mounting screws from the left side of the drive, and remove the drive from the bracket.**

When you replace the 3.5-inch diskette drive, be sure the mounting holes on the right side of the drive engage the two hooks on the bracket.

## 5.25-Inch Drive Assembly

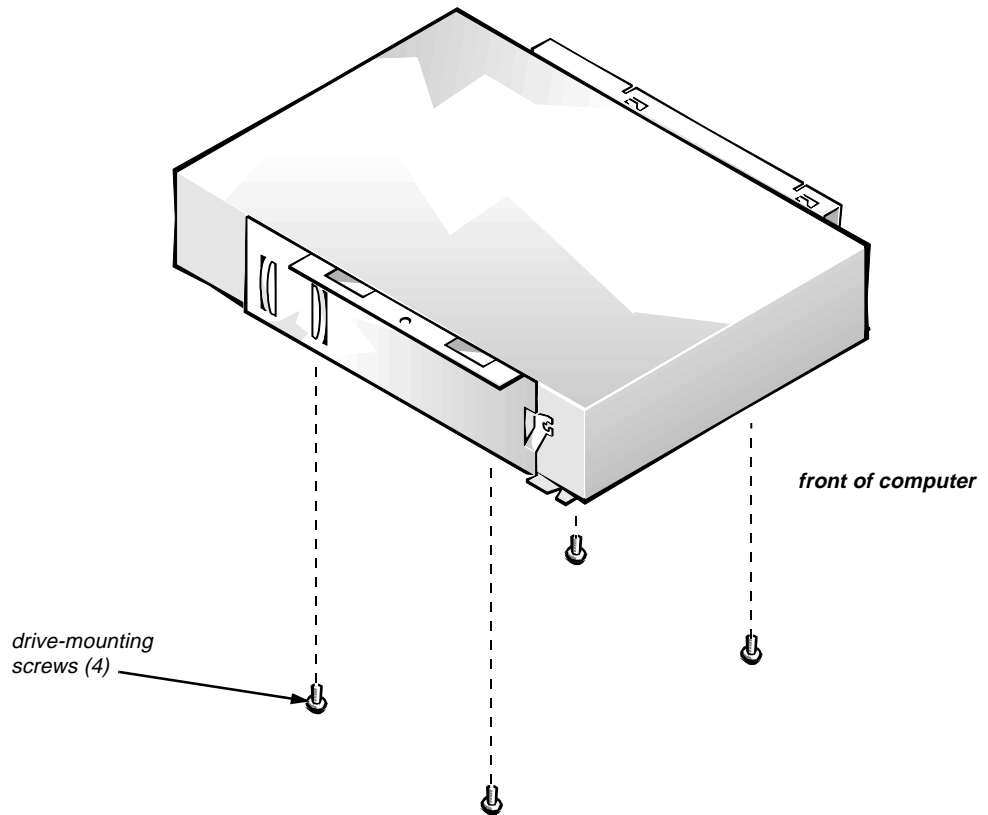

**Figure 4-8. 5.25-Inch Drive Assembly Removal**


To remove a 5.25-inch drive assembly, follow these steps:

- 1. Remove the 3.5-inch diskette drive assembly.**
- 2. Disconnect the DC power cable and the interface cable from the back of the 5.25-inch drive.**
- 3. Lift the 5.25-inch drive assembly straight up and out of the chassis.**
- 4. Lay the 5.25-inch drive assembly upside down, then remove the four screws attaching the drive to the bracket.**

When you replace the 5.25-inch drive, place the front of the drive toward the front of the bracket; then install the four screws, but do not tighten them. Align the screws with the score marks on the bracket, and tighten the screws in the order stamped on the bottom of the bracket.

Check the alignment of the computer cover around the 5.25-inch drive bezel. Adjust the drive forward or backward on the bracket to align it.

## Hard-Disk Drive Assembly

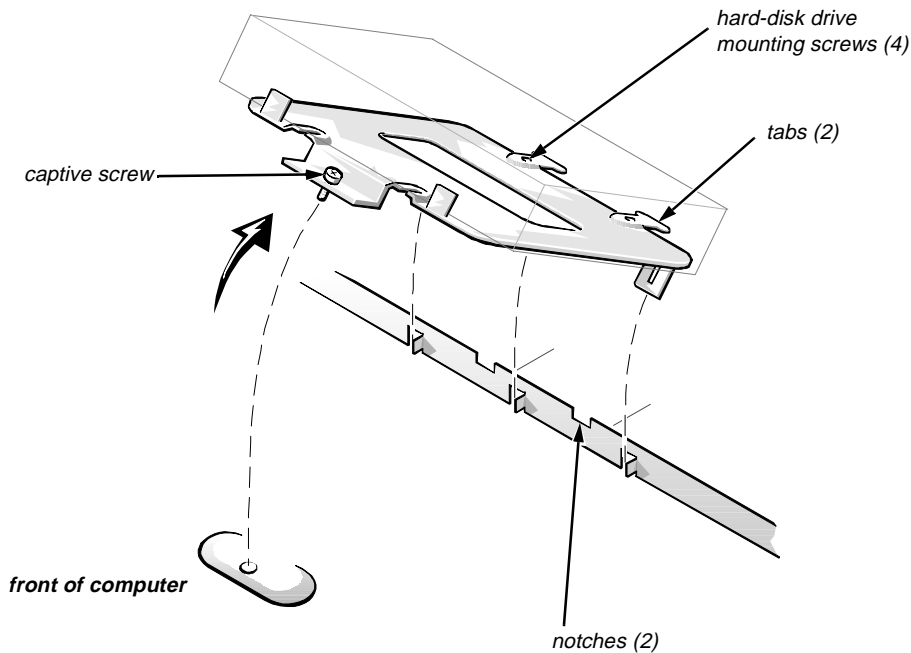


**Figure 4-9. Hard-Disk Drive Assembly Removal**

To remove the hard-disk drive, follow these steps:

- 1. Disconnect the DC power cable and the interface cable from the back of the drive.**
- 2. Loosen the captive screw that secures the hard-disk drive bracket to the chassis.**
- 3. Pivot the hard-disk drive assembly up, then lift it out of the chassis.**
- 4. Remove the four hard-disk drive mounting screws that attach the hard-disk drive to the hard-disk drive bracket.**

When you reinstall the hard-disk drive assembly, be sure the tabs on the back of the mounting plate fully engage in the notches on the chassis before you rotate the assembly into place.

# System Power Supply

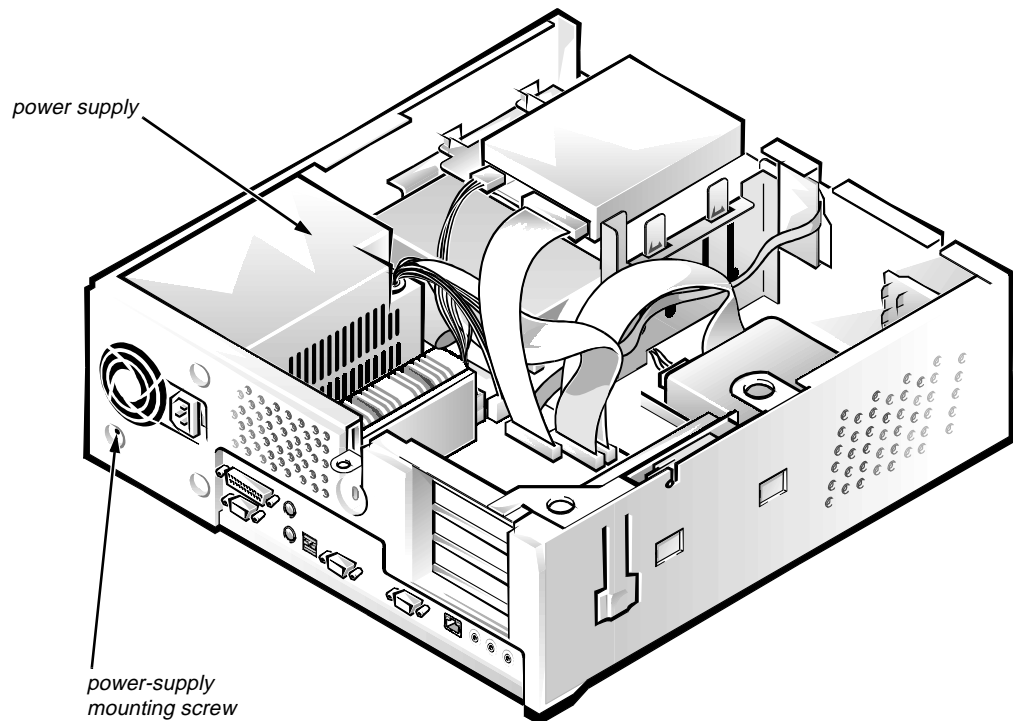

**Figure 4-10. System Power-Supply Removal**

To remove the system power supply, follow these steps:

- 1. Disconnect the AC power cable from the back of the power supply.**
- 2. Disconnect the DC power cables from the system board and the drives.**
- 3. Remove the power-supply mounting screw at the back of the chassis.**
- 4. Slide the system power supply forward until it stops; then lift it from the chassis.**

When you replace the system power supply, place it down inside the chassis and against the right side of the chassis. Then slide the system power supply toward the back of the chassis, and hook the tabs into the right side of the power supply.


**WARNING:** The voltage select switch, located on the back of the power supply assembly, must be set to the correct operating voltage (115 V or 230 V) before the power cable is plugged into an AC outlet.

## Expansion Cards

The computer has a removable expansion-card cage. The expansion-card cage contains the riser board and any installed expansion cards. Dell recommends that you remove the expansion-card cage first before removing or installing expansion cards.

If you are not removing any of the expansion cards, leave the external cables attached to the expansion cards.

### Expansion-Card Cage

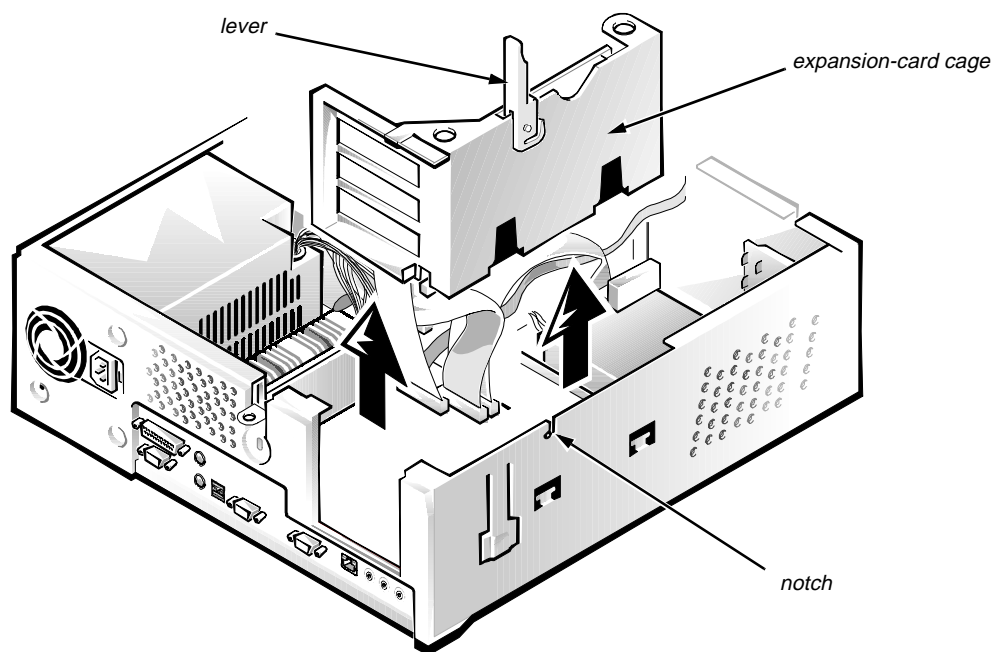


**Figure 4-11. Expansion-Card Cage Removal**

To remove an expansion-card cage, follow these steps:

- 1. Rotate the lever toward the back of the computer until it stops in the upright position.**
- 2. Lift the expansion-card cage up and away from the computer.**

To replace an expansion-card cage, keep it flush against the chassis to ensure that the lever engages the notch in the chassis when the lever is depressed.

## Expansion Card

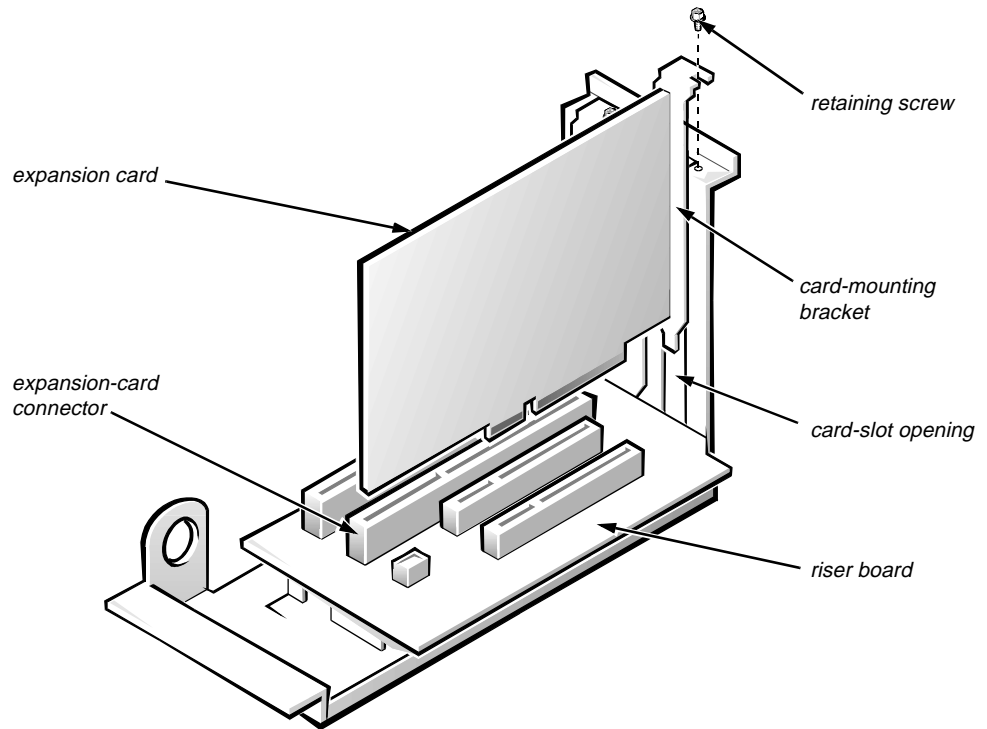


**Figure 4-12. Expansion-Card Removal**

To remove an expansion card, follow these steps:

- 1. Disconnect any external cables from the expansion card being removed.**
- 2. Remove the expansion-card cage.**
- 3. Remove the retaining screw from the card-mounting bracket.**
- 4. Grasp the expansion card by its corners, and carefully remove it from the expansion-card connector.**



## Riser Board

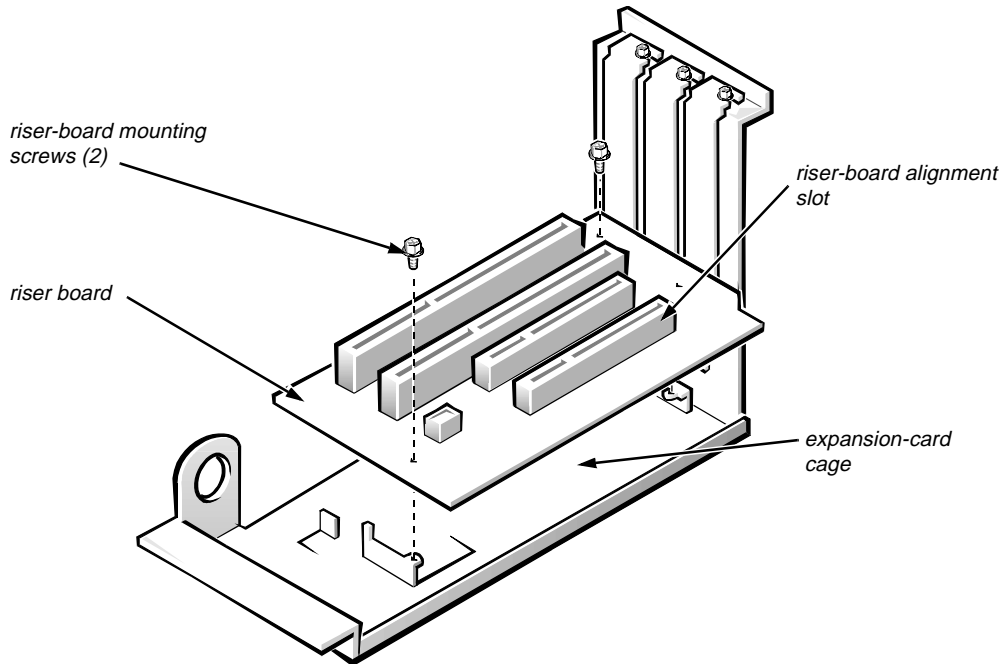


**Figure 4-13. Riser Board Removal**

To remove the riser board, follow these steps:

- 1. Remove the expansion-card cage and all expansion cards.**
- 2. Lay the expansion-card cage on a flat work surface with the riser board facing up.**
- 3. Remove the two riser-board mounting screws.**
- 4. Lift the riser board away from the expansion-card cage.**

When you replace the riser board, be sure the alignment feature on the expansion-card cage engages with the alignment slot.

# System Board

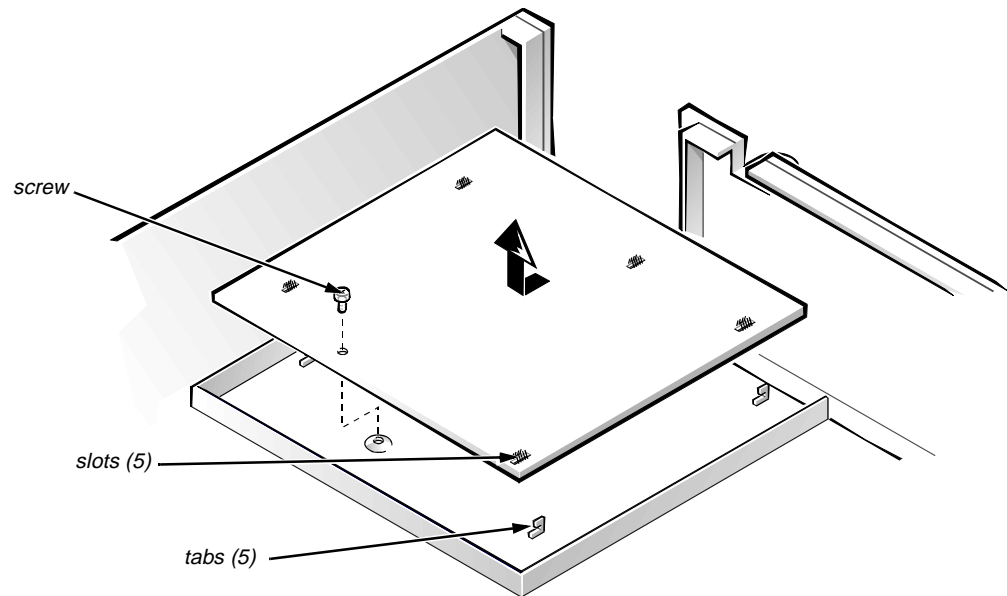

**Figure 4-14. System Board Removal**

To remove the system board, follow these steps:


- 1. Disconnect all cables from their connectors at the back of the computer.**
- 2. Remove the expansion-card cage.**
- 3. Disconnect all cables from the system board.**
- 4. Remove the screw that secures the system board to the bottom of the chassis.**
- 5. Slide the system board toward the front of the chassis until it stops.**
- 6. Carefully lift the system board out of the chassis (be sure to lift evenly and not twist the system board).**

*NOTE: If you are replacing the system board, remove all DIMMs, the video-memory upgrade module (if present), the single-edge contact (SEC) cartridge/heat sink assembly, and the guide bracket assembly from the old system board and install them on the replacement board. Also, set the jumpers on the new system board so they are identical to those on the old board unless a microprocessor upgrade is being installed.*

When you reinstall the system board (before you slide the system board back to lock it in position), push down near each slot to engage the grounding clip onto its corresponding tab. Push evenly on both sides of the system board as you slide it into position (do not twist the system board).

# System Board Components

The subsections that follow Figure 4-15 contain procedures for removing/replacing system board components.

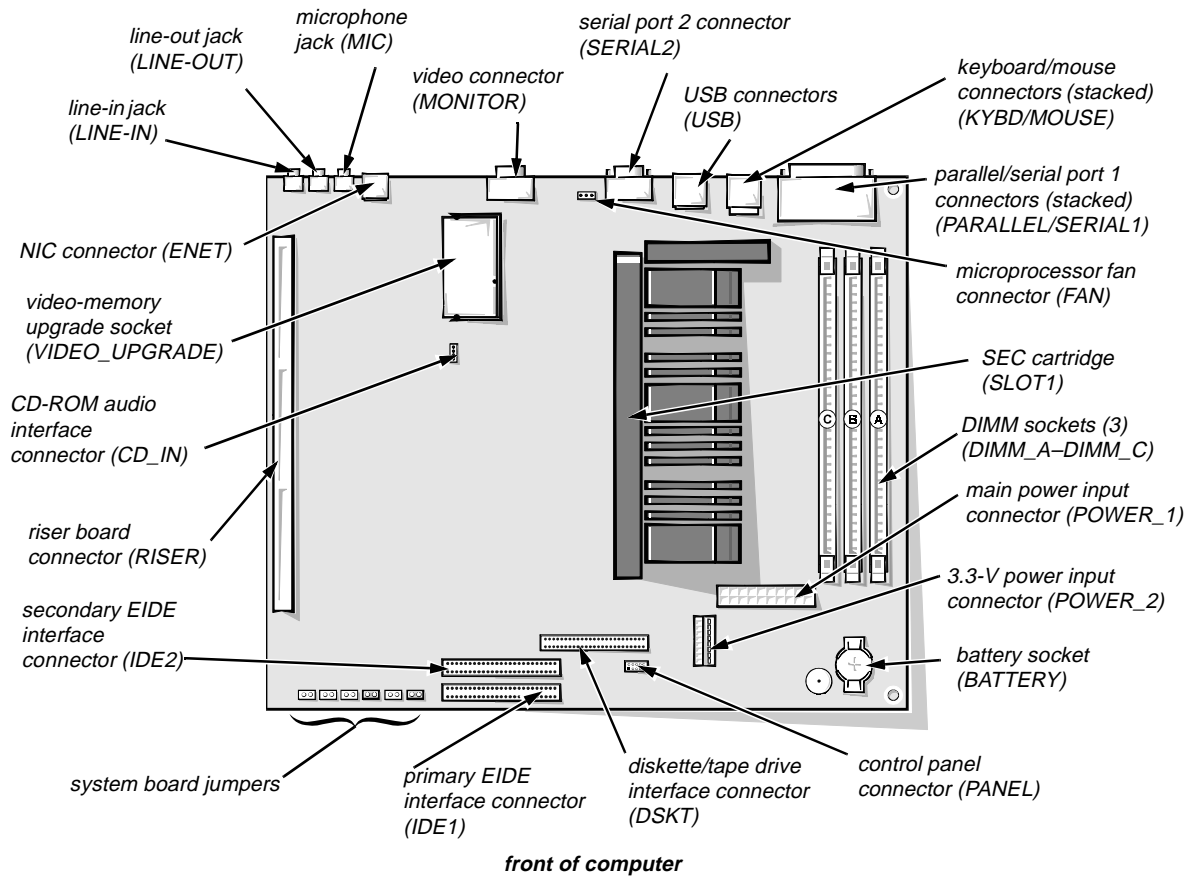


**Figure 4-15. System Board Components**

## ***DIMMs***


To remove a DIMM from one of the three DIMM sockets, follow these steps:

- 1. Remove the system power supply.**
- 2. Locate the three DIMM sockets (see Figure 4-15).**
- 3. To remove a DIMM, push outward on the DIMM socket's securing clips until the DIMM is released from its socket.**
- 4. Lift the DIMM away from the socket.**

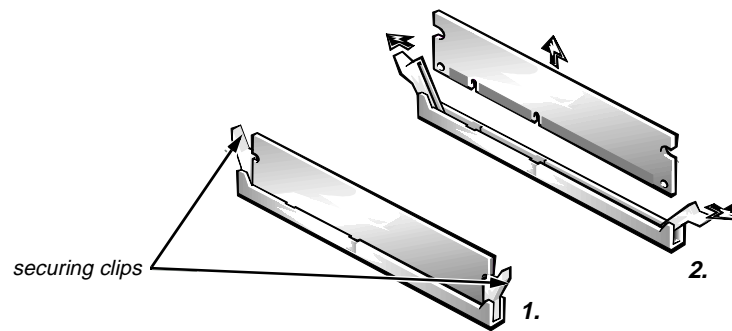

**Figure 4-16. DIMM Removal**

- 5. Reinstall the replacement DIMM by pressing the DIMM fully into the socket while closing the securing clips to lock the DIMM into the socket.**

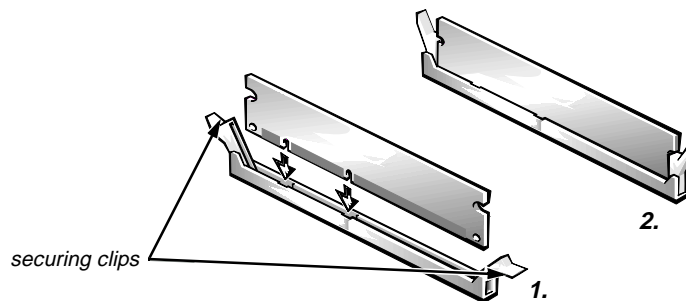

**Figure 4-17. DIMM Installation**

- 6. Replace all assemblies and cables previously removed.**

## ***Video Memory***


You can upgrade video memory from 2 to 4 MB by installing a video-memory upgrade module into the video-memory upgrade socket on the system board. Adding additional video memory increases the system's video performance and provides additional modes for high-resolution/expanded color applications.

To install the video memory upgrade, follow these steps:

**1. Remove the expansion-card cage.**

**CAUTION:** To avoid possible damage to the video-memory upgrade socket and/or video-memory upgrade module, the module is keyed and must be correctly positioned before inserting it into the socket.

**2. Orient the video-memory upgrade module as shown in Figure 4-18. Then carefully align the module's edge connector pins with the socket ensuring that the slot in the module mates with the socket key.**

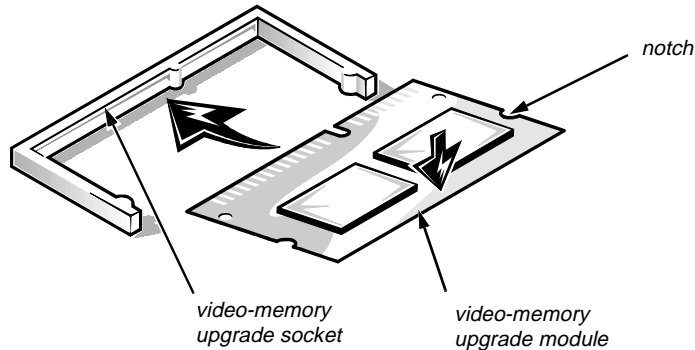

**Figure 4-18. Installing a Video-Memory Upgrade Module**

**3. Press the video-memory upgrade module firmly into the socket, and pivot the module downward until the module clicks into place.**

*NOTE: If you do not hear a sharp click when installing the video-memory upgrade module, remove the module and repeat steps 2 and 3.*

**4. Replace the expansion-card cage.**

**5. Replace the computer cover and reconnect the AC power cable to the AC outlet. Press the power switch on the computer to reboot the system.**

*NOTE: As the system boots, it automatically detects the presence of the new video-memory upgrade module and automatically changes the system configuration information in the System Setup program.*

**6. Enter the System Setup program and confirm that 4 MB is shown in the Video Memory category. If the total memory is listed incorrectly, repeat steps 1 through 6 to reseat the video-memory upgrade module and verify that the computer acknowledges the module.**


**7. Run the system diagnostics (Video Test Group) to test the new video-memory upgrade module.**

## Microprocessor

To take advantage of future options in processor speed and functionality, you can replace the microprocessor on your system board with any Dell-supported microprocessor upgrade. The microprocessor upgrade kit is shipped with an SEC cartridge/heat sink assembly, which includes the microprocessor, microprocessor heat sink, and L2 cache memory module.

You may also have to reseal or replace an SEC cartridge/heat sink assembly during normal maintenance.

## SEC Cartridge/Heat Sink Assembly

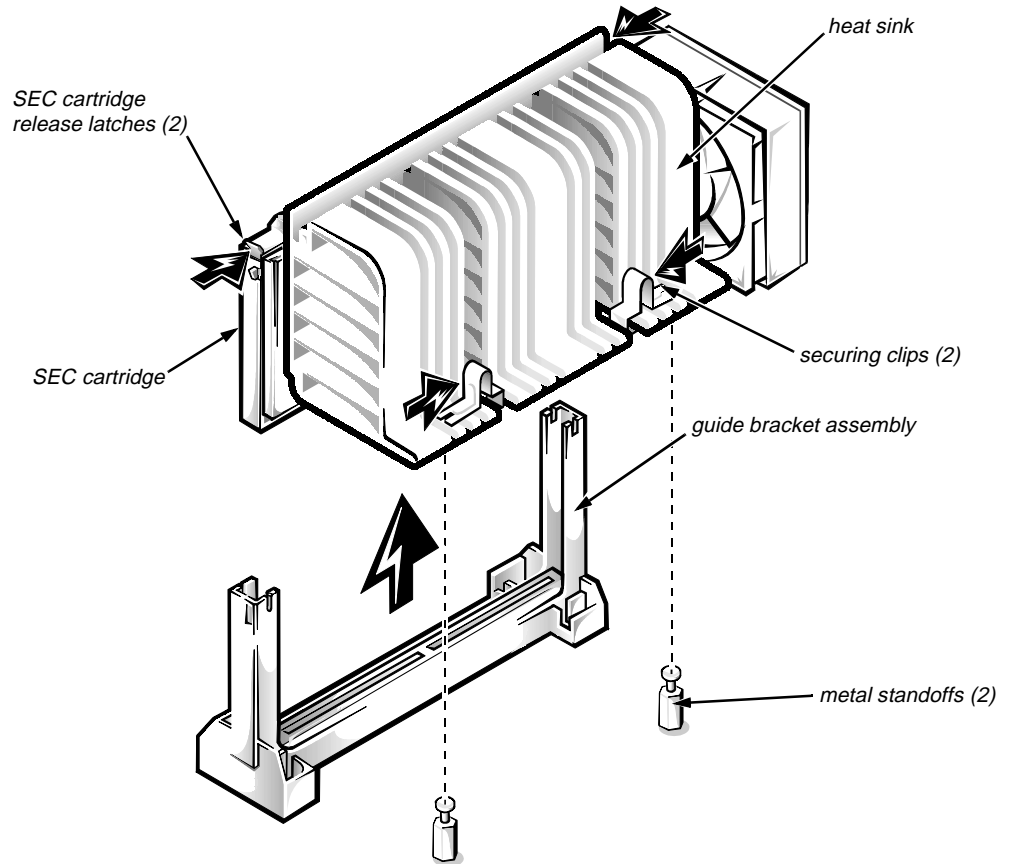

**Figure 4-19. SEC Cartridge/Heat Sink Removal**

To remove the SEC cartridge/heat sink assembly, follow these steps:


**1. Remove the system power supply.**

**WARNING:** The SEC cartridge/heat sink assembly can get extremely hot during system operations. Be sure that the assembly has had sufficient time to cool before touching it.

- 2. Locate the SEC cartridge/heat sink assembly.**
- 3. Disconnect the microprocessor fan connector from the 3-pin connector on the system board (labeled “FAN”), located between the serial port 2 connector and the video connector (see Figure 4-15).**
- 4. Release the two securing clips near the base of the heat sink from the metal standoffs as shown in Figure 4-19.**
- 5. Locate and press inward on the SEC cartridge release latches (located directly on top of the SEC cartridge adjacent to the heat sink assembly) until the latches click.**
- 6. Lift the SEC cartridge/heat sink assembly out of its guide bracket assembly/connector on the system board.**

*NOTE: When installing the SEC cartridge/heat sink assembly, carefully orient the assembly and press firmly with up to 25 pounds of force to mate the SEC cartridge with its connector. Then slide the heat sink release latches outward to lock the assembly onto the metal standoffs.*

## **System Battery**

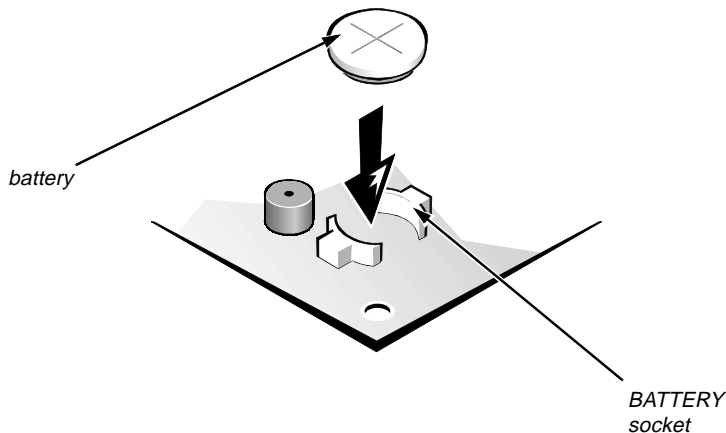

**Figure 4-20. System Battery Installation**

To remove the system battery, follow these steps:

1. **If possible boot the system and enter the System Setup program. Then record important system configuration information (see Appendix A, “System Setup Program,” for details).**
2. **Turn off power to all peripherals and disconnect the AC power cable from its AC outlet.**
3. **Remove the computer cover.**
4. **Remove the expansion-card cage, and locate the battery in the front-right corner of the system board adjacent to the DIMM connectors (see Figure 4-15).**

**CAUTION:** If you pry out the battery with a blunt object, be careful not to touch the system board with the object. Ensure that the object is inserted between the battery and the socket before attempting to pry out the battery. Otherwise, you may damage the system board by prying off the socket or by breaking traces on the system board.

5. **Remove the battery by carefully prying it out of its socket with your fingers or with a blunt, nonconducting object, such as a plastic screwdriver.**

**WARNING:** There is a danger of the new battery exploding if it is incorrectly installed. When you replace the system battery, orient the new battery with the “+” facing up (see Figure 4-20). Replace the battery only with the same or equivalent type recommended by the manufacturer. Discard used batteries according to the manufacturer’s instructions.

6. **Insert the battery into the socket (with the positive side labeled “+” facing upwards) into its socket, and snap it into place.**
7. **Replace the expansion-card cage; replace the computer cover, reconnect all cabling, and reboot the system.**
8. **Enter the System Setup program, and configure the system using the information from the printouts you made earlier.**
9. **Turn off the computer; wait 10 or more minutes and reenter the System Setup program to ensure that the date and time are still correct indicating that the system battery is functioning correctly.**



## Chapter 5

# Removing and Replacing Parts on the Midsize Chassis

**T**his chapter provides procedures for removing the components, assemblies, and subassemblies in the Dell OptiPlex GXa midsize computer. If you are servicing a Dell OptiPlex GXa low-profile or mini tower computer, use Chapter 4, “Removing and Replacing Parts on the Low-Profile Chassis,” or Chapter 6, “Removing and Replacing Parts on the Mini Tower Chassis.”

Unless otherwise noted, each procedure assumes the following:

- You have performed the steps in “Precautionary Measures” found later in this chapter.
- You have removed the computer cover.
- You can replace or reinstall a part by performing the removal procedure in reverse order unless additional information is provided.

## ***Recommended Tools***

Most of the procedures in this chapter require the use of one or more of the following tools:

- Small flat-blade screwdriver
- Wide flat-blade screwdriver
- #1 and #2 Phillips screwdrivers
- 1/4-inch nutdriver
- Tweezers or long-nose pliers

Also, use a wrist grounding strap as explained in the next section, “Precautionary Measures.”

## ***Precautionary Measures***


Before you perform any of the procedures in this chapter, take a few moments to read the following warning for your personal safety and to prevent damage to the system from ESD.

**WARNING FOR YOUR PERSONAL SAFETY AND PROTECTION OF THE EQUIPMENT:** Before you start to work on the system, perform the following steps in the sequence listed.

- 1. Turn off the computer and any attached peripherals.**
- 2. Disconnect the computer and any attached peripherals from their power sources to reduce the potential for personal injury. Also, disconnect any telephone or telecommunication lines from the computer.**
- 3. Wait 5 seconds after powering down the computer before disconnecting a peripheral from the computer or removing a component from the computer's system board to avoid possible damage to the system board.**
- 4. Wear a wrist grounding strap, and clip it to an unpainted metal surface, such as the padlock loop on the back of the chassis. If a wrist grounding strap is not available, periodically touch an unpainted metal surface on the back of the computer to discharge any static charge from your body. Avoid touching components and contacts on a card, and avoid touching pins on a chip to prevent static electricity damage.**


# Inside the Computer

Figure 5-1 shows an internal view of the midsize computer and identifies major components for orientation. Refer to this illustration as needed when performing the component removal/replacement procedures in this chapter.

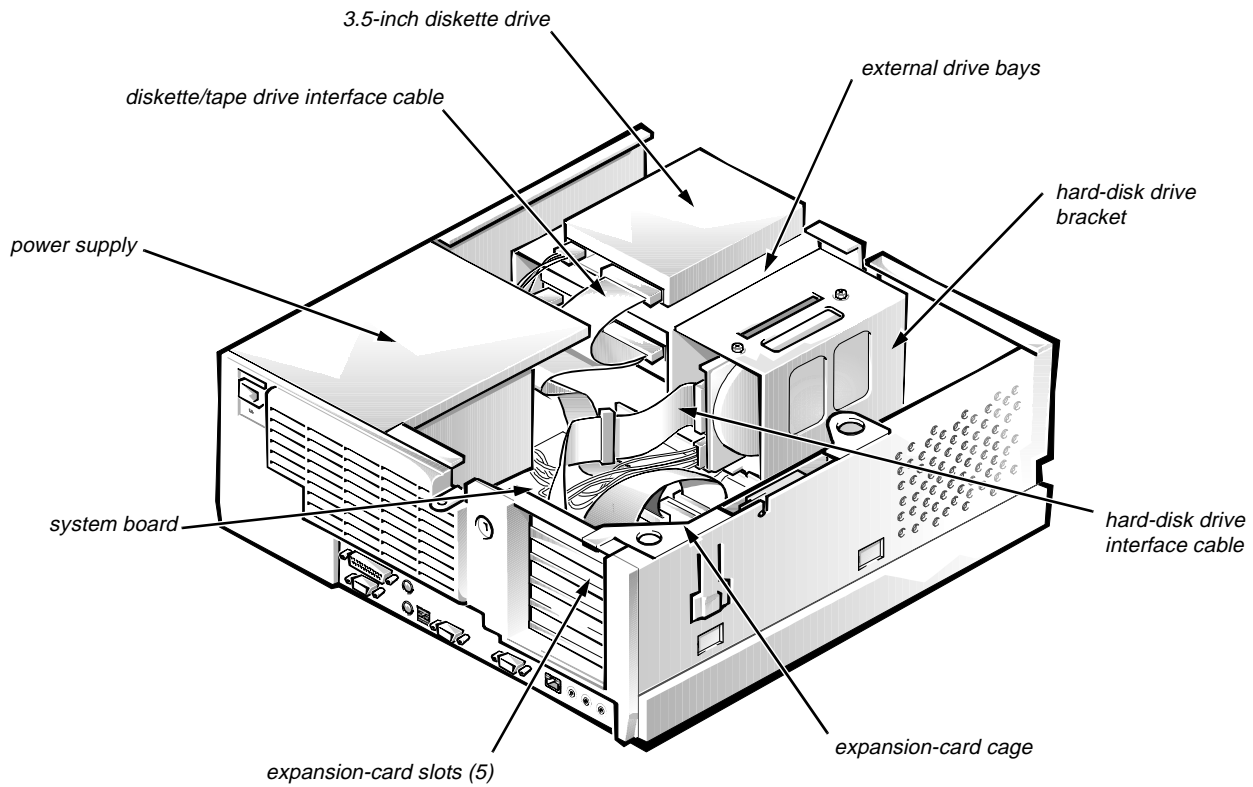

**Figure 5-1. Internal View of the Midsize Computer**

## ***Floor Stand***

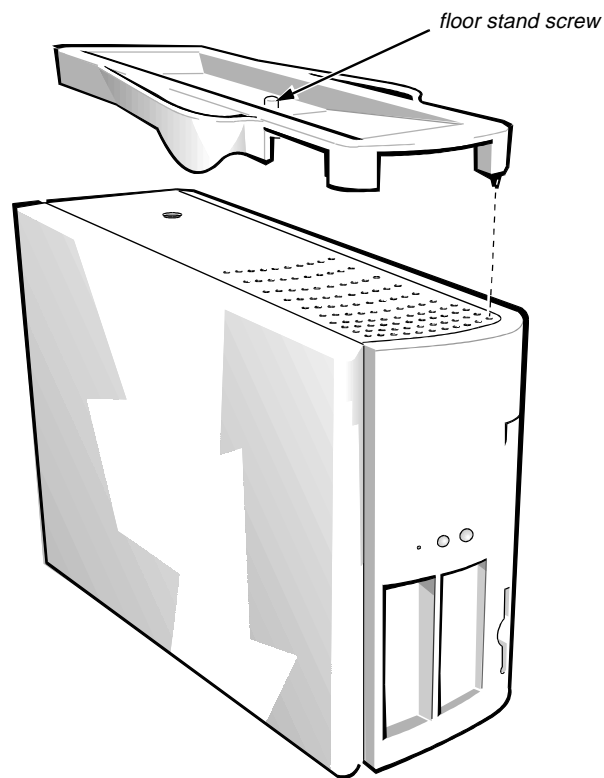

***Figure 5-2. Floor Stand Removal***

To remove the floor stand, follow these steps:


- 1. Place the right side of the computer on a flat work surface.**
- 2. Unscrew the floor stand screw.**

Use your fingers or a wide flat-blade screwdriver to unscrew the floor stand screw.

- 3. Pull the floor stand away from the computer.**

Disengage the three orientation nubs that position and help hold the floor stand to the computer.

# Computer Cover

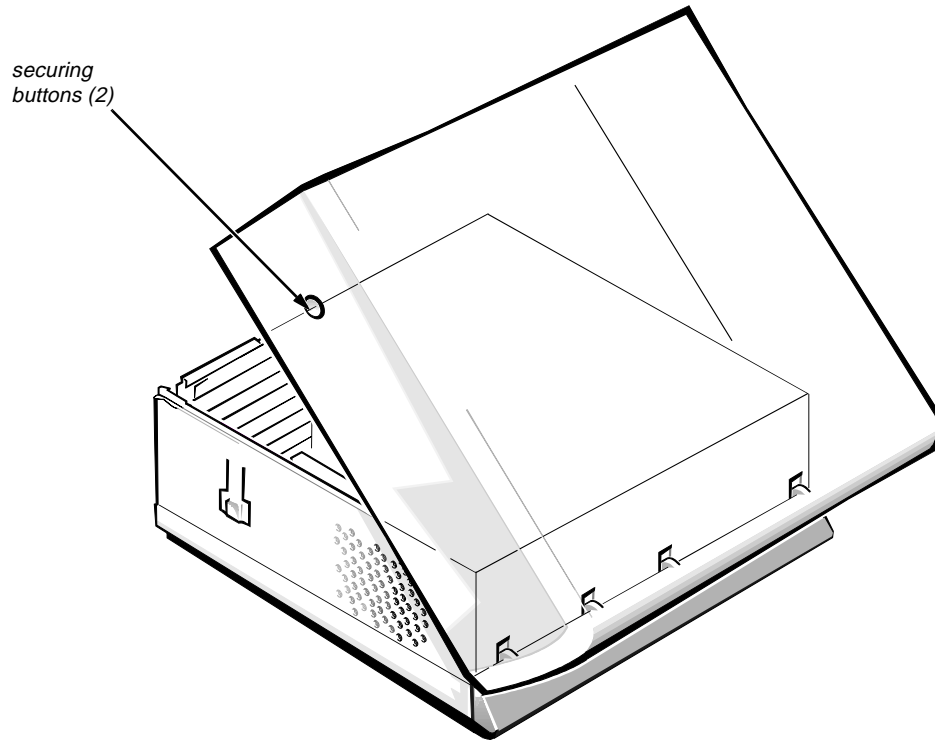

**Figure 5-3. Computer Cover Removal**


To remove the computer cover, follow these steps:

- 1. Turn off power to all peripherals and disconnect the AC power cable from its AC outlet.**
- 2. Press in on the two securing buttons until the cover is free to swing up.**
- 3. Raise the back of the cover and pivot it toward the front of the computer.**
- 4. Lift the cover off the hooks at the front of the chassis.**

Four plastic hooks on the inside-front part of the cover secure it to the chassis.

Before you reinstall the cover, fold all cables out of the way so that they do not interfere with the cover or with the proper airflow inside the computer.

## Eject, Power, and Reset Buttons

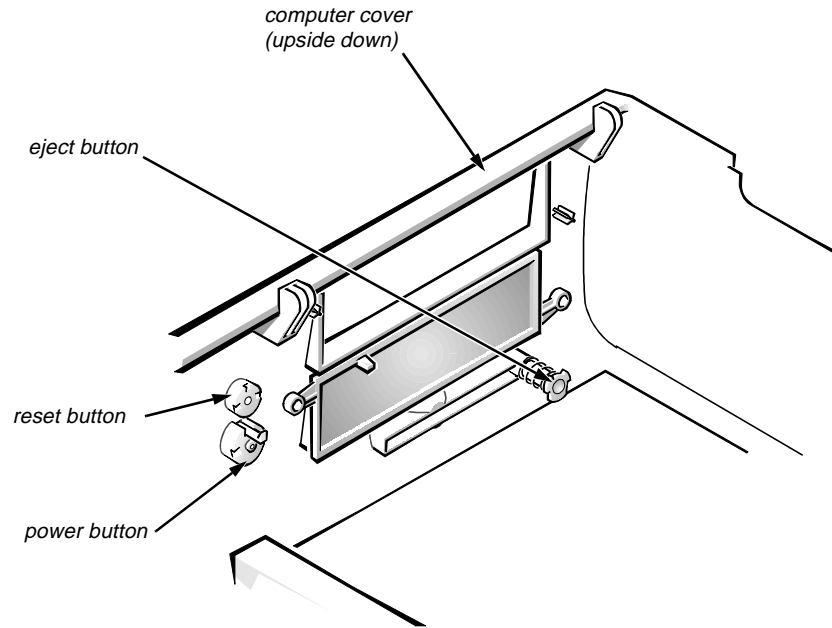


**Figure 5-4. Eject, Power, and Reset Button Removal**

To remove the eject, power, and reset buttons, follow these steps:

- 1. Lay the computer cover upside down on a flat work surface, with the back of the cover facing you.**
- 2. To remove the 3.5-inch diskette-drive eject button, pull gently on the plastic part of the button until it comes free.**
- 3. To remove the power button or the reset button, use a small screwdriver and push in on the two or three plastic clips that hold the button to the computer cover.**

When these clips are released, the button comes free from the front panel of the cover.

# Front-Panel Inserts

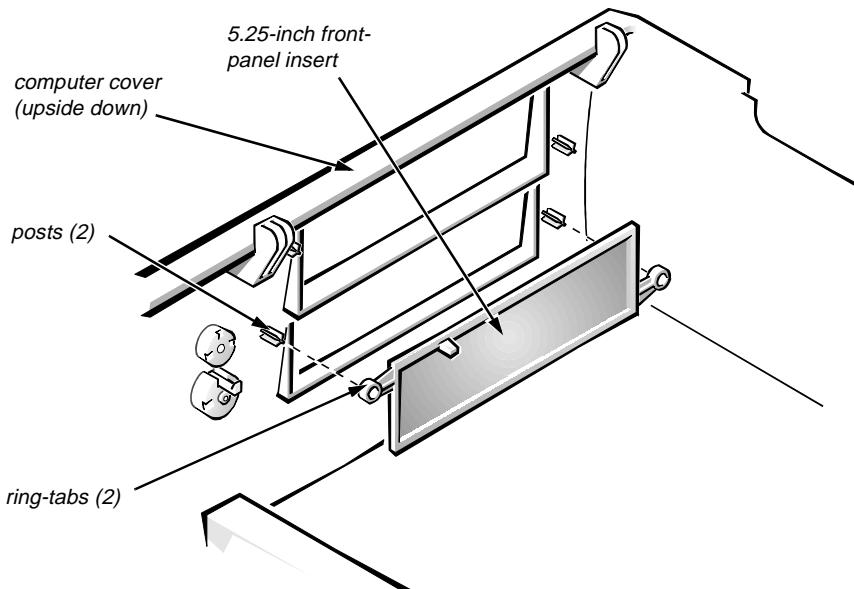


**Figure 5-5. Front-Panel Insert Removal**

To remove a front-panel insert, follow these steps:

- 1. Lay the computer cover upside down on a flat work surface, with the front of the cover facing you.**
- 2. From the front of the cover, use your thumbs to push inward on the insert until it slides off the two posts.**

To replace a front-panel insert, position the front-panel insert, then press the ring-tabs over the posts. If necessary, use a 1/4-inch nutdriver to help push on the ring-tabs.

# Control Panel

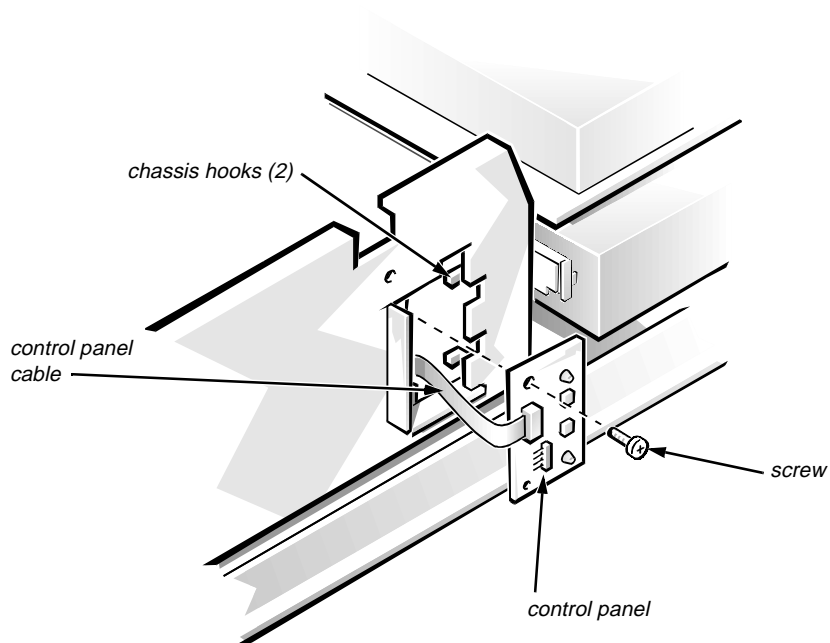

**Figure 5-6. Control Panel Removal**

To remove the control panel, follow these steps:


- 1. Remove the hard-disk drive bracket.**
- 2. Disconnect the control panel cable from the PANEL connector on the system board (see Figure 5-18).**
- 3. Remove the mounting screw holding the control panel to the chassis.**
- 4. Slide the control panel out of the hooks holding it to the chassis.**

Note the routing of the control panel cable as you remove it from the chassis.



# Drives

Figure 5-6 shows an example of drive hardware that can be installed in the computer. Refer to this figure when you perform any of the procedures in the following subsections.

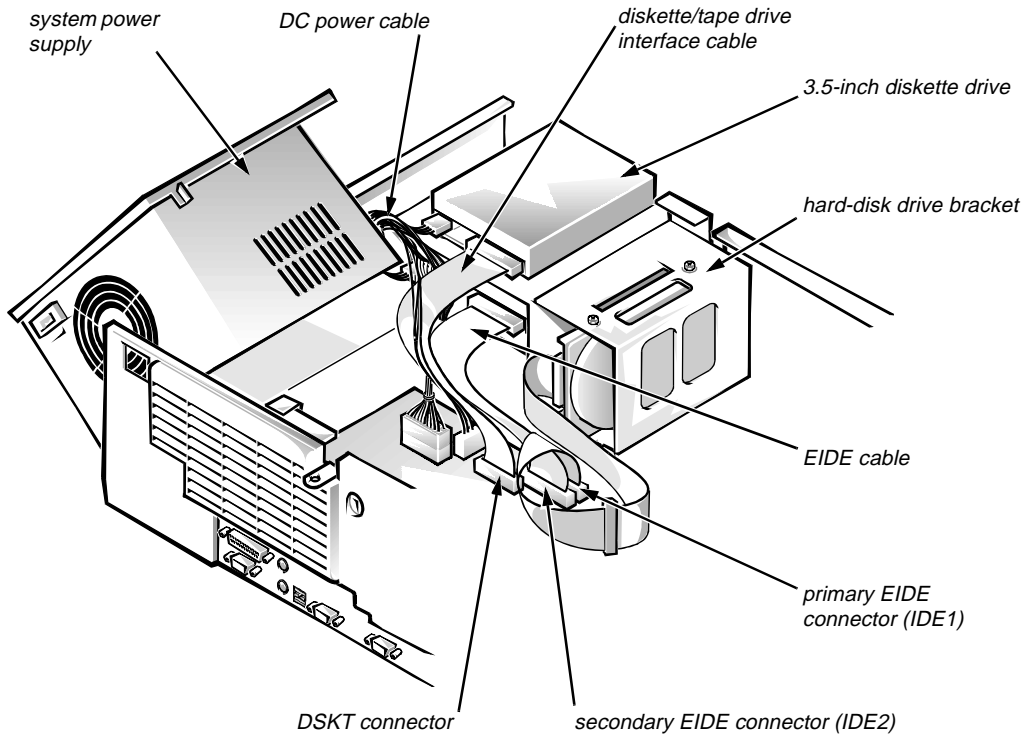


**Figure 5-7. Drive Hardware**

## ***Externally Accessible Drive Assemblies***

The following subsections contain removal/replacement procedures for drives that are installed in the externally accessible drive bays.

### ***3.5-Inch Diskette Drive Assembly***

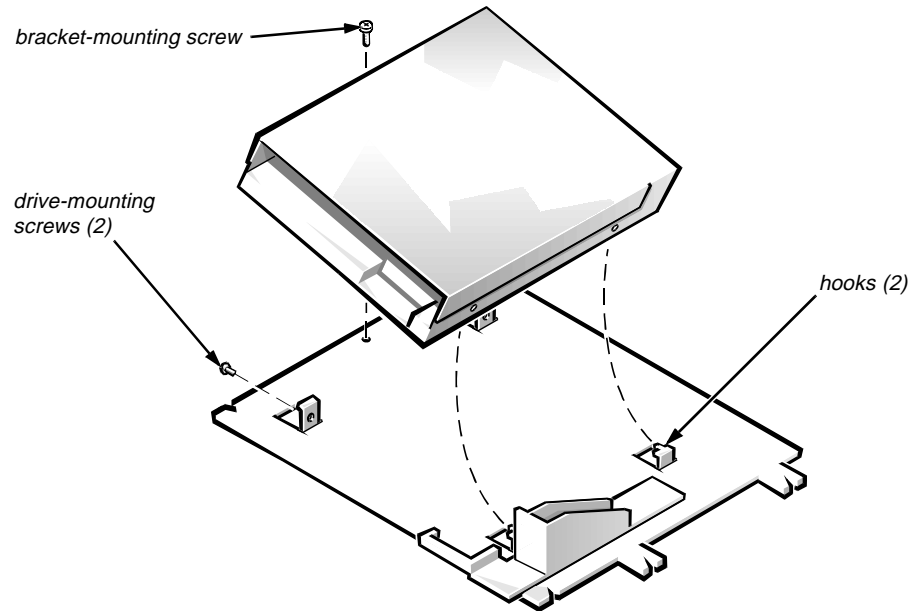


***Figure 5-8. 3.5-Inch Diskette Drive Removal***

To remove the 3.5-inch diskette drive, follow these steps:

- 1. Disconnect the DC power cable and the interface cable from the back of the 3.5-inch diskette drive.**
- 2. Remove the bracket-mounting screw.**
- 3. Rotate the left side of the 3.5-inch diskette drive assembly up, and lift the assembly out of the chassis.**
- 4. Remove the two drive-mounting screws from the left side of the drive, and remove the drive from the bracket.**

When you replace the 3.5-inch diskette drive, be sure that the two hooks on the right side of the bracket engage the mounting holes in the side of the 3.5-inch diskette drive.


## 5.25-Inch Drive Assembly

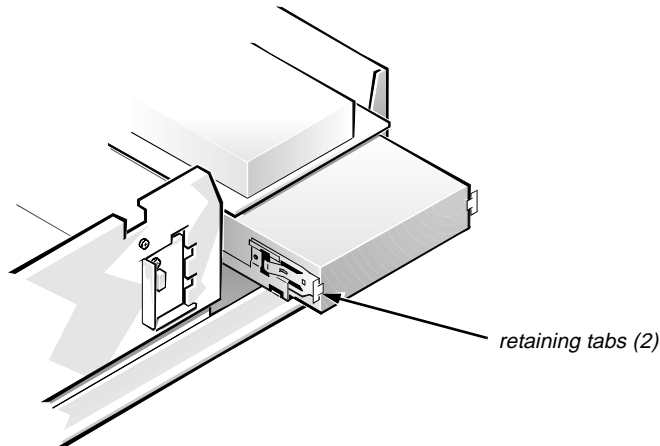

**Figure 5-9. 5.25-Inch Drive Assembly Removal**

To remove a 5.25-inch drive assembly from the middle or lower drive bay, follow these steps:


1. **Disconnect the DC power cable and the interface cable from the back of the drive.**
2. **Press in on the two retaining tabs (one on each side of the drive), and slide the drive assembly forward to remove it.**
3. **Remove the four screws attaching the 5.25-inch drive to the mounting plate, and lift the drive out of the mounting plate (see Figure 5-10).**

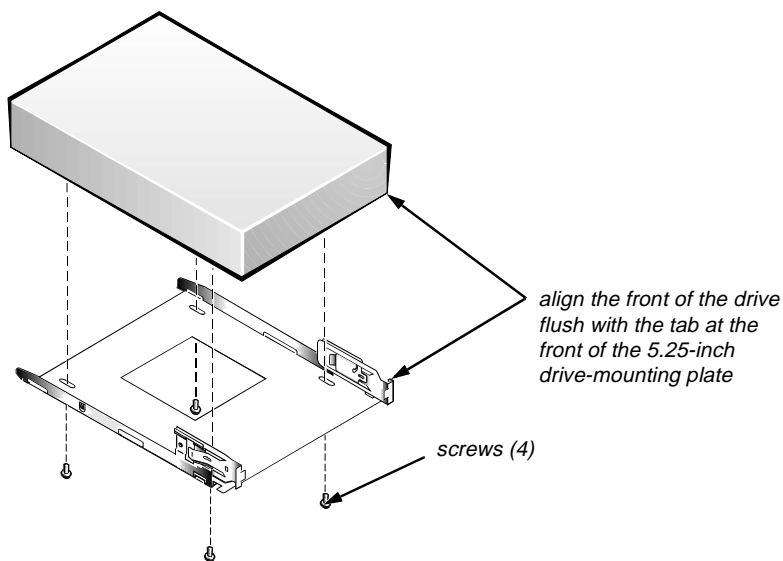

**Figure 5-10. 5.25-Inch Drive Removal**

When you replace the 5.25-inch drive, align the front of the drive flush with the tab at the front of the mounting plate. Insert the four screws, and tighten them in the order stamped on the bottom of the 5.25-inch drive-mounting plate.

## Hard-Disk Drive Bracket

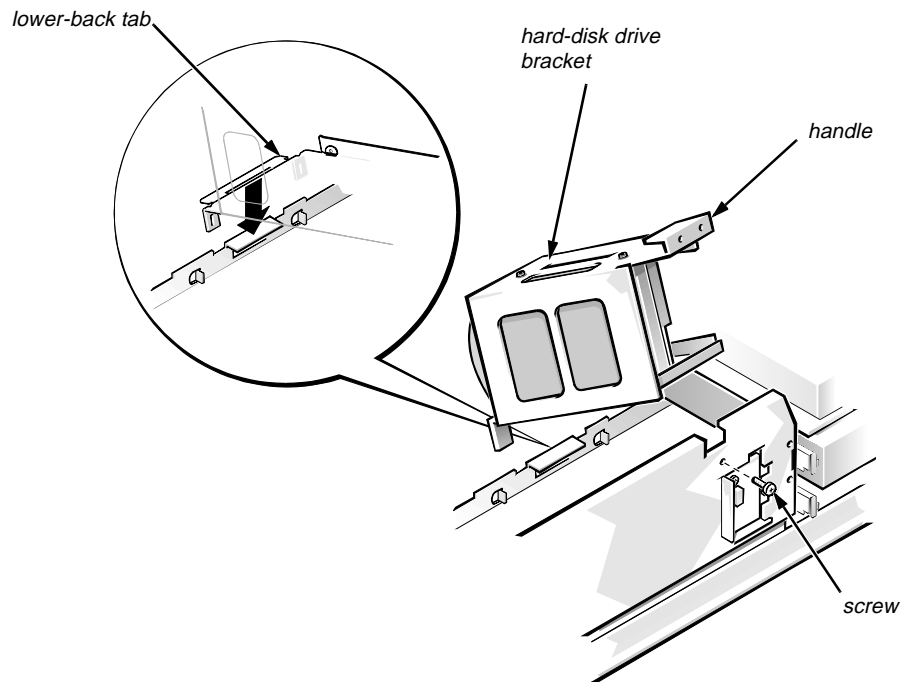


**Figure 5-11. Hard-Disk Drive Bracket Removal**

To remove the hard-disk drive bracket, follow these steps:

- 1. Disconnect the DC power cable and the interface cable from the back of each hard-disk drive installed in the hard-disk drive bracket.**
- 2. Remove the screw that secures the hard-disk drive bracket to the front of the chassis.**
- 3. Grasp the handle on the front of the bracket, and rotate the front of the bracket up until the hooks are free from the chassis.**
- 4. Lift the hard-disk drive bracket out of the computer.**

When you reinstall the hard-disk drive bracket, place the lower-back tab of the hard-disk drive bracket into position (be sure that the opening in the lower-back tab is over the alignment tab on the chassis); then rotate the front of the bracket down into position.

## Hard-Disk Drive

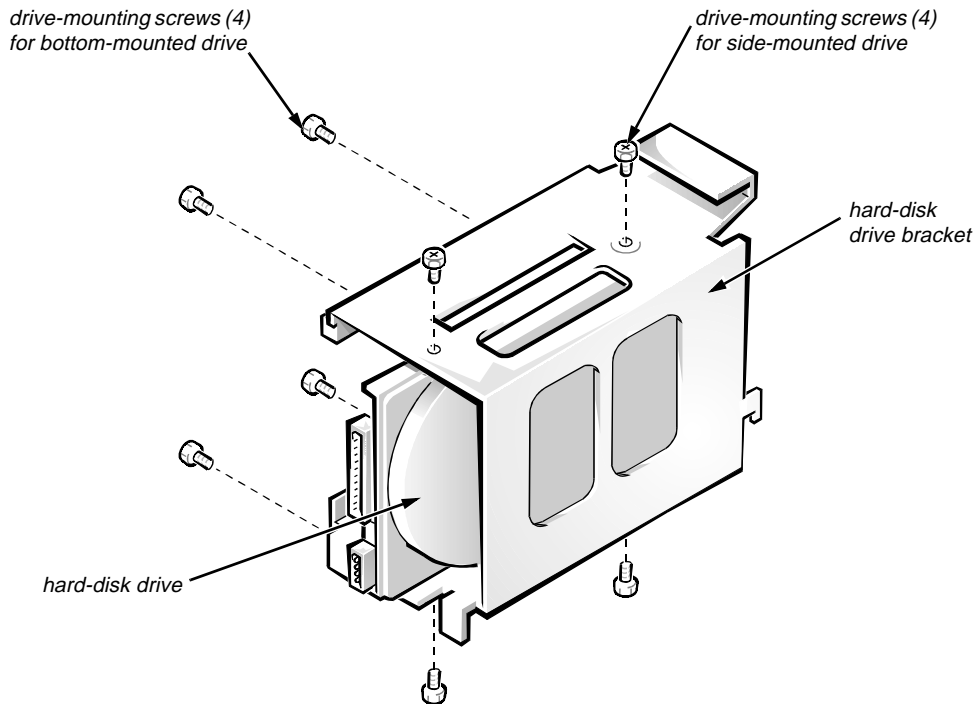

**Figure 5-12. Hard-Disk Drive Removal**


To remove a hard-disk drive, follow these steps:

- 1. Remove the hard-disk drive bracket.**
- 2. Remove the four screws that attach the hard-disk drive to the hard-disk drive bracket.**

One hard-disk drive attaches to the hard-disk drive bracket at the sides of the drive. The other hard-disk drive attaches to the hard-disk drive bracket at the bottom of the hard-disk drive.

- 3. Slide the drive out of the hard-disk drive bracket.**

# System Power Supply

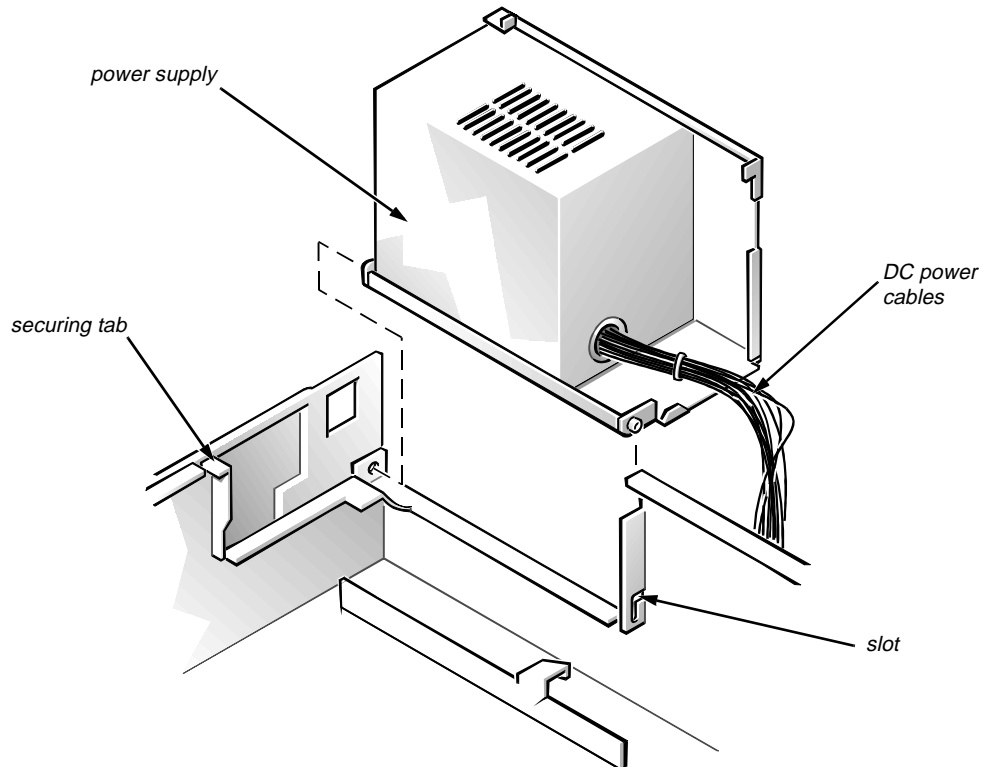

**Figure 5-13. System Power-Supply Removal**

To remove the system power supply, follow these steps:


- 1. Disconnect the AC power cable from the back of the power supply.**
- 2. Free the system power supply from the securing tab labeled “RELEASE —>,” and rotate it to the right until it stops.**  
Press the securing tab to the left to release the power supply.
- 3. Disconnect the DC power cables from the system board and the drives.**
- 4. Lift the front end of the system power supply up, and move it to the right to disengage the power supply from the slot in the chassis.**
- 5. Lift the system power supply from the computer.**

## Expansion Cards

The computer has a removable expansion-card cage. The expansion-card cage contains the riser board and any installed expansion cards. Dell recommends that you remove the expansion-card cage first before removing or installing expansion cards.

If you are not removing any of the expansion cards, leave the external cables attached to the expansion cards.

### Expansion-Card Cage

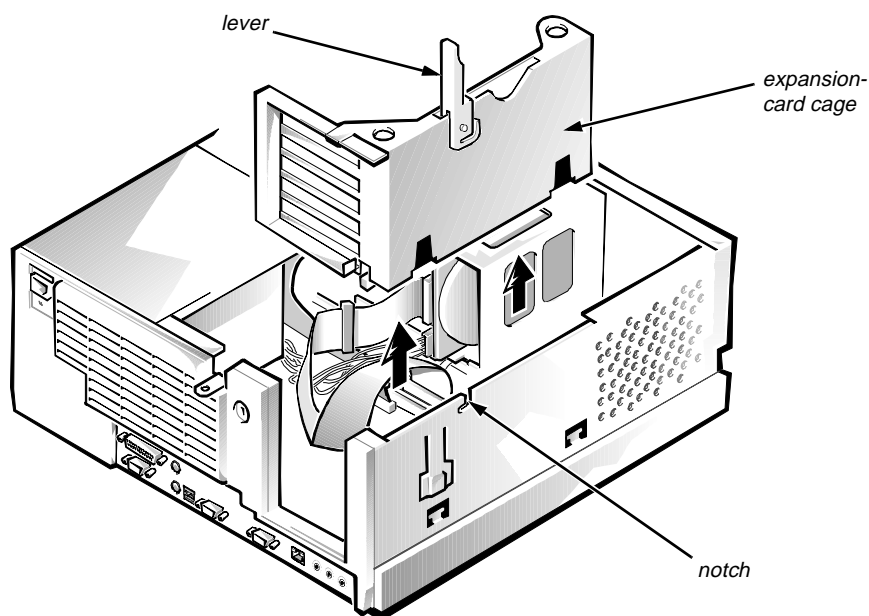


**Figure 5-14. Expansion-Card Cage Removal**

To remove an expansion-card cage, follow these steps:

- 1. Rotate the lever toward the back of the computer until it stops in the upright position.**
- 2. Lift the expansion-card cage up and away from the computer.**

To replace an expansion-card cage, keep the cage flush against the chassis to ensure that the lever engages the notch when the lever is depressed.

## Expansion Card

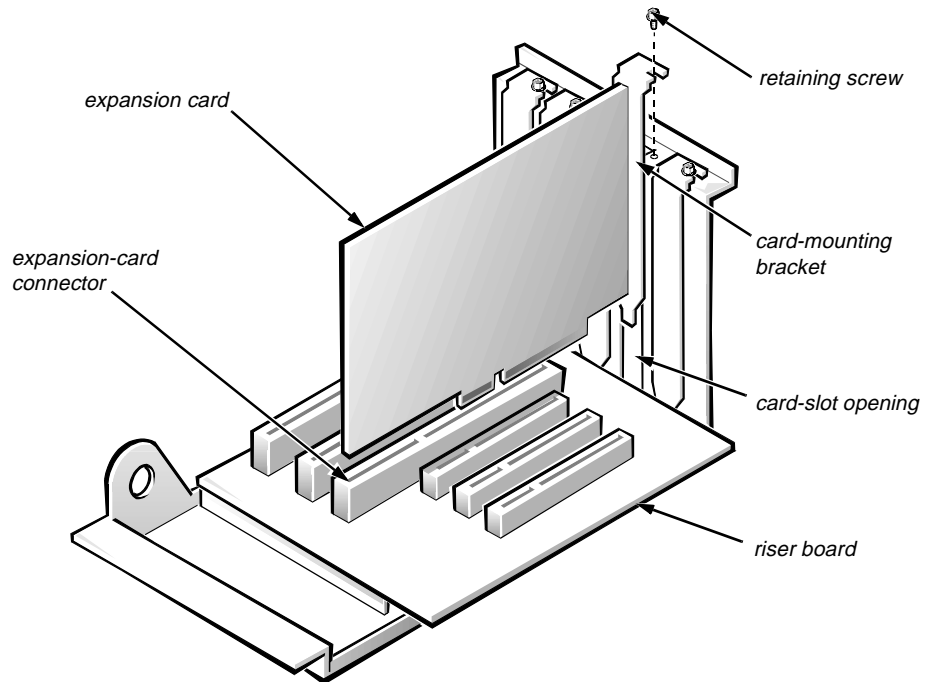


**Figure 5-15. Expansion-Card Removal**

To remove an expansion card, follow these steps:

- 1. Disconnect any cables from the expansion card being removed.**
- 2. Remove the expansion-card cage.**
- 3. Remove the retaining screw from the card-mounting bracket.**
- 4. Grasp the expansion card by its corners, and carefully remove it from the expansion-card connector.**



## Riser Board

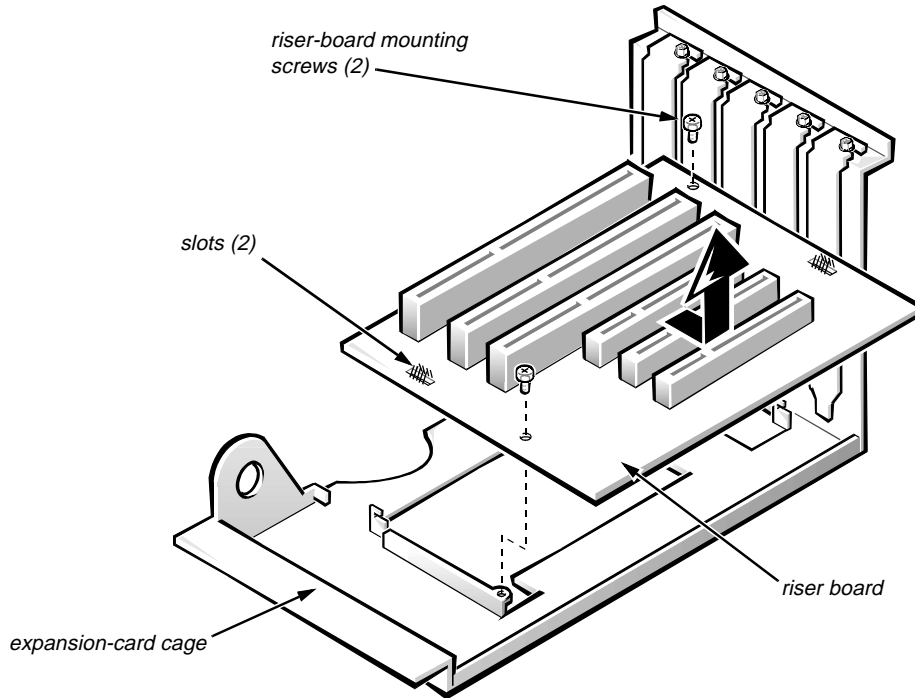


**Figure 5-16. Riser Board Removal**

To remove the riser board, follow these steps:

- 1. Remove the expansion-card cage and all expansion cards.**
- 2. On a flat work surface, turn the expansion-card cage over, with the riser board facing up.**
- 3. Remove the riser-board mounting screws.**
- 4. Slide the riser board down until it stops; then lift the riser board away from the expansion-card cage.**

# System Board

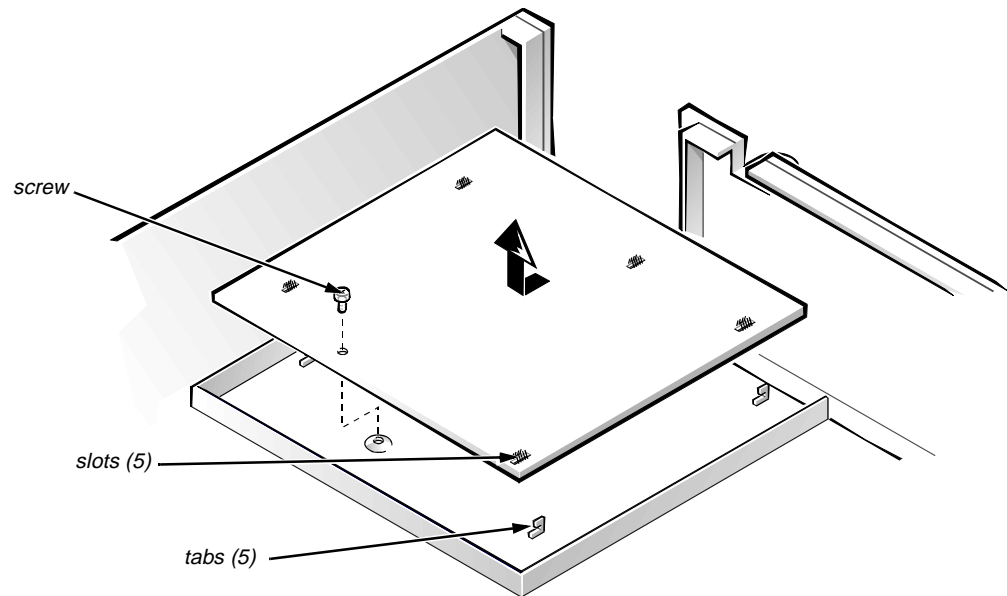

**Figure 5-17. System Board Removal**

To remove the system board, follow these steps:


- 1. Disconnect all cables from their connectors at the back of the computer.**
- 2. Remove the expansion-card cage.**
- 3. Disconnect all cables from the system board.**
- 4. Remove the screw that secures the system board to the bottom of the chassis.**
- 5. Slide the system board toward the front of the chassis until it stops.**
- 6. Carefully lift the system board out of the chassis (be sure to lift evenly and not twist the system board).**

*NOTE: If you are replacing the system board, remove all DIMMs, the video-memory upgrade module (if present), the single-edge contact (SEC) cartridge/heat sink assembly, and the guide bracket assembly from the old system board and install them on the replacement board. Also, set the jumpers on the new system board so they are identical to those on the old board unless a microprocessor upgrade is being installed.*

When you reinstall the system board (before you slide the system board back to lock it in position), push down near each slot to engage the grounding clip onto its corresponding tab. Push evenly on both sides of the system board as you slide it into position (do not twist the system board).

# System Board Components

The subsections that follow Figure 5-18 contain procedures for removing/replacing system board components.

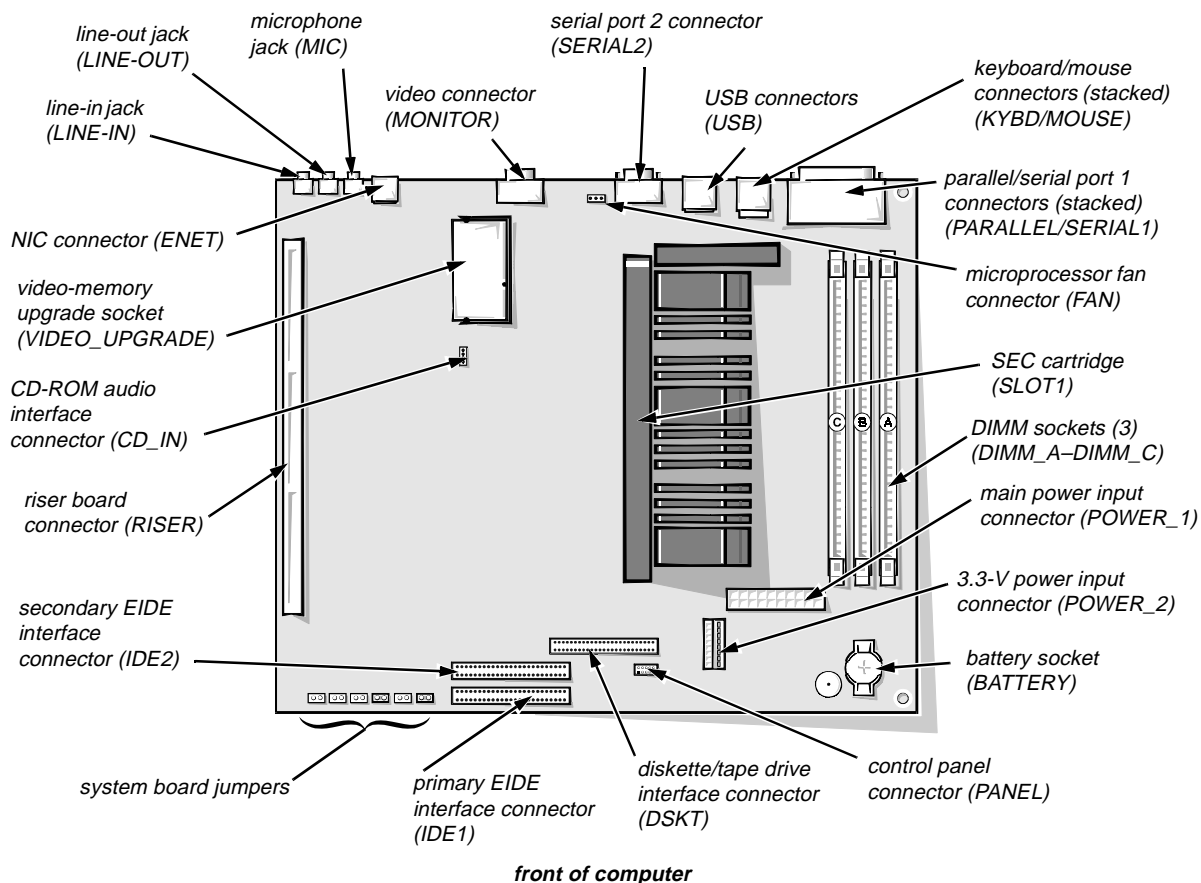


**Figure 5-18. System Board Components**

## ***DIMMs***


To remove a DIMM from one of the three DIMM sockets, follow these steps:

- 1. Remove the system power supply.**
- 2. Locate the three DIMM sockets (see Figure 5-18).**
- 3. To remove a DIMM, push outward on the DIMM socket's securing clips until the DIMM is released from its socket.**
- 4. Lift the DIMM away from the socket.**

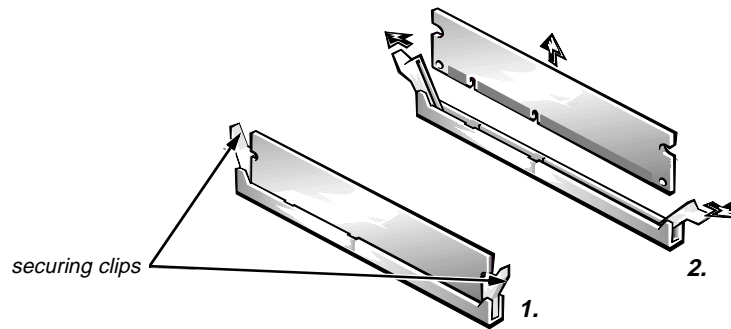

**Figure 5-19. DIMM Removal**

- 5. Reinstall the replacement DIMM by pressing the DIMM fully into the socket while closing the securing clips to lock the DIMM into the socket.**

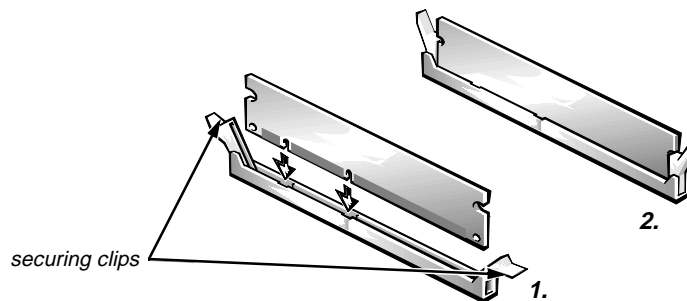

**Figure 5-20. DIMM Installation**

- 6. Replace all assemblies and cables previously removed.**

## ***Video Memory***


You can upgrade video memory from 2 to 4 MB by installing a video-memory upgrade module into the video-memory upgrade socket on the system board. Adding additional video memory increases the system's video performance and provides additional modes for high-resolution/expanded color applications.

To install the video memory upgrade, follow these steps:

**1. Remove the expansion-card cage.**

**CAUTION:** To avoid possible damage to the video-memory upgrade socket and/or video-memory upgrade module, the module is keyed and must be correctly positioned before inserting it into the socket.

**2. Orient the video-memory upgrade module as shown in Figure 5-21. Then carefully align the module's edge connector pins with the socket ensuring that the slot in the module mates with the socket key.**

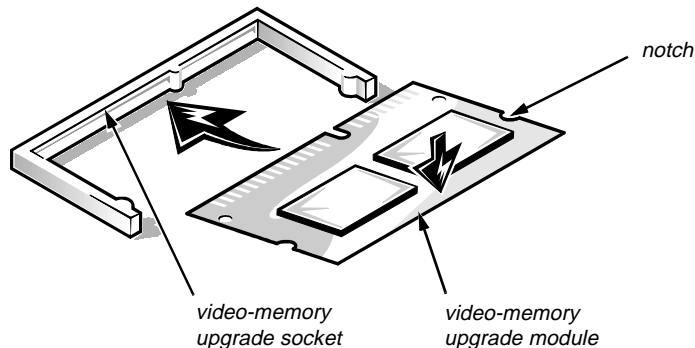

**Figure 5-21. Installing a Video-Memory Upgrade Module**

**3. Press the video-memory upgrade module firmly into the socket, and pivot the module downward until the module clicks into place.**

*NOTE: If you do not hear a sharp click when installing the video-memory upgrade module, remove the module and repeat steps 2 and 3.*

**4. Replace the expansion-card cage.**

**5. Replace the computer cover and reconnect the AC power cable to the AC outlet. Press the power switch on the computer to reboot the system.**

*NOTE: As the system boots, it automatically detects the presence of the new video-memory upgrade module and automatically changes the system configuration information in the System Setup program.*

**6. Enter the System Setup program and confirm that 4 MB is shown in the Video Memory category. If the total memory is listed incorrectly, repeat steps 1 through 6 to reseat the video-memory upgrade module and verify that the computer acknowledges the module.**


**7. Run the system diagnostics (Video Test Group) to test the new video-memory upgrade module.**

## Microprocessor

To take advantage of future options in processor speed and functionality, you can replace the microprocessor on your system board with any Dell-supported microprocessor upgrade. The microprocessor upgrade kit is shipped with an SEC cartridge/heat sink assembly, which includes the microprocessor, microprocessor heat sink, and L2 cache memory module.

You may also have to reseal or replace an SEC cartridge/heat sink assembly during normal maintenance.

### SEC Cartridge/Heat Sink Assembly

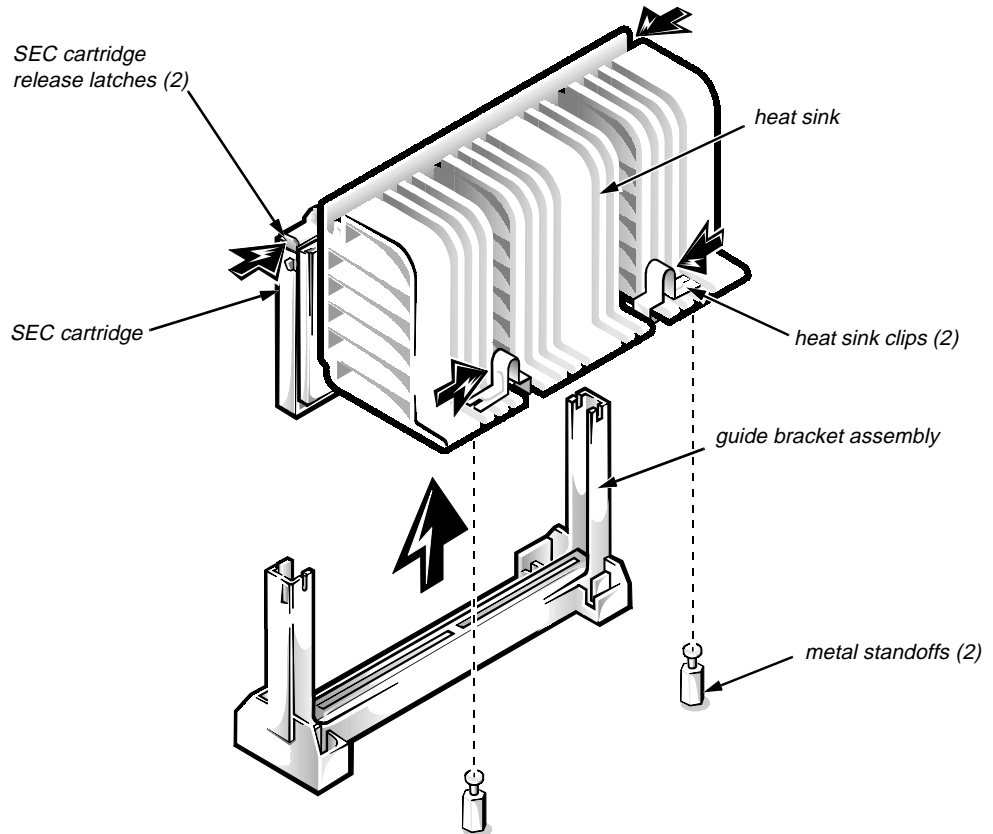

**Figure 5-22. SEC Cartridge/Heat Sink Removal**

To remove the SEC cartridge/heat sink assembly, follow these steps:


**1. Remove the system power supply.**

**WARNING:** The SEC cartridge/heat sink assembly can get extremely hot during system operations. Be sure that the assembly has had sufficient time to cool before touching it.

- 2. Locate the SEC cartridge/heat sink assembly.**
- 3. Disconnect the microprocessor fan connector from the 3-pin connector on the system board (labeled “FAN”), located between the serial port 2 connector and the video connector (see Figure 5-18).**
- 4. Release the two securing clips near the base of the heat sink from the metal standoffs as shown in Figure 5-22.**
- 5. Locate and press inward on the SEC cartridge release latches (located directly on top of the SEC cartridge adjacent to the heat sink assembly) until the latches click.**
- 6. Lift the SEC cartridge/heat sink assembly out of its guide bracket assembly/connector on the system board.**

*NOTE: When installing the SEC cartridge/heat sink assembly, carefully orient the assembly and press firmly with up to 25 pounds of force to mate the SEC cartridge with its connector. Then slide the heat sink release latches outward to lock the assembly onto the metal standoffs.*

## **System Battery**

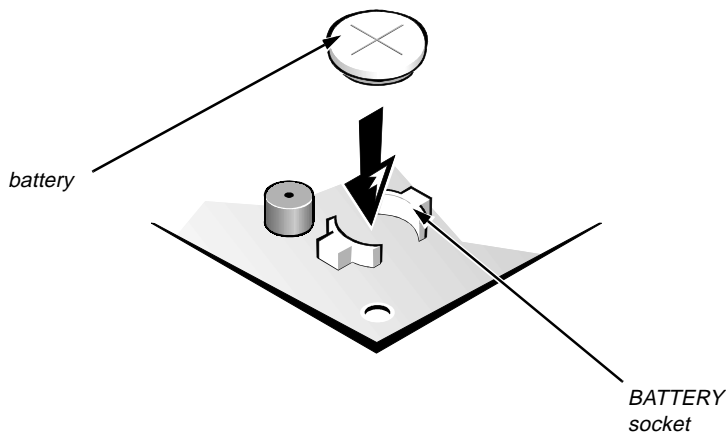

**Figure 5-23. System Battery Installation**

To remove the system battery, follow these steps:

1. **If possible boot the system and enter the System Setup program. Then record important system configuration information (see Appendix A, “System Setup Program,” for details).**
2. **Turn off power to all peripherals and disconnect the AC power cable from its AC outlet.**
3. **Remove the computer cover.**
4. **Remove the expansion-card cage, and locate the battery in the front-right corner of the system board adjacent to the DIMM connectors (see Figure 5-18).**

**CAUTION:** If you pry out the battery with a blunt object, be careful not to touch the system board with the object. Ensure that the object is inserted between the battery and the socket before attempting to pry out the battery. Otherwise, you may damage the system board by prying off the socket or by breaking traces on the system board.

5. **Remove the battery by carefully prying it out of its socket with your fingers or with a blunt, nonconducting object, such as a plastic screwdriver.**

**WARNING:** There is a danger of the new battery exploding if it is incorrectly installed. When you replace the system battery, orient the new battery with the “+” facing up (see Figure 5-23). Replace the battery only with the same or equivalent type recommended by the manufacturer. Discard used batteries according to the manufacturer’s instructions.

6. **Insert the battery into the socket (with the positive side labeled “+” facing upwards) into its socket, and snap it into place.**
7. **Replace the expansion-card cage; replace the computer cover, reconnect all cabling, and reboot the system.**
8. **Enter the System Setup program, and configure the system using the information from the printouts you made earlier.**
9. **Turn off the computer; wait 10 or more minutes and reenter the System Setup program to ensure that the date and time are still correct indicating that the system battery is functioning correctly.**



## Chapter 6

# Removing and Replacing Parts on the Mini Tower Chassis

**T**his chapter provides procedures for removing the components, assemblies, and subassemblies in the Dell OptiPlex GXa mini tower computer. If you are servicing a Dell OptiPlex GXa low-profile or midsize computer, use Chapter 4, “Removing and Replacing Parts on the Low-Profile Chassis,” or Chapter 5, “Removing and Replacing Parts on the Midsize Chassis.”

Unless otherwise noted, each procedure assumes the following:

- You have performed the steps in “Precautionary Measures” found later in this chapter.
- You have removed the computer cover.
- You can replace or reinstall a part by performing the removal procedure in reverse order unless additional information is provided.

## ***Recommended Tools***

Most of the procedures in this chapter require the use of one or more of the following tools:

- Small flat-blade screwdriver
- Wide flat-blade screwdriver
- #1 and #2 Phillips screwdrivers
- 1/4-inch nutdriver
- Tweezers or long-nose pliers

## ***Precautionary Measures***


Before you perform any of the procedures in this chapter, take a few moments to read the following warning for your personal safety and to prevent damage to the system from ESD.

**WARNING FOR YOUR PERSONAL SAFETY AND PROTECTION OF THE EQUIPMENT:** Before you start to work on the system, perform the following steps in the sequence listed.

- 1. Turn off the computer and any attached peripherals.**
- 2. Disconnect the computer and any attached peripherals from their power sources to reduce the potential for personal injury. Also, disconnect any telephone or telecommunication lines from the computer.**
- 3. Wait 5 seconds after powering down the computer before disconnecting a peripheral from the computer or removing a component from the computer's system board to avoid possible damage to the system board.**
- 4. Wear a wrist grounding strap, and clip it to an unpainted metal surface, such as the padlock loop on the back of the chassis. If a wrist grounding strap is not available, periodically touch an unpainted metal surface on the back of the computer to discharge any static charge from your body. Avoid touching components and contacts on a card, and avoid touching pins on a chip to prevent static electricity damage.**


# Inside the Computer

Figure 6-1 shows an internal view of the interior of the mini tower computer and identifies major components for orientation. Refer to this illustration as needed when performing the component removal/replacement procedures in this chapter.

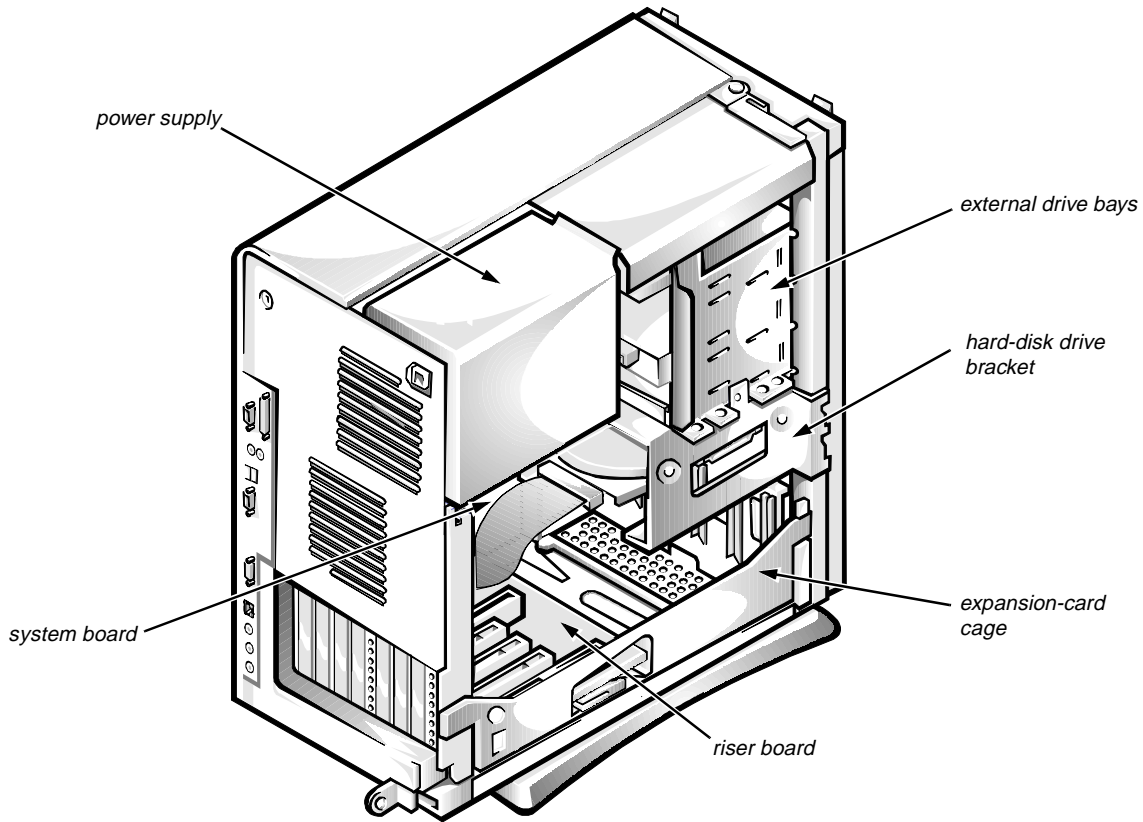

**Figure 6-1. Internal View of the Mini Tower Computer**

## Computer Cover

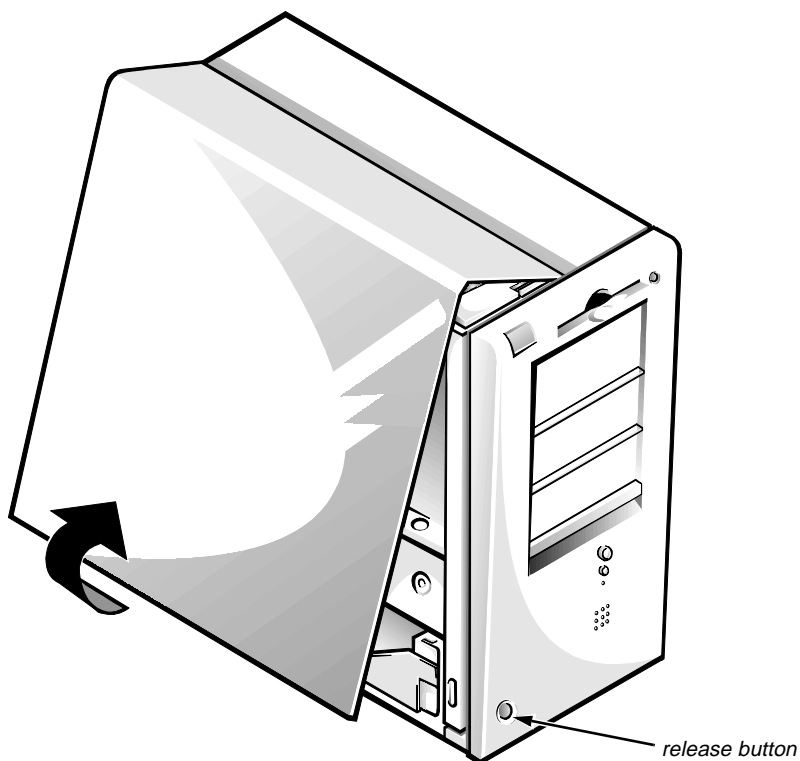


**Figure 6-2. Computer Cover Removal**

To remove the computer cover, follow these steps:

- 1. Turn off power to all peripherals and disconnect the AC power cable from its AC outlet.**
- 2. Remove the padlock if one is installed.**
- 3. Facing the left side of the computer, press the release button at the bottom-left corner of the front bezel.**
- 4. Lift the bottom of the cover, allowing it to pivot up toward you.**
- 5. Disengage the tabs that secure the cover to the top of the chassis, and lift the cover away.**

Before you reinstall the cover, fold all cables out of the way so that they do not interfere with the cover or with the proper airflow inside the computer.

## Front Bezel

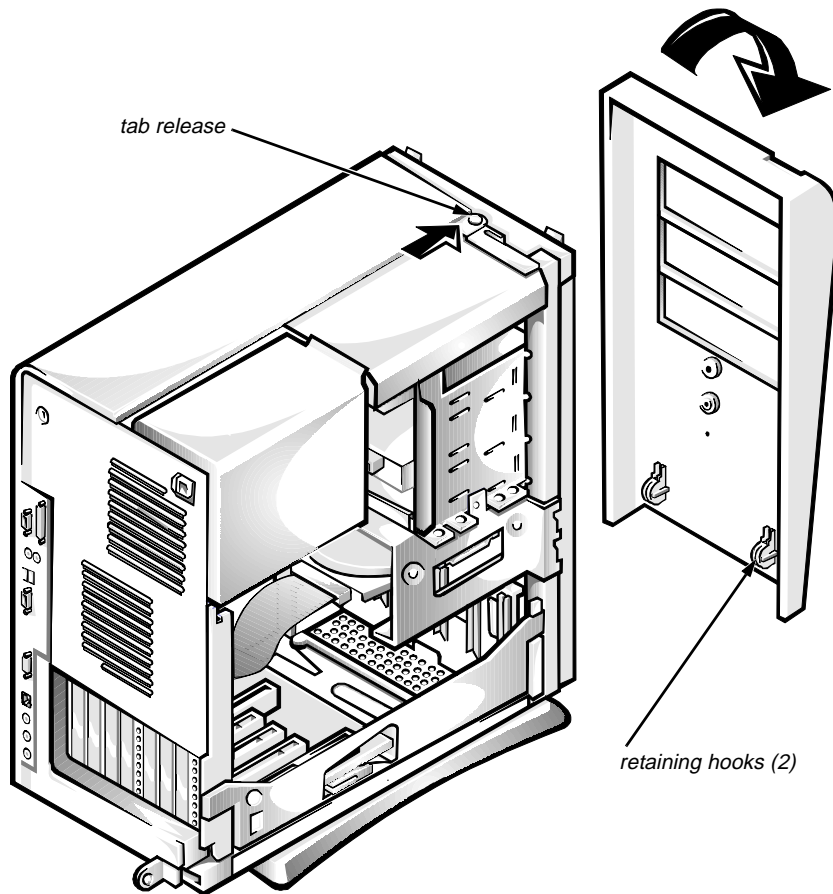


**Figure 6-3. Front-Bezel Removal**

To remove the front bezel, follow these steps:

- 1. Press the tab release marked with the icon.**
- 2. Tilt the bezel away from the chassis.**
- 3. Disengage the two retaining hooks at the bottom of the bezel, and pull the bezel away from the chassis.**

# Eject, Power, and Reset Buttons

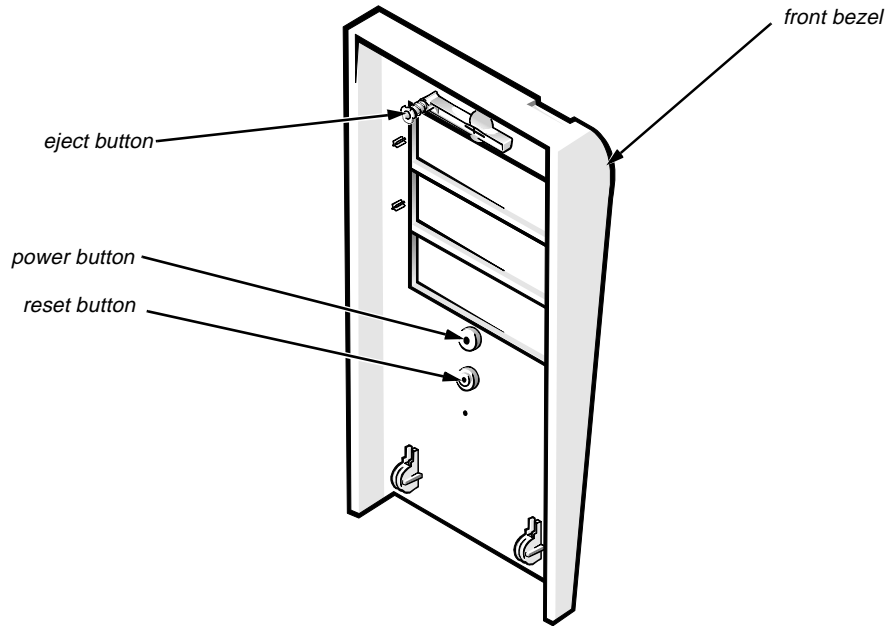


**Figure 6-4. Eject, Power, and Reset Button Removal**

To remove the eject, power, and reset buttons, follow these steps:

- 1. Lay the front bezel on a flat work surface, with the back of the bezel facing up.**
- 2. To remove the 3.5-inch diskette-drive eject button, pull gently on the plastic part of the button until it comes free.**
- 3. To remove the power button or the reset button, use a small screwdriver and push in on the two or three plastic clips that hold the button to the bezel.**

When these clips are released, the button comes free from the bezel.

# Front-Panel Inserts

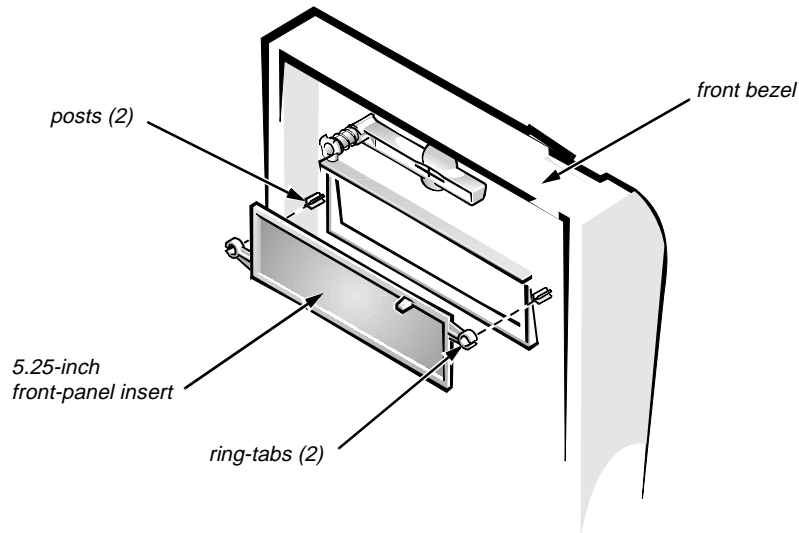


**Figure 6-5. 5.25-Inch Front-Panel Insert Removal**

To remove a 5.25-inch front-panel insert, follow these steps:

- 1. Hold the bezel with the front facing you.**
- 2. From the front of the bezel, use your thumbs to press inward on the insert until it slides off the two posts.**

To replace a 5.25-inch front-panel insert, position the two ring-tabs over the posts on the inside of the bay opening, then press the ring-tabs over the posts.

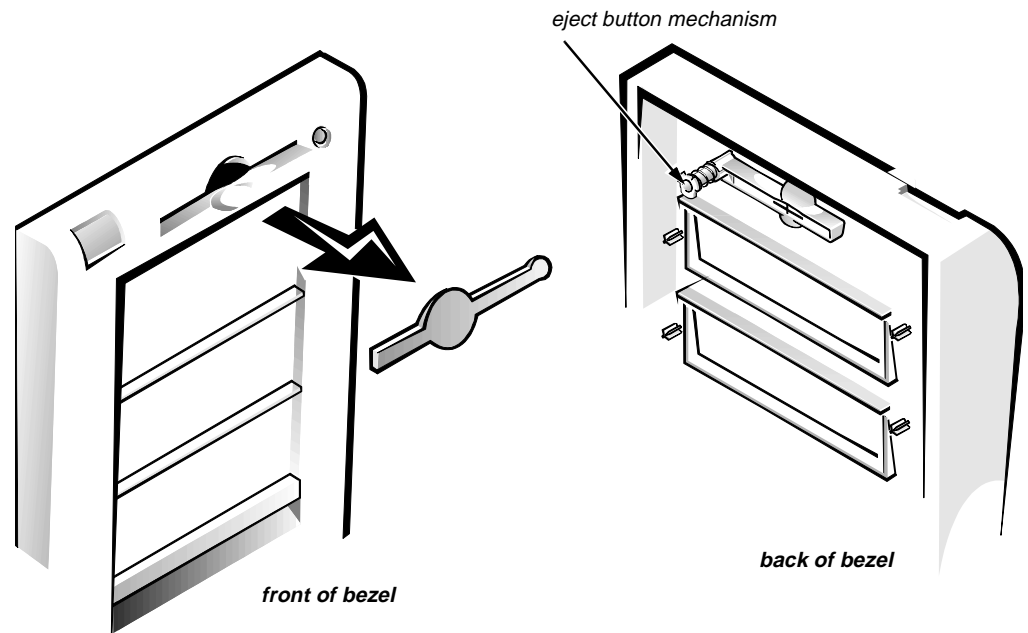

**Figure 6-6. 3.5-Inch Front-Panel Insert Removal**


To remove a 3.5-inch front-panel insert, follow these steps:

- 1. Hold the bezel with the front facing you.**
- 2. Inside the bezel, press the eject button mechanism toward the front panel to snap the plastic insert out of its opening.**

To replace the front-panel insert for the 3.5-inch bay, work from outside the bezel. Place the insert in position, and press it into the opening.



# Control Panel

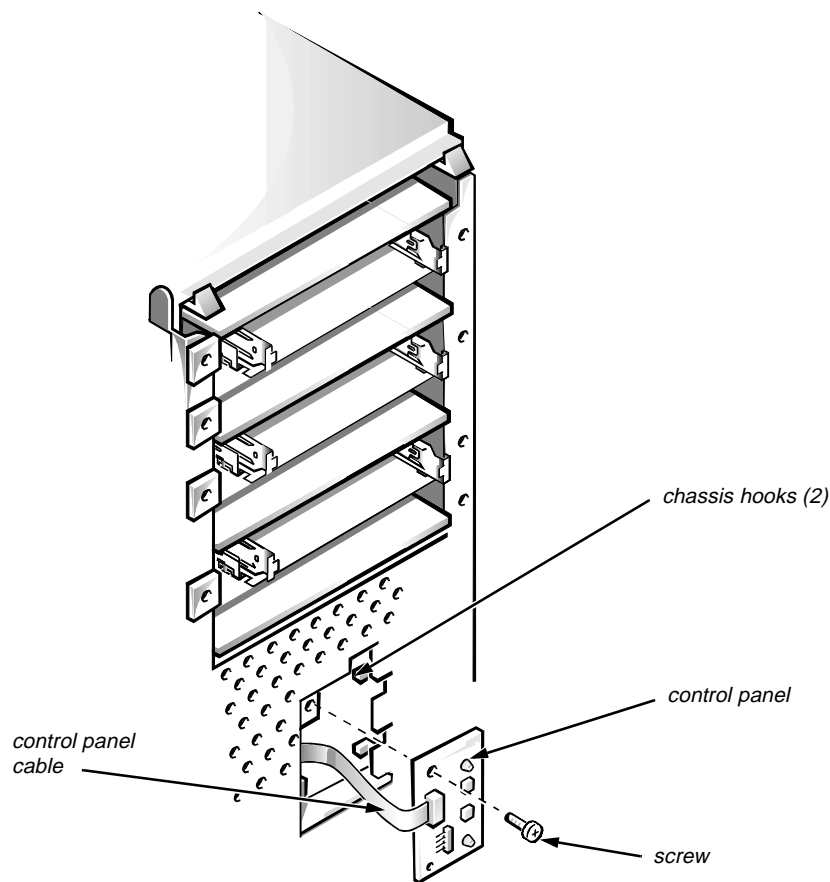

**Figure 6-7. Control Panel Removal**


To remove the control panel, follow these steps:

- 1. Remove the hard-disk drive bracket.**
- 2. Disconnect the control panel cable from the PANEL connector on the system board (see Figure 6-20).**
- 3. Remove the mounting screw holding the control panel to the chassis.**
- 4. Slide the control panel out of the hooks holding it to the chassis.**

Note the routing of the control panel cable as you remove it from the chassis.

# Drives

Figure 6-8 shows an example of drive hardware that can be installed in the computer. Refer to this figure when you perform any of the procedures in the following subsections.

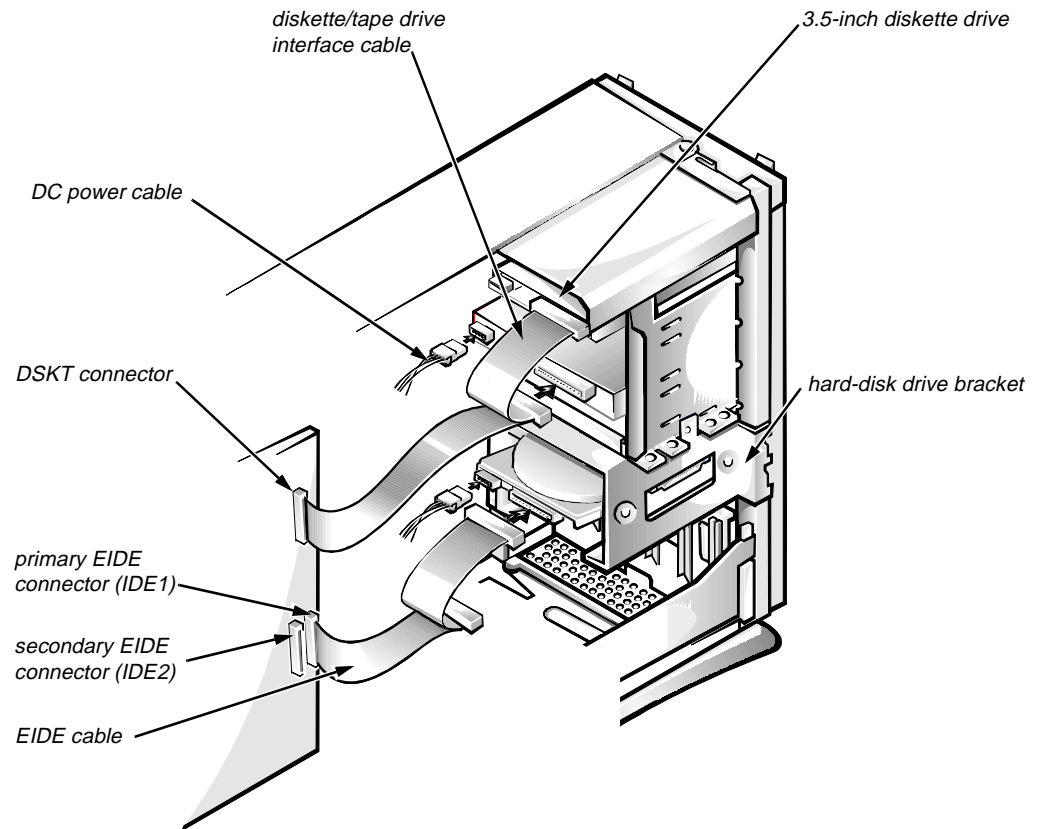


**Figure 6-8. Drive Hardware**

## **Externally Accessible Drive Assemblies**

The following subsections contain removal/replacement procedures for drives that are installed in the externally accessible drive bays.


## 3.5-Inch Diskette Drive Assembly

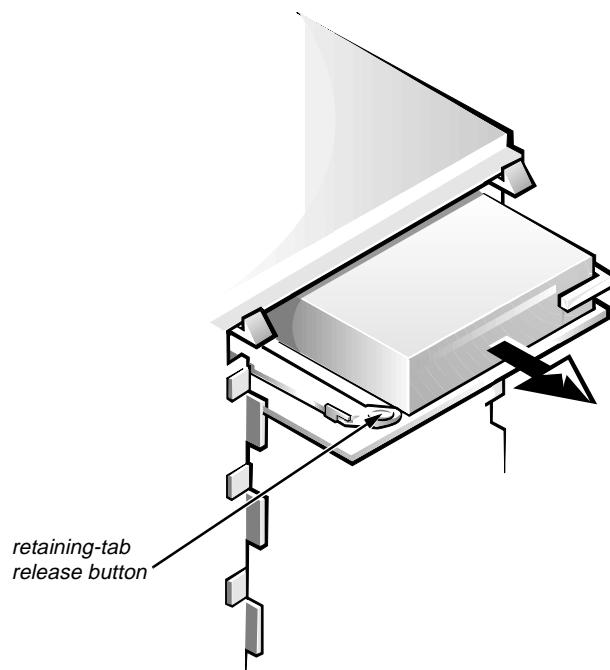

**Figure 6-9. 3.5-Inch Diskette Drive Assembly Removal**

To remove the 3.5-inch diskette drive assembly, follow these steps:


- 1. Disconnect the DC power cable and the interface cable from the back of the 3.5-inch diskette drive.**
- 2. Press the retaining-tab release button, and pull the drive assembly forward to remove it.**
- 3. Remove the drive-mounting screw from the left side of the drive, and remove the drive from the bracket (see Figure 6-10).**

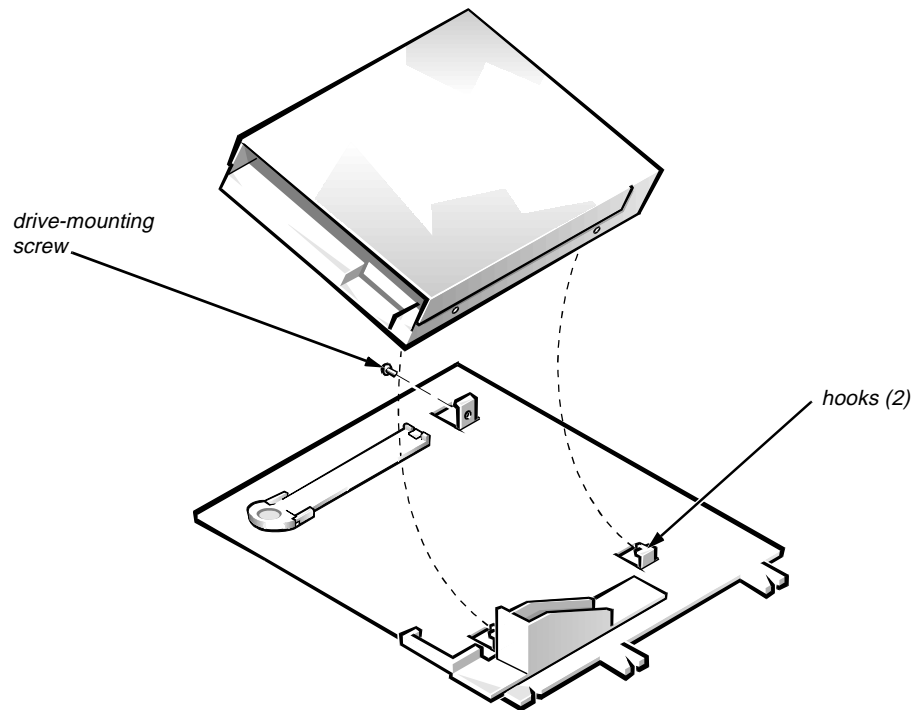

**Figure 6-10. 3.5-Inch Diskette Drive Bracket**

When you replace the 3.5-inch diskette drive, be sure that the two hooks on the right side of the bracket engage the mounting holes in the side of the 3.5-inch diskette drive.


### **5.25-Inch Drive Assembly**

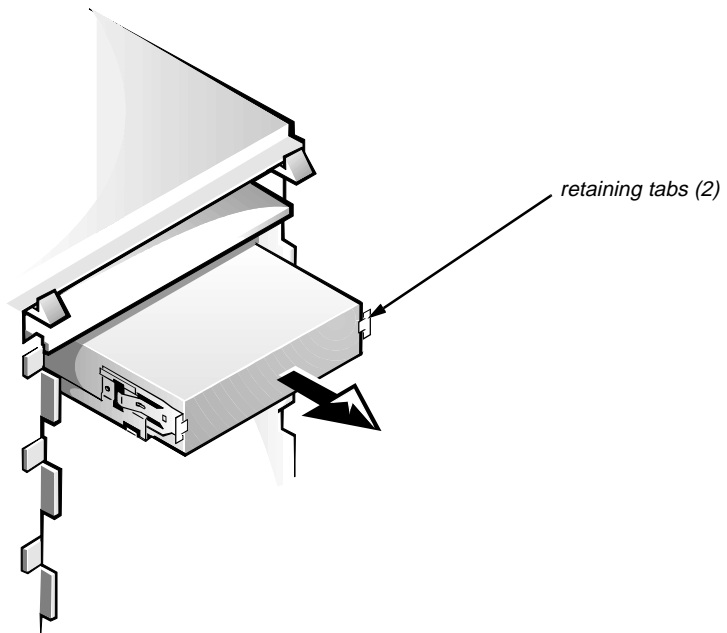

**Figure 6-11. 5.25-Inch Drive Assembly Removal**

To remove a 5.25-inch drive assembly from the middle or lower drive bay, follow these steps:


1. **Disconnect the DC power cable and the interface cable from the back of the drive.**
2. **Press in on the two retaining tabs (one on each side of the drive), and slide the drive assembly forward to remove it.**
3. **Remove the four screws attaching the 5.25-inch drive to the mounting plate, and lift the drive out of the mounting plate (see Figure 6-12).**

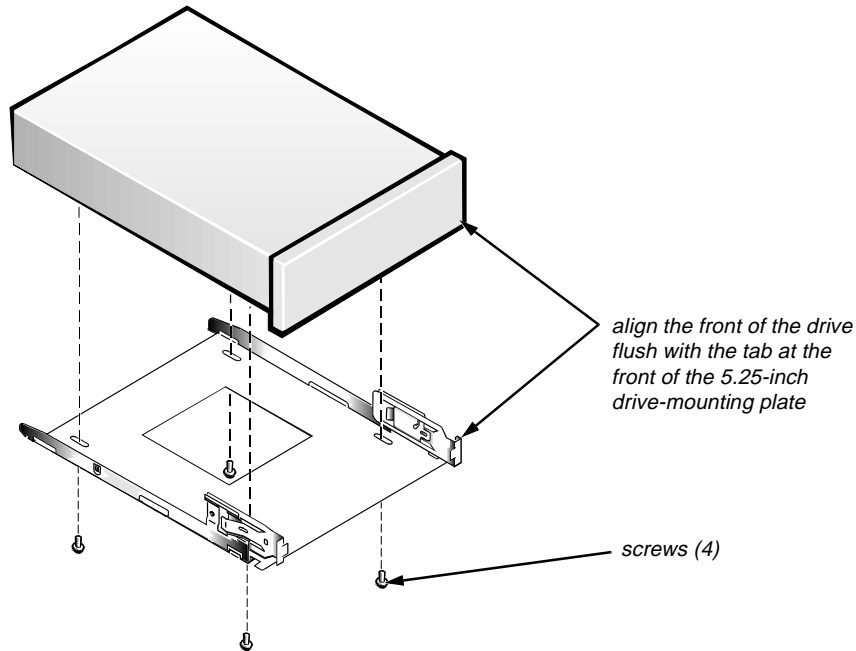

**Figure 6-12. 5.25-Inch Drive Removal**

When you replace the 5.25-inch drive, align the front of the drive flush with the tab at the front of the mounting plate. Insert the four screws, and tighten them in the order stamped on the bottom of the 5.25-inch drive-mounting plate.

## Hard-Disk Drive Bracket

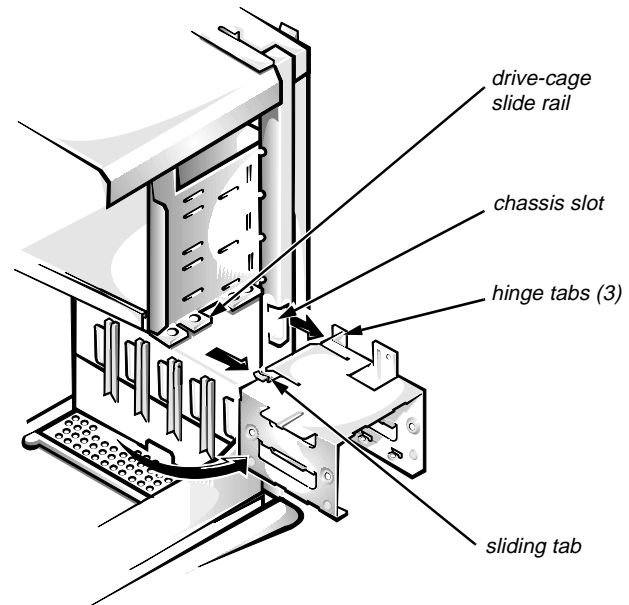


**Figure 6-13. Hard-Disk Drive Bracket Removal**

To remove the hard-disk drive bracket, follow these steps:

- 1. Disconnect the DC power cable and the interface cable from the back of each hard-disk drive installed in the hard-disk drive bracket.**
- 2. Remove the screw that secures the hard-disk drive bracket to the drive cage in the chassis.**
- 3. Grasp the bracket, and rotate it outward from the chassis until the sliding tab clears the slide rail on the drive cage.**
- 4. Lift the hard-disk drive bracket up slightly to free the hinge tabs and remove it from the computer.**

When you reinstall the hard-disk drive bracket, insert the bracket's hinge tabs into the chassis slots so that the tabs hook over the slots. Then rotate the bracket toward the drive cage, and fit the bracket's sliding tab on the drive-cage slide rail.

## Hard-Disk Drive

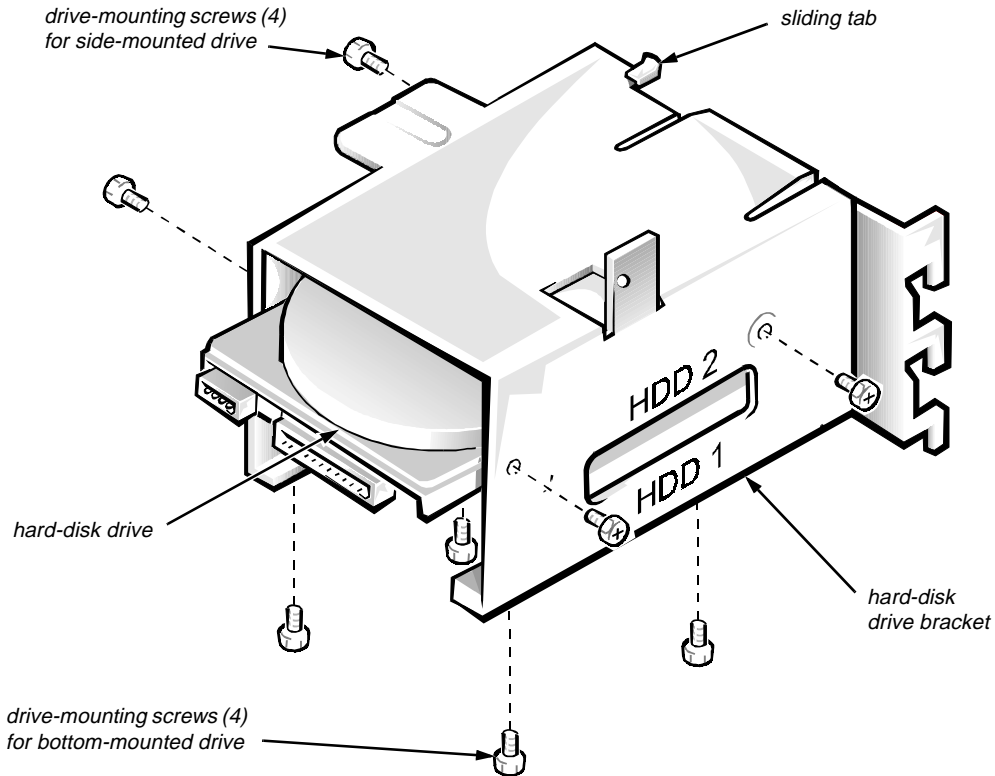

**Figure 6-14. Hard-Disk Drive Removal**


To remove a hard-disk drive, follow these steps:

- 1. Remove the hard-disk drive bracket.**
- 2. Remove the four screws that attach the hard-disk drive to the hard-disk drive bracket.**

One hard-disk drive attaches to the hard-disk drive bracket at the sides of the drive. The other hard-disk drive attaches to the hard-disk drive bracket at the bottom of the hard-disk drive.

- 3. Slide the drive out of the hard-disk drive bracket.**

# System Power Supply

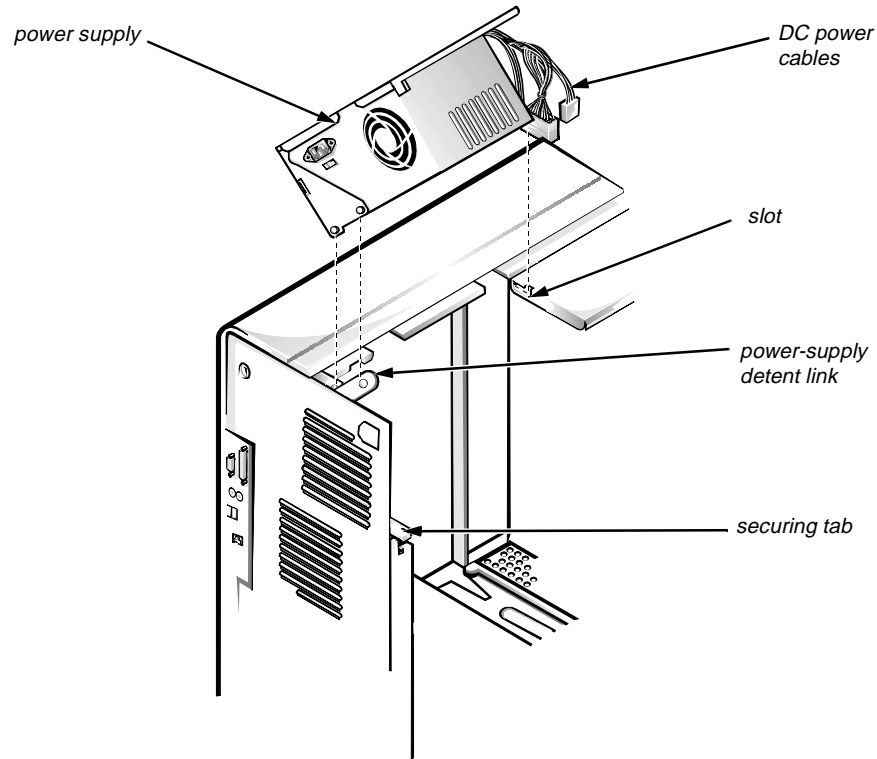

**Figure 6-15. System Power-Supply Removal**

To remove the system power supply, follow these steps:

- 1. Disconnect the AC power cable from the back of the power supply.**
- 2. Free the system power supply from the securing tab labeled “RELEASE —>,” and rotate it upward until it locks.**

Press the securing tab to release the power supply.

- 3. Disconnect the DC power cables from the system board and the drives.**
- 4. Facing the left side of the computer, move the front end of the system power supply toward you, and lift it up to disengage the power supply from the slot in the chassis.**
- 5. Lift the system power supply from the computer.**

When you reinstall the power supply, place the power-supply detent link over the pin on the power supply as you position the power supply in the chassis opening.




# Expansion Cards

The computer has a removable expansion-card cage. The expansion-card cage contains the riser board and any installed expansion cards. Dell recommends that you remove the expansion-card cage first before removing or installing expansion cards.

If you are not removing any of the expansion cards, leave the external cables attached to the expansion cards.

## Expansion-Card Cage

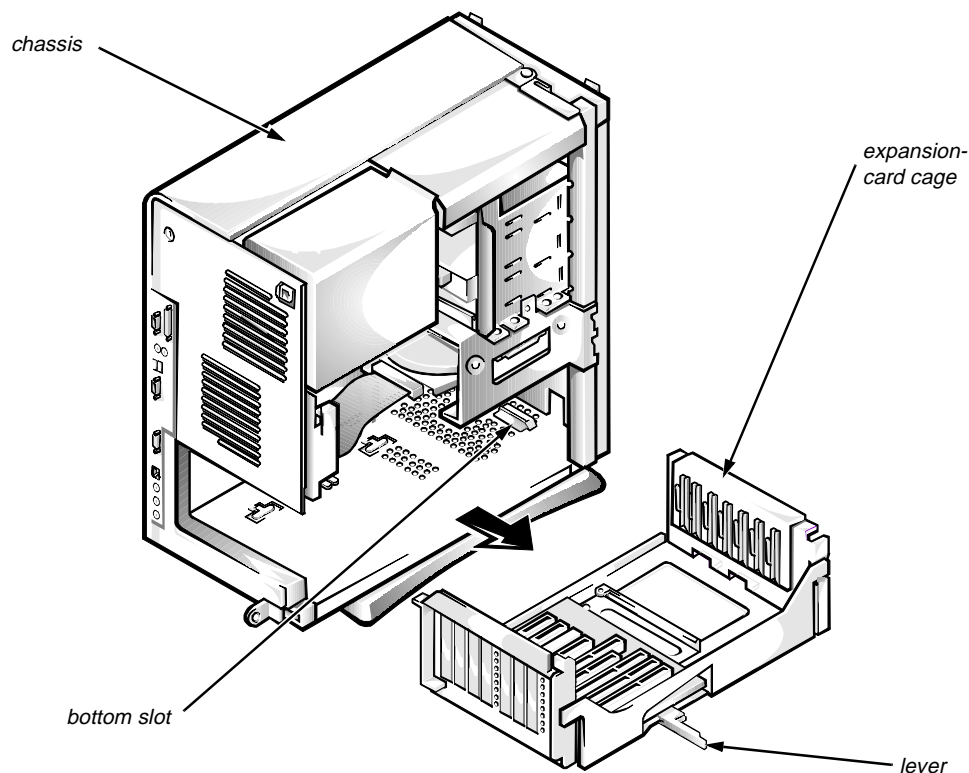


**Figure 6-16. Expansion-Card Cage Removal**

To remove an expansion-card cage, follow these steps:

- 1. Rotate the lever toward the back of the computer until it stops in the upright position.**
- 2. Slide the expansion-card cage out of the computer.**

To replace an expansion-card cage, align the tabs on the left and right sides of the expansion-card cage with the slots on the back and bottom of the chassis. With the securing lever in its extended position, slide the expansion-card cage into place.

## Expansion Card

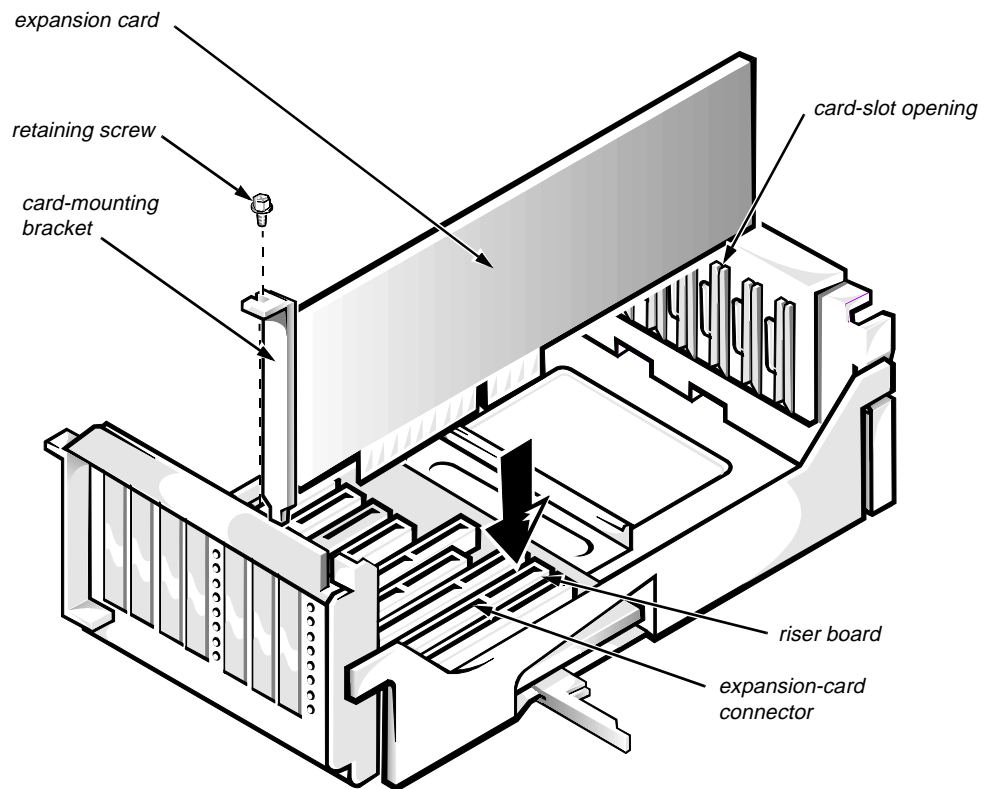


**Figure 6-17. Expansion-Card Removal**

To remove an expansion card, follow these steps:

- 1. Disconnect any cables from the expansion card being removed.**
- 2. Remove the expansion-card cage.**
- 3. Remove the retaining screw from the card-mounting bracket.**
- 4. Grasp the expansion card by its corners, and carefully remove it from the expansion-card connector.**

## Riser Board

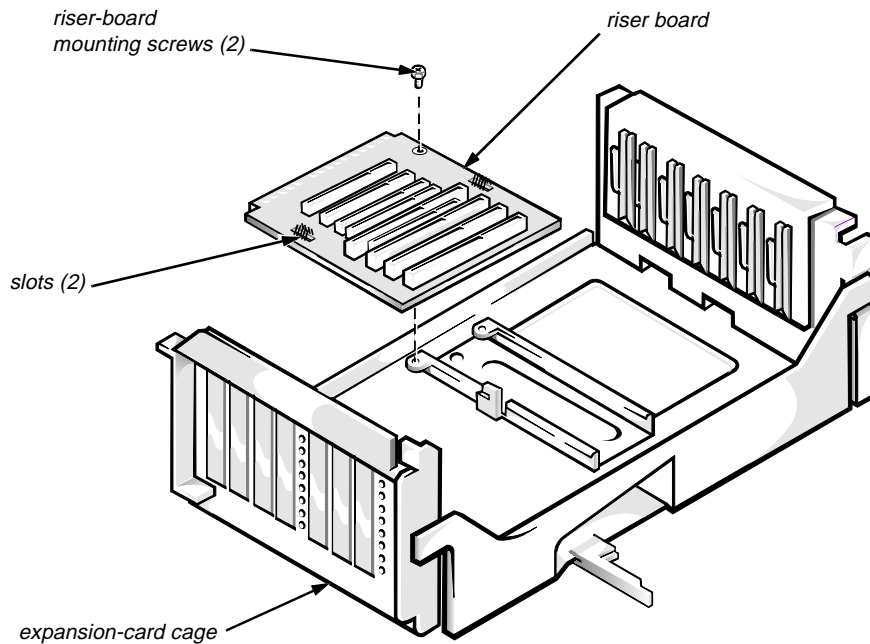


**Figure 6-18. Riser Board Removal**

To remove the riser board, follow these steps:

- 1. Remove the expansion-card cage and all expansion cards.**
- 2. Place the expansion-card cage on a flat work surface with the riser board facing up.**
- 3. Remove the riser-board mounting screws.**
- 4. Slide the riser board away from the release handle until it stops; then lift the riser board away from the expansion-card cage.**

# System Board

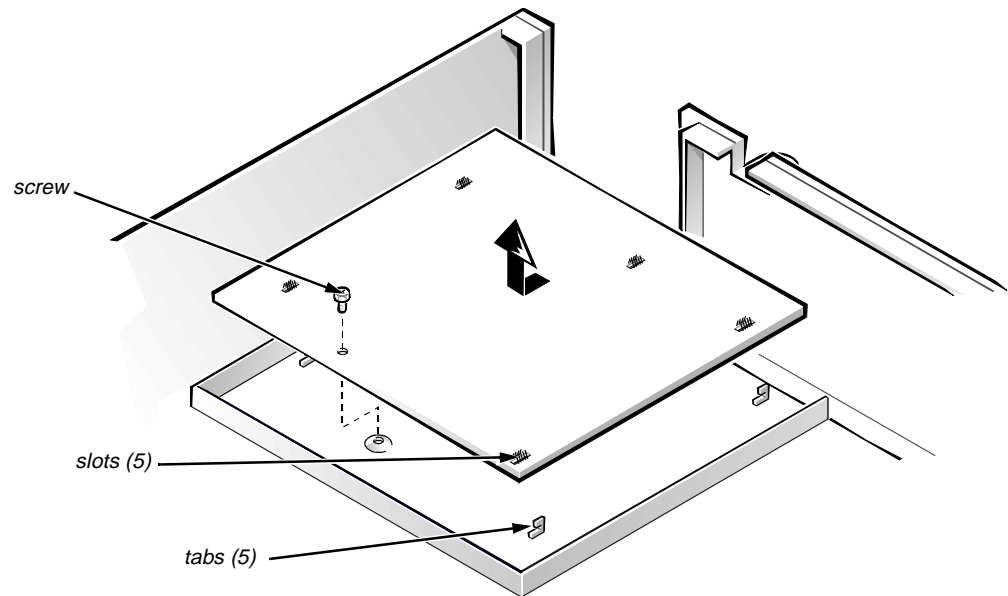

**Figure 6-19. System Board Removal**

To remove the system board, follow these steps:


- 1. Disconnect all cables from their connectors at the back of the computer.**
- 2. Remove the expansion-card cage.**
- 3. Disconnect all cables from the system board.**
- 4. Remove the screw that secures the system board to the bottom of the chassis.**
- 5. Slide the system board toward the front of the chassis until it stops.**
- 6. Carefully lift the system board out of the chassis (be sure to lift evenly and not twist the system board).**

*NOTE: If you are replacing the system board, remove all DIMMs, the video-memory upgrade module (if present), the single-edge contact (SEC) cartridge/heat sink assembly, and the guide bracket assembly from the old system board and install them on the replacement board. Also, set the jumpers on the new system board so they are identical to those on the old board unless a micro-processor upgrade is being installed.*

When you reinstall the system board (before you slide the system board back to lock it in position), push down near each slot to engage the grounding clip onto its corresponding tab. Push evenly on both sides of the system board as you slide it into position (do not twist the system board).

# System Board Components

The subsections that follow Figure 6-20 contain procedures for removing/replacing system board components.

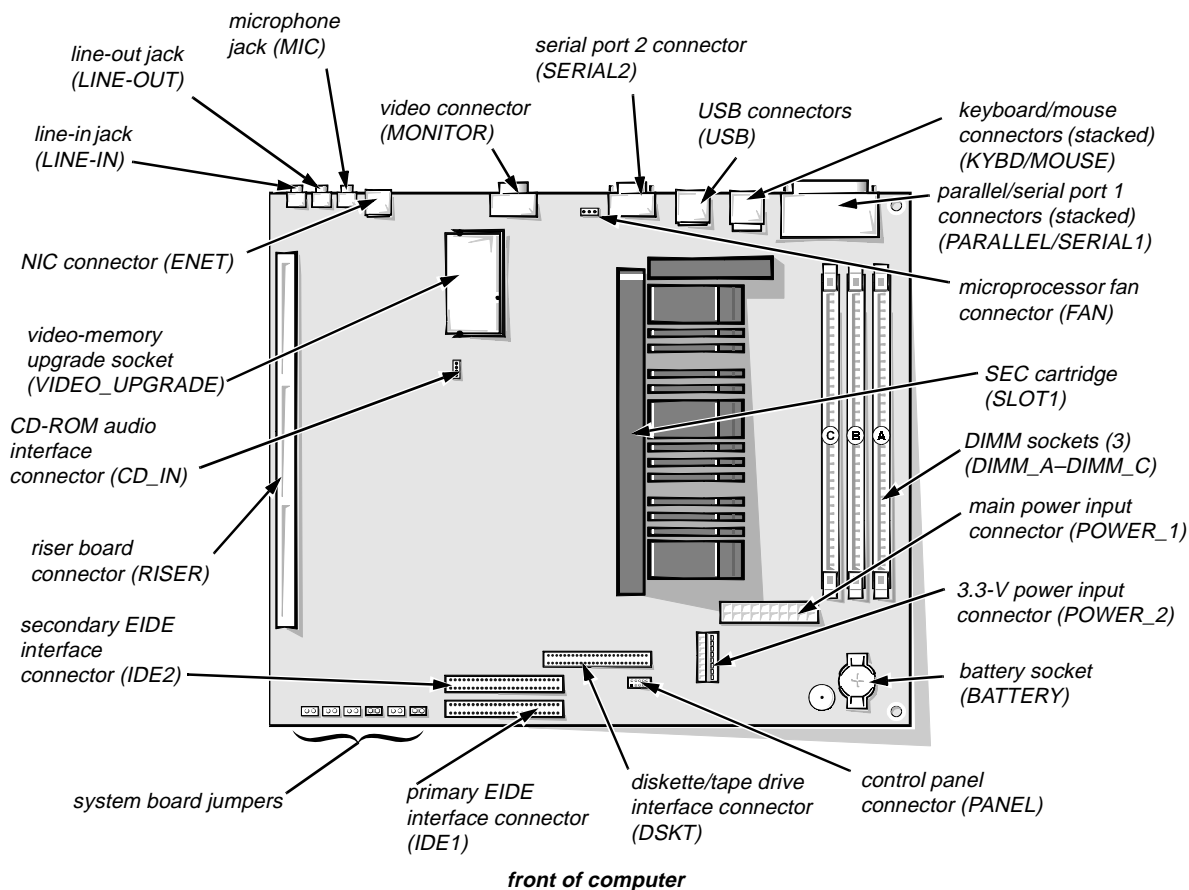


**Figure 6-20. System Board Components**

## ***DIMMs***


To remove a DIMM from one of the three DIMM sockets, follow these steps:

- 1. Remove the system power supply.**
- 2. Locate the three DIMM sockets (see Figure 6-20).**
- 3. To remove a DIMM, push outward on the DIMM socket's securing clips until the DIMM is released from its socket.**
- 4. Lift the DIMM away from the socket.**

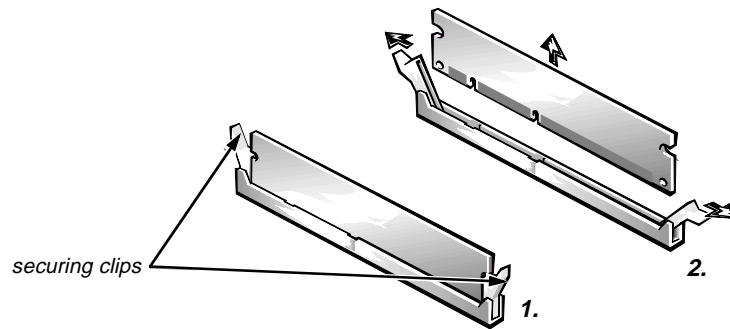

**Figure 6-21. DIMM Removal**

- 5. Reinstall the replacement DIMM by pressing the DIMM fully into the socket while closing the securing clips to lock the DIMM into the socket.**

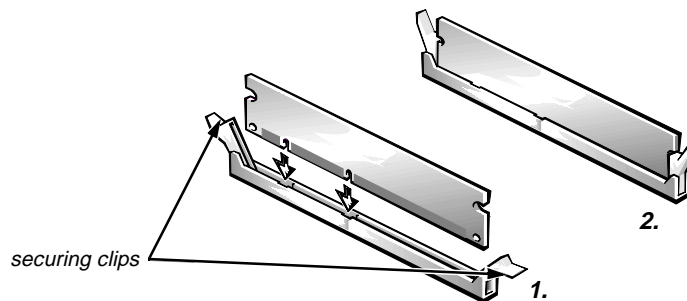

**Figure 6-22. DIMM Installation**

- 6. Replace all assemblies and cables previously removed.**

## ***Video Memory***


You can upgrade video memory from 2 to 4 MB by installing a video-memory upgrade module into the video-memory upgrade socket on the system board. Adding additional video memory increases the system's video performance and provides additional modes for high-resolution/expanded color applications.

To install the video memory upgrade, follow these steps:

**1. Remove the expansion-card cage.**

**CAUTION:** To avoid possible damage to the video-memory upgrade socket and/or video-memory upgrade module, the module is keyed and must be correctly positioned before inserting it into the socket.

**2. Orient the video-memory upgrade module as shown in Figure 6-23. Then carefully align the module's edge connector pins with the socket ensuring that the slot in the module mates with the socket key.**

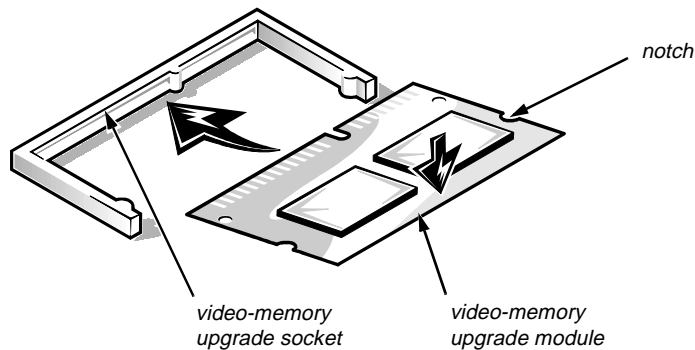

**Figure 6-23. Installing a Video-Memory Upgrade Module**

**3. Press the video-memory upgrade module firmly into the socket, and pivot the module downward until the module clicks into place.**

*NOTE: If you do not hear a sharp click when installing the video-memory upgrade module, remove the module and repeat steps 2 and 3.*

**4. Replace the expansion-card cage.**

**5. Replace the computer cover and reconnect the AC power cable to the AC outlet. Press the power switch on the computer to reboot the system.**

*NOTE: As the system boots, it automatically detects the presence of the new video-memory upgrade module and automatically changes the system configuration information in the System Setup program.*

**6. Enter the System Setup program and confirm that 4 MB is shown in the Video Memory category. If the total memory is listed incorrectly, repeat steps 1 through 6 to reseal the video-memory upgrade module and verify that the computer acknowledges the module.**


**7. Run the system diagnostics (Video Test Group) to test the new video-memory upgrade module.**

## Microprocessor

To take advantage of future options in processor speed and functionality, you can replace the microprocessor on your system board with any Dell-supported microprocessor upgrade. The microprocessor upgrade kit is shipped with an SEC cartridge/heat sink assembly which includes the microprocessor, microprocessor heat sink, and L2 cache memory module.

You may also have to reseal or replace an SEC cartridge/heat sink assembly during normal maintenance.

### SEC Cartridge/Heat Sink Assembly

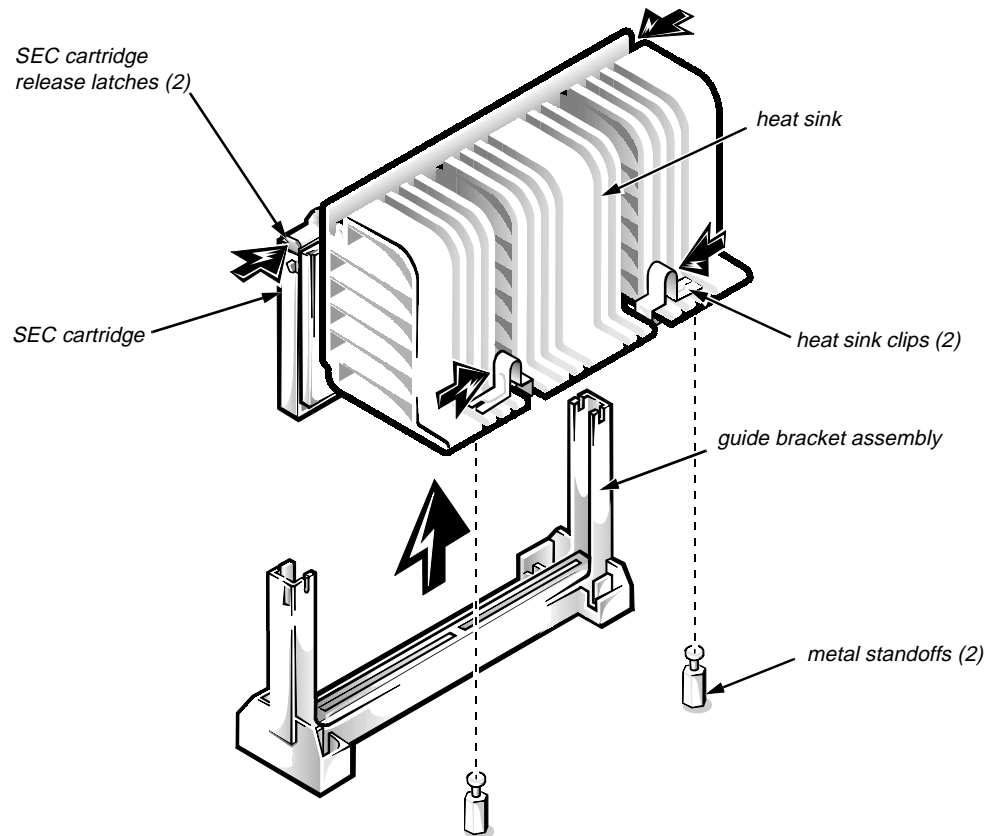

**Figure 6-24. SEC Cartridge/Heat Sink Removal**



To remove the SEC cartridge/heat sink assembly, follow these steps:


**1. Remove the system power supply.**

**WARNING:** The SEC cartridge/heat sink assembly can get extremely hot during system operations. Be sure that the assembly has had sufficient time to cool before touching it.

- 2. Locate the SEC cartridge/heat sink assembly.**
- 3. Disconnect the microprocessor fan connector from the 3-pin connector on the system board (labeled “FAN”), located between the serial port 2 connector and the video connector (see Figure 6-20).**
- 4. Release the two securing clips near the base of the heat sink from the metal standoffs as shown in Figure 6-24.**
- 5. Locate and press inward on the SEC cartridge release latches (located directly on top of the SEC cartridge adjacent to the heat sink assembly) until the latches click.**
- 6. Lift the SEC cartridge/heat sink assembly out of its guide bracket assembly/connector on the system board.**

*NOTE: When installing the SEC cartridge/heat sink assembly, carefully orient the assembly and press firmly with up to 25 pounds of force to mate the SEC cartridge with its connector. Then slide the heat sink release latches outward to lock the assembly onto the metal standoffs.*

## **System Battery**

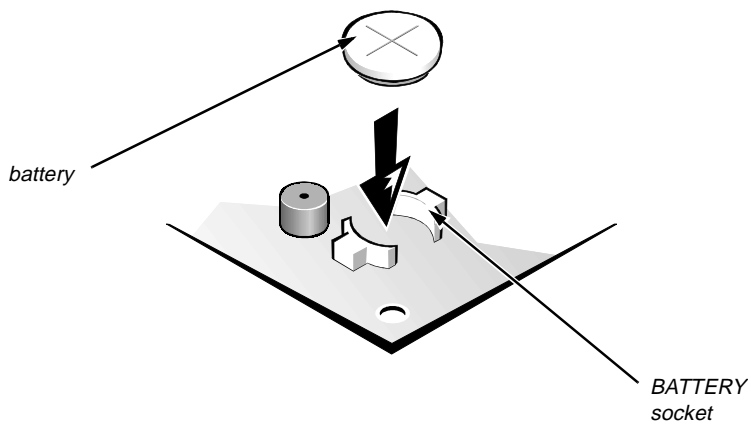

**Figure 6-25. System Battery Installation**

To remove the system battery, follow these steps:

1. **If possible boot the system and enter the System Setup program. Then record important system configuration information (see Appendix A, “System Setup Program,” for details).**
2. **Turn off power to all peripherals and disconnect the AC power cable from its AC outlet.**
3. **Remove the computer cover.**
4. **Remove the expansion-card cage, and locate the battery in the front right corner of the system board adjacent to the DIMM connectors (see Figure 6-20).**

**CAUTION:** If you pry out the battery with a blunt object, be careful not to touch the system board with the object. Ensure that the object is inserted between the battery and the socket before attempting to pry out the battery. Otherwise, you may damage the system board by prying off the socket or by breaking traces on the system board.

5. **Remove the battery by carefully prying it out of its socket with your fingers or with a blunt, nonconducting object, such as a plastic screwdriver.**

**WARNING:** There is a danger of the new battery exploding if it is incorrectly installed. When you replace the system battery, orient the new battery with the “+” facing up (see Figure 6-25). Replace the battery only with the same or equivalent type recommended by the manufacturer. Discard used batteries according to the manufacturer’s instructions.

6. **Insert the battery into the socket (with the positive side labeled “+” facing upwards) into its socket, and snap it into place.**
7. **Replace the expansion-card cage; replace the computer cover, reconnect all cabling, and reboot the system.**
8. **Enter the System Setup program, and configure the system using the information from the printouts you made earlier.**
9. **Turn off the computer; wait 10 or more minutes and reenter the System Setup program to ensure that the date and time are still correct indicating that the system battery is functioning correctly.**

# Appendix A

## System Setup Program

**T**his appendix describes the System Setup program, which is used to change the system configuration information stored in NVRAM on the system board.

To enter the System Setup program, follow these steps:

- 1. Turn on (or reboot) the system.**
- 2. Press <Ctrl><Alt><Enter> *immediately* when prompted.**

If you wait too long and the operating system begins to load into memory, *let the system complete the load operation*; then shut down the system and try again.

*NOTE: To ensure an orderly system shutdown, consult the documentation that accompanied the operating system.*

# System Setup Screens

Dell Computer Corporation (www.dell.com)				
Page 1 of 2		System OptiPlex GXa 233M Setup		BIOS Version: XXX
Time: <input type="text" value="13"/> :17:02 Date: Mon Sept 1, 1997 Diskette Drive A: 3.5 inch, 1.44 MB Diskette Drive B: Not Installed  Drives: Primary:Type Cyls Hds Pre LZ Sec Size Drive 0:Auto 1023 64 -1 1023 63 2111 Drive 1:None Secondary: Drive 0:Auto CD-ROM Device Drive 1:None  Reserved Memory: None CPU Speed: 233 MHz Num Lock: On		This category sets the time in 24-hour format (hours:minutes:seconds) for the internal clock/calendar.  To change the value in a field, enter a number or use the left- or right-arrow key.  Changes take effect immediately.		
Pentium® II Processor 233 MHz Level 2 Cache: 512 KB Integrated System Memory: 16 MB SDRAM Video Memory: 2 MB SGRAM Service Tag: XXXXX Asset Tag: XXXXX				
Tab,Shift-Tab change fields		←, → change values		Alt-P next
				Esc exit
				Alt-B reboot

Dell Computer Corporation (www.dell.com)				
Page 2 of 2		System OptiPlex GXa 233M Setup		BIOS Version: XXX
Keyboard Errors: <input type="text" value="Report"/> System Password: Not Enabled Password Status: Unlocked Boot Sequence: Diskette First Setup Password: Not Enabled Auto Power On: Disabled 00:00 Power Management: Disabled _____ Integrated Devices _____ Sound: On NIC: On Mouse: On Serial Port 1: Auto Serial Port 2: Auto Parallel Port: 378h Parallel Mode: AT IDE Hard Disk: Auto Diskette: Auto Speaker: On		This category sets whether keyboard-related error messages are reported at system startup.		
Pentium® II Processor 233 MHz Level 2 Cache: 512 KB Integrated System Memory: 16 MB SDRAM Video Memory: 2 MB SGRAM Service Tag: XXXXX Asset Tag: XXXXX				
Tab,Shift-Tab change fields		←, → change values		Alt-P next
				Esc exit
				Alt-B reboot

**Figure A-1. System Setup Screens**

**Table A-1. System Setup Categories**

Category	Function
Time	Resets time on computer's internal clock.
Date	Resets date on computer's internal calendar.
Diskette Drive A Diskette Drive B	Identifies type of diskette drives installed. Category options always match physical locations of drives in computer. Tape drives are <i>not</i> reflected in these categories.
Drive A Location	Identifies which diskette drive is used as the boot drive.
Drives: Primary Secondary	<p>Identifies drives attached to the IDE1 and IDE2 connectors on system board. Each EIDE connector supports two EIDE drives (Drive 0 and Drive 1).</p> <p>For EIDE hard-disk drives, the system provides an automatic drive-type detect feature. To use this feature, highlight the appropriate Drive category and type <i>a</i> (for <i>automatic</i>).</p> <p>If none of the supported drive types matches the parameters of the new drive, enter parameters directly. To do so, highlight the appropriate Drive category (Drive 0 or Drive 1) and type <i>u</i> to display User1. Press &lt;Tab&gt; to highlight each of the parameter fields in succession, and enter the appropriate number for each field.</p> <p><i>NOTE: For EIDE devices such as EIDE CD-ROM drives and EIDE tape drives that are using the built-in EIDE controller, set the appropriate Drive category to Auto.</i></p>
Reserved Memory	<p>Designates a region of system board memory that can be supplied by an expansion card.</p> <p>This feature should not be enabled unless an expansion card that requires special addressing is installed.</p>
CPU Speed	Indicates processor speed at which system boots—the processor's rated speed or a slower compatibility speed, which disables cache.
Num Lock	Determines whether keyboard's Num Lock mode is activated.
Keyboard Errors	Enables or disables reporting of keyboard errors during POST.

**Table A-1. System Setup Categories (continued)**

<b>Category</b>	<b>Function</b>
System Password	Displays current status of system's password security feature. Also used to assign and verify a new password.
Password Status	Provides an extra measure of system security by letting you set the system password to Locked or Unlocked.
Boot Sequence	Determines whether system boots from dis-kette (if present) or hard-disk drive.
Setup Password	Restricts access to System Setup program.
Auto Power On	Allows you to set the day and time you want the system to power on automatically. The time uses the 24-hour format.
Power Management	<p>With the Power Management category enabled, DPMS monitors and most EIDE drives automatically switch into low-power mode during periods of system inactivity.</p> <p><b>CAUTION: Before enabling this feature, check the monitor documentation to make sure the system has a DPMS-compliant monitor. Otherwise, there is a risk of damaging the monitor.</b></p> <p><i>NOTE: Not all EIDE hard-disk drives support this feature. Enabling this feature for drives that do not support it may cause the EIDE drive to become inoperable until the system is restarted and the Power Management category is disabled.</i></p>
Sound	Enables (On) or disables (Off) the integrated sound controller.
NIC	Enables (On) or disables (Off) the NIC.
Mouse	Enables or disables the built-in PS/2-compatible mouse port.
Serial Port	Configures system's built-in serial port.
Parallel Port	Configures system's built-in parallel port. The port's I/O address may be set to 278h, 3BCh, or 378h. Otherwise, the port may be disabled.
Parallel Mode	Controls whether system's built-in parallel port acts as an AT-compatible (unidirectional) or PS/2-compatible (bidirectional) port.

**Table A-1. System Setup Categories (continued)**

<b>Category</b>	<b>Function</b>
IDE Hard Disk	Enables system's built-in EIDE hard-disk drive interface.
Diskette	Enables system's built-in diskette drive controller.
Speaker	Enables on-board speaker.
Microprocessor	Displays type of microprocessor installed.
Level 2 Cache	Displays size of level 2 cache memory installed.
Video Memory	Displays amount of video memory on the system board.
System Memory	Displays entire amount of installed memory detected in system, except for memory on EMS expansion cards.
Service Tag	Displays system's five-character service tag number.
Asset Tag	Displays the asset tag number up to ten characters if one is assigned.





# Index

## Numbers

- 3.5-inch diskette drive removal
  - low-profile computer, 4-9
  - midsize computer, 5-10
  - mini tower computer, 6-12
- 5.25-inch drive assembly removal
  - low-profile computer, 4-10
  - midsize computer, 5-11
  - mini tower computer, 6-12

## A

- AC power receptacle, 1-7
- AC voltage selection switch, 1-5, 1-7, 1-8
- audio
  - connectors, 1-5
  - controller, 1-4

## B

- battery removal
  - low-profile computer, 4-21
  - midsize computer, 5-23
  - mini tower computer, 6-25
- beep codes, 3-1
- BIOS, flash ROM, 1-3
- block diagram
  - low-profile computer, 1-23
  - midsize computer, 1-25
  - mini tower computer, 1-26

- boot routine for troubleshooting, 2-3
- bracket, hard-disk drive, removal
  - midsize computer, 5-12
  - mini tower computer, 6-14

## C

- cabling, verification, 2-2
- CD-ROM drive removal
  - low-profile computer, 4-10
  - midsize computer, 5-11
  - mini tower computer, 6-12
- chassis
  - configurations, 1-1
  - similarities and differences, 1-2
- computer
  - block diagram, low-profile computer, 1-23
  - block diagram, midsize computer, 1-25
  - block diagram, mini tower computer, 1-26
  - controls and indicators, 1-6
  - cover removal, low-profile computer, 4-4
  - cover removal, midsize computer, 5-5
  - cover removal, mini tower computer, 6-4
  - diagnostics, 1-12
  - DMA channel assignments, 1-16
  - expansion features, 1-8
  - front-panel views, 1-6
  - internal views, 1-7, 1-8
  - interrupt assignments, 1-15
  - jumper information, 1-14

- computer (*continued*)
  - orientation information, 1-17
  - technical specifications, 1-27
  - upgrade options, 1-11
- connectors
  - on back of low-profile computer, 1-7
  - on back of midsize computer, 1-7
  - on back of mini tower computer, 1-8
- control panel removal
  - low-profile computer, 4-7
  - midsize computer, 5-8
  - mini tower computer, 6-9
- controllers
  - audio, 1-4
  - EIDE, 1-3
  - Ethernet, 1-4
  - NIC, 1-4
  - video, 1-4
- controls and indicators
  - diskette-drive access indicator, 1-6
  - front-panel views, 1-6
  - hard-disk drive access indicator, 1-6
  - NIC link integrity indicator, 1-4
  - power button, 1-6
  - reset button, 1-6
- cover removal
  - low-profile computer, 4-4
  - midsize computer, 5-5
  - mini tower computer, 6-4

## **D**

- DC power
  - cables, low-profile computer, 1-22
  - cables, midsize and mini tower computers, 1-24
  - connector pin assignments, 1-20
  - distribution, low-profile computer, 1-23
  - distribution, midsize computer, 1-25
  - distribution, mini tower computer, 1-26
  - voltage ranges, 1-19

- diagnostics
  - about, 1-12
  - quick tests, 2-6
  - specific tests, 2-6
- DIMMs
  - installation, low-profile computer, 4-18
  - installation, midsize computer, 5-20
  - installation, mini tower computer, 6-22
  - removal, low-profile computer, 4-18
  - removal, midsize computer, 5-20
  - removal, mini tower computer, 6-22
  - types and sizes, 1-11
- disk drives. *See* drives
- diskette drives
  - controller, 1-3
  - removal, low-profile computer, 4-9
  - removal, midsize computer, 5-10
  - removal, mini tower computer, 6-12
- DMA channel assignments, 1-16
- documentation, online, 1-12
- drives
  - 3.5-inch diskette drive removal, low-profile computer, 4-9
  - 3.5-inch diskette drive removal, midsize computer, 5-10
  - 3.5-inch diskette drive removal, mini tower computer, 6-12
  - CD-ROM drive removal, low-profile computer, 4-10
  - CD-ROM drive removal, midsize computer, 5-11
  - CD-ROM drive removal, mini tower computer, 6-12
  - hard-disk drive removal, low-profile computer, 4-11
  - hard-disk drive removal, midsize computer, 5-12
  - hard-disk drive removal, mini tower computer, 6-14
  - location, low-profile computer, 4-8
  - location, midsize computer, 5-9
  - location, mini tower computer, 6-10

drives (*continued*)

- tape drive removal, low-profile computer, 4-10
- tape drive removal, midsize computer, 5-11
- tape drive removal, mini tower computer, 6-12

## **E**

- EIDE subsystem, 1-3
- eject button removal
  - low-profile computer, 4-5
  - midsize computer, 5-6
  - mini tower computer, 6-6
- error messages, list of, 3-3
- Ethernet controller, 1-4
- expansion-card cage removal
  - low-profile computer, 4-13
  - midsize computer, 5-15
  - mini tower computer, 6-17
- expansion-card removal
  - low-profile computer, 4-14
  - midsize computer, 5-16
  - mini tower computer, 6-18
- expansion-card slots
  - low-profile computer, 1-9
  - midsize computer, 1-9
  - mini tower computer, 1-10
- external connector assignments
  - low-profile computer, 1-7
  - midsize computer, 1-7
  - mini tower computer, 1-8
- external visual inspection, 2-2

## **F**

- floor stand removal
  - midsize computer, 5-4
- front-bezel removal
  - mini tower computer, 6-5
- front-panel features, 1-6
- front-panel insert removal
  - low-profile computer, 4-6
  - midsize computer, 5-7
  - mini tower computer, 6-7, 6-8

## **H**

- hard-disk drives
  - bracket removal, midsize computer, 5-12
  - bracket removal, mini tower computer, 6-14
  - options, 1-17
  - removal, low-profile computer, 4-11
  - removal, midsize computer, 5-13
  - removal, mini tower computer, 6-15
  - service information, 1-17
- help, getting, 2-6

## **I**

- I/O ports, 1-5
- indicators. *See* controls and indicators
- internal view
  - low-profile computer, 1-7
  - midsize computer, 1-7
  - mini tower computer, 1-8
- internal visual inspection, 2-4
- interrupt assignments, list of, 1-15

ISA expansion-card connectors  
low-profile computer, 1-9  
midsize computer, 1-9  
mini tower computer, 1-10

## **J**

jumpers  
list of, 1-15  
location, 1-14

## **K**

key combination, to enter System Setup program, A-1

## **M**

main memory, 1-3  
memory subsystem  
expansion using DIMMs, 1-11  
flash ROM, 1-3  
level 2 cache memory, 1-3  
messages, error, 3-3  
microprocessor, 1-2

## **N**

network cable requirements, 1-5  
NIC  
connector information, 1-4  
controller, 1-4  
standards, 1-4

## **P**

PCI expansion-card connectors  
low-profile computer, 1-9  
midsize computer, 1-9  
mini tower computer, 1-10  
pin assignments  
DC power connectors, 1-20  
Plug and Play expansion cards, 1-8  
port assignments  
low-profile computer, 1-7  
midsize computer, 1-7  
mini tower computer, 1-8  
POST beep codes  
description, 3-1  
list of, 3-2  
power button removal  
low-profile computer, 4-5  
midsize computer, 5-6  
mini tower computer, 6-6  
power distribution  
low-profile computer, 1-23  
midsize computer, 1-25  
mini tower computer, 1-26  
power supply  
about, 1-5, 1-18  
AC voltage ranges, 1-19  
cables, low-profile computer, 1-22  
cables, midsize and mini tower computers, 1-24  
removal, low-profile computer, 4-12  
removal, midsize computer, 5-14  
removal, mini tower computer, 6-16  
precautionary measures  
low-profile computer, 4-2  
midsize computer, 5-2  
mini tower computer, 6-2  
primary EIDE connector  
low-profile computer, 4-8  
midsize computer, 5-9  
mini tower computer, 6-10

## R

removing and replacing parts  
  low-profile computer, 4-1  
  midsize computer, 5-1  
  mini tower computer, 6-1

reset button removal  
  low-profile computer, 4-5  
  midsize computer, 5-6  
  mini tower computer, 6-6

resource conflicts  
  eliminating, 2-6

riser board removal  
  low-profile computer, 4-15  
  midsize computer, 5-17  
  mini tower computer, 6-19

## S

SEC cartridge/heat sink assembly  
  about, 1-11, 4-20  
  removal, low-profile computer, 4-20  
  removal, midsize computer, 5-22  
  removal, mini tower computer, 6-24

secondary cache memory, 1-3

secondary EIDE connector  
  low-profile computer, 4-8  
  midsize computer, 5-9  
  mini tower computer, 6-10

SMART technology, 1-3

specifications, technical, 1-27

subsystems  
  audio, 1-4  
  expansion, 1-8  
  memory, 1-11  
  NIC, 1-4

SVGA, 1-4

switch, AC voltage selection, 1-5, 1-7

system battery removal  
  low-profile computer, 4-21  
  midsize computer, 5-23  
  mini tower computer, 6-25

system board  
  component locations, 1-12  
  features, 1-12  
  jumpers, 1-14  
  removal, low-profile computer, 4-16  
  removal, midsize computer, 5-18  
  removal, mini tower computer, 6-20

system diagnostics  
  about, 1-12  
  running, 2-6

system error messages, list of, 3-3

system power supply  
  removal, low-profile computer, 4-12  
  removal, midsize computer, 5-14  
  removal, mini tower computer, 6-16

System Setup program  
  about, A-1  
  categories, A-3  
  key combination to enter, A-1  
  screens, A-2

system unit. *See* computer

## T

tape drives  
  about, 1-4  
  removal, low-profile computer, 4-10  
  removal, midsize computer, 5-11  
  removal, mini tower computer, 6-12

technical specifications, 1-27

tools, recommended  
  low-profile computer, 4-1  
  midsize computer, 5-1  
  mini tower computer, 6-1

troubleshooting  
  boot routine, 2-3  
  external visual inspection, 2-2  
  initial procedures, 2-1  
  internal visual inspection, 2-4  
  using beep codes, 3-1

## **U**

upgrade options, 1-11

## **V**

video memory  
  about, 1-12  
  adding to low-profile computer, 4-18  
  adding to midsize computer, 5-20  
  adding to mini tower computer, 6-22  
  controller, 1-4  
visual inspection  
  external, 2-2  
  internal, 2-4  
voltage selection switch, AC, 1-7

## **W**

warnings, 4-2, 5-2, 6-2