

Contents

- Chapter 1 Specification 7**
- 1-1 SL-915P-G Mainboard Layout 8
- 1-2 Chipset System Block Diagram 9
- 1-3 Mainboard Specifications 10
- 1-3.1 CPU Socket 10
- 1-3.2 System Chipsets 10
- 1-3.3 Memory 10
- 1-3.4 AMI BIOS 10
- 1-3.5 x16 PCI Express Interface 11
- 1-3.6 Advanced System Power Management 11
- 1-3.7 Multi-I/O Functions : 11
- 1-3.8 Gigabit Ethernet Controller on board 12
- 1-3.9 Hardware Monitor on board 12
- 1-3.10 8-channel AC'97 Audio Codec on board 12
- 1-3.11 Serial ATA Interface integrated 12
- 1-3.12 Smart Acceleration Technology for CPU Acceleration 12
- 1-3.13 Form Factor 12
- Chapter 2 Hardware Setup 13**
- 2-1 775-pin Prescott CPU and Socket LGA 775 14
- 2-1.1 To Identify a 775-pin Prescott CPU 14
- 2-1.2 To install 775-pin Prescott CPU into Socket LGA 775 14
- 2-1.3 775-Prescott CPU Installation with Hyper-threading 16
- 2-2 Memory Installation 17
- 2-2.1 To Install DDR SDRAM Module 17
- 2-2.2 Dual Channel Memory Features 17
- 2-2.3 To Remove a DIMM 17
- 2-3 IDEConnector Installation 18
- 2-4 Serial ATA Connectors Installation 19
- 2-4.1 How to set up SATA connectors and cables 19
- 2-4.2 How to set up SATA modes 20
- 2-5 Floppy Drive Connector Installation 21
- 2-6 ATX V2.03 Power Supply Installation 22
- 2-7 Jumper Setting : How to set up jumper 23
- 2-7.1 JKB1: Keyboard / Mouse Wake Up 24
- 2-7.2 JBAT1: Clear CMOS 24

2-8 Other Connectors Configuration	25
2-8.1 On Board Fan Connectors	25
2-8.2 USB Ports and USB Pin-headers	26
2-8.3 PCI Express Slot Installation	27
2-8.4 Chassis Back Panel Connectors	27
2-8.5 PS/2 Mouse , PS/2 Keyboard, SPDIF In/Out connector	28
2-8.6 RJ45 Connector	28
2-8.7 CD-ROM Audio Connectors (CD_IN1)	29
2-8.8 External Audio Connector	29
2-8.9 Thermal Detector	29
2-8.10 Complex Pin-header (Front Panel Connectors)	30
Chapter 3 Software Setup	32
3-1 To Open up the Support CD	33
3-2 Intel Chipset Software Installation Utility	34
3-3 DirectX Installation	35
3-4 AC'97 Audio Driver Installation	36
3-4.1 Installing AC'97 8-channel Audio Driver	36
3-4.2 Verifying 8-channel Audio	37
3-5 To Install RTL8110S Gigabit Ethernet Drivers	39
3-6 To Install Hardware Monitor Utility	40
3-6.1 Installation	40
3-6.2 Verification	41
3-7 To Install USB 2.0 Driver for Windows 2000/XP	42
Chapter 4 AMI BIOS Setup	43
4-1 About BIOS Setup	44
4-2 To Run BIOS Setup	44
4-3 About CMOS	44
4-4 The POST (Power On Self Test)	44
4-5 To Update BIOS	45
4-6 BIOS SETUP --- CMOS Setup Utility	46
4-6.1 CMOS Setup Utility	46
4-6.2 Standard BIOS Features	48
4-6.3 Advanced BIOS Features	49
4-6.3.1 CPU Configuration	50
4-6.3.2 IDE Configuration	51
4-6.3.3 Floppy Configuration	53
4-6.3.4 Super IO Configuration	54
4-6.3.5 Hardware Health Monitor	55
4-6.3.6 ACPI Configuration	56

- 4-6.3.7. Event Log Configuration 57
- 4-6.3.8. PCI Express Configuration 58
- 4-6.3.9. USB Configuration 58
- 4-6.3.10. Voltage Control 59
- 4-6.3.11. APM Power Management 59
- 4-6.3.12. Soltek Performance Options 60
- 4-6.3.13. PCI Device Configuration 61
- 4-6.4 Advanced Chipset Features 62
 - 4-6.4.1 NorthBridge Configuration 62
 - 4-6.4.2 SouthBridge Configuration 64
- 4-6.5 PCI/PNP Resource Management 65
- 4-6.6 Boot Configuration Setup 66
 - 4-6.6.1 Boot Settings Configuration 67
 - 4-6.6.2 Boot Device Priority 68
 - 4-6.6.3 Removable Drives 68
- 4-6.7. Boot Security Features 69
 - 4-6.7.1. Supervisor Password 69
 - 4-6.7.2. User Password 69
 - 4-6.7.3 Change Supervisor Password 70
 - 4-6.7.4 Change User Password 71
 - 4-6.7.5. Clear User Password 71
 - 4-6.7.6 Boot Sector Virus Protection 72
- 4-6.8 Save Changes and Exit 72
- 4-6.9 Discard Changes and Exit 73
- 4-6.10 Load Optimal Defaults 73
- 4-6.11 Discard Changes 73

Chapter 1 Specification

Introduction

This series of mainboards features an integration of the powerful Intel 775-pin Prescott CPU and the North Bridge Intel 915P. The 775-pin Prescott CPU is a rapid execution engine providing 800/533MHz system bus, while North Bridge Intel 915P is a high performance integrated chipset providing Dual Channel DDR 400/333 SDRAM memory interface, Hub interface as well as x16 PCI Express interface.

Integrated with Intel915P, South Bridge Intel ICH6 supports the LPC I/O, upstream Hub interface, PCI interface, IDE interface, PCI Express interface, Serial ATA interface, USB 2.0 interface, AC'97 interface and the interrupt control. This chapter is to introduce to users every advanced function of this high performance integration.

Topics included in this chapter are:


1-1 Mainboard Layout

1-2 Chipset Diagram


1-3 Mainboard Specifications**

**** If any difference is found between the mainboard description and the Mainboard you are using, please look up the Errata/Update Slip enclosed inside for the correction or updated information, or else contact the mainboard Dealer or visit our Web Site for the latest manual update.**

1-1 SL-915P-G Mainboard Layout

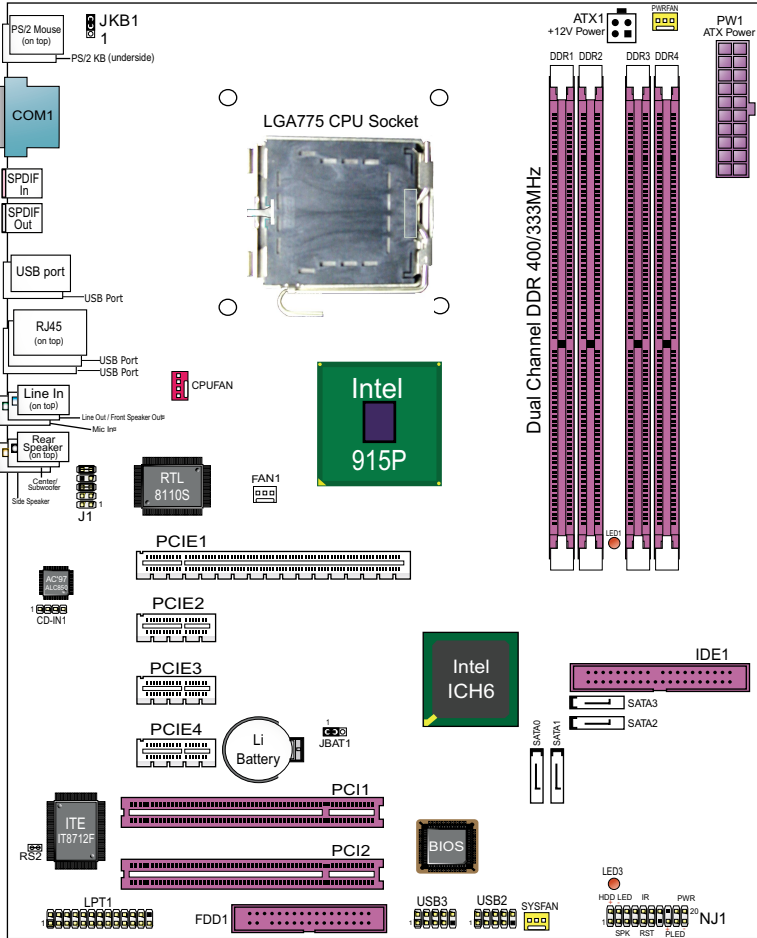

1-2 Chipset System Block Diagram

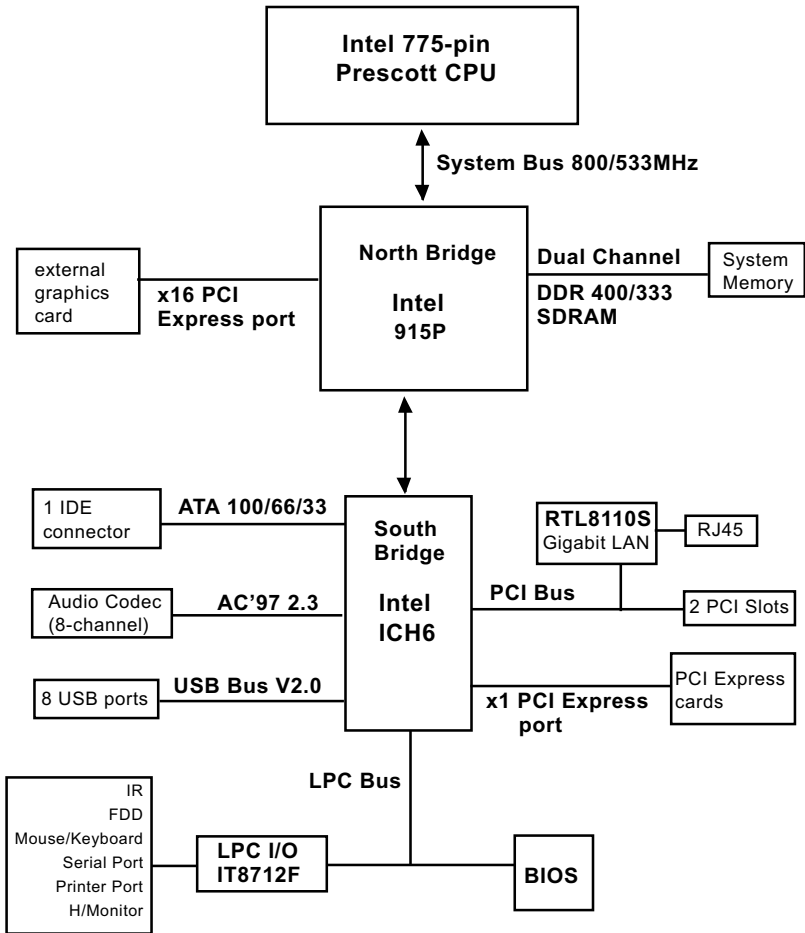

775-pin Prescott CPU + Intel 915P + Intel ICH6 Diagram

1-3 Mainboard Specifications

1-3.1 CPU Socket

CPU Socket LGA 775 on board, supporting Intel® Pentium 4 775-pin Prescott processors(including Intel Hyper Threading and Prescott CPUs) in 775-pin package for :

- 800/533MHz System Bus
- Hyper-pipelined technology -- Advanced dynamic execution;
- Rapid Execution Engine -- Streaming SIMD Extensions 2
- 128 Bit Enhanced Floating Point Unit -- Execution Trace Cache

1-3.2 System Chipsets

North Bridge Intel 915P:

- A high performance integrated chipset providing processor interface, Dual channel DDR 400/333 SDRAM memory interface, DMI, and X16 PCI Express interface.
- Showing Hyper Threading Logo when booting with a Hyper-threading CPU.

South Bridge Intel ICH6:

- Supporting the LPC I/O, upstream Hub interface, PCI interface (including SATA, and Gigabit LAN), USB 2.0 interface, IDE interface AC'97 Audio interface , and X1 PCI Express interface.

1-3.3 Memory

4 DDR DIMM 184-pin slots on board :

- Supporting unregistered, non-ECC Dual-channel DDR 400/333 SDRAM up to 4GBs
- DIMMs to be populated in identical pairs for Dual-channel operation
- SPD (Serial Presence Detect) Scheme for DIMM Detection supported

1-3.4 AMI BIOS

Flash Memory for easy upgrade, supporting BIOS Writing Protection, Year 2000 compliant, and supporting various hardware configuration during booting system (See Chapter 4 BIOS Setup):

- Standard BIOS Features(Times, Date, System Information etc.)
- Advanced BIOS Features (CPU,IDE, Floppy, Super I/O, Hardware Health, ACPI, USB, and Frequency/Voltage Control)
- Advanced Chipset Features (NorthBridge, SouthBridge Configuration)
- PCI/PNP Resource Management (IRQ Settings, Latency Timers etc.)
- Boot Configuration Setup (Boot Settings, Boot Device Priority etc.)
- Power Management Features
- BIOS Security Features (Supervisor Password, User Password)

1-3.5 x16 PCI Express Interface

x16 PCI Express interface integrated in 915P, supporting:

- a raw bit-rate of 2.5 Gb/s on the data pins, resulting in a real bandwidth per pair of 250MB/s.
- Enhanced Addressing Mechanism
- External Graphics card (not supporting AGP card)

1-3.6 Advanced System Power Management

- ACPI 1.0B compliant (Advanced Configuration and Power Interface), including ACPI suspend mode support (See ACPI Configuration of Advanced BIOS Features in BIOS Setup)
- APM V1.2 compliant (Legacy Power Management)
- Supporting Wake On LAN
- Real Time Clock (RTC) with date alarm, month alarm, and century field

1-3.7 Multi-I/O Functions :

- Serial ATA Controller integrated in ICH6, supporting:
 - 4x Serial ATA connectors supporting up to 150MByte/s transfer rate
- PCI EIDE Controller, supporting:
 - 1x UATA100/66/33 IDE connectors supporting up to 2 IDE devices
- 3 ports as x1 PCI Express for x1 PCI Express cards
- Dedicated IR Functions:
 - Serial IR interface dedicated to IR function either through the complete serial port or the dedicated port Infrared-IrDA (HPSIR) and ASK (Amplitude Shift Keyed) IR
- Multi-mode Parallel Data Transfer:
 - Standard mode, high speed mode ECP and enhanced mode EPP
- Floppy Disk Connector:
 - One FDD connector supporting 2 floppy drives with drive swap support
- Universal Serial Bus Transfer Mode:
 - USB V2.0 compliant; 480Mb/s USB Bus, supporting Windows 2000 or later operating system (no support for Windows 9X/ME)
 - 4 built-in USB connectors and 2 USB Headers which require 2 additional USB cables to provide 4 more optional USB ports
- PS/2 Keyboard and PS/2 Mouse
- UARTs (Universal Asynchronous Receiver / Transmitter):
 - 1 serial port (COM1) on board

1-3.8 Gigabit Ethernet Controller on board

PCI bus single-chip Gigabit Ethernet Controller RTL8110S on board:

- Supporting 10/100/1000Mb data transfer
- Supporting Wake On LAN function through the on-board RJ45 LAN Connector
- LAN Driver enclosed in Support CD for user's installation.

1-3.9 Hardware Monitor on board

- Hardware Monitor supported by VT8712F, providing monitoring and alarm for flexible desktop management of hardware voltage, temperatures and fan speeds.
- Utility Software Soltek Hardware Monitor for displaying system status is enclosed in Support CD for user's installation.

1-3.10 8-channel AC'97 Audio Codec on board

AC'97 Audio Codec Realtek ALC850 on board

- Supporting 8-channel display of PCM audio output
- 8 channel audio consists of Front-Out, Rear-Out, Center-Out, Side-speakers, MIC-In, Line-In, and Front-MIC-In for complete surround sound effect
- SPDIF In/Out connector integrated in Back Panel supported by ALC850 for digital interface format input/out.
- AC'97 Audio Codec Driver enclosed in Support CD for user's installation.

1-3.11 Serial ATA Interface integrated

- 4 SATA connectors supported by ICH6 for 4 SATA Devices setup
- Supports data transfer speed up to 150MB/sec.

1-3.12 Smart Acceleration Technology for CPU Acceleration

- If CPU Linear Frequency Setup is disabled in BIOS setup, the "Smart Acceleration Technology" will appear in "Soltek Performance Options" menu to allow you to enable the CPU dynamic overclocking. If enabled, a running CPU onboard will dynamically (automatically) adjust its own CPU performance during necessary or appropriate conditions.
- This function can be disabled or set to Enhanced Mode/Performance Mode/Maximum Mode.

1-3.13 Form Factor

- ATX Form Factor, ATX Power Supply, version 2.03 compliant, supported by one Main Power Connector, one +12V Power Connector.
- Mainboard size: 305mm x 245mm

Chapter 2 Hardware Setup

To Get Things Ready for Hardware Setup !


1. We recommend to install your CPU before any other components. For detailed installation instructions of processor, you can also refer to the pamphlet enclosed in your CPU package.
2. Installing a cooling fan with a good heat sink is a must for proper heat dissipation for your CPU. Get ready an appropriate fan with heat sink for proper installation. Improper fan and installation will damage your CPU.
3. In case CPU Vcore, CPU clock or Frequency Ratio is adjustable on board, please follow the instructions described in the User's manual for proper setup. Incorrect setting will cause damage to your CPU.

The following topics are included in this chapter:

2-1 775-pin Prescott CPU and Socket LGA 775	14
2-1.1 To Identify a 775-pin Prescott CPU	14
2-1.2 To install 775-pin Prescott CPU into Socket LGA 775	14
2-1.3 775-Prescott CPU Installation with Hyper-threading	16
2-2 Memory Installation	17
2-2.1 To Install DDR SDRAM Module	17
2-2.2 Dual Channel Memory Features	17
2-2.3 To Remove a DIMM	17
2-3 IDEConnector Installation	18
2-4 Serial ATA Connectors Installation	19
2-4.1 How to set up SATA connectors and cables	19
2-4.2 How to set up SATA modes	20
2-5 Floppy Drive Connector Installation	21
2-6 ATX V2.03 Power Supply Installation	22
2-7 Jumper Setting : How to set up jumper	23
2-7.1 JKB1: Keyboard / Mouse Wake Up	24
2-7.2 JBAT1: Clear CMOS	24
2-8 Other Connectors Configuration	25


2-1 775-pin Prescott CPU and Socket LGA 775

2-1.1 To Identify a 775-pin Prescott CPU

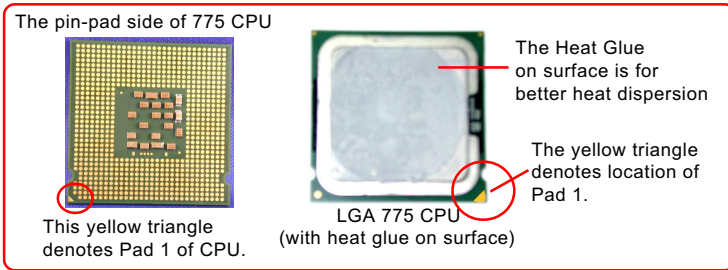


2-1.2 To install 775-pin Prescott CPU into Socket LGA 775


1. LGA 775 socket is safeguarded by a metal cover and a protective cap on top. Never remove the protective cap before CPU has already been installed into socket.

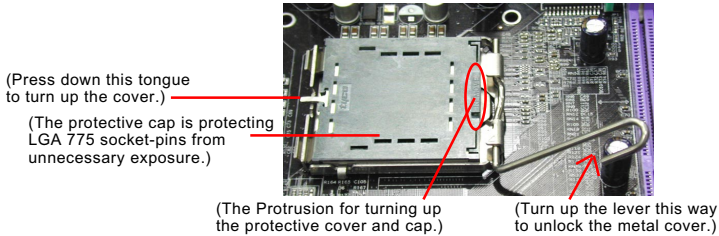

2. Pull sideway the socket lever and turn it up so as to unlock the metal cover from the socket base.
3. Since the metal cover together with the cap is unlocked from the socket base now, use a fingertip to pull at the protrusion at one end of cap so as to turn the cover and cap up.
4. The cover and the cap are turned open now, revealing the socket-pins. We should be aware that the pins are so delicate they are forbidden to be touched with anything other than a 775-pin CPU.

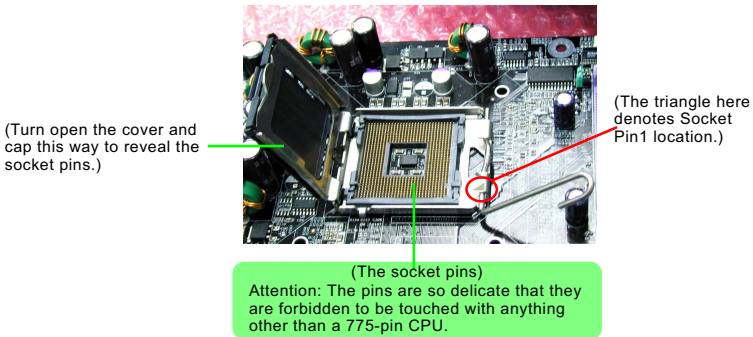

- As soon as the Cover and Cap is lifted up, place down the 775 CPU gently into 775 Socket with Pad1 matching Socket Pin1.

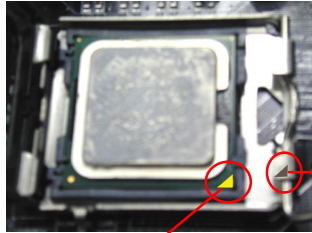


(This yellow triangle on CPU denotes Pad1of CPU.)

(This triangle on socket denotes Socket Pin1 location.)

- When you have made sure the 775-CPU is properly laid down, you should now return the Metal Cover to Socket so as to fix down the CPU.
- After returning the Metal Cover to Socket, pull back the Socket Lever to Socket until it gets back to the latch.
- Since the Metal Cover is returned to Socket, use a fingertip to lift and remove the protective Cap for the Cooling Fan installation.

(The Cap is lifted up away from the Cover and can be removed now.)

(Attention: Never remove this Protective Cap if CPU is not in Socket.)

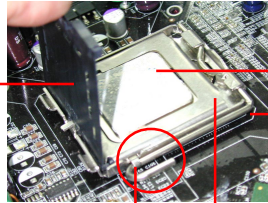

(The 775 CPU)

(The 775-Socket)

(Lever returned to Latch)

(The Metal cover)

- CPU is installed, Metal cover fixed to socket, Protective Cap removed, we should install CPU Cooling Fan now.


(CPU installed, Metal Cover fixed to Socket, and Protective Cap removed, we should install CPU Cooling Fan now.)



(Cooling Fan Support Hole)

(Cooling Fan Support Hole)

- Insert the 4 Fan Supporters into the Support Holes on board, and then connect the Fan Power cable to the Fan Connector on board.

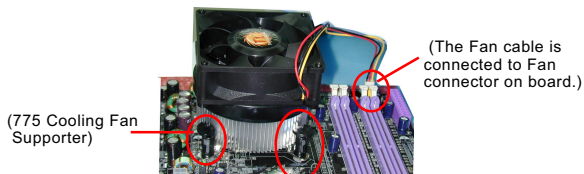


(775 Cooling Fan Supporter)

(The Fan cable is connected to Fan connector on board.)

CPU Fan and Fan Power cable are set up.

2-1.3 775-Prescott CPU Installation with Hyper-threading

- 775-Prescott CPU also supports hyper-threading technology.
- After installation of 775-Prescott CPU, you should also install Windows XP to enable Hyper-threading dual-in-one CPU function. Win98/Me/2K do not support Hyper-threading dual-in-one CPU function.

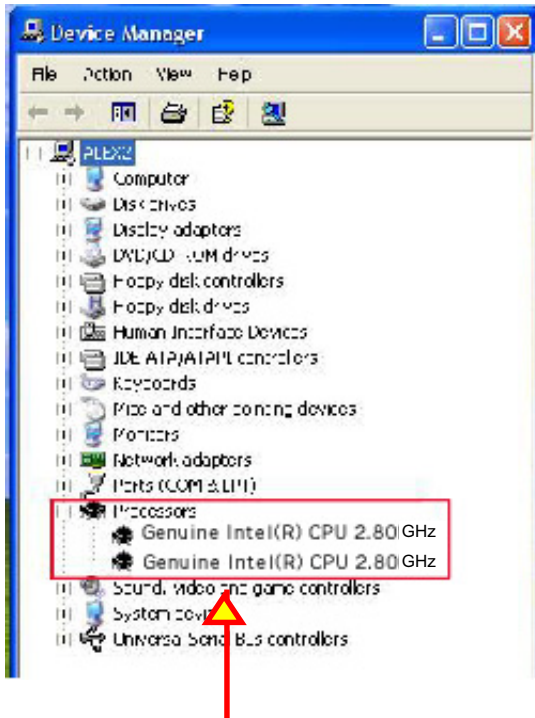

(If Hyper-threading CPU is installed successfully with O/S Win XP, the O/S will enable the dual-in-one CPU function.)

2-2 Memory Installation

2-2.1 To Install DDR SDRAM Module


- DDR DIMM slot has 184 pins and one notch. Insert a DDR SDRAM vertically into the 184-pin slot with the notch-to-rib matching.
- This mainboard supports up to 4GB unbuffered Dual-channel DDR 400/333 SDRAM, with 4 DDR DIMM slots on board. Do not insert other type of modules into these slots.

2-2.2 Dual Channel Memory Features

- Dual Channel Memory Configuration is formed by couple of identical DDR SDRAMs.
- Matched DIMMs need to have identical density, DRAM technology, DRAM bus width, and equal number of memory banks.
- This series supports up to 4GB unbuffered Dual Channel DDR 400/333 SDRAM, with 4 DDR DIMM slots on board. Do not insert other type of modules into these slots.
- The dual memory controller can double the DDR memory bandwidth up to 6.4GB/s with DDR400, 5.4GB/s with DDR333..

2-2.3 To Remove a DIMM

Power off the system first, and then press down the holding latches on both sides of slot to release the module from the DIMM slot.


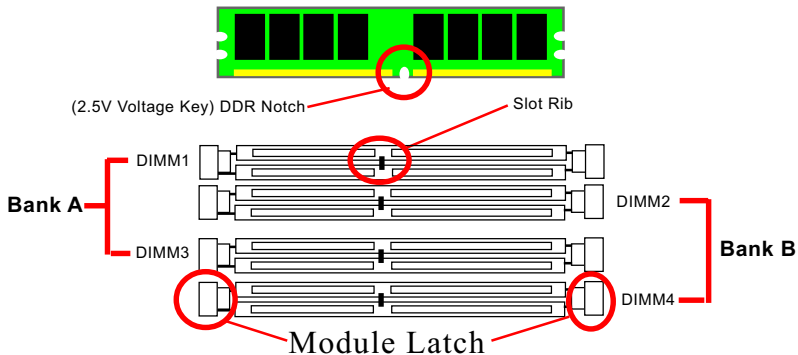


To Boot PC with Dual Channel Memory Configuration
Populate Bank A / Bank B / Bank A+Bank B with identical DIMMs

To Boot PC with Single Channel Memory Configuration
To Populate one DIMM or two DIMMs in 2 different Banks will boot PC with single-channel memory configuration.

2-3 IDEConnector Installation

To install IDE Connector, you may connect the blue connector of IDE cable to IDE1 on board, and then connect the gray connect to your slave device and the black connector to your master device.

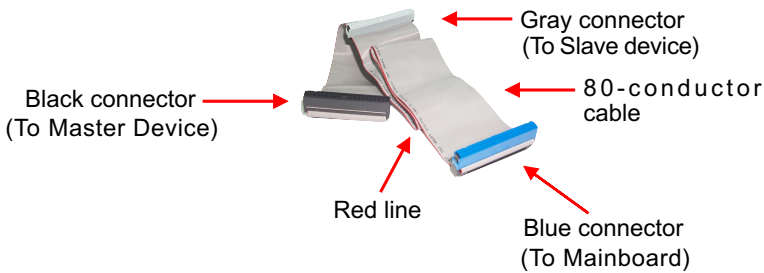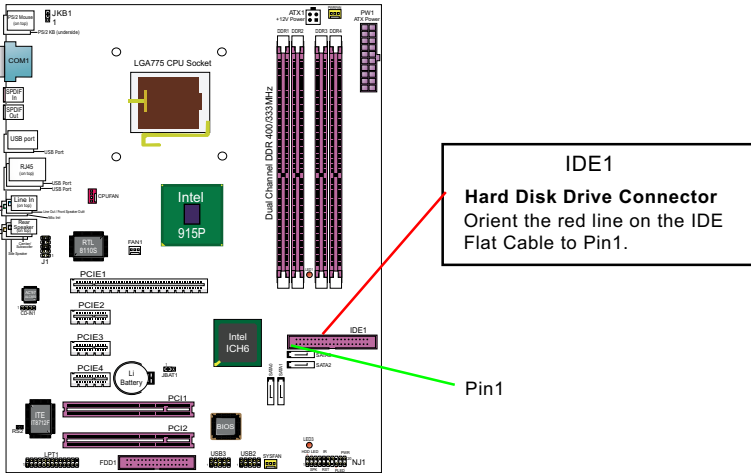


IDE Flat Cable

2-4 Serial ATA Connectors Installation

The Serial ATA is designed to improve the Parallel ATA with the capability of Hot Plug and offer a data bandwidth of 150Mbytes/second. It also reduces voltage and pin count and can be implemented with thin cables which improves the inner ventilator of PC cases.

4 Serial ATA connectors are built on board, supported by the ICH6 for SATA Hard Disk Drives.

2-4.1 How to set up SATA connectors and cables

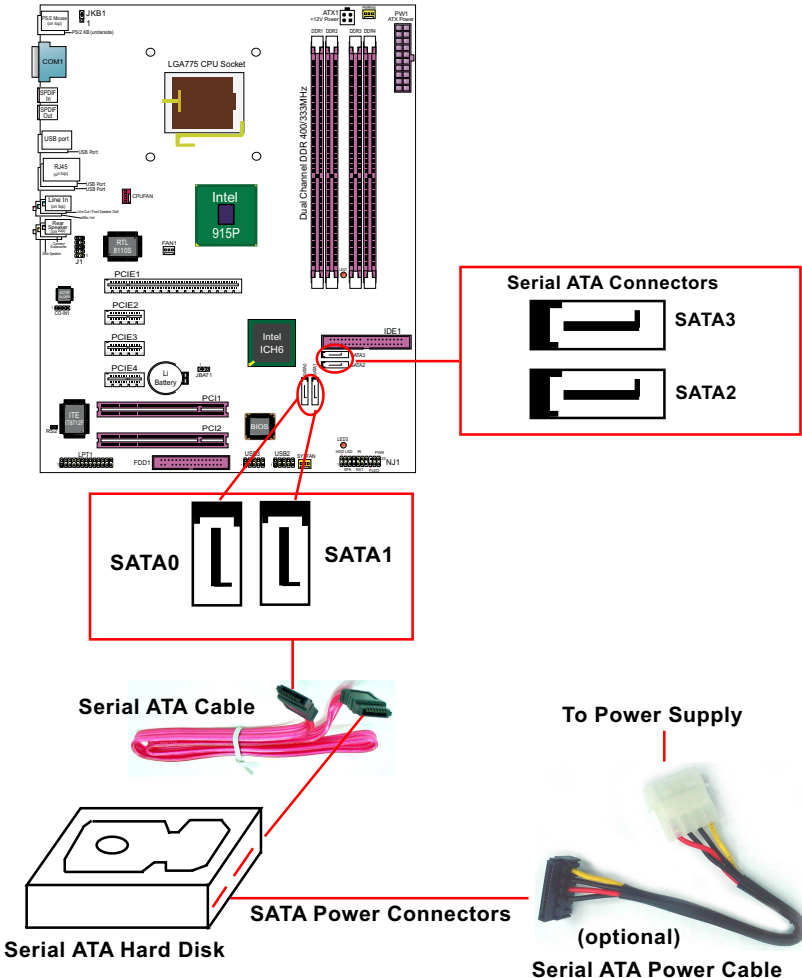

2-4.2 How to set up SATA modes

To set up SATA modes, please enter BIOS Setup and click on "IDE Configuration of the Main Menu "Advanced BIOS Features. Then configure SATA as illustrated in the IDE Configuration:

ATA/IDE Configuration

Allows you to configurare IDE device mode.
Choices: Disabled; Compatible; Enhanced

Disabled: If disabled, no Primary/Secondary IDE mode will be presented for configuration.

Compatible: If Compatible selected, Legacy IDE Channels will be presented for configuration.

Legacy IDE Channels:

This item allows you to select the onboard IDE mode.

Choices: SATA only: Pri IDE Master SATA0
Pri IDE Slave SATA2
Sec IDE Master SATA1
Sec IDE Slave SATA3
PATA Pri, SATA Secondary:
PATA Master
PATA Slave
SATA Master (SATA0)
SATA Slave (SATA3)
SATA Pri, PATA Secondary:
SATA Master (SATA0)
SATA Slave (SATA2)
PATA MASTER
PATA SLAVE

PATA only: No SATA can be set up.


Enhanced: If Enhanced selected, "Configure SATA as" mode will be presented for configuration.

Configure SATA AS

This item allows you to configure SATA mode as IDE.
Choice: IDE


2-5 Floppy Drive Connector Installation

To install FDC, you should connect the end of FDC cable with single connector to the board, and connect the other end with two connectors to the floppy drives.

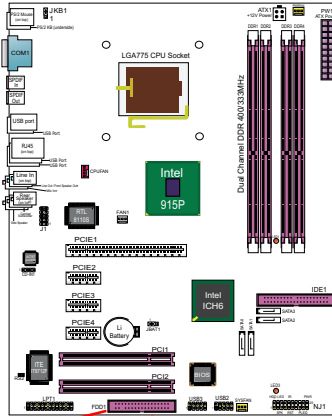


Pin 1
(to Red Line)

Floppy Drive Connector:
Orient the red line of the Floppy Flat Cable to Pin1.

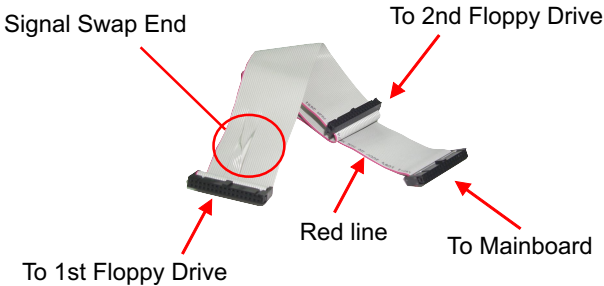

FDD Cable

2-6 ATX V2.03 Power Supply Installation

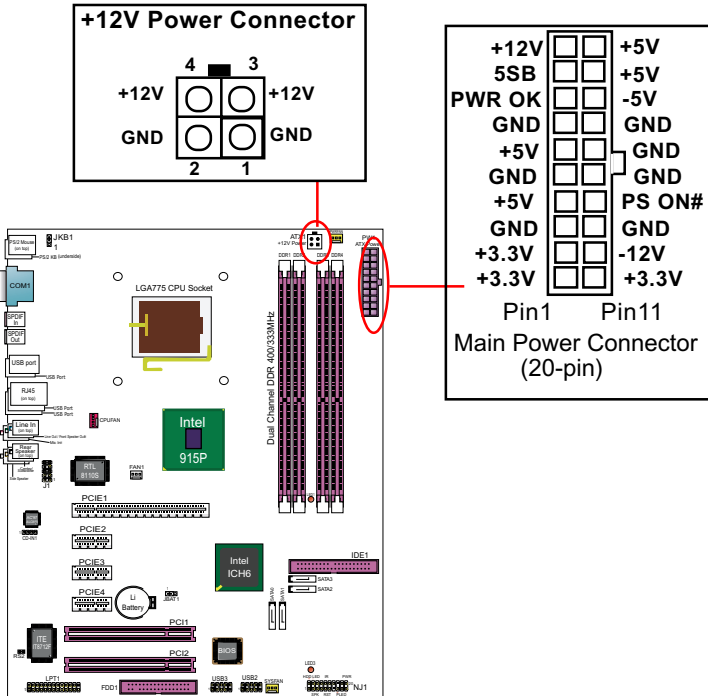

ATX V2.03 Power Supply is strongly recommended for mainboard running with 2GHz or higher CPU.

To set up Power Supply on this mainboard:



1. Connect the on-board Main Power Connector (20-pin) to the Main Power Connector (20-pin) of an ATX Power Supply which can be of the latest version 2.03 model, and then connect the square-shaped +12V Power Connector on board to the square-shaped +12V Power Connector of the Power Supply.

Warning: Both the Main Power Connector and the +12V Power Connector should be connected to Power Supply; otherwise, the system may either not start or damaged.


2. This ATX Power Supply should be able to provide at least 720mA/ +5V standby power for Wake On Lan function.

2-7 Jumper Setting : How to set up jumper

How to tackle the Jumpers:

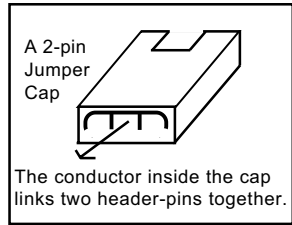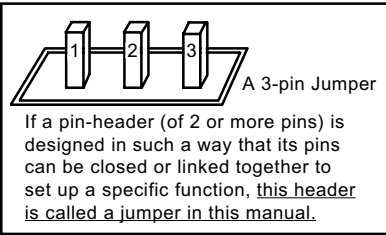

 - A Jumper is usually but not necessarily given a “JpX” legend.
- In the Jumper setting diagram, the jumper pins covered with black marks stand for closed pins with jumper cap.




- Do not remove any jumper cap when power is on. Always make sure the power is off before changing any jumper settings. Otherwise, the mainboard will be damaged.

2-7.1 JKB1: Keyboard / Mouse Wake Up

JKB1 is designed on board as a jumper to enable/disable the PS/2 keyboard/mouse Wake Up from suspend mode.

USB keyboard/mouse Wake Up function is also supported on this mainboard.

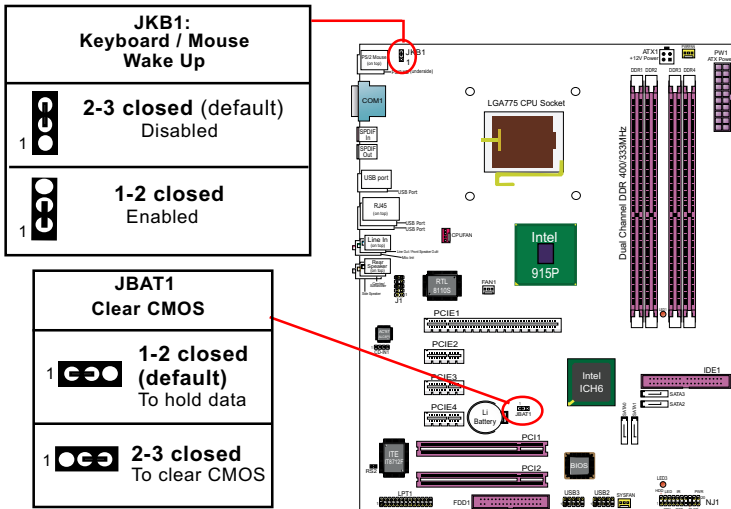

2-7.2 JBAT1: Clear CMOS


When you have problem with rebooting your system, you can clear CMOS data and restore it to default value. To clear CMOS with Jumper JBAT1, please follow the steps below:

1. Power off system.
2. Set JBAT1 to Pin 2-3 closed.
3. After 2 or 3 seconds, restore the JBAT1 setting to Pin 1-2 closed.
4. CMOS data are restored to default now. Remember never clear CMOS when system power is on.

2-8 Other Connectors Configuration

This section lists out all connectors configurations for users' reference.

2-8.1 On Board Fan Connectors

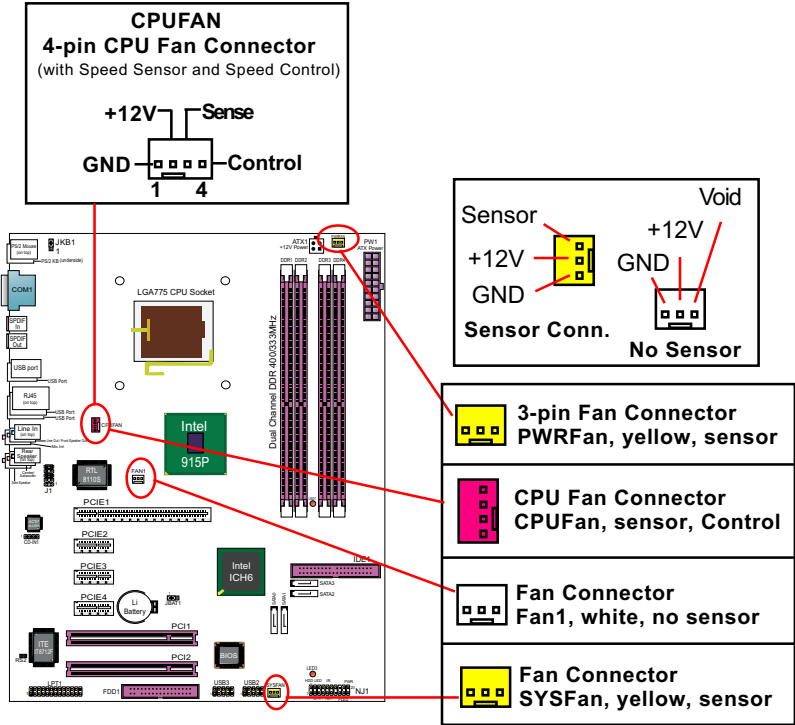

CPUFAN is a 4-pin speed sensor and speed control Fan connector supporting speed detection and speed control. CPUFAN is typically for CPU cooling fan.

PWRFAN / SYSFAN is a sensor Fan connector supporting Fan speed detection function.



Fan1 is a non-sensor Fan connector for cooling down temperature only.

2-8.2 USB Ports and USB Pin-headers

This series provides four USB ports on board supporting various USB devices. In addition, two USB pin-headers are added on board to provide expansion of four more optional USB ports by using two additional USB cables. Users can order the optional USB cables from your main-board dealer or vendor.


When plugging the USB cable to USB Header, users must make sure the red wire is connected to Pin 1.

All 8 USB ports are compliant with 1.1 / 2.0 USB Bus. USB 2.0 supports Windows 2000 and up (no support for Windows 9X/ME). Please see Chapter 3 for USB2.0 Installation.

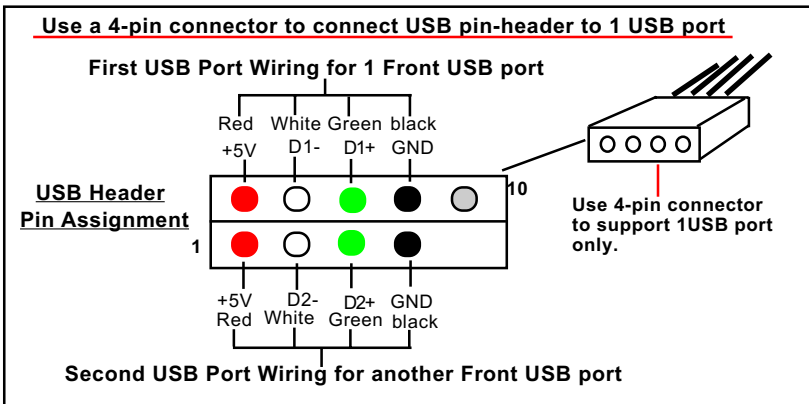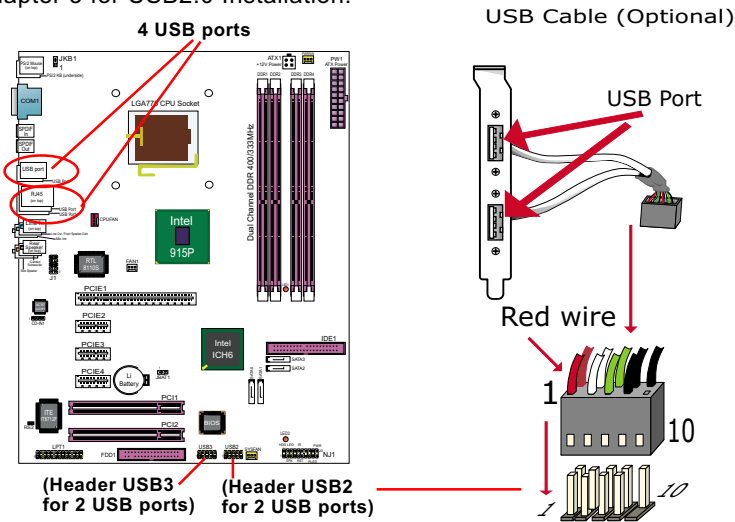


2-8.3 PCI Express Slot Installation

- 1) X16 PCI Express Slot is provided on board for Graphics Attach, supporting a raw bit-rate of 2.5Gb/s on the data pins. It does not support AGP 1X/2X/4X/8X card
- 2) 3 slots of x1 PCI Express is supported by ICH6, compliant with PCI Express Base Specification, Revision 1.0a for PCI Express cards.

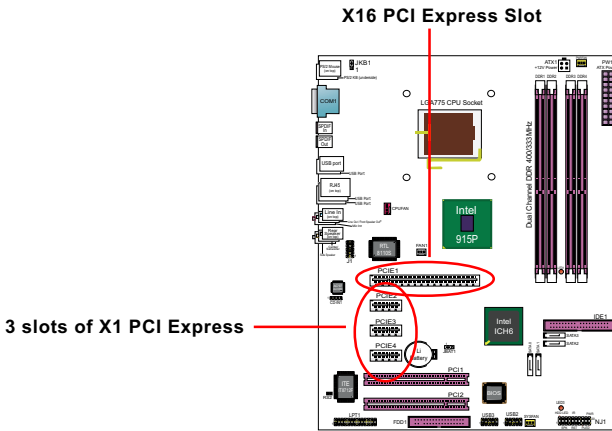


2-8.4 Chassis Back Panel Connectors

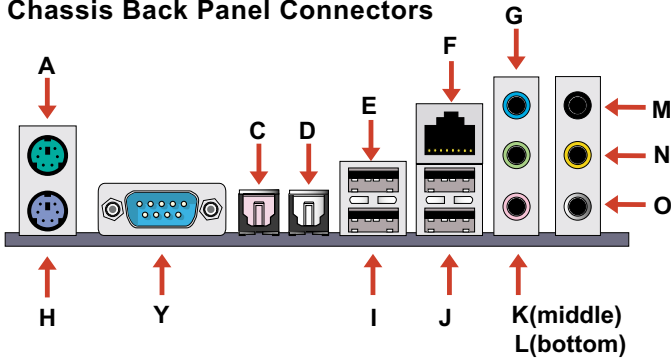

- | | |
|---------------------------|---------------------------------------|
| A : PS/2 Mouse | I : USB port |
| C : S/PDIF In | J : 2 USB ports |
| D : S/PDIF Out | K : Line out/Front Speaker Out |
| E : USB port | L : Microphone In |
| F : RJ45 Connector | M : Rear Speaker Out |
| G : Line In | N : Center/Subwoofer Out |
| H : PS/2 Keyboard | O : Side Speaker Out |
| Y : COM1 | |

2-8.5 PS/2 Mouse , PS/2 Keyboard, SPDIF In/Out connector

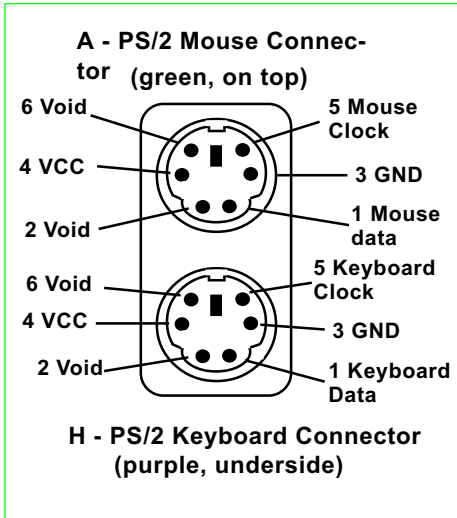

SPDIF- in/out port for Digital Interface Format Input / Output



Protective Swing Plate

C - C is SPDIF-In port with pale purple Protective Swing Plate.
D - D is SPDIF-Out port with a gray Protective Swing Plate.

Connect C / D to digital audio device for digital audio signal input / output.


2-8.6 RJ45 Connector

One RJ45 connector is on board for LAN connection, supporting 10/100/1000Mb data transfer.


Orange LED blinks to indicate that data transmission is undergoing in 1000 Base T mode.

Yellow LED "On" to indicate Network hub is in connection with the system.

F: RJ45

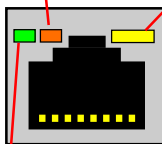

Green LED blinks to indicate that data transmission is undergoing in 10/100 Base T mode.

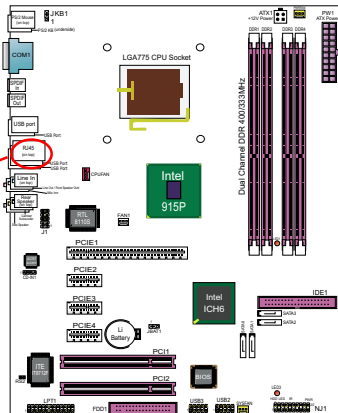

2-8.7 CD-ROM Audio Connectors (CD_IN1)

CD-IN1 is an audio connector connecting CD-ROM audio to mainboard.


2-8.8 External Audio Connector

This Mainboard is designed with an External Audio connector J1 which provides connection to your chassis.

1. When J1 is set to 5-6 closed and 9-10 closed, this default setting disables this connector and leaves the Back Panel Audio enabled.
2. To use this Front Panel Audio Connector, please open all pins of J1 and connect it to your chassis.



2-8.9 Thermal Detector

RS2 is mounted with Thermal Resistor by default for detecting system temperature.

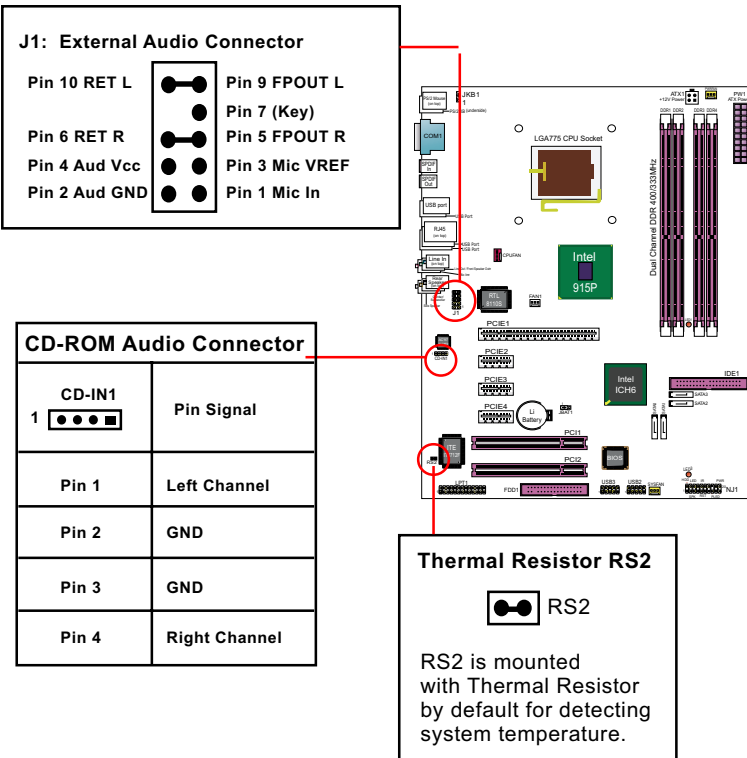

2-8.10 Complex Pin-header (Front Panel Connectors)

This complex Pin-header consists of the following connectors for various supports. When you have fixed the mainboard to the case, join the connectors of this Complex Pin-header to the case Front Panel.

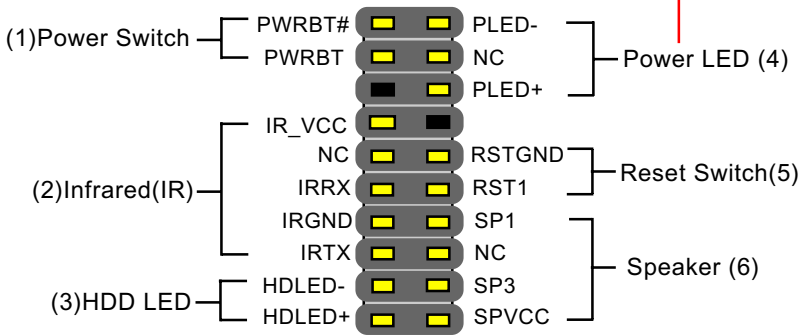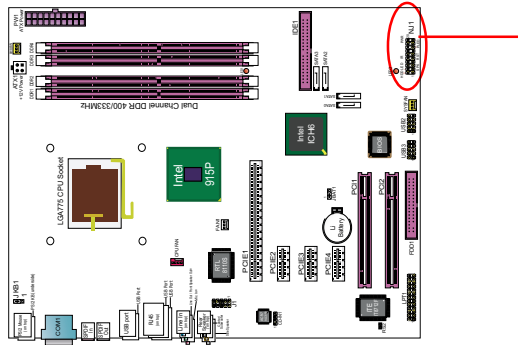

Chapter 3 Software Setup

Drivers, Utilities and Software Installation

- Support CD:


This series of mainboards will be shipped with a Support CD which contains those necessary driver files, Application Softwares and some helpful utilities. It is a user-friendly, auto-run CD which will open itself up in a CD-ROM automatically.

This chapter is introduce the installations of all these essential drivers and utilities on Windows 9X, Windows ME, Windows 2000 and Windows XP. And installation on Windows 2K is taken as the general illustration hereby.

3-1 To Open up the Support CD	33
3-2 Intel Chipset Software Installation Utility	34
3-3 DirectX Installation	35
3-4 AC'97 Audio Driver Installation	36
3-4.1 Installing AC'97 8-channel Audio Driver	36
3-4.2 Verifying 8-channel Audio	37
3-5 To Install RTL8110S Gigabit Ethernet Drivers	39
3-6 To Install Hardware Monitor Utility	40
3-6.1 Installation	40
3-6.2 Verification	41
3-7 To Install USB 2.0 Driver for Windows 2000/XP	42

3-1 To Open up the Support CD

1. Please put the Support CD enclosed in your mainboard package into the CD-ROM drive. In a few seconds, the Main Menu will automatically appear, displaying the contents to be installed for this series:

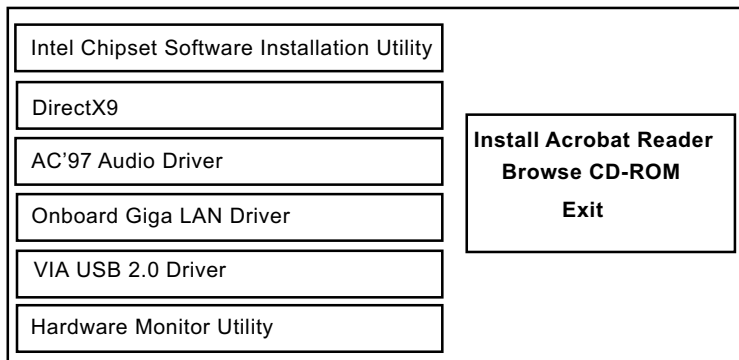

2. In case your system does not open the Support CD automatically, please click to the following path to enter the Main Installation Menu:


D:\Autorun.exe (assuming that your CD-ROM Drive is Drive D)

3. Drivers will be updated from time to time in our web site. If you are installing a newer driver than the one illustrated in this chapter, please be aware that the illustration pictures might be different.


3-2 Intel Chipset Software Installation Utility

1. Following the procedures of opening the Support CD, click to “Install Intel Chipset software installation Utility” to proceed.


2. The Intel Service Pack InstallShield Wizard will pop up to guide you to the Intel Service pack installation. Press “**Next**” button to continue.

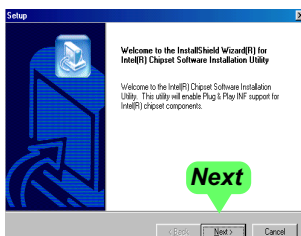

3. “Intel Software License Agreement” screen will appear, please click the “**Yes**” button to agree with the Licence Agreement and continue.

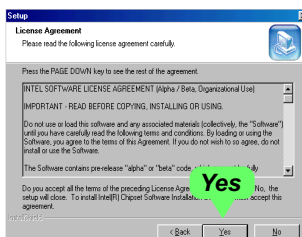

4. After all the setup process is finished, please restart your computer by clicking on “Finish” so as to take the Utility into effect.

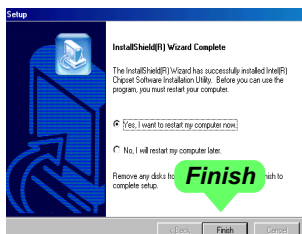


3-3 DirectX Installation


Following the installation of INF, you have to restart system so that your system can be reconfigured with the driver just installed. When restarting procedures finish, please open the Support CD with your CD-ROM to enter the Main Installation Menu.

Then click to “Install DirectX”. This utility will support a better graphic display of the built-in VGA interface.

1. When the screen of “Microsoft DirectX 9.X Setup” appears, please press “Yes” button to continue.

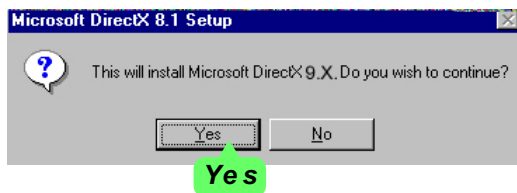

2. After all the setup procedures have completed, click to “OK” button to exit the Installation program and re-start your system.

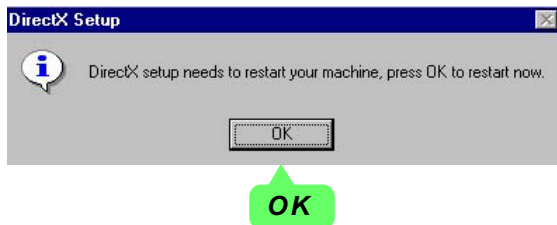


3-4 AC'97 Audio Driver Installation

RTL ALC850 8-channel AC97 Audio Codec on board, AC'97 2.3 compatible stereo audio code for PC multimedia systems. AC'97 Audio Codec Driver is provided in Support CD for user's installation.


3-4.1 Installing AC'97 8-channel Audio Driver

1. Following the procedures of opening the Support CD, click to "AC'97 Audio Driver" to proceed.


2. Instantly, the "installShield Wizard" screen appears to guide you through the "AC'97 Audio Setup".

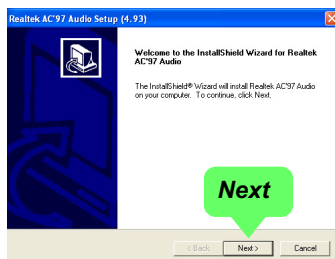

3. instantly, the Setup program proceeds to install the softwares. (If you want to stop setup, click the "Cancel" button.)

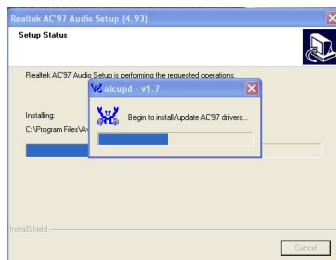


4. After the setup process is finished, please check the radial button "Yes, I want to restart my computer now." And click "Finish" to restart your system.

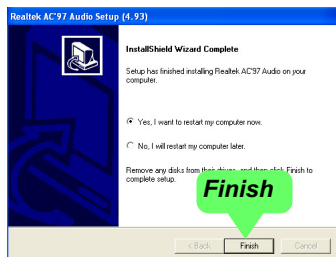

3-4.2 Verifying 8-channel Audio

After installation of AC'97 8-channel Codec, you must configure the 7.1 Speaker connection to enable the 8-channel audio.

1. Connect your on-board Audio Connectors to your 8-channel speakers as depicted in the figure below:

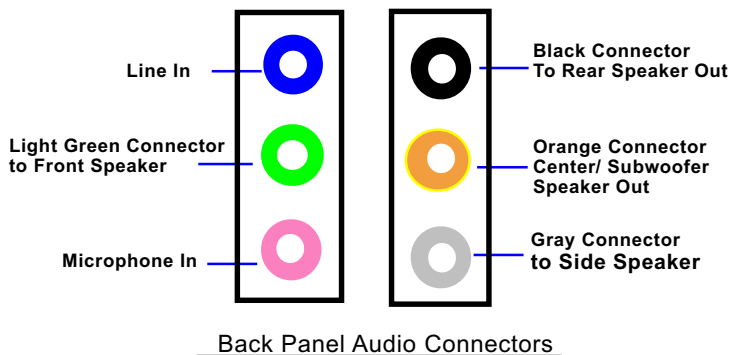


2. After Connection is done, start your Windows system and double click the Sound manager icon to enter 8-channel configuration:



Sound Effect Manager icon on Windows XP

- The AC'97 Audio Configuration" screen will pop out. Click the "Speaker Configuration" bar with your mouse.

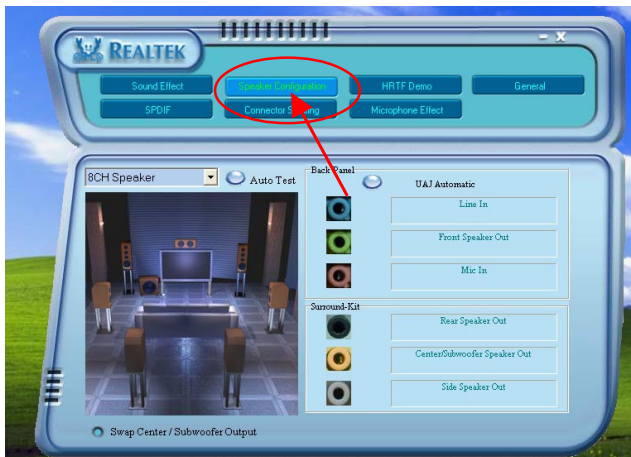


- Instantly, the "Speaker Configuration" screen will pop out. Pick the items "8-channelSpeaker" and then click on the Auto Test button. Instantly, the Speaker Auto-test starts until all speakers installed are tested.




3-5 To Install RTL8110S Gigabit Ethernet Drivers

RTL8110S Gigabit LAN driver for Windows 98/ME / 2000 / XP. After restarting system, click on the Onboard Giga LAN Driver to start setup.


1. Instantly, the InstallShield Wizard pop out. Click Next to continue.

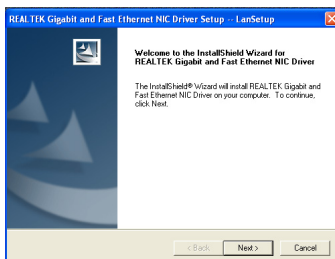

2. Next, the program starts to copy files.

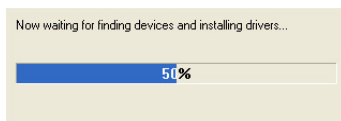

3. In a few seconds, setup completes. Restart system and complete setup.

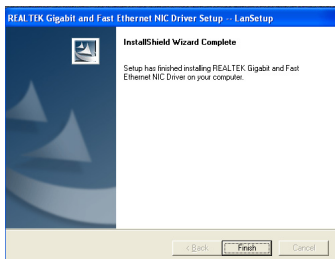


3-6 To Install Hardware Monitor Utility

3-6.1 Installation


Hardware Monitor is built on this mainboard. Its installation is programmed to a fully automated mode on Windows 9X/Me/NT4/2000/XP. Users can follow the model installation below for its installation on various Windows System.

1. Following the procedures of opening the Support CD, click to “Hardware Monitor Utility” to proceed.


2. The Soltek Hardware Monitor InstallShield Wizard will pop up to guide you to the Intel Service pack installation. Press “**Next**” button to continue.

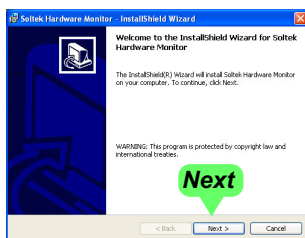

3. The **InstallShield Wizard** screen will show the current setting, please click the “**Install**” button to continue.

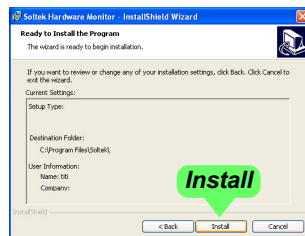

4. After all the setup process is finished, click “Finish” to exit the wizard.

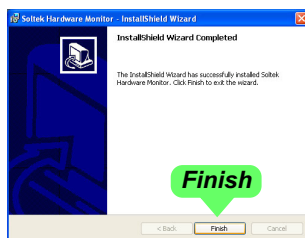

3-6.2 Verification

1. After installing Soltek Hardware Monitor, double click "SoltekHM" icon on the desktop to open the main window of the Soltek Hardware Doctor.



2. Then the pop-up screen will show all information about CPU Temperature, Fan Speed and various Voltages.

The screenshot shows the Soltek Hardware Monitor software interface. It features a futuristic, metallic-looking design with a central gauge and several data panels. Callout boxes provide the following information:


- Showing the Fan Speed(s) that is supported by the mainboard.** Points to the 'FAN TACHOMETER' section showing 'Fan 1' at 2418 RPM.
- Showing the temperature(s), the function of which is supported by the mainboard.** Points to the 'TEMPERATURE' section showing CPU Dtg at 54°C, RT1 at 42°C, and RT2 at 33°C.
- Click on "Soltek" button to display the function menu.** Points to a button with the Soltek logo and a menu that includes 'About SoltekHM', 'Help', and 'Exit'.
- Showing the Voltage(s) that is supported by the mainboard.** Points to the 'VOLTAGE' section showing CPU Voltage (1.85V), AGP Voltage (1.50V), DIMM Voltage (1.52V), 3.3V (1.26V), and 5V (1.02V).
- Status Warning LED** Points to a green LED indicator on the right side of the interface.

*Note: Not all items or functions showing in the above picture will show up. Only those items or functions that are supported by the mainboard will reveal themselves in the above screen.

3-7 To Install USB 2.0 Driver for Windows 2000/XP

USB V2.0 with its 480Mb/s transfer rate supports operating system Windows 2000 and Windows XP via the Windows 2000 and Windows XP Service Pack. For achieving Intel USB 2.0 support, users should install the latest Service Pack for Windows 2000 or Windows XP. (Intel USB 2.0 does not support Windows 9X/ME.)

1. After installation of Intel Chipset software installation Utility in Windows 2000 or Windows XP, start to install the latest Service Pack version into the operating system. The installation of the latest Service Pack will support USB2.0 in Windows 2000 or Windows XP now. (The latest Service Pack can be found in Microsoft Web Site.)
2. To verify USB2.0 installation, please enter “Device Manager” of “My Computer”. On the “Device Manager” screen, you should be able to see the item “Standard Enhanced PCI to USB Host Controller”, verifying USB2.0 Driver is installed successfully.

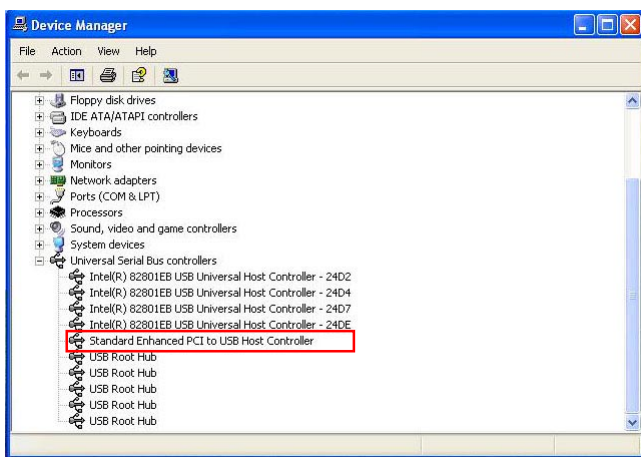

Chapter 4 AMI BIOS Setup

THE BIOS

This Chapter includes the following topics :

4-1 About BIOS Setup	44
4-2 To Run BIOS Setup	44
4-3 About CMOS	44
4-4 The POST (Power On Self Test)	44
4-5 To Update BIOS	45
4-6 BIOS SETUP --- CMOS Setup Utility	46
4-6.1 CMOS Setup Utility	46
4-6.2 Standard BIOS Features	48
4-6.3 Advanced BIOS Features	49
4-6.3.1 CPU Configuration	50
4-6.3.2 IDE Configuration	51
4-6.3.3 Floppy Configuration	53
4-6.3.4 Super IO Configuration	54
4-6.3.5 Hardware Health Monitor	55
4-6.3.6 ACPI Configuration	56
4-6.3.7. Event Log Configuration	57
4-6.3.8. PCI Express Configuration	58
4-6.3.9. USB Configuration	58
4-6.3.10. Voltage Control	59
4-6.3.11. APM Power Management	59
4-6.3.12. Soltek Performance Options	60
4-6.3.13. PCI Device Configuration	61
4-6.4 Advanced Chipset Features	62
4-6.5 PCI/PNP Resource Management	65
4-6.6 Boot Configuration Setup	66
4-6.7. Boot Security Features	69
4-6.8 Save Changes and Exit	72
4-6.9 Discard Changes and Exit	73
4-6.10 Load Optimal Defaults	73
4-6.11 Discard Changes	73

Attention: The BIOS Setup is subject to constant update without further notice to users. It is necessary for users to update the onboard BIOS by the latest BIOS version provided in our web site: www.soltek.com.tw

4-1 About BIOS Setup

BIOS stands for Basic Input and Output System. It was once called ROM BIOS when it was stored in a Read-Only Memory (ROM) chip. Now manufacturers would like to store BIOS in EEPROM which means Electrically Erasable Programmable Memory. BIOS used in this series of mainboard is stored in EEPROM, and is the first program to run when you turn on your computer.

BIOS setup is an interactive BIOS program that you need to run when:

1. Changing the hardware of your system. (For example: installing a new Hard Disk etc.)
2. Modifying the behavior of your computer. (For example: changing the system time or date, or turning special features on or off etc.)
3. Enhancing your computer's behavior. (For example: speeding up performance by turning on shadowing or cache)

4-2 To Run BIOS Setup

First access BIOS setup menu by pressing < DEL > key after "POST" is complete (before OS is loaded). BIOS will then display the following message:

```
DEL : SETUP
```

4-3 About CMOS

CMOS is the memory maintained by a battery. CMOS is used to store the BIOS settings you have selected in BIOS Setup. CMOS also maintains the internal clock. Every time you turn on your computer, the BIOS Looks into CMOS for the settings you have selected and configures your computer accordingly. If the battery runs out of power, the CMOS data will be lost and POST will issue a "CMOS invalid" or "CMOS checksum invalid" message. If this happens, you have to replace the battery and check and configure the BIOS Setup for the new start.

4-4 The POST (Power On Self Test)

POST is an acronym for Power On Self Test. This program will test all things the BIOS does before the operating system is started. Each of POST routines is assigned a POST code, a unique number which is sent to I/O port 080h before the routine is executed.

4-5 To Update BIOS

- System BIOS is incorporated into a Flash memory component. Flash BIOS allows user to upgrade BIOS without the need to replace an EPROM component.
- The Upgrade Utility can be loaded on a floppy diskette for upgrading saving, and verifying the system BIOS. The Update Utility can also be run from a hard disk drive or a network drive.
- Normally, to update BIOS is unnecessary if the system is working fine. Users should only update BIOS when incompatible problems are encountered or new features have to be added to system.

• Please follow the steps below for updating the system BIOS:

Step 1. Please visit the board maker's website, download the zip files of the latest BIOS and AMI flash utility "**afudos.exe**" for your mainboard. After unzipping, the BIOS file format will be *.ROM, of which "*" stands for the specific BIOS file name.

Step 2. Create a bootable diskette. Then copy the BIOS file and AMI flash utility "**afudos.exe**" into the diskette.

Step 3. Insert the diskette into drive A, boot your system from the diskette.

Step 4. Under "A" prompt, type "**afudos /i*.ROM**" and then press <Enter> to run BIOS update program. Please note that there should be a space and "/" between **afudos** and ***.ROM**. (*.ROM depends on your mainboard model and version code. Instead of typing "*", you should type the specific file name for your specific mainboard). For example, you may type "afudos /iMP005.rom".

Step 5. When the message "Flash ROM Update Completed - Pass." appears, please restart your system.

Step 6. You will see a message "CMOS Memory Size Wrong" during booting the system. Press or <F1> to run CMOS setup utility, then reload "Load Failsafe Defaults" or "**Load Optimal Defaults**" and save this change.

4-6 BIOS SETUP --- CMOS Setup Utility

4-6.1 CMOS Setup Utility

This mainboard comes with the AMI BIOS from American Megatrends Inc. Enter the CMOS Setup Utility Main Menu by:

1. Turn on or reboot your system. After a series of diagnostic checks, the following message will appear:

PRESS TO RUN SETUP

2. Press the key and the main program screen will appear as follows.

CMOS Setup Utility - Copyright (C) 1985-2002, American Megatrends, Inc.

<ul style="list-style-type: none"> ▶ Standard BIOS Features ▶ Advanced BIOS Features ▶ Advanced Chipset Features ▶ PCI/PNP Resource Management ▶ Boot Configuration Setup 	<ul style="list-style-type: none"> ▶ BIOS Security Features Save Changes and Exit Discard Changes and Exit Load Optimal Defaults Discard Changes
↑↓←→ : Move Enter : Select +/- : Values F10: Save Esc: Exit F1: General Help F7 : Previous Values F8 : Fail-Safe Defaults F9: Optimize Defaults	
Configure Time and Date. Display System Information ...	

3. Use the arrow keys on your keyboard to select an option, and press <Enter>. Modify the system parameters to reflect the options installed in your system.
4. You may return to the Main Menu anytime by pressing <Esc>.
5. In the Main Menu, "Save Changes and Exit" saves your changes and reboots the system, and "Discard Changes and Exit" ignores your changes and exits the program.

6. In entering the Main option of the Main Menu, please use the functions in the Function List to configure the setting:

↑↓←→ : Move Enter : Select +/- : Values F10: Save Esc: Exit F1: General Help
F7 : Previous Values F8 : Fail-Safe Defaults F9: Optimized Defaults

Use [Enter], [Tab] or [Shift-Tab] to select a field.

Use [+] or [-] to choose the options.

<F1>: "General Help" provides explanations of the hot-key functions available.

<F7>: "Previous values" allows user to discard previous values or not.

<F8>: "Fail-safe defaults" allows user to load Fail-safe Defaults or not. Save and Exit Setup.

<F9>: "Optimized Defaults" allows user to load Optimal Defaults or not.

Attention: The BIOS Setup is subject to constant update without further notice to users. It is necessary for users to update the onboard BIOS by the latest BIOS version provided in our web site: www.soltek.com.tw

4-6.2 Standard BIOS Features

“Standard BIOS Features” allows users to configure Time and Date. This menu also displays system information.

Run the Standard BIOS Features as follows:

Choose “Standard BIOS Features” from the Main Menu and press <Enter>. The following screen will appear:

**CMOS Setup Utility - Copyright (C) 1985-2002, American Megatrends, Inc.
Standard BIOS Features**

System Overview	Help Item
<p>AMIBIOS Version : 08.00.09 Build Date : 12/03/03 ID : 1ABRQ011</p> <p>Processor Type : Intel(R) Pentium(R) 4 CPU 1500MHz Speed : 1500MHz Count : 1</p> <p>System Memory Size : 256MB</p> <p>System Time 00 : 19 : 29 System Date Thu 12/04/2003</p>	<p>Use [Enter], [Tab] or [Shift-Tab] to select a field.</p> <p>Use [+] or [-] to configure system Time.</p>

↑↓←→ : Move Enter : Select +/- : Values F10: Save Esc: Exit F1: General Help
F7 : Previous Values F8 : Fail-Safe Defaults F9: Optimized Defaults

AMIBIOS/Processor/System memory

These three items only show the respective current statuses. They cannot be changed in the BIOS Setup.

System Time

The BIOS shows the time of the day in the format: hh:mm:ss. Choose the field with the Arrow keys and change the time with the Page Up/Page Down +/- keys.

System Date

The BIOS shows the date of the day in the format: mm:dd:yy :day of the Week. Choose the field with the Arrow keys and change the value with the Page Up/Page Down +/- keys.

4-6.3 Advanced BIOS Features

Advanced BIOS Features allows user to configure HDD, Floppy, Serial Port, Parallel Port etc....

Run the Advanced BIOS Features as follows:

Choose "Advanced BIOS Features" from the Main Menu and a screen with a list of options will appear:

**CMOS Setup Utility - Copyright (C) 1985-2002, American Megatrends, Inc.
Advanced BIOS Features**

Advanced Settings	Help Item
<p>Warning: Setting wrong values in below sections may cause system to malfunction.</p>	
<ul style="list-style-type: none"> ▶ CPU Configuration ▶ IDE Configuration ▶ Floppy Configuration ▶ SuperIO Configuration ▶ Hardware Health Monitor ▶ ACPI Configuration ▶ Event Log Configuration ▶ PCI Express Configuration ▶ USB Configuration ▶ Voltage Control ▶ APM Power Management ▶ Soltex Performance Options ▶ PCI Device Configuration 	<ul style="list-style-type: none"> Press Enter Press Enter Press Enter Press Enter Press Enter Press Enter Press Enter Press Enter Press Enter Press Enter Press Enter Press Enter Press Enter

↑↓←→ : Move Enter : Select +/- : Values F10: Save Esc: Exit F1: General Help
 F7 : Previous Values F8 : Fail-Safe Defaults F9: Optimized Defaults

4-6.3.1 CPU Configuration

Choose “CPU Configuration” in “Advanced BIOS Features” and press <Enter>. The following sub-screen will appear for configuration:

CPU Configuration

Configure advanced CPU settings Module Version - 3C.04	Help Item
Manufacturer : Intel Brand String : Intel(R) Pentium (R) 4 CPU 1500MHz Frequency : 1500MHz FSB Speed : 400MHz Cache L1 :16KB Cache L2 :1024KB Ratio Status: Locked Ratio Actual Value 15 Max CPUID Value Limit Disabled Hardware Prefetcher Enabled Adjacent Cache Line Prefetch Enabled Hyper Threading Technology Enabled	

Module Version

BIOS shows the current Module Version.

Manufacturer

BIOS shows the current manufacturer of on-board CPU.

Brand String

BIOS shows the current brand of on-board CPU.

Frequency

BIOS shows the current on-board CPU frequency.

FSB Speed

BIOS shows the current Front Side Bus of the on-board CPU.

Cache L1/L2

BIOS shows the actual CPU internal Level 1/2/3 cache size.

Ratio Status

BIOS shows the current ratio (multiplier) status of on-board CPU. For P4 CPUs, the ratio is usually locked.

Ratio Actual Value

BIOS shows the actual CPU ratio.

Max CPUID Value Limit

To enable/disable the Max CPU ID Value Limit.

Hardware Prefetcher

To enable/disable the hardware prefetcher.

Adjacent Cache Line Prefetch

To enable/disable the Adjacent Cache Line Prefetch.

Hyper Threading Technology

BIOS shows the current status of Hyper Threading Technology. If a Hyper Threading CPU is running on board, this item will show “Enabled” status. If a Hyper-threading CPU is not on-board, this item shows “Disabled”.

4-6.3.2 IDE Configuration

Choose "IDE Configuration" in "Advanced BIOS Features" and press <Enter>. The following sub-screen will appear for IDE Devices configuration:

IDE Configuration		Help Item
ATA/IDE Configuration	Enhanced	
Configure SATA as	IDE	
▶ Primary IDE Master	Hard Disk	
▶ Primary IDE Slave	ATAPI CDROM	
▶ Secondary IDE Master	Not Detected	
▶ Secondary IDE Slave	Not Detected	
▶ Third IDE Master	Not Detected	
▶ Third IDE Slave	Not Detected	
Hard Disk Write Protect	Disabled	
IDE Detect Time Out (Sec)	35	
ATA(P) 80Pin Cable Detection	Host & Device	
S-ATA Detection Delay	Enabled	

4-6.3.2-1 IDE Configuration

ATA/IDE Configuration

Allows you to configure IDE device mode.

Choices: Disabled; Compatible; Enhanced

Disabled: If disabled, no Primary/Secondary IDE mode will be presented for configuration.

Compatible: If Compatible selected, Legacy IDE Channels will be presented for configuration.

Legacy IDE Channels:

This item allows you to select the onboard IDE mode.

Choices: SATA only: Pri IDE Master SATA0
Pri IDE Slave SATA2
Sec IDE Master SATA1
Sec IDE Slave SATA3

PATA Pri, SATA Secondary:
PATA Master
PATA Slave
SATA Master (SATA3)
SATA Slave (SATA3)

SATA Pri, PATA Secondary:
SATA Master (SATA0)
SATA Slave (SATA2)
PATA MASTER
PATA SLAVE

PATA only: No SATA can be set up.

Enhanced: If Enhanced selected, Configure SATA as mode will be presented for configuration.

Configure SATA As:

This item allows you to configure SATA mode

Choices: IDE

4-6.3.2-2 Primary/Secondary IDE Master/Slave and Third IDE Master/Slave

▶ Primary IDE Master	Hard Disk
▶ Primary IDE Slave	ATAPI CDROM
▶ Secondary IDE Master	Not Detected
▶ Secondary IDE Slave	Not Detected
▶ Third IDE Master	Not Detected
▶ Third IDE Slave	Not Detected

If any IDE device is detected in any one of the above items press <Enter> to reveal the IDE information:

Primary/Secondary/Third IDE Master/(Slave)

Primary/Secondary/Third IDE Master/Slave	Help Item											
Device : Hard Disk Vendor : WDC WD400BB-00DEA0 Size : 40.0GB LBA Mode : Supported Block Mode : 16Sectors PIO Mode : 4 Async DMA : MultiWord DMA-2 Ultra DMA : Ultra DMA-5 S.M.A.R.T. : Supported	Select the type of device connected to the system.											
<table border="0"> <tr> <td>Type</td> <td>Auto</td> </tr> <tr> <td>LBA/Large mode</td> <td>Auto</td> </tr> <tr> <td>Block (Multi-Sector Transfer)</td> <td>Auto</td> </tr> <tr> <td>PIO Mode</td> <td>Auto</td> </tr> <tr> <td>S.M.A.R.T.</td> <td>Auto</td> </tr> <tr> <td>32Bit Data Transfer</td> <td>Disabled</td> </tr> </table>		Type	Auto	LBA/Large mode	Auto	Block (Multi-Sector Transfer)	Auto	PIO Mode	Auto	S.M.A.R.T.	Auto	32Bit Data Transfer
Type	Auto											
LBA/Large mode	Auto											
Block (Multi-Sector Transfer)	Auto											
PIO Mode	Auto											
S.M.A.R.T.	Auto											
32Bit Data Transfer	Disabled											

Type

To select the types of the IDE devices:
 Not Installed;
 Auto: Setting type automatically
 CD-ROM: ATAPI (Packet Interface) CD-ROM drive
 ARMD: ATAPI Removable Media Device

LBA/Large mode

To select or disable LBA/Large mode.

Block (Multi-Sector Transfer)

To select or disable Block Mode. The data transfer from and to the device occurs one sector or multiple sectors at a time.

PIO Mode

To select or disable PIO Mode.
 Choices: Disabled; 1, 2, 3, 4

DMA Mode

To select DMA Mode.
 Choices: Auto; SWDMA; MWDMA; UDMA

S.M.A.R.T

Allows you to enable / disable the Self Monitoring Analysis and Reporting Technology for the hard disk.

32Bit Data Transfer

To auto-select (default) or disable 32Bit Data Transfer.

4-6.3.2-3 Hard Disk Write Protect

Hard Disk Write Protect

Allows you to Enabled / Disable(default) Hard Disk Write Protection

4-6.3.2-4 IDE Detect Time Out

IDE Detect Time Out(Sec)

Allows you to set time out for IDE Detection.

Choices: 0 - 35 seconds in 5 seconds stepping

4-6.3.2-5 ATA(P) 80Pin Cable Detection

ATA(PI) 80Pin Cable Detection

Allows you to select ATA(PI) devices for 80Pin Cable Detection. To set Host & Device allows onboard IDE controller and IDE disk drive to detect the type of IDE cable used.

Choices: Host & Device, Host, Device

4-6.3.2-6 S-ATA Detection Delay

S-ATA Detection Delay

Allows you to enable/disable the S-ATA Detection Delay function. Detection.

Choices: Enabled; Disabled

4-6.3.3 Floppy Configuration

Choose "Floppy Configuration" in "Advanced BIOS Features" and press <Enter>. The following sub-screen will appear for configuration:

Floppy Configuration

Floppy Configuration		Help Item
Floppy A	1.44 MB 3.5 in	Select the type of floppy drive connected to the system.
Floppy B	Disabled	

Floppy A/B

Press Enter on "Floppy A/B" will let you select this field to the types of floppy disk drives installed in your system.

The choices are: 360KB 5.25 in.; 1.2MB, 5.25 in.
720KB, 3.5 in.; 1.44MB, 3.5 in.
2.88MB, 3.5 in.; Disabled

4-6.3.4 Super IO Configuration

Choose "SuperIO Configuration" in "Advanced BIOS Features" and press <Enter>. The following sub-screen will appear for configuration:

SuperIO Configuration

Configure ITE8712 Super IO Chipset	Help Item
OnBoard Floppy Controller	Enabled
Floppy Drive Swap	Disabled
Serial Port1 Address	3F8/IRQ4
Serial Port1 Mode	Normal
Parallel Port Address	378
Parallel Port Mode	Normal
Parallel Port IRQ	IRQ7
OnBoard CIR Port	Disabled

OnBoard Floppy Controller

Allows you to enable / disable the Onboard Floppy Controller.
Choices: Enabled; Disabled

Floppy Drive Swap

Allows you to enable / disable the Floppy Drive Swap function..
Choices: Enabled; Disabled

Serial Port1 Address

Allows you to set the Onboard Serial Port1/2 Address.
Choices: Disabled; 2E8/IRQ3; 3F8/IRQ4; 3E8/IRQ4;

Serial Port 1 Mode

If Serial Port1 Address is not disabled, it allows you to set the Serial Port1 Mode. Choices:

- Normal;
- IrDA: Providing 2 items for configuration:
 - IR I/O Pin Select: SINB/SOUTB; IRRX/IRTX
 - IR Duplex Mode: Half Duplex; Full Duplex
- ASK IR: Providing 2 items for configuration:
 - IR I/O Pin Select: SINB/SOUTB; IRRX/IRTX
 - IR Duplex Mode: Half Duplex; Full Duplex

CIR Port IRQ

Allows you to set the onboard CIR Port IRQ for 2E0 or 3E0.
Choices: IRQ3; IRQ4; IRQ9; IRQ10; IRQ11

Parallel Port Address

Allows you to configure Parallel Port Address.
Choices: Disabled; 378; 278; 3BC;

- Disabled: To disable this function;
- 378: 2 items to configure for address 378:
 - Parallel Port Mode:
 - Normal;
 - Bi-Directional;
 - EPP:
 - EPP Version: 1.9; 1.7
 - ECP:
 - ECP Mode DMA Channel: DMA0; DMA1; DMA3
- Parallel Port IRQ: IRQ5; IRQ7

OnBoard CIR Port

Allows you to set the onboard CIR Port.
Choices: Disabled; 2E0; 3E0

4-6.3.5 Hardware Health Monitor

Choose “Hardware Health Configuration” in “Advanced BIOS Features” and press <Enter>. The following sub-screen will appear for configuration:

Hardware Health Monitor		Help Item
System Temperature	: 34°C/93°F	Enables Hardware Health Monitoring Device.
CPU Temperature	: 45°C/113°F	
CPU Fan Speed	: 3125 RPM	
System Fan2 Speed	: 3169 RPM	
System Fan3 Speed	: N/A	
CPU Voltage	: 1.360 V	
DIMM Voltage	: 2.576 V	
+3.30V	: 3.258 V	
Vcc5	: 5.094V	
+12.0V	: 12.074 V	
Vcc1.5	: 1.504 V	
5VSB	: 5.088 V	
Vbat	: 3.136 V	
CPU Fan Speed Control	Automatic Mode	
CPU Fan PWM	2PWM	

System Temperature Shows current system temperature.

CPU Temperature Shows current CPU internal temperature.

CPU Fan /System Fan2/System Fan3 Speed Displaying the current speed of Chassis/CPU/Power Fan.

CPU Voltage/DIMM Voltage Showing CPU / DIMM voltage value.

3.3V/Vcc5/+12V/Vcc1.5 /5VSB/Battery Showing current voltage against the 3.3V/+12V/Vcc1.5V/5VSB/Battery power supply.

CPU Fan Speed Control To select CPU Fan Speed Control mode. Choices: Automatic mode; Silent mode; Enhance mode; maximum mode

CPU Fan PWM To select size of CPU Fan PWM. Choices: 2PWM; 4PWM; 8PWM; 16PWM; 32PWM; 64PWM

4-6.3.6 ACPI Configuration

Choose “ACPI Configuration” in “Advanced BIOS Features” and press <Enter>. The following sub-screen will appear for ACPI configuration:

ACPI Configuration

ACPI Settings	Help Item
▶ General ACPI Configuration	Press Enter
▶ Advanced ACPI Configuration	Press Enter
▶ Chipset ACPI Configuration	Press Enter

▶ General ACPI Configuration:

Press< Enter > on General ACPI Configuration to reveal following items.

Suspend mode

This item allows you to select the Suspend mode. You can select S3(STR) for suspending to DRAM if your system supports this mode. Or you can select S1 (POS) for Power on Suspend under ACPI mode.

Choices: S1(POS); S3(STR)(Optional); Auto

(Optional) Repost Video on S3 Resume

If STR mode or Auto mode is selected, this item allows you to enable / disable this function. Choices: Yes; No

▶ Advanced ACPI Configuration:

Press< Enter > on Advanced ACPI Configuration to reveal following.

ACPI 2.0 Features

To enable / disable ACPI (Advanced Configuration and Power Interface) 2.0 Support function. Choices: Yes; No

ACPI APIC Support

Allows you to enable / disable ACPI APIC (Advanced Programmable Interrupt Controller) Support function.

AMI OEMB table

To include AMI OEMB table pointer to R(X) SDT pointer lists.

Headless mode

To enable / disable Headless operation mode through ACPI.

▶ Chipset ACPI Configuration:

Press< Enter > on Chipset ACPI Configuration to reveal following.

APIC ACPI SCI IRQ

To enable / disable APIC ACPI SCI IRQ.

(Optional) USB Device Wakeup From S3/S4

This item allows you to enable / disable the USB device Wakeup function from S3/S4 mode.

4-6.3.7. Event Log Configuration

Choose “Event Log Configuration” in “Advanced BIOS Features” and press <Enter>. The following sub-screen will appear for configuration:

Event Log Configuration		Help Item
Event Logging details		
View Event Log	Press Enter	
Mark all events as read	Press Enter	
Clear Event Log	Press Enter	
Event Log Statistics	Press Enter	

View Event Log

To press Enter to reveal the Event Log. For Example:

01/02/02 03:05:16 Keyboard not functional

Mark all events as read

Press Enter to mark up all events as read. Example:

Mark all events as read now?	
[OK]	[Cancel]

Clear Event Log

Press Enter to clear event log.

Clear Event Log now?	
[OK]	[Cancel]

Event Log Statistics

Press Enter to reveal Event Log Statistics.

Event Log Statistics	
Total size (in events)	63
Free size (in events)	63
unread events	00

4-6.3.8. PCI Express Configuration

Choose “PCI Express Configuration” in “Advanced BIOS Features” and press <Enter>. The following sub-screen will appear for configuration:

PCI Express Configuration		Help Item
<hr/> PCI Express Configuration		
Active State Power management	Disabled	

Active State Power Management

To enable / disable Active State Power Management.

4-6.3.9. USB Configuration

Choose “USB Configuration” in “Advanced BIOS Features” and press <Enter>. The following sub-screen will appear for configuration:

USB Configuration		Help Item
<hr/> USB Configuration		
Module Version - 2.23.2-9.4		Enable USB host controllers.
USB Devices Enabled : None		
USB Function	8 USB Ports	
Legacy USB Support	Enabled	
USB 2.0 Controller	Enabled	
USB 2.0 Controller Mode	HiSpeed	

USB Function

Allows you to set the USB Function on the USB port(s).
Choices: 8 USB Ports; Disabled

Legacy USB Support

Allows you to enable / disable the Legacy USB support.

USB 2.0 Controller

Allows you to enable/ disable the USB 2.0 Controller.

USB 2.0 Controller Mode

Allows you to configure the USB 2.0 Controller Mode.
Choices: FullSpeed; HiSpeed.

4-6.3.10. Voltage Control

Choose “Voltage Control” in “Advanced BIOS Features” and press <Enter>. The following sub-screen will appear for configuration:

Voltage Control		Help Item
Voltage Configuration		
Core Voltage Control	1.5V	
DIMM Voltage Control	2.6V	
CPU Voltage Control	Auto	

Core Voltage Control

Allows you to configure the chipset core Voltage.
Choices: 1.5V; 1.6V; 1.7V; 1.8V

DIMM Voltage Control

Allows you to configure the DIMM Voltage.
Choices: 2.6V; 2.7V; 2.8V; 2.9V

CPU Voltage Control

Allows you to configure the CPU Voltage. Usually, to raise CPU voltage will raise the chance of CPU overclocking and yet risk damage of CPU.
Choices: Auto; 0.8500V ~1.6000V in 0.0125V stepping

4-6.3.11. APM Power Management

Choose “APM Power Management” in “Advanced BIOS Features” and press <Enter>. The following items will appear for onfiguration:

CMOS Setup Utility - Copyright (C) 1985-2002, American Megatrends, Inc.

APM Power Management

APM Configuration		Help Item
Power Management/APM	Enabled	Enable or disable APM.
Video Power Down Mode	Suspend	
Hard Disk Power Down Mode	Suspend	
Standby Time Out	Disabled	
Suspend Time Out	Disabled	
Keyboard & PS/2 Mouse	Monitor	
FDC/LPT/COM Ports	Monitor	
Primary Master IDE	Monitor	
Primary Slave IDE	Monitor	
Secondary Master IDE	Monitor	
Secondary Slave IDE	Monitor	
Power Button Mode	On/Off	
Resume On Ring	Disabled	
Resume On LAN	Disabled	
Resume On PME#	Disabled	
Resume On RTC Alarm	Disabled	

Power Management/APM

Allows you to enable / disable APM (Advanced Power Management).

Video Power Down Mode

To power down video to Suspend or Standby mode.

Choices: Disabled; Suspend; Standby

Hard Disk Power Down Mode

To power down Hard Disk to Suspend or Standby mode.

Choices: Disabled; Suspend; Standby

Standby Time Out

This item allows you to select the time for Standby Time Out mode..

Choices: Disabled; 1 min; 2 min; 4 min; 8 min; 10 min; 20 min; 30 min; 40 min; 50 min; 60 min

Suspend Time Out

This item allows you to select the time for Suspend Time Out mode..

Choices: Disabled; 1 min; 2 min; 4 min; 8 min; 10 min; 20 min; 30 min; 40 min; 50 min; 60 min

Keyboard & PS/2 Mouse

To ignore or monitor the Keyboard & PS/2 Mouse with Power Management/APM.

Choices: Ignore; Monitor

FDC/LPT/COM Ports

To ignore or monitor the FDC/LPT/COM ports with Power Management/APM.

Choices: Ignore; Monitor

Primary Master/Slave IDE

To ignore or monitor the Primary Master/Slave IDE with Power Management/APM.

Choices: Ignore; Monitor

Secondary Master/Slave IDE

To ignore or monitor the Secondary Master/Slave IDE with Power Management/APM.

Choices: Ignore; Monitor

Power Button Mode

To select the Power Button function.

Choice: On/Off; Suspend

Resume On Ring / LAN / PME# / RTC Alarm

To enable / disable the Resume on Ring / LAN / PME# / RTC(Real time Clock) alarm.

Choices:Disabled; Enabled

4-6.3.12. Soltek Performance Options

Choose "Soltek Performance Options" in "Advanced BIOS Features" and press <Enter>. The following sub-screen will appear for configuration:

Soltek Performance Options

Soltek Performance Configuration		Help Item
CPU FSB Selection	Auto	
CPU Linear Frequency	Enabled	
CPU Clock	200MHz	
Smart Acceleration Technology(optional)	Disabled	

CPU FSB Selection

This item allows you to select CPU Front Side Bus.
 Choices: Auto (Auto-selection); 133MHz; 200MHz

CPU Linear Frequency

To enable / disable CPU Linear Frequency adjustment.
 Choices: Enabled; Disabled;

CPU Clock

If CPU Linear Frequency is enabled, this item "CPU Clock" will appear to allow you to adjust (with "+/-" key) CPU clock in linear format.
 Choices: 200 ~350 MHz in 1MHz stepping

Smart Acceleration Technology (optional)

If CPU Linear Frequency is disabled, this item "Smart Acceleration Technology" will appear to allow you to enable the CPU dynamic overclocking. If enabled, a running CPU onboard will dynamically (automatically) adjust its own CPU performance during necessary or appropriate conditions.

Choices: Disabled;
 Enhanced Mode;
 Performance Mode;
 Maximum Mode

4-6.3.13. PCI Device Configuration

Choose "PCI Device Configuration" in "Advanced BIOS Features" and press <Enter>. The following sub-screen will appear for configuration:

PCI Device Configuration

PCI Device management Options	Help Item
PCI Auto Detection feature	Enabled
ClockGen Spread Spectrum	Disabled
GiGa LAN	Enabled

PCI Auto Detection feature

To enable / disable the PCI auto-detection feature.
 Choices: Enabled; Disabled

ClkGen Spread Spectrum

To set the Clock Generation Spread Spectrum.
 Choices: Disabled; -0.25%; -0.50%; 0.125%; 0.250%; 0.375%; 0.500%; 0.750%

Giga LAN

To enable / disable the Gigabit LAN interface.

4-6.4 Advanced Chipset Features

Advanced Chipset Features is used to modify the values of chipset buffers. These buffers control the system options.

Run the Advanced Chipset Features as follows:

Choose “Advanced Chipset Features” from the Main Menu and a list of option will appear:

**CMOS Setup Utility - Copyright (C) 1985-2002, American Megatrends, Inc.
Advanced Chipset Features**

Advanced Chipset Settings	Help Item
<p>Warning: Setting wrong values in below sections may cause system to malfunction.</p> <p>▶ NorthBridge Configuration Press Enter ▶ SouthBridge Configuration Press Enter</p>	Options for NBEnable USB host controllers.

↑↓←→ : Move Enter : Select +/- : Values F10: Save Esc: Exit F1: General Help
 F7 : Previous Values F8 : Fail-Safe Defaults F9: Optimized Defaults

4-6.4.1 NorthBridge Configuration

Choose “NorthBridge Configuration” in “Advanced Chipset Features” and press <Enter>. The following sub-screen will appear for configuration:

North Bridge Configuration

North Bridge Chipset Configuration	Help Item
DRAM Frequency Auto	
Configure DRAM Timing by SPD Enabled	
Memory Hole Disabled	
Boots Graphic Adapter Priority PEG/PCI	
Aperture Size Select 256MB	
PEG Port Configuration	
PEG Port Enabled	
PEG Port VC1/Map Enabled/TC7	
PEG Force x1 Disabled	

DRAM Frequency

Allows you to set the current SDRAM frequency.
Choices: Auto; 333MHz; 400MHz

Configure SDRAM Timing by SPD

SPD (Serial presence detect) is a device in memory module for storing the module information such as DRAM timing and chip parameters. If this option is enabled, BIOS will access SPD automatically to configure module timing. If disabled, the following items will appear for user's configuration:

DRAM CAS# Latency

With SDRAM Timing by SPD disabled, you can select the SDRAM CAS# (Column Address Strobe) latency manually.

Choices: 2 Clocks; 2.5 Clocks; 3 Clocks

DRAM RAS# to CAS# Delay

With SDRAM Timing by SPD disabled, you can select the SDRAM RAS# to CAS# delay cycle manually.

Choices: 2 DRAM Clocks; 3 DRAM Clocks; 4 DRAM Clocks; 5 DRAM Clocks

DRAM RAS# Precharge

With SDRAM Timing by SPD disabled, you can select the SDRAM RAS# (Row Address Strobe) Precharge cycle manually.

Choices: 2 Clocks; 3 Clocks; 4 Clocks; 5 Clocks

DRAM RAS# Activate to Prec

Allows you to set the DRAM RAS Activate to Precharge cycle.

Choices: 4 Clocks ~15 Clocks with 1 clock stepping

Memory Hole

Allows you to enable / disable (default) the support of Memory Hole which is reserved for ISA card.

Choices: Disabled; 15MB-16MB

Boots Graphic Adapter Priority

Select which graphics controller to use as the primary boot device.

Choices: IGD; PEG(PCI Express Graphics)/IGD; PEG/PCI; PCI/PEG; PCI/IGD

Aperture Size Select

To select the Aperture size of the Graphics adapter.

Choices: 256MB; 128MB

PEG(PCI Express Graphics) Port Configuration:**PEG Port**

To enable / disable the PEG port.

PEG Port VC1/Map

To select / disable the PEG Port VC1/Map.

Choices: Disabled; Enabled/TC1; Enabled/TC2; Enabled/TC3; Enabled/TC4; Enabled/TC5; Enabled/TC6; Enabled/TC7

PEG Force x1

To enable / disable PEG Force x1

4-6.4.2 SouthBridge Configuration

1. Choose "SouthBridge Configuration" in "Advanced Chipset Features" and press <Enter>. The following sub-screen will appear for configuration:

SouthBridge Configuration		Help Item
Audio Codec	Auto	
PRO-NIC Controller	Enabled	
SMBUS Controller	Enabled	
CHAP Controller	Disabled	
Reserved Page Route	LPC	
SLP_S4# Min. Assertion Width	2 to 3 seconds	
Restore on AC Power Loss	Power Off	
PCI-EX Ports Configuration		
PCI Express Port 1	Enabled	
PCI Express Port 2	Enabled	
PCI Express Port 3	Enabled	
VC1 for Azalia & Root Ports	Disabled	

Audio Codec

To select Audio Codec on board.
Choices: All Disabled; Auto

PRO-NIC Controller

To enable / disable PRO-NIC Controller.

SMBUS Controller

To enable / disable SMBUS Controller.

CHAP Controller

To enable / disable the CHAP Controller

Reserved Page Route

To select the reserved Page route.
Choices: PCI; LPC

SLP_S4# Min. Assertion Width

To select the SLP_S4# Min. Assertion Width.
Choices: 4 to 5 seconds; 3 to 4 seconds; 2 to 3 seconds; 1 to 2 seconds

Restore on AC Power Loss

To select the Restore on AC Power Loss mode.
Choices: Power Off; Power On; Last State

PCI EX Ports Configuration:

PCI Express Port 1/2/3/4

To enable / disable the PEG Port 1/2/3/4.

VC1 for Azalia & Root Ports

To enable / disable VC1 for Azalia & Root Ports.

4-6.5 PCI/PNP Resource Management

PCI/PNP Resource Management allows you to modify the system's power saving functions.

Choose "PCI/PNP Resource Management" from the Main Menu and a screen with a list of options will appear:

CMOS Setup Utility - Copyright (C) 1985-2002, American Megatrends, Inc.
PCI/PNP Resource Management

Advanced PCI/PNP Settings	Help Item
Warning: Setting wrong values in below sections may cause system to malfunction.	
Clear NVRAM	No
Plug & Play O/S	No
PCI Latency Timer	64
Allocate IRQ to PCI VGA	Yes
Palette Snooping	Disabled
PCI IDE BusMaster	Enabled
OnBoard PCI/ISA IDE Card	Auto
IRQ3	Available
IRQ4	Available
IRQ5	Available
IRQ7	Available
IRQ9	Available
IRQ10	Available
IRQ11	Available
IRQ14	Available
IRQ15	Available
DMA Channel 0	Available
DMA Channel 1	Available
DMA Channel 3	Available
DMA Channel 5	Available
DMA Channel 6	Available
DMA Channel 7	Available
Reserved Memory Size	Disabled

↑↓←→ : Move Enter : Select +/- : Values F10: Save Esc: Exit F1: General Help
 F7 : Previous Values F8 : Fail-Safe Defaults F9: Optimized Defaults

Clear NVRAM

To select the Clear NVRAM during system boot.
 Choices: No; Yes

Plug & Play O/S

Allows you to configure the PNP devices by BIOS or O/S.
 Choices: No; Yes

PCI Latency Timer (PCI Clocks)

Allows you to set the PCI Latency Time.
 Choices: 32; 64; 96;128; 160; 192; 224; 248;

Allocate IRQ to PCI VGA

Allows you to assign IRQ to PCI VGA card if card requests IRQ.
 Choices: Yes; No

Palette Snooping

This option allows the BIOS to preview VGA status, and to modify the information delivered from the feature Connector of the VGA card to MPEG card. This option can solve the display inversion to black after you have used a MPEG card.

PCI IDE BusMaster

Allows you to enable / disable(default) the PCI IDE Bus Master function.

OffBoard PCI/ISA IDE Card

Some PCI IDE cards may require this to be set to the PCI slot number that is holding the card.

Choices: Auto; PCI Slot1; PCI Slot2;

IRQ 3/4/5/7/9/10/11/14/15

Allows you to specify available IRQs to be used by PCI/PNP devices.

Choices: Available(default); Reserved

DMA 0/1/3/5/6/7

Allows you to specify available DMAs to be used by PCI/PNP devices.

Choices: Available(default); Reserved

Reserved Memory Size

Allows you to specify memory size to reserve for legacy ISA devices.

Choices: Disabled(default); 16K; 32K; 64K

4-6.6 Boot Configuration Setup

Boot Configuration Setup allows you to modify the system's boot settings.

Choose "Boot Configuration Setup" from the Main Menu and a screen with a list of options will appear:

CMOS Setup Utility - Copyright (C) 1985-2002, American Megatrends, Inc.

Boot Configuration Setup

Boot Settings	Help Item
▶ Boot Setting Configuration	Configure Settings during System Boot.
▶ Boot Device Priority	
▶ Removable Drives	

↑↓←→ : Move Enter : Select +/- : Values F10: Save Esc: Exit F1: General Help
 F7 : Previous Values F8 : Fail-Safe Defaults F9: Optimized Defaults

4-6.6.1 Boot Settings Configuration

Choose "Boot Settings Configuration" in "Boot Configuration Setup" and press <Enter>. The following items will appear for onfiguration:

Boot Configuration Setup		Help Item
Boot Settings		
Quick Boot	Enabled	
Quiet Boot	Disabled	
AddOn ROM Display Mode	Force BIOS	
Bootup Num-Lock	On	
PS/2 Mouse Support	Auto	
Wait For 'F1' If Error	Enabled	
Hit 'DEL' Message Display	Enabled	
Interrupt 19 Capture	Disabled	

Quick Boot

Allows you to enable (default)/ disable quick boot of your system. If enabled, BIOS will skip certain tests while booting. This will decrease the time needed to boot the system.

Quiet Boot

The bootup screen displays normal POST messages with Disabled selected; the bootup screen displays OEM Logo instead of POST messages with Enabled selected.

Choices: Enabled; Disabled

AddOn ROM Display Mode

If "Force BIOS" is chosen, the vendor's logo screen will be followed by the "AddOn ROM" initial screen (the screen showing the add-on card BIOS message). If "Keep Current" is chosen, no "Add-On ROM" screen is followed.

Choices: Force BIOS; Keep Current

Bootup Num-lock

Allows you to toggle key between On or Off to control the state of the NumLock keys when the system boots. If On, the numeric keypad is in numeric mode. If off, the numeric keypad is in cursor control mode.

PS/2 Mouse Support

Enabled (default), PS/2 mouse is supported. Disabled, PS/2 Mouse is not supported. If "Auto" is set, the system will auto detect the PS/2 Mouse.

Wait For 'F1' If Error

Allows you to hit F1 key when errors occur.

Choices: Enabled(default); Disabled

Hit 'DEL' Message Display

The system will show "Press DEL key to run Setup when enabled.

Choices: Enabled(default); Disabled

Interrupt 19 Capture

Allows option ROMs to trap interrupt 19.

Choices: Enabled; Disabled(default)

4-6.6.2 Boot Device Priority

Choose "Boot Device Priority" in "Boot Configuration Setup" and press <Enter>. The bootable devices installed on board will appear and are allowed to assign the Boot Priority.

Boot Device Priority

Boot Device Priority	Help Item
1st Boot Device 2nd Boot Device	1st FLOPPY DRIVE PM-WDC WD400BB-00

1st/2nd Boot Device

Allows you to set (by pressing <Enter>) floppy or IDE devices already installed to be the 1st/2nd/3rd boot device.
Choices: Disabled; Device(s) installed

4-6.6.3 Removable Drives

Choose "Boot Device Priority" in "Boot Configuration Setup" and press <Enter>.

Removable Drives

Removable Drives	Help Item
1st Drive	1st FLOPPY DRIVE

1st Drive

Allows you to set (by pressing <Enter>) floppy as 1st removable drive.
Choices: Disabled; 1st Floppy Drive.

4-6.7. Boot Security Features

Boot Security Features allows you to modify the system's boot security settings.

Choose "Boot Security Features" from the Main Menu and a screen with a list of options will appear:

CMOS Setup Utility - Copyright (C) 1985-2002, American Megatrends, Inc. Boot Security Features

Security Settings	Help Item
Supervisor Password : Not Installed User Password : Not Installed	Install or Change the password.
Change Supervisor Password Press Enter	
Change User Password Press Enter	
Clear User Password Press Enter	
Boot Sector Virus Protection Disabled	

↑↓←→ : Move Enter : Select +/- : Values F10: Save Esc: Exit F1: General Help
F7 : Previous Values F8 : Fail-Safe Defaults F9: Optimized Defaults

4-6.7.1. Supervisor Password

To show the status of Supervisor Password. "Installed" is displayed when supervisor password is set up. Otherwise, "Not Installed" is displayed.

4-6.7.2. User Password

To show the status of User Password. "Installed" is displayed when supervisor password is set up. Otherwise, "Not Installed" is displayed.

4-6.7.3 Change Supervisor Password

This option allows you to set a new Supervisor password for the system:

1. Choose "Change Supervisor Password" in the "BIOS Security Features" and press <Enter>. Then the following message appears:

[Enter new supervisor password]

2. The first time you run this option, enter your password up to 6 characters and press <Enter>. (The screen does not display the entered characters.)
3. After you enter the password, the following message appears, prompting you to confirm the password:

[Confirm New Password]

4. Enter the same password "exactly" the same as you have just typed to confirm the password and press <Enter>.
5. The following message appears to confirm the new password setup.

[Password installed]
[OK]

6. Then press any key to continue your CMOS Setup. To save the password setup, you should press "Save Changes and Exit" and choose "OK" to exit and save setup.
7. If you enter a new password into the box, you will be using this new password after you have finished and saved this new setup. Instead, if you press <Enter> before you enter any new password into the instruction box, another message box appears, telling you that you have disabled the Supervisor Password. That means, no password is set for either entering BIOS Setup or system:

[Password uninstalled]
[OK]

User Access Level Allows you to set four different Access Levels when Supervisor Password has been set.
Choices: Full Access; Limited; View Only; No Access

Note: "User Access Level" and "Password Check" will appear when "Supervisor Password" has been set.

4-6.7.4 Change User Password

This option allows you to set a new User password for the system:

1. Choose "Change User Password" in the "BIOS Security Features" and press <Enter>. Then the following message appears:

[Enter New Password]

2. The first time you run this option, enter your password up to 6 characters and press <Enter>. (The screen does not display the entered characters.)
3. After you enter the password, the following message appears, prompting you to confirm the password:

[Confirm New Password]

4. Enter the same password "exactly" the same as you have just typed to confirm the password and press <Enter>.
5. The following message appears to confirm the new password setup.

[Password installed]
[OK]

6. Then press any key to continue your CMOS Setup. To save the password setup, you should press "Save Changes and Exit" and choose "OK" to exit and save setup.

4-6.7.5. Clear User Password

If User Password has been set up, Clear User Password will appear for you to clear User Password.

1. To remove the current user password, choose "Clear User Password" and press <Enter>. An instruction box appears on the screen, assuring to clear User Password:

Clear User Password?
[OK] [Cancel]

2. Then choose [OK] and press <Enter>. The User Password is successfully removed.

Password Check Allows you to set BIOS to check up password with a password prompt at BIOS Setup or whenever re-starting system. This option will appear when you have set Supervisor Password or User Password. Choices: Setup (default); Always

4-6.7.6 Boot Sector Virus Protection

Boot Sector Virus Protection When enabled, you receive a warning message if a program (specifically, a virus) attempts to write to the boot sector or the partition table of the hard disk drive. You should then run an antivirus program. Keep in mind that this feature protects only the boot sector, not the entire hard drive.

NOTE: Many disk diagnostic programs that access the boot sector table can trigger the virus warning message. If you plan to run such a program, we recommend that you disable the virus warning.

4-6.8 Save Changes and Exit

Save Changes and Exit allows you to save all modifications you have specified into the CMOS memory. Highlight this option on the Main Menu and press <Enter>. The following message appears:

[Saving configuration changes and exit setup?]	
[OK]	[Cancel]

Press <Enter> key to save the configuration changes and exit CMOS Setup to restart your system.

4-6.9 Discard Changes and Exit

Discard Changes option allows you to exit (or not exit) the Setup Utility without saving the modifications that you have specified. Highlight this option on the Main Menu and press <Enter> and the following message appears:

Discard Changes and exit setup?	
[OK]	[Cancel]

Follow the message and press <Enter> key to exit CMOS Setup and restart system.

4-6.10 Load Optimal Defaults

When you press <Enter> on this item, you will get a confirmation dialog box with a message similar to:

[Load Optimal Defaults ?]	
[OK]	[Cancel]

Press <Enter> now to load Optimal values for all the Setup options.

4-6.11 Discard Changes

Discard Changes option allows you to cancel the modifications that you have specified in the Setup Utility. Highlight this option on the Main Menu and press <Enter> and the following message appears:

[Discard Changes?]	
[OK]	[Cancel]

Follow the message and press <Enter> key to cancel the modifications that you have specified.