

# Contents

- Chapter 1 Specification ..... 7**
  - 1-1 K8T-939FL Mainboard Layout .....8
  - 1-2 Mainboard Specification Table .....9
  - 1-3 Chipset System Block Diagram ..... 10
  - 1-4 Mainboard Specifications and Features ..... 11
    - 1-4.1 CPU Socket ..... 11
    - 1-4.2 System Chipsets ..... 11
    - 1-4.3 Memory ..... 11
    - 1-4.4 BIOS ..... 11
    - 1-4.5 Accelerated Graphics Port (AGP) Interface ..... 12
    - 1-4.6 AC'97 Audio Codec on board ..... 12
    - 1-4.7 Advanced System Power Management ..... 12
    - 1-4.8 IEEE 1394A Interface ..... 12
    - 1-4.9 Multi-I/O Functions ..... 13
    - 1-4.10 SATA / RAID Interface ..... 13
    - 1-4.11 Hardware Monitor on board ..... 13
    - 1-4.12 10/100 Ethernet on board ..... 13
    - 1-4.13 Form Factor ..... 13
- Chapter 2 Hardware Setup ..... 14**
  - 2-1 CPU Installation with Socket 939 ..... 15
  - 2-2 Memory Installation ..... 16
    - 2-2.1 To Install DDR SDRAM Module ..... 16
    - 2-2.2 Dual Channel Memory Features ..... 16
    - 2-2.3 DIMM Powered on ..... 17
  - 2-3 AGP Slot Installation ..... 17
  - 2-4 IDE Connector Installation ..... 18
  - 2-5 SATA / RAID Connectors ..... 19
  - 2-6 Floppy Drive Installation ..... 20
  - 2-7 LED1: Debug LED ..... 21
  - 2-8 ATX Power Supply Installation ..... 23
  - 2-9 Jumper Setting ..... 24
    - 2-9.1 How to tackle the Jumpers: ..... 24
    - 2-9.2 JKB1: Keyboard/Mouse Wake-up ..... 25
    - 2-9.3 JBAT1: Clear CMOS ..... 25

- 2-10 Other Connectors Configuration ..... 26**
  - 2-10.1 On-board FAN Connectors ..... 26
  - 2-10.2 USB Ports and USB Pin-headers ..... 27
  - 2-10.3 Chassis Back Panel Connectors ..... 28
  - 2-10.4 PS/2 Mouse , PS/2 Keyboard, SPDIF In/Out connector ..... 28
  - 2-10.5 RJ45 Connector ..... 29
  - 2-10.6 CD-ROM Audio Connectors (CD\_In)..... 29
  - 2-10.7 Thermal Detectors ..... 30
  - 2-10.8 JAUD1: External Audio Connector ..... 30
  - 2-10.9 Complex Pin-header (Front Panel Connectors) ..... 31
  - 2-10.10 IEEE 1394a Port/Pin-header ..... 32
  - 2-10.11 Printer Port: LTP1 ..... 33
- Chapter 3 Software Setup ..... 34**
  - 3-1 To Open Up Support CD: ..... 35
  - 3-2 VIA 4-IN-1 Drivers Installation ..... 36
  - 3-3 USB 2.0 Driver installation ..... 38
  - 3-4 AC'97 Audio Driver Installation ..... 40
    - 3-4.1 Installing AC'97 8-channel Audio Driver ..... 40
    - 3-4.2 Verifying 8-channel Audio ..... 41
  - 3-5 LAN Driver Installation ..... 43
    - 3-5.1 Installation ..... 43
    - 3-5.2 Verification ..... 43
  - 3-6 Install Hardware Monitor Utility ..... 44
    - 3-6.1 Installation ..... 44
    - 3-6.2 Verification ..... 45
  - 3-7 RAID Driver Installation ..... 45
- Chapter 4 BIOS Setup ..... 46**
  - 4-1 About BIOS Setup ..... 47
  - 4-2 To Run BIOS Setup ..... 47
  - 4-3 About CMOS ..... 47
  - 4-4 The POST ( Power On Self Test ) ..... 47
  - 4-5 To Update BIOS ..... 48
  - 4-6 BIOS SETUP --- CMOS Setup Utility ..... 51
    - 4-6.1 CMOS Setup Utility ..... 51
    - 4-6.2 Standard CMOS Setup ..... 53
    - 4-6.3 Advanced BIOS Features ..... 55
    - 4-6.4 Advanced Chipset Features ..... 58
    - 4-6.5 Integrated Peripherals ..... 60

4-6.5.1. VIA OnChip IDE Device ..... 60

4-6.5.2. VIA OnChip PCI Device: ..... 62

4-6.5.3. Super IO Device: ..... 63

4-6.6 Power Management Setup ..... 64

4-6.7 PnP / PCI Configuration ..... 67

4-6.8 SmartDoc Anti-Burn Shield ..... 69

4-6.9 Frequency/Voltage Control ..... 70

4-6.10 Load Optimized Defaults ..... 71

4-6.11 SET SUPERVISOR / USER PASSWORD ..... 71

4-6.12 SAVE & EXIT SETUP ..... 72

4-6.13 EXIT WITHOUT SAVING ..... 72

**Chapter 5 VT8237R SATA RAID ..... 73**

5-0 About Disk Array ..... 74

5-0-1 Disk Array Interpretation ..... 74

5-0-2 Disk Array Member ..... 74

5-0-3 Disk Array Types Supported by VT8237R ..... 74

5-1 First Step to Set Up SATA RAID System ..... 75

5-2 Enable SATA-RAID Interface with System BIOS ..... 76

5-3 To Enter VIA Tech. RAID BIOS Setup ..... 77

5-4 Using VIA RAID BIOS Setup to Create Disk Array ..... 78

5-5 Using VIA RAID BIOS Setup to change Array mode ..... 82

5-6 To Install SATA RAID Driver ..... 84

5-6-1 To Install SATA RAID Driver on Windows 2000/XP ..... 84

5-6-2 To Install SATA RAID Driver on Windows 98SE/ME ..... 85

# Chapter 1 Specification

## Introduction

This mainboard features an integration of the powerful AMD Athlon 64 939 processors and the North Bridge VIA K8T800Pro plus South Bridge VT8237R, with which the whole system performance supports HyperTransport Bus up to 1GHz.

VIA K8T800Pro plus VT8237R supports on-board AMD processors to implement HyperTransport link, running at up to 8GB/s, the AGP 8X/4X interface, the LPC Super I/O, Dual Channel DDR 400/333/266 SDRAM, the 8-channel AC'97 Audio interface, the USB 2.0 interface, ATA 133/100/66 data transfer rate, and Serial ATA RAID interface. This chapter is to introduce to users every advanced function of this high performance integration.

**Topics included in this chapter are:**

**1-1 Mainboard Layout**


**1-2 Specification Table**

**1-3 Chipset System Block Diagram**

**1-4 Mainboard Specifications and Features**

**\*\* If any difference is found between this manual and the Mainboard you are using, please look up the ERRATA/UPDATE Slip enclosed inside for the correction or updated information, or else contact the Mainboard Dealer or visit our Web Site for the latest manual update.**


# 1-1 K8T-939FL Mainboard Layout

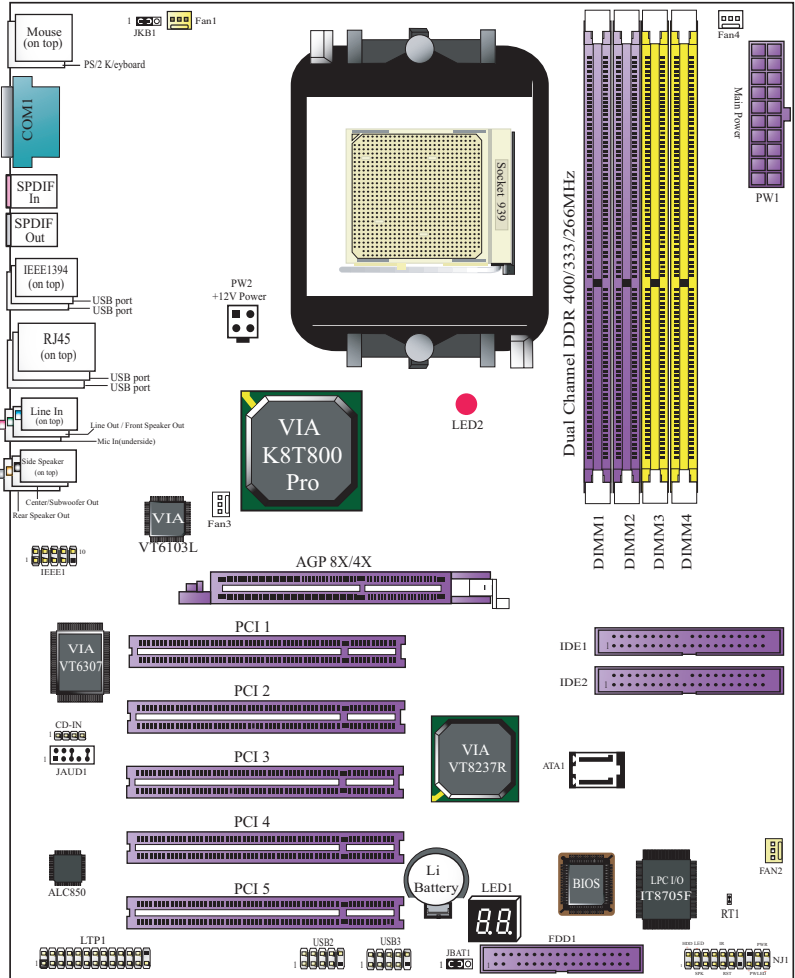

**1-2 Mainboard Specification Table**

<b>K8T-939FL Specifications and Features</b>	
CPU	Socket 939 for AMD Athlon 64 CPUs
North Bridge	VIA K8T800Pro, supporting up to 1GHz Hyper Transport
South Bridge	VIA VT8237R
Memory	Supporting Dual Channel DDR 400/333/266 SDRAM, up to 4GB in 4 DDR SDIMM slots
I/O Chip	ITE IT8705F with Hardware Monitor
AGP interface	AGP 8X/4X mode only
Audio	AC'97 Audio 2.3 compliant, 8 channel audio
IDE Interface	2 ATA 133/100/66 IDE Connector
Serial ATA RAID Interface	2 Serial ATA connectors supported by VT8237R
VGA	Not integrated on board
Network	VIA VT6103L 10/100 Ethernet Controller
IEEE 1394 Interface	VIA VT6307 IEEE1394 Controller on board supporting 2 IEEE1394 ports.
PCI Slots	5 PCI Master slots on board
I/O Connectors	8 USB V2.0, 1 FDD port, 1 COM port, 1 LPT, 1 IrDA, 1 PS/2 K/B, 1 PS/2 Mouse, 1 SPDIF-in, 1 SPDIF-out
Other Common Feature	PS/2 Keyboard/ Mouse Wake up; Debug LED

### 1-3 Chipset System Block Diagram

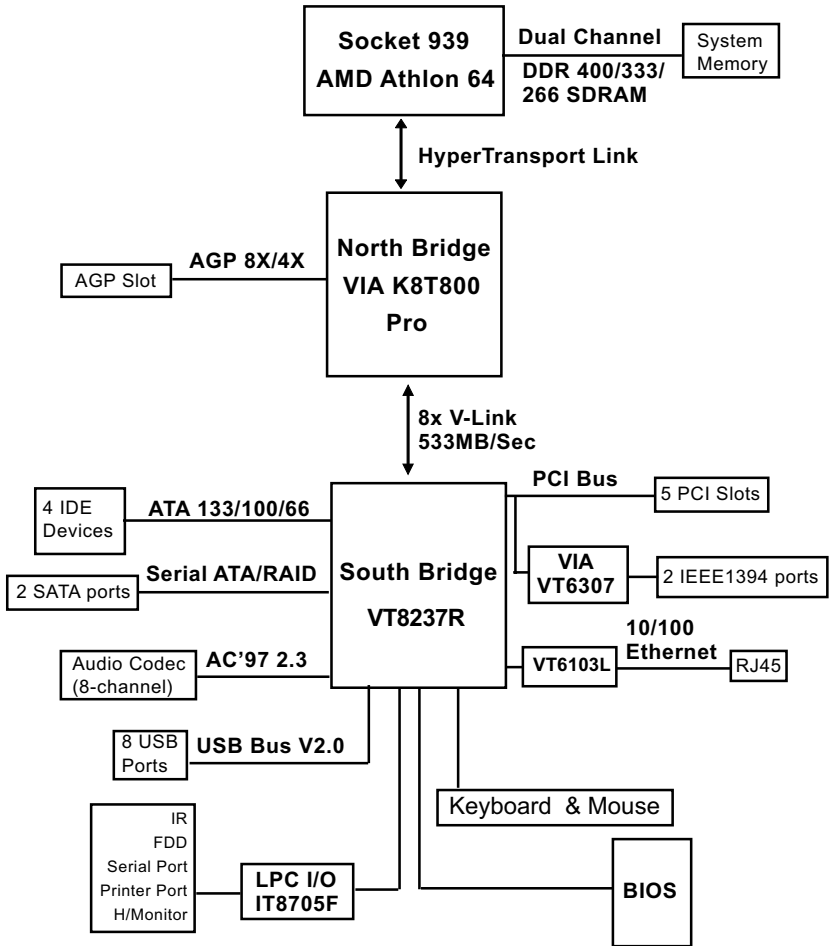

Socket 939 + VIA K8T800 Pro + VIA VT8237R Diagram

## **1-4 Mainboard Specifications and Features**

### **1-4.1 CPU Socket**

CPU Socket 939 on board, supporting AMD Athlon 64 processors, implementing up to 1GHz Hyper Transport Speed (System Bus) designed to be capable of operating up to 2000MT/s with a resulting bandwidth of up to 8 Gbytes/s and integrated Memory Controller which supports up to DDR SDRAM at 200MHz

### **1-4.2 System Chipsets**

North Bridge K8T800Pro:

- 8-bit / 200 MHz operation with speed up to 16-bit, 1GHz operation (8 GB/s total bandwidth)
- AGP V3.0 compliant with 8x transfer mode

South Bridge VIA VT8237R

- Working with North Bridge, VIA VT8237R supporting the 8X V-Link, LPC Super I/O, PCI interface, ATA133 interface, USB V2.0 interface, Audio interface as well as Serial ATA RAID interface

### **1-4.3 Memory**

4 DDR DIMM 184-pin slots on board for non-ECC Dual Channel DDR 400/333/266 SDRAMs:

- DIMMs to be populated in identical pairs for Dual Channel operation
- Installation of mixed volumes yet same type of DDR SDRAM modules supported .

### **1-4.4 BIOS**

Flash Memory for easy upgrade, and supporting various hardware configuration during booting system (See Chapter 4 BIOS Setup):

- Standard CMOS Features (Times, Date, Hard Disk Type etc.)
- Advanced BIOS Features (Virus Protection, Boot Sequence etc.)
- Advanced Chipset Features (AT Clock, DRAM Timing etc.)
- Power Management Features (Sleep timer, Suspend Timer etc.)
- PNP/PCI Configurations (IRQ Settings, Latency Timers etc.)
- Integrated Peripherals (Onboard IO,IRQ, DMA Assign. etc.)
- SmartDoc Anti-Burn Shield (CPU/System Temp.,Fan speed etc.)
- Frequency/Voltage (CPU clock, Voltage of CPU, DIMM, AGP etc.)



**1-4.5 Accelerated Graphics Port (AGP) Interface**

AGP Controller embedded on board, supporting:

- 1.5V(8X/4X) power mode only, 1 AGP Slot supported
- 8X 66MHz AD and SBA signaling; AGP pipelined split-transaction longburst transfers up to 2GB/sec.
- AGP 8X/4X supported, AGP V3.0 compliant

**1-4.6 AC'97 Audio Codec on board**

AC'97 Audio Codec Realtek ALC850 on board

- Supporting 8-channel display of PCM audio output
- 8 channel audio consists of Front-Out, Surround-Out, Center-Out, Surround-Back-Out, MIC-In, Line-In, and Front-MIC-In for complete surround sound effect
- SPDIF In/Out connector integrated in Back Panel supported by ALC850 for digital interface format input/out.
- AC'97 Audio Codec Driver enclosed in Support CD for user's installation.

**1-4.7 Advanced System Power Management**

Advanced Configuration and Power Interface incorporated in BIOS for reducing power consumption :

- ACPI 1.0 compliant (Advanced Configuration and Power Interface)
- APM V1.2 compliant (Legacy Power Management)
- ACPI Suspend function supported
- PS/2 Keyboard & Mouse Wake-up
- Real Time Clock (RTC) with date alarm, month alarm, and century field

**1-4.8 IEEE 1394A Interface**

The IEEE 1394A Controller, VIA VT6307 chipset on board, providing enhanced PC connectivity for a wide range of devices, including consumer audio/video components, storage peripherals, and other portable devices.

- PCI-bus based open host controller, compliant with IEEE 1394A-2000 standard for high performance serial bus
- Supporting two fully compliant ports with Plug and Play-compatible expansion interface. The IEEE 1394A controller provides up to 400MB/sec transfer rate to fulfill various requirements of any multimedia devices.

### 1-4.9 Multi-I/O Functions

- PCI EIDE Controller, supporting:
  - 2 ATA 133 / 100 / 66 IDE connectors supporting up to 4 IDE devices
- Dedicated IR Functions:
  - 1x5 IR connector dedicated to IR function with Infrared-IrDA (HPSIR) and ASK (Amplitude Shift Keyed) IR
- Multi-mode parallel data transfer:
  - Standard mode, high speed mode ECP and enhanced mode EPP
- Floppy Drive Connector:
  - 1 FDD connector supporting 2 floppy drives with drive swap support
- Universal Serial Bus Transfer Mode:
  - USB V2.0 compliant, 480 Mb/s USB Bus, supporting Windows 98 and later operating systems; USB drivers provided in Support CD for installation
  - 4 built-in USB connectors and 2 more USB pin-headers which require 2 optional USB cables to provide 4 more USB ports
- PS/2 Keyboard and PS/2 Mouse
- UARTs (Universal Asynchronous Receiver / Transmitter):
  - 1 complete serial port (COM1) on board.

### 1-4.10 SATA / RAID Interface

Serial ATA / RAID Interface supported by VT8237R:

- Supporting 2 Serial ATA / RAID connectors for 2 SATA Hard Disks with 150Mb/s transfer rate
- Serial ATA RAID Drivers enclosed in Support CD/Floppy Diskette for user's installation
- Supporting RAID 0, 1 configuration

### 1-4.11 Hardware Monitor on board

- Hardware Monitor integrated in LPC I/O IT8705F, providing monitoring functions on hardware voltage, temperatures and fan speeds.
- Utility Software Soltek Hardware Monitor for displaying monitor status is enclosed in Support CD for user's installation.

### 1-4.12 10/100 Ethernet on board

PCI local bus 10/100 Ethernet Controller VT6103L on board:

- Supporting 10/100Mb data transfer
- Supporting Wake On LAN function through the on-board RJ45 LAN Connector

### 1-4.13 Form Factor

- ATX Form Factor, ATX Power Supply
- Mainboard size: 305mm x 245mm

# Chapter 2 Hardware Setup

## To Get Things Ready for Hardware Setup !

1. We recommend to install your CPU before any other components. For detailed installation instructions of processor, you can also refer to the pamphlet enclosed in your CPU package.
2. Installing a cooling fan with a good heatsink is a must for proper heat dissipation for your CPU. Get ready an appropriate fan with heatsink for proper installation. Improper fan and installation will damage your CPU.
3. In case CPU Vcore, CPU clock or Frequency Ratio is adjustable on board, please follow the instructions described in the User Manual for proper setup. Incorrect setting will cause damage to your CPU.


## The following topics are included in this chapter:

<b>2-1 CPU Installation with Socket 939 .....</b>	<b>15</b>
<b>2-2 Memory Installation .....</b>	<b>16</b>
<b>2-2.1 To Install DDR SDRAM Module .....</b>	<b>16</b>
<b>2-2.2 Dual Channel Memory Features .....</b>	<b>16</b>
<b>2-2.3 DIMM Powered on .....</b>	<b>17</b>
<b>2-3 AGP Slot Installation .....</b>	<b>17</b>
<b>2-4 IDE Connector Installation .....</b>	<b>18</b>
<b>2-5 SATA / RAID Connectors .....</b>	<b>19</b>
<b>2-6 Floppy Drive Installation .....</b>	<b>20</b>
<b>2-7 LED1: Debug LED .....</b>	<b>21</b>
<b>2-8 ATX Power Supply Installation .....</b>	<b>23</b>
<b>2-9 Jumper Setting .....</b>	<b>24</b>
<b>2-9.1 How to tackle the Jumpers: .....</b>	<b>24</b>
<b>2-9.2 JKB1: Keyboard/Mouse Wake-up .....</b>	<b>25</b>
<b>2-9.3 JBAT1: Clear CMOS .....</b>	<b>25</b>
<b>2-10 Other Connectors Configuration .....</b>	<b>26</b>

## 2-1 CPU Installation with Socket 939


This series is built with CPU Socket 939 supporting the AMD CPUs Athlon 64:

1. Socket 939 supported by a cooling Fan Base.

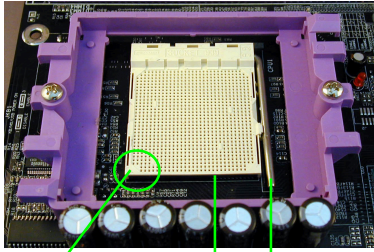


Socket 939  
Pin 1 position      Socket 939 Lever

2. Pull up the lever to release socket lock.

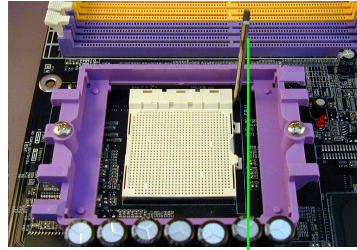


Pull up Lever

3. Insert CPU into Socket 939, CPU Pin1 to Socket Pin1.

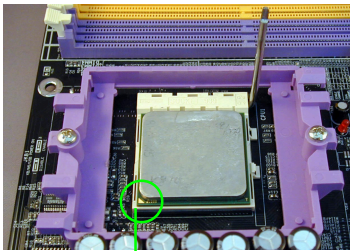


CPU Pin 1 to Socket Pin 1.

4. Pull down Lever to fix CPU to Socket 939

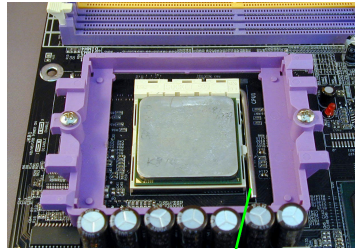

Pull down Lever to fix CPU.

5. Install cooling fan into Fan Base.

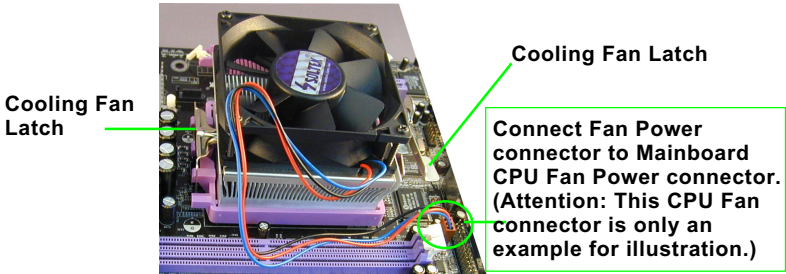

Cooling Fan Latch

Cooling Fan Latch

Connect Fan Power connector to Mainboard CPU Fan Power connector. (Attention: This CPU Fan connector is only an example for illustration.)

## 2-2 Memory Installation


### 2-2.1 To Install DDR SDRAM Module

- Make sure to unplug your Power Supply before adding or removing memory module. Failure to do so may cause severe damage to both your mainboard and the memory module.
- Pay attention to the orientation of the DIMM slots. Forcing a DIMM in a socket improperly will damage the memory module and slot.
- Make sure you have the right type of memory module for your mainboard.

### 2-2.2 Dual Channel Memory Features

- Dual Channel Memory Configuration is formed by couple of identical DDR SDRAMs.
- Matched DIMMs need to have identical density, DRAM technology, DRAM bus width, and equal number of memory banks.
- This series supports up to 4GB unbuffered Dual Channel DDR 400/333/266 SDRAM, with 4 DDR DIMM slots on board. Do not insert other type of modules into these slots.
- The dual memory controller can double the DDR memory bandwidth up to 6.4GB/s with DDR400, 5.4GB/s with DDR333 and 4.2GB/s with DDR266.

184-Pin DIMM Notch Key Definition

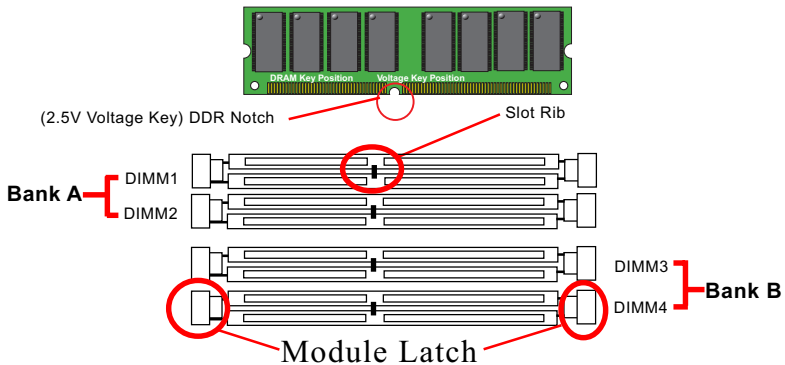


**To Boot PC with Dual Channel Memory Configuration**  
 Populate Bank A / Bank B / Bank A+Bank B with identical DIMMs

**To Boot PC with Single Channel Memory Configuration**  
 Populate DIMM1 / DIMM3 / DIMM1 + DIMM3 with identical DIMMs  
 (Note: DIMM2 / DIMM4 / DIMM2 + DIMM4 cannot boot PC.)

### 2-2.3 DIMM Powered on

- LED2 is designed on board to light up as soon as DIMM slots are powered on
- When ever LED2 lights up, it indicates that DIMMs are powered on and no memory module should be removed from or inserted into the DIMM slot.
- To remove or insert a memory module, LED2 should not be on.

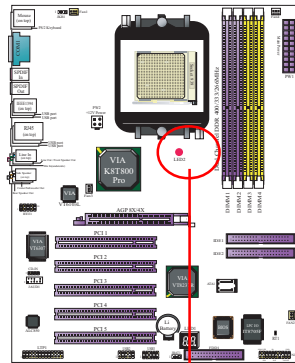


LED2 on to indicate that DIMM slots onboard are powered on.

### 2-3 AGP Slot Installation



The AGP slot on board supports 1.5V AGP 8X/4X card only. A Rib is specifically added to the 8X/4X slot so as to match the AGP 8X/4X card. To insert a 3.3V AGP 2X card into the AGP 4X slot will damage the system chip and burn the 1.5V circuitry.

An AGP 8X card will support a data transfer rate up to 2GB/sec., while an AGP 4X card will provide 1GB/sec transfer rate.

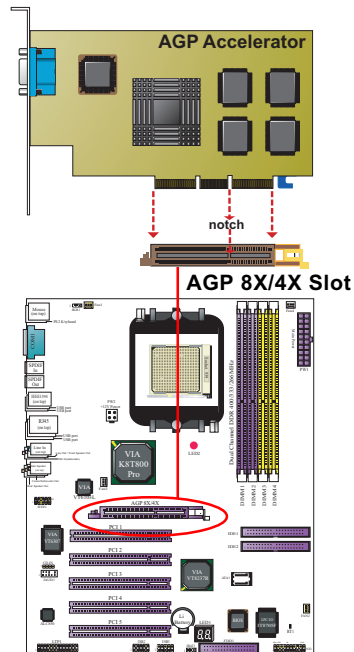

### 2-4 IDE Connector Installation


To install IDE Connector, you may connect the blue connector of IDE cable to the primary (IDE1) or secondary (IDE2) connector on board, and then connect the gray connector to your slave device and the black connector to your master device. If you install two hard disks, you must configure the second drive to slave mode by setting its jumpers correctly. Please refer to your hard disk documentation for the jumper settings.

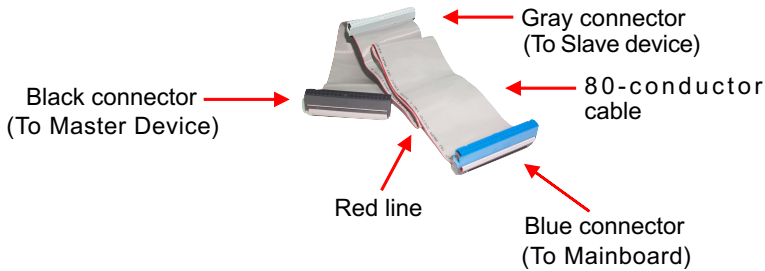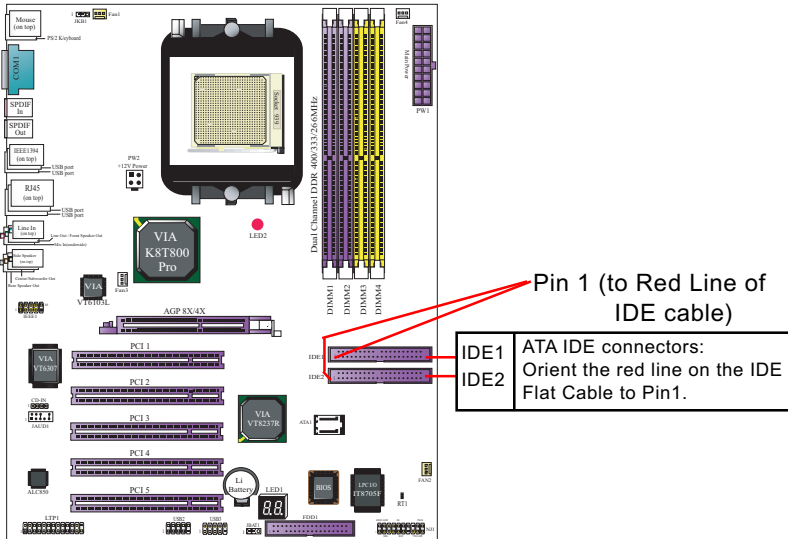


### IDE Flat Cable

## 2-5 SATA / RAID Connectors

2 Serial ATA connectors for 2 SATA Hard Disks with RAID mode are supported by the South Bridge VIA VT8237R. Please see Chapter 5 Disk Array Installation for detail RAID installaion.

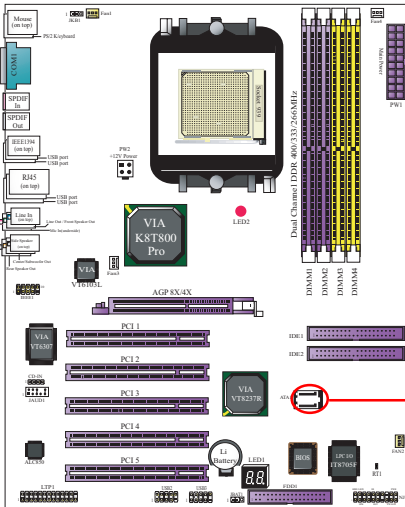

**Serial ATA Connectors**



ATA1 (2 ports)

**SATA Connectors supported by VT8237R for 2 SATA/RAID Hard Disks setup.**

**Serial ATA Cable**

**Serial ATA Hard Disk**

**SATA Power Connectors**


**To Power Supply**

**Serial ATA Power Cable (optional)**



## 2-6 Floppy Drive Installation


To install Floppy Drive, you should connect the end of Floppy Drive cable with single connector to the board, and connect the other end with two connectors to the floppy drives.

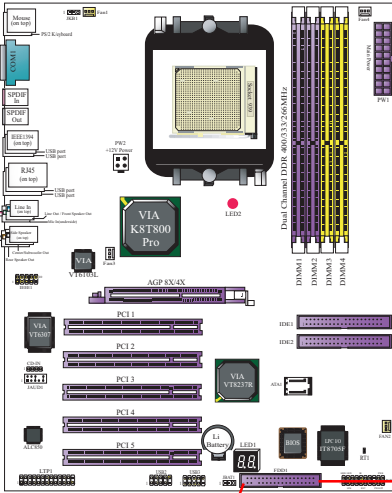

Pin 1 (to Red Line)

Floppy Drive Connector:


Orient the red line of the Floppy Flat Cable to Pin 1.

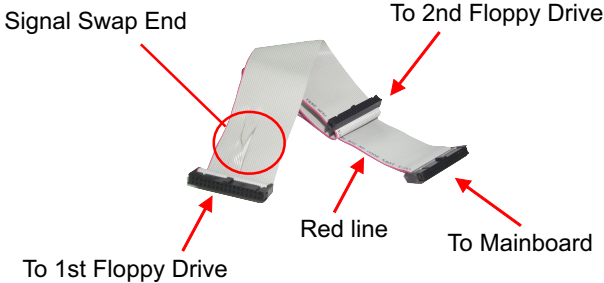

FDD Cable

### 2-7 LED1: Debug LED


A Debug LED is built in on board to display various digital messages which stand for the running status of the mainboard.

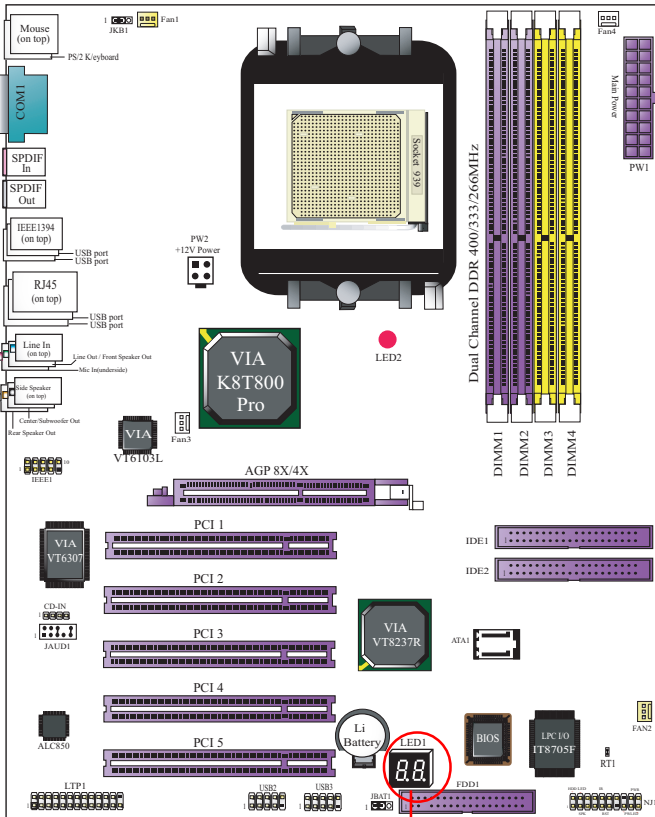

**Debug LED**  
(To run with POST code)

Code	Post Routine Description
C0	Turn off chipset and CPU test
C1	First block memory detect
03h	Early initialize the Super I/O
Ah	Initialize Mouse
Bh	Initialize onboard audio controller
12h	Check CMOS circuitry and reset CMOS
2Dh	Video memory test
33h	Setup PS/2 Mouse and reset KB
50h	Initialize USB controller
52h	Test memory of above 1MB, using Virtual 8086 mode, page mode and clear memory
5Dh	Initialize onboard super I/O
67h	Initialize ACPI sub-system
6Dh	Initialize floppy disk drive controller and any drive
73h	Initialize hard drive controller and any drive
75h	Detect and install IDE device
77h	Detect and initialize Serial / parallel
85h	Initialize Option ROMs
FFh	Boot

## 2-8 ATX Power Supply Installation

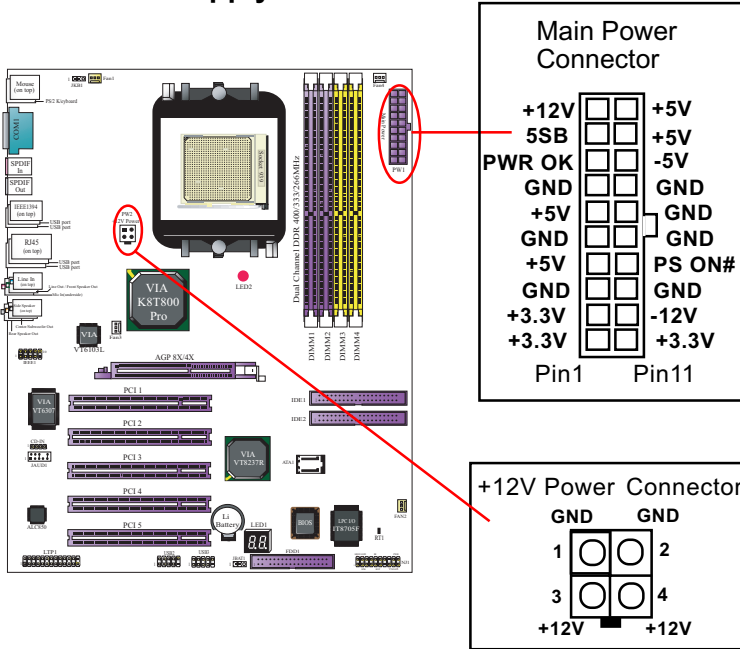

ATX V2.03 Power Supply is strongly recommended for mainboard running with this mainboard.

To set up Power Supply on this mainboard:



1. Connect the on-board Main Power Connector (20-pin) to the Main Power Connector (20-pin) of an ATX Power Supply which can be of the latest version 2.03 model, and then connect the square-shaped +12V Power Connector on board to the square-shaped +12V Power Connector of the Power Supply.

**Warning:** Both the Main Power Connector and the +12V Power Connector should be connected to Power Supply; otherwise, the system may either not start or be damaged.

2. This ATX Power Supply should be able to provide at least 720mA/ +5V standby power for Wake On Lan function.

## 2-9 Jumper Setting

### 2-9.1 How to tackle the Jumpers:

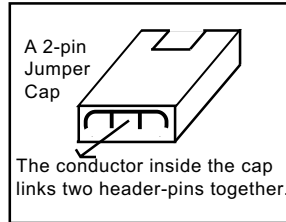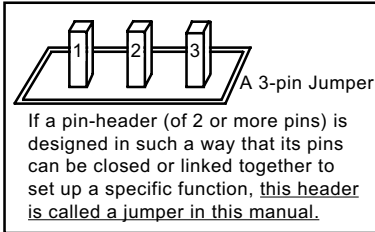

- A Jumper is usually but not necessarily given a “JpX” legend.
- In the Jumper setting diagram, all jumper pins covered with black marks stand for closed pins with jumper cap.

Jp X 1 3  
**Jumper with  
 Pin 2-3 closed**

1 3  
**Jumper with  
 all pins open**

1 3  
**Jumper with  
 Pin 1-2 closed**

- Do not remove any jumper cap when power is on. Always make sure the power is off before changing any jumper settings. Otherwise, mainboard could be damaged.



The following diagrams show the locations and settings of jumpers on the mainboard.

### 2-9.2 JKB1: Keyboard/Mouse Wake-up

JKB1 is designed to enable / disable the PS/2 Keyboard or PS/2 Mouse Wake-up (from suspend mode). Setting JKB1 to 1-2 closed will disable this function while setting JKB1 to 2-3 closed will enable this function.

Yet users still have to choose the KB/ Mouse Wake-up mode on BIOS.


USB KB/Mouse Wake-up is optionally supported on this mainboard.

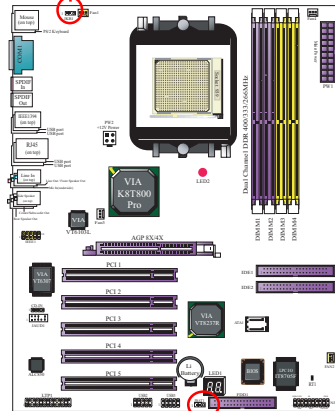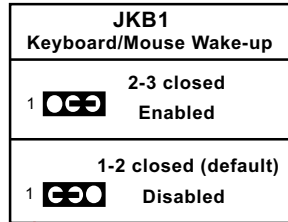

### 2-9.3 JBAT1: Clear CMOS

When you have problem with rebooting your system, you can clear CMOS data and restore it to default value. To clear CMOS with Jumper JBAT1, please follow the steps below:


1. Power off system.
2. Set JBAT1 to Pin 2-3 closed.
3. After 2 or 3 seconds, return the JBAT1 setting to Pin1-2 closed.
4. CMOS data are restored to default. Remember never clear CMOS when system power is on.

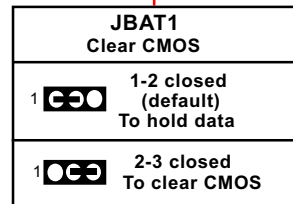

## 2-10 Other Connectors Configuration

This section lists out all connectors configurations for users' reference.

### 2-10.1 On-board FAN Connectors

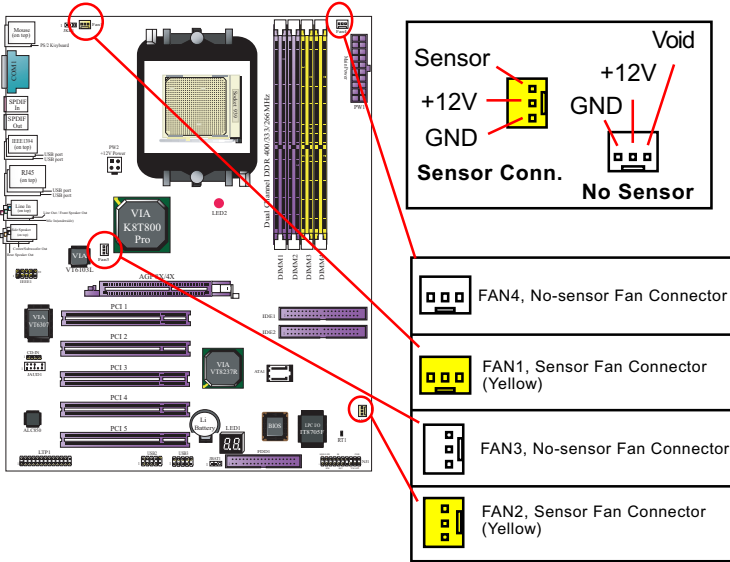

Both Sensor and No-sensor Fan Connectors support CPU/AGP/System/Case cooling fan with +12V mode. A Hardware Monitor chipset is on board, with which users can install a Hardware Monitor Utility and read the fan speed transmitted from the sensor fan. Otherwise, users can read the fan speed from the “Hardware Monitor Status” via BIOS.



A running Fan will send out 2 electric pulses per rotation of its fan blade. A Sensor Fan Connector will count the electric pulses and send the information to the System Hardware Monitor which in turn will work out the fan rotation speed and display it on screen.

### 2-10.2 USB Ports and USB Pin-headers

This series provides 4 USB ports on board supporting various USB devices. In addition, 2 USB pin-headers are added on board to provide expansion of 4 more optional USB ports by using 2 additional USB Cables. User can order the optional USB cables from your mainboard dealer or vender.


When plugging the USB cable to USB Header, users must make sure the red wire is connected to Pin 1.

All 8 USB ports are compliant with 1.0 / 2.0 USB Bus. USB 2.0 supports Windows 98 and above. USB 1.0 / 2.0 drivers are provided in Support CD for user's installation.

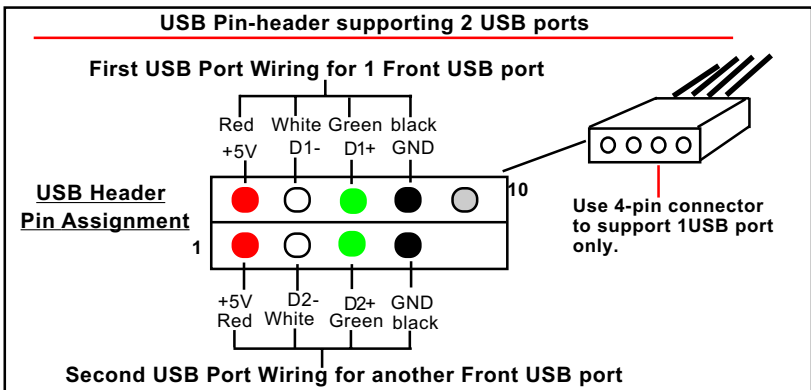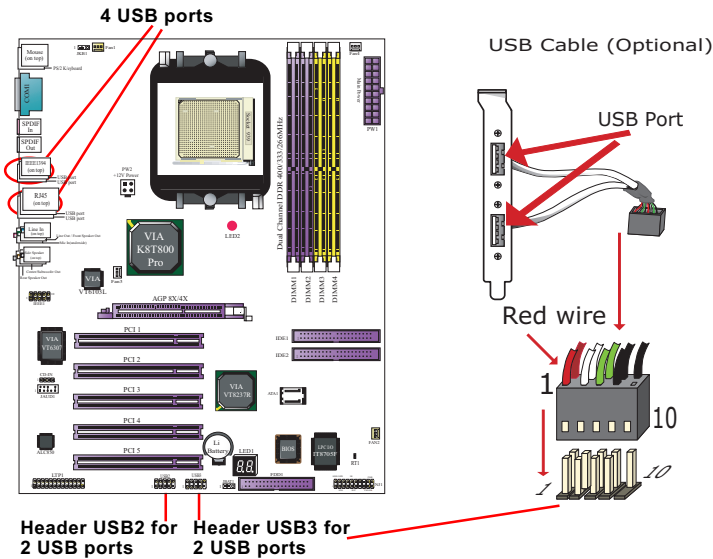



2-10.3 Chassis Back Panel Connectors

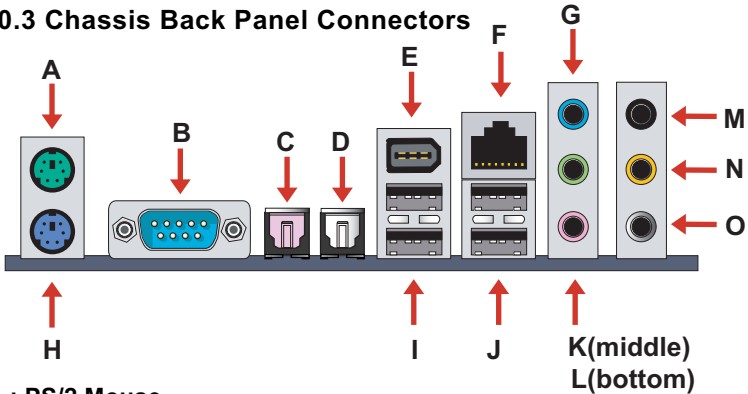

- A : PS/2 Mouse
- B : COM1 Connector
- C : S/PDIF In
- D : S/PDIF Out
- E : 1394A port
- F : RJ45 Connector
- G : Line In
- H : PS/2 Keyboard
- I : 2 USB ports

- J : 2 USB ports
- K : Line Out /Front Speaker Out
- L : Microphone Input
- M : Rear Speaker Out
- N : Center/Subwoofer Out
- O : Side Speaker Out

2-10.4 PS/2 Mouse , PS/2 Keyboard, SPDIF In/Out connector

**A - PS/2 Mouse Connector (green, on top)**

**H - PS/2 Keyboard Connector (purple, underside)**

**SPDIF- in/out port for Digital Interface Format Input / Output**

C - C is SPDIF-In port with pale purple Protective Swing Plate.  
 D - D is SPDIF-Out port with a gray Protective Swing Plate.

Connect C / D to digital audio device for digital audio signal input / output.


### 2-10.5 RJ45 Connector

One RJ45 connector is on board for LAN connection, supporting 10/100Mb (1000Mb is for 1G LAN interface) data transfer.


Orange LED blinks to indicate that data transmission is undergoing in 1000 Base T mode.

Yellow LED "On" to indicate Network hub is in connection with the system.

F (in Back Panel):

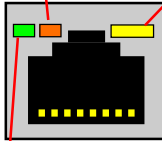


Green LED blinks to indicate that data transmission is undergoing in 10/100 Base T mode.

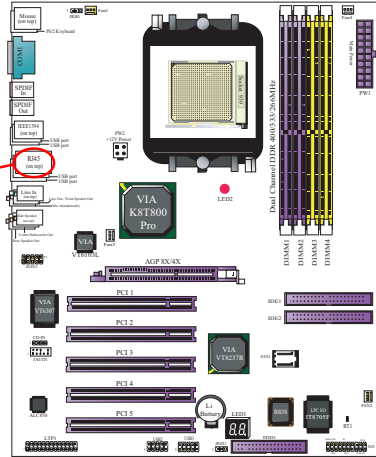


### 2-10.6 CD-ROM Audio Connectors (CD\_In)


CD-In is an audio connector connecting CD-ROM audio to mainboard.

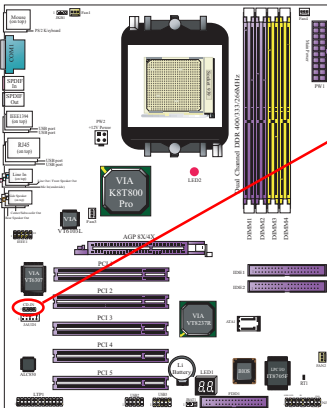

CD-ROM Audio Connector	
CD-In 1	Pin Signal
Pin 1	Left Channel
Pin 2	GND
Pin 3	GND
Pin 4	Right Channel

### 2-10.7 Thermal Detectors

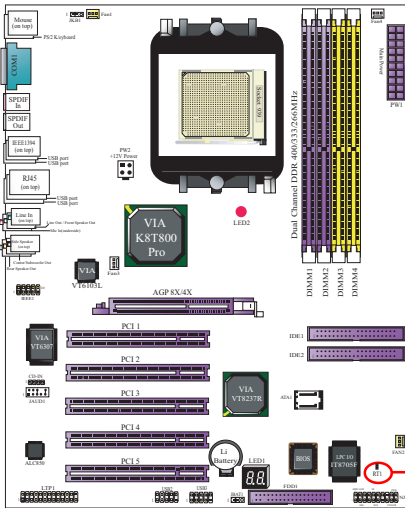


 RT1  
 RT1 is mounted with Thermal Detector by default for detecting system temperature.


### 2-10.8 JAUD1: External Audio Connector

This Mainboard is designed with a External Audio connector “JAUD1” which provides connection to your audio connectors on the Front Panel of the PC case.

1. When JAUD1 is set to 5-6 closed and 9-10 closed, this default setting disables this connector and leaves the Back Panel Audio enabled.
2. To use this External Audio Connector, please open all pins of JAUD1 and connect it to the Front Panel Audio Connector.

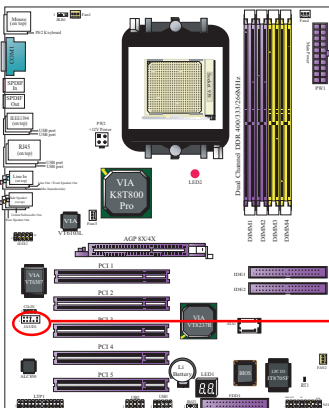

**JAUD1: External Audio Connector**


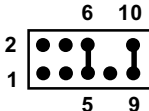


Pin 1	Mic In	Pin 2	Aud GND
Pin 3	Mic VREF	Pin 4	Aud Vcc
Pin 5	FPOUT R	Pin 6	RET R
Pin 7	(Key)	Pin 8	(Void)
Pin 9	FPOUT L	Pin10	RET L

### 2-10.9 Complex Pin-header (Front Panel Connectors)


This complex Pin-header consists of the following connectors for various front panel supports. When you have fixed the mainboard to the case, join the connectors of this Complex Pin-header to the case Front Panel.

**Connect these connectors to PC Front Panel.**

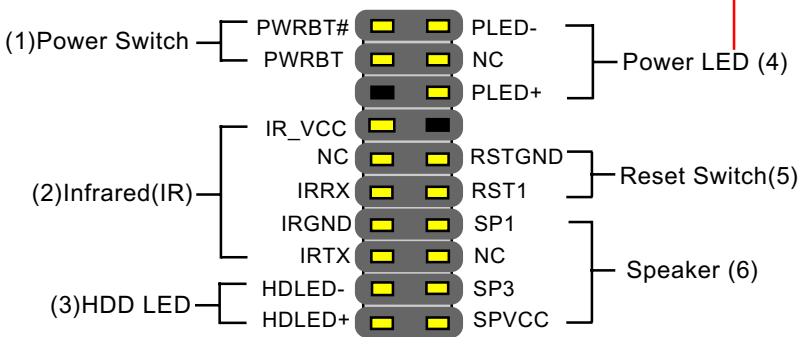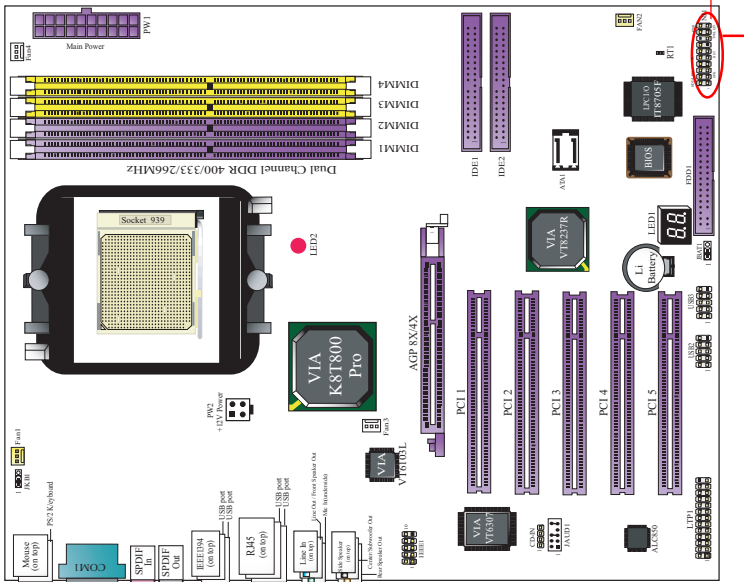


### 2-10.10 IEEE 1394a Port/Pin-header

One IEEE1394a Port is built on board for Digital Video Cameras and other devices with 1394a interface. Another IEEE 1394a Pin-header is built on board providing one more 1394a channel on the front Panel.

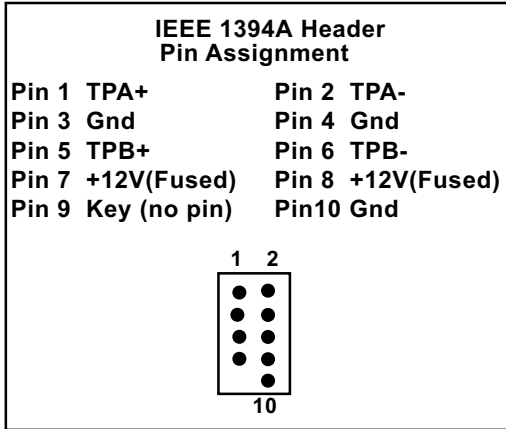


Connect this Pin-header to 1394A Cable

IEEE 1394A Port (directly to 1394A device)

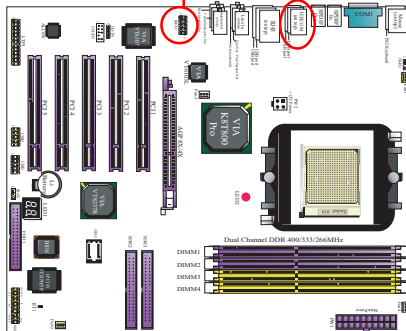


### 2-10.11 Printer Port: LTP1

LTP1 is a parallel printer port.

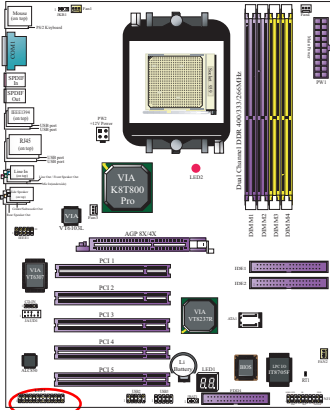

LTP1: Printer Port Pin Assignment			
Pin 1	STROBE#	Pin 14	AUTOFD#
Pin 2	LPTDD0	Pin 15	ERROR#
Pin 3	LPTDD1	Pin 16	INITA#
Pin 4	LPTDD2	Pin 17	SLCTIN#
Pin 5	LPTDD3	Pin 18	GND
Pin 6	LPTDD4	Pin 19	GND
Pin 7	LPTDD5	Pin 20	GND
Pin 8	LPTDD6	Pin 21	GND
Pin 9	LPTDD7	Pin 22	GND
Pin 10	ACK#	Pin 23	GND
Pin 11	BUSY	Pin 24	GND
Pin 12	PE	Pin 25	GND
Pin 13	SLCT	Pin 26	Key

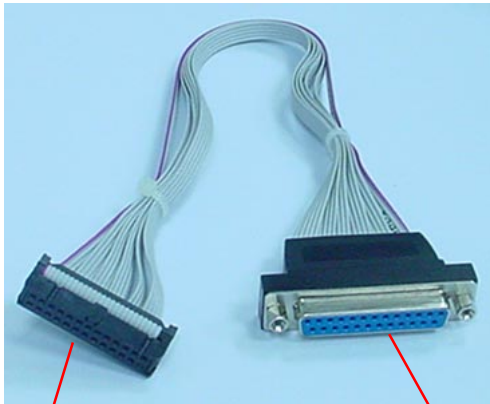To Printer Connector  
on board

To Printer

Printer Cable (optional)

# Chapter 3 Software Setup

## Drivers, Utilities and Software Installation

Support CD:

This mainboard will be shipped with a Support CD which contains those necessary driver files, Application Softwares and some helpful utilities. It is a user-friendly, auto-run CD which will open itself up in a CD-ROM automatically.


This chapter is devoted to describing the installations of all these essential drivers and utilities on Windows 98SE, Windows ME, Windows 2000 and Windows XP. The installation procedures for all these operating systems are programed into an auto-run mode. What users have to do is read and follow the pop-up instructions. We therefore take the installation on Windows XP as the general illustration hereby.

The priority of driver installation should also be noted. Users are recommended to take the following installation order:

<b>3-1 To Open Up Support CD: .....</b>	<b>35</b>
<b>3-2 VIA 4-IN-1 Drivers Installation .....</b>	<b>36</b>
<b>3-3 USB 2.0 Driver installation .....</b>	<b>38</b>
<b>3-4 AC'97 Audio Driver Installation .....</b>	<b>40</b>
<b>3-4.1 Installing AC'97 8-channel Audio Driver .....</b>	<b>40</b>
<b>3-4.2 Verifying 8-channel Audio .....</b>	<b>41</b>
<b>3-5 LAN Driver Installation .....</b>	<b>43</b>
<b>3-5.1 Installation .....</b>	<b>43</b>
<b>3-5.2 Verification .....</b>	<b>43</b>
<b>3-6 Install Hardware Monitor Utility .....</b>	<b>44</b>
<b>3-6.1 Installation .....</b>	<b>44</b>
<b>3-6.2 Verification .....</b>	<b>45</b>
<b>3-7 RAID Driver Installation .....</b>	<b>45</b>

### **3-1 To Open Up Support CD:**

1. Please put the Support CD enclosed in your mainboard package into the CD-ROM drive. In a few seconds, the Main Menu will automatically appear, displaying the contents to be installed for this series:

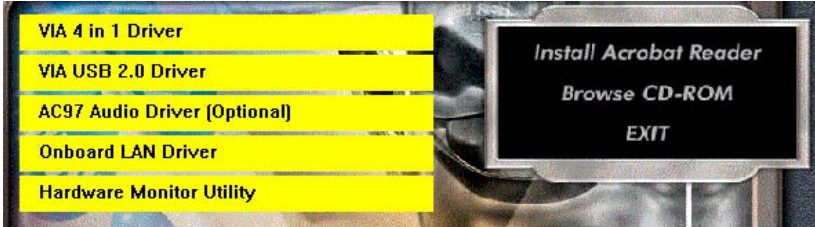


2. In case your system does not open the Support CD automatically, please click to the following path to enter the Main Installation Menu:  
D:\Autorun.exe (assuming that your CD-ROM Drive is Drive D)
3. We recommend that drivers installation should be started from top to bottom of main menu.
4. Drivers may be updated from time to time in our web site. If you are installing a newer driver than the one illustrated in this chapter, please be aware that the illustration pictures might be different.




## 3-2 VIA 4-IN-1 Drivers Installation

1. Following the procedures of opening the Support CD, click to “VIA 4-in-1 Drivers” to proceed.


2. The VIA Service Pack InstallShield Wizard will pop up to guide you to the VIA Service pack installation. Click “Next” button to continue.

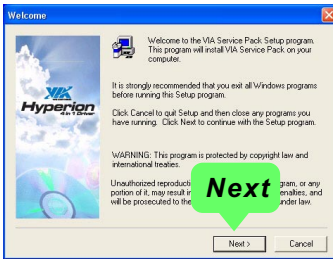

3. “VIA Service Pack README” screen will appear, please click the “Yes” button to agree with the Licence Agreement and continue.

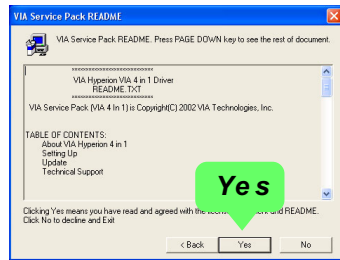


4. On the screen below, check “Normally Install” and click “Next” to continue. (If you check “Quick Install”, you will skip the detailed procedures of the VIA 4-in-1 Setup.)

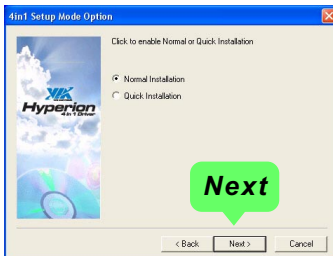


5. Select the checkbox as below and click “Next” to continue:


- VIA PCI IDE Bus Driver
- AGP Driver (AGP 3.0 Supported)
- VIA INF Driver 1.90b

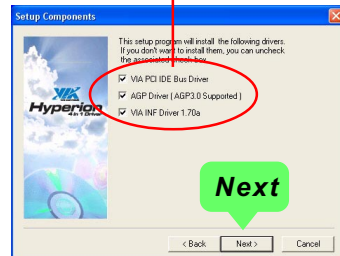

6. Select “Install VIA PCI IDE Driver” checkbox, then click the “Next” button to continue.
7. Select “Install VIA AGP Driver” checkbox in turbo mode and press “Next” button to continue.

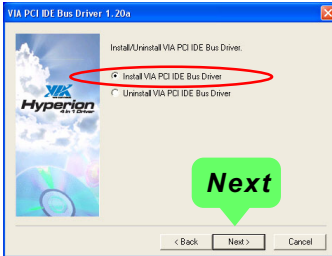

8. After all these setup procedures have finished, you should restart your computer by clicking on “OK” so as to put VIA 4-in-1 drivers into effect and proceed to next driver installation.

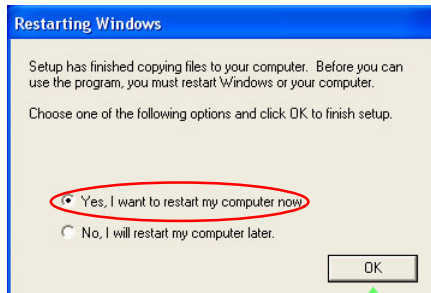

OK


### 3-3 USB 2.0 Driver installation

VIA USB V2.0 is already integrated on board. Its 480Mb/s transfer rate supports operating systems Windows 98SE/ME/2000/XP. USB2.0 Driver is typically for Windows 98SE/ME. For Windows 2000/XP, users can install their latest Service Pack instead of the USB2.0 driver to gain the USB2.0 support. For the Windows system which is not installed with its latest Service Pack, users must install the USB2.0 driver to activate the USB2.0 support:


1. Following the procedures of opening the Support CD, click to choose “VIA USB 2.0 Driver” to proceed. Please notice that the USB card driver is different from the USB 2.0 driver typically for the on-board USB. Do not use the USB card driver here.
2. Instantly the “USB 2.0 Setup Program” will pop up on screen. Click “Next” to continue.



3. Instantly, next screen will pop up to prompt you to select component. Select "Install USB Driver" and click "Next" button to continue.

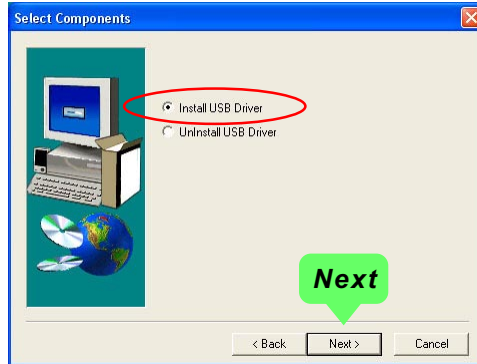

4. The USB 2.0 Setup Program will then guide you through the whole driver setup until the "Finish" screen appears to prompt you to restart your system. Please click "Finish" button to restart system to put the new driver into effect.

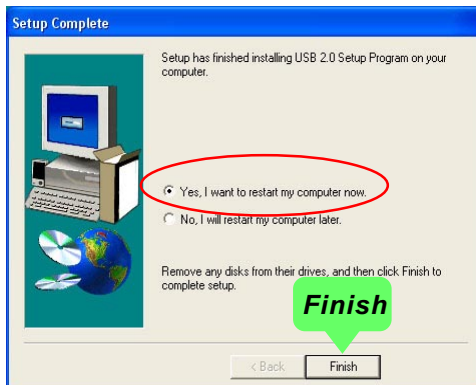


### 3-4 AC'97 Audio Driver Installation

RTL ALC850 8-channel AC97 Audio Codec on board, AC'97 2.3 compatible stereo audio code for PC multimedia systems. AC'97 Audio Codec Driver is provided in Support CD for user's installation.


#### 3-4.1 Installing AC'97 8-channel Audio Driver

1. Following the procedures of opening the Support CD, click to "AC'97 Audio Driver" to proceed.


2. Instantly, the "installShield Wizard" screen appears to guide you through the "AC'97 Audio Setup".

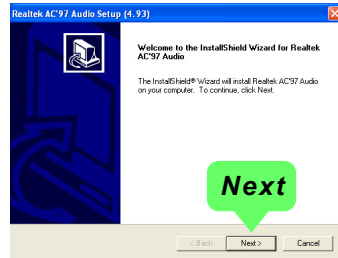

3. instantly, the Setup program proceeds to install the softwares. (If you want to stop setup, click the "Cancel" button.)

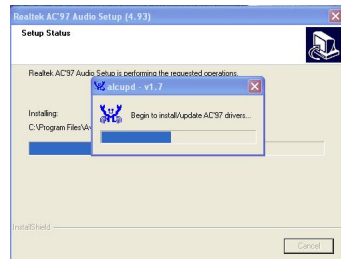


4. After the setup process is finished, please check the radial button "Yes, I want to restart my computer now." And click "Finish" to restart your system.

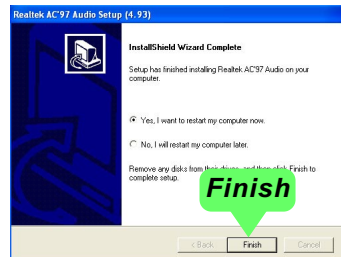

### 3-4.2 Verifying 8-channel Audio

After installation of AC'97 8-channel Codec, you must configure the 7.1 Speaker connection to enable the 8-channel audio.

1. Connect your on-board Audio Connector to your 8-channel speakers as depicted in the figure below:

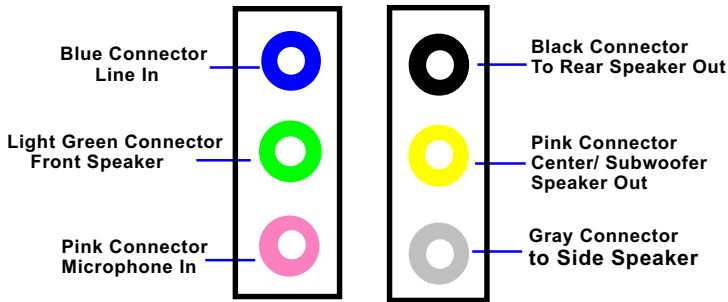


Back Panel Audio Connectors

2. After Connection is done, start your Windows system and double click the Sound manager icon to enter 8-channel configuration:




Sound Effect Manager icon on Windows XP

- The “AC'97 Audio Configuration” screen will pop out. Click the “Speaker Configuration” bar with your mouse.

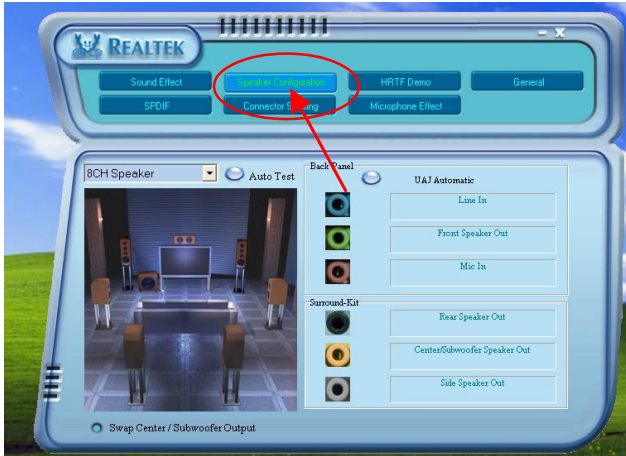


- Instantly, the “Speaker Configuration” screen will pop out. Pick the items “8-channelSpeaker” and then click on the Auto Test button. Instantly, the Speaker Auto-test starts until all speakers installed are tested.

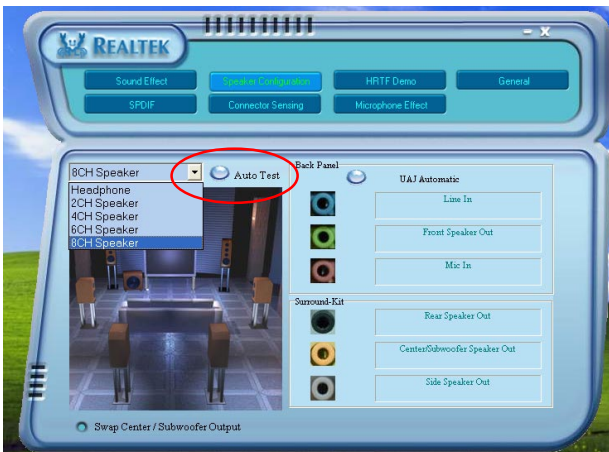

## 3-5 LAN Driver Installation


### 3-5.1 Installation

1. Following the procedures of opening the Support CD, click to “Onboard LAN Driver” to proceed.
2. Instantly, “The installation is completed” screen appears, indicating that LAN Driver setup is finished.

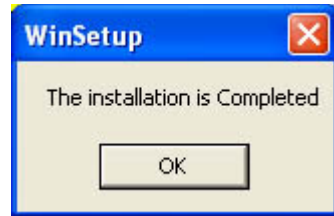


### 3-5.2 Verification

1. After LAN Driver setup, a new networking icon will appear at the corner of the “Start” screen of your system, indicating that a network channel has been set up.

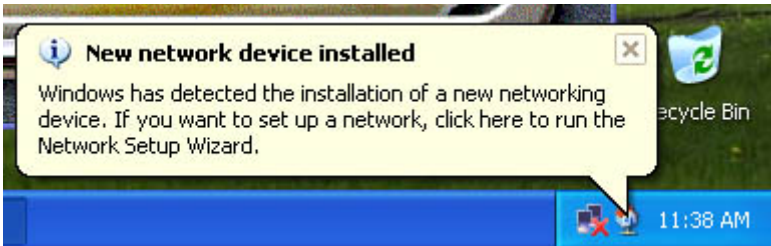

2. If user enter Device Manager of the OS, user can see that the LAN driver is already installed.

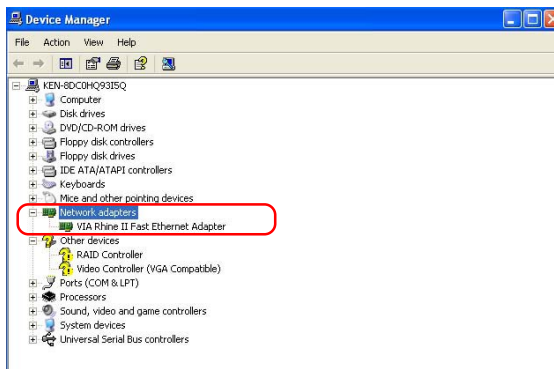




## 3-6 Install Hardware Monitor Utility

### 3-6.1 Installation

Hardware Monitor is built on this mainboard. Its installation is programmed to a fully automated mode on Windows 9X/Me/NT4/2000/XP. Users can follow the model installation below for its installation on various Windows System.

1. Following the procedures of opening the Support CD, click to “Hardware Monitor Utility” to proceed.


2. The Soltek Hardware Monitor InstallShield Wizard will pop up to guide you to the Intel Service pack installation. Press “Next” button to continue.

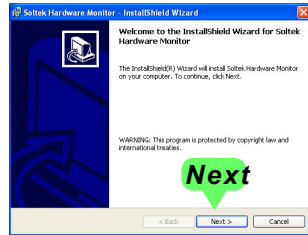

3. The **InstallShield Wizard** screen will show the current setting, please click the “Install” button to continue.




4. After all the setup process is finished, click “Finish” to exit the wizard.

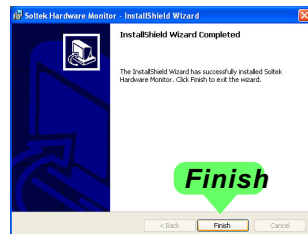

### 3-6.2 Verification

1. After installing Soltek Hardware Monitor, double click “SoltekHM” icon on the desktop to open the main window of the Soltek Hardware Doctor.

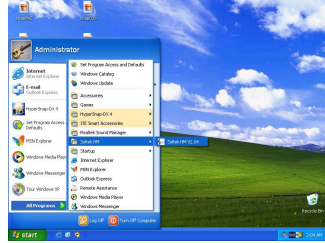

2. Then the pop-up screen will show all information about CPU Temperature, Fan Speed and various Voltages.

Showing the temperature(s), the function of which is supported by the mainboard.

Showing the Fan Speed(s) that is supported by the mainboard.

Click on “Soltek” button to display the function menu.

Showing the Voltage(s) that is supported by the mainboard.

Status Warning LED

\*Note: Not all items or functions showing in the above picture will show up. Only those items or functions that are supported by the mainboard will reveal themselves in the above screen.

### 3-7 RAID Driver Installation

For SATA RAID Driver Setup, please refer to Chapter 5 for detailed installation guide.

# Chapter 4 BIOS Setup

## THE BIOS

BIOS stands for Basic Input and Output System. It was once called ROM BIOS when it was stored in a Read-Only Memory(ROM) chip. Now manufacturers would like to store BIOS in EEPROM which means Electrically Erasable Programmable Memory. BIOS used in this series of mainboard is stored in EEPROM, and is the first program to run when you turn on your computer.

BIOS performs the following functions:

1. Initializing and testing hardware in your computer (a process called "POST", for Power On Self Test).
2. Loading and running your operating system.
3. Helping your operating system and application programs manage your PC hardware by means of a set of routines called BIOS Run-Time Service.

<b>4-1 About BIOS Setup .....</b>	<b>47</b>
<b>4-2 To Run BIOS Setup .....</b>	<b>47</b>
<b>4-3 About CMOS .....</b>	<b>47</b>
<b>4-4 The POST ( Power On Self Test ) .....</b>	<b>47</b>
<b>4-5 To Update BIOS .....</b>	<b>48</b>
<b>4-6 BIOS SETUP --- CMOS Setup Utility .....</b>	<b>51</b>

**Attention:** The BIOS Setup is subject to constant update without further notice to users. It is necessary for users themselves to update onboard BIOS with the latest BIOS version provided in our web site:  
<http://www.soltek.com.tw>

## **4-1 About BIOS Setup**

BIOS setup is an interactive BIOS program that you need to run when:

1. Changing the hardware of your system. (For example: installing a new Hard Disk etc.)
2. Modifying the behavior of your computer. (For example: changing the system time or date, or turning special features on or off etc.)
3. Enhancing your computer's behavior. (For example: speeding up performance by turning on shadowing or cache)

## **4-2 To Run BIOS Setup**

First access BIOS setup menu by pressing < DEL > key after "POST" is complete ( before OS is loaded ). BIOS will then display the following message:

```
Press "DEL" to enter "SETUP"
```

## **4-3 About CMOS**


CMOS is the memory maintained by a battery. CMOS is used to store the BIOS settings you have selected in BIOS Setup. CMOS also maintains the internal clock. Every time you turn on your computer, the BIOS Looks into CMOS for the settings you have selected and configures your computer accordingly. If the battery runs out of power, the CMOS data will be lost and POST will issue a "CMOS invalid" or "CMOS checksum invalid" message. If this happens, you have to replace the battery and do some proper settings in BIOS Setup.

## **4-4 The POST ( PowerOn SelfTest )**

POST is an acronym for Power On Self Test. This program will test all things the BIOS does before the operating system is started. Each of POST routines is assigned a POST code, a unique number which is sent to I/O port 080h before the routine is executed.

### 4-5 To Update BIOS

- System BIOS is incorporated into a Flash memory component. Flash BIOS allows user to update BIOS without the need to replace an EPROM component.
- **Please follow the steps below for updating the system BIOS:**  
 Step 1. Please visit Soltek website: [www.soltek.com.tw](http://www.soltek.com.tw), download the .zip file of the latest BIOS into your hard disk, and then decompress it into a Floppy disk. The decompressed files are (1) .exe file(execution file), (2) BIOS file, (3) Readme file.

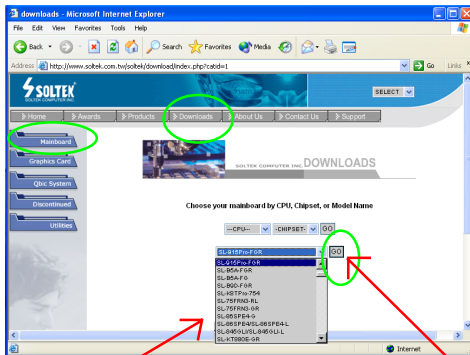

Choose the Model which you want to update.

Click on "Go" to download the BIOS and BIOS-update Utility to your hard disk first.

Step 2. Create a bootable diskette.

Step 3. Insert the diskette into drive A, boot your system with the diskette.

Step 4. Insert the diskette with the BIOS-update Execution file and the BIOS file into drive A.

Step 5. Under "A " prompt, type on the DOS screen the BIOS-Update Execution file name

Step 6. Then press the Space bar to key in a space after the .exe file name.

Step 7. Then type key in the BIOS file name (with extension) right after the space.

Step 8. Then press <Enter> to run BIOS update program.

A:> BIOS-update Execution file name   BIOS file name.Extension

Should type a space here

Step 9. When the message "Flash ROM Update Completed - Pass." appears, please restart your system. You have now updated the system BIOS successfully.

BIOS Update Illustration:

- (1) Executing the “awdf flash.exe k8AV2008.bin” in DOS system, Award Flash Memory Writer Start Screen appears: To input BIOS file name.

AwardBIOS Flash Utility V8.24F (C)Phoenix Technologies Ltd. All Rights Reserved
For K8T800-8237-6A7L0SAAC-00    Date: 09/18/2003  File Name to Program : K8AV2008.BIN
Message: Input the (BIOS) file name

- (2) Press Y if you want to back up your old BIOS,. Otherwise, press N to go on without saving.

AwardBIOS Flash Utility V8.24F (C)Phoenix Technologies Ltd. All Rights Reserved
For K8T800-8237-6A7L0SAAC-00    Date: 09/18/2003  File Name to Program : K8AV2008.BIN
Message: Do You Want To Save BIOS (Y/N)

- (3) Press Y to write the latest BIOS into system.

AwardBIOS Flash Utility V8.24F (C)Phoenix Technologies Ltd. All Rights Reserved
For K8T800-8237-6A7L0SAAC-00    Date: 09/18/2003  File Name to Program : K8AV2008.BIN
Message: Press “Y” to Program or “N” to Exit

(4) Updating is in progress. Do not turn off power at this moment.

AwardBIOS Flash Utility V8.24F (C)Phoenix Technologies Ltd. All Rights Reserved
For K8T800-8237-6A7L0SAAC-00 Date: 09/18/2003 Flash Type - SST 39SF020 /5V File Name to Program : k8av2008.bin Writing Flash Memory - 0FE00 OK ██ Write OK    No Update    Write Fail
Warning: Don't Turn Off Power Or Reset System !

(5) When the process is complete, remove the Floppy Diskette and press F1 to restart the system to put the new BIOS into effect.

AwardBIOS Flash Utility V8.24F (C)Phoenix Technologies Ltd. All Rights Reserved
For K8T800-8237-6A7L0SAAC-00 Date: 09/18/2003 Flash Type - SST 39SF020 /5V File Name to Program : k8av2008.bin Flashing Complete Remove Floppy Diskette & Hit <F1> to Continue ██ ██ Write OK    No Update    Write Fail
F1 Reset

### 4-6 BIOS SETUP --- CMOS Setup Utility

Warning and Tips: If changing CMOS Configuration causes difficulty in rebooting system, you can take the following measures:

1. At pressing the power button to reboot, press the "Insert" key at the same time. As soon as the screen displays the booting message, release the "Insert" key and press "Delete" key to enter CMOS Setup Utility. Then choose the "Load Optimized (Optimal) Defaults" menu to restore the default values for a new start. Or,
2. Open your machine cabinet and clear CMOS with jumper setting. Please refer to the Jumper Setting Section of this User manual.

#### 4-6.1 CMOS Setup Utility

This mainboard comes with the AWARD BIOS from AWARD Software Inc. Enter the CMOS Setup Utility Main Menu by:

1. Turn on or reboot your system. After a series of diagnostic checks, the following message will appear:

**PRESS <DEL> TO ENTER SETUP**

2. Press <DEL> key and the main program screen will appear as follows.

#### Phoenix - AwardBIOS CMOS Setup Utility

<ul style="list-style-type: none"> <li>▶ Standard CMOS Features</li> <li>▶ Advanced BIOS Features</li> <li>▶ Advanced Chipset Features</li> <li>▶ Integrated Peripherals</li> <li>▶ Power Management Setup</li> <li>▶ PnP/PCI Configurations</li> <li>▶ SmartDoc Anti-Burn Shield</li> </ul>	<ul style="list-style-type: none"> <li>▶ Frequency/Voltage Control</li> <li>Load Optimized Defaults</li> <li>Set Supervisor Password</li> <li>Set User Password</li> <li>Save &amp; Exit Setup</li> <li>Exit Without Saving</li> </ul>
<p>Esc: Quit F10: Save &amp; Exit Setup</p>	
<p>↑↓←→ : Select Item</p>	
<p>Time, Date, Hard Disk Type...</p>	



3. When one main item of the Main Menu is chosen and clicked on, its submenu will appear to display the related items and options. On the other hand, a list of operation guide will appear at the end of the submenu as below:

↑↓ ←→ :Move Enter: Select +/-/PU/PD: Value F10: Save ESC: Exit F1: General Help  
F5: Previous Values F6: Fail-Safe Defaults F7: Optimized Defaults

- (1) Use the arrow keys on your keyboard to select an option, and press <Enter>. Modify the system parameters to reflect the options installed in your system.
  - (2) Press <Enter> to select item or option.
  - (3) +/- /PU/PD: To adjust or select value.
  - (4) F10: Save configuration.
  - (5) Esc: Press <Esc> key to get out of the menu on screen.
  - (6) F1: Press F1 to display General Help List.
  - (7) F5: Press F5 to restore the Previous Value.
  - (8) F6: Press F6 to load the Fail-Safe default values.
  - (9) F7: Press F7 to load the Optimized Default Values.
4. You may return to the Main Menu anytime by pressing <ESC>.
  5. In the Main Menu, "SAVE AND EXIT SETUP" saves your changes and reboots the system, and "EXIT WITHOUT SAVING" ignores your changes and exits the program.

**Attention:** The BIOS Setup is subject to constant update without further notice to users. It is necessary for users themselves to update onboard BIOS with the latest BIOS version provided in our web site:  
<http://www.soltek.com.tw>

## 4-6.2 Standard CMOS Setup

Standard CMOS Setup records some basic system hardware configuration and sets the system clock and error handling. You only need to modify the configuration values of this option if you want to change your system hardware configuration or when the data stored in the CMOS memory gets lost or damaged.

Run the Standard CMOS Setup as follows:

Choose "Standard CMOS Setup" from the Main Menu. A screen with a list of options will appear:

### Phoenix - AwardBIOS CMOS Setup Utility Standard CMOS Features

Date (mm:dd:yy)	Fri, Sep 5 2003	Item Help
Time (hh:mm:ss)	9 : 41 : 11	Menu Level ▶
IDE Channel 0 Master	WDC WD400BB-00DEA0	Change the day, month, year and century
IDE Channel 0 Slave	None	
IDE Channel 1 Master	None	
IDE Channel 1 Slave	None	
Drive A	1.44M, 3.5 in.	
Drive B	None	
Video	EGA/VGA	
Halt On	All Errors	
Base Memory	640K	
Extended Memory	252928K	
Total Memory	253952K	

↑↓ ←→ :Move Enter: Select +/-/PU/PD: Value F10: Save ESC: Exit F1: General Help  
F5: Previous Values F6: Fail-Safe Defaults F7: Optimized Defaults

**Date (mm:dd:yy)** The BIOS determines the day of the week from the other date information. This field is for reference. Press the left or right arrow key to move to the desired field (date, month, year). Press the PgUp or PgDn key to increment the setting, or type the desired value into the field.

**Time (hh:mm:ss)** The time format is based on the 24-hour military-time clock. For example, 1 p.m. is 13:00:00. Press the left or right arrow key to move to desired field. Press the PgUp or PgDn key to increment the setting, or type the desired value into the field.

**Channel 0 / Channel 1 Master / Slave** This field records the specifications for all non-SCSI hard disk drives installed in your system. Refer to the respective documentation on how to install the drives.

**Phoenix - AwardBIOS CMOS Setup Utility  
IDE Primary Master**

IDE HDD Auto-Detection	Press Enter	Item Help
IDE Channel 0 Master Access Mode	Auto Auto	Menu Level ▶
Capacity	40022MB	To auto-detect the HDD's size, head... on this channel
Cylinder	19158	
Head	16	
Precomp	0	
Landing Zone	19157	
Sector	255	

**Drive A / Drive B** Select this field to the type(s) of floppy disk drive(s) installed in your system. The choices are:  
360KB, 5.25 in.; 1.2MB, 5.25 in.;  
720KB, 3.5 in.; 1.44MB, 3.5 in.;  
2.88MB, 3.5 in.; None

**Video** Select the type of primary video subsystem in your computer. The BIOS usually detects the correct video type automatically. The BIOS supports a secondary video subsystem, but you do not select it in setup.

**Halt On** During the power-on self-test (POST), the computer stops if the BIOS detects a hardware error. You can tell the BIOS to ignore certain errors during POST and continue the boot-up process.

**Base Memory** Typically 640KB. Also called conventional memory. The DOS operating system and conventional applications use this area.

**Extended Memory** Above the 1MB boundary. Early IBM personal computers could not use memory above 1MB, but current PCs and their software can use extended memory.

**Total Memory** This option shows system memory capacity.

### 4-6.3 Advanced BIOS Features

Advanced BIOS Features improves your system performance or sets up system features according to your preference.

Run the Advanced BIOS Features as follows:

Choose “Advanced BIOS Features” from the Main Menu and a screen with a list of options will appear:

**Phoenix - AwardBIOS CMOS Setup Utility**  
**Advanced BIOS Features**

<ul style="list-style-type: none"> <li>▶ Hard Disk Boot Priority</li> <li>Virus Warning</li> <li>CPU Internal Cache</li> <li>External Cache</li> <li>CPU L2 Cache ECC Checking</li> <li>Quick Power On Self Test</li> <li>First Boot Device</li> <li>Second Boot Device</li> <li>Third Boot Device</li> <li>Boot Other Device</li> <li>Swap Floppy Drive</li> <li>Boot Up Floppy Seek</li> <li>Boot Up NumLock Status</li> <li>Typematic Rate Setting</li> <li>x Typematic Rate (Chars/Sec)</li> <li>x Typematic Delay (Msec)</li> <li>Security Option</li> <li>APIC Mode</li> <li>OS Select For DRAM &gt; 64MB</li> <li>Video BIOS Shadow</li> </ul>	<p>Press Enter</p> <p>Disabled</p> <p>Enabled</p> <p>Enabled</p> <p>Enabled</p> <p>Enabled</p> <p>Floppy</p> <p>Hard Disk</p> <p>CDROM</p> <p>Enabled</p> <p>Disabled</p> <p>Disabled</p> <p>On</p> <p>Disabled</p> <p>6</p> <p>250</p> <p>Setup</p> <p>Enabled</p> <p>Non-OS2</p> <p>Enabledf</p>	<p>Item Help</p> <hr/> <p>Menu Level ▶</p>
---	--	--

↑↓←→ : Move    Enter: Select    +/-/PU/PD: Value    F10: Save    Esc: Exit    F1: General Help  
 F5: Previous Values    F6: Fail-Safe Defaults    F7: Optimized Defaults

**Hard Disk Boot Priority** Press <Enter> to reveal the hard disk list. Then press Up/Down Arrow key to select a hard disk, and then press<+>/<-> key to move it up or down the list so as to set up the boot priority.

<ul style="list-style-type: none"> <li>1. Ch1 M. : Maxtor xxxxxxxx</li> <li>2. Chi S. : STxxxxxx</li> <li>3. Bootable Add-in Cards</li> </ul>	<p>Item Help</p> <hr/> <p>Menu Level ▶</p>
---	--

- Virus Warning** If enabled, BIOS will show a warning message on screen whenever anyone attempts to write data into HDD boot sector.
- CPU Internal / External Cache** Cache memory is additional memory that is much faster than conventional DRAM (system memory). CPUs from 486-type up contain internal cache memory (L1), and most, but not all, modern PCs have additional (external) cache memory (L2). When the CPU requests data, the system transfers the requested data from the main DRAM into cache memory, for faster access by the CPU.
- CPU L2 Cache ECC Checking** To enable/disable CPU L2 Cache Error Correcting Code Checking .
- Quick Power On Self Test** Select Enabled to reduce the amount of time required to run the power-on self-test (POST). A quick POST skips certain steps. We recommend that you normally enable quick POST.
- First/Second/Third/Boot Other Device** The BIOS attempts to load the operating system from the devices in the sequence selected in these items. The choices: Floppy; LS120; ZIP100; HDD; CDROM; USB-FDD; USB-ZIP; USB-CDROM; LAN; Disabled
- Swap Floppy Drive** When enabled, floppy drives A and B will be exchanging without any physical connection and modification on the cables.
- Boot Up Floppy Seek** When enabled, the BIOS tests (seeks) floppy drives to determine whether they have 40 or 80 tracks. Only 360-KB floppy drives have 40 tracks; drives with 270KB, 1.2MB, and 1.44MB capacity all have 80 tracks. Because very few modern PCs have 40-track floppy drives, we recommend that you set this field to disabled to save time.

- Boot Up NumLock Status** Toggle between On or Off to control the state of the NumLock key when the system boots. If On, the numeric keypad is in numeric mode. If off, the numeric keypad is in cursor control mode.
- Typematic Rate Setting** When *Disabled*, the following two items (Typematic Rate and Typematic Delay) are irrelevant. Keystroke repeats at a rate determined by the keyboard controller in your system.  
When *Enabled*, you can select a typematic rate and typematic delay.
- X Typematic Rate (Chars / Sec)** When the typematic rate setting is enabled, you can select a typematic rate (the rate at which character repeats when you hold down a key) of 6, 8, 10, 12, 15, 20, 24, or 30 characters per second.
- X Typematic Delay (Msec)** Choices: 250; 500; 750; 1000. This option sets the time interval for displaying the first and the second characters. If enabled, the time interval is optional.
- Security Option** If you have set a password, select whether the password is required every time the System boots, or only when you enter setup.  
Choices: System; Setup(default)
- APIC Mode** To enable / disable the APIC mode.
- OS Select For DRAM > 64MB** Select OS2 only if you are running OS/2 operating system with greater than 64MB of RAM on your system.
- Video BIOS Shadow** To enable / disable Video BIOS Shadow function. To enable the function will copy Video BIOS to shadow RAM to improve performance.

### 4-6.4 Advanced Chipset Features

Choose “Advanced Chipset Features” from the Main Menu and a list of option will appear:

**Phoenix - AwardBIOS CMOS Setup Utility  
Advanced Chipset Features**

		Item Help
▶ AGP & P2P Bridge Control	Press Enter	
▶ DRAM Configuration	Press Enter	Menu Level ▶
▶ LDT & PCI Bus Control	Press Enter	
Memory Hole	Disabled	DRAM timing and control
VLink DATA Rate	8X	
Init Display First	AGP	
System BIOS Cacheable	Disabled	

↑↓←→ : Move Enter: Select +/-/PU/PD: Value F10: Save Esc: Exit F1: General Help  
F5: Previous Values F6: Fail-Safe Defaults F7: Optimized Defaults

#### ▶ **AGP & P2P Bridge Control:**

To press< Enter > on AGP & P2P Bridge will reveal the following item.

**AGP Aperture Size** Options: 32; 64; 128; 256M. Memory mapped and graphics data structures can reside in a Graphics Aperture. This area is like a linear buffer. BIOS will automatically report the starting address of this buffer to the O.S.

**AGP 3.0 mode** To show the AGP onboard mode.

**AGP Driving Control** To automatically/manually set AGP Driving Control.

**AGP Driving Value** To input AGP Driving Value if you have set “Manual” in above item.  
Choices: 00~FF in 01 stepping

**AGP Fast Write** This item will enable the AGP mode into fast write mode. If your graphics card does not support this function, please do not enable this function.

**AGP Master 1 WS Write** To enable / disable the support of AGP Master 1 Waite State Write.

**AGP Master 1 WS Read** To enable / disable the support of AGP Master 1 Waite State Read.

**AGP3.0 Calibration** To enable / disable of support

**DBI Output for AGP Trans** To auto-detect / disable the DBI Output for AGP transfer.

### ► DRAM Configuration:

To press < Enter > on DRAM Configuration will reveal the following item(s).

- Current FSB Frequency** BIOS shows the actual Front Side Bus frequency.
- Current DRAM Frequency** BIOS shows the actual DRAM frequency.
- Max Memclock (Mhz)** To manually set the memory clock if you have set "by manual" in above option.  
Choice: 100; 133; 166
- 1T/2T Memory Timing** To manually/ automatically set the DDR Timing.
- CAS# LATENCY(Tcl)** Automatically set CAS# latency.
- RAS# to CAS# delay (Trcd)** Choose the RAS to CAS delay time.  
Choices: Auto; 2; 3; 4; 5; 6; 7
- Min RAS# active time** Choose the minimum RAS active time.  
Choices: Auto; 5; 6; 7; 8; 9; 10; 11; 12; 13; 14; 15
- Row Precharge Time (Trp)** Choose the Row Precharge time.  
Choices: Auto; 2; 3; 4; 5; 6

### ► LDT & PCI Bus Control:

To press < Enter > on LDT & PCI Bus Control will reveal the following item(s).

- Upstream LDT Bus Width** To set Upstream LDT BUS Width.  
Choices: 8 bit; 16 bit
- Downstream LDT Bus Width** To set Downstream LDT BUS Width.  
Choices: 8 bit; 16 bit
- LDT Bus Frequency** To set LDT Bus Frequency.  
Choices: 200MHz; 400MHz; 600MHz; 800MHz; 1G
- PCI1 Master 0 WS Write** To enable (default) / disable the support of PCI1 Master 0 Wait State Write.
- PCI2 Master 0 WS Write** To enable (default) / disable the support of PCI2 Master 0 Wait State Write.
- PCI1 Post Write** To enable (default) / disable the support of PCI1 Post Write.
- PCI2 Post Write** To enable (default) / disable the support of PCI2 Post Write.



**Memory Hole** To enabled / disabled (default) the support of Memory Hole which is reserved for ISA card.  
 Choices: Disabled; 15MB-16MB

**VLink Data Rate** To set VLink Data Rate.  
 Choices: 8X; 4X

**Init Display First** Initialize the AGP video display before initializing any other display device on the system. Thus the AGP display becomes the primary display.

**System BIOS Cacheable** Selecting Enabled allows caching of the system BIOS ROM at F0000h-FFFFFh, resulting in better system performance.

### 4-6.5 Integrated Peripherals

Choose "Integrated peripherals" from the Main Menu and a list of options will appear:

**Phoenix - AwardBIOS CMOS Setup Utility**  
**Integrated Peripherals**

<ul style="list-style-type: none"> <li>▶ VIA onChip IDE Device <span style="float: right;">Press Enter</span></li> <li>▶ VIA onChip PCI Device <span style="float: right;">Press Enter</span></li> <li>▶ Super IO Device <span style="float: right;">Press Enter</span></li> </ul>	Item Help
--	-----------

↑↓←→ : Move    Enter: Select    +/-/PU/PD: Value    F10: Save    Esc: Exit    F1: General Help  
 F5: Previous Values    F6: Fail-Safe Defaults    F7: Optimized Defaults

#### 4-6.5.1. VIA OnChip IDE Device

To press< Enter > on VIA OnChip IDE Device will reveal the following item(s).

<ul style="list-style-type: none"> <li>OnChip SATA <span style="float: right;">Enabled</span></li> <li>SATA Mode <span style="float: right;">IDE</span></li> <li>IDE DMA transfer access <span style="float: right;">Enabled</span></li> <li>OnChip IDE Channell0 <span style="float: right;">Enabled</span></li> <li>OnChip IDE Channell1 <span style="float: right;">Enabled</span></li> <li>IDE Prefetch Mode <span style="float: right;">Enabled</span></li> <li>Primary Master PIO <span style="float: right;">Auto</span></li> <li>Primary Slave PIO <span style="float: right;">Auto</span></li> <li>Secondary Master PIO <span style="float: right;">Auto</span></li> <li>Secondary Slave PIO <span style="float: right;">Auto</span></li> <li>Primary Master UDMA <span style="float: right;">Auto</span></li> <li>Primary Slave UDMA <span style="float: right;">Auto</span></li> <li>Secondary Master UDMA <span style="float: right;">Auto</span></li> <li>Secondary Slave UDMA <span style="float: right;">Auto</span></li> <li>IDE HDD Block Mode <span style="float: right;">Enabled</span></li> </ul>	Item Help
---	-----------

**VIA OnChip IDE Device:**

To press < Enter > on VIA OnChip IDE Device will reveal following item.

**OnChip SATA** To enable/disable the SATA interface.

**SATA Mode** To select the SATA Mode.  
Choices: IDE; RAID

**IDE DMA transfer access** To enable/disable the IDE direct memory access transfer function.

**On-Chip IDE Channel 10/11** The chipset contains a PCI IDE interface with support from two IDE channels. Select Enabled to activate the first and/or the second IDE interface. Select Disabled to inactivate an interface if you install a primary and/or second add-on IDE interface.  
Choices: Enabled; Disabled

**IDE Prefetch Mode** The on-board IDE drive supports IDE prefetching for faster drive accesses. If the IDE device doesn't support prefetching, set this field to Disabled.  
The choices: Enabled; Disabled

**Primary Master / Slave PIO** Choose Auto or Mode 0~4. The BIOS will detect the HDD mode type automatically when you choose Auto. You need to set to a lower mode than Auto when your hard disk becomes unstable.  
Choices: Auto(default); Mode 0; Mode 1; Mode 2; Mode 3; Mode 4

**Primary Master / Slave UDMA** Ultra DMA33/66/100/133 implementation is possible only if your IDE hard drive supports it, if the operating environment includes a DMA drive, and if your system software supports Ultra DMA33/66/100/133. Select "Auto" to enable BIOS support.  
Choices: Auto(default); Disabled

**IDE HDD Block Mode** Block mode is also called block transfer, multiple commands, or multiple sector read/write. If your IDE hard drive supports block mode (most new drives do), select Enabled for automatic detection of the optimal number of block read/write per sector the drive can support.

**4-6.5.2. VIA OnChip PCI Device:**

To press < Enter > on VIA OnChip PCI Device will reveal the following item(s).

AC97 Audio	Enabled	Item Help
1394	Enabled	
LAN	Enabled	
OnChip USB Controller	All Enabled	
OnChip EHCI Controller	Enabled	
USB Emulation	Off	
x USB Keyboard Support	Disabled	
x USB Mouse Support		

**AC97 Audio** Select "Auto" to use the on-chip audio of your system. If user wants to use add-on sound card, this item must be disabled.

**1394** To enable/disable the onboard 1394 interface.

**LAN** To enable/disable the onboard LAN (10/100) interface.

**OnChip USB Controller** To enable/disable the onchip USB controller.  
 Choices: All Enabled; All Disabled

**OnChip EHCI Controller** To enable/disable the onchip EHCI controller.

**USB Emulation** To enable/disable the USB emulation on DOS.  
 Choices: off; K/B/Ms; On

**USB Keyboard/Mouse Support** If USB Emulation is set at K/B / Mouse, this item allows you to enable/disable the USB keyboard support.

**4-6.5.3. Super IO Device:**

To press < Enter > on Super IO Device will reveal the following items.

Onboard FDC Controller	Enabled	Item Help
Onboard Serial Port 1	Auto	
Onboard Serial Port 2	Auto	
UART Mode Select	Normal	
x UR2 Duplex Mode	Half	
Onboard Parallel Port	378/IRQ7	
Parallel Port Mode	SPP	
x ECP Mode Use DMA	3	

**Onboard FDC Controller** To enable/disable the onboard Floppy Disk Drive Controller.

**Onboard Serial Port 1 / Port 2** Select an address and corresponding interrupt for the first/second serial port.

Choices: Disabled; Auto;  
3F8/IRQ4; 2F8/IRQ3;  
3E8/IRQ4; 2E8/IRQ3

**UART Mode Select** The serial port on your system may offer a variety of infrared port modes. Click here for a description of various modes.

The choices: Normal; IrDA; ASKIR; SCR

**x UR2 Duplex Mode** This options controls the operating mode between receiving and transmitting of IrDA or ASKIR or SCR.  
Choices: Half (asynchronous); Full (synchronous)

**Onboard Parallel Port** This item allows you to determine onboard parallel port controller I/O address setting.

Choices: 378H/IRQ7; 278H/IRQ5; 3BC/IRQ7; Disabled

**Parallel Port Mode** Select an operating mode for the on-board parallel (printer) port.

Choices: SPP; EPP; ECP; ECP+EPP

**x ECP mode Use DMA** Select a DMA channel for the port when you choose ECP or ECP+EPP mode for the Parallel Port Mode.

Choices: 1; 3

## 4-6.6 Power Management Setup

Power Management Setup allows you to set the system's power saving functions.

Run the Power Management Setup as follows:

Choose "Power Management Setup" from the Main Menu and a list of options will appear:

**Phoenix - AwardBIOS CMOS Setup Utility**  
**Power Management Setup**

		Item Help
ACPI function	Enabled	
ACPI Suspend Type	S1(POS)	
Power Management Option	User Define	
HDD Power Down	Disabled	
Suspend Mode	Disabled	
Video Off Option	Suspend -> Off	
Video Off Method	V/H SYNC+Blank	
MODEM Use IRQ	3	
Soft-off by PBTN	Instant-off	
Run VGABIOS if S3 Resume	Auto	
AC Loss Auto Restart	Off	
AMD K8 Cool'n'Quiet control	Auto	
▶ IRQ/Event Activity Detect	Press Enter	

↑↓ ← → : Move    Enter: Select    +/-/PU/PD: Value    F10: Save    Esc: Exit    F1: General Help  
F5: Previous Values    F6: Fail-Safe Defaults    F7: Optimized Defaults

**ACPI Function** Select Enabled(default) only if your computer's operating system supports the Advanced Configuration and Power Interface (ACPI) specification. Currently, Windows 98SE/ME, Windows 2000 and Windows XP supports ACPI.

**ACPI Suspend Type** This item allows you to select the ACPI Suspend type. You can select S3(STR) for Suspending To RAM if your system supports this mode. Or you can select S1(POS) for Power On Suspend under ACPI mode.  
Choices: S1(POS)(default);S3(STR); S1&S3

**Power Management Option** To select the type (or degree) of power saving for Doze, Standby, and Suspend modes.  
Choices: User Define:- Time length defined by user;  
Min Saving:- Minimum power saving mode;  
Max Saving: Maximum power saving mode;

- HDD Power Down** When enabled after the set time of system inactivity, the hard disk drive will be powered down while all other devices remain active.
- Suspend Mode** When enabled after the set time of system inactivity, the whole system will be suspended.
- Video Off Option** To set Video Off mode of the system.  
Choices: Always On; Suspend -> Off
- Video Off Method** This determines the manner by which the monitor is blanked.  
Choices:  
Blank Screen:- Blank signal to the Video buffer;  
V/H sync+Blank:- Blank signal to Video buffer, with Vertical and Horizontal ports off;  
DPMS Support:- To select video power management values with Display Power management Signaling support;
- MODEM Use IRQ** To set IRQ Modem should use. If users do not have a modem, please set NA.
- Soft-Off by PWRBTN** To turn off the system instantly or after 4 seconds by power button.
- Run VGABIOS if S3 Resume** To enable/disable to run VGABIOS if S3 Resume.  
Choices: Auto; Yes; No
- AC Loss Auto restart** To enable/disable to run VGABIOS if S3 Resume.  
Choices: Auto; Yes; No
- AMD K8 Cool 'n' Quiet Control** To disable /Autorun the AMD K8 CPU cool and quiet control.

**IRQ/Event Activity Detect:**

To press < Enter > on IRQ/Event Activity Detect will reveal following items.

- PS2KB Wakeup Select** To select the PS/2 KB Wake-up mode.  
Choices: Hot key; Password
- PS2KB/Ms Wakeup from S3/S4/S5** To set the hot key to wake up the system by PS/2 KB/Ms from S3/S4/S5.  
Choices: Disabled; Power; Wake; Any Key; Ctrl-F1~12
- x Power Button Lock** If the above item is not "Disabled", this item can be set enabled/disabled.
- PS2Ms Wakeup from S3/S4/S5** This item allows you to enable / disable the PS/2 Mouse Wake-up from S3/S4/S5.
- (Optional)USB Resume from S3** To enable/disable USB Resume from S3
- VGA** To enable/disable VGA Wakeup function.
- LPT & COM** To enable/disable LPT & COM Wakeup function.
- HDD & FDD** To enable/disable HDD & FDD Wakeup function.
- PCI Master** To enable/disable PCI Master Wakeup function.
- Power On by PCI Card** To enable / disable(default) the Power On by PCI Card.
- Wake Up On LAN/Ring** To enable / disable the wake on ring signal function. An input signal on the serial Ring Indicator (RI) Line (in other words, an incoming call on the modem) awakens the system from a soft off state.
- RTC Alarm Resume** To enable / disable the RTC Alarm Resume function.
- x Date (of Month)** If RTC Alarm Resume is enabled, this field allows
- x Resume Time (Hour / Minute / Second)** you to set the Alarm Date, Hour, Minute and Second.  
Date Choices: 01 ~ 31; Hour : 00 ~ 23  
Minute Choices: 00 ~ 59; Second: 00 ~ 59

**IRQs Activity Monitoring:**

To press < Enter > on IRQs Activity Monitoring will reveal following items.

- Primary Intr.** To turn on/off the Interrupt configuration.
- IRQ3,4,5,7,9,10,11,12, 13,14,15** To enable/disable IRQ Assignment.

## 4-6.7 PnP / PCI Configuration

PnP/PCI Configuration allows you to modify the system's power saving functions.

Run the PnP/PCI Configuration as follows:

Choose "PnP/PCI Configuration" from the Main Menu and a screen with a list of options will appear:

Phoenix - AwardBIOS CMOS Setup Utility		Item Help
PnP PCI Configurations		
PNP OS Installed	No	
Reset Configuration Data	Disabled	
Resources Controlled by	Auto(ESCD)	
x IRQ Resources	Press Enter	
PCI/VGA Palette Snoop	Disabled	
Assign IRQ For VGA	Enabled	
Assign IRQ For USB	Enabled	

↑↓←→ : Move    Enter: Select    +/-/PU/PD: Value    F10: Save    Esc: Exit    F1: General Help  
 F5: Previous Values    F6: Fail-Safe Defaults    F7: Optimized Defaults



**PNP OS Installed** Allows you to configure the PNP devices by BIOS or O/S.

Choices: No(by BIOS); Yes(by O/S)

**Reset Configuration Data** Normally, you leave this Disabled(default). Select Enabled to reset Extended System Configuration Data (ESCD), when you exit Setup if you have installed a new add-on and the system reconfiguration has caused such a serious conflict that the operating system cannot boot.

**Resource Controlled By** The Plug and Play Award BIOS can automatically configure all the boot and Plug and Play compatible devices. If you select *Auto*, all the interrupt request (IRQ) and DMA assignment fields will not appear, as the BIOS automatically assigns them. If you select *Manual*, the IRQ Resources item will appear for your configuration (see below).

**IRQ Resources** Press Enter. Please refer to the list below:

**Phoenix - AwardBIOS CMOS Setup Utility**  
**IRQ Resources**

IRQ-3 assigned to	PCI Device	Item Help
IRQ-4 assigned to	PCI Device	
IRQ-5 assigned to	PCI Device	
IRQ-7 assigned to	PCI Device	
IRQ-9 assigned to	PCI Device	
IRQ-10 assigned to	PCI Device	
IRQ-11 assigned to	PCI Device	
IRQ-12 assigned to	PCI Device	
IRQ-14 assigned to	PCI Device	
IRQ-15 assigned to	PCI Device	

↑↓←→ : Move    Enter: Select    +/-/PU/PD: Value    F10: Save    Esc: Exit    F1: General Help  
F5: Previous Values    F6: Fail-Safe Defaults    F7: Optimized Defaults

**PCI/VGA Palette Snoop** This option allows the BIOS to preview VGA status, and to modify the information delivered from the feature Connector of the VGA card to MPEG card. This option can solve the display inversion to black after you have used a MPEG card.

**Assign IRQ For VGA** To enable/disable to assign IRQ for VGA.

**Assign IRQ For USB** To enable/disable to assign IRQ for USB.

### 4-6.8 SmartDoc Anti-Burn Shield

This section helps you to get more information about your system including CPU temperature, FAN speed and voltage. It is recommended that you contact your mainboard supplier to get proper values about the setting of the CPU temperature.

Run the “SmartDoc Anti-Burn Shield” as follows:

Choose “SmartDoc Anti-Burn Shield” from the Main Menu and a screen with a list of options will appear:

**Phoenix - AwardBIOS CMOS Setup Utility**  
**SmartDoc Anti-Burn Shield**

	Item Help
Vcore	1.56V
VDIMM	2.51V
+3.3V	3.26 V
+5V	5.02V
+12V	11.75V
-12V	-11.74V
-5V	-5.10V
+5VSB	5.05V
Voltage Battery	3.24V
System Temp.	33°C
CPU Internal Temp.	27°C
CPU FAN Speed	5232 RPM
System FAN Speed	0 RPM

↑↓←→ : Move Enter: Select +/-/PU/PD: Value F10: Save Esc: Exit F1: General Help  
F5: Previous Values F6: Fail-Safe Defaults F7: Optimized Defaults

**Vcore** Shows CPU core actual voltage value.

**VDIMM** Shows North Bridge actual voltage value.

**3.3V, +5V, +12V, -12V, -5V, 5VSB** Shows actual voltage value of all these default voltage value on board.

**Voltage Battery** Shows voltage value of the battery on board.

**CPU Internal Temp.** Shows current CPU internal temperature.

**System Temp.** Shows current system temperature.

**CPU FAN Speed** These fields display the current speed of the CPU fan.

**System FAN Speed** These fields display the current speed of the System fan.

### 4-6.9 Frequency/Voltage Control

Choose “Frequency/Voltage Control” from the Main Menu and a screen with a list of options will appear:

**Phoenix - AwardBIOS CMOS Setup Utility**  
**Frequency/Voltage Control**

		Item Help
CPU Ratio	StartUp	
Auto Detect PCI Clk	Enabled	
Spread Spectrum	Disabled	
Async AGP/PCI clock	Enabled	
CPU Clock	200MHz	
CPU Vcore Select	Default	
AGP Voltage Select	Default	
DIMM Voltage Select	Default	
2.5V Select	Default	

↑↓ ← → : Move Enter: Select +/-/PU/PD: Value F10: Save Esc: Exit F1: General Help  
 F5: Previous Values F6: Fail-Safe Defaults F7: Optimized Defaults

**CPU Ratio** To select the CPU clock ratio.  
 Choices: Startup; 200MHz x4~11;

**Auto Detect PCI Clk** To enable / disable this auto detection function on PCI clock.

**Spread Spectrum** This function will reduce the EMI (Electromagnetic Interference) in your system. If you do not have an EMI problem, leave this item disabled.

**Async AGP/PCI clock** To enable / disable this Asynchronous AGP/PCI clock.

**CPU Clock** This item allows you to set CPU Clock.  
 Choices: 200MHz ~300MHz in 1MHz stepping.  
 (Key in a decimal number to select CPU clock.)

**CPU Vcore Select** To configure the CPU Voltage. Usually, to raise CPU voltage will raise the chance of CPU overclocking and yet risk damage of CPU.  
 Choices: Default;  
 0.800V ~1.550V in 0.25V stepping

**AGP Voltage Select** To configure the AGP Voltage.  
 Choices: 1.5V; 1.6V; 1.7V; 1.8V

**DIMM Voltage Select** To configure the DIMM Voltage.  
 Choices: 2.6V; 2.7V; 2.8V;


**2.5V Voltage Select** To configure the VDD Voltage.  
 Choices: 2.5V; 2.6V; 2.7V; 2.8V

### 4-6.10 Load Optimized Defaults

When you press <Enter> on this item, you will get a confirmation dialog box with a message similar to:

“ Load Optimized Defaults (Y / N) ? N ”

Phoenix - AwardBIOS CMOS Setup Utility

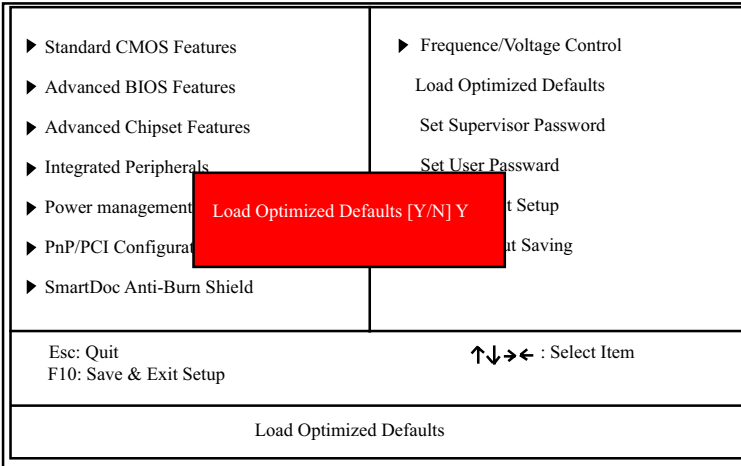

“Y” is for “Yes”, and “N” is for “No”.

Pressing “Y” loads the BIOS Optimized default values to restore the BIOS to its original status.

### 4-6.11 SET SUPERVISOR / USER PASSWORD

These two options allow you to set your system passwords. Normally, the supervisor has a higher priority to change the CMOS setup option than the users. The way to set up the passwords for both Supervisor and Users are as follows:

1. Choose “Change Password” in the Main Menu and press <Enter>. Then following message appears:

“Enter Password : ”

2. The first time you run this option, enter your password up to 8 characters and press <Enter>. (The screen does not display the entered characters.)
3. After you enter the password, the following message appears prompting you to confirm the password:

`"Confirm Password : "`

4. Enter the same password "exactly" the same as you have just typed to confirm the password and press <Enter>.
5. Move the cursor to Save & Exit Setup to save the password.
6. If you need to delete the password entered before, choose the Supervisor Password and press <Enter>. It will delete the password that you have entered before.
7. Move the cursor to Save & Exit Setup to save the option you have just configured; otherwise the old password will still be there the next time you turn your system on.
8. Press <Enter> to exit to the Main Menu.

#### 4-6.12 SAVE & EXIT SETUP

SAVE & EXIT SETUP allows you to save all modifications you have specified into the CMOS memory. Highlight this option on the Main Menu and the following message appears:

`"SAVE to CMOS and EXIT (Y/N) ? Y "`

"Y" is for "Yes", and "N" is for "No".

Press <Enter> key to save the configuration changes.

#### 4-6.13 EXIT WITHOUT SAVING

EXIT WITHOUT SAVING option allows you to exit the Setup Utility without saving the modifications that you have specified. Highlight this option on the Main Menu and the following message appears:

`"Quit Without Saving (Y/N) ? N "`

"Y" is for "Yes", and "N" is for "No".

You may change the prompt to "Y" and press <Enter> key to leave this option .