

Supplementary Note RHINO 5 User Manual 1.03

Add AMD 5k86, Cyrix CPU & Intel CPU setting, combine CPU clock, clock multiplier and CPU type to one table, please update CPU type setting page on your manual

CPU TYPE (For RHINO5 ver1.16 or later)

JP2	JP29	JP30	JP39	CPU Clock	CPU TYPE
2-3	2-3	2-3	2-3	50MHz	Intel P54C-75
1-2	2-3	2-3	2-3		Cyrix 6x86-P120+ (100MHz)
2-3	2-3	2-3	2-3		AMD 5k86-P75 (75MHz)
2-3	1-2	2-3	2-3	60MHz	Intel P54C-90
1-2	1-2	2-3	2-3		Intel P54C-120
1-2	1-2	2-3	1-2		Intel P54C-150
2-3	1-2	2-3	1-2		Intel P54C-180
2-3	1-2	2-3	2-3		AMD 5k86-P90 (90MHz)
1-2	1-2	2-3	2-3		Cyrix 6x86-P150+(120MHz)
2-3	2-3	1-2	2-3	66MHz	Intel P54C-100
1-2	2-3	1-2	2-3		Intel P54C-133
1-2	2-3	1-2	1-2		Intel P54C-166
2-3	2-3	1-2	1-2		Intel P54C-200
2-3	2-3	1-2	2-3		AMD 5k86-P100 (100MHz)
1-2	2-3	1-2	2-3		Cyrix 6x86-P166+ (133MHz)