

## Supplementary Note RHINO 5 User Manual 1.01

Add AMD 5k86, Cyrix CPU & Intel CPU setting, combine CPU clock, clock multiplier and CPU type to one table, please update CPU type setting page on your manual

### CPU TYPE ( For RHINO5 ver 1.15 or previous version)

JP2	JP29	JP30	JP39	CPU Clock	CPU TYPE
2-3	1-2	2-3	2-3	50MHz	Intel P54C-75
1-2	1-2	2-3	2-3		Cyrix 6x86-P120+ (100MHz)
2-3	1-2	2-3	2-3		AMD 5k86-P75 (75MHz)
2-3	2-3	1-2	2-3	60MHz	Intel P54C-90
1-2	2-3	1-2	2-3		Intel P54C-120
1-2	2-3	1-2	1-2		Intel P54C-150
2-3	2-3	1-2	1-2		Intel P54C-180
2-3	2-3	1-2	2-3		AMD 5k86-P90 (90MHz)
1-2	2-3	1-2	2-3		Cyrix 6x86-P150+ (120MHz)
2-3	1-2	1-2	2-3	66MHz	Intel P54C-100
1-2	1-2	1-2	2-3		Intel P54C-133
1-2	1-2	1-2	1-2		Intel P54C-166
2-3	1-2	1-2	1-2		Intel P54C-200
2-3	1-2	1-2	2-3		AMD 5k86-P100(100MHz)
1-2	1-2	1-2	2-3		Cyrix 6x86-P166+ (133MHz)