


SRI00-N

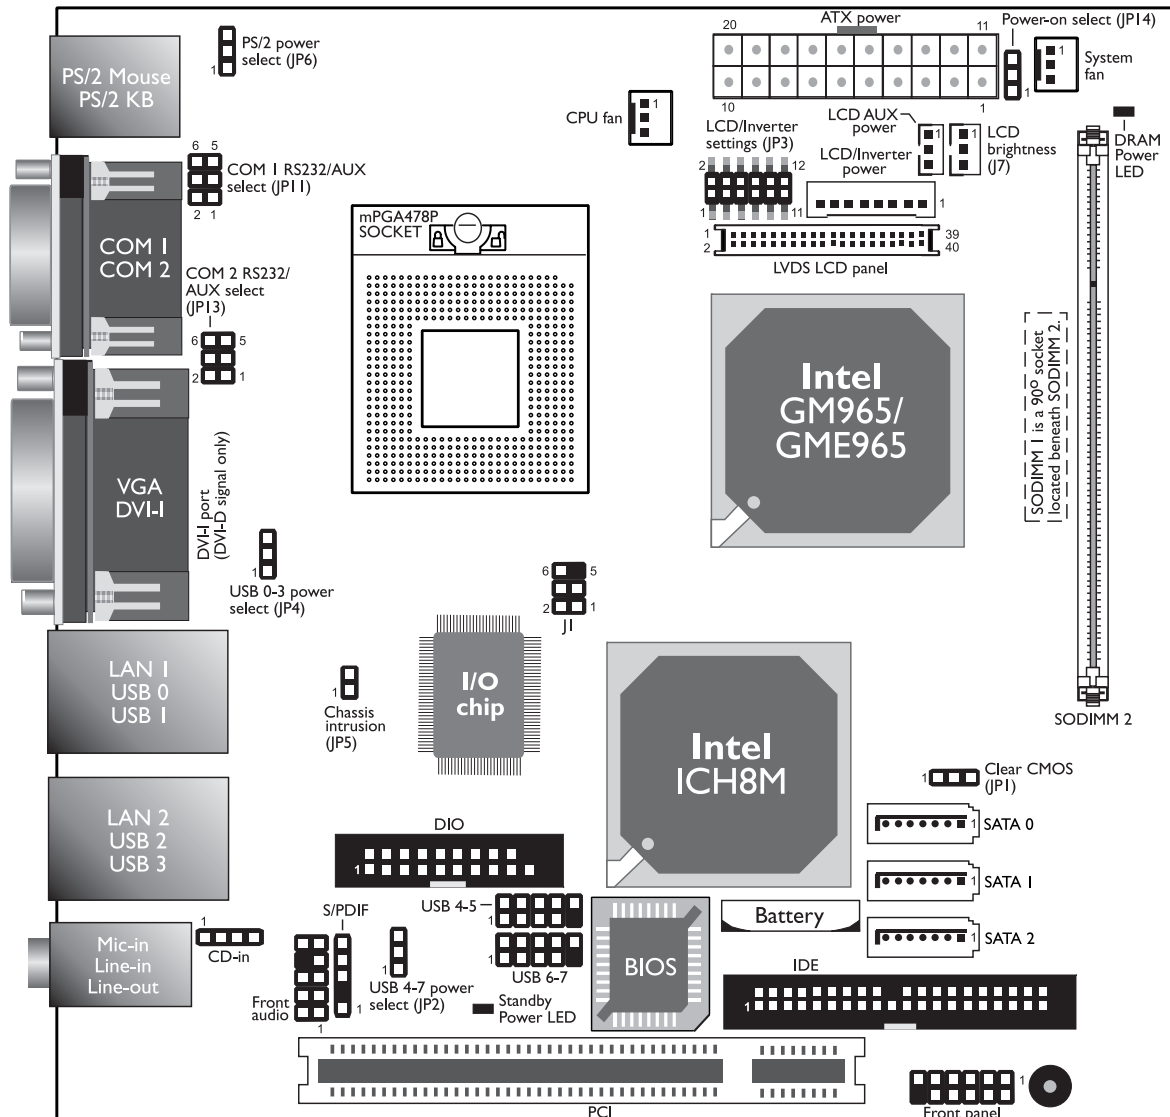

Power-on Select	JP14	USB Power: 0-3 (JP4), 4-7 (JP2)	
Power-on via power button (default)	1-2 On	5V (default)	1-2 On
Power-on via AC power	2-3 On	5V_standby	2-3 On

COM 1 RS232/AUX	JP11	COM 2 RS232/AUX	JP13
RS232	1-3, 2-4 On (default)	RS232	1-3, 2-4 On (default)
Auxiliary power	3-5 (5V), 4-6 (12V) On	Auxiliary power	3-5 (5V), 4-6 (12V) On

Clear CMOS Data	JP1	PS/2 Power	JP6
Normal (default)	1-2 On	5V (default)	1-2 On
Clear CMOS Data	2-3 On	5V_standby	2-3 On

LCD/Inverter Settings - JP3				
Panel Power		Inverter On Level		Inverter On/Off Select
5V	1-3 On	5V	2-4 On	Active Low 8-10 On
3.3V	3-5 On	12V	4-6 On	Active High 10-12 On
12V	7-9 On			

LCD Brightness Control (Voltage Level Adjust)	J7
Increases the voltage level	1-2 On
Decreases the voltage level	2-3 On

Note: Before powering-on the system, make sure JP3's setting matches the LCD panel's specification. Selecting the incorrect voltage will seriously damage the LCD panel.

Note: Increasing or decreasing the voltage to control the LCD panel's brightness varies among Inverters. You must refer to the Inverter's specification to make the appropriate adjustment to the brightness of the LCD panel.