


SR960-N

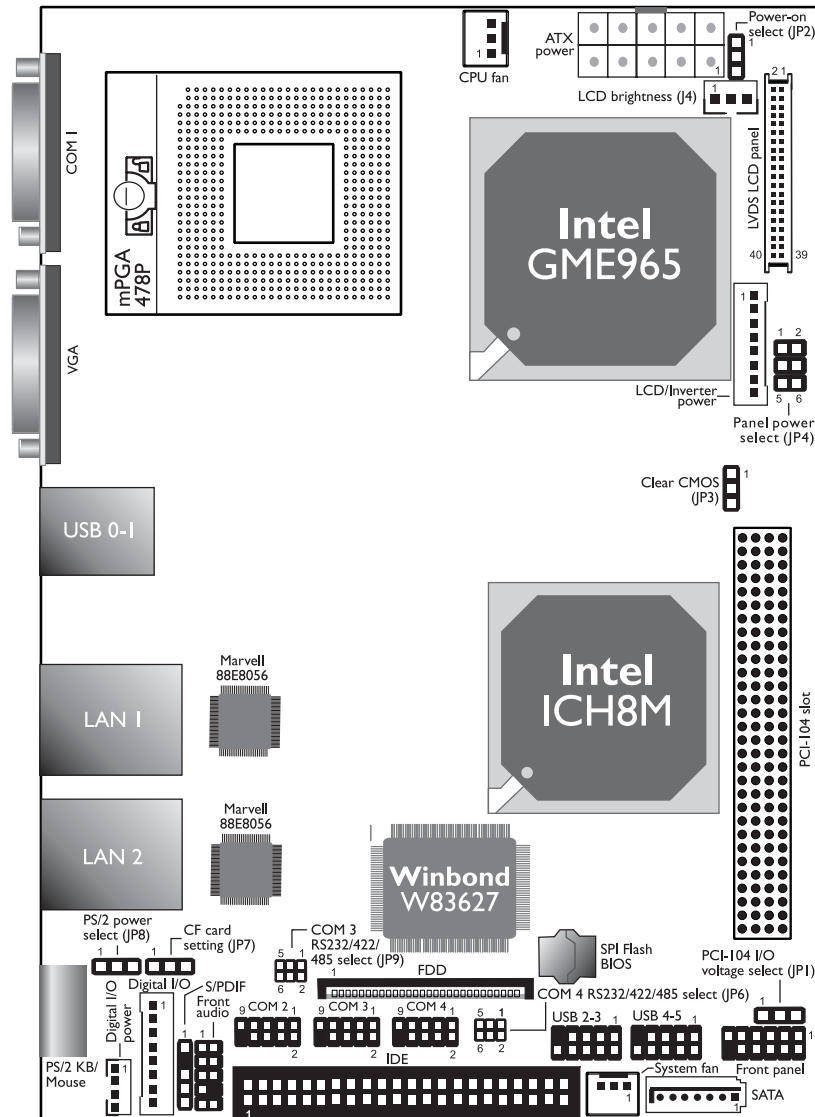

PCI-I/O Voltage Select	J1	PS/2 Power	JP8
3.3V (d)	1-2 On	5V (d)	1-2 On
5V	2-3 On	5V_standby	2-3 On

Power-on Select	JP2	Clear CMOS Data	JP3
Power-on via power button (d)	1-2 On	Normal (d)	1-2 On
Power-on via AC power	2-3 On	Clear CMOS Data	2-3 On

LCD Brightness Control (Voltage Level Adjust)	J4	Panel Power Select	JP4
Increases the voltage level	1-2 On	12V	1-2 On
Decreases the voltage level	2-3 On	5V	3-4 On
		3.3V (d)	5-6 On

Increasing or decreasing the voltage to control the LCD panel's brightness varies among Inverters. You must refer to the Inverter's specification to make the appropriate adjustment to the brightness of the LCD panel.

COM 3 (JP9) / COM 4 (JP6) RS232/RS422/RS485 Select	
RS232 (d)	1-2 On
RS422 Half Duplex	3-4 On
RS485	5-6 On

CF Card Setting	JP7
Master (d)	1-2 On
Slave	2-3 On

"(d)" denotes default setting