

## External Battery Connector (EX-BAT)

If the mother board does not have rechargeable battery, or external battery is desired to use. External battery should be plugged to this connector. Pinout is as follows:-

Pin	Description
1	GND
2	Battery Out
3	Battery In
4	External Battery In

.2-3 Close : Internal Battery

---

#### 4. Installation of DRAM

---

TD-70AN supports 2 banks of SIMM RAM:-

Bank\_0 M1, M2

Bank\_1 M3, M4

The possible configuration of DRAM is described as below:-

Memory Size	Bank 0	Bank 1
512 KB	256 KB	-----
1MB	256 KB	256 KB
2 MB	1 MB	-----
4 MB	1 MB	1 MB
8 MB	4 MB	-----
16 MB	4 MB	4 MB

---

#### 5. Selection of Operating Speed

---

The operating speed can be controlled through hardware switch and software control. The hardware switch has been described in section 3, Turbo Switch & Turbo LED Connector (TURBO).

