



Electronic Emission Notices

Federal Communications Commission (FCC) Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with instructions contained in this manual, may cause harmful interference to radio and television communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- REORIENT OR RELOCATE THE RECEIVING ANTENNA
- INCREASE THE SEPARATION BETWEEN THE EQUIPMENT AND THE RECEIVER
- CONNECT THE EQUIPMENT INTO AN OUTLET ON A CIRCUIT DIFFERENT FROM THAT OF THE RECEIVER
- CONSULT THE DEALER OR AN EXPERIENCED AUDIO/TELEVISION TECHNICIAN

NOTE: Connecting this device to peripheral devices that do not comply with Class B requirements, or using an unshielded peripheral data cable, could also result in harmful interference to radio or television reception.

The user is cautioned that any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

To ensure that the use of this product does not contribute to interference, it is necessary to use shielded I/O cables.

Copyright

This manual is copyrighted with all rights reserved. No portion of this manual may be copied or reproduced by any means.

While every precaution has been taken in the preparation of this manual, no responsibility for errors or omissions is assumed. Neither is any liability assumed for damages resulting from the use of the information contained herein.

Trademarks

All brand names, logos and registered trademarks mentioned are property of their respective owners.

TABLE OF CONTENTS

HARDWARE CONFIGURATION	4
Key Features	4
MOTHERBOARD LAYOUT	7
REAR PANEL	8
AUDIO CONFIGURATION	10
SPEAKER CONFIGURATION	10
Method 1: 2/4/6 Channel audio output on back panel only	10
Method 2: Using S-Bracket connectors	12
CONNECTORS	14
Floppy Disk Drive Connector - CN3	14
IDE Connectors - CN1, CN2	14
Six Channel Audio Output Connector - J19	15
TV Out Header - J5	16
IEEE1394 Connector - J23	17
Chassis Alarm Lead - JP12 (optional)	18
Fan Power Connectors - CPUFAN1, SYSFAN1	19
CD-IN Header - J18	20
AUX-IN Header - J20	20
Front Panel Audio Header - FP-S1	21
USB Headers - FP-U1, FP-U2	22
Front Panel Header - FP1	23
Serial ATA Hard Disk Connectors - SATA1/SATA2/SATA3/SATA4	24
JUMPER SETTING	26
JP9 - CMOS Clear	26
JP2 - Onboard AC97 Sound Select	26
JP13 - Onboard LAN Select	26
JP3 - Onboard IEEE1394 Select	26

SLOTS	27
CPU INSTALLATION	28
MEMORY CONFIGURATIONS	30
DDR DIMM Sockets Location	30
Install DDR DIMMs	31
Memory Configurations	31
BIOS SETUP	32
Starting Setup	32
Main Menu	33
Standard CMOS Features	34
Advanced BIOS Features	35
Advanced Chipset Features	35
Integrated Peripherals	35
Power Management Setup	35
PnP/PCI Configurations	35
PC Health Status	35
Set Supervisor/User Password	36
BIOS Update Procedure	37
SATA RAID SETUP	38
Creating RAID Sets	38
Deleting RAID Sets	38
Resolving Conflict	39
DRIVER AND RAID SOFTWARE INSTALLATION	39
Microsoft Windows Driver Installation	39
Install Windows2000/XP	39
APPENDIX	40

HARDWARE CONFIGURATION

Key Features

Chipset

- ATI®RS480+SB400 Chipset.

Processor

- Support for AMD™ K8 Processor in a Socket 939 package.
- Support Hypertransport interface bus.

VRM (Voltage Regulator Modules) onboard

- Flexible motherboard design with on board VRM, easy to upgrade with future AMD™ K8 processors.
- 0.800V to 1.55V in 25mV steps.

System Memory

- Supports four 184pin DDR RAM sockets.
- DIMM size support from 64 MB to 4GB.
- Support Dual Channel 128-bit Wide Memory Interface.
- Support 266/333/400 DDR RAM memory type.

System BIOS

- PnP, APM, ATAPI and Windows®2000/XP.
- Full support of ACPI & DMI.
- Auto detects and supports LBA harddisks with capacities over 160GB.
- Easy to upgrade BIOS.

Plug and Play

- Supports Plug and Play specification 1.1.
- Plug and play for Windows® 2000and XP.
- Fully assignable PCI interrupts.

TV Out

- Integrated TV encoder.
- 10-bit DAC with 4-tap filter.
- PAL/NTSC TV Out with Composite and S-Video Outputs via header.
- ATI's exclusive "Composite Dot Crawl" freeze option for PAL and NTSC to improve the picture quality.
- TV-Out power management support.

Onboard I/O

- Onboard two PCI fast IDE ports supporting up to 4 ATA, ATA2 , Ultra ATA33/66/100/133 IDE HDDs, CD-ROMs, ZIP drives and LS-120 drives as boot drive.
- One ECP/EPP parallel port.
- One 16550 Compatible UART serial ports via header.
- One floppy port supports two FDD of 360KB, 720KB, 1.2MB , 1.44MB and 2.88MB capacity.
- Eight USB ports (four ports via two headers).
- PS/2 keyboard connector.
- PS/2 mouse connector.
- One front panel sound connector.
- Infrared (IrDA) is supported via a header.

Extended USB Support

- Includes two OHCI host controllers,increasing the number of external ports to eight.
- Includes one OHCI USB2.0 Host Controller that supports all eight ports (Bandwidth shared between eight ports).
- This Sapphire motherboard supports USB 2.0 feature on Windows ® 2000(with SP4 or above) and XP(with SP1 or above) OS.

Onboard VGA

- Integrated ATI PCI-E X300 graphics core.
- Supports display (CRT or TV out).
- Integrated DAC and CRT controllers.
- High resolution video playback.
- Up to 2048x1536, non-interlaced screen resolution for CRT.

Onboard Marvell 88E8052 PCI Express Gigabit LAN

- Full compliance with IEEE 802.3u 100 Base-T specifications and IEEE 802.3X Full Duplex Flow Control.
- Supports 10 Mb/s, 100 Mb/s and 1000 Mb/s operation.
- Supports Wake-On-LAN function and remote wake-up.

PCI Express Graphics Interface

- One 16-lane (x16 port) PCI Express port intended for external graphics.
- Fully compliant to the PCI Express Base Specification revision 1.0a.
- The base frequency of this interface is 4GB/s.
- PCI Express supports an enhanced addressing mechanism.

PCI Express x1 Port

- One 1-lane (x1 port) PCI Express port.
- Fully compliant to the PCI Express Base Specification revision 1.0a.
- Two virtual channel support for full unsynchronized data transfers.
- Supports full 2.5Gb/s bandwidth in each direction per x1 lane.

Power Management

- Supports SMM, APM and ACPI.
- Break switch for instant suspend/resume on system operations.
- Energy star "Green PC" compliant.
- Hardware monitoring circuit is supported, provide voltage, fan speed, etc. monitoring.
- Wake-On-LAN (WOL) support.
- Supports Suspend-To-RAM (STR).

Onboard AC97 6 Channel Sound

- Integrated AC97 controller with standard AC97 Codec.
- Direct Sound and Sound Blaster compatible.
- Full-Duplex 16-bit record and play back.
- PnP and APM 1.2 support.
- Windows®2000/XP drivers ready.
- Line-in, Line-out, Mic-in.
- Supports ALC650 AC97 codes for six sound channel output.

Onboard IEEE1394

- Compliant with 1394 open HCI specifications v1.0 and v1.1.
- Integrated 400Mbit 2-port PHY.

Onboard Serial ATA host Controller

- Independent DMA operation on four ports.
- Data transfer rates of 150MB/s.
- RAID 0/1 feature support .

Expansion Slots


- 1 PCI Express x16 slot.
- 1 PCI Express x1 slot.
- 5 PCI bus master slots - ver. 2.2 compliant.



Static electricity can harm delicate components of the motherboard. To prevent damage caused by static electricity, discharge the static electricity from your body before you touch any of the computers electronic components.

REAR PANEL

The back panel provides the following connectors:

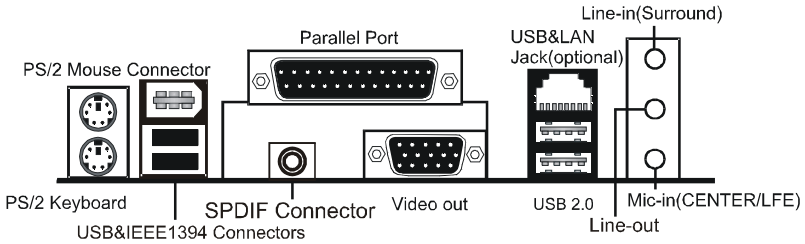

PS/2 Mouse Connector

The Sapphire motherboard provides a standard PS/2®mouse mini DIN connector for attaching a PS/2®mouse. You can plug a PS/2®mouse directly into this connector.


PS/2 Keyboard Connector

The Sapphire motherboard provides a standard PS/2®keyboard mini DIN connector for attaching a PS/2®keyboard. You can plug a PS/2®keyboard directly into this connector.

USB 2.0 Connector

The Sapphire motherboard provides an OHCI (Open Host Controller Interface) Universal Serial Bus root for attaching USB devices such as keyboard, mouse or other USB-compatible devices. You can plug the USB device directly into the connector.

USB 2.0 Connector

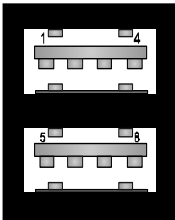

USB 2.0 Connector Description

PIN	SIGNAL	DESCRIPTION
1	VCC	+5V/5VSB (optional)
2	-Data 0	Negative Data Channel 0
3	+Data0	Positive Data Channel 0
4	GND	Ground
5	VCC	+5V/5VSB (optional)
6	-Data 1	Negative Data Channel 1
7	+Data 1	Positive Data Channel 1
8	GND	Ground

VIA VT6307 IEEE 1394 Connector

The Sapphire motherboard provides a IEEE 1394 Connector and allows you to connect a IEEE 1394 device directly to the connector.

TV Out Connector

The Sapphire motherboard provides a Video out port to connect a 15-pin analog video monitor.

SPDIF Connector

The Sapphire motherboard provides a S-Bracket (SPDIF) Connector that allows you to connect a S-Bracket (coaxial) for a Digital Interface (SPDIF).

LAN Jack

The Sapphire motherboard provides one standard RJ-45 jack for connection to Local Area Network(LAN).You can connect a network cable to the LAN jack.

Parallel Port Connector - LPT1

The Sapphire motherboard provides a 25-pin female centronic connector as LPT. A parallel port is a standard printer port that supports Enhanced Parallel Port (EPP) and Extended Capabilities Parallel Port (ECP) mode.

Audio Port Connector

Line_Out is a connector for Speakers or Headphones. **Line In** is used for external CD player, Tape player, or other audio devices. **Mic In** is a connector for microphones.

The ALC650 embeds an internal analog switch (by driver software) to select LINE input or Surround output, and select MIC input or CENTER/LFE output.

AUDIO CONFIGURATION

After installing the audio driver, you can select 2/4/6 channel audio output in software utility and then connect surround speakers to appropriate audio ports.


There are two ways to obtain 2/4/6 channel audio output:

1. 2/4/6 channel audio output on back panel only. All surround speakers connect to audio connector.
2. S-Bracket (optional cable). You have installed S-Bracket into the computer, and then connect two front speakers to back panel's "Line-out" port, and the rest of speakers to S-Bracket. Please refer to page 13.

SPEAKER CONFIGURATION


Method 1: 2/4/6 Channel audio output on back panel only.

After installing the audio drivers, you can attach the speakers for 2/4/6 channel audio output. Always connect the speakers to the LINE OUT connectors. Different connector configurations for 2/4/6 channel operations are listed below:

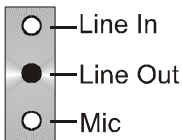


2-Channel

In 2-channel configuration, Line Out, Line In and MIC functions exist.

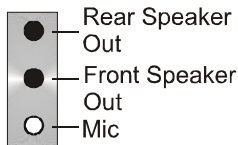

4-Channel

When set to 4-channel configuration, Line In is replaced by Rear Speaker Out. Line in function does not exist.

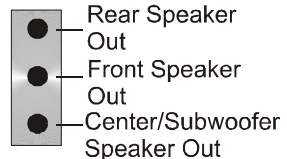

6-Channel

When set to 6-channel configuration, Line In is replaced by Rear Speaker Out. Mic is replaced by Center/Subwoofer Speaker Out. Line in and Mic do not exist function.


In the audio software, please double click the “AC97 Audio configuration” icon



from the window tray on the bottom right to launch the Audio Wizard.


The “AC97 Audio Configuration” will appear. Click on the **Speaker Configuration** tab to select the audio mode.

A. If you choose 4-channel mode for 4 speaker output, the selected item is shown as below (Figure1).

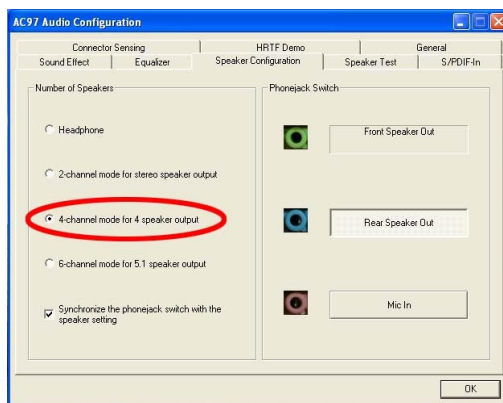

(Figure1)

B. If you choose 6-channel mode for 5.1 speaker output, the selected item is shown as below (Figure2).

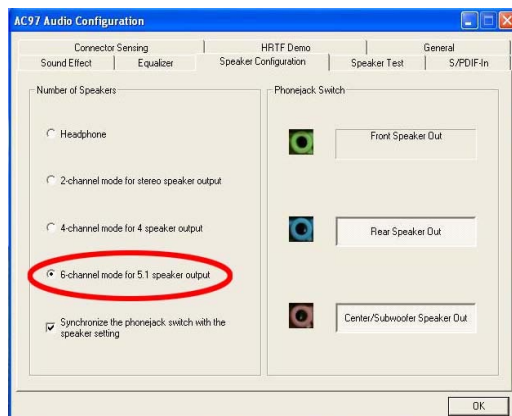

(Figure2)


Method 2: Using S-BRACKET connectors:

S-Bracket (The S-Bracket is showed in page 15) is an optional accessory. To use the S-Bracket, you should select correct setting in the software utility. For information about the setting, refer to selecting 4- or 6- Channel Setting later in the section.

Connector configurations for 4- and 6- channel using S-Bracket are described below:

4-Channel Analog Audio Output

Back Panel

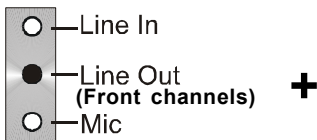

S-Bracket




Description:

Connect two speakers to back panel's Line Out connector and two speakers to one Line Out connector of S-Bracket, or four speaker to connector of S-Bracket. If you want to use **Line In** function, please click the **Rear Speaker Out** button (shown below)



6-Channel Analog Audio Output

Back Panel

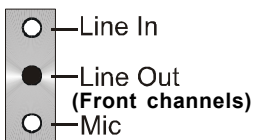


+

S-Bracket



Description:

Connect two speakers to back panel Line Out connector and four speakers to both Line Out connectors of S-Bracket, or six speakers to the connector of S-Bracket. If you want to use **Line In** and **MIC** function at the same time, please click the **Rear Speaker Out** and **Center/Subwoofer Speaker Out** buttons. (shown below)

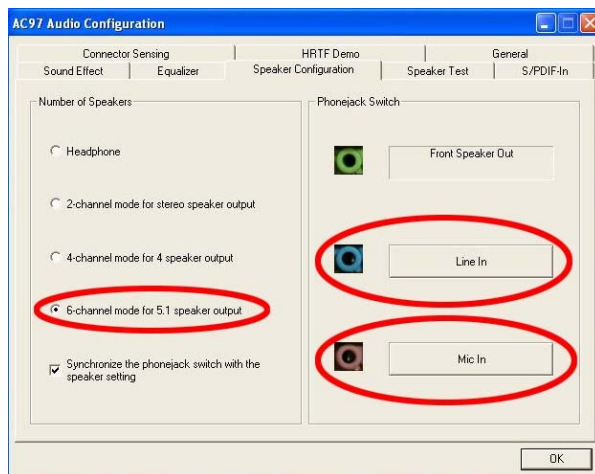

CONNECTORS

The Sapphire motherboard provides connectors to connect to FDD, IDE HDD, USB Ports and CPU/System FAN etc.

Floppy Disk Drive Connector - CN3

The Sapphire motherboard provides a standard floppy disk drive connector that supports 360K, 720K, 1.2M, 1.44M and 2.88M floppy disk types.

IDE Connectors - CN1, CN2


The Sapphire motherboard has a 32-bit Enhanced PCI IDE and Ultra DMA 33/66/100/133 controller that provides PIO mode 0~4, Bus Master, and Ultra DMA 33/66/100/133 function. You can connect up to four hard disk drives, CD-ROM, 120MB Floppy (reserved for future BIOS) and other devices.

Primary IDE Connector - CN1

The first hard drive should always be connected to CN1. CN1 can connect a Master and a Slave drive. You must configure second hard drive to Slave mode by setting the jumper accordingly.

Secondary IDE Connector - CN2


CN2 can also connect a Master and a Slave drive.

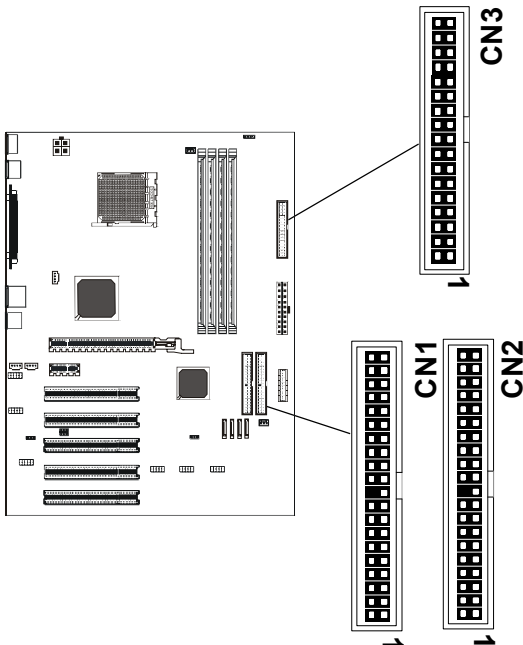

Six Channel Audio Output Connector: J19 (Optional)


The Sapphire motherboard provides six channel output(FL/FR,RL/RR,CEN/LEF) connector, that allows you to use the 6 channel audio output features at the same time.

J19

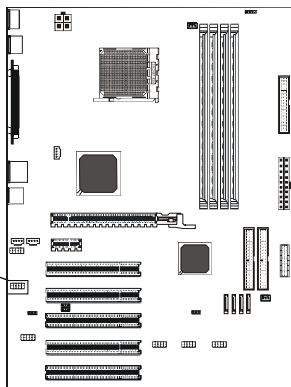


PIN	SIGNAL	DESCRIPTION
1	SOUT-L	Audio left surrounding output
2	SOUT-R	Audio right surrounding output
3	GND	Ground
4	GND	Ground
5	CET-OUT	Audio center output
6	LFE-OUT	Audio bass output
7	GND	Ground
8	NC	Key
9	SPK L	Front left output
10	SPK R	Front right output

Back Panel Cable (optional)

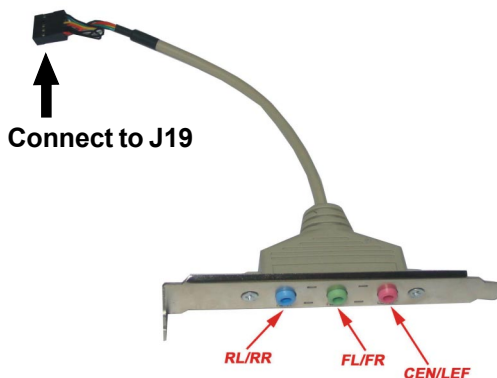

TV Out Header - J5

The Sapphire motherboard provides TV Out header.

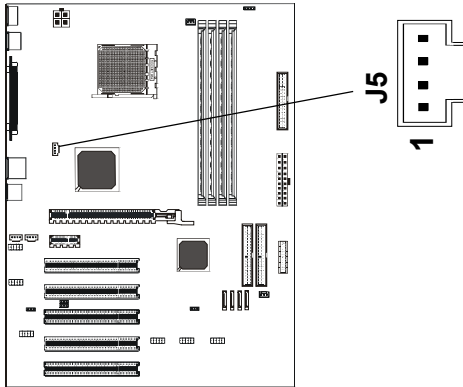

J5 - TV Out



PIN	Assignment
1	C
2	GND
3	COMP/B
4	Y

TV Out cable



IEEE 1394 Connectors - J23


The Sapphire motherboard provides two 1394 pin headers that allow you to connect IEEE 1394 ports.

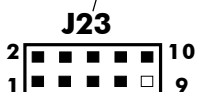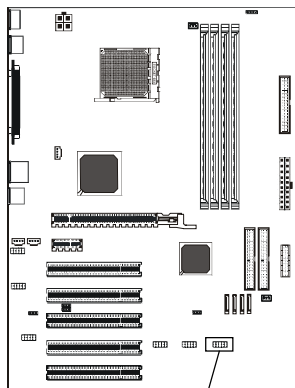

J23 - Pin Definition


PIN	SIGNAL
1	TPA+
2	TPA-
3	Ground
4	Ground
5	TPB+
6	TPB-
7	Cable power
8	Cable power
9	Key (no pin)
10	Ground

IEEE 1394 Cable (optional)

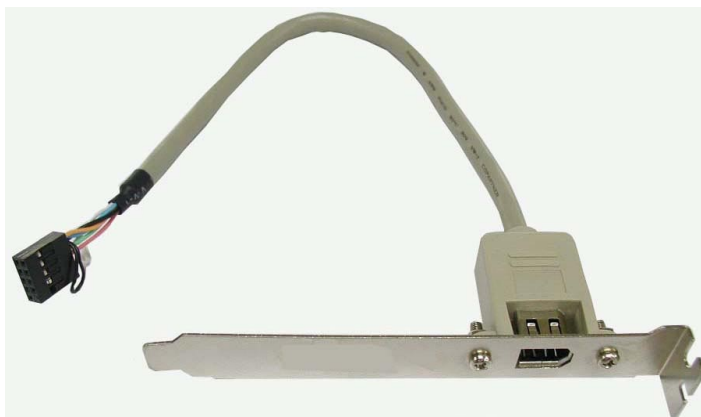

Chassis Alarm Lead - JP12(optional)

This lead is for a chassis designed with intrusion detection feature. This requires an external detection mechanism such as a chassis intrusion sensor or microswitch. When you remove any chassis component, the sensor triggers and sends a high-level signal to this lead to record a chassis intrusion event.

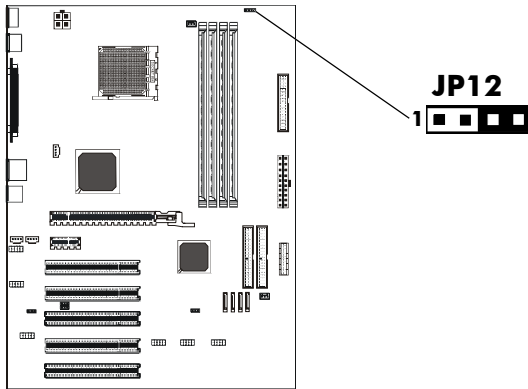

JP12 - Pin Definition


PIN	Assignment
1	+5VSB
2	KEY
3	Chassis Signal
4	GND

Note:

If you want to use "Chassis Alarm" Connector, please the jumper position 3-4.

Fan Power Headers - CPUFAN1, SYSFAN1

The CPUFAN1 (processor fan), SYSFAN1 (system fan) support system cooling fan with +12V. It supports three-pin head connector.

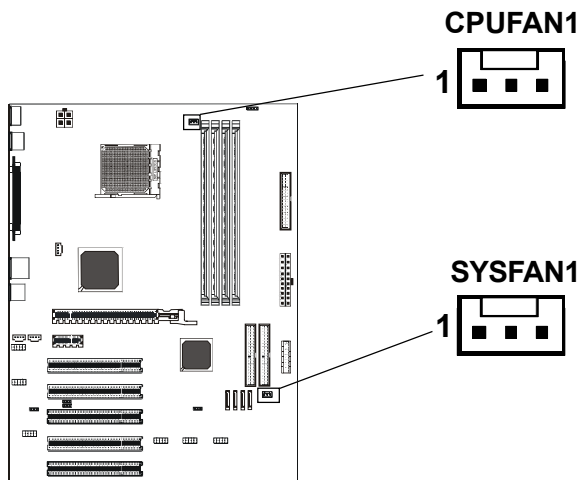


CD-IN Header - J18

This header allows for connection from the CD-ROM Drive.

AUX-IN Header - J20

This header allows for connection from the Audio Device.

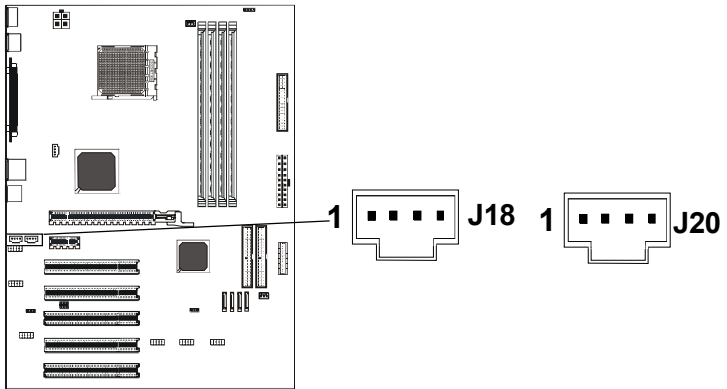**J18 - Pin Definition**


PIN	Assignment
1	CD-L
2	GND
3	GND
4	CD-R

J20 - Pin Definition

PIN	Assignment
1	AUX-L
2	GND
3	GND
4	AUX-R

Front Panel Audio Header - FP-S1

This Sapphire motherboard supports front panel microphone and speaker out ports. If your computer case has these ports, connect them to FP-S1.

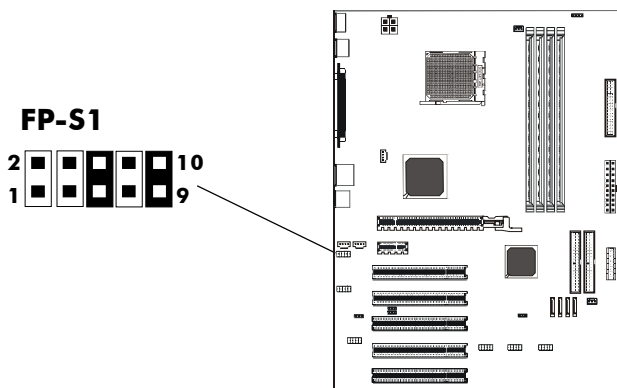

FP-S1 - Pin Definition


PIN	Assignment
1	MIC
2	GND
3	REF
4	POWER
5	Front Audio(R)
6	Rear Audio(R)
7	Reserved
8	Key(No pin)
9	Front Audio(L)
10	Rear Audio(L)

Note:

In order to utilize the front audio header, your chassis must have a front audio header. Also please make sure the pin assignment on the cable is the same as the pin assignment on the motherboard header. To find out if the chassis you are buying supports front audio connection, please contract your dealer.

USB Headers - FP-U1, FP-U2

This Sapphire motherboard has eight USB ports. Some computer cases have a special module that mounts USB ports at the front of the case. If you have this kind of case, use auxiliary USB connector FP-U1, FP-U2 to connect the front mounted ports to the Sapphire mainboard.

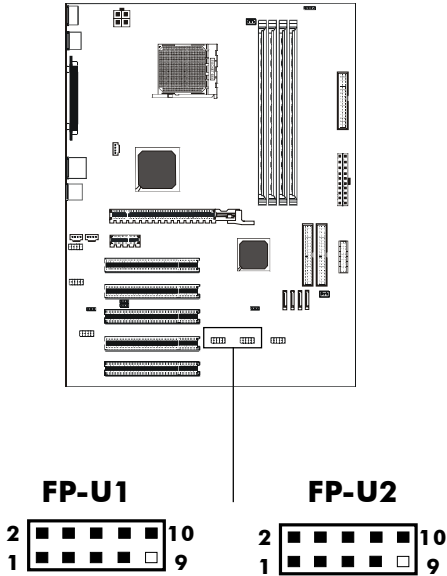


FP-U1, FP-U2 - Pin Definition

PIN	Assignment
1	VCC
2	VCC
3	USBP0-
4	USBP1-
5	USBP0+
6	USBP1+
7	GND
8	GND
9	KEY
10	OC#

Front Panel Header - FP1

The Sapphire motherboard provides a front panel connection to the front panel switches and LEDs. FP1 is compliant with the Front Panel I/O Connectivity Design Guide.

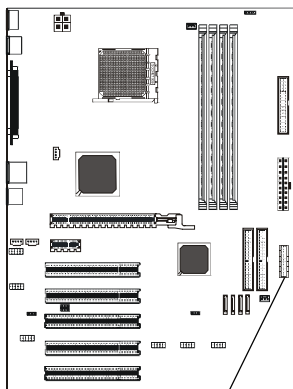


FP1

	24	■	■	23	VCC
GND	22	■	■	21	GND
KEYLOCK	20	■	■	19	NC
KEY	18	□	■	17	SPEAKER
KEY	16	□	■	15	IRTX
IRRX	14	■	■	13	VCC
GND	12	■	■	11	NC
KEY	10	□	■	9	NC
KEY	8	□	■	7	RESET
GND	6	■	■	5	GND
PWR_SW	4	■	■	3	HDD_LED-
PW_LED-	2	■	■	1	HDD_LED+
PW_LED+					

Serial ATA Hard Disk Connectors - SATA1/SATA2/SATA3/SATA4

The Sapphire motherboard has four SATA connectors. Each supports 1st generation SATA data rates of 150 MB/s. Both connectors are fully compliant with Serial ATA 1.0 specifications. Each SATA connector can connect to one hard disk device. Please refer to SATA Raid setup (Page 38) for detail software installation procedure.

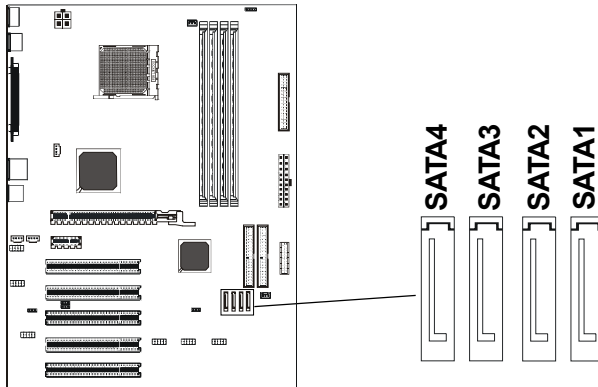

PIN	SIGNAL
1	GND
2	TXP
3	TXN
4	GND
5	RXN
6	RXP
7	GND

Serial ATA Cable




Connect one end of the SATA cable to the Sapphire motherboard and connect the other end to the SATA Hard Disk.



CAUTION!


Please do not fold the serial ATA cable which may lead to loss of data during the transmission.

Serial ATA Hard Disk Devices Power Cable (optional)

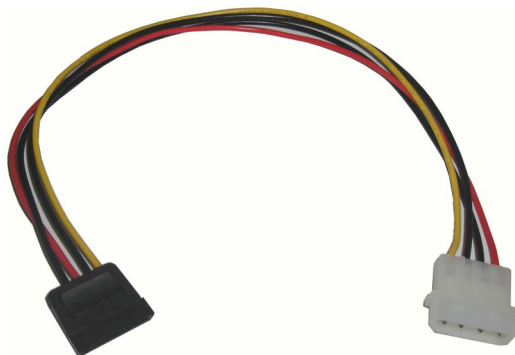

JUMPER SETTING

The Sapphire motherboard provides jumpers enabling configuration of the hardware.

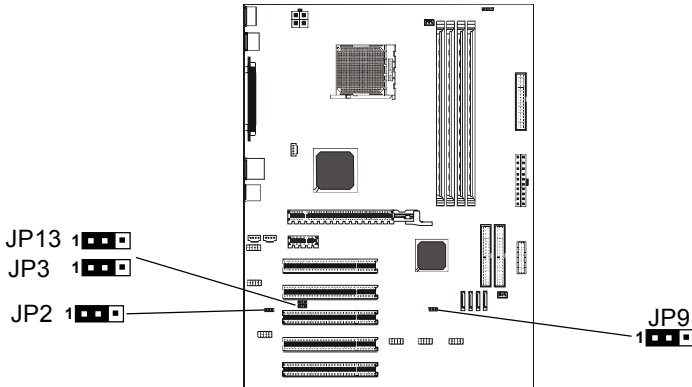

Clear CMOS Jumper - JP9

If you want to clear the system configuration, use the JP9 (Clear CMOS Jumper) to clear data.

JP9	Selection
1 1-2*	Normal*
1 2-3	CMOS Clear

Onboard AC97 Sound Select - JP2

JP2	Function
1 1-2*	AC97 Sound Enable*
1 2-3	AC97 Sound Disable

Onboard LAN Select(optional) - JP13

JP13	Function
1 1-2*	LAN Enable*
1 2-3	LAN Disable


Onboard IEEE1394 Select - JP3

JP3	Selection
1 1-2*	IEEE1394 Enable*
1 2-3	IEEE1394 Disable

Close Open * = Default setting.

SLOTS

The Sapphire motherboard provides one PCI-E x16 slot, one PCI-E x1 slot and five 32-bit PCI bus slots.

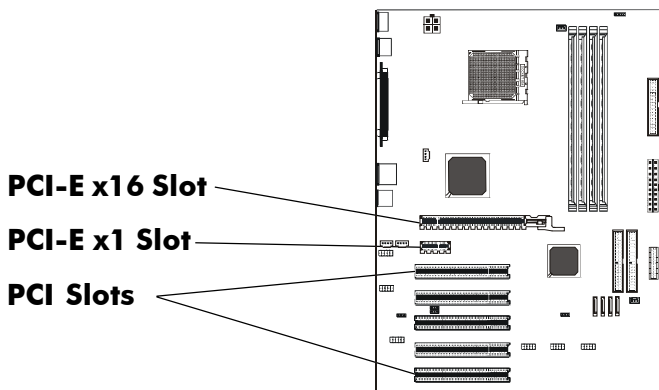

PCI-E x16 Slot

PCI-E x1 Slot

PCI Slots

PCI Express x16 Graphics Interface

- One 16-lane (x16 port) PCI Express port intended for external graphics.
- Fully compliant to the PCI Express Base Specification revision 1.0a.
- The base PCI Express frequency of this interface is 4GB/s.
- PCI Express supports an enhanced addressing mechanism.

PCI Express x1 Ports

- One 1-lane (x1 port) PCI Express ports intended for external graphics.
- Fully compliant to the PCI Express Base Specification revision 1.0a.
- Two virtual channel support for full unsynchronized data transfers.
- Supports full 2.5Gb/s bandwidth in each direction per x1 lane.


PCI (Peripheral Component Interconnect) Slots

- Five 32-bit PCI ports for add-in card connections.


CPU INSTALLATION

Please refer to the following steps to install the CPU.


1. Please turn off the power and unplug the power cord before installing the CPU. Pull the lever slightly sideways away from the socket to unlock the lever, and then raise the lever up to a full 90 degree angle.

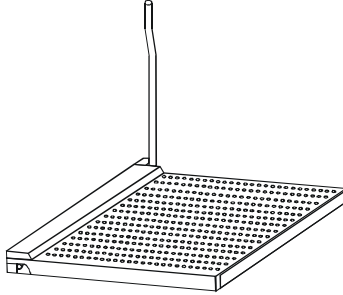


2. Look for the gold arrow. The gold arrow should point towards the lever pivot. The CPU can only fit in the correct orientation and requires no excessive force.

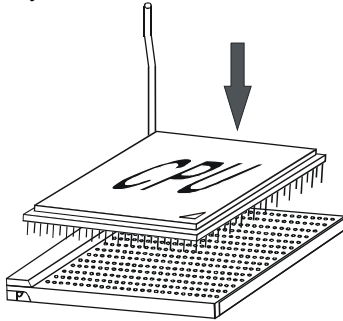

3. If the CPU is correctly installed, the pins should be completely embedded into the socket allowing for no gaps inbetween CPU and socket. Please note that any violation of the correct installation procedures may cause permanent damage to your Sapphire motherboard.

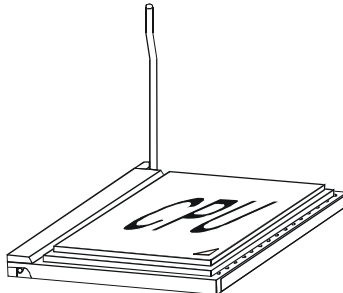

4. Press the CPU down firmly into the socket and close the lever. As the CPU is likely to move while the lever is being closed, always close the lever with your fingers pressing firmly on top of the CPU to make sure the CPU is properly and completely embedded into the socket.

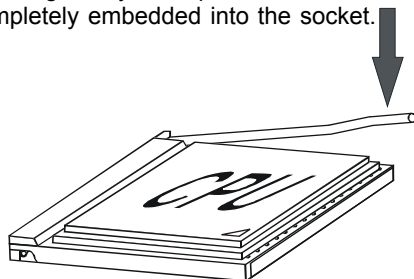

5. When you are installing the CPU, please make sure the CPU has a heatsink and a cooling fan attached on the top to prevent overheating. If you do not have a heatsink or cooling fan, contact your dealer to purchase and install them before turning on the computer. Please follow below steps to install the CPU cooler.

Step 1.

Position the cooler onto the retention mechanism. Hook one end of the clip first, and then press down the other end of the clip to fasten the cooler onto the top of the retention module.




Step 2.

Locate the Fixed Lever on the side of the cooler and lift the lever upwards.



Step3. Fasten down the lever.

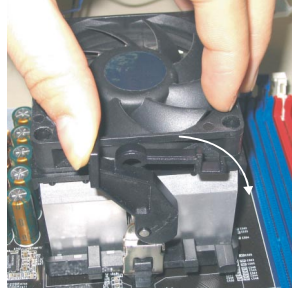


Step4. Make sure the safety hook completely clasps the fixed bolt of the retention mechanism.



MEMORY CONFIGURATIONS

1.DDR DIMM Sockets Location


Please refer to the following figure for the location of the DDR DIMM Sockets.

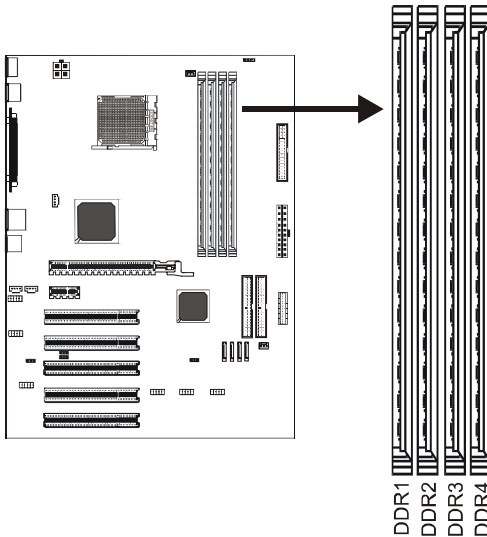

2.Install DDR DIMMs

Please follow the below mentioned steps to install DDR DIMMs.

1. Hold the DDR DIMM module by the edges and remove it from its antistatic package.
2. Make sure the clips at either end of the DIMM socket are pushed away from the socket.

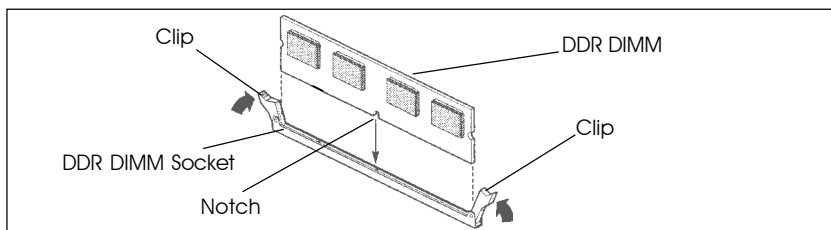

3. Position the DDR DIMM module above the socket and align the notch in the bottom edge of the module with the key in the socket.
4. Insert the bottom edge of the DDR DIMM module into the socket.
5. When the module is seated, press down on the top edge of the DDR DIMM module until the retaining clips at the ends of the socket snap into place.

Note: Please unplug the power supply before installing and removing any device, otherwise you may cause the system damage.

3.Memory Configurations

Please refer to the following recommended memory configurations.

Mode/(DIMM Type)	Case	Sockets-DDR1	DDR2	DDR3	DDR4
Single-channel/ (DDR400/DDR333/DDR266)	1 ①	Populated	----	----	----
	2	----	----	Populated	----
Dual-channel/ (DDR400/DDR333/DDR266)	1	Populated	Populated	----	----
	2 ②	----	----	Populated	Populated
	3	Populated	Populated	Populated	Populated

- ① When using only one DDR DIMM, please insert the DDR DIMM into DDR1 or DDR3 socket.
- ② You can install identical DIMMs in DDR1 and DDR2 and identical DIMMs in DDR3 and DDR4.

Note:

- In dual channel mode, always install an identical (the same type and size) DDR DIMM pair in sockets.
- It is not recommended to use a three-DIMM configuration.
- Memory channel speed is determined by the slowest DIMM populated in the system.

BIOS SETUP

About the Setup Utility

The computer uses the latest Award BIOS with support for Windows Plug and Play. The CMOS chip on the motherboard contains the ROM setup instructions for configuring the motherboard BIOS.

The BIOS (Basic Input and Output System) Setup Utility displays the system's configuration status and provides you with options to set system parameters. The parameters are stored in battery-backed-up CMOS RAM that saves this information when the power is turned off. When the system is turned back on, the system is configured with the values you stored in CMOS.

The BIOS Setup Utility enables you to configure:

- Hard drives, diskette drives and peripherals**
- Video display type and display options**
- Password protection from unauthorized use**
- Power Management features**

The settings made in the Setup Utility affect how the computer performs. Before using the Setup Utility, ensure that you understand the Setup Utility options.

This chapter provides explanations for Setup Utility options.

The Standard Configuration

A standard configuration has already been set in the Setup Utility. However, we recommend that you read this chapter in case you need to make any changes in the future.

This Setup Utility should be used:

- when changing the system configuration
- when a configuration error is detected and you are prompted to make changes to the Setup Utility
- when trying to resolve IRQ conflicts
- when making changes to the Power Management configuration
- when changing the password or making other changes to the Security Setup

Entering the Setup Utility

When you power on the system, BIOS enters the Power-On Self Test (POST) routines. POST is a series of built-in diagnostics performed by the BIOS. After the POST routines are completed, the following message appears:

Main Menu

Once you enter the Award BIOS CMOS Setup Utility, the Main Menu will appear on the screen. The Main Menu allows you to select from various setup functions and two exit choices. Use the arrow keys to select among the items and press <Enter> to accept and enter the sub-menu.

Phoenix - Award Workstation BIOS CMOS Setup Utility

<ul style="list-style-type: none"> ▶ Standard CMOS Features ▶ Advanced BIOS Features ▶ Advanced Chipset Features ▶ Integrated Peripherals ▶ Power Management Setup ▶ PnP/PCI Configurations ▶ PC Health Status 	<ul style="list-style-type: none"> Load Fail-Safe Defaults Load Optimized Defaults Set Supervisor Password Set User Password Save & Exit Setup Exit Without Saving
Esc : Quit F10 : Save & Exit Setup	↑ ↓ → ← : Select Item
Time, Date, Hard Disk Type	

(Note : The figures of BIOS Setup Menu included here only show a typical case, and may not be exactly the same as the one on your unit.)

Note that a brief description of each highlighted item will appear at the bottom of the screen.

Standard CMOS Features This setup page includes all the items of Award™ special standard features.

Advanced BIOS Features This setup page includes all the items of Award™ special enhanced features.

Advanced Chipset Features This setup page includes all the items of chipset special features.

Integrated Peripherals This section page includes all the items of IDE hard drive and Programmed Input / Output features.

Power Management Setup This entry only appears if your system supports Power Management “Green PC” standards.

PNP/PCI Configurations This entry appears if your system supports PNP/PCI.

PC Health Status Display CPU and Case Fan Speed etc.

Load Fail-Safe Defaults The BIOS defaults have been set by the manufacturer and represent settings which provide the minimum requirements for your system to operate.

Load Optimized Defaults The chipset defaults are settings which provide for maximum system performance. While Award has designed the custom BIOS to maximize performance, the manufacturer has the right to change these defaults to meet its needs.

Set Supervisor/ User Password Changes, sets, or disables password. It allows you to limit access to the system and the Setup Program.

Save & Exit Setup Saves value changes to CMOS and exits setup.

Exit Without Saving Abandons all CMOS value changes and exits setup.

Standard CMOS Features

The items in Standard CMOS Setup Menu are divided into 10 categories. Each category includes one or more setup items. Use the arrow keys to highlight the item and then use the <PgUp> or <PgDn> key to select the desired value in each item.

Phoenix - Award WorkstationBIOS CMOS Setup Utility
Standard CMOS Features

Date (mm :dd :yy)	Sat. Jan 01 2005	Item Help
Time (h h mm:ss)	11 : 1 : 35	
▶ IDE Primary Master	[Press Enter 4303 MB]	Menu Level ▶
▶ IDE Primary Slave	[None]	Change the day, month, year and century
▶ IDE Secondary Master	[None]	
▶ IDE Secondary Slave	[None]	
Drive A	[1.44M, 3.5 in.]	
Drive B	[None]	
Video	[EGA/VGA]	
Halt on	[All, but keyboard]	
Base Memory	640K	
Extended Memory	30720K	
Total Memory	31744K	

↑↓→←Move Enter: Select +/-/PU/PD : Value F10 : SaveESC :Exit F1 :General Help
F5 : Previous Values F6 : Fail-Safe Defaults F7 : Optimized Defaults

(Note : The figures of BIOS Setup Menu included here only show a typical case, and may not be exactly the same as the one on your unit.)

Date	The date format is <day-of-the-week>. <month> <day> <year>.
Time	The time format is <hour> <Minute> <second> displayed in 24-hour military-time clock. For example, 1 p. m. is displayed as 13:00:00.
Primary and Secondary Master,Slave	Your computer has two IDE channels: primary and secondary. And each channel can be intalled with one or two devices (master and slave). Use these options to configure each device.
Drive A Type / Drive B Type	This category identifies the types of floppy disk drive A or drive B that has been installed in the computer.
Video	The default setting is EGA/VGA.
Halt on	You can select which type of error will cause the system to halt.

Advanced BIOS Features

This section allows you to configure your system for basic operation. You have the opportunity to select the system's default speed, boot-up sequence, keyboard operation, shadowing and security.

Advanced Chipset Features

The Chipset Features Setup option is used to change the values of the chipset registers. These registers control most of the system options in the computer.

This section allows you to configure the system based on the specific features of the installed chipset. This chipset manages bus speeds and access to system memory resources, such as DRAM and the external cache. It must be stated that these items should not be altered. The default settings have been chosen because they provide the best operating conditions for your system.

Integrated Peripherals

The Integrated Peripherals Setup allows the user to configure the onboard IDE controller, floppy disk controller, the printer port and the serial ports.

Power Management Setup

The Power Management Setup Menu allows you to configure your system to most save energy while operating in a manner consistent with your own style of computer use.

PnP/PCI Configurations

This section describes how to configure the PCI bus system. This section covers some very technical items and it is recommended that only experienced users should make any changes to the default settings.

PC Health Status

The PC Health Status display CPU and Case Fan Speed.

Set Supervisor/User Password

You can set either supervisor or user password, or both of them. The difference between them are:

Supervisor Password : You can enter the Setup Program and change the options of the setup menus.

User Password : You can enter the Setup Program but can not change the options of the setup menus.

When you select this function, the following message will appear at the center of the screen to assist you in creating a password.

ENTER PASSWORD:

Type the password, up to eight characters in length, and press<Enter>. The new password will clear the previously entered password from the CMOS memory. You will be asked to confirm the password. Type the password again and press <Enter>. You may also press <Esc> to abort the selection and operate without a password.

To disable a password, just press <Enter> when you are prompted to enter the password. A message will be displayed to confirm that the password is disabled.

PASSWORD DISABLED.

Once the password is disabled, the system will reset and you can enter the Setup Program freely.

When a password is enabled, you will be prompted to enter it every time you try to enter setup. This prevents an unauthorized person from changing any setting of your system configuration.

In addition, when a password is enabled, you can require the BIOS to request a password every time your system is rebooted. This would further prevent unauthorized use of your computer.

The password requirement is defined by the Security Option of the BIOS Features Setup Menu. If the Security Option is set to "System",the password will be required both at resetting and at entering setup. If the option is set to "Setup", the prompt only appears when you try to enter setup.

BIOS Update Procedure

A program AWDFLASH.EXE is included in the utility diskette or CD (X:\Utility\AWDFLASH.EXE). The user is recommended to follow the procedure below to update the flash BIOS.

(X: your CD driver letter).

1. Create a DOS-bootable floppy diskette. Copy the new BIOS file (just obtained or downloaded) and the utility program AWDFLASH.EXE to the diskette.
2. Allow the PC system to boot from the DOS diskette.
3. At the DOS prompt, key in

AWDFLASH
and hit <ENTER>

4. Enter the file name of the new BIOS.
5. The question: "Do you want to save BIOS (Y/N)?" is displayed.
*Key in "N" if there is no need to save the existing BIOS content.
Key in "Y" if a backup copy of the existing BIOS is needed.
(A file name has to be assigned to the existing BIOS binary file.)*
6. The message : "Press 'Y' to program or 'N' to exit" is displayed.
Key in "Y"
7. Wait until the flash-update is completed.
8. Power down the PC system.
9. Restart the PC.

Warning:

DO not turn off or RESET the computer during the flash process.

If you are unsure how to upgrade the BIOS, it is best to take your computer to an Authorized Service Center and have a trained technician do the work for you.

SATA RAID SETUP

Creating and deleting RAID sets is a function found in the RAID utility. During bootup, the following message will appear, pausing for a few seconds to allow the user to enter the RAID utility:

Press Ctrl+S or F4 to enter RAID utility

An easy-to-use screen will appear with the following choices:

Create RAID Set Delete RAID Set Rebuild RAID Set Resolve Conflicts

Below this will be a list of drives currently installed on the system.

Creating RAID Sets

SATA Raid supports two drives. Please follow the below mentioned steps.

1. Select "Create RAID Set" and choose either a "Striped" or "Mirrored" RAID Set.
2. Select if you want the utility to Auto Configure the RAID Set or if you want to manually configure the RAID Set. For Striped Sets, you can change the chunk size. For Mirrored Sets, you can assign Source and Target drives, as well as if you want Disk Copy.

What is a Striped RAID Set? Also known as RAID Level 0, a Striped RAID Set allows for high speed storage without redundancy. This requires 2 identical drives allowing for data to be split across the drives resulting in faster data throughput. Choose this selection if you want to gain performance.

What is a Mirrored RAID Set? Also known as RAID Level 1, a Mirrored RAID Set allows for both high speed storage and redundancy. This requires 2 identical drives allowing for data to be copied from a source drive and duplicated onto the second drive. Choose this selection if you prefer security options to prevent data loss.

What is a Disk Copy? In the case where you have a drive that already contains data and you would like to create a new RAID Set, you will need to purchase an identical drive and select Disk Copy to allow the contents of your source drive to be copied to your new destination drive.

Deleting RAID Sets

1. To remove one or more RAID sets, select "Delete RAID Set."
2. Select desired set and press Y when asked "Are You Sure?"

Rebuilding RAID Sets

In case your RAID set has encountered an error or it has been changed, you can recover the RAID set using this option.

Resolving Conflicts

When a RAID set is created, the metadata is written to the disk includes drive connection information (Primary Channel, Secondary Channel). If, after a disk failure, the replacement disk was previously part of a RAID set (or used in another system), it may have conflicting metadata, specifically in reference to the drive connection information. If so, this will prohibit the RAID set from being either created or rebuilt. In order for the RAID set to function properly, this old metadata must be first overwritten with the new metadata. To resolve this, select "Resolve Conflict" and the correct metadata, including the correct drive connection information, will be written to the replacement disk.

DRIVER AND SOFTWARE INSTALLATION

1. For Windows 2000 and XP, after Windows has finished booting up, the system will automatically find the newly installed adapter and prompt the **Found New Hardware Wizard** window. Click **Cancel** to skip it.



2. Insert the bundled driver CD DISC into your CD-ROM drive, select "**ATI Chipset\ATI_Raid Driver**" installation bar on the dialogue Window to begin the driver and software installation. (Please follow the instruction to finish the installation).

When you install a new Windows 2000 or XP operating system on your RAID set, please follow the below procedure:

1. Insert the bundled driver CD DISC into CD-ROM(D:).
Copy all files from directory (D:**ATI chipset\ATI_Raid**) to a floppy disk.
2. Install OS from CD-ROM.
3. Press "**F6**" when display "Press **F6** if you need to install a third party SCSI or RAID driver..."
4. Insert floppy disk.
5. Choose the OS device driver wanted for loading.
6. Install OS.
7. Install driver after OS is installed.

APPENDIX

Note to User:

The bundled driver CD attached an Auto-Run feature for all the drivers that the motherboard need. Please select the drivers that you want to install and click the button on the installation panel.