

916PCP/916GCP

USER'S MANUAL

M/B For LGA 775 Pentium 4 Processor

NO. G03916GCP206

Rev:2.0

Release date: August 2005

Trademark:

* Specifications and Information contained in this documentation are furnished for information use only, and are subject to change at any time without notice, and should not be construed as a commitment by manufacturer.

TABLE OF CONTENT

| | |
|--|----|
| USER'S NOTICE | ii |
| MANUAL REVISION INFORMATION..... | ii |
| COOLING SOLUTIONS..... | ii |
| CHAPTER 1 INTRODUCTION OF 916PCP/916GCP MOTHERBOARD | |
| 1-1 FEATURE OF MOTHERBOARD | 1 |
| 1-1.1 PECIAL FEATURES OF MOTHERBOARD..... | 2 |
| 1-2 SPECIFICATION..... | 3 |
| 1-3 PERFORMANCE LIST..... | 4 |
| 1-4 LAYOUT DIAGRAM & JUMPER SETTING..... | 5 |
| CHAPTER 2 HARDWARE INSTALLATION | |
| 2-1 HARDWARE INSTALLATION STEPS | 7 |
| 2-2 CHECKING MOTHERBOARD'S JUMPER SETTING | 7 |
| 2-3 INSTALL CPU..... | 8 |
| 2-3-1 GLOSSARY..... | 8 |
| 2-3-2 ABOUT INTEL PENTIUM 4 LGA 775 CPU | 9 |
| 2-3-3 LGA 775 CPU INSTALLATION GUIDE | 10 |
| 2-4 INSTALL MEMORY | 19 |
| 2-5 EXPANSION CARD | 20 |
| 2-5-1 PROCEDURE FOR EXPANSION CARD INSTALLATION | 20 |
| 2-5-2 ASSIGNING IRQ FOR EXPANSION CARD | 20 |
| 2-5-3 INTERRUPT REQUEST TABLE FOR THIS MOTHERBOARD | 21 |
| 2-5-4 PCI EXPRESS SLOT | 21 |
| 2-6 CONNECTORS, HEADERS..... | 22 |
| 2-6-1 CONNECTORS | 22 |
| 2-6-2 HEADERS | 25 |
| 2-7 STARTING UP YOUR COMPUTER | 28 |
| CHAPTER 3 INTRODUCING BIOS | |
| 3-1 ENTERING SETUP | 29 |
| 3-2 GETTING HELP | 29 |
| 3-3 THE MAIN MENU..... | 30 |
| 3-4 STANDARD CMOS FEATURES..... | 31 |
| 3-5 ADVANCED BIOS FEATURES..... | 32 |
| 3-6 ADVANCED CHIPSET FEATURES..... | 34 |
| 3-6-1 PCIEXPRESS ROOT PORT FUNCTION | 35 |
| 3-7 INTEGRATED PERIPHERALS | 36 |
| 3-7-1 ONBOARD IDE FUNCTION..... | 36 |
| 3-7-2 ONBOARD DEVICE FUNCTION | 37 |
| 3-7-3 ONBOARD SUPER IO FUNCTION | 38 |
| 3-8 POWER MANAGEMENT SETUP | 39 |
| 3-8-1 PM TIMER RELOAD EVENTS..... | 40 |
| 3-8-2 PCI EXPRESS PM FUNCTION | 40 |
| 3-9 PNP/PCI CONFIGURATION SETUP | 41 |
| 3-9-1 IRQ RESOURCES..... | 41 |
| 3-10 PC HEALTH STATUS | 42 |
| 3-10-1 SMART FAN CONFIGURATIONS | 42 |
| 3-11 BI-TURBO CONFIGURATION | 43 |
| 3-12 POWER USER OVERCLOCK SETTINGS | 44 |
| 3-13 PASSWORD SETTINGS | 44 |
| 3-14 LOAD STANDARD/OPTIMIZED DEFAULTS..... | 45 |
| CHAPTER 4 DRIVER & FREE PROGRAM INSTALLATION | |
| MAGIC INSTALL SUPPORTS WINDOWS 2000/XP | 44 |
| 4-1 INF INSTALL INTEL 915 CHIPSET SYSTEM DRIVER | 45 |
| 4-2 VGA INSTALL INTEL 915G VGA DRIVER | 45 |
| 4-3 SOUND INSTALL ALC880 AC97 CODEC AUDIO DRIVER..... | 46 |
| 4-4 LAN INSTALL REALTEK 10/100 ETHERNET DRIVER..... | 47 |
| 4-5 PC-HEALTH INSTALL WINBOND HARDWARE DOCTOR UTILITY..... | 48 |
| 4-6 PC-CILLIN INSTALL PC-CILLIN2004 ANTI-VIRUS PROGRAM | 49 |
| 4-7 HOW TO UPDATE BIOS | 50 |

USER'S NOTICE

COPYRIGHT OF THIS MANUAL BELONGS TO THE MANUFACTURER. NO PART OF THIS MANUAL, INCLUDING THE PRODUCTS AND SOFTWARE DESCRIBED IN IT MAY BE REPRODUCED, TRANSMITTED OR TRANSLATED INTO ANY LANGUAGE IN ANY FORM OR BY ANY MEANS WITHOUT WRITTEN PERMISSION OF THE MANUFACTURER.

THIS MANUAL CONTAINS ALL INFORMATION REQUIRED TO USE 916PCP/916GCP MOTHER-BOARD AND WE DO ASSURE THIS MANUAL MEETS USER'S REQUIREMENT BUT WILL CHANGE, CORRECT ANY TIME WITHOUT NOTICE. MANUFACTURER PROVIDES THIS MANUAL "AS IS" WITHOUT WARRANTY OF ANY KIND, AND WILL NOT BE LIABLE FOR ANY INDIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES (INCLUDING DAMAGES FOR LOSS OF PROFIT, LOSS OF BUSINESS, LOSS OF USE OF DATA, INTERRUPTION OF BUSINESS AND THE LIKE).

PRODUCTS AND CORPORATE NAMES APPEARING IN THIS MANUAL MAY OR MAY NOT BE REGISTERED TRADEMARKS OR COPYRIGHTS OF THEIR RESPECTIVE COMPANIES, AND THEY ARE USED ONLY FOR IDENTIFICATION OR EXPLANATION AND TO THE OWNER'S BENEFIT, WITHOUT INTENT TO INFRINGE.

Manual Revision Information

| Reversion | Revision History | Date |
|-----------|------------------|-------------|
| 2.0 | Second Edition | August 2005 |

Item Checklist

- 916PCP/916GCP Motherboard
- Cable for IDE/Floppy
- CD for motherboard utilities
- Cable for USB Port 3/4 (Option)
- SPDIF-IN/SPDIF-OUT Adaptor (Option)
- Cable for Serial ATA IDE Port
- 916PCP/916GCP User's Manual

Intel Pentium 4 Processor Family Cooling Solutions

As processor technology pushes to faster speeds and higher performance, thermal management becomes increasingly crucial when building computer systems. Maintaining the proper thermal environment is key to reliable, long-term system operation. The overall goal in providing the proper thermal environment is keeping the processor below its specified maximum case temperature. Heatsinks induce improved processor heat dissipation through increased surface area and concentrated airflow from attached fans. In addition, interface materials allow effective transfers of heat from the processor to the heatsink. For optimum heat transfer, Intel recommends the use of thermal grease and mounting clips to attach the heatsink to the processor.

When selecting a thermal solution for your system, please refer to the website below for collection of heatsinks evaluated and recommended by Intel for use with Intel processors. Note, those heatsinks are recommended for maintaining the specified Maximum T case requirement. In addition, this collection is not intended to be a comprehensive listing of all heatsinks that support Intel processors.

For vendor list of heatsink and fan, please visit :

<http://developer.intel.com/design/Pentium4/components/index>

Chapter 1

Introduction of 916PCP/916GCP Motherboard

1-1 Feature of motherboard

The 916PCP/916GCP motherboard is design for use Intel Pentium 4 Processor in LGA775(Land Grid Array) Prescott Processor with the Intel 915P/915G Chipset delivers a high performance and professional desktop platform solution. Which utilize the design and the memory size expandable to 4.0GB.

These motherboards use the newest Intel 915P/915G Chipset Supports 533MHz/800MHz Processor System Bus (FSB) in data transfer rate, the 916PCP/916GCP provided DDR2 clock frequency support DDR2 533/400. These motherboard also provided Dual Channel function to increase memory performance. The motherboard embedded ICH6 chipset offers one parallel ULTRA ATA **100** interface and four serial ATA interface to provide speedier HDD throughout that boosts overall system performance.

916PCP/916GCP provided one 16-lane PCI Express port intended for Graphics Attach, fully compliant to the *PCI Express Base Specification revision 1.0a*, and two 1-lan PCI Express port support.

This X16 PCI Express Slot provided multiplexed Digital display channels, Support with ADD2 Card (Advanced Digital Display).

These motherboards including Fast Ethernet PCI LAN chip support 10Mb/s, 100Mb/s Base transfer rate.

These motherboards also has an integrated 8-channel High Definition Audio Codec on board support 8-channel 3D surround positioning Audio which is fully compatible with Sound Blaster Pro® that gives you the best sound quality and compatibility. The motherboard provided SPDIF-In/ SPDIF-Out optical function support SPDIF device.

With USB control as well as capability of expanding to 8 USB2.0 function ports, these motherboards meet future USB demand also these motherboard have built-in hardware monitor function. This will monitor and protect your computer. These motherboards special design in hardware to protect BIOS from virus crash BIOS data.

Some special features---*Bi-turbo/ CPU Thermal Throttling/ CPU Smart Fan* in this motherboard for power user to use the over-clocking function more flexible. For detail description please read next section.

These motherboards provided high performance & meet future specification demand. It is really wise choice for your computer.

1-1.1 Special Features of motherboard

Bi-turbo Technology---(Hardware-based Dynamic Over-clocking)

The Bi-turbo Technology offers you dual over-clocking modes. On top of the software based BIOS setting “Current CPU Clock” for over-clocking, the onboard hardware circuitry will monitor the change of CPU current to activate 2nd level over-clocking at preset workload level automatically. The Bi-turbo technology offers the versatility of both hardware-based intelligent automatic mode and power-manual mode for extra computing performance. Without complex settings from system BIOS, Bi-turbo provides the seeing promoted system performance by simple and intuitional BIOS setting. Bi-turbo technology offers more flexible ways to choose the over-clocking range of over-clocking activation by actually CPU hardware loading you define. *(for detail operating please read Section 3-11 Bi-turbo Configuration)*

CPU Thermal Throttling Technology---(The CPU Overheat Protection Technology)

To prevent the increasing heat from damage of CPU or accidental shutdown while at high workload, the CPU Thermal Throttling Technology will force CPU to enter partially idle mode from 87.5% to 12.5% according to preset CPU operating temperature in BIOS (from 40 °C to 90°C). When the system senses the CPU operating temperature reaching the preset value, the CPU operating bandwidth will be decreased to the preset idle percentage to cool down the processor. When at throttling mode the beeper sound can be optionally selected to indicate it is in working. *(for detail operating please read Section 3-11 Bi-turbo Configuration)*

CPU Smart Fan---(The Noise Management System)

It's never been a good idea to gain the performance of your system by sacrificing its acoustics. CPU Smart Fan Noise Management System is the answer to control the noise level needed for now-a-day's high performance computing system. The system will automatically increase the fan speed when CPU operating loading is high, after the CPU is in normal operating condition, the system will low down the fan speed for the silent operating environment. The system can provide the much longer life cycle for both CPU and the system fans for game use and business requirements.

1-2 Specification

| Spec | Description |
|---|--|
| Design | * ATX form factor 4 layers PCB size: 30.5x24.5cm |
| Chipset | * Intel 915P Memory Controller Hub (MCH) Chipset for 916PCP * Intel 915G Graphics Memory Controller Hub (GMCH) Chipset for 916GCP * Intel 82801FB I/O Controller Hub (ICH6) Chipset |
| CPU Socket (LGA 775 Socket) | * Support Intel Pentium 4 775-Land LGA Package utilizes Flip-Chip Land Grid Array (FCLGA4) package processor * Support CPU Frequency 533MHz/800MHz * Support 2.8G~3.8G LGA 775 Pentium 4 processor * Reserves support for future Intel Pentium 4 processors |
| Memory Socket | * 240-pin DDR2 RAM module socket x4 * Support Dual channel DDR2 533/DDR2 400 RAM Module * Expandable to 4.0GB |
| Integrate VGA (only for 916GCP) | * 400MHz Integrated 24-bit RAMDAC up to 2048x1536@75 Hz * Multiplexed Digital Display Channels (Support with ADD2 Card (Advanced Digital Display) |
| Expansion Slot & Headers | * One PCI Express x16, two PCI Express x1 Slots * 32-bit PCI slot x 4 |
| Integrate IDE | * One IDE controllers support PCI Bus Mastering, ATA PIO/DMA and the ULTRA DMA 33/66/100 functions that deliver the data transfer rate up to 100 MB/s * Four Serial ATA Host controllers, that deliver the data transfer rate up to 150 MB/s |
| LAN On Board | * Realtek 8100C PCI Interface 10/100M Ethernet controller * Supports 10/100 Mb/sec data transfer rate |
| Audio | * Realtek ALC880 8-channel High Definition Audio Codec integrated * Support 8-channel 3D surround & Positioning Audio * SPDIF-In/ SPDIF-Out Optical support (Cable optional) * Audio driver and utility included |
| BIOS | * Award 4MB Flash ROM |
| Multi I/O | * PS/2 keyboard and PS/2 mouse connectors * Floppy disk drive connector x1 * Parallel port x1, Serial port (x2 for 916PCP, x1 for 916GCP) * USB 2.0 connector x4, headers x4 (connecting cable option) * High Definition Audio connector (Line-in, MIC, 4x Line-Out) |

1-3 Performance List

The following performance data list is the testing result of some popular benchmark testing programs. These data are just referred by users, and there is no responsibility for different testing data values gotten by users (the different Hardware & Software configuration will result in different benchmark testing results.)



Performance Test Report

CPU: Intel Pentium 4 Prescott 3.6G
DRAM: PMI SAMSUNG 512M DDR2-533 X 2 1Gbyte Memory
 TwinMOS Hynix Hy5du56822CT 512M DDR400 X 2 (1Gbyte) Memory
On Board VGA: On Board VGA share 32M (1024X768X32BIT Color)
Hard Disk Driver: Seagate Barracude 7200.7 SATA150
BIOS: Award Optimal default
OS: Win XP Professional (Service Pack 1)

| | Onboard VGA + DDR400 | Onboard VGA + DDR2-533 |
|--|-------------------------|---------------------------|
| 3D Mark 2001SE | 5142 | 5448 |
| 3D Mark 2003 | 1301 | 1373 |
| 3D Mark 2005 | 249 | 271 |
| AQUAMRK3 (GFX / CPU) | 8277 (870 / 8235) | 8828 (930 / 8552) |
| PCMark2004 | | |
| System / CPU / Memory | 3332 / 3609 / 4316 | 3499 / 3657 / 4323 |
| Graph / HDD | 995 / 4181 | 1036 / 4180 |
| Content Creation Winstone 2004 | 27 | 27.9 |
| Business Winstone 2004 | 20.8 | 22.4 |
| Winbench 99 V2.0: | | |
| Business/Hi-end Disk Winmark99 | 7260 / 30600 | 7420 / 27300 |
| Business/Hi-end Graphic Winmark | 378 / 1010 | 381 / 1010 |
| SISMark 2004: SISMark Rating(Internet Content Creation / Office Productivity) | | |
| SISMark 2004 | 164 (164 / 164) | 160 (158 / 161) |
| 3D Creation / 2D Creation | 174 / 176 | 163 / 181 |
| / Web publication | 143 | 133 |
| Communication / Document Creation | 149 / 168 | 145 / 164 |
| / Data Analysis | 177 | 174 |
| SISOFT Sandra 2004 : 1.CPU Arithmetic Benchmark 2.Memory bandwidth Benchmark 3.CPU Multi-Media Benchmark | | |
| 1.Dhrystone ALU MIPS | 8106 | 7939 |
| Whetstone FPU iSSE2 FLOPS | 4242 / 5790 | 4248 / 5742 |
| 2.Int/Float Buffered iSSE2 MB/S | 4442 / 4442 | 4650 / 4683 |
| 3.Integer/Floating-Point SSE2 IT/S | 25052 / 29049 | 24823 / 28404 |
| UT2003 Benchmark (flyby/botmatch) | 75.52 / 27.83 | 78.82 / 30.65 |
| Quake3 DEMO1 / DEMO2 FPS | 129.9 / 123.4 | 134.2 / 130.1 |
| Return to Castle Wolfenstein FPS | 78.8 | 79.1 |
| Super Pi (1M) Second | 37s | 36s |

| | | |
|-------------------------|----------------|----------------|
| CPUZ System / CPU Clock | 200.0 / 3600.0 | 200.0 / 3600.0 |
|-------------------------|----------------|----------------|

1-4 Layout Diagram & Jumper Setting

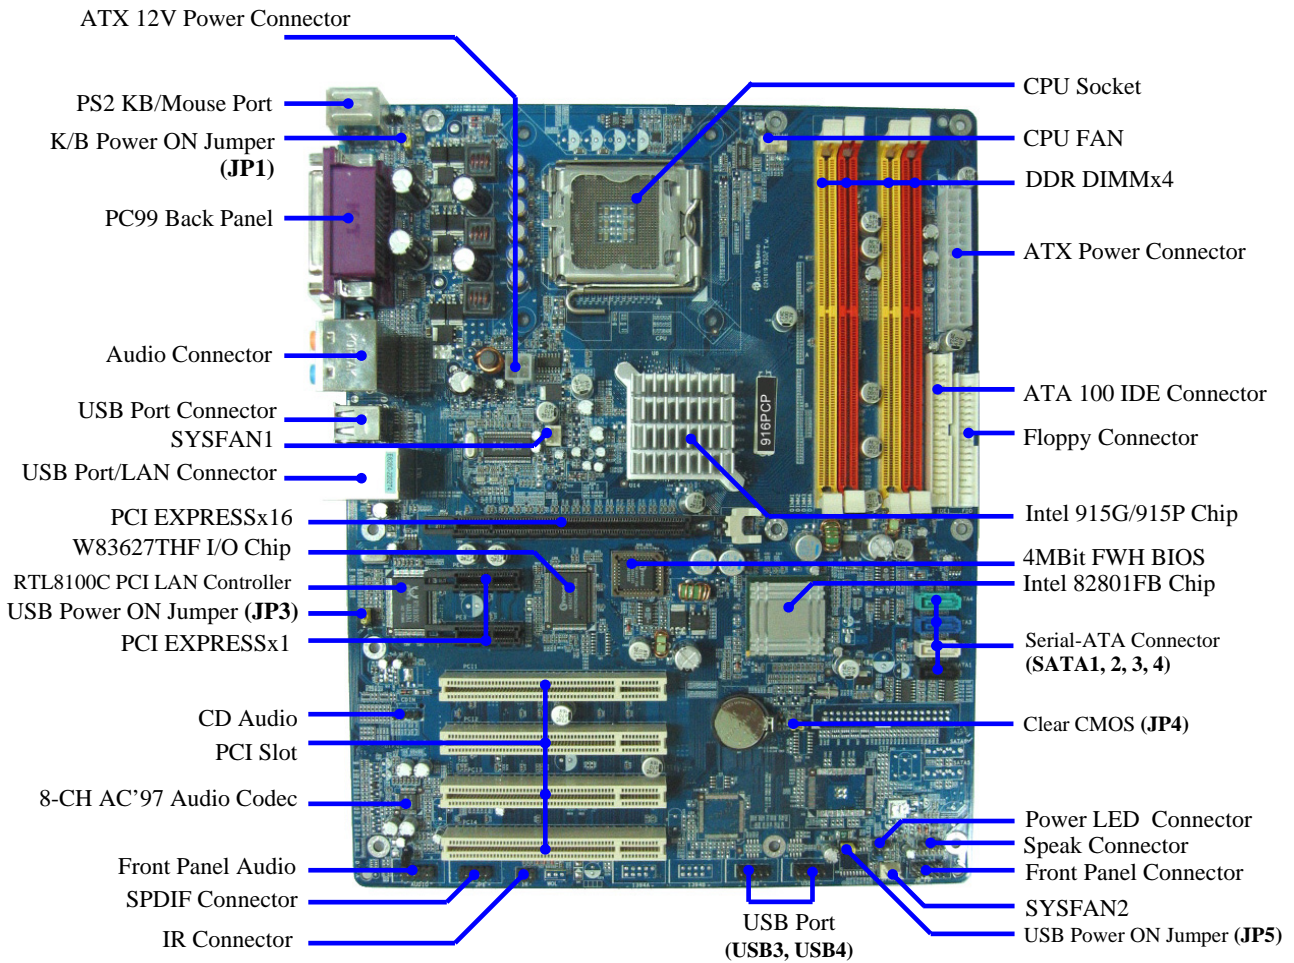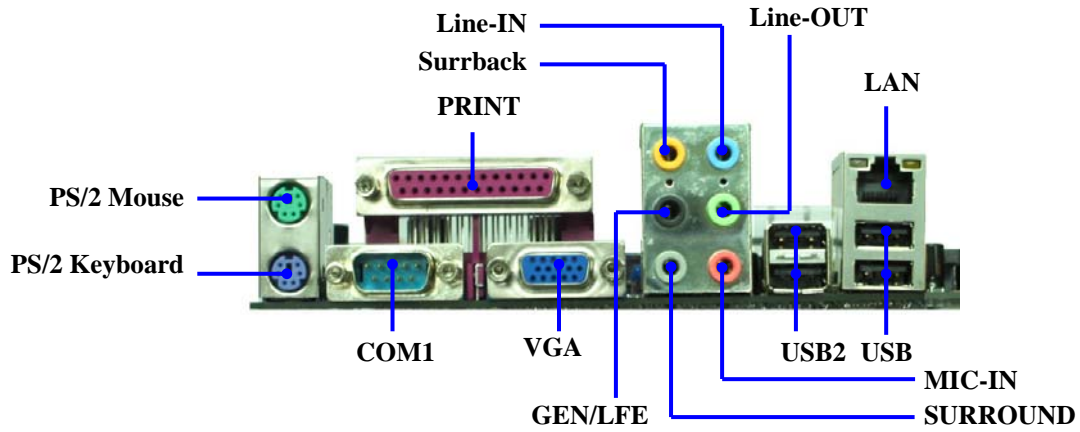

Jumpers

| Jumper | Name | Description | Page |
|---------|-----------------------------------|-------------|------|
| JP4 | CMOS RAM Clear | 3-pin Block | P.7 |
| JP1 | Keyboard Power On Enable/Disabled | 3-pin Block | P.8 |
| JP3/JP5 | USB Power On Enable/Disabled | 3-pin Block | P.8 |

Connectors

| Connector | Name | Description | Page |
|----------------------|--------------------------------------|-------------------------|------|
| ATXPWR | ATX Power Connector | 24-pin Block | P.22 |
| ATX12V | ATX 12V Power Connector | 4-pin Block | P.22 |
| USB/USB2 | USB Port Connector | 4-pin Connector | P.23 |
| LAN | LAN Connectors | RJ-45 Connector | P.23 |
| PS2 KB/MOUSE | PS/2 Mouse & PS/2 Keyboard Connector | 6-pin Female | P.23 |
| PARALLEL | Parallel Port Connector | 25-pin Female | P.23 |
| J1 | Audio Line In/Out MIC Connector | 6 phone jack Connector | P.23 |
| VGA (for 916GCP) | VGA Display Connector | 15-pin Female Connector | P.23 |
| COM2 (for 916PCP) | Serial Port COM2 Connector | 9-pin Connector | P.23 |
| COM1 | Serial Port COM1 Connector | 9-pin Connector | P.23 |
| FDD | Floppy Driver Connector | 34-pin Block | P.23 |
| IDE1/IDE2 | Primary/Secondary Connector | 40-pin Block | P.24 |
| SATA1~4 | Serial-ATA Port Connector | 7-pin Block | P.24 |

Headers

| Header | Name | Description | Page |
|---|---|--------------|------|
| AUDIO | Line-Out, MIC Headers | 9-pin Block | P.25 |
| USB3/USB4 | USB Port Headers | 9-pin Block | P.25 |
| SPEAK | Speaker connector | 4-pin Block | P.25 |
| FP (Power LED/Reset/ IDE LED/ Power Button) | Front Panel Header (including Power LED/ IDE activity LED/ Reset switch / Power On Button lead) | 9-pin Block | P.25 |
| CPUFAN | CPUFAN Power Header | 4-pin Block | P.26 |
| SYSFAN1, SYSFAN2 | FAN Power Headers | 3-pin Block | P.26 |
| IR | IR infrared module Headers | 5-pin Block | P.27 |
| CDIN | CD Audio-In Headers | 4-pin Block | P.27 |
| JP6 (SPDIF) | SPDIF In/Out Header | 10-pin Block | P.27 |

Expansion Sockets

| Socket/Slot | Name | Description | Page |
|------------------------------|----------------------|---|------|
| LGA 775 Socket | CPU Socket | LGA 775 CPU Socket | P.9 |
| DIMM1, DIMM2 DIMM3, DIMM4 | DDR2 Module Socket | 240-pin DDR2 RAM Module Expansion Socket | P.19 |
| PCI1 ~ PCI4 | PCI Slot | 32-bit PCI Local Bus Expansion slots | P.20 |
| PE1 | x16 PCI Express Slot | x16 PCI Express Expansion Slot | P.21 |
| PE2/PE3 | x1 PCI Express Slot | x1 PCI Express Expansion Slot | P.21 |

Chapter 2

Hardware installation

2-1 Hardware installation Steps

Before using your computer, you had better complete the following steps:

1. Check motherboard jumper setting
2. Install CPU and Fan
3. Install System Memory (DIMM)
4. Install Expansion cards
5. Connect IDE and Floppy cables, Front Panel /Back Panel cable
6. Connect ATX Power cable
7. Power-On and Load Standard Default
8. Reboot
9. Install Operating System
10. Install Driver and Utility

2-2 Checking Motherboard's Jumper Setting

(1) CMOS RAM Clear (3-pin) : JP4


A battery must be used to retain the motherboard configuration in CMOS RAM short 1-2 pins of JP4 to store the CMOS data.

To clear the CMOS, follow the procedure below:

1. Turn off the system and unplug the AC power
2. Remove ATX power cable from ATX power connector
3. Locate JP4 and short pins 2-3 for a few seconds
4. Return JP4 to its normal setting by shorting pins 1-2
5. Connect ATX power cable back to ATX power connector


Note: When should clear CMOS

1. *Troubleshooting*
2. *Forget password*
3. *After over clocking system boot fail*

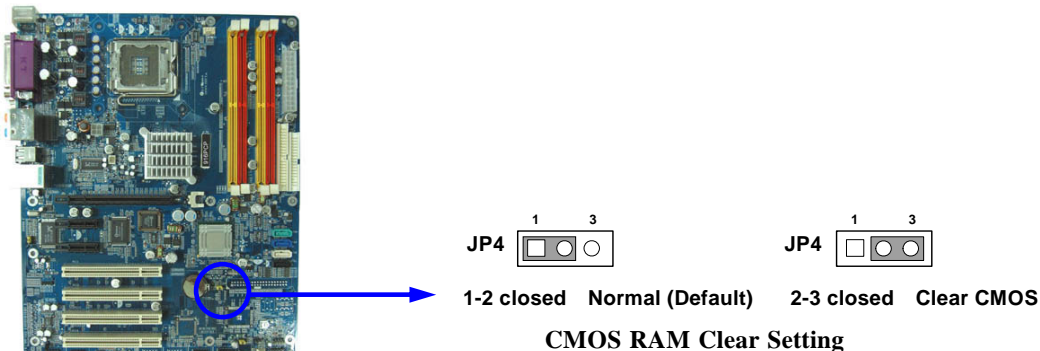

(2) Keyboard/USB Power On function Enabled/Disabled: JP1/JP3, JP5

When setting Enabled you can use keyboard by key in password/USB device to power on system.

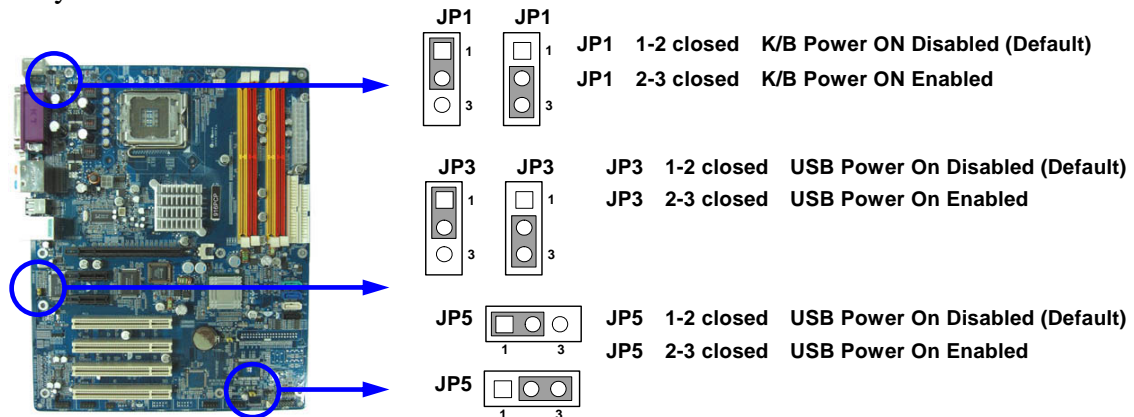

2-3 Install CPU

2-3-1 Glossary

Chipset (or core logic) - two or more integrated circuits which control the interfaces between the system processor, RAM, I/O devices, and adapter cards.

Processor slot/socket/LGA - the slot or socket used to mount the system processor on the motherboard.

Slot (PCI-E, PCI, RAM) - the slots used to mount adapter cards and system RAM.

PCI - Peripheral Component Interconnect - a high speed interface for video cards, sound cards, network interface cards, and modems; runs at 33MHz.

PCI Express- Peripheral Component Interconnect Express- a high speed interface for video cards, sound cards, network interface cards, and modems

Serial Port - a low speed interface typically used for mouse and external modems.

Parallel Port - a low speed interface typically used for printers.

PS/2 - a low speed interface used for mouse and keyboards.

USB - Universal Serial Bus - a medium speed interface typically used for mouse, keyboards, scanners, and some digital cameras.

Sound (interface) - the interface between the sound card or integrated sound connectors and speakers, MIC, game controllers, and MIDI sound devices.

LAN (interface) - Local Area Network - the interface to your local area network.

BIOS (Basic Input/Output System) - the program logic used to boot up a computer and establish the relationship between the various components.

Driver - software, which defines the characteristics of a device for use by another device or other software.

Processor - the "central processing unit" (CPU); the principal integrated circuit used for doing the "computing" in "personal computer"

Front Side Bus Frequency - the working frequency of the motherboard, which is generated by the clock generator for CPU, DRAM and PCI BUS.

CPU L2 Cache - the flash memory inside the CPU, normally Athlon CPU has 256K or above, while Duron will have 64K.


2-3-2 About Intel Pentium 4 LGA775 CPU

This motherboard provides a 775-pin surface mount, LGA775 Land Grid Array socket, referred to as the LGA775 socket supports Intel Pentium 4 processor in the 775 Pin package utilizes Flip-Chip Land Grid Array (FC-LGA4) package technology.

The CPU that comes with the motherboard should have a cooling FAN attached to prevent overheating. If this is not the case, then purchase a correct cooling FAN before you turn on your system.

WARNING! Be sure that there is sufficient air circulation across the processor's heatsink and CPU cooling FAN is working correctly, otherwise it may cause the processor and motherboard overheat and damage, you may install an auxiliary cooling FAN, if necessary.

To install a CPU, first turn off your system and remove its cover. Locate the LGA775 socket and open it by first pulling the level sideways away from the socket then upward to a 90-degree angle. Insert the CPU with the correct orientation as shown below. The notched corner should point toward the end of the level. Because the CPU has a corner pin for two of the four corners, the CPU will only fit in the orientation as shown.

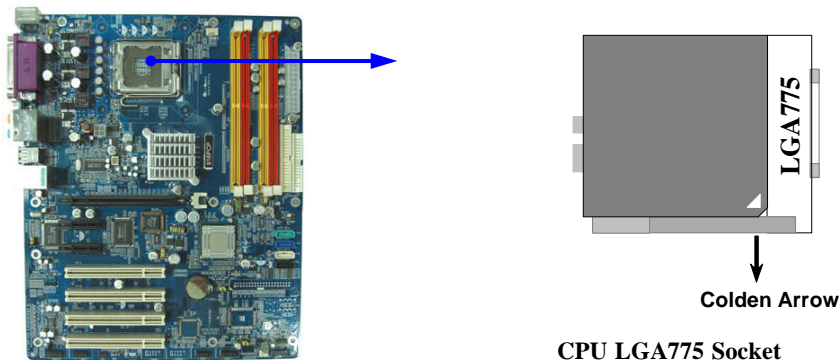


When you put the CPU into the LGA775 socket. No force require to insert of the CPU, then press the level to Locate position slightly without any extra force.

2-3-3 LGA 775 CPU Installation Guide

Socket Preparation

1. Opening the socket:


Note: Apply pressure to the corner with right hand thumb while opening/closing the load lever, otherwise lever can bounce back like a “mouse trap” and WILL cause bent contacts (when loaded)

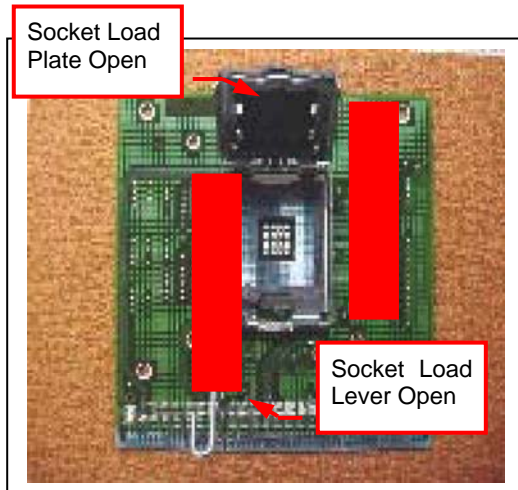

- i. Disengage Load Lever by **depressing down** and **out** on the hook to clear retention tab
- ii. Rotate Load Lever to fully open position at approximately 135degrees
- iii. Rotate Load Plate to fully open position at approximately 100degrees

2. Remove PnP Cap (Pick & Place Cap)

- i. With left hand index finger and thumb to support the load plate edge, engage PnP cap with right hand thumb and peel the cap from LGA775 Socket while pressing on center of PnP cap to assist in removal.
- ii. Set PnP cap aside. Always put PnP cap back on if the processor is removed from the socket.
- iii. Visually inspect PnP cap for damage. If damage observed, replace the PnP cap.

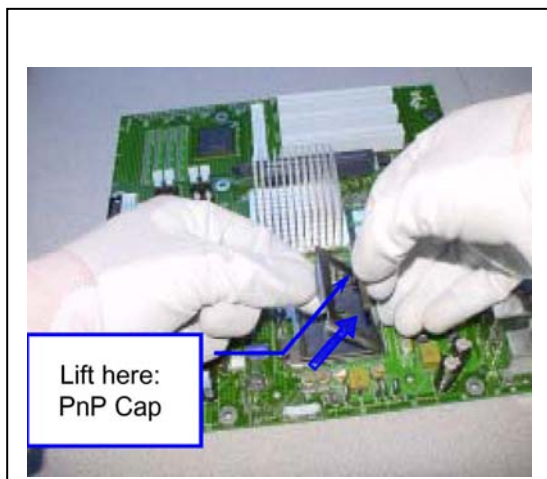

Note: After PnP cap removal, make sure socket load plate and contacts are free of foreign material; Refer to Overview Module for FM cleaning.

Note: Optionally, remove PnP cap after CPU insertion. This will compromise the ability to visually inspect socket.


3. Visually inspect for bent contacts (Recommend at least 1st pass visual inspection)

NOTE: Refer to the Handling and Inspection Module for 1st and 2nd pass inspection details.

NOTE: Glove images are for illustrative purposes only. Please consult local safety guidelines for specific requirements


NOTE: Recommend not to hold the load plate as a lever, instead hold at tab with left hand, removing the PnP cap with right hand

775-land LGA Package Insertion

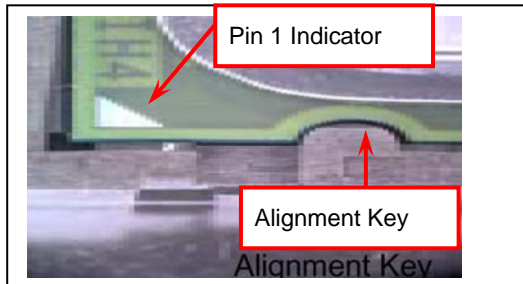

1. Lift processor package from shipping media by grasping the substrate edges ONLY.
Note: Orient processor package such that the Pin 1 triangle mark is on bottom left and both key notches are on left side
2. Land Side Cover Handling: Remove land side cover with the opposite hand by depressing larger retention tab and peeling the cover away
3. Set and reserve the land side cover aside.
Note: Always keep the land side cover on the processor when not in the socket.
4. Visually inspect the package gold pads: Scan the processor package gold pad array for presence of foreign material. Refer to Overview Module for FM cleaning recommendations
5. Orient the package with IHS up. Locate Pin 1 and the two orientation key notches
6. Carefully place the package into the socket body using a purely vertical motion


CAUTION: Using Vacuum Pen for installation is *not* recommended

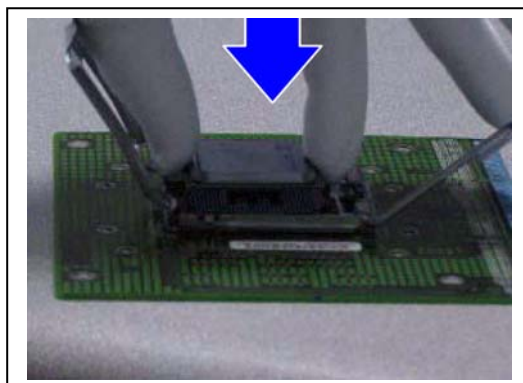

7. Verify that package is within the socket body and properly mated to the orient keys
8. Close the socket by
 - i. Rotating the Load Plate onto the package HIS
 - ii. While pressing down lightly on Load Plate, engage the Load Lever.
 - iii. Securing Load Lever with Load Plate tab under retention tab of Load Lever



775-Land Package Removal

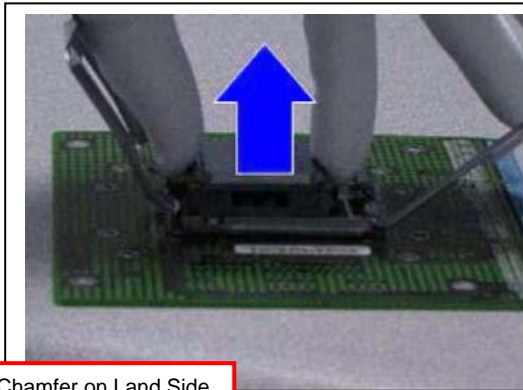


Chamfer on Land Side Cover (align this with pin 1 mark on 775-land LGA package)



Large Retention Tabs (pointing towards user)

onto

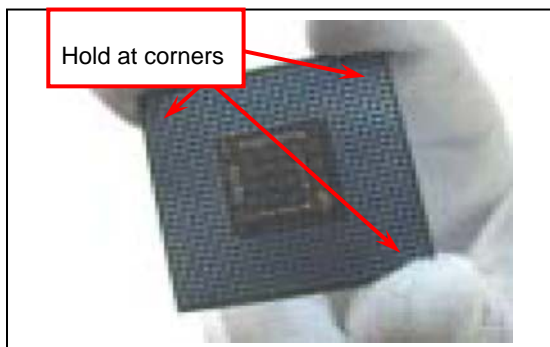

Hold at corners

1. Open the Load Plate/Lever with both hands: With left hand index finger and thumb to support the load plate edge, engage PnP cap with right hand thumb and peel the cap from LGA775 Socket while pressing on center of PnP cap to assist in removal.
2. Pick up 775-land LGA package:
 - By Vacuum Pen: Place a minimum 9-mm cup at approximately the center of IHS.
 - Recommend not to place Vacuum Pen on IHS edge. Risk of dropping and causing bent contact.
 - Recommend not to use Vacuum Pen for inserting CPU By Hand: Index finger to hold load plate hinge side and thumb to hold load lever side
3. Lift the package straight up and away.
4. Assemble processors land side cover immediately to prevent contamination.
 - i. While holding the processor by the 3 corners, the other hand lift land side cover from work surface by grasping at the large retention tabs. Ensure retention tabs and package are pointing each other.
 - ii. Orientate so that land side cover chamfer is matching with package Pin 1 location.
 - iii. Hook the first large retention tab on the package substrate. Then press the opposite tab onto the substrate.
 - iv. Place processor with land side cover installed onto proper shipping media or other ESD approved work surface

5. Visually inspect socket contact array

1. First Pass Inspection

- i. Scan socket contact array at varying angles noting the presence of any foreign material
- ii. If foreign material can't be blown off by compressed air, or mechanical damage (Mode1 or 4) observed, reject the motherboard for further evaluation or socket replacement.

2. Second Pass Inspection

- i. Repeat 2 more times to sight down the rows and columns from each of the 4 sides of the socket to ensure all contacts within the array are inspected
- ii. Inspect for Mode2, Mode3, and Mode5 failures

Note: Refer to the Test Module for detail visual inspections

6. Assemble LGA775 socket PnP cap

- i. Secure/Hook the back side of PnP cap.
- ii. Snap down the front side to fully secure



7. Close the Socket

Intel Reference Thermal Solution Assembly


NOTE: Depending on the configuration, Thermal Solution Integration procedure could perform with M/B alone or with M/B in the Chassis.



0.150-inch backside clearance for fastener installation

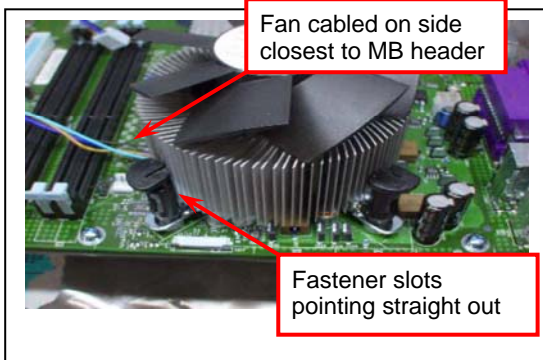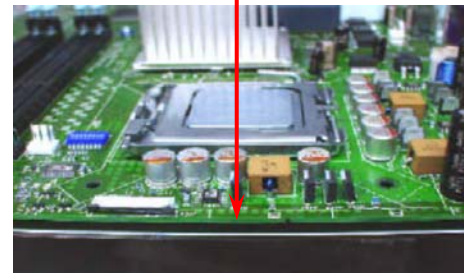


1. Place motherboard on support structure providing minimum 0.150-inch backside clearance
2. Apply 300 mg of Thermal Interface Material (Shin-Etsu G751) onto center of IHS

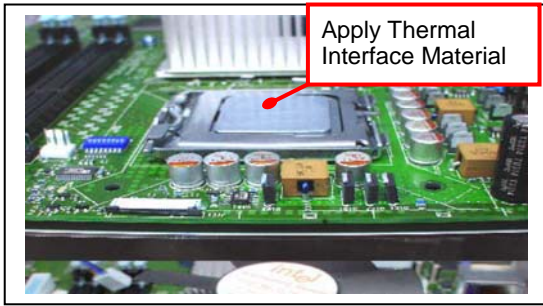


NOTE: Thermal Solutions that come with Intel® boxed processor use pre-applied thermal interface material and not grease.


3. Remove Heat Sink (HS) from packaging media
4. Place HS onto the LGA775 Socket
 - Ensure fan cables are oriented on side closest to fan header
 - Align Fasteners with MB through-holes

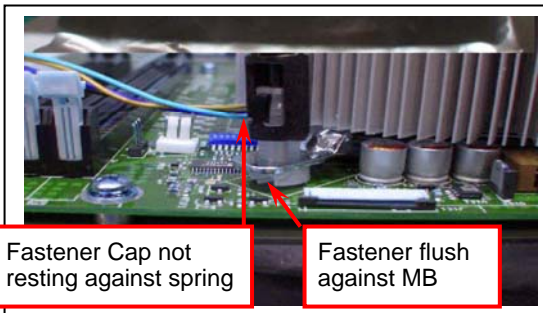

5. Inspection
 - Ensure cables are not trapped or interfere fastener operation
 - Ensure fastener slots are pointing straight out from heatsink

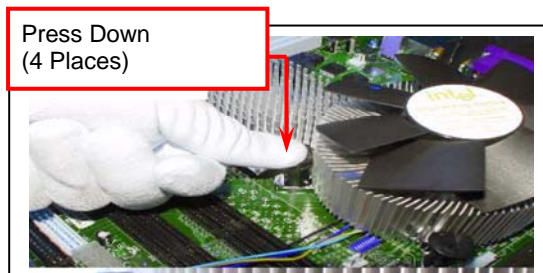

6. Actuate fasteners
 - While holding HS to prevent tilting, press down on fastener caps with thumb to install and lock
 Repeat with remaining fasteners

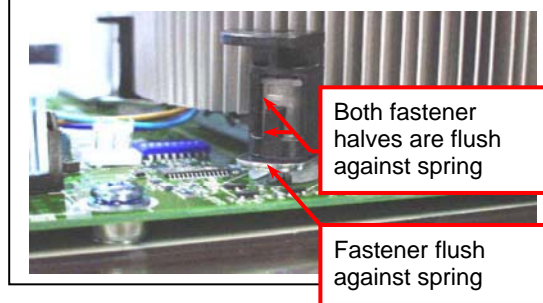


7. Inspection
 - Verify the fasteners are properly seated
 - Ensure both fastener cap and base are flush with spring and motherboard
8. Connect fan header with Board header



9. Secure excess cable with tie-wrap to ensure cable does not interfere with fan operation or contact other components.



Intel Reference Thermal Solution Disassembly

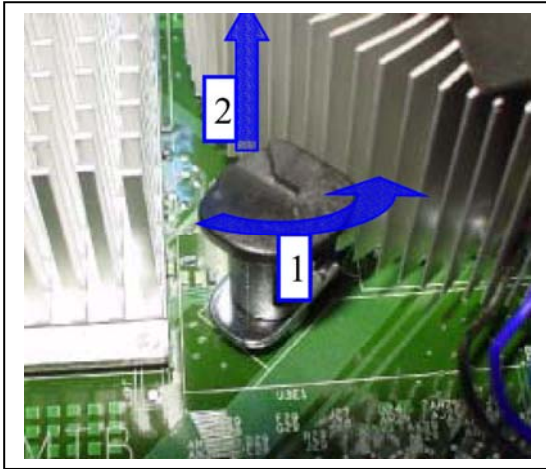


1. Rotate fastener cap. turn to un-lock
 2. Pull up fastener cap to un-seat
1. Disconnect fan cable from motherboard header
 2. Turn fastener caps (4) counter-clock wise 90degrees to the un-locked position
 - A flat-bladed screwdriver may be used if required
 3. Pull up on fastener caps to unseat
 4. Manually remove HS with gentle twist motion.
 5. To re-assemble the HS, reset the fastener caps to their original position with the slot perpendicular to the HS. Then, follow the assembly instructions.

Note: Thermal grease should be reapplied

TIM and Grease Removal from CPU

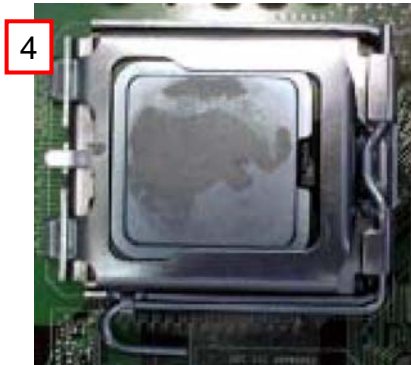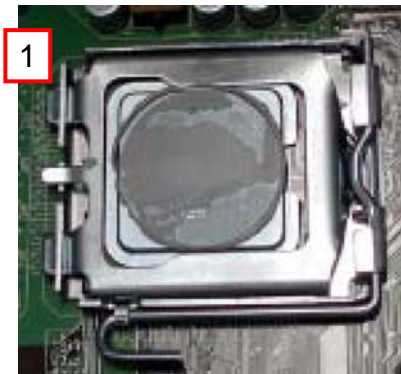

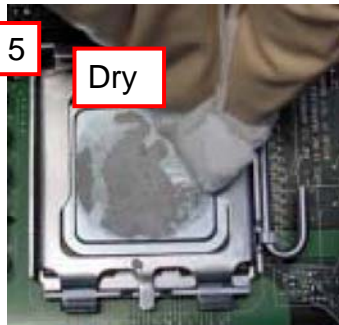


1. Remove the heatsink from the socket
2. Gently push loose thermal interface material (TIM) to center of processor (pictures 2 and 3)
3. Remove pieces with dry cloth (picture 4)
4. Wipe with dry, lint-free cloth to remove most of the material (picture 5)
5. Wet another lint-free cloth with isopropyl alcohol (IPA) and wipe to clean remaining material (picture 6)
6. Be careful to remove material from gaps between processor and load plate
7. For thermal grease removal use Step 4-6

TIM and Grease Removal from Heat-sink

Note: Remove and replace the TIM from the heatsink if you are re-using the heatsink on a new processor

1. Use dry, lint-free cloth and wipe package to remove most of the material
2. Wet another lint-free cloth with isopropyl alcohol (IPA) and wipe heatsink to clean remaining material



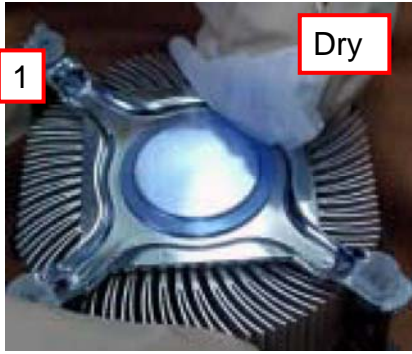


Replacing Damaged Fasteners

- To prevent damage, avoid setting the thermal solution with the prongs down
 - Set on heatsink side or with fan down
- The plastic fasteners on the heatsink can be replaced.
 - Use Shop Intel to order spare fasteners
 - <http://www.shop-intel.com>
- To remove a damaged fastener

Note: Protective gloves are not required for this procedure

- Rotate the black pin counterclockwise until it “snaps”. There will be some resistance
- Remove the black pin from the white prong
- Tilt the white prong to remove it from the heatsink leg

Avoid damage, avoid placing prongs on hard surface

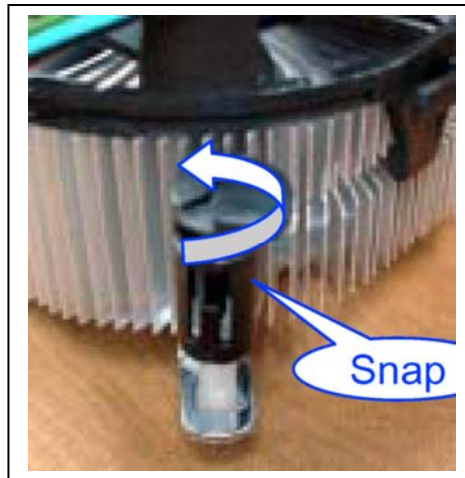



Damaged. Attempts to straighten not recommended





Replacing Fasteners

- To **replace** the fastener
 - Start with the white prong
 - Note the “keying” notch feature
 - Tilt the prong to insert into the heatsink leg.
 - Holding the white prong without bending it, push the black pin on from the bottom until you hear a single “click”

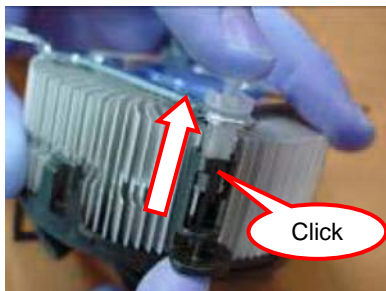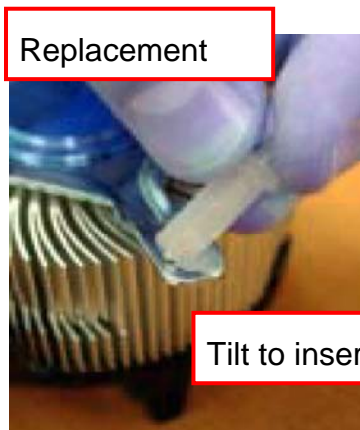

Note: The black pin and white prong will only “snap” on in one orientation

- Check to ensure the black pin is rotated properly for installation with the slot perpendicular to the heatsink

2-4 Install Memory

This motherboard provides **four** 240-pin DDR2 DUAL INLINE MEMORY MODULES (DIMM) sites for memory expansion available from minimum memory size of 256MB to maximum memory size of 4.0GB DDR2 SDRAM.

Valid Memory Configurations

| Bank | 240-Pin DIMM | PCS | Total Memory |
|-------------------|---|-----|--------------|
| Bank 0, 1 (DIMM1) | DDR2 400/ DDR2 533 DDR2 SDRAM Module | X1 | 256MB~1.0GB |
| Bank 2, 3 (DIMM2) | DDR2 400/ DDR2 533 DDR2 SDRAM Module | X1 | 256MB~1.0GB |
| Bank 4, 5 (DIMM3) | DDR2 400/ DDR2 533 DDR2 SDRAM Module | X1 | 256MB~1.0GB |
| Bank 6,7 (DIMM4) | DDR2 400/ DDR2 533 DDR2 SDRAM Module | X1 | 256MB~1.0GB |
| Total | System Memory (Max. 4.0GB) | 4 | 256MB~4.0GB |

For Dual channel Limited!

1. Dual channel function only supports when 2 DIMM Modules plug in either both DIMM1 & DIMM3 or DIMM2 & DIMM4, or four DIMM Modules plug in DIMM1~DIMM4.
2. DIMM1 & DIMM3, or DIMM2 & DIMM4 must be the same type, same size, same frequency for dual channel function.

Generally installing DDR2 RAM Modules to your motherboard is very easy, you can refer to figure 2-4 to see what a 240-Pin DDR2 533/DDR2 400 DDR SDRAM module looks like.

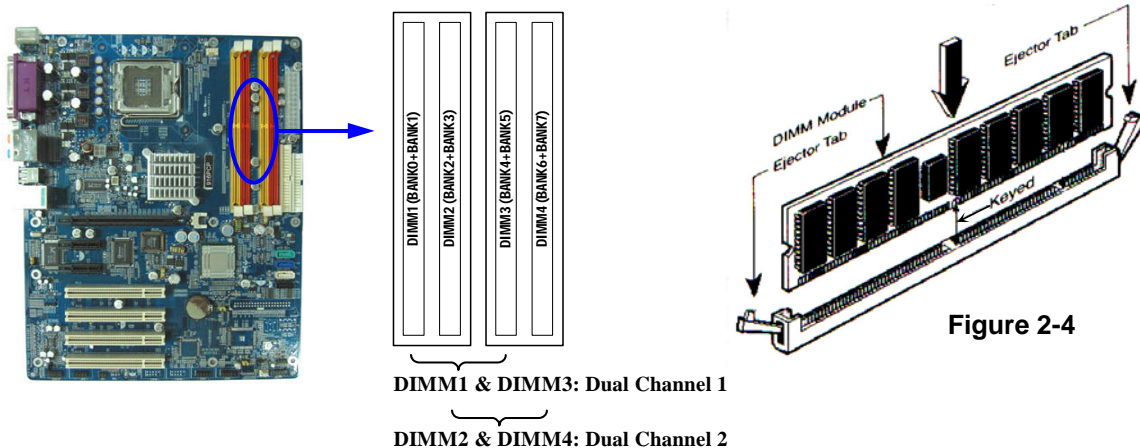


Figure 2-4

NOTE! When you install DIMM module fully into the DIMM socket the eject tab should be locked into the DIMM module very firmly and fit into its indentation on both sides.

2-5 Expansion Cards

WARNING! Turn off your power when adding or removing expansion cards or other system components. Failure to do so may cause severe damage to both your motherboard and expansion cards.

2-5-1 Procedure For Expansion Card Installation

1. Read the documentation for your expansion card and make any necessary hardware or software setting for your expansion card such as jumpers.
2. Remove your computer's cover and the bracket plate on the slot you intend to use.
3. Align the card's connectors and press firmly.
4. Secure the card on the slot with the screen you remove above.
5. Replace the computer system's cover.
6. Set up the BIOS if necessary.
7. Install the necessary software driver for your expansion card.

2-5-2 Assigning IRQs For Expansion Card

Some expansion cards need an IRQ to operate. Generally, an IRQ must exclusively assign to one use. In a standard design, there are 16 IRQs available but most of them are already in use.

Standard Interrupt Assignments

| IRQ | Priority | Standard function |
|------|----------|-----------------------------|
| 0 | N/A | System Timer |
| 1 | N/A | Keyboard Controller |
| 2 | N/A | Programmable Interrupt |
| 3 * | 8 | Communications Port (COM2) |
| 4 * | 9 | Communications Port (COM1) |
| 5 * | 6 | Sound Card (sometimes LPT2) |
| 6 * | 11 | Floppy Disk Controller |
| 7 * | 7 | Printer Port (LPT1) |
| 8 | N/A | System CMOS/Real Time Clock |
| 9 * | 10 | ACPI Mode when enabled |
| 10 * | 3 | IRQ Holder for PCI Steering |
| 11 * | 2 | IRQ Holder for PCI Steering |
| 12 * | 4 | PS/2 Compatible Mouse Port |
| 13 | N/A | Numeric Data Processor |
| 14 * | 5 | Primary IDE Channel |
| 15 * | 1 | Secondary IDE Channel |

* These IRQs are usually available for ISA or PCI devices.

2-5-3 Interrupt Request Table For This Motherboard

Interrupt request are shared as shown the table below:


| | INT A | INT B | INT C | INT D | INT E | INT F | INT G | INT H |
|---------------|-------|-------|-------|-------|-------|-------|-------|-------|
| Slot 1 | | √ | | | | | | |
| Slot 2 | | | √ | | | | | |
| Slot 3 | | | | √ | | | | |
| Slot 4 | | | | | | √ | | |
| Onboard VGA | √ | | | | | | | |
| Onboard LAN | | | | | √ | | | |
| Onboard USB 1 | | | | | | | | √ |
| Onboard USB 2 | | | | √ | | | | |
| Onboard USB 3 | | | √ | | | | | |
| Sound | | √ | | | | | | |

IMPORTANT! If using PCI cards on shared slots, make sure that the drivers support “Shared IRQ” or that the cards don’t need IRQ assignments. Conflicts will arise between the two PCI groups that will make the system unstable or cards inoperable.

2-5-4 PCI Express Slot

This motherboard provides one 16-lane PCI Express slot intended for Graphics Attach, and two x1 PCI Express Slot. Fully compliant to the *PCI Express Base Specification revision 1.0a*, support PCI Express VGA card, and other PCI Express device.

The x16 PCI Express Slot also supports Advanced Digital Display II Card (ADD2) for digital display and TV-out.

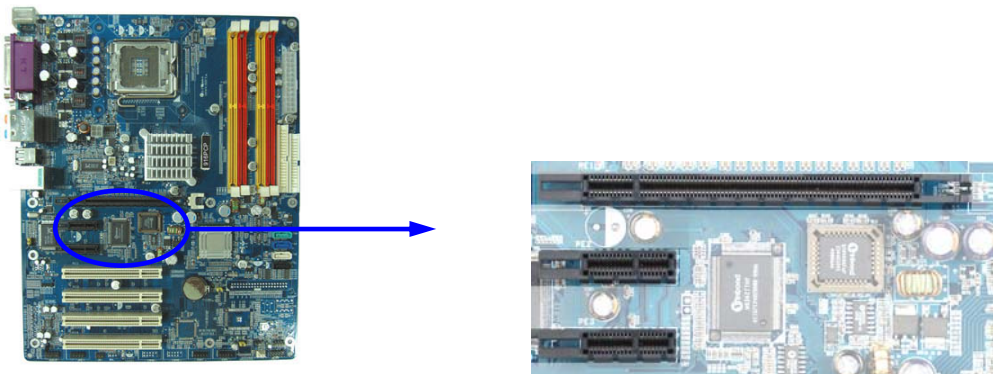


2-6 Connectors, Headers

2-6-1 Connectors

(1) Power Connector (24-pin block) : ATXPWR


ATX Power Supply connector. This is a new defined 24-pins connector that usually comes with ATX case. The ATX Power Supply allows to use soft power on momentary switch that connect from the front panel switch to 2-pins Power On jumper pole on the motherboard. When the power switch on the back of the ATX power supply turned on, the full power will not come into the system board until the front panel switch is momentarily pressed. Press this switch again will turn off the power to the system board.

- ** We recommend that you use an ATX 12V Specification 2.0-compliant power supply unit (PSU) with a minimum of 350W power rating. This type has 24-pin and 4-pin power plugs.
- ** If you intend to use a PSU with 20-pin and 4-pin power plugs, make sure that the 20-pin power plug can provide at least 15A on +12V and the power supply unit has a minimum power rating of 350W. The system may become unstable or may not boot up if the power is inadequate.

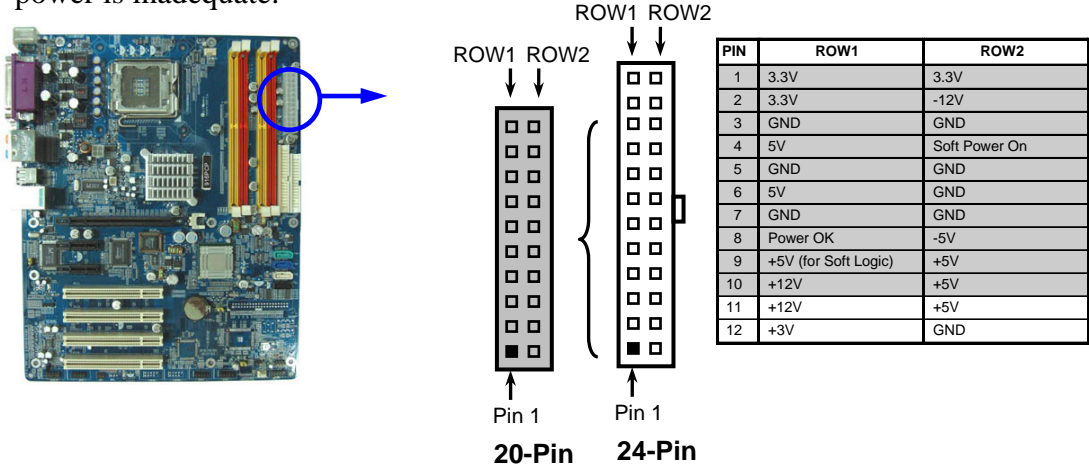


(2) ATX 12V Power Connector (4-pin block) : ATX12V



This is a new defined 4-pins connector that usually comes with ATX Power Supply. The ATX Power Supply which fully support Pentium 4 processor must including this connector for support extra 12V voltage to maintain system power consumption. Without this connector might cause system unstable because the power supply can not provide sufficient current for system.

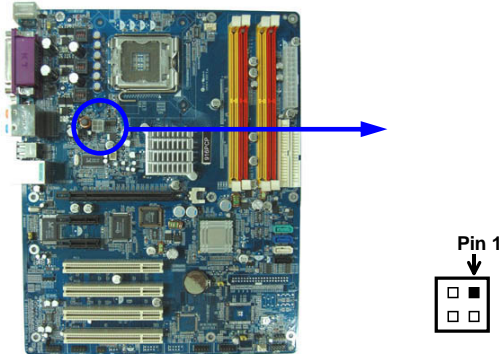

-
- (3) **USB Port connector: USB2**
- (4) **USB Port connector: UL1 (USB)**
The connectors are 4-pin connector that connect USB devices to the system board.
- (5) **LAN Port connector: LAN**
This connector is standard RJ45 connector for Network connector.
- (6) **PS/2 Mouse & PS/2 Keyboard Connector: KB (PS2 KB/MOUSE)**
The connectors for PS/2 keyboard and PS/2 Mouse.
- (7) **Parallel Port Connector (25-pin female): PARALLEL**
Parallel Port connector is a 25-pin D-Subminiature Receptacle connector. The On-board Parallel Port can be disabled through the BIOS SETUP. Please refer to Chapter 3 “INTEGRATED PERIPHERALS SETUP” section for more detail information.
- (8) **VGA Connector (15-pin D-Sub) Connector: VGA (for 916GCP only)**
VGA is the 15-pin D-Subminiature female connector for display monitor
- (9) **Audio Line-In, Lin-Out, MIC, Surrback, Surround, GEN/LEF Connector : J1**
This Connector are 6 phone Jack for LINE-OUT, LINE-IN, MIC, Surrback, Surround, GEN/LEF
- | | |
|-------------------------------|--|
| Line-out : (GREEN) | Audio output to speaker |
| Line-in : (BLUE) | Audio input to sound chip |
| MIC : (PINK) | Microphone Connector |
| Surrback : (ORANGE) | Audio output to speaker-Rear speaker out |
| Surround : (BLACKNESS) | Audio output to speaker-Center/Subwoofer speaker out |
| GEN/LEF: (GRAY) | Audio output to speaker-Side speaker out |
- (10) **Serial Port COM1/COM2(COM2 only for 916PCP):**
COM1/COM2 is the 9-pin D-Subminiature mail connector. The On-board serial port can be disabled through BIOS SETUP. Please refer to Chapter 3 “INTEGRATED PERIPHERALS SETUP” section for more detail information.


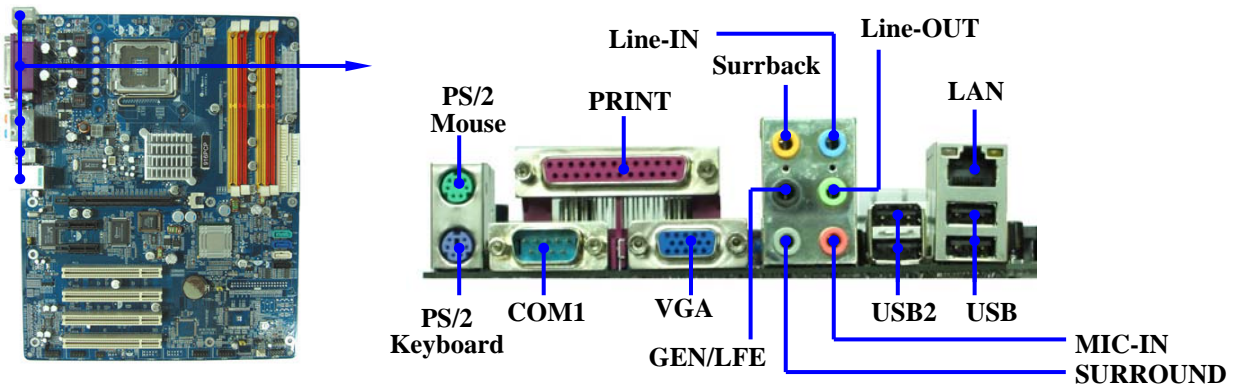


- (11) **Floppy drive Connector (34-pin block): FDD**
This connector supports the provided floppy drive ribbon cable. After connecting the single plug end to motherboard, connect the two plugs at other end to the floppy drives.

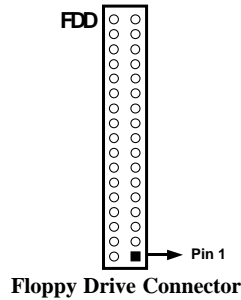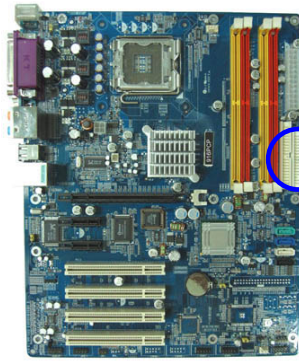

(12) Primary IDE Connector (40-pin block): IDE1 (Support ATA 100)



This connector supports the provided IDE hard disk ribbon cable. After connecting the single plug end to motherboard, connect the two plugs at other end to your hard disk(s). If you install two hard disks, you must configure the second drive to Slave mode by setting its jumpers accordingly. Please refer to the documentation of your hard disk for the jumper settings.

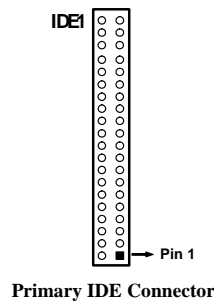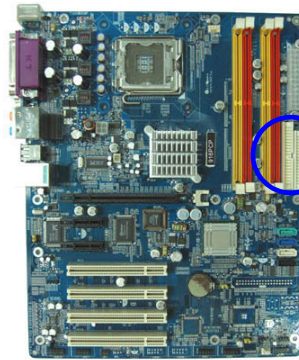

- Two hard disks can be connected to each connector. The first HDD is referred to as the “Master” and the second HDD is referred to as the “Slave”.
- For performance issues, we strongly suggest you don’t install a CD-ROM or DVD-ROM drive on the same IDE channel as a hard disk. Otherwise, the system performance on this channel may drop.

(14) Serial-ATA Port connector: SATA1/SATA2/SATA3/SATA4

This connector support the provided Serial ATA IDE hard disk cable to connecting the motherboard and serial ATA hard disk.

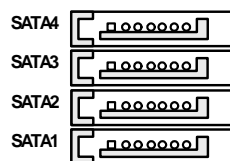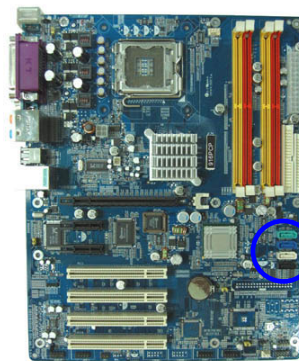


Serial-ATA Port Connector

2-6-2 Headers


(1) Line-Out, MIC Header (9-pin): AUDIO

This header connect to Front Panel Line-out, MIC connector with cable.

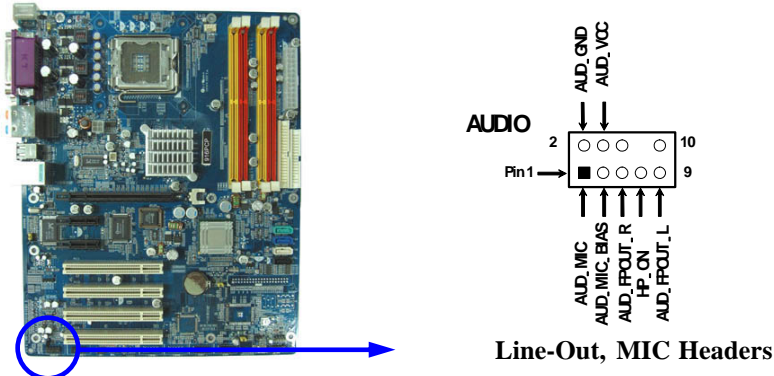

(2) USB Port Headers (9-pin) : USB3, USB4

The header is used for connecting the additional USB port plug. By attaching an option USB cable, your can be provided with two additional USB plugs affixed to the back panel.

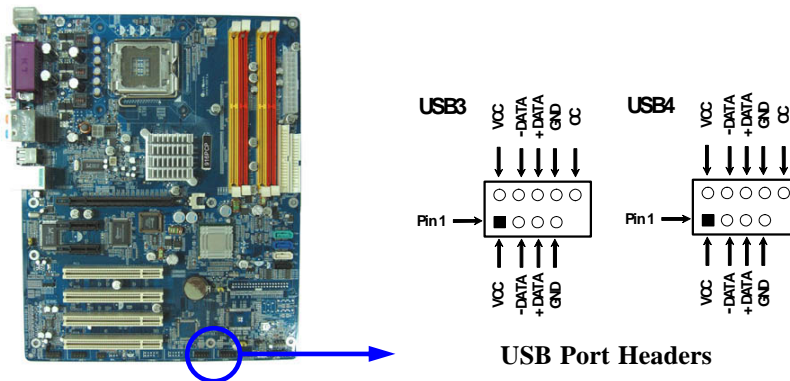

(3) IDE Activity LED: IDE LED

This connector connects to the hard disk activity indicator light on the case.

(4) Reset switch lead: RESET

This 2-pin connector connects to the case-mounted reset switch for rebooting your computer without having to turn off your power switch. This is a preferred method of rebooting in order to prolong the life of the system's power supply. See the figure below.

(5) Power LED: PWR-LED


The Power LED is light on while the system power is on. Connect the Power LED from the system case to this pin.

(6) Speaker connector: SPEAK

This 4-pin connector connects to the case-mounted speaker. See the figure below.


(7) Power switch: PWR BTN

This 2-pin connector connects to the case-mounted power switch to power ON/OFF the system.

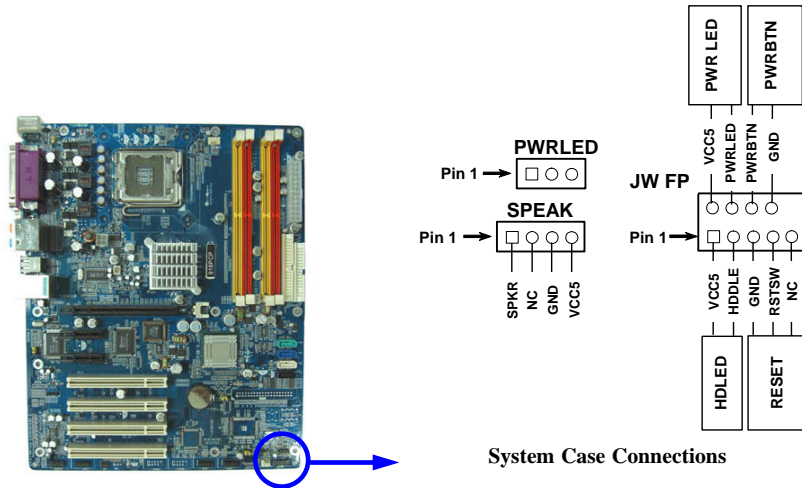


(8) FAN Power Headers: SYSFAN1, SYSFAN2 (3-pin), CPUFAN (4-pin)

These connectors support cooling fans of 350mA (4.2 Watts) or less, depending on the fan manufacturer, the wire and plug may be different. The red wire should be positive, while the black should be ground. Connect the fan's plug to the board taking into consideration the polarity of connector.


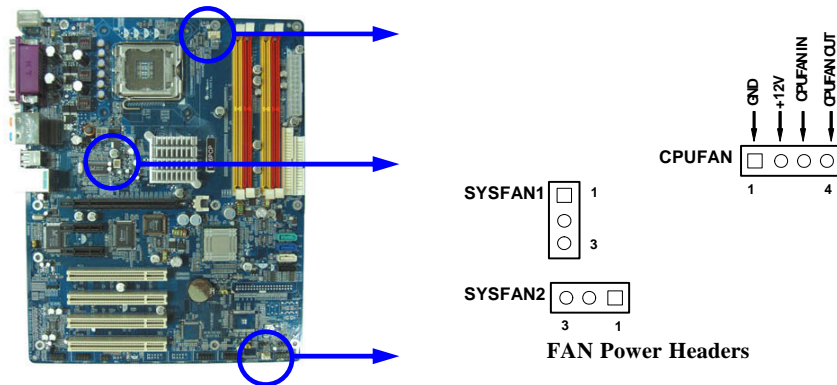


(9) IR infrared module Headers (5-pin) : IR

This connector supports the optional wireless transmitting and receiving infrared module. You must configure the setting through the BIOS setup to use the IR function.

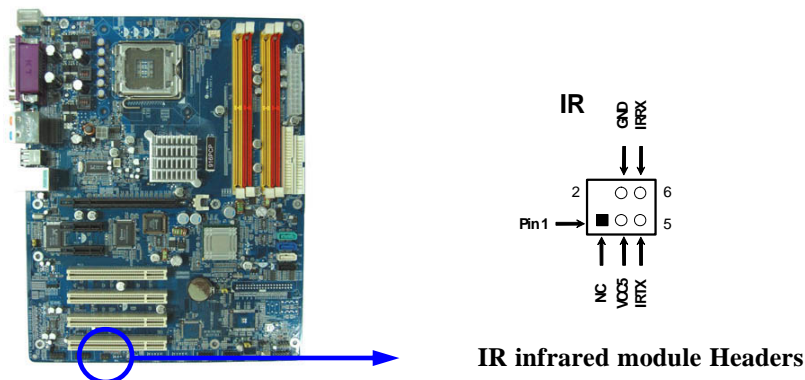


(10) CD Audio-In Headers (4-pin) : CDIN
 CDIN are the connectors for CD-Audio Input signal. Please connect it to CD-ROM CD-Audio output connector.

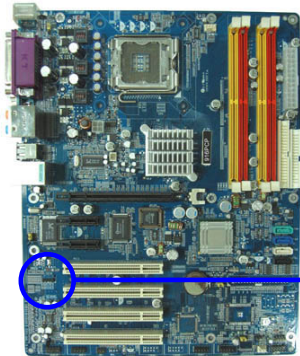


CD Audio-In Headers

(11) SPDIF In/Out Header: JP6

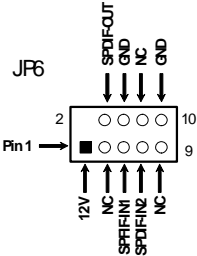

SPDIF-Bracket Connector

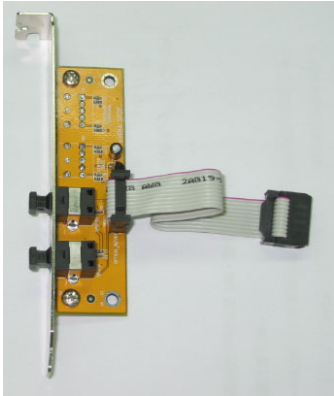

2-7 Starting Up Your Computer

1. After all connection are made, close your computer case cover.
2. Be sure all the switch are off, and check that the power supply input voltage is set to proper position, usually in-put voltage is 220V~240V or 110V~120V depending on your country's voltage used.
3. Connect the power supply cord into the power supply located on the back of your system case according to your system user's manual.
4. Turn on your peripheral as following order:
 - a. Your monitor.
 - b. Other external peripheral (Printer, Scanner, External Modem etc...)
 - c. Your system power. For ATX power supplies, you need to turn on the power supply and press the ATX power switch on the front side of the case.
5. The power LED on the front panel of the system case will light. The LED on the monitor may light up or switch between orange and green after the system is on. If it complies with green standards or if it is has a power standby feature. The system will then run power-on test. While the test are running, the BIOS will alarm beeps or additional message will appear on the screen.

If you do not see any thing within 30 seconds from the time you turn on the power. The system may have failed on power-on test. Recheck your jumper settings and connections or call your retailer for assistance.

| Beep | Meaning |
|---|---|
| One short beep when displaying logo | No error during POST |
| Long beeps in an endless loop | No DRAM install or detected |
| One long beep followed by three short beeps | Video card not found or video card memory bad |
| High frequency beeps when system is working | CPU overheated System running at a lower frequency |

6. During power-on, press <Delete> key to enter BIOS setup. Follow the instructions in BIOS SETUP.
7. **Power off your computer:** You must first exit or shut down your operating system before switch off the power switch. For ATX power supply, you can press ATX power switching after exiting or shutting down your operating system. If you use Windows 9X, click "**Start**" button, click "**Shut down**" and then click "**Shut down the computer?**" The power supply should turn off after windows shut down.

Chapter 3

Introducing BIOS

The BIOS is a program located on a Flash Memory on the motherboard. This program is a bridge between motherboard and operating system. When you start the computer, the BIOS program gain control. The BIOS first operates an auto-diagnostic test called POST (power on self test) for all the necessary hardware, it detects the entire hardware device and configures the parameters of the hardware synchronization. Only when these tasks are completed done it gives up control of the computer to operating system (OS). Since the BIOS is the only channel for hardware and software to communicate, it is the key factor for system stability, and in ensuring that your system performance as its best.

In the BIOS Setup main menu of Figure 3-1, you can see several options. We will explain these options step by step in the following pages of this chapter, but let us first see a short description of the function keys you may use here:

- Press <Esc> to quit the BIOS Setup.
- Press ↑↓←→ (up, down, left, right) to choose, in the main menu, the option you want to confirm or to modify.
- Press <F10> when you have completed the setup of BIOS parameters to save these parameters and to exit the BIOS Setup menu.
- Press Page Up/Page Down or +/- keys when you want to modify the BIOS parameters for the active option.

3-1 Entering Setup

Power on the computer and by pressing immediately allows you to enter Setup.

If the message disappears before your respond and you still wish to enter Setup, restart the system to try again by turning it OFF then ON or pressing the “RESET” button on the system case. You may also restart by simultaneously pressing <Ctrl>, <Alt> and <Delete> keys. If you do not press the keys at the correct time and the system does not boot, an error message will be displayed and you will again be asked to

Press <F1> to continue, <Ctrl-Alt-Esc> or to enter Setup

3-2 Getting Help

Main Menu

The on-line description of the highlighted setup function is displayed at the bottom of the screen.

Status Page Setup Menu/Option Page Setup Menu

Press F1 to pop up a small help window that describes the appropriate keys to use and the possible selections for the highlighted item. To exit the Help Window, press <Esc>.

3-3 The Main Menu

Once you enter Award® BIOS CMOS Setup Utility, the Main Menu (Figure 3-1) will appear on the screen. The Main Menu allows you to select from fourteen setup functions and two exit choices. Use arrow keys to select among the items and press <Enter> to accept or enter the sub-menu.

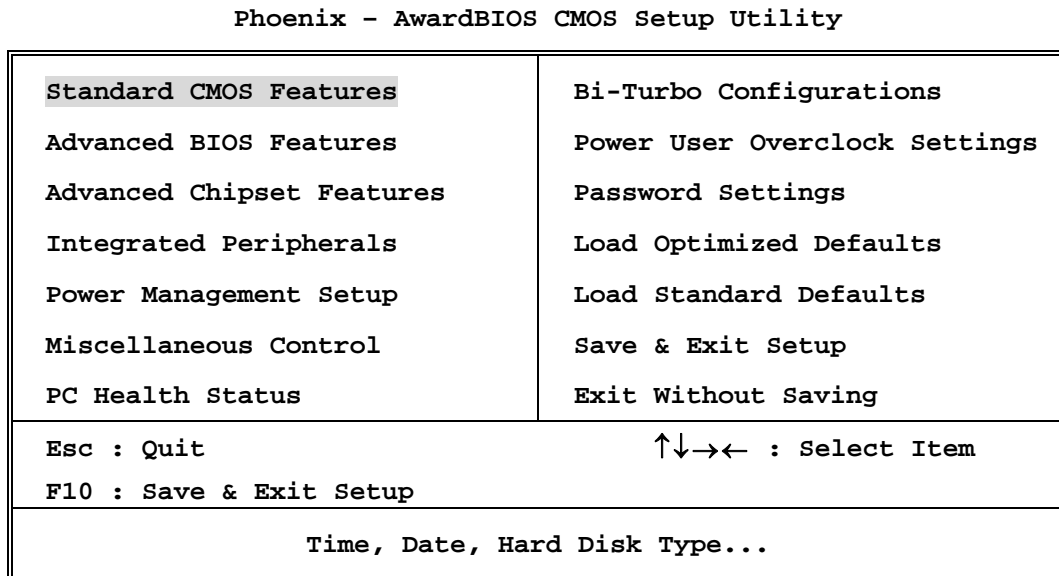


Figure 3-1

Standard CMOS Features

Use this Menu for basic system configurations.

Advanced BIOS Features

Use this menu to set the Advanced Features available on your system.

Advanced Chipset Features

Use this menu to change the values in the chipset registers and optimize your system's performance.

Integrated Peripherals

Use this menu to specify your settings for integrated peripherals.

Power Management Setup

Use this menu to specify your settings for power management.

Miscellaneous Control

Use this menu to specify your settings for Miscellaneous control.

PC Health Status

This entry shows your PC health status.

Bi-Turbo Configurations

This entry appears if your system supports BiTurbo Configurations.

Power User Overclock Settings

Use this menu to specify your settings (frequency, Voltage) for overclocking demand

Password Settings

This entry for setting Supervisor password and User password

Load Optimized Defaults

Use this menu to load the BIOS default values these are setting for optimal performances system operations for performance use.

Load Standard Defaults

Use this menu to load the BIOS default values for the stable performance system operation that are factory settings for normal use.

Save & Exit Setup

Save CMOS value changes to CMOS and exit setup.

Exit Without Saving

Abandon all CMOS value changes and exit setup.

3-4 Standard CMOS Features

The items in Standard CMOS Setup Menu are divided into several categories. Each category includes no, one or more than one setup items. Use the arrow keys to highlight the item and then use the <PgUp> or <PgDn> keys to select the value you want in each item.

Phoenix - AwardBIOS CMOS Setup Utility
Standard CMOS Features

| | | |
|---|-------------------|--|
| Date (mm:dd:yy) | The, May, 10 2005 | Item Help |
| Time (hh:mm:ss) | 11 : 02 : 35 | |
| > IDE Primary Master | Press Enter None | Menu Level > |
| > IDE Primary Slave | Press Enter None | |
| > IDE Secondary Master | Press Enter None | |
| > IDE Secondary Slave | Press Enter None | Change the day, month, year and century |
| Drive A | 1.44M, 3.5 in. | |
| Drive B | None | |
| Video | EGA/VGA | |
| Halt On | All,But Keyboard | |
| Base Memory | 640K | |
| Extended Memory | 56320K | |
| Total Memory | 57344K | |
| ↑↓→← Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit F1:General Help F5:Previous Values F6:Optimized Defaults F7:Standard Defaults | | |

Date

The date format is <day><month><date><year>.

Day Day of the week, from Sun to Sat, determined by BIOS. Read-only.

Month The month from Jan. through Dec.

Date The date from 1 to 31 can be keyed by numeric function keys.

Year The year depends on the year of the BIOS.

Time

The time format is <hour><minute><second>.

Primary Master/Primary Slave

Secondary Master/Secondary Slave

Press PgUp/<+> or PgDn/<-> to select Manual, None, Auto type. Note that the specifications of your drive must match with the drive table. The hard disk will not work properly if you enter improper information for this category. If your hard disk drive type is not matched or listed, you can use Manual to define your own drive type manually.

If you select Manual, related information is asked to be entered to the following items. Enter the information directly from the keyboard. This information should be provided in the documentation from your hard disk vendor or the system manufacturer.

If the controller of HDD interface is SCSI, the selection shall be "None".

If the controller of HDD interface is CD-ROM, the selection shall be "None"

Access Mode The settings are Auto Normal, Large, and LBA.

Cylinder number of cylinders

Head number of heads

Precomp write precomp

Landing Zone landing zone

Sector number of sectors

3-5 Advanced BIOS Features

Phoenix - AwardBIOS CMOS Setup Utility

Advanced BIOS Features

| | | |
|---|-------------|--------------|
| Anti-Virus Protection | Disabled | Item Help |
| CPU L1 & L2 Cache | Enabled | |
| CPU L3 Cache | Enabled | Menu Level > |
| Limit CPUID MaxVal | Disabled | |
| NX BIOS Control | Enabled | |
| Hard Disk Boot Priority | Press Enter | |
| Hyper Threading Technology | Enabled | |
| Quick Power On Self Test | Enabled | |
| First Boot Device | Floppy | |
| Second Boot Device | HDD 0 | |
| Third Boot Device | CDROM | |
| Boot other Device | Enabled | |
| Swap Floppy Drive | Disabled | |
| Boot Up Floppy Seek | Enabled | |
| Boot Up NumLock Status | On | |
| Gate A20 Option | Fast | |
| Typematic Rate Setting | Disabled | |
| Typematic Rate (Chars/Sec) | 6 | |
| Typematic Delay (Msec) | 250 | |
| Security Option | Setup | |
| APIC Mode | Enabled | |
| MPS Version Control For OS | 1.4 | |
| OS Select For DRAM > 64MB | Non-OS2 | |
| Report No FDD For Windows | Yes | |
| ↑↓→← Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit F1:General Help F5:Previous Values F6:Optimized Defaults F7:Standard Defaults | | |

Anti-Virus Protection

Allows you to choose the VIRUS Warning feature for IDE Hard Disk boot sector protection. If this function is enabled and someone attempt to write data into this area, BIOS will show a warning message on screen and alarm beep.

Disabled (default) No warning message to appear when anything attempts to access the boot sector or hard disk partition table.

Enabled Activates automatically when the system boots up causing a warning message to appear when anything attempts to access the boot sector of hard disk partition table.

CPU Internal Cache

The default value is Enabled.

Enabled (default) Enable cache

Disabled Disable cache

Note: The internal cache is built in the processor.

External Cache

Choose Enabled or Disabled. This option enables the Level 2 cache memory.

CPU L2 Cache ECC Checking

Choose Enabled or Disabled. This option enables the Level 2 cache memory ECC (error check correction).

Quick Power On Self Test

This category speeds up Power On Self Test (POST) after you power on the computer. If this is set to Enabled. BIOS will shorten or skip some check items during POST.

Enabled (default) Enable quick POST

Disabled Normal POST

First/Second/Third/Fourth Boot Device

The BIOS attempts to load the operating system from the devices in the sequence selected in these items. The settings are Floppy, LS/ZIP, HDD-0/HDD-1/HDD-3, SCSI, CDROM, LAD and Disabled.

Swap Floppy Drive

Switches the floppy disk drives between being designated as A and B. Default is Disabled.

Boot Up Floppy Seek

During POST, BIOS will determine if the floppy disk drive installed is 40 or 80 tracks. 360K type is 40 tracks while 760K, 1.2M and 1.44M are all 80 tracks.

Boot Up NumLock Status

The default value is On.

On (default) Keypad is numeric keys.

Off Keypad is arrow keys.

Gate A20 Option

Normal The A20 signal is controlled by keyboard controller or chipset hardware.

Fast (default) The A20 signal is controlled by port 92 or chipset specific method.

Typematic Rate Setting

Keystrokes repeat at a rate determined by the keyboard controller. When enabled, the typematic rate and typematic delay can be selected. The settings are: Enabled/Disabled.

Typematic Rate (Chars/Sec)

Sets the number of times a second to repeat a keystroke when you hold the key down. The settings are: 6, 8, 10, 12, 15, 20, 24, and 30.

Typematic Delay (Msec)

Sets the delay time after the key is held down before it begins to repeat the keystroke. The settings are 250, 500, 750, and 1000.

Security Option

This category allows you to limit access to the system and Setup, or just to Setup.

System The system will not boot and access to Setup will be denied if the correct password is not entered at the prompt.

Setup (default) The system will boot, but access to Setup will be denied if the correct password is not entered prompt.

OS Select For DRAM > 64MB

Allows OS2® to be used with >64MB or DRAM. Settings are Non-OS/2 (default) and OS2. Set to OS/2 if using more than 64MB and running OS/2.

3-6 Advanced Chipset Features

The Advanced Chipset Features Setup option is used to change the values of the chipset registers. These registers control most of the system options in the computer.

Phoenix - AwardBIOS CMOS Setup Utility
Advanced Chipset Features

| DRAM Timing Settings | By SPD | Item Help |
|---------------------------------|-------------|--------------|
| SDRAM CAS Latency Time | Auto | Menu Level > |
| SDRAM Cycle Time | Auto | |
| SDRAM RAS-to CAS Delay | Auto | |
| SDRAM RAS Precharge Time | Auto | |
| System BIOS Cacheable | Enabled | |
| Video BIOS Cacheable | Enabled | |
| Memory Hole at 15M-16M | Disabled | |
| > PCIExpress Root Port Function | Press Enter | |
| ** VGA Setting ** | | |
| PEG/Onchip VGA Control | Auto | |
| PEG Force X1 | Disabled | |
| On-Chip Frame Buffer Size | 32MB | |
| FIXED Memory Size | 64MB | |
| DVMT Memory Size | 64MB | |

↑↓→← Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit F1:General Help
F5:Previous Values F6:Optimized Defaults F7:Standard Defaults

PCIExpress Root Port Function

Please refer to section 3-6-1

System BIOS Cacheable

Selecting Enabled allows caching of the system BIOS ROM at F0000h-FFFFFh, resulting in better system performance. However, if any program writes to this memory area, a system error may result. The settings are: Enabled and Disabled.

Video RAM Cacheable

Select Enabled allows caching of the video BIOS, resulting in better system performance. However, if any program writes to this memory area, a system error may result. The settings are: Enabled and Disabled.

Memory Hole At 15M-16M

You can reserve this area of system memory for ISA adapter ROM. When this area is reserved, it cannot be cached. The user information of peripherals that need to use this area of system memory usually discusses their memory requirements. The settings are: Enabled and Disabled.

Delay Transaction

The chipset has an embedded 32-bit posted write buffer to support delay transactions cycles. Select Enabled to support compliance with PCI specification version 2.1. The settings are: Enabled and Disabled.

AGP Transfer Mode

In this item you can select AGP transfer mode Auto/4X/1X the Default setting is Auto.

3-6-1 PCIExpress Root Port Function

Phoenix - AwardBIOS CMOS Setup Utility

PCIExpress Root Port Function

| | | |
|---|-------|---------------|
| PCIExpress Port 1 | Auto | Item Help |
| PCIExpress Compliancy Mode | v1.0a | Menu Level >> |
| ↑↓→← Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit F1:General Help F5:Previous Values F6:Optimized Defaults F7:Standard Defaults | | |

3-7 Integrated Peripherals

CMOS Setup Utility - Copyright(C) 1984-2004 Award Software

Integrated Peripherals

| | | |
|---|-------------|--------------|
| > Onboard IDE Function | Press Enter | Item Help |
| > Onboard Device Function | Press Enter | |
| > Onboard Super IO Function | Press Enter | Menu Level > |
| Init Display First | PCI Slot | |
| Pwr Status After Pwr Failure | Always Off | |
| ↑↓→← Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit F1:General Help F5:Previous Values F6:Optimized Defaults F7:Standard Defaults | | |

Onboard IDE Function

Please refer to section 3-7-1

Onboard Device Function

Please refer to section 3-7-2

Onboard Super IO Function

Please refer to section 3-7-3

Init Display First

This item allows you to decide to activate whether PCI Slot or AGP VGA first. The settings are: PCI Slot, AGP Slot.

3-7-1 Onboard IDE Function

Phoenix - AwardBIOS CMOS Setup Utility

Onboard IDE Function

| | | |
|---|---------------------|---------------|
| On-Chip Primary PCI IDE | Enabled | Item Help |
| On-Chip Secondary PCI IDE | Enabled | |
| Primary Master PIO | Auto | Menu Level >> |
| Primary Slave PIO | Auto | |
| Secondary Master PIO | Auto | |
| Secondary Slave PIO | Auto | |
| Primary Master UDMA | Auto | |
| Primary Slave UDMA | Auto | |
| Secondary Master UDMA | Auto | |
| Secondary Slave UDMA | Auto | |
| IDE DMA Transfer Access | Disabled | |
| IDE HDD Block Mode | Enabled | |
| *** On-Chip Serial ATA Setting **** | | |
| On-Chip Serial ATA | Auto | |
| PATA IDE Mode | Primary | |
| SATA Port | P2, P4 is Secondary | |
| ↑↓→← Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit F1:General Help F5:Previous Values F6:Optimized Defaults F7:Standard Defaults | | |

OnChip IDE Primary/Secondary

The integrated peripheral controller contains an IDE interface with support for two IDE channels. Select *Enabled* to activate each channel separately. The settings are: Enabled and Disabled.

Primary/Secondary Master/Slave PIO

The four IDE PIO (Programmed Input/Output) fields let you set a PIO mode (0-4) for each of the four IDE devices that the onboard IDE interface supports. Modes 0 through 4 provide successively increased performance. In Auto mode, the system automatically determines the best mode for each device. The settings are: Auto, Mode 0, Mode 1, Mode 2, Mode 3, Mode 4.

Primary/Secondary Master/Slave UDMA

Ultra DMA/33 implementation is possible only if your IDE hard drive supports it and the operating environment includes a DMA driver (Windows 95 OSR2 or a third-party IDE bus master driver). If your hard drive and your system software both support Ultra DMA/33 and Ultra DMA/66, select Auto to enable BIOS support. The settings are: Auto, Disabled.

IDE HDD Block Mode

Block mode is also called block transfer, multiple commands, or multiple sector read/write. If your IDE hard drive supports block mode (most new drives do), select Enabled for automatic detection of the optimal number of block read/writes per sector the drive can support. The settings are: Enabled, Disabled.

3-7-2 Onboard Device Function

Phoenix - AwardBIOS CMOS Setup Utility

Onboard Device Function

| | | |
|---|----------|---------------|
| RealTek LAN Function | Enabled | Item Help |
| RealTek LAN BootROM | Disabled | |
| USB Host Controller | Enabled | Menu Level >> |
| USB 2.0 Function | Enabled | |
| USB Keyboard Legacy Support | Disabled | |
| High Definition Audio | Enabled | |
| | | |
| ↑↓→← Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit F1:General Help F5:Previous Values F6:Optimized Defaults F7:Standard Defaults | | |

USB Host Controller

Select *Enabled* if your system contains a Universal Serial Bus (USB) controller and you have a USB peripherals. The settings are: Enabled, Disabled.

USB Keyboard Legacy Support

Select *Enabled* if your system contains a Universal Serial Bus (USB) controller and you have a USB keyboard. The settings are: Enabled, Disabled.

High Definition Audio

This will determine which on Board Sound Chip Function will use. The settings are: Enabled, Disabled.

3-7-3 Onboard Super IO Function

Phoenix - AwardBIOS CMOS Setup Utility

Onboard Super IO Function

| | | |
|------------------------|-----------|---------------|
| Onboard FDD Controller | Enabled | Item Help |
| Onboard Serial Port 1 | 3F8/IRQ4 | |
| Onboard Serial Port 2 | 2F8/IRQ3 | |
| UART2 Mode Select | Normal | Menu Level >> |
| IR Duplex Mode | Half | |
| IR Pins | IRRX/IRTX | |
| Onboard Parallel Port | 378/IRQ7 | |
| Parallel Mode | SPP | |
| ECP Mode Use DMA | 3 | |

↑↓→← Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit F1:General Help
F5:Previous Values F6:Optimized Defaults F7:Standard Defaults

Onboard FDD Controller

Select Enabled if your system has a floppy disk controller (FDD) installed on the system board and you wish to use it. If you install add-on FDC or the system has no floppy drive, select Disabled in this field. The settings are: Enabled and Disabled.

Onboard Serial Port 1/Port 2

Select an address and corresponding interrupt for the first and the second serial ports. The settings are: 3F8/IRQ4, 2E8/IRQ3, 3E8/IRQ4, 2F8/IRQ3, Disabled, Auto.

UART2 Mode Select

This item allows you to determine which InfraRed(IR) function of the onboard I/O chip, this functions uses.

Onboard Parallel Port

There is a built-in parallel port on the on-board Super I/O chipset that Provides Standard, ECP, and EPP features. It has the following option:

Disabled

(3BCH/IRQ7)/ Line Printer port 0

(278H/IRQ5)/ Line Printer port 2

(378H/IRQ7) Line Printer port 1

Parallel Port Mode

SPP : Standard Parallel Port

EPP : Enhanced Parallel Port

ECP : Extended Capability Port

SPP/EPP/ECP/ECP+EPP

To operate the onboard parallel port as Standard Parallel Port only, choose "SPP." To operate the onboard parallel port in the EPP modes simultaneously, choose "EPP." By choosing "ECP", the onboard parallel port will operate in ECP mode only. Choosing "ECP+EPP" will allow the onboard parallel port to support both the ECP and EPP modes simultaneously. The ECP mode has to use the DMA channel, so choose the onboard parallel port with the ECP feature. After selecting it, the following message will appear: "ECP Mode Use DMA" at this time, the user can choose between DMA channels 3 to 1. The onboard parallel port is EPP Spec. compliant, so after the user chooses the onboard parallel port with the EPP function, the following message will be displayed on the screen: "EPP Mode Select." At this time either EPP 1.7 spec. or EPP 1.9 spec. can be chosen.

3-8 Power Management Setup

The Power Management Setup allows you to configure your system to most effectively save energy saving while operating in a manner consistent with your own style of computer use.

Phoenix - AwardBIOS CMOS Setup Utility

Power Management Setup

| | | |
|---|----------------|--------------|
| ACPI Function | <u>Enabled</u> | Item Help |
| ACPI Suspend Type | S1(POS) | |
| Power Management | User Define | |
| Video off Method | V/H SYNC+Blank | Menu Level > |
| Video Off In Suspend | Yes | |
| Suspend Type | Stop Grant | |
| MODEM Use IRQ | 3 | |
| Suspend Mode | Disabled | |
| HDD Power Down | Disabled | |
| Soft-off by PWR-BTTN | Instant-off | |
| Wake-Up by PCI card | Disabled | |
| Power On by Ring | Disabled | |
| Resume by Alarm | Disabled | |
| X Date (of Month) | 0 | |
| X Time (hh:mm:ss) | 0 : 0 :0 | |
| > PM Timer Reload Events | Press Enter | |
| > PCI Express PM Function | Press Enter | |
| ↑↓→← Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit F1:General Help F5:Previous Values F6:Optimized Defaults F7:Standard Defaults | | |

ACPI Function

This item allows you to Enabled/Disabled the Advanced Configuration and Power Management (ACPI). The settings are Enabled and Disabled.

ACPI Suspend Type

This item allows you to select ACPI Suspend Type.
The setting are: S1(POS), S3(STR)

Video Off in Suspend

This determines the manner in which the monitor is blanked. The choice are Yes → Video will off , and No→ Video always On.

Video Off Method

This determines the manner in which the monitor is blanked.

- DPMS (default)** Initial display power management signaling.
- Blank Screen** This option only writes blanks to the video buffer.
- V/H SYNC+Blank** This selection will cause the system to turn off the vertical and horizontal synchronization ports and write blanks to the video buffer.

Modem Use IRQ

This determines the IRQ in which the MODEM can use.
The settings are: 3, 4, 5, 7, 9, 10, 11, NA.

Power Button Function

Pressing the power button for more than 4 seconds forces the system to enter the Soft-Off state.
The settings are: Delay 4 Sec, Instant-Off.

Wake-Up by PCI card /Power On by Ring

During Disabled, the system will ignore any incoming call from the PCI card/modem. During Enabled, the system will boot up if there's an incoming call from the PCI card /modem.

Wake-Up on RTC Alarm

This function is for setting date and time for your computer to boot up. During Disabled, you cannot use this function. During Enabled, choose the Date and Time Alarm:

Date(of month) Alarm

You can choose which month the system will boot up. Set to 0, to boot every day.

Time(hh:mm:ss) Alarm

You can choose what hour, minute and second the system will boot up.

Note: If you have change the setting, you must let the system boot up until it goes to the operating system, before this function will work

PM Timer Reload Events

Please refer to section 3-8-1

PCI Express PM Function

Please refer to section 3-8-2

3-8-1 PM Timer Reload Events

Phoenix - AwardBIOS CMOS Setup Utility

PM Timer Reload Events

| | | |
|---|----------|---------------|
| Primary IDE 0 | Disabled | Item Help |
| Primary IDE 1 | Disabled | Menu Level >> |
| Secondary IDE 0 | Disabled | |
| Secondary IDE 1 | Disabled | |
| FDD, COM, LPT Port | Disabled | |
| PCI PIRQ [A-D] # | Disabled | |
| ↑↓→← Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit F1:General Help F5:Previous Values F6:Optimized Defaults F7:Standard Defaults | | |

3-8-2 PCI Express PM Function

Phoenix - AwardBIOS CMOS Setup Utility

PCI Express PM Function

| | | |
|---|---------|---------------|
| PCI Express PME | Enabled | Item Help |
| | | Menu Level >> |
| ↑↓→← Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit F1:General Help F5:Previous Values F6:Optimized Defaults F7:Standard Defaults | | |

3-9 Miscellaneous Control

This section is for setting CPU Frequency/Voltage Control.

Phoenix - AwardBIOS CMOS Setup Utility
Miscellaneous Control

| | |
|--|---------------------------------|
| Auto Detect PCI Clock Enabled Spread Spectrum Disabled Flash Port Write Protect Enabled > IRQ Resources Press Enter PCI/VGA Palette Snoop Disabled *** PCIExpress Relative Items *** Maximum Payload Size 4096 | Item Help <hr/> Menu Level > |
| ↑↓→← Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit F1:General Help F5:Previous Values F6:Optimized Defaults F7:Standard Defaults | |

Auto Detect PCI Clock

This item allows you to enable/disable auto detect PCI Clock.

Spread Spectrum

This item allows you to set the CPU Host/PCI clock and Spread Spectrum.

The settings are: Enabled, Disabled.

IRQ Resources

When resources are controlled manually, assign each system interrupt a type, depending on the type of device using the interrupt.

Please refer to section 3-9-1

3-9-1 IRQ Resources

Phoenix - AwardBIOS CMOS Setup Utility
IRQ Resources

| | |
|--|----------------------------------|
| IRQ-3 assigned to PCI Device IRQ-4 assigned to PCI Device IRQ-5 assigned to PCI Device IRQ-7 assigned to PCI Device IRQ-9 assigned to PCI Device IRQ-10 assigned to PCI Device IRQ-11 assigned to PCI Device IRQ-12 assigned to PCI Device IRQ-14 assigned to PCI Device IRQ-15 assigned to PCI Device | Item Help <hr/> Menu Level >> |
| ↑↓→← Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit F1:General Help F5:Previous Values F6:Optimized Defaults F7:Standard Defaults | |

3-10 PC Health Status

This section shows the Status of you CPU, Fan, Warning for overall system status. This is only available if there is Hardware Monitor onboard.

Phoenix - AwardBIOS CMOS Setup Utility

PC Health Status

| | | |
|---|-------------|--------------|
| Shutdown Temperature | Disabled | Item Help |
| Show PCHHealth in Post | Enabled | |
| > Smart FAN Configurations | Press Enter | Menu Level > |
| Vcore | 1.52V | |
| Vccl1.5V | | |
| +5 | 4.96V | |
| +12 | 12.36V | |
| 5VSB | | |
| VDIMM | | |
| 3VSB | | |
| Vbat | | |
| CPU Temperature | 39°C/102°F | |
| System Temperature | 23°C/73°F | |
| CPUFAN | 0 RPM | |
| SFAN 1 | 0 RPM | |
| SFAN 2 | 0 RPM | |
| ↑↓→← Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit F1:General Help F5:Previous Values F6:Optimized Defaults F7:Standard Defaults | | |

Shutdown Temperature

This item can let users setting the Shutdown temperature, when CPU temperature over this setting the system will auto shutdown to protect CPU.

Show PCHHealth in Post

During Enabled, it displays information list below. The choice is either Enabled or Disabled.

Smart FAN Configurations

Please refer to section 3-10-1

Current CPU Temperature/Current System Temp/Current FAN1, FAN2 Speed/Vcore/Vdd/ 3.3V/+5V/+12V/-12V/VBAT(V)/5VSB(V)

This will show the CPU/FAN/System voltage chart and FAN Speed.

3-10-1 Smart FAN Configurations

Phoenix - AwardBIOS CMOS Setup Utility

Smart FAN Configurations

| | | |
|---|---------|--------------|
| CPUFAN Smart Mode | Enabled | Item Help |
| CPUFAN Temp1 Value | 30 | |
| CPUFAN Speed above Temp1 | 60% | Menu Level > |
| CPUFAN Temp2 Value | 40 | |
| CPUFAN Speed above Temp2 | 80% | |
| CPUFAN Temp3 Value | 50 | |
| CPUFAN Speed above Temp3 | 100% | |
| ↑↓→← Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit F1:General Help F5:Previous Values F6:Optimized Defaults F7:Standard Defaults | | |

CPU/SFAN1 Smart FAN Full-Speed Temp

This item allows you setting the FAN works in full speed when the temperature over the value which out set. If the temperature below the value but over the Idle Temperature, the FAN will works over 60% of full speed, and the higher temperature will gain higher FAN speed, after over the temperature which this item setting, the FAN works in full speed.

CPU/SFAN1 Smart FAN Idle Temp

This item allows you setting the FAN works in 60% of full speed, when the temperature lower than the temperature which you setting.

3-11 Bi-Turbo Configurations

Phoenix - AwardBIOS CMOS Setup Utility
Bi-Turbo Configurations

| | |
|---|-------------------------------|
| Bi-Turbo Technology Mode Enabled Bi-Turbo Activated Threshold 60% Bi-Turbo Activated Time Immediately Bi-Turbo CPU Clock Setting 200MHz | Item Help Menu Level > |
| ↑↓←→ Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit F1:General Help F5:Previous Values F6:Optimized Defaults F7:Standard Defaults | |

***** When the CPU Host clock is over the CPU default value in Power User OverClock Setting, BIOS will auto disabled Bi-Turbo function.

Bi-Turbo Activated Threshold

This item allows you select to activate the Bi-Turbo function at 60%, 80%, or 100% CPU usage. *Suggest setting 60% to assure the optimized system performance and reliability.*

Bi-Turbo Activated Time

This item allows you to select when to activate the Bi-Turbo function after the BIOS detects the preset percentage of CPU usage. The settings are: Immediately, 0.50s Later, 1.00s Later, 2.00s Later, 4.00s Later, or 8.00s Later

Bi-Turbo CPU Clock Setting

This item allows you to set the CPU Clock which you need to operate after Bi-Turbo is activated. The settings are: 202MHz, 206MHz, 210MHz, 215MHz, 220MHz, 226MHz, 230MHz, 240MHz, 250MHz.

3-12 Power User Overclock Settings

Phoenix - AwardBIOS CMOS Setup Utility

Power User Overclock Settings

| | |
|---|-------------------------------|
| <pre> CPU Clock Ratio 8 *** Current Host/PCI Clock is 133/33 MHz *** Host/PCI Clock at Next Boot 133 *** Current DRAM Clock is 166MHz *** DRAM Clock at Next Boot By SPD(DDR) CPU Vcore Select Default VDD1.5V Settings 1.55V VRAM Settings 1.80V VRAM Under Voltage Protect Disabled VDD1.5V Under Voltage Protect Disabled </pre> | Item Help Menu Level > |
| ↑↓→← Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit F1:General Help F5:Previous Values F6:Optimized Defaults F7:Standard Defaults | |

Host Clock at Next Boot

This item allows you to select CPU frequency step by step increasing.
 The choice are: 533MHz CPU---133MHz~350MHz, 800MHz CPU---200MHz~350MHz

DRAM Clock at Next Boot

This item allows you select the DRAM Clock for DDR2 533/DDR2 400. The setting are:
 By SPD, DDR2 533, DDR2 400

CPU Vcore Select

This item allows you select CPU Vcore Voltage by increase 0.0125V step by step from 0.8375V to 1.6V or the Default setting is Default (CPU manufacturer Default setting).

VDD1.5V Settings

This item allows you to select 1.5V of the AGP VGA card. The choice are: Default, 1.5V, 1.6V, 1.7V, 1.8V.

VRAM Settings

This item allows you to select DRAM Voltage. The choice are: 2.55V/2.6V/2.7V/2.8V.

3-13 Password Settings

Phoenix - AwardBIOS CMOS Setup Utility

Password Settings

| | |
|---|-------------------------------|
| <pre> Set Supervisor Password Press Enter Set User Password Press Enter </pre> | Item Help Menu Level > |
| ↑↓→← Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit F1:General Help F5:Previous Values F6:Optimized Defaults F7:Standard Defaults | |

You can set either supervisor or user password, or both of them. The differences are:

Supervisor password: Can enter and change the options of the setup menus.

User password: Can only enter but do not have the right to change the options of the setup menus. When you select this function, the following message will appear at the center of the screen to assist you in creating a password.

ENTER PASSWORD:

Type the password, up to eight characters in length, and press <Enter>. The password typed now will clear any previously entered password from CMOS memory. You will be asked to confirm the password. Type the password again and press <Enter>. You may also press <Esc> to abort the selection and not enter a password.

To disable a password, just press <Enter> when you are prompted to enter the password. A message will confirm that the password will be disabled. Once the password is disabled, the system will boot and you can enter Setup freely.

PASSWORD DISABLED.

When a password has been enabled, you will be prompted to enter it every time you try to enter Setup. This prevents an unauthorized person from changing any part of your system configuration.

Additionally, when a password is enabled, you can also require the BIOS to request a password every time your system is rebooted. This would prevent unauthorized use of your computer.

You determine when the password is required within the BIOS Features Setup Menu and its Security option. If the Security option is set to “System”, the password will be required both at boot and at entry to Setup. If set to “Setup”, prompting only occurs when trying to enter Setup.

3-14 Load Standard/Optimized Defaults

Load Standard Defaults

When you press <Enter> on this item, you get confirmation dialog box with a message similar to:

Load Standard Defaults (Y/N)? N

Pressing <Y> loads the BIOS default values for the most stable, minimal-performance system operations.

Load Optimized Defaults

When you press <Enter> on this item, you get a confirmation dialog box with a message similar to:

Load Optimized Defaults (Y/N)? N

Pressing <Y> loads the default values that are factory settings for optimal performance system operations.

Chapter 4

DRIVER & FREE PROGRAM INSTALLATION

Check your package and there is A MAGIC INSTALL CD included. This CD consists of all DRIVERS you need and some free application programs and utility programs. In addition, this CD also include an auto detect software which can tell you which hardware is installed, and which DRIVERS needed so that your system can function properly. We call this auto detect software MAGIC INSTALL.

MAGIC INSTALL Supports WINDOWS 2000/XP

Insert CD into your CD-ROM drive and the MAGIC INSTALL Menu should appear as below. If the menu does not appear, double-click MY COMPUTER / double-click CD-ROM drive or click START / click RUN / type X:\SETUP.EXE (assuming X is your CD-ROM drive).

The intel 915 serial chipset driver only support Windows 2000 and Windows XP OS



From MAGIC INSTALL MENU you may make 10 selections:

- | | |
|--------------|--|
| 1. INF | install Intel 915 chipset system driver |
| 2. VGA | install Intel 915G VGA driver (Only for 916GCP) |
| 3. SOUND | install ALC880 AC97 Codec Audio Driver |
| 4. LAN | install Intel LAN Controller driver |
| 5. USB2.0 | install USB 2.0 driver |
| 6. DIRECTX9 | install Microsoft DirectX 9 driver |
| 7. PC-CILLIN | install PC-CILLIN2004 anti-virus program |
| 8. PC-HEALTH | install Winbond Hardware Doctor Utility |
| 9. BROWSE CD | to browse the contents of the CD |
| 10. EXIT | to exit from MAGIC INSTALL menu |

4-1 INF install Intel 915 chipset system driver



1. Click INF in the MAGIC INSTALL MENU



2. Click NEXT when Chipset Software Install Utility appears



3. This license agreement appear, click Yes, the readme information appear, click Next




4. Select if you want computer re-started click Finish


4-2 VGA install Intel 915G VGA Driver (For 916GCP)




1. Click VGA when MAGIC INSTALL MENU appears

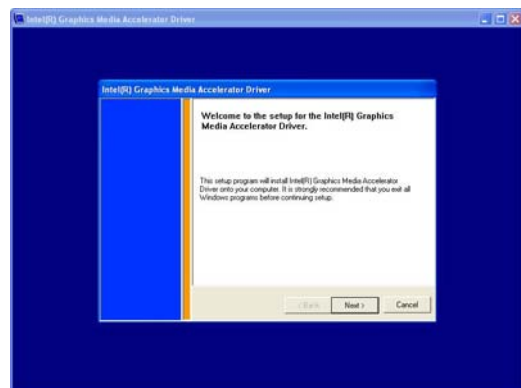

2. Click NEXT When Intel (R) Graphics Media Accelerator Driver Software Setup appear

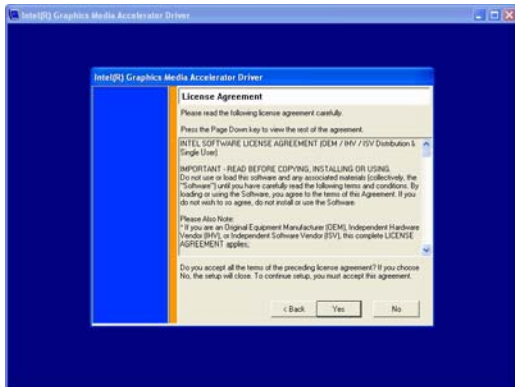

3. Click YES, This is Announce CopyRight

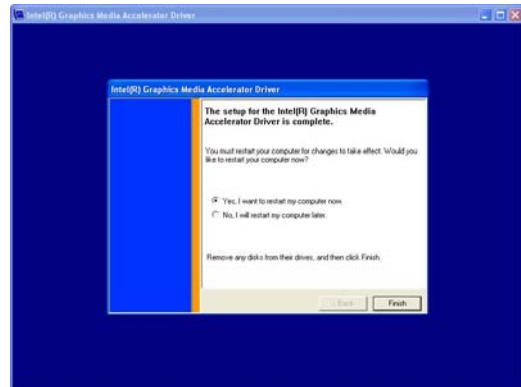

4. If You Want Re-start Computer , Click FINISH

4-3 SOUND install ALC880 AC97 Codec Audio Driver



1. Click SOUND when MAGIC INSTALL MENU appears



2. Click NEXT When Realtek High Definition Audio driver windows appear




3. Click FINISH and restart your computer



4. Manual Sound Effect Setting



5. Speaker configuration setting

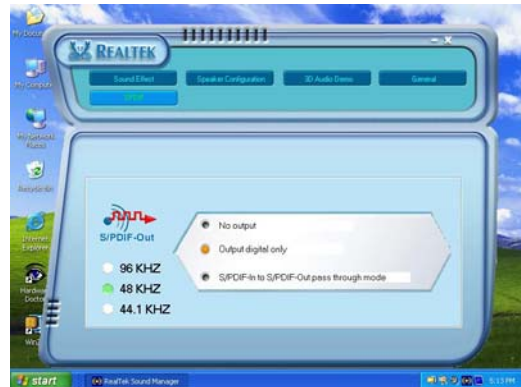


6. SPDIF out setting

4-4 LAN Install Realtek 10/100 Ethernet Driver


WINDOWS 2000/XP Setup



1. Click LAN when Magic Install Menu appear

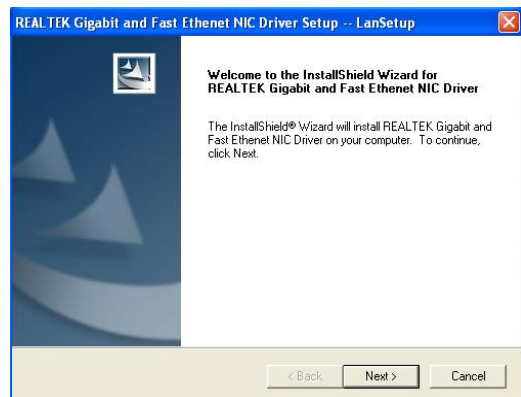


2. Click NEXT, install REALTEK Gigabit and Fast Ethernet NIC Driver

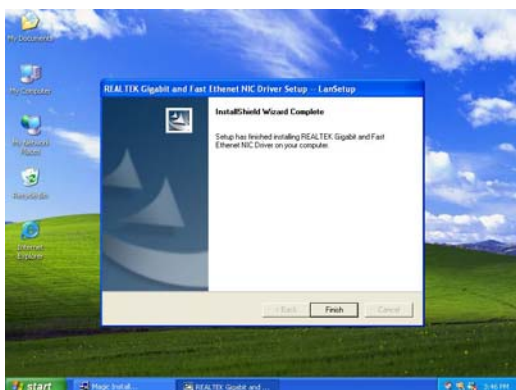


3. After driver installation completed, Click Finish


4-5 PC-HEALTH install Winbond Hardware Doctor Utility

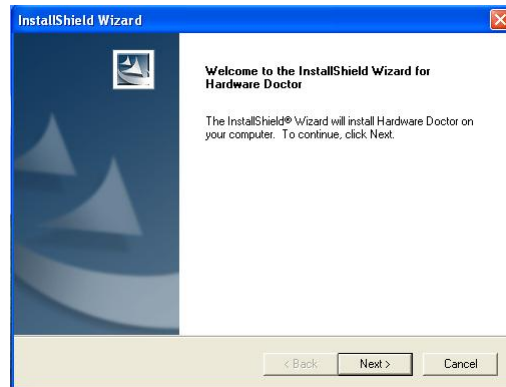

1. Click PC-HEALTH when MAGIC INSTALL MENU appears
2. Click Next when Install shield wizard Window appears, Choose destination location and click Next, select program folder and click next

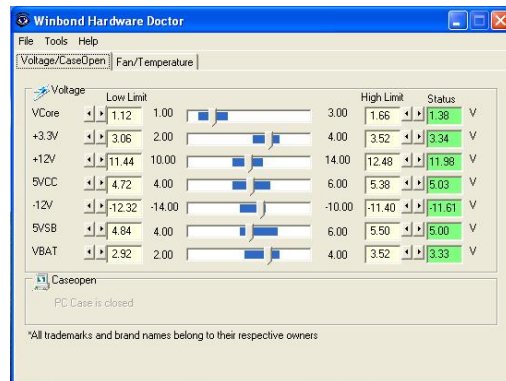

3. Click FINISH and restart your computer
4. After executing Winbond Hardware Doctor it supports system voltage, Fan speed and CPU/SYSTEM Temperature. Because this is a On-time Monitoring program therefore the value will change after it detected, if the value is over default setting the system will have warning picture and beeps. This is a System Voltage status

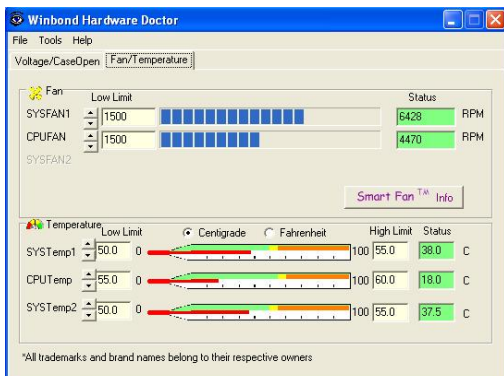

5. This is a CPU/System Fan Speed and Temperature status information


4-6 PC-CILLIN Install PC-CILLIN 2004 Anti-virus program




1. Click PC-CILLIN when MAGIC INSTALL MENU appear




2. Click NEXT when the "Trend Micro internet security" installshield wizard windows appear

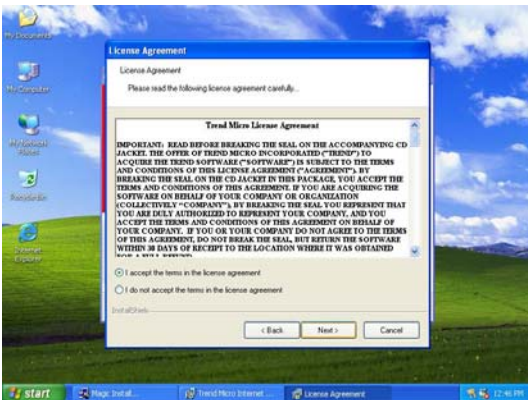

3. This is license agreement, select "I Accept the terms" and Click NEXT

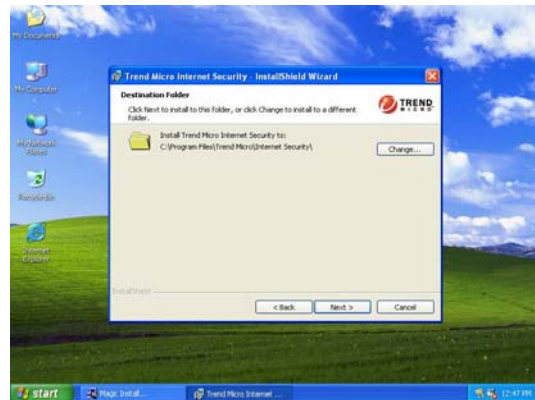

4. Click NEXT and Enter your Customer Information, Click NEXT or choose Change to change the path for the file to be stored

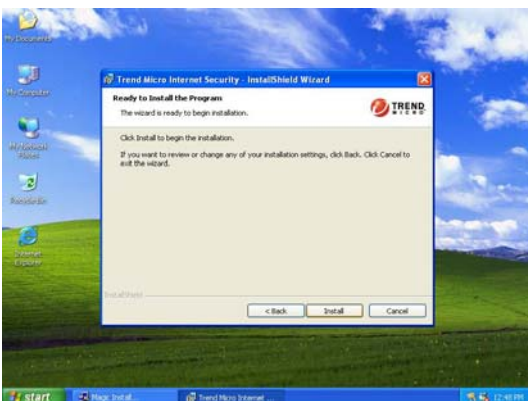

5. Click INSTALL, Start to install the software



6. Setup Complete and click FINISH



7. After PC-CILLIN 2004 complete, Please register your information and we recommend select update item to download newest engine code and virus code

Note : Please install **ACROBAT READER**, Before you read **PC-CILLIN 2004 User Manual**, the path at **X:\acrobat\adberdr6_enu_full.exe**

4-7 HOW TO UPDATE BIOS

Before update BIOS users have to “Disable”, “Flash Part Write Protect” item which in “Miscellaneous Control” of BIOS SETUP. Otherwise the system the will not allow you to upgrade BIOS by Award Flash Utility.

- STEP 1.** Prepare a boot disc. (you may make one by click START click RUN type SYS A: click OK)
- STEP 2.** Copy utility program to your boot disc. You may copy from DRIVER CD X:\FLASH\AWDFLASH.EXE or download from our web site.
- STEP 3.** Copy latest BIOS for 916GCP/916PCP from our web site to your boot disc.
- STEP 4.** Insert your boot disc into A:,
start the computer, type “Awdflash A:\916GCPAxxx.BIN /SN/PY/CC/R”
916GCPAxxx.BIN is the file name of latest BIOS it can be 916GCPA03.BIN or 916GCPB02.BIN
SN means don't save existing BIOS data
PY means renew existing BIOS data
CC means clear existing CMOS data
R means restart computer
- STEP 5.** Push ENTER and the BIOS will be updated, computer will be restarted automatically.