GA-81865G775-G / GA-81865G775-G-RH

Intel® Pentium® 4 LGA775 Processor Motherboard

User's Manual

Rev. 2002 12ME-8I865GTG-2002R



* The WEEE marking on the product indicates this product must not be disposed of with user's other household waste and must be handed over to a designated collection point for the recycling of waste electrical and electronic equipment!! * The WEEE marking applies only in European Union's member states.

	Name :Timmy Huang	Date : Apr. 18, 2006	p)	(Stamp)
Date: Apr. 18, 2006	Signature: Jimmy Huang	Manufacturer/Importer		
Signature: <u>Eric Lu</u>	General and Safety requirements for uninterruptible power systems (UPS)	nilar 🗆 EN 50091-1	Safety of household and similar electrical appliances	🗆 EN 60335
Representative Person's Name: ERIC LU	Safety for information technology equipment including electrical business equipment	ratus for ral use	Safety requirements for mains operated electronic and related apparatus for household and similar general use	□ EN 60065
including that may cause undesired operation.	ce with LVD 73/23 EEC	es the c y stand	The manufacturer a with the actual requ	
subject to the following two conditions: (1) This device may not	(EC conformity marking)			⊠ CE marking
This device complete with part 15 of the FCC Rules. Operation is		;; Equipment tion from s	DIN VDE 0855 Cabled distribution systems; Equipment part 10 for receiving and/or distribution from part 12 sound and television signals	DIN VDE 089 part 10 part 12
(a),Class B Digital Device		surement leristics of prment	Limits and methods of measurement of radio disturbance characteristics of information technology equipment	⊠ EN 55022
FCC Part 15, Subpart B, Section 15.107(a) and Section 15.109	EMC requirements for uninterruptible power systems (UPS)	ence of EN 50091- 2 sociated	Immunity from radio interference of broadcast receivers and associated equipment	□ EN 55020
Model Number: GA-81865G775-G Conforms to the following specifications:	Immunity requirements for household appliances tools and similar apparatus	urrement I EN 55014-2 teristics of naries	Limits and methods of measurement of radio disturbance characteristics of fluorescent lamps and luminaries	□ EN 55015
Product Name: Motherboard	Generic immunity standard Part 2: Industrial environment	ectrical EN 50082-2	portable tools and similar electrical apparatus	
hereby declares that the product	Generic immunity standard Part 1: Residual, commercial and light industry	surement EN 50082-1 teristics of teristics	Limits and methods of measurement of radio disturbance characteristics of household electrical appliances.	EN 55014-1
City of Industry, CA 91748 Phone/Fax No: (818) 854-9338/ (818) 854-9339	Information Technology equipment-Immunity characteristics-Limits and methods of measurement	surement I I EN 55024 teristics of sociated	Limits and methods of measurement of radio disturbance characteristics of broadcast receivers and associated equipment	□ EN 55013
Address: 17358 Railroad Street	Disturbances in supply systems caused by household appliances and similar electrical equipment "Voltage fluctuations"	dical (ISM) 🛛 EN 61000-3-3	industrial, scientific and medi high frequency equipment	
Responsible Party Name: G.B.T. INC. (U.S.A.)	Disturbances in supply systems caused		Limits and methods of measurement of radio disturbance characteristics of	EN 55011
ل	nnhy is declared) rective	GA-N8650775-G is in contomity with (reference to the specification under which conformity is declared) in accordance with 89/336 EEC-EMC Directive	(reference to in a	
	to which it refers)	(description of the apparatus, system, installation to which it refers) Motherboard	(description c	
Per FCC Part 2 Section 2.1077(a)	Germany	G.B.T. Technology Trading GMbH Ausschlager Weg 41, 1F 20537 Hamburg, Germany declare that the product	Aussc	
DECLARATION OF CONFORMITY	nity	Declaration of Conformity We. Manufacturer/Importer (full address)	D	

Image:		
Image:	Manufacturer/Impor	
Image: Instance Image: Image	Safety of household and similar EN 5009 electrical appliances	EN 60335 Saf elev
Implicitions load and antifer inquality inquirements for inquality inquirements for uninterruptable power systems (LPS) Con Image: State of the system state of the sy	Safety requirements for mains operated electronic and related apparatus for household and similar general use	EN 60065 Saf elev hou
In M S011-2 Impliances to could not household population In M S0091-2 EMC requirements for uninterruptible Dower systems (UPS) In Contemportance (UPS) In Contemportance (UPS) In Contemportance (UPS)	The manufacturer also declares the conformity c with the actual required safety standards in acco	
Immunity requirements for household applants Immunity requirements for uninterruptible power systems (UPS) Dower systems (UPS) Supp) (🛛 CE marking
EN 55014.2 Immunity requirements for household appliances tools and similar apparatus EN 55091-2 EMC requirements for uninterruptible power systems (UPS)	DIN VDE 0855 Cabled distribution systems; Equipment part 10 for receiving and/or distribution from part 12 sound and television signals	DIN VDE 0855 Cat part 10 for part 12 sou
EN 55014.2 Immunity requirements for thousehold appliances tools and similar apparatus appliances tools and similar apparatus ENC requirements for uninterruptible power systems (UPS) CON	Limits and methods of measurement of radio disturbance characteristics of information technology equipment	EN 55022 Lim info
EN 55014.2 Immunity requirements for household appliances tools and similar apparatus Conforms to the fi	Immunity from radio interference of EN 5009- broadcast receivers and associated equipment	EN 55020 Imm bro equ
	Limits and methods of measurement EN 5501 of radio disturbance characteristics of fluorescent lamps and luminaries	EN 55015 Lim fluo
relearing DEN 500822 Genetic immunity standard Par 2 Product Name: Motherboard	cal	abde
easurement DEN 5082-1 Generic immunity standard Part 1: accreates of Residual, commercial and light industry hereby declares that the product	Limits and methods of measurement of radio disturbance characteristics of household electrical anniance	EN 55014-1 Lim of r
easurement BEN 5524 Information Technology City of Industry, CA 91748 equipment manufactures in an interfoots of characteristics. This and methods of measurement measurement measurement Phone/Fax No: (818) 854-9338/ (818) 854-9339	Limits and methods of measurement I EN 5502 of radio disturbance characteristics of broadcast receivers and associated equipment	EN 55013 Lim of r of r equ
I EN 6100-3-3 Distutionces in supply systems caused by hosteroid applances and amilar electrical equipment "Voltage fluctuations"	industrial, scientific and medical (ISM) I EN 6100 high frequency equipment	higi
Responsible Party Name: G.B.T. INC. (U.S.A.)		EN 55011 Lim of r
(efference to the specification underwheth conformity is declared) in accordance with 89338 EEC-ENC Directive	GA-81865G775-G-R is in conformity with (reference to the specification under which in accordance with 89/336 EEC-E	
(description of the apparatus, system in Istaliation to which it refers) Motherboard	(description of the apparatus, system, install	
GBL Technology Trang GMBH Ausschlager Weg 41, F2 5053 Hamburg, Germany decision that the product	G.B.T. Technology Trading Ausschlager Weg 41, 1F 20537 Ham declare that the produc	
Declaration of Conformity DECLARATION OF CONFORMITY	Declaration of Cont We, Manufacturer/Impor (full address)	

Copyright

© 2006 GIGA-BYTE TECHNOLOGY CO., LTD. All rights reserved. The trademarks mentioned in the manual are legally registered to their respective companies.

Notice

The written content provided with this product is the property of Gigabyte.

No part of this manual may be reproduced, copied, translated, or transmitted in any form or by any means without Gigabyte's prior written permission. Specifications and features are subject to change without prior notice.

Product Manual Classification

In order to assist in the use of this product, Gigabyte has categorized the user manual in the following:

- For quick installation, please refer to the "Hardware Installation Guide" included with the product.
- For detailed product information and specifications, please carefully read the "User's Manual."
- For detailed information related to Gigabyte's unique features, please go to the "Technology Guide" section on Gigabyte's website to read or download the information you need.

For more product details, please visit Gigabyte's website at www.gigabyte.com.tw

Table of Contents

Item Check	dist		7
Optional A	ccesso	ories	7
GA-818650	G775-	G(-RH) Motherboard Layout	. 8
DIOCK Diag	jiani		
Chapter 1	Hardv	ware Installation	. 11
	1-1	Considerations Prior to Installation	11
	1-2	Feature Summary	. 12
	1-3	Installation of the CPU and Heatsink	. 14
	1-3	3-1 Installation of the CPU	. 14
	1-3	3-2 Installation of the Heatsink	. 15
	1-4	Installation of Memory	16
	1-5	Installation of Expansion Cards	. 17
	1-6	I/O Back Panel Introduction	. 18
	1-7	Connectors Introduction	19
Chapter 2	BIOS	S Setup	31
	The N	Main Menu (For example: BIOS Ver. : D11)	32
	2-1	Standard CMOS Features	
	2-2	Advanced BIOS Features	
	2-3	Integrated Peripherals	. 38
	2-4	Power Management Setup	
	2-5	PnP/PCI Configurations	
	2-6	PC Health Status	
	2-7	MB Intelligent Tweaker(M.I.T.)	
	2-8	Load Fail-Safe Defaults	
	2-9	Load Optimized Defaults	
	2-10	Set Supervisor/User Password	
	2-11	Save & Exit Setup	
	2-12	Exit Without Saving	

Chapter 3	Driver	s Installation	53
	3-1	Install Chipset Drivers	. 53
	3-2	Software Applications	. 54
	3-3	Driver CD Information	. 54
	3-4	Hardware Information	. 55
	3-5	Contact Us	. 55
Chapter 4	Appe	ndix	57
Chapter 4	Appe 4-1	Unique Software Utilities	. 57
Chapter 4	4-1		. 57
Chapter 4	4-1 4-1	Unique Software Utilities -1 EasyTune 5 Introduction	. 57 . 57 . 58
Chapter 4	4-1 4-1 4-1	Unique Software Utilities -1 EasyTune 5 Introduction	. 57 . 57 . 58
Chapter 4	4-1 4-1 4-1 4-1	Unique Software Utilities -1 EasyTune 5 Introduction	. 57 . 57 . 58 . 60

Item Checklist


- ☑ IDE Cable x 1
- ✓ FDD Cable x 1
- $\ensuremath{\boxtimes}$ Serial ATA Cable x 1
- ☑ I/O Shield

* The items listed above are for reference only, and are subject to change without notice.


Optional Accessories

- 2 Ports USB2.0 Cable (Part Number: 12CR1-1UB030-51/-51R)
- COM Port Cable (Part Number: 12CF1-1CM001-31/-31R)

GA-8I865G775-G(-RH) Motherboard Layout

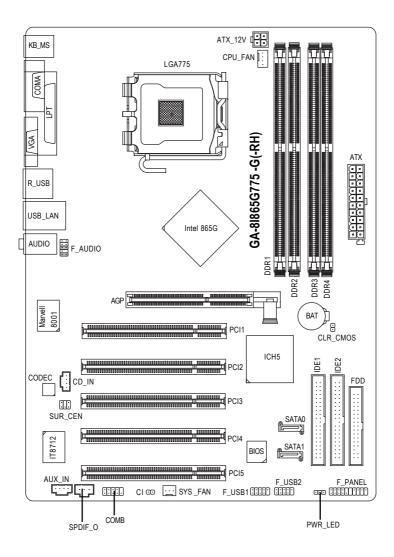

Block Diagram

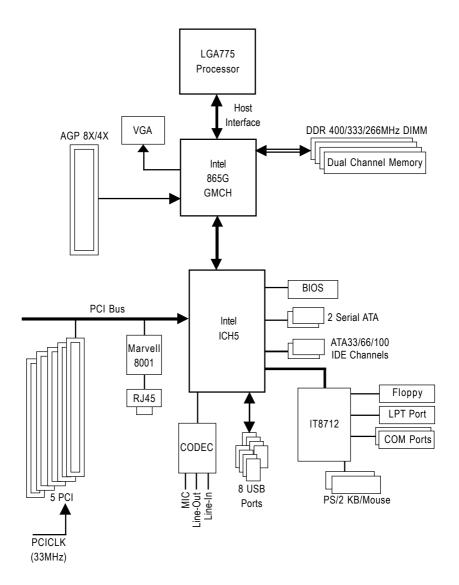



Chapter 1 Hardware Installation

1-1 Considerations Prior to Installation

Preparing Your Computer

The motherboard contains numerous delicate electronic circuits and components which can become damaged as a result of electrostatic discharge (ESD). Thus, prior to installation, please follow the instructions below:

- 1. Please turn off the computer and unplug its power cord.
- 2. When handling the motherboard, avoid touching any metal leads or connectors.
- It is best to wear an electrostatic discharge (ESD) cuff when handling electronic components (CPU, RAM).
- 4. Prior to installing the electronic components, please have these items on top of an antistatic pad or within a electrostatic shielding container.
- 5. Please verify that the power supply is switched off before unplugging the power supply connector from the motherboard.

Installation Notices

- 1. Prior to installation, please do not remove the stickers on the motherboard. These stickers are required for warranty validation.
- 2. Prior to the installation of the motherboard or any hardware, please first carefully read the information in the provided manual.
- 3. Before using the product, please verify that all cables and power connectors are connected.
- 4. To prevent damage to the motherboard, please do not allow screws to come in contact with the motherboard circuit or its components.
- 5. Please make sure there are no leftover screws or metal components placed on the motherboard or within the computer casing.
- 6. Please do not place the computer system on an uneven surface.
- 7. Turning on the computer power during the installation process can lead to damage to system components as well as physical harm to the user.
- 8. If you are uncertain about any installation steps or have a problem related to the use of the product, please consult a certified computer technician.

Instances of Non-Warranty

- 1. Damage due to natural disaster, accident or human cause.
- 2. Damage as a result of violating the conditions recommended in the user manual.
- 3. Damage due to improper installation.
- 4. Damage due to use of uncertified components.
- 5. Damage due to use exceeding the permitted parameters.
- 6. Product determined to be an unofficial Gigabyte product.

1-2 Feature Summary

CPU	Supports LGA775 Intel [®] Processor Pentium [®] 4 ^(Note 1)
	L2 cache varies with CPU
Front Side Bus	Supports 800/533MHz FSB
Chipset	Northbridge:Intel® 865G
	Southbridge: Intel [®] ICH5
LAN	Onboard Marvell 8001 chip(10/100/1000Mbit)
Audio	Onboard ALC653 chip
	Supports 2 / 4 / 6 channel audio
	Supports CD In connection
	Supports AUX In connection
	Supports SPDIF Out connection
Storage	Intel [®] ICH5 Southbrigde
	 1 FDD connector, allowing connection of 2 FDD devices
	- 2 IDE connectors (IDE1/IDE2) with UDMA 33/ATA 66/ATA 100 support,
	allowing connection of 4 IDE devices
	 2 SATA connectors (SATA0/SATA1), allowing connection of 2 SATA
	devices
O.S Support	Microsoft Windows 2000/XP
Memory	4 DDR DIMM memory slots (supports up to 4GB memory) (Note 2)
	 Supports dual channel DDR400/333/266 DIMM
	Supports 2.5V DDR DIMMs
Expanstion Slots	 1 AGP slot 4X/8X (1.5V)
	5 PCI slots
Internal Connectors	 1 20-pin ATX power connector
	 1 4-pin ATX 12V power connector
	 1 floppy connector
	2 IDE connectors
	2 SATA connectors
	1 CPU fan connector
	 1 system fan connector
	1 front panel connector
	1 front audio connector
	1 COMB connector
	1 CD In connector
	1 AUX In connector
	1 Surround Center connector
	1 SPDIF Out connector
	1 power LED connector
	 2 USB 2.0/1.1 connectors for additional 4 ports by cables

Rear Panel I/O	1 PS/2 keyboard port
	1 PS/2 mouse port
	1 parallel port
	 1 serial port (COMA)
	1 VGA port
	 4 USB 2.0/1.1 ports
	◆ 1 RJ-45 port
	 3 audio jacks (Line In / Line Out / MIC In)
I/O Control	• IT8712 chip
Hardware Monitor	System voltage detection
	CPU temperature detection
	CPU / System fan speed detection
	CPU warning temperature
	CPU System fan failure warning
	CPU smart fan control
BIOS	1 4Mbit flash ROM
	Use of licensed AWARD BIOS
Additional Features	Supports @BIOS
	Supports Download Center
	Supports Q-Flash
	 Supports EasyTune (only supports Hardware Monitor function)^(Note 3)
	Supports Xpress Install
	Supports Xpress Recovery2
	Supports Xpress Rescue
Bundle Software	Norton Internet Security (OEM version)
Form Factor	ATX form factor; 30.5cm x 21cm
-	

(Note 1) For further CPU support information, please go to GIGABYTE's website.

- (Note 2) Due to standard PC architecture, a certain amount of memory is reserved for system usage and therefore the actual memory size is less than the stated amount. For example, 4 GB of memory size will instead be shown as 3.xxGB memory during system startup.
- (Note 3) EasyTune functions may vary depending on different motherboards.

1-3 Installation of the CPU and Heatsink



Before installing the CPU, please comply with the following conditions:

- 1. Please make sure that the motherboard supports the CPU.
- Please take note of the one indented corner of the CPU. If you install the CPU in the wrong direction, the CPU will not insert properly. If this occurs, please change the insert direction of the CPU.
- 3. Please add an even layer of heat sink paste between the CPU and heatsink.
- 4. Please make sure the heatsink is installed on the CPU prior to system use, otherwise overheating and permanent damage of the CPU may occur.
- 5. Please set the CPU host frequency in accordance with the processor specifications. It is not recommended that the system bus frequency be set beyond hardware specifications since it does not meet the required standards for the peripherals. If you wish to set the frequency beyond the proper specifications, please do so according to your hardware specifications including the CPU, graphics card, memory, hard drive, etc.



HT functionality requirement content :

Enabling the functionality of Hyper-Threading Technology for your computer system requires all of the following platform components:

- CPU: An Intel® Pentium 4 Processor with HT Technology
- Chipset: An Intel® Chipset that supports HT Technology
- BIOS: A BIOS that supports HT Technology and has it enabled
- OS: An operation system that has optimizations for HT Technology

1-3-1 Installation of the CPU

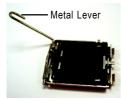


Fig. 1 Gently lift the metal lever located on the CPU socket to the upright position.



Fig. 2 Remove the plastic covering on the CPU socket.




Fig. 3 Notice the small gold colored triangle located on the edge of the CPU socket. Align the indented corner of the CPU with

the triangle and gently insert the CPU into position. (Grasping the CPU firmly between your thumb and forefinger, carefully place it into the socket in a straight and downwards motion. Avoid twisting or bending motions that might cause damage to the CPU during installation.)



Fig. 4 Once the CPU is properly inserted, please replace the plastic covering and push the metal lever back into its original position.

1-3-2 Installation of the Heatsink



Fig.1

Please apply an even layer of heatsink paste on the surface of the installed CPU.



Fig. 3

Place the heatsink atop the CPU and make sure the push pins aim to the pin hole on the motherboard.Pressing down the push pins diagonally.

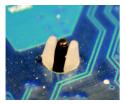


Fig. 5

Please check the back of motherboard after installing. If the push pin is inserted as the picture, the installation is complete.

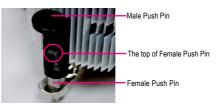


Fig. 2

(Turning the push pin along the direction of arrow is to remove the heatsink, on the contrary, is to install.)

Please note the direction of arrow sign on the male push pin doesn't face inwards before installation. (This instruction is only for Intel boxed fan)



Fig. 4

Please make sure the Male and Female push pin are joined closely. (for detailed installation instructions, please refer to the heatsink installation section of the user manual)



Fig. 6

Finally, please attach the power connector of the heatsink to the CPU fan header located on the motherboard.



The heatsink may adhere to the CPU as a result of hardening of the heatsink paste. To prevent such an occurrence, it is suggested that either thermal tape rather than heat sink paste be used for heat dissipation or using extreme care when removing the heatsink.

Installation of Memory 1-4



Before installing the memory modules, please comply with the following conditions:

- Please make sure that the memory used is supported by the motherboard. It is recommended that 1. memory of similar capacity, specifications and brand be used.
 - 2. Before installing or removing memory modules, please make sure that the computer power is switched off to prevent hardware damage.
 - 3. Memory modules have a foolproof insertion design. A memory module can be installed in only one direction. If you are unable to insert the module, please switch the direction

The motherboard supports DDR memory modules, whereby BIOS will automatically detect memory capacity and specifications. Memory modules are designed so that they can be inserted only in one direction. The memory capacity used can differ with each slot.

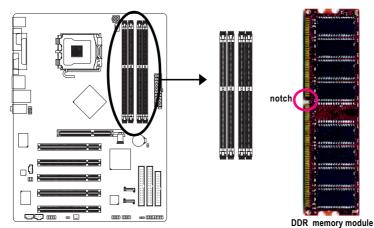


Fig.1

The DIMM socket has a notch, so the DIMM memory module can only fit in one direction. Insert the DIMM memory module vertically into the DIMM socket. Then push it down.



Fig.2

Close the plastic clip at both edges of the DIMM sockets to lock the DIMM module.

Reverse the installation steps when you wish to remove the DIMM module.



1-5 Installation of Expansion Cards

You can install your expansion card by following the steps outlined below:

- 1. Read the related expansion card's instruction document before installing the expansion card into the computer.
- 2. Remove your computer's chassis cover, screws and slot bracket from the computer.
- 3. Press the expansion card firmly into expansion slot in motherboard.
- 4. Be sure the metal contacts on the card are indeed seated in the slot.
- 5. Replace the screw to secure the slot bracket of the expansion card.
- 6. Replace your computer's chassis cover.
- 7. Power on the computer, if necessary, setup BIOS utility of expansion card from BIOS.
- 8. Install related driver from the operating system.


Installing a AGP expansion card:





Please carefully pull out the small whitedrawable bar at the end of the AGP slot when you try to install/uninstall the VGA card. Please align the VGA card to the onboard AGP slot and press firmly down on the slot. Make sure your VGA card is locked by the small white-drawable bar.

1-6 I/O Back Panel Introduction

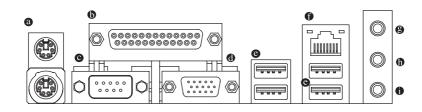

PS/2 Keyboard and PS/2 Mouse Connector

To install a PS/2 port keyboard and mouse, plug the mouse to the upper port (green) and the keyboard to the lower port (purple).

Parallel Port

The parallel port allows connection of a printer, scanner and other peripheral devices.

• Serial Port (COMA)

Devices like mouses, modems, and etc. can be connected to Serial port.

Ø VGA Port

Monitor can be connected to VGA port.

OUSB port

Before you connect your device(s) into USB connector(s), please make sure your device(s) such as USB keyboard, mouse, scanner, zip, speaker...etc. have a standard USB interface. Also make sure your OS supports USB controller. If your OS does not support USB controller, please contact OS vendor for possible patch or driver upgrade. For more information please contact your OS or device(s) vendors.

LAN Port

The LAN port provides Internet connection.

Line In

Devices like CD-ROM, walkman etc. can be connected to Line In jack.

Line Out

Connect the stereo speakers, earphone or front surround speakers to this connector.


MIC In

Microphone can be connected to MIC In jack.



You can use audio software to configure 2-/4-/6- channel audio functioning.

1-7 Connectors Introduction

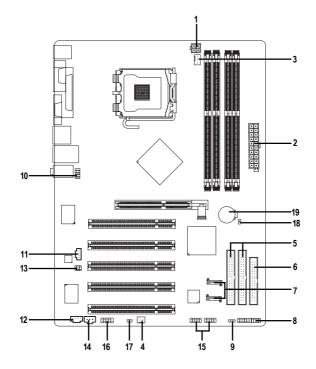

1)	ATX_12V	11)	CD_IN
2)	ATX (Power Connector)	12)	AUX_IN
3)	CPU_FAN	13)	SUR_CEN
4)	SYS_FAN	14)	SPDIF_O
5)	IDE1 / IDE2	15)	F_USB1 / F_USB2
6)	FDD	16)	СОМВ
7)	SATA0 / SATA1	17)	CI
8)	F_PANEL	18)	CLR_CMOS
9)	PWR_LED	19)	BAT
10)	F_AUDIO		


1/2) ATX_12V/ATX (Power Connector)


With the use of the power connector, the power supply can supply enough stable power to all the components on the motherboard. Before connecting the power connector, please make sure that all components and devices are properly installed. Align the power connector with its proper location on the motherboard and connect tightly.

The ATX_12V power connector mainly supplies power to the CPU. If the ATX_12V power connector is not connected, the system will not start. Caution!

Please use a power supply that is able to handle the system voltage requirements. It is recommended that a power supply that can withstand high power consumption be used (300W or greater). If a power supply is used that does not provide the required power, the result can lead to an unstable system or a system that is unable to start.

If you use a 24-pin ATX power supply, please remove the small cover on the power connector on the motherboard before plugging in the power cord ; Otherwise, please do not remove it.

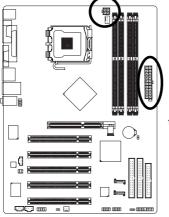



Pin No.	Definition
1	GND
2	GND
3	+12V
4	+12V


Definition
3.3V
3.3V
GND
+5V
GND
+5V
GND
Power Good
5V SB (stand by +5V)
+12V
3.3V
-12V
GND
PS_ON(soft on/off)
GND
GND
GND
-5V
+5V
+5V

3/4) CPU_FAN / SYS_FAN (Cooler Fan Power Connector)

The cooler fan power connector supplies a +12V power voltage via a 3-pin/4-pin (only for CPU_FAN) power connector and possesses a fool-proof connection design.


Most coolers are designed with color-coded power connector wires. A red power connector wire indicates a positive connection and requires a +12V power voltage. The black connector wire is the ground wire (GND).

Remember to connect the CPU/system fan cable to the CPU_FAN/SYS_FAN connector to prevent CPU damage or system hanging caused by overheating.

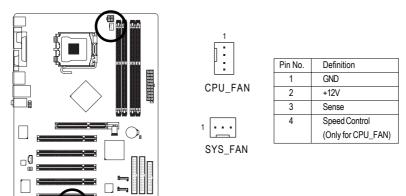


5) IDE1/IDE2 (IDE Connector)

An IDE device connects to the computer via an IDE connector. One IDE connector can connect to one IDE cable, and the single IDE cable can then connect to two IDE devices (hard drive or optical drive). If you wish to connect two IDE devices, please set the jumper on one IDE device as Master and the other as Slave (for information on settings, please refer to the instructions located on the IDE device). Before attaching the IDE cable, please take note of the foolproof groove in the IDE connector.

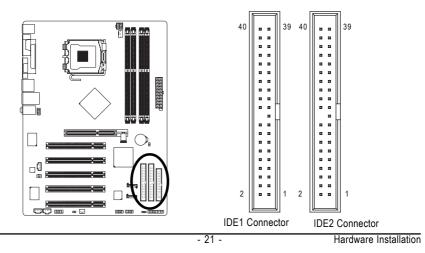


6) FDD (FDD Connector)

The FDD connector is used to connect the FDD cable while the other end of the cable connects to the FDD drive. The types of FDD drives supported are: 360KB, 720KB, 1.2MB, 1.44MB and 2.88MB. Before attaching the FDD cable, please take note of the foolproof groove in the FDD connector.

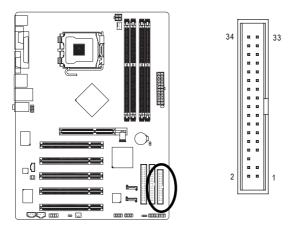

7) SATA0/SATA1 (Serial ATA Connector,)

Serial ATA can provide up to 150MB/s transfer rate. Please refer to the BIOS setting for the Serial ATA and install the proper driver in order to work properly.

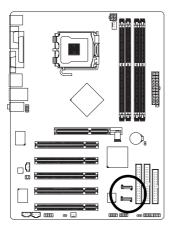



7]۱
1	<u>الــــــا</u> 1

Pin No.	Definition
1	GND
2	TXP
3	TXN
4	GND
5	RXN
6	RXP
7	GND

8) F_PANEL (Front Panel Connector)

Please connect the power LED, PC speaker, reset switch and power switch etc. of your chassis front panel to the F_PANEL connector according to the pin assignments below.

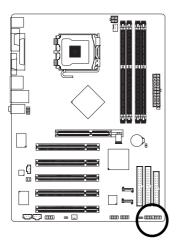


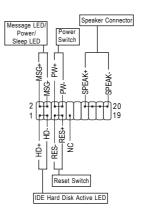

HD (IDE Hard Disk Active LED) (Blue)	Pin 1: LED anode(+)
	Pin 2: LED cathode(-)
SPEAK (Speaker Connector) (Amber)	Pin 1: Power
	Pin 2- Pin 3: NC
	Pin 4: Data(-)
RES (Reset Switch) (Green)	Open: Normal
	Close: Reset Hardware System
PW (Power Switch) (Red)	Open: Normal
	Close: Power On/Off
MSG(Message LED/Power/Sleep LED)	Pin 1: LED anode(+)
(Yellow)	Pin 2: LED cathode(-)
NC (Purple)	NC


9) PWR_LED

The PWR_LED connector is connected with the system power indicator to indicate whether the system is on/off. It will blink when the system enters suspend mode.

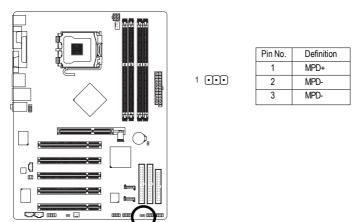

10) F_AUDIO (Front Audio Panel Connector)


If you want to use Front Audio connector, you must remove 5-6, 9-10 Jumper. In order to utilize the front audio header, your chassis must have front audio connector. Also please make sure the pin assignents on the cable are the same as the pin assignents on the MB header. To find out if the chassis you are buying support front audio connector, please contact your dealer.Please note, you can have the alternative of using front audio connector or of using rear audio connector to play sound.

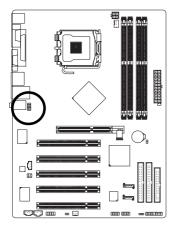

	Pin No.	Definition	
	1	MIC	
	2	GND	
2	3	MIC_BIAS	
	4	POWER	
10	5	FrontAudio(R)	
	6	Rear Audio (R)/ Return R	
	7	NC	
	8	No Pin	
	9	FrontAudio (L)	
	10	Rear Audio (L)/ Return L	

11) CD_IN (CD IN Connector)


Connect CD-ROM or DVD-ROM audio out to the connector.

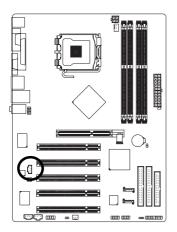

Pin No.	Definition
1	CD-L
2	GND
3	GND
4	CD-R

12) AUX_IN (AUX In Connector)

Connect other device (such as PCI TV Tunner audio out) to the connector.

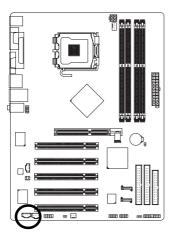


	Ρ
1 • • • •	

Pin No.	Definition	
1	AUX-L	
2	GND	
3	GND	
4	AUX-R	

13) SUR_CEN


Please contact your nearest dealer for optional SUR_CEN cable.

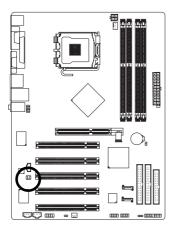

	Pin No.	Definition
	1	SUR OUTL
1 6	2	SUROUTR
	3	GND
2 5	4	No Pin
2 5	5	CENTER_OUT
	6	BASS_OUT

14) SPDIF_O (SPDIF Out)


The SPDIF output is capable of providing digital audio to external speakers or compressed AC3 data to an external Dolby Digital Decoder. Use this feature only when your stereo system has digital input function. Be careful with the polarity of the SPDIFO connector. Check the pin assignment carefully while you connect the SPDIFO cable. Incorrect connection between the cable and connector will make the device unable to work or even damage it. For optional SPDIFO cable, please contact your local dealer.

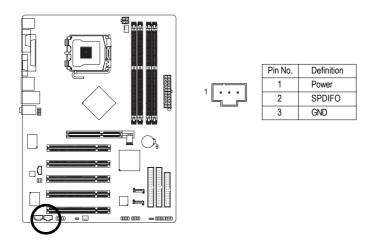

15) F_USB1 / F_USB2 (Front USB Connectors)

Be careful with the polarity of the front USB connector. Check the pin assignment carefully while you connect the front USB cable, incorrect connection between the cable and connector will make the device unable to work or even damage it. For optional front USB cable, please contact your local dealer.


10

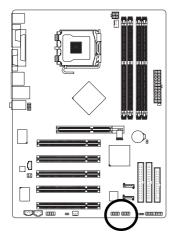

Pin No.	Definition
1	Power (5V)
2	Power (5V)
3	USB DX-
4	USB Dy-
5	USB DX+
6	USB Dy+
7	GND
8	GND
9	No Pin
10	NC

16) COMB (COMB Connector)

Be careful with the polarity of the COMB connector. Check the pin assignments while you connect the COMB cable. Please contact your nearest dealer for optional COMB cable.

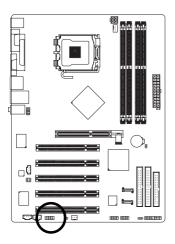


2			10
	[•	
1			9

Pin No.	Definition
1	NDCDB-
2	NSINB
3	NSOUTB
4	NDTRB-
5	GND
6	NDSRB-
7	NRTSB-
8	NCTSB-
9	NRIB-
10	No Pin

17) CI (Chassis Intrusion, Case Open)


This 2-pin connector allows your system to detect if the chassis cover is removed. You can check the "Case Opened" status in BIOS Setup.

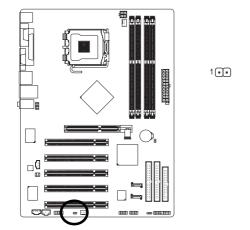


Pin No.Definition1Signal2GND


18) CLR_CMOS (Clear CMOS)

You may clear the CMOS data to its default values by this header. To clear CMOS, temporarily short the two pins. Default doesn't include the jumper to avoid improper use of this header.

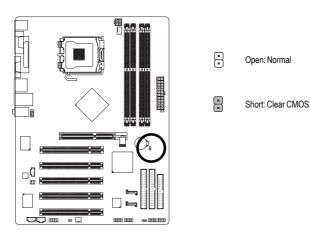

19) BAT (Battery)

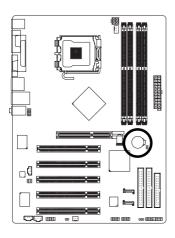



- Danger of explosion if battery is incorrectly replaced.
- Replace only with the same or equivalent type recommended by the manufacturer.
- Dispose of used batteries according to the manufacturer's instructions.

If you want to erase CMOS...

- 1. Turn OFF the computer and unplug the power cord.
- Take out the battery gently and put it aside for about 1 minute (Or you can use a metal object to connect the positive and negative pins in the battery holder to make them short for 5 seconds).
- 3. Re-install the battery.
- 4. Plug the power cord and turn ON the computer.

Chapter 2 BIOS Setup

BIOS (Basic Input and Output System) includes a CMOS SETUP utility which allows user to configure required settings or to activate certain system features.

The CMOS SETUP saves the configuration in the CMOS SRAM of the motherboard.

When the power is turned off, the battery on the motherboard supplies the necessary power to the CMOS SRAM.

When the power is turned on, pushing the button during the BIOS POST (Power-On Self Test) will take you to the CMOS SETUP screen. You can enter the BIOS setup screen by pressing "Ctrl + F1".

When setting up BIOS for the first time, it is recommended that you save the current BIOS to a disk in the event that BIOS needs to be reset to its original settings. If you wish to upgrade to a new BIOS, either GIGABYTE's Q-Flash or @BIOS utility can be used.

Q-Flash allows the user to quickly and easily update or backup BIOS without entering the operating system. @BIOS is a Windows-based utility that does not require users to boot to DOS before upgrading BIOS but directly download and update BIOS from the Internet.

$\overline{<\!\!\uparrow\!><\!\!\downarrow\!><\!\!\leftrightarrow\!><\!\!\rightarrow\!>}$	Move to select item		
<enter></enter>	Select Item		
<esc></esc>	Main Menu - Quit and not save changes into CMOS Status Page Setup Menu		
	and Option Page Setup Menu - Exit current page and return to Main Menu		
<page up=""></page>	Increase the numeric value or make changes		
<page down=""></page>	Decrease the numeric value or make changes		
<f1></f1>	General help, only for Status Page Setup Menu and Option Page Setup Menu		
<f2></f2>	Item Help		
<f5></f5>	Restore the previous CMOS value from CMOS, only for Option Page Setup		
	Menu		
<f6></f6>	Load the file-safe default CMOS value from BIOS default table		
<f7></f7>	Load the Optimized Defaults		
<f8></f8>	Q-Flash utility		
<f9></f9>	System Information		
<f10></f10>	Save all the CMOS changes, only for Main Menu		

CONTROL KEYS

Main Menu

The on-line description of the highlighted setup function is displayed at the bottom of the screen.

Status Page Setup Menu / Option Page Setup Menu

Press <F1> to pop up a small help window that describes the appropriate keys to use and the possible selections for the highlighted item. To exit the Help Window press <Esc>.




Because BIOS flashing is potentially risky, please do it with caution and avoid inadequate operation that may result in system malfunction.

<F12> : For Boot Menu

Select boot sequence for onboard (or add-on cards) device.



Use < \uparrow > or < \downarrow > to select a device, then press enter to accept . Press <ESC> to exit this menu.

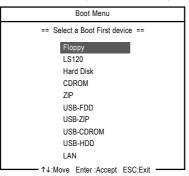

The Main Menu (For example: BIOS Ver. : D11)

Once you enter Award BIOS CMOS Setup Utility, the Main Menu (as figure below) will appear on the screen. Use arrow keys to select among the items and press <Enter> to accept or enter the sub-menu.

 CMOS Setup Utility-Copyright (C) 1984-2006 Award Software				
•	Standard CMOS Features	Load Fail-Safe Defaults		
•	Advanced BIOS Features	Load Optimized Defaults		
•	Integrated Peripherals	Set Supervisor Password		
•	Power Management Setup Set User Password			
•	PnP/PCI Configurations	tions Save & Exit Setup		
•	PC Health Status	Exit Without Saving		
•	MB Intelligent Tweaker(M.I.T.)			
ESC: Quit ↑↓→←: Select Item				
F8: Q-Flash		F10: Save & Exit Setup		
Time, Date, Hard Disk Type				



If you can't find the setting you want, please press "Ctrl+F1" to search the advanced option hidden.

Please Load Optimized Defaults in the BIOS when somehow the system works not stable as usual. This action makes the system reset to the default for stability.

The BIOS Setup menus described in this chapter are for reference only and may differ from the exact settings for your motherboard.

Standard CMOS Features

This setup page includes all the items in standard compatible BIOS.

Advanced BIOS Features

This setup page includes all the items of Award special enhanced features.

Integrated Peripherals

This setup page includes all onboard peripherals.

Power Management Setup This setup page includes all the items of Green function features.

PnP/PCI Configuration

This setup page includes all the configurations of PCI & PnP ISA resources.

PC Health Status

This setup page is the System auto detect Temperature, voltage, fan, speed.

MB Intelligent Tweaker(M.I.T.)

This setup page is control CPU clock and frequency ratio.

Load Fail-Safe Defaults

Fail-Safe Defaults indicates the value of the system parameters which the system would be in safe configuration.

Load Optimized Defaults

Optimized Defaults indicates the value of the system parameters which the system would be in best performance configuration.

Set Supervisor Password

Change, set, or disable password. It allows you to limit access to the system and Setup, or just to Setup.

Set User Password

Change, set, or disable password. It allows you to limit access to the system.

Save & Exit Setup

Save CMOS value settings to CMOS and exit setup.

Exit Without Saving

Abandon all CMOS value changes and exit setup.

2-1 Standard CMOS Features

	CMOS Setup Utility-Copyright (C) 1984-2006 Award Software Standard CMOS Features					
	Date (mm:dd:yy)	Wed, Jan 11 2006	Item Help			
	Time (hh:mm:ss)	22:31:24	Menu Level▶			
	IDE Channel 0 Master	[None]	Change the day, month,			
	IDE Channel 0 Slave	[None]	year			
	IDE Channel 1 Master	[None]				
	IDE Channel 1 Slave	[None]	<week></week>			
	IDE Channel 2 Master	[None]	Sun. to Sat.			
'	IDE Channel 3 Master	[None]	<month></month>			
	Drive A	[1.44M, 3.5"]	Jan. to Dec.			
	Drive B	[None]	Jan. to Dec.			
	Floppy 3 Mode Support	[Disabled]	<dav></dav>			
	rioppy 5 mode Support	[Disubled]	1 to 31 (or maximum			
	Halt On	[All, But Keyboard]	allowed in the month)			
		[rm, Dut noycouru]				
	Base Memory	640K	<year></year>			
	Extended Memory	239M	1999 to 2098			
Ţ.	↓→←: Move Enter: Select F5: Previous Values	+/-/PU/PD: Value F10: Save F6: Fail-Safe Default	ESC: Exit F1: General Help F7: Optimized Defaults			

· Date

The date format is <week>, <month>, <day>, <year>.

- >> Week The week, from Sun to Sat, determined by the BIOS and is display only
- ✤ Month The month, Jan. Through Dec.
- Day The day, from 1 to 31 (or the maximum allowed in the month)

ං Time

The times format in <hour> <minute> <second>. The time is calculated base on the 24-hour military-time clock. For example, 1 p.m. is 13:00:00.

○ IDE Channel 0 Master/Slave ; IDE Channel 1 Master/Slave

▶ IDE HDD Auto-Detection Press "Enter" to select this option for automatic device detection.

▶ IDE Channel 0 Master/Slave ; IDE Channel 1 Master/Slave

IDE devices setup. You can use one of three methods:

- Auto Allows BIOS to automatically detect IDE devices during POST. (Default value)
- None Select this if no IDE devices are used and the system will skip the automatic detection step and allow for faster system start up.

• Manual User can manually input the correct settings.

- ➤ Access Mode Use this to set the access mode for the hard drive. The four options are: CHS/LBA/Large/Auto(default:Auto)
- ➤ Capacity Capacity of currectly installed hard drive.

☞ IDE Channel 2/3 Master

▶ IDE HDD Auto-Detection Press "Enter" to select this option for automatic device detection.

- ▶ Extended IDE Drive You can use one of the two methods:
 - Auto Allows BIOS to automatically detect IDE devices during POST(default)
 - None Select this if no IDE devices are used and the system will skip the automatic detection step and allow for faster system start up.
- ➤ Access Mode Use this to set the access mode for the hard drive. The two options are: Large/Auto(default:Auto)

➤ Capacity Capacity of currently installed hard drive.

Hard drive information should be labeled on the outside drive casing. Enter the appropriate option based on this information.

- Cylinder Number of cylinders
- ➡ Head Number of heads
- ▶ Precomp Write precomp
- ► Landing Zone Landing zone
- ➡ Sector Number of sectors

∽ Drive A / Drive B

The category identifies the types of floppy disk drive A or drive B that has been installed in the computer.

- ► None No floppy drive installed
- ▶ 360K, 5.25" 5.25 inch PC-type standard drive; 360K byte capacity.
- ▶ 1.2M, 5.25" 5.25 inch AT-type high-density drive; 1.2M byte capacity
- (3.5 inch when 3 Mode is Enabled).
- ▶ 720K, 3.5" 3.5 inch double-sided drive; 720K byte capacity
- ▶ 1.44M, 3.5" 3.5 inch double-sided drive; 1.44M byte capacity.
- ▶ 2.88M, 3.5" 3.5 inch double-sided drive; 2.88M byte capacity.

∽ Floppy 3 Mode Support (for Japan Area)

- Disabled Normal Floppy Drive. (Default value)
- Drive A Drive A is 3 mode Floppy Drive.
- ➡ Drive B Drive B is 3 mode Floppy Drive.
- ➡ Both Drive A & B are 3 mode Floppy Drives.

Halt on

The category determines whether the computer will stop if an error is detected during power up. No Errors The system boot will not stop for any error that may be detected and you

	will be prompted.
All Errors	Whenever the BIOS detects a non-fatal error the system will be stopped.
➡ All, But Keyboard	The system boot will not stop for a keyboard error; it will stop for all other errors. (Default value)
➡ All, But Diskette	The system boot will not stop for a disk error; it will stop for all other errors.
► All, But Disk/Key	The system boot will not stop for a keyboard or disk error; it will stop for all other errors.

∽ Memory

The category is display-only which is determined by POST (Power On Self Test) of the BIOS.

The POST of the BIOS will determine the amount of base (or conventional) memory installed in the system.

The value of the base memory is typically 512K for systems with 512K memory installed on the motherboard, or 640K for systems with 640K or more memory installed on the motherboard.

Extended Memory

The BIOS determines how much extended memory is present during the POST.

This is the amount of memory located above 1 MB in the CPU's memory address map.

➡ Total Memory

This item displays the memory size that used.

2-2 Advanced BIOS Features

CMOS Setup Utility-Copyright (C) 1984-2006 Award Software Advanced BIOS Features										
	#	Hard Disk Boot Priority First Boot Device Second Boot Device Password Check CPU Hyper-Threading Limit CPUID Max. to 3 No-Execute Memory Protect (None) CPU Enhanced Halt (C1E) (None) CPU Enhanced Halt (C1E) (None) CPU EIST Function (None) On-Chip Frame Buffer Size		[Press Enti [Floppy] [Hard Disk [CDROM] [Enabled] [Enabled] [Enabled] [Enabled] [Enabled] [IoMB]	- [
	Ţ	,→←: Move Enter: Select F5: Previous Values	+/-/PU/PD: V F6: Fail-Safe		F10: Save		Exit ptimized	F1: General Help Defaults		

" # " System will detect automatically and show up when you install the Intel® Pentium® 4 processor with HT Technology.

Hard Disk Boot Priority

Select boot sequence for onboard(or add-on cards) SCSI, RAID, etc. Use < \uparrow > or < \downarrow > to select a device, then press<+> to move it up, or <-> to move it down the list. Press <ESC> to exit this menu.

∽ First / Second / Third Boot Device

- ➡ Floppy Select your boot device priority by Floppy.
- ► LS120 Select your boot device priority by LS120.
- ➡ Hard Disk Select your boot device priority by Hard Disk.
- ➤ CDROM Select your boot device priority by CDROM.
- ► ZIP Select your boot device priority by ZIP.
- ➡ USB-FDD Select your boot device priority by USB-FDD.
- ➤ USB-ZIP Select your boot device priority by USB-ZIP.
- ▶ USB-CDROM Select your boot device priority by USB-CDROM.
- ▶ USB-HDD Select your boot device priority by USB-HDD.
- ► LAN Select your boot device priority by LAN.
- Disabled Disable this function.

Password Check

- System The system can not boot and can not access to Setup page will be denied if the correct password is not entered at the prompt.
- ➤ Setup The system will boot, but access to Setup will be denied if the correct password is not entered at the prompt. (Default value)

(Note) This item will show up when you install a processor which supports this function.

→ CPU Hyper-Threading

- Enabled Enables CPU Hyper Threading Feature. Please note that this feature is only working for operating system with multi processors mode supported. (Default value)
- ✤ Disabled Disables CPU Hyper Threading.

∽ Limit CPUID Max. to 3

- ▶ Enabled Limit CPUID Maximum value to 3 when use older OS like NT4.
- ✤ Disabled Disables CPUID Limit for windows XP. (Default value)

∽ No-Execute Memory Protect (Note)

- ➡ Enabled Enable No-Execute Memory Protect function. (Default value)
- ➡ Disabled Disable No-Execute Memory Protect function.

∽ CPU Enhanced Halt (C1E)^(Note)

- ► Enabled Enable CPU Enhanced Halt (C1E) function. (Default value)
- ✤ Disabled Disable CPU Enhanced Halt (C1E) function.

→ CPU Thermal Monitor 2 (TM2) (Note)

- ▶ Enabled Enable CPU Thermal Monitor 2 (TM2) function. (Default value)
- ➡ Disabled Disable CPU Thermal Monitor 2 (TM2) function.

- Enabled Enable CPU EIST function. (Default value)
- Disabled Disable EIST function.

∽ On-Chip Frame Buffer Size

- ▶ 1MB Set on-chip frame buffer size to 1MB.
- ➡ 4MB Set on-chip frame buffer size to 4MB.
- ▶ 8MB Set on-chip frame buffer size to 8MB.
- ▶ 16MB Set on-chip frame buffer size to 16MB. (Default value)
- ➡ 32MB Set on-chip frame buffer size to 32MB.

(Note) This item will show up when you install a processor which supports this function.

2-3 Integrated Peripherals

	CMOS Setup Utility-Copyright (C) 1984-2006 Award Software Integrated Peripherals			
	On-Chip Primary PCI IDE	[Enabled]	Item Help	
	On-Chip Secondary PCI IDE	[Enabled]	Menu Level	
	On-Chip SATA	[Auto]		
x	SATA Port0 configure as	SATA Port0		
	SATA Port1 configure as	SATA Port1		
	USB Controller	[Enabled]		
	USB 2.0 Controller	[Enabled]		
	USB Keyboard Support	[Disabled]		
	USB Mouse Support	[Disabled]		
	Legacy USB storage detect	[Enabled]		
	AC97 Audio	[Auto]		
	Onboard H/W LAN	[Enabled]		
	OnBoard LAN Boot ROM	[Disabled]		
	Onboard Serial Port 1	[3F8/IRQ4]		
	Onboard Serial Port 2	[2F8/IRQ3]		
	Onboard Parallel Port	[378/IRQ7]		
	Parallel Port Mode	[SPP]		
х	ECP Mode Use DMA			
↑↓	→←: Move Enter: Select	+/-/PU/PD: Value F10: Save	ESC: Exit F1: General Help	
	F5: Previous Values	F6: Fail-Safe Default	F7: Optimized Defaults	

5	On-Chip Primary PCI IDE		
	➡ Enabled	Enable onboard 1st channel IDE port. (Default value)	
	➡ Disabled	Disable onboard 1st channel IDE port.	
~	On-Chip Secondary	/ PCI IDE	
	➡ Enabled	Enable onboard 2nd channel IDE port. (Default value)	
	Disabled	Disable onboard 2nd channel IDE port.	
7	On-Chip SATA		
	Disabled	Disable onboard Seria ATA function.	
	► Auto	When there is no device to be plugged in IDE1 or IDE2, SATA controller will	
		remap to IDE controller. (Default value)	
	Manual	Set SATA mode manually from "SATA Port0 configure as" item.	
7	SATA Port0 configu	ire as	
	▶ IDE Pri. Master	Set SATA controller to compatible mode. This mode will remap SATA Port 0	
		to IDE Primary Master.	
	➡ IDE Pri. Slave	Set SATA controller to compatible mode. This mode will remap SATA Port 0	
		to IDE Primary Slave.	
	➡ IDE Sec. Master	Set SATA controller to compatible mode. This mode will remap SATA Port 0	
		to IDE Secondary Master.	
	➡ IDE Sec. Slave	Set SATA controller to compatible mode. This mode will remap SATA Port 0	
		to IDE Secondary Slave.	
	➡ SATA Port0	Set SATA controller to native mode(Serial ATA mode - SATA Port 0). This	
		mode is only supported by Windows XP or later. (Default value)	
	SATA Port1	Set SATA controller to native mode(Serial ATA mode - SATA Port 1). This	
		mode is only supported by Windows XP or later.	

SATA Port1 configure as

>> The setting depends on "SATA Port0 configure as" item setting. (Default: SATA Port1)

☞ USB Controller

- Enabled Enable USB controller. (Default value)
- Disabled Disable USB controller.

☞ USB 2.0 Controller

You can disable this function if you are not using onboard USB 2.0 feature.

- ➡ Enabled Enable USB 2.0 controller. (Default value)
- ✤ Disabled Disable USB 2.0 controller.

□ USB Keyboard Support

- ➡ Enabled Enable USB keyboard support.
- Disabled
 Disable USB keyboard support. (Default value)

☞ USB Mouse Support

- Enabled Enable USB mouse support.
- >> Disabled Disable USB mouse support. (Default value)

∽ Legacy USB storage detect

- Enabled Enable USB storage detect function. (Default value)
- Disabled Disable this function.

🗢 AC97 Audio

- ➡ Auto Enable onboard AC'97 audio function. (Default value)
- ✤ Disabled Disable this function.

∽ Onboard H/W LAN

- Enabled Enable onboard H/W LAN function. (Default value)
- ✤ Disabled Disable this function.

∽ OnBoard LAN Boot ROM

This function decide whether to invoke the boot ROM of the onboard LAN chip.

- Enabled Enable this function.
- Disabled Disable this function. (Default value)

Onboard Serial Port 1

- Auto BIOS will automatically setup the Serial port 1 address.
- ▶ 3F8/IRQ4 Enable onboard Serial port 1 and address is 3F8. (Default value)
- ▶ 2F8/IRQ3 Enable onboard Serial port 1 and address is 2F8.
- ➡ 3E8/IRQ4 Enable onboard Serial port 1 and address is 3E8.
- >> 2E8/IRQ3 Enable onboard Serial port 1 and address is 2E8.
- Disabled Disable onboard Serial port 1.

Onboard Serial Port 2

- ➤ Auto BIOS will automatically setup the port 1 address.
- ➡ 3F8/IRQ4 Enable onboard Serial port 2 and address is 3F8.
- ▶ 2F8/IRQ3 Enable onboard Serial port 2 and address is 2F8. (Default value)
- ➡ 3E8/IRQ4 Enable onboard Serial port 2 and address is 3E8.
- ▶ 2E8/IRQ3 Enable onboard Serial port 2 and address is 2E8.
- Disabled Disable onboard Serial port 2.

∽ Onboard Parallel Port

- Disabled Disable onboard LPT port.
- ▶ 378/IRQ7 Enable onboard LPT port and address is 378/IRQ7. (Default value)
- >> 278/IRQ5 Enable onboard LPT port and address is 278/IRQ5.
- ➡ 3BC/IRQ7 Enable onboard LPT port and address is 3BC/IRQ7.

∽ Parallel Port Mode

- ▶ SPP Using Parallel port as Standard Parallel Port. (Default value)
- ▶ EPP Using Parallel port as Enhanced Parallel Port.
- ➡ ECP Using Parallel port as Extended Capabilities Port.
- ➡ ECP+EPP Using Parallel port as ECP and EPP mode.

☞ ECP Mode Use DMA

- ➡ 3 Set ECP Mode Use DMA to 3. (Default value)
- ▶ 1 Set ECP Mode Use DMA to 1.

2-4 Power Management Setup

CMOS Setup Utility-Copyright (C) 1984-2006 Award Software Power Management Setup			
ACPI Suspend Type Power LED in SI state Off by Power button PME Event Wake Up ModemRingOn/WakeOnLan Resume by Alarm X Date (of Month) Alarm X Time (hh:mm:ss) Alarm Power On By Mouse Power On By Keyboard X KB Power ON Password AC BACK Function	[S1(POS)] [Blinking] [Instant-off] [Enabled] [Disabled] Everday 0:0:0 [Disabled] [Disabled] Enter [Soft-Off]	Item Help Menu Level≯	
↑↓→←: Move Enter: Select F5: Previous Values		SC: Exit F1: General Help 7: Optimized Defaults	

☞ ACPI Suspend Type

S1(POS)
 Set ACPI suspend type to S1/POS(Power On Suspend). (Default value)
 S3(STR)
 Set ACPI suspend type to S3/STR(Suspend To RAM).

∽ Power LED in S1 state

- Blinking In standby mode(S1), poer LED will blink. (Default value)
- ➡ Dual/OFF In standby mode(S1):
 - a. If use single color LED, power LED will turn off.
 - b. If use dual color LED, power LED will turn to another color.

∽ Off by Power button

- ▶ Instant-off Press power button then Power off instantly. (Default value)
- Delay 4 Sec. Press power button 4 sec. to Power off. Enter suspend if button is pressed less than 4 seconds.

☞ PME Event Wake Up

- This feature requires an ATX power supply that provides at least 1A on the 5VSB lead.
- Disabled Disable this function.
- ➡ Enabled Enable PME as wake up event. (Default value)

ModemRingOn/WakeOnLan

An incoming call via modem can awake the system from any suspend state or an input signal comes from the other client server on the LAN can awake the system from any suspend state.

- ➡ Disabled Disable Modem Ring On / Wake On LAN function.
- >> Enabled Enable Modem Ring On / Wake On LAN function. (Default value)

☞ Resume by Alarm

You can set "Resume by Alarm" item to enabled and key in Date/Time to power on system.

- Disabled Disable this function. (Default value)
- Enabled Enable alarm function to POWER ON system.
- If Resume by Alarm is Enabled.
- Date (of Month) Alarm : Everyday, 1~31
- ➡ Time (hh: mm: ss) Alarm : (0~23) : (0~59) : (0~59)

∽ Power On By Mouse

- Disabled Disabled this function. (Default value)
- >> Double Click Double click on PS/2 mouse left button to power on the system.

Power On By Keyboard

- Disabled Disabled this function. (Default value)
- ▶ Password Enter from 1 to 5 characters to set the keyboard power on password.
- ➡ Keyboard 98 If your keyboard have "POWER Key" button, you can press the key to power on the system.

☞ KB Power ON Password

When "Power On by Keyboard" set at Password, you can set the password here.

▶ Enter Input password(from 1 to 5 characters) and press Enter to set the password.

→ AC BACK Function

- ✤ Soft-Off When AC-power back to the system, the system will be in "Off" state. (Default value)
- >> Full-On When AC-power back to the system, the system always in "On" state.

2-5 PnP/PCI Configurations

CMOS Setup Utility-Copyright (C) 1984-2006 Award Software PnP/PCI Configurations		
PCI1/PCI5 IRQ Assignment	[Auto]	Item Help
PCI2 IRQ Assignment	[Auto]	Menu Level
PCI3 IRQ Assignment	[Auto]	
PC14 IRQ Assignment	[Auto]	Device(s) using this INT:
↑↓→←: Move Enter: Select F5: Previous Values	+/-/PU/PD: Value F10: Save F6: Fail-Safe Default	ESC: Exit F1: General Help F7: Optimized Defaults

Ċ	PCI1/PCI5 IRQ Assignment		
	► Auto	Auto assign IRQ to PCI1/PCI5. (Default value)	
	▶ 3,4,5,7,9,10,11,12,14,15	Set IRQ 3,4,5,7,9,10,11,12,14,15 to PCI1/PCI5.	
Ċ	PCI2 IRQ Assignment		
	➡ Auto	Auto assign IRQ to PCI2. (Default value)	
	▶ 3,4,5,7,9,10,11,12,14,15	Set IRQ 3,4,5,7,9,10,11,12,14,15 to PCI2.	
Ċ	PCI3 IRQ Assignment		
	► Auto	Auto assign IRQ to PCI3. (Default value)	
	▶ 3,4,5,7,9,10,11,12,14,15	Set IRQ 3,4,5,7,9,10,11,12,14,15 to PCI3.	
Ċ	PCI4 IRQ Assignment		
	► Auto	Auto assign IRQ to PCI4. (Default value)	
	▶ 3,4,5,7,9,10,11,12,14,15	Set IRQ 3,4,5,7,9,10,11,12,14,15 to PCI4.	

2-6 PC Health Status

CMOS Setup Utility-Copyright (C) 1984-2006 Award Software PC Health Status			
Reset Case Open Status	[Disabled]	Item Help	
Case Opened		Menu Level▶	
Vcore	OK		
DDR25V	OK		
+3.3V	OK		
+12V	OK		
Current CPU Temperature			
Current CPU FAN Speed	3245 RPM		
Current SYSTEM FAN Speed	0 RPM		
CPU Warning Temperature	[Disabled]		
CPU FAN Fail Warning	[Disabled]		
SYSTEM FAN Fail Warning	[Disabled]		
CPU Smart FAN Control	[Enabled]		
CPU Smart FAN Mode	[Auto]		
↑↓→←: Move Enter: Select F5: Previous Values	+/-/PU/PD: Value F10: Save F6: Fail-Safe Defaults F7: Optimized	ESC: Exit F1: General Help Defaults	

Constant Case Open Status

- Disabled Don't reset case open status. (Default value)
- Enabled Clear case open status at next boot.

∽ Case Opened

If the case is closed, "Case Opened" will show "No".

If the case have been opened, "Case Opened" will show "Yes".

If you want to reset "Case Opened" value, set "Reset Case Open Status" to "Enabled" and save CMOS, your computer will restart.

Current Voltage(V) Vcore / DDR25V / +3.3V / +12V

>> Detect system's voltage status automatically.

∽ Current CPU Temperature

▶ Detect CPU temperature automatically.

∽ Current CPU/SYSTEM FAN Speed (RPM)

▶ Detect CPU/SYSTEM Fan speed status automatically.

○ CPU Warning Temperature

- ▶ 60°C / 140°F Monitor CPU temperature at 60°C / 140°F.
- ➡ 70°C / 158°F Monitor CPU temperature at 70°C / 158°F.
- ▶ 80°C / 176°F Monitor CPU temperature at 80°C / 176°F.
- ▶ 90°C / 194°F Monitor CPU temperature at 90°C / 194°F.
- Disabled
 Disable this function. (Default value)

∽ CPU/SYSTEM FAN Fail Warning

- Disabled Fan warning function disable. (Default value)
- Enabled Fan warning function enable.

☞ CPU Smart FAN Control

- ► Disabled Disable this function.
- Enabled When this function is enabled, CPU fan will run at different speed depending on CPU temperature. Users can adjust the fan speed with Easy Tune based on their requirements. (Default Value)

∽ CPU Smart FAN Mode

This option is available only when CPU Smart FAN Control is enabled.

- Auto BIOS autodetects the type of CPU fan you installed and sets the optimal CPU Smart FAN control mode for it. (Default Value)
- ▶ Voltage Set to Voltage when you use a CPU fan with a 3-pin fan power cable.

▶ PWM Set to PWM when you use a CPU fan with a 4-pin fan power cable.

Note: In fact, the Voltage option can be used for CPU fans with 3-pin or 4-pin power cables. However, some 4-pin CPU fan power cables are not designed following Intel 4-Wire fans PWM control specifications. With such CPU fans, selecting PWM will not effectively reduce the fan speed.

2-7 MB Intelligent Tweaker(M.I.T.)

CMOS Setup Utility-Copyright (C) 1984-2006 Award Software MB Intelligent Tweaker(M.I.T.)			
CPU Clock Ratio (Note)	[18X]	Item Help	
CPU Host Clock Control	[Disabled]	Menu Level	
x CPU Host Frequency (Mhz)			
x AGP/PCI/SRC Fixed	66/33/100		
Memory Frequency For	[Auto]		
Memory Frequency (Mhz)		j	
AGP/PCI/SRC Frequency (Mhz)	66/33/100	j	
DIMM OverVoltage Control	[Normal]		
AGP OverVoltage Control	Normal		
FSB OverVoltage Control	Normal		
CPU Voltage Control	Normal	j	
Normal CPU Vcore	1.3875V		
$\uparrow \downarrow \rightarrow \leftarrow$: Move Enter: Select		C: Exit F1: General Help	
F5: Previous Values	F6: Fail-Safe Defaults F7	: Optimized Defaults	



Incorrect using these features may cause your system broken. For power end-user use only.

CPU Clock Ratio (Note)

This setup option will automatically assign by CPU detection.

The option will display "Locked" and read only if the CPU ratio is not changeable.

→ CPU Host Clock Control

Please note that if your system is overclocked and cannot restart, please wait 20secs. for automatic system restart or clear the CMOS setup data and perform a safe restart.

- Disabled Disable CPU Host Clock Control. (Default value)
- ➡ Enabled Enable CPU Host Clock Control.

∽ CPU Host Frequency (Mhz)

▶ 100MHz ~ 355MHz Set CPU Host Frequency from 100MHz to 355MHz.
If you use FSB533 Pentium 4 processor, please set "CPU Host Frequency" to 133MHz.If you use

FSB800 Pentium 4 processor, please set "CPU Host Frequency" to 200MHz.

Incorrect using it may cause your system broken. For power End-User use only!

→ AGP/PCI/SRC Fixed

This item will be available when "CPU Host Clock Control" is set to Enabled.

Serial ATA device is very sensitive to SRC clock. SRC over clock may make Serial ATA device function can't work properly.

► Adjust AGP/PCI/SRC clock asychrohous with CPU.

(Note) This item will show up when you install a processor which supports this function.

∽ Memory Frequency For

Wrong frequency may make system can't boot, clear CMOS to overcome wrong frequency issue. for FSB(Front Side Bus) frequency=533MHz,

- ▶ 2.0 Memory Frequency = Host clock X 2.0.
- ▶ 2.5 Memory Frequency = Host clock X 2.5.
- ➡ Auto Set Memory frequency by DRAM SPD data. (Default value)

for FSB(Front Side Bus) frequency=800MHz,

- ▶ 2.0 Memory Frequency = Host clock X 2.0.
- ▶ 1.66 Memory Frequency = Host clock X 1.66.
- ▶ 1.33 Memory Frequency = Host clock X 1.33.
- ➤ Auto Set Memory frequency by DRAM SPD data. (Default value)

∽ Memory Frequency (Mhz)

The values depend on "CPU Host Frequency(Mhz)" item.

∽ AGP/PCI/SRC Frequency (Mhz)

The values depend on AGP/PCI/SRC Fixed.

□ DIMM OverVoltage Control

Please note that by overclocking your system through the increase of the DIMM voltage, damage to the memory may occur.

- ▶ Normal Set DIMM OverVoltage Control to Normal. (Default value)
- ➡ +0.1V Set DIMM OverVoltage Control to +0.1V.
- ➡ +0.2V Set DIMM OverVoltage Control to +0.2V.
- ➡ +0.3V Set DIMM OverVoltage Control to +0.3V.
- ➡ +0.4V Set DIMM OverVoltage Control to +0.4V.
- ➡ +0.5V Set DIMM OverVoltage Control to +0.5V.
- ➡ +0.6V Set DIMM OverVoltage Control to +0.6V.

Incorrect using it may cause your system broken. For power End-User use only!

∽ AGP OverVoltage Control

- ➤ Normal Set AGP OverVoltage Control to Normal. (Default value)
- ➡ +0.1V Set AGP OverVoltage Control to +0.1V.
- ➡ +0.2V Set AGP OverVoltage Control to +0.2V.
- ➡ +0.3V Set AGP OverVoltage Control to +0.3V.

Increase AGP voltage may get stable for Over_Clock. But it may damage to AGP Card when enable this feature.

☞ FSB OverVoltage Control

- ✤ Normal Set FSB OverVoltage Control to Normal. (Default value)
- ➡ +0.1V Set FSB OverVoltage Control to +0.1V.
- ► +0.2V Set FSB OverVoltage Control to +0.2V.
- ➡ +0.3V Set FSB OverVoltage Control to +0.3V.

☞ CPU Voltage Control

Supports adjustable CPU Vcore from 0.8375V to 1.6000V. (Default value: Normal)

∽ Normal CPU Vcore

Display your CPU Vcore Voltage.

2-8 Load Fail-Safe Defaults

CMOS Setup Utility-Copyright (C) 1984-2006 Award Software		
 Standard CMOS Features Advanced BIOS Features 	Load Fail-Safe Defaults Load Optimized Defaults	
Integrated Peripherals	Set Supervisor Password	
	Defaults (Y/N)? N	
 PC Health Status MB Intelligent Tweaker(M.I.T.) 	LAIL WILHOUL SAVING	
ESC: Quit	↑↓→←: Select Item	
F8: Q-Flash	F10: Save & Exit Setup	
Load Fail-Safe Defaults		

Fail-Safe defaults contain the most appropriate values of the system parameters that allow minimum system performance.

2-9 Load Optimized Defaults

CMOS Setup Utility-Copyright (C) 1984-2006 Award Software		
 Standard CMOS Features Advanced BIOS Features Integrated Peripherals Power Ma PnP/PCI (Load Optimized I PC Health success MB Intelligent Tweaker(M.I.T.) 	Load Fail-Safe Defaults Load Optimized Defaults Set Supervisor Password Defaults (Y/N)? N	
ESC: Quit	↑↓→←: Select Item	
F8: Q-Flash F10: Save & Exit Setup		
Load Optimized Defaults		

Selecting this field loads the factory defaults for BIOS and Chipset Features which the system automatically detects.

2-10 Set Supervisor/User Password

CMOS Setup Utility-Copyright (C) 1984-2006 Award Software		
 Standard CMOS Features Advanced BIOS Features Integrated Peripherals Power Management Science PnP/PCI (Enter Password: PC Health Science MB Intelligent Tweaker(M.I.T.) 	Load Fail-Safe Defaults Load Optimized Defaults Set Supervisor Password	
ESC: Quit F8: Q-Flash	↑↓→←: Select Item F10: Save & Exit Setup	
Change/Set/Disable Password		

When you select this function, the following message will appear at the center of the screen to assist you in creating a password.

Type the password, up to eight characters, and press <Enter>. You will be asked to confirm the password. Type the password again and press <Enter>. You may also press <Esc> to abort the selection and not enter a password.

To disable password, just press <Enter> when you are prompted to enter password. A message "PASSWORD DISABLED" will appear to confirm the password being disabled. Once the password is disabled, the system will boot and you can enter Setup freely.

The BIOS Setup program allows you to specify two separate passwords:

SUPERVISOR PASSWORD and a USER PASSWORD. When disabled, anyone may access all BIOS Setup program function. When enabled, the Supervisor password is required for entering the BIOS Setup program and having full configuration fields, the User password is required to access only basic items.

If you select "System" at "Password Check" in Advance BIOS Features Menu, you will be prompted for the password every time the system is rebooted or any time you try to enter Setup Menu.

If you select "Setup" at "Password Check" in Advance BIOS Features Menu, you will be prompted only when you try to enter Setup.

2-11 Save & Exit Setup

CMOS Setup Utility-Copyright (C) 1984-2006 Award Software		
•	Standard CMOS Features	Load Fail-Safe Defaults
•	Advanced BIOS Features	Load Optimized Defaults
•	Integrated Peripherals	Set Supervisor Password
•	Power Management Setup	Set User Password
•	PnP/PCI C	0 0. P: 4 0-4
•	PC Health Save to CMOS an	d EXIT (Y/N)? Y
•	MB Intelligent treasure (
ESC	C: Quit	↑↓→←: Select Item
F8:	Q-Flash	F10: Save & Exit Setup
Save Data to CMOS		

Type "Y" will quit the Setup Utility and save the user setup value to RTC CMOS. Type "N" will return to Setup Utility.

2-12 Exit Without Saving

CMOS Setup Utility-Copyright (C) 1984-2006 Award Software			
	Standard CMOS Features	Load Fail-Safe Defaults	
	Advanced BIOS Features	Load Optimized Defaults	
▶	Integrated Peripherals	Set Supervisor Password	
.∥ →	Power Ma		
►	PnP/PCI C Quit Without S	aving (Y/N)? N	
▶	PC Health Status	LAR WRITOUL DAVING	
	MB Intelligent Tweaker(M.I.T.)		
E	SC: Quit	↑↓→←: Select Item	
F	8: Q-Flash	F10: Save & Exit Setup	
	Abandon all Data		

Type "Y" will quit the Setup Utility without saving to RTC CMOS. Type "N" will return to Setup Utility.

Chapter 3 Drivers Installation



Pictures below are shown in Windows XP.

(1) Please make sure to install the latest service pack for Windows after OS installation and before installing motherboard drivers.

(2) Insert the driver CD that came with your motherboard into your CD-ROM drive, the driver CD will auto start and installation screen will appear. If not, please double click the CD-ROM device icon in **My computer** or execute the Setup.exe in the root directory of the driver CD.

3-1 Install Chipset Drivers

After insert the driver CD, "Xpress Install" will scan automatically the system and then list all the drivers that recommended to install. The "Xpress Install" uses the "Click and Go" technology to install the drivers automatically. Just select the drivers you want then click the "GO" button. The "Xpress Install" will execute the installation for you automatically.



Some device drivers will restart your system automatically. After restarting your system the "Xpress Install" will continue to install other drivers.

System will reboot automatically after install the drivers, afterward you can install others application.



For USB2.0 driver support under Windows XP operating system, please use Windows Service Pack. After install Windows Service Pack, it will show a question mark "?" in "Universal Serial Bus controller" under "Device Manager". Please remove the question mark and restart the system (System will auto-detect the right USB2.0 driver).

3-2 Software Applications

This page displays all the tools that Gigabyte developed and some free software. You can click an item to install it.



3-3 Driver CD Information

This page lists the contents of software and drivers in this CD-title.



3-4 Hardware Information

This page lists all device you have for this motherboard.



3-5 Contact Us

You can also see the last page of this manual for contacts information details.



Chapter 4 Appendix

4-1 Unique Software Utilities

(Not all model support these Unique Software Utilities, please check your MB features.)

4-1-1 EasyTune 5 Introduction

EasyTune 5 presents the most convenient Windows based system performance enhancement and manageability utility. Featuring several powerful yet easy to use tools such as 1) Overclocking for enhancing system performance, 2) C.I.A. and M.I.B. for special enhancement for CPU and Memory, 3) Smart-Fan control for managing fan speed control of both CPU cooling fan and North-Bridge Chipset cooling fan, 4) PC health for monitoring system status.^(Note)

User Interface Overview



	Button / Display	Description
1.	Overclocking	Enters the Overclocking setting page
2.	C.I.A./C.I.A.2 and M.I.B./M.I.B.2	Enters the C.I.A./2 and M.I.B./2 setting page
3.	Smart-Fan	Enters the Smart-Fan setting page
4.	PC Health	Enters the PC Health setting page
5.	GO	Confirmation and Execution button
6.	"Easy Mode" & "Advance Mode"	Toggles between Easy and Advance Mode
7.	Display screen	Display panel of CPU frequency
8.	Function display LEDs	Shows the current functions status
9.	GIGABYTE Logo	Log on to GIGABYTE website
10.	Help button	Display EasyTune™ 5 Help file
11.	Exit or Minimize button	Quit or Minimize EasyTune™ 5 software

(Note) EasyTune 5 functions may vary depending on different motherboards.

4-1-2 Xpress Recovery2 Introduction



Xpress Recovery2 is designed to provide quick backup and restoration of hard disk data. Supporting Microsoft operating systems including Windows XP/2000/NT/98/Me and DOS, and file systems including FAT16, FAT32, and NTFS, Xpress Recovery2 is able to back up data

on hard disks on PATA and SATA IDE controllers. After Xpress Recovery2 is executed from CD-ROM for the first time, it will stay permanent in your hard disk. If you wish to run Xpress Recovery2 later, you can simply press F9 during system bootup to enter Xpress Recovery2 without the CD-ROM.

System requirements:

- 1. Intel x86 platforms
- 2. At least 64M bytes of system memory
- 3. VESA-supported VGA cards

How to use the Xpress Recovery2

Initial access by booting from CD-ROM and subsequent access by pressing the F9 key:

Steps: After entering BIOS Setup, go to Advanced BIOS Feature and set to boot from CD-ROM. Save the settings and exit the BIOS Setup. Insert the provided driver CD into your CD-ROM drive. Upon system restart, the message which says "Boot from CD/DVD:" will appear in the bottom left corner of the screen. Press any key to enter Xpress Recovery2.

After the steps above are completed, subsequent access to Xpress Recovery2 can be made by simply pressing the <F9> key during system power-on.





- If you have already entered Xpress Recovery2 by booting from the CD-ROM, you can enter Xpress Recovery2 by pressing the <F9> key in the future.
- 2. System storage capacity and the reading/writing speed of the hard disk will affect the data backup speed.
- 3. It is recommended that Xpress Recovery2 be immediately installed once you complete installations of OS and all required drivers as well as software.

The Main Screen of Xpress Recovery2



1. RESTORE:

Restore the backed-up data to your hard disk. (This button will not appear if there is no backup file.)

2. BACKUP:

Back up data from hard disk.

3. REMOVE:

Remove previously-created backup files to release disk space.

(This button will not appear if there is no backup file.)

4. REBOOT:

Exit the main screen and restart the system.

Limitations:

- 1. Not compatible to Xpress Recovery.
- 2. For the use of Xpress Recovery2, a primary partition must be reserved.
- 3. Xpress Recovery2 will store the backup file at the end of the hard disk, so free space available on the hard disk for the backup file must be allocated in advance. (A minimum 4GB is recommended but the actual space is dependent on the size of the data to be backed up)
- Capable of backing up hard disks installed with Windows operating systems including DOS and Windows XP/2000/NT/9x/Me.
- 5. USB hard disks are currently not supported.
- 6. Does not support RAID/AHCI (class code 0104/0106) hard disks.
- 7. Capable of backing up and restoring only the first physical hard disk.

Hard disks detection sequence is as follows:

- a. PATA IDE primary channel
- b. PATA IDE secondary channel
- c. SATA IDE channel 1
- d. SATA IDE channel 2
- e. SATA IDE channel 3
- f. SATA IDE channel 4

Precautions:

- 1. When using hard disks with more than 128G under Windows 2000, be sure to execute the EnableBigLba.exe program from the driver CD before data backup.
- 2. It is normal that data backup takes longer time than data restoration.
- 3. Xpress Recovery2 is compliant with the GPL regulations.
- 4. On a few motherboards based on Nvidia chipsets, BIOS update is required for Xpress Recovery2 to correctly identify RAID and SATA IDE mode. Please contact your motherboard manufacturer.

4-1-3 Flash BIOS Method Introduction



Method 1 : Q-Flash[™] Utility

Q-Flash[™] is a BIOS flash utility embedded in Flash ROM. With this utility, users only have to stay in the BIOS menu when they want to update BIOS. Q-Flash[™] allows users to flash BIOS without any utility in

DOS or Windows. Using Q-Flash[™] indicating no more fooling around with any complicated instructions and operating system since it is in the BIOS menu.



Please note that because updating BIOS has potential risk, please do it with caution!! We are sorry that Gigabyte Technology Co., Ltd is not responsible for damages of system because of incorrect manipulation of updating BIOS to avoid any claims from end-users.

Before You Begin:

Before you start updating BIOS with the Q-Flash™ utility, please follow the steps below first.

- 1. Download the latest BIOS for your motherboard from Gigabyte's website.
- Extract the BIOS file downloaded and save the BIOS file (the one with model name.Fxx. For example, 8KNXPU.Fba) to a floppy disk.
- 3. Reboot your PC and press Del to enter BIOS menu.

The BIOS upgrading guides below are separated into two parts. If your motherboard has dual-BIOS, please refer to **Part One**. If your motherboard has single-BIOS, please refer to **Part Two**.

Part One:

Updating BIOS with Q-Flash[™] Utility on Dual BIOS Motherboards.

Some of Gigabyte motherboards are equipped with dual BIOS. In the BIOS menu of the motherboards supporting Q-Flash and Dual BIOS, the Q-Flash utility and Dual BIOS utility are combined in the same screen. This section only deals with how to use Q-Flash utility.

In the following sections, we take GA-8KNXP Ultra as the example to guide you how to flash BIOS from an older version to the latest version. For example, from Fa3 to Fba.



The BIOS file is Fa3 before updating

Entering the Q-Flash[™] utility:


Step1: To use Q-Flash utility, you must press Del in the boot screen to enter BIOS menu.

CMOS Setup Utility-Copyright (C) 1984-2004 Award Software			
► St	tandard CMOS Features	Select Language	
► A	dvanced BIOS Features	Load Fail-Safe Defaults	
III ► In	Integrated Peripherals Load Optimized Defaults		
► P	Power Management Setup Set Supervisor Password		
▶ Pi	PnP/PCI Configurations Set User Password		
▶ P	C Health Status	Save & Exit Setup	
► M	IB Intelligent Tweaker(M.I.T.)	Exit Without Saving	
ESC.	FSC. Quit F3: Change Language		
F8: Dual BIOS/Q-Flash F10: Save & Exit Setup			
Time, Date, Hard Disk Type			

Step 2: Press F8 button on your keyboard and then Y button to enter the Dual BIOS/Q-Flash utility.

Exploring the Q-Flash[™] / Dual BIOS utility screen

The Q-Flash / Dual BIOS utility screen consists of the following key components.

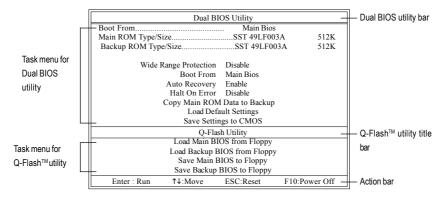

Task menu for Dual BIOS utility:

Contains the names of eight tasks and two item showing information about the BIOS ROM type. Blocking a task and pressing Enter key on your keyboard to enable execution of the task.

Task menu for Q-Flash utility:

Contains the names of four tasks. Blocking a task and pressing Enter key on your keyboard to enable execution of the task.

Action bar:

Contains the names of four actions needed to operate the Q-Flash/Dual BIOS utility. Pressing the buttons mentioned on your keyboards to perform these actions.

Using the Q-Flash[™] utility:

This section tells you how to update BIOS using the Q-Flash utility. As described in the "Before you begin" section above, you must prepare a floppy disk having the BIOS file for your motherboard and insert it to your computer. If you have already put the floppy disk into your system and have entered the Q-Flash utility, please follow the steps below to flash BIOS.

Steps:

Press arrow buttons on your keyboard to move the light bar to "Load Main BIOS from Floppy" item in 1. the Q-Flash menu and press Enter button.

Later, you will see a box pop up showing the BIOS files you previously downloaded to the floppy disk.




If you want to save the current BIOS for backup purpose, you can begin Step 1 with "Save Main BIOS to Floppy" item.

2. Move to the BIOS file you want to flash and press Enter.


In this example, we only download one BIOS file to the floppy disk so only one BIOS file, 8KNXPU.Fba, is listed.



Please confirm again you have the correct BIOS file for your motherboard.

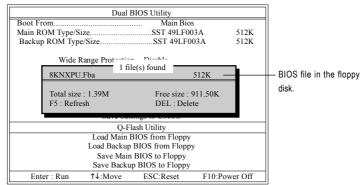

After pressing **Enter**, you'll then see the progress of reading the BIOS file from the floppy disk.

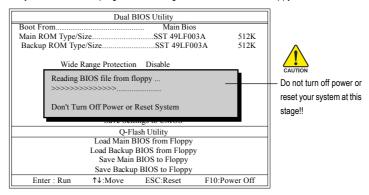


After BIOS file is read, you'll see a confirmation dialog box asking you "Are you sure to update BIOS?"

3. Press Y button on your keyboard after you are sure to update BIOS.

Then it will begin to update BIOS. The progress of updating BIOS will be displayed.

Please do not take out the floppy disk when it begins flashing BIOS.

4. Press any keys to return to the Q-Flash menu when the BIOS updating procedure is completed.

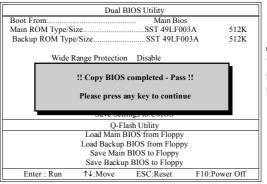

You can repeat Step 1 to 4 to flash the backup BIOS, too.

 Press Esc and then Y button to exit the Q-Flash utility. The computer will restart automatically after you exit Q-Flash.

Dual BIOS Utility				
Boot From Main Bios				
Main ROM Type/S	ize	SST 49LF003	3A 512K	
Backup ROM Typ	Backup ROM Type/SizeSST 49LF003A 512K			
Wide Range Protection Disable				
Are you sure to RESET ? [Enter] to continure or [Esc] to abort				
Save Settings to Chrob				
Q-Flash Utility				
Load Main BIOS from Floppy				
Load Backup BIOS from Floppy				
Save Main BIOS to Floppy				
Save Backup BIOS to Floppy				
Enter : Run	↑↓:Move	ESC:Reset	F10:Power Off	

After system reboots, you may find the BIOS version on your boot screen becomes the one you flashed.

	Award Modular BIOS v6.00PG, An Energy Star Ally Copyright (C) 1984-2003, Award Software, Inc.	
The BIOS file	Intel i875P AGPset BIOS for 8KNXP Ultra Fba Check System Health OK, VCore = 1,5250	DPS 2
becomes Fab after	Main Processor : Intel Pentium(R) 4 1.6GHz (133x12) <cpuid 0027="" 0f27="" :="" id="" patch=""></cpuid>	Dual Power System
updating.	Memory Testing : 131072K OK	
	Memory Frequency 266 MHz in Single Channel Primary Master : FUJITSU MPE3170AT ED-03-08	
	Primary Slave : None Secondary Master : CREATIVEDVD-RM DVD1242E BC101 Secondary Slave : None	
	Press DEL to enter SETUP / Dual BIOS / Q-Flash / F9 For Xpress Recovery 09/23/2003-i875P-6A79BG03C-00	

6. Press Del to enter BIOS menu after system reboots. When you are in BIOS menu, move to Load Optimized Defaults item and press Enter to load BIOS Optimized Defaults. Normally the system redetects all devices after BIOS has been upgraded. Therefore, we highly recommend reloading the BIOS defaults after BIOS has been upgraded.

CMOS Setup Utility-Copyright (C) 1984-2004 Award Software		
 Standard CMOS Features 	Select Language	
 Advanced BIOS Features 	Load Fail-Safe Defaults	
 Integrated Peripherals 	Load Optimized Defaults	
Power Mana; PnP/PCI Cor Load Optimized Defaults (Y/N)? Y		
 PC Health Status 	Save & Exit Setup	
 MB Intelligent Tweaker(M.I.T.) 	Exit Without Saving	
ESC: Quit	F3: Change Language	
F8: Dual BIOS/Q-Flash	F10: Save & Exit Setup	
Load Optimized Defaults		

Press Y on your keyboard to load defaults.

 Select Save & Exit Setup item to save the settings to CMOS and exit the BIOS menu. System will reboot after you exit the BIOS menu. The procedure is completed.

CMOS Setup Utility-Copyright (C) 1984-2004 Award Software		
Standard CMOS Features Advanced BIOS Features Integrated Peripharale Power Mana: Save to CMOS and	Select Language Load Fail-Safe Defaults Load Ontimized Defaulte FXIT (V/N)? V	
 PnP/PCI Cor PC Health Status MB Intelligent Tweaker(M.I.T.) 	Cor Lor Save & Exit Setup	
ESC: Quit F8: Dual BIOS/Q-Flash	F3: Change Language F10: Save & Exit Setup	
Save Data to CMOS		

Press Y on your keyboard to save and exit.


Part Two:

Updating BIOS with Q-Flash[™] Utility on Single-BIOS Motherboards.

This part guides users of single-BIOS motherboards how to update BIOS using the Q-Flash™utility.

CMOS Setup Utility-Copyright (C) 1984-2004 Award Software		
 Standard CMOS Features 	Top Performance	
 Advanced BIOS Features 	Load Fail-Safe Defaults	
 Integrated Peripherals 	Load Optimized Defaults	
 Power Management Setup 	Set Supervisor Password	
 PnP/PCI Configurations 	Set User Password	
PC Health Status	Save & Exit Setup	
MB Intelligent Tweaker(M.I.T.) Exit Without Saving		
F3: Change Language		
F8: Q-Flash F10: Save & Exit Setup		
Time, Date, Hard Disk Type		

Exploring the Q-Flash[™] utility screen



The Q-FlashBIOS utility screen consists of the following key components.

Task menu for Q-Flash utility:

Contains the names of three tasks. Blocking a task and pressing Enter key on your keyboard to enable execution of the task.

Action bar:

Contains the names of four actions needed to operate the Q-Flash utility. Pressing the buttons mentioned on your keyboards to perform these actions.

Using the Q-Flash[™] utility:

This section tells you how to update BIOS using the Q-Flash utility. As described in the "Before you begin" section above, you must prepare a floppy disk having the BIOS file for your motherboard and insert it to your computer. If you have already put the floppy disk into your system and have entered the Q-Flash utility, please follow the steps below to flash BIOS.

Steps:

1. Press arrow buttons on your keyboard to move the light bar to "Update BIOS from Floppy" item in the Q-Flash menu and press Enter button.

Later, you will see a box pop up showing the BIOS files you previously downloaded to the floppy disk.




If you want to save the current BIOS for backup purpose, you can begin Step 1 with "Save BIOS to Floppy" item.

2. Move to the BIOS file you want to flash and press Enter.

In this example, we only download one BIOS file to the floppy disk so only one BIOS file, 8GE800.F4, is listed.


Please confirm again you have the correct BIOS file for your motherboard.

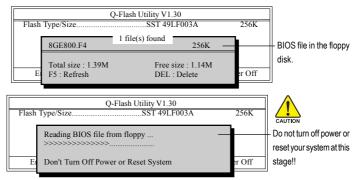


After BIOS file is read, you'll see a confirmation dialog box asking you "Are you sure to update BIOS?"

Please do not take out the floppy disk when it begins flashing BIOS.


3. Press Y button on your keyboard after you are sure to update BIOS. Then it will begin to update BIOS. The progress of updating BIOS will be shown at the same time.



4. Press any keys to return to the Q-Flash menu when the BIOS updating procedure is completed.



5. Press Esc and then Y button to exit the Q-Flash utility. The computer will restart automatically after you exit Q-Flash.

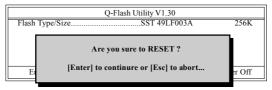

After system reboots, you may find the BIOS version on your boot screen becomes the one you flashed.



6. Press Del to enter BIOS menu after system reboots and "Load BIOS Fail-Safe Defaults". See how to Load BIOS Fail-Safe Defaults, please kindly refer to Step 6 to 7 in Part One.

Congratulation!! You have updated BIOS successfully!!

updating




Method 2 : @BIOS™ Utility

If you do not have a DOS startup disk, we recommend that you use the new @BIOS utility. @BIOS allows users to update their BIOS under Windows. Just select the desired @BIOS server to download the latest version of BIOS.

Fig 1. Installing the @BIOS utility



Fig 3. The @BIOS Utility



1. Methods and steps:

- I. Update BIOS through Internet
 - a. Click "Internet Update" icon
 - b. Click "Update New BIOS" icon
 - c. Select @BIOSTM sever
 - d. Select the exact model name on your motherboard
 - e. System will automatically download and update the BIOS.
- II. Update BIOS NOT through Internet:
 - a. Do not click "Internet Update" icon
 - b. Click "Update New BIOS"
 - c. Please select "All Files" in dialog box while opening the old file.
 - Please search for BIOS unzip file, downloading from internet or any other methods (such as: 8I865G775-G.F1).
 - e. Complete update process following the instruction.

Fig 2. Installation Complete and Run @BIOS



Fig 4. Select the desired @BIOS server



III. Save BIOS

In the very beginning, there is "Save Current BIOS" icon shown in dialog box. It means to save the current BIOS version.

IV. Check out supported motherboard and Flash ROM:

In the very beginning, there is "About this program" icon shown in dialog box. It can help you check out which kind of motherboard and which brand of Flash ROM are supported.

2. Note:

- In method I, if it shows two or more motherboard's model names to be selected, please make sure your motherboard's model name again. Selecting wrong model name will cause the system unbooted.
- II. In method II, be sure that motherboard's model name in BIOS unzip file are the same as your motherboard's. Otherwise, your system won't boot.
- III. In method I, if the BIOS file you need cannot be found in @BIOS[™] server, please go onto Gigabyte's web site for downloading and updating it according to method II.
- IV. Please note that any interruption during updating will cause system unbooted.
- V. Do not use @BIOS and C.O.M. (Corporate Online Management) at the same time.


4-1-4 2 / 4 / 6 Channel Audio Function Introduction

2 Channel Audio Setup

We recommend that you use speakers with amplifier to get the best sound effect if the stereo output is applied.

STEP 1:


Connect the stereo speakers or earphone to "Line Out."

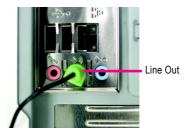

STEP 2:


After installing the audio driver, you'll find a Sound Effect icon on the lower right hand taskbar. Click the icon to select the function.



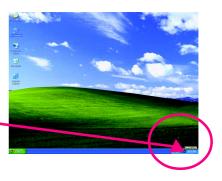

STEP 3:

On the AC97 Audio Configuration menu, click the **Speaker Configuration** tab and select the **2 channel mode for stereo speaker output** check box.





4 Channel Analog Audio Output Mode

STEP 1:

Connect the front channels to "Line Out," the rear channels to "Line In."



STEP 2:

After installing the audio driver, you'll find a Sound Effect icon on the lower right hand taskbar. Click the icon to select the function.





STEP 3:

On the AC97 Audio Configuration menu, click the **Speaker Configuration** tab and select the **4 channel mode for 4 speaker output** check box.

Clear the **Only SURROUND-KIT** check box and press $\mathbf{OK}.$

 4 channel mode for 4 speaker output
 HITI Dero:
 London

 Sourcification
 Conduction

 Ne of Speaker
 Speaker Collegation

 Ne of Speaker
 Speaker Collegation

 Ne of Speaker
 Speaker Collegation

 O Headphone
 Speaker Collegation

 O Headphone
 Speaker Collegation

 O Headphone
 Speaker Collegation


 O Headphone
 Speaker Collegation

 O Explored models to 4 transition
 Speaker Collegation

 O Explored models to 51 speaker
 Mc in

 SPO of protocol
 SPO of protocol

When the **Environment** setting is **None**, the sound would be performed as stereo mode (2-channel output). Please select other settings (ex: **Living Room**) for 4-channel output.

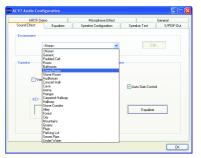


Basic 6 Channel Analog Audio Output Mode

Use the back audio panel to connect the audio output without any additional module.

STEP 1:

Connect the front channels to "Line Out", the rear channels to "Line In", and the Center/Subwoofer channels to "MIC In".

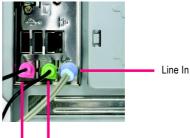



STEP 2:

After installing the audio driver, you'll find a Sound Effect icon on the lower right hand taskbar. Click the icon to select the function.





STEP 3:

output

On the AC97 Audio Configuration menu, click the **Speaker Configuration** tab and select the **6 channel mode for 5.1 speaker output** check box.

Clear the **Only SURROUND-KIT** check box and press **OK**.

6 channel mode for 5.1 speaker



Advanced 6 Channel Analog Audio Output Mode (using Audio Combo Kit, Optional Device):

(Audio Combo Kit provides SPDIF output port : optical & coaxis and SURROUND-KIT : Rear R/L & CEN /Subwoofer)

SURROUND-KIT access analog output to rear channels and Center/Subwoofer channels. It is the best solution if you need 6 channel output, Line In and MIC at the same time. "SURROUND-KIT" is included in the GIGABYTE unique "Audio Combo Kit" as picture.



STEP 1:

Secure the metal bracket of the "Surround Kit" to the chassis back panel with a screw.




STEP 2:

Connect the "SURROUND-KIT" cable to the SUR_CEN connector on the M/B.







STEP 3:

Connect the front channels to back audio panel's "Line Out", the rear channels to SURROUND-KIT's REAR R/L, and the Center/Subwoofer channels to SURROUND-KIT'S SUB CENTER.



STEP 4:

After installing the audio driver, you'll find a Sound Effect icon on the lower right hand taskbar. Click the icon to select the function.






STEP 5:

On the AC97 Audio Configuration menu, click the Speaker Configuration tab and select the 6 channel mode for 5.1 speaker output check box. Select the Only SURROUND-KIT check box and press OK.

Basic & Advanced 6 Channel Analog Audio Output Mode Notes:

When the **Environment** setting is **None**, the sound would be performed as stereo mode (2-channel output). Please select the other settings for 6 channels output.

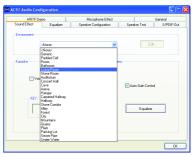

SPDIF Output Device (Optional Device)

A "SPDIF output" connector is available on the motherboard. Cable with rear bracket could link to the "SPDIF output" connector (As picture.) For the further linkage to decoder, rear bracket provides coaxial cable and Fiber connecting port.



STEP 1:


Secure the metal bracket of the SPDIF Output

device to the chassis back panel with a screw.



STEP 2:

Connect the SPDIF OUT device cable to the SPDIFO connector on the motherboard.

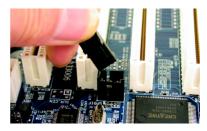

STEP 3: Connect SPDIF to the SPDIF decoder.



4-2 Troubleshooting

Below is a collection of general asked questions. To check general asked questions based on a specific motherboard model, please log on to http://www.gigabyte.com.tw

Question 1: I cannot see some options that were included in previous BIOS after updating BIOS. Why? Answer: Some advanced options are hidden in new BIOS version. Please press Ctrl and F1 keys after entering BIOS menu and you will be able to see these options.

Questions 2: Why is the light of my keyboard/optical mouse still on after computer shuts down? Answer: In some boards, a small amount of electricity is kept on standby after computer shuts down and that's why the light is still on.

Question 3: How do I clear CMOS?

Answer: If your board has a Clear CMOS jumper, please refer to the Clear CMOS steps in the manual. If your board doesn't have such jumper, you can take off the on-board battery to leak voltage to clear CMOS. Please refer to the steps below:

Steps:

- 1. Turn off power.
- 2. Disconnect the power cord from MB.
- Take out the battery gently and put it aside for about 1 minute (Or you can use a metal object to connect the positive and negative pins in the battery holder to makethem short for 5 seconds).
- 4. Re-insert the battery to the battery holder.
- 5. Connect power cord to MB again and turn on power.
- 6. Press Del to enter BIOS and load Fail-Safe Defaults(or load Optimized Defaults).
- 7. Save changes and reboot the system.

Question 4: Why do I still get a weak sound after turning up the speaker to the maximum volume? Answer: Please make sure the speaker you are using is equipped with an internal amplifier. If not, please change another speaker with power/amplifier and try again later.

Question 5: Sometimes I hear different continuous beeps from computer after system boots up. What do these beeps usually stand for?

Answer: The beep codes below may help you identify the possible computer problems. However, they are only for reference purposes. The situations might differ from case to case.

- → AWARD BIOS Beep Codes
 1 short: System boots successfully
 2 short: CMOS setting error
 1 long 1 short: DRAM or M/B error
 1 long 2 short: Monitor or display card error
 1 long 3 short: Keyboard error
 - 1 long 9 short: BIOS ROM error
 - Continuous long beeps: DRAM error
 - Continuous short beeps: Power error



Taiwan (Headquarters) GIGA-BYTE TECHNOLOGY CO., LTD. Address: No.6, Bau Chiang Road, Hsin-Tien, Taipei 231. Taiwan TEL:+886-2-8912-4888 FAX: +886-2-8912-4003 Tech. and Non-Tech. Support (Sales/Marketing) : http://ggts.gigabyte.com.tw WEB address (English): http://www.gigabyte.com.tw WEB address (Chinese): http://www.gigabyte.tw

U.S.A.

G B T INC TEL:+1-626-854-9338 FAX:+1-626-854-9339 Tech. Support: http://rma.gigabyte-usa.com Web address: http://www.gigabyte.us

• Mexico

G.B.T Inc (USA) Tel: +1-626-854-9338 x 215 (Soporte de habla hispano) FAX:+1-626-854-9339 Correo: soporte@gigabyte-usa.com Tech. Support: http://rma.gigabyte-usa.com Web address: http://www.gigabyte-latam.com

• Japan

NIPPON GIGA-BYTE CORPORATION WEB address : http://www.gigabyte.co.jp

Singapore •

GIGA-BYTE SINGAPORE PTE. LTD. WEB address : http://www.gigabyte.com.sg

China

NINGBO G.B.T. TECH. TRADING CO., LTD. WEB address : http://www.gigabyte.cn Shanghai TEL: +86-21-63410999 FAX:+86-21-63410100 Beiiina TEL:+86-10-62102838 FAX:+86-10-62102848 Wuhan TEL: +86-27-87851061 FAX:+86-27-87851330 GuangZhou TEL: +86-20-87540700 FAX: +86-20-87544306 ext 333 Chengdu TEL: +86-28-85236930 FAX: +86-28-85256822 ext. 814 Xian TEL: +86-29-85531943 FAX: +86-29-85539821 Shenyang TEL: +86-24-83992901 FAX:+86-24-83992909 India GIGABYTE TECHNOLOGY (INDIA) LIMITED WEB address : http://www.gigabyte.in

Australia

GIGABYTE TECHNOLOGY PTY I TD WEB address : http://www.gigabyte.com.au

Germany	Russia
G.B.T. TECHNOLOGY TRADING GMBH	Moscow Representative Office Of GIGA-BYTE Technology
WEB address : http://www.gigabyte.de	Co., Ltd.
• U.K.	
	WEB address : http://www.gigabyte.ru
G.B.T. TECH. CO., LTD.	Latvia
WEB address : http://www.giga-byte.co.uk	GIGA-BYTE Latvia
The Netherlands	WEB address : http://www.gigabyte.com.lv
GIGA-BYTE TECHNOLOGY B.V.	Poland
WEB address : http://www.giga-byte.nl	Office of GIGA-BYTE TECHNOLOGY Co., Ltd. in POLANE
France	WEB address : http://www.gigabyte.pl
GIGABYTE TECHNOLOGY FRANCE	Ukraine
WEB address : http://www.gigabyte.fr	WEB address : http://www.gigabyte.kiev.ua
Italy	Romania
WEB address : http://www.giga-byte.it	Representative Office Of GIGA-BYTE Technology Co., Ltd
Spain	in Romania
GIGA-BYTE SPAIN	WEB address : http://www.gigabyte.com.ro
WEB address : http://www.giga-byte.es	Serbia & Montenegro
Czech Republic	Representative Office Of GIGA-BYTE Technology Co., Ltd
Representative Office Of GIGA-BYTE Technology Co., Ltd.	in SERBIA & MONTENEGRO
in CZECH REPUBLIC	WEB address : http://www.gigabyte.co.yu
WEB address : http://www.gigabyte.cz	
• Turkey	
Representative Office Of GIGA-BYTE Technology Co., Ltd.	
in TURKEY	
WEB address : http://www.gigabyte.com.tr	

• GIGABYTE Global Service System



To submit a technical or non-technical (Sales/ Marketing) question, please link to : http://ggts.gigabyte.com.tw Then select your language to enter the system.