

Preface

Copyright

This publication, including all photographs, illustrations and software, is protected under international copyright laws, with all rights reserved. Neither this manual, nor any of the material contained herein, may be reproduced without written consent of the author.

Version 3.3L

Disclaimer

The information in this document is subject to change without notice. The manufacturer makes no representations or warranties with respect to the contents hereof and specifically disclaims any implied warranties of merchantability or fitness for any particular purpose. The manufacturer reserves the right to revise this publication and to make changes from time to time in the content hereof without obligation of the manufacturer to notify any person of such revision or changes.

Trademark Recognition

Microsoft, MS-DOS and Windows are registered trademarks of Microsoft Corp.

MMX, Pentium, Pentium-II, Pentium-III, Celeron are registered trademarks of Intel Corporation.

Other product names used in this manual are the properties of their respective owners and are acknowledged.

Federal Communications Commission (FCC)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment onto an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Shielded interconnect cables and a shielded AC power cable must be employed with this equipment to ensure compliance with the pertinent RF emission limits governing this device. Changes or modifications not expressly approved by the system's manufacturer could void the user's authority to operate the equipment.

Declaration of Conformity

This device complies with part 15 of the FCC rules. Operation is subject to the following conditions:

- This device may not cause harmful interference, and
- This device must accept any interference received, including interference that may cause undesired operation.

Canadian Department of Communications

This class B digital apparatus meets all requirements of the Canadian Interference-causing Equipment Regulations.

Cet appareil numérique de la classe B respecte toutes les exigences du Règlement sur le matériel brouilleur du Canada.

About the Manual

The manual consists of the following:

| | |
|---|---|
| Chapter 1 Introducing the Mainboard | Describes features of the mainboard, and provides a shipping checklist. Go to ⇒ page 1 |
| Chapter 2 Installing the Mainboard | Describes installation of mainboard components. Go to ⇒ page 5 |
| Chapter 3 Using BIOS | Provides information on using the BIOS Setup Utility. Go to ⇒ page 23 |
| Chapter 4 Using the Mainboard Software | Describes the mainboard software. Go to ⇒ page 35 |

TABLE OF CONTENTS

| | |
|---|-----------|
| Preface | i |
| Features and Packing List Translations | ii |
| CHAPTER 1 | 1 |
| Introducing the Mainboard | 1 |
| <i>Introduction</i> | 1 |
| <i>Checklist</i> | 1 |
| Standard Items | 1 |
| <i>Features</i> | 2 |
| <i>Choosing a Computer Case</i> | 3 |
| <i>Mainboard Components</i> | 4 |
| CHAPTER 2 | 5 |
| Installing the Mainboard | 5 |
| <i>Safety Precautions</i> | 5 |
| <i>Quick Guide</i> | 5 |
| <i>Installing the Mainboard in a Case</i> | 6 |
| <i>Checking Jumper Settings</i> | 6 |
| Setting Jumpers | 6 |
| Checking Jumper Settings | 7 |
| Jumper Settings | 7 |
| <i>Connecting Case Components</i> | 9 |
| The Panel Connectors | 10 |
| <i>Installing Hardware</i> | 11 |
| Installing the Processor | 11 |
| Installing Memory Modules | 14 |
| Installing a Hard Disk Drive/CD-ROM | 15 |
| Installing a Floppy Diskette Drive | 17 |
| Installing Add-on Cards | 17 |
| Connecting Optional Devices | 19 |
| <i>Connecting I/O Devices</i> | 21 |
| External Connector Color Coding | 22 |
| CHAPTER 3 | 23 |
| Using BIOS | 23 |
| <i>About the Setup Utility</i> | 23 |
| The Standard Configuration | 23 |
| Entering the Setup Utility | 24 |
| <i>Using BIOS</i> | 25 |
| Standard CMOS Features | 25 |
| Advanced Setup Page | 26 |
| Power Management Setup Page | 28 |

| | |
|-------------------------------------|----|
| PCI/Plug and Play Setup Page..... | 30 |
| Load Optimal Settings..... | 31 |
| Load Best Performance Settings..... | 31 |
| Features Setup Page..... | 31 |
| CPU PnP Setup Page..... | 33 |
| Hardware Monitor Page..... | 33 |
| Change Password..... | 34 |
| Exit..... | 34 |

CHAPTER 4 **35**

| | |
|---|-----------|
| Using the Mainboard Software | 35 |
| <i>About the Software CD-ROM</i> | 35 |
| <i>Auto-installing under Windows 98</i> | 35 |
| Running Setup..... | 36 |
| <i>Manual Installation</i> | 38 |
| <i>Utility Software Reference</i> | 38 |

Chapter 1

Introducing the Mainboard

Introduction

Congratulations on purchasing the P4VXASD2 mainboard. This mainboard has a **Socket-478** processor socket for **Intel Pentium 4** type of processors supporting front side bus (FSB) speeds up to **400 MHz**.

This mainboard incorporates either the **VIA VT8753A (P4X266A) or VT8753 (P4X266)** Northbridge and **VT8233** Southbridge chipsets that support **AC 97 audio codec** and provide **Ultra DMA 33/66/100** function. This mainboard has four 32-bit PCI slots, one **4xAGP** slot, one **CNR** (Communications and Networking Riser) slot, and an onboard **10BaseT/100BaseTX Network** interface (optional).

This mainboard also has an optional chipset **VIA VT6202** supporting the auxiliary **USB 2.0**, which provides higher bandwidth and is backward compatible with USB1.1. It implements the **Universal Serial Bus Specification Revision 2.0** and is compliant with **UHCI 1.1** and **EHCI 0.95**. There is a full set of I/O ports including two PS/2 ports for mouse and keyboard, two serial ports, one parallel port, one MIDI/game port and maximum eight USB ports (**two back-panel USB 2.0** ports, onboard USB headers providing maximum six extra ports: header **USB3 for USB 2.0** and headers **USB1, USB2 for USB 1.1**). By means of the Extended USB Module connected to the mainboard, you can make maximum six extra USB ports.

Checklist

Compare the mainboard's package contents with the following checklist:

Standard Items

- One mainboard
- This User's Manual
- One diskette drive ribbon cable
- One IDE drive ribbon cable
- Software support CD
- One Retention Module

Features

| | |
|---------------------------|--|
| Processor | <p>The P4VXASD2 mainboard includes a Socket 478 that has the following features:</p> <ul style="list-style-type: none"> • Supports Intel Pentium 4 series CPUs • Supports up to 400 MHz Front-Side Bus |
| Chipset | <p>There are VT8753 Northbridge and VT8233 Southbridge in this chipset in accordance with an innovative and scalable architecture with proven reliability and performance. A few of the chipset's advanced features are:</p> <ul style="list-style-type: none"> • An advanced V-Link memory controller architecture that provides the bandwidth up to 266 MB/s and performance necessary for even the most demanding Internet and 3D graphics • Support for an 4xAGP interface providing vivid 3D graphics and video performance • An ATA 100 interface on the VT8233 chipset, which helps boost system performance by providing a high-speed connection to ATA 100 Hard Disk Drives, delivering maximum sustained data transfer rates of 100 MB/sec <p>Additional key features include support for six USB ports, an AC 97 link for audio and modem, hardware monitoring, and ACPI/OnNow power management.</p> <hr/> <p>Note: This mainboard incorporates either VT8753A or VT8753 Northbridge chipset.</p> |
| Memory | <p>The mainboard accommodates 2 DDR + 2 SDR 168 pin, 3.3V DIMM sockets with a total capacity of 1 GB system memory.</p> |
| VGA | <p>This mainboard includes a 4xAGP slot that provides eight times the bandwidth of the original AGP specification. AGP technology provides a direct connection between the graphics sub-system and memory so that the graphics do not have to compete for processor time with other devices on the PCI bus.</p> |
| AC' 97 Audio Codec | <p>The AC 97 Audio codec is compliant with the AC 97 2.2 specification, and supports 18-bit ADC (Analog Digital Converter) and DAC (Digital Analog Converter) resolution as well as 18-bit stereo full-duplex codec with independent and variable sampling rates.</p> |
| Expansion Options | <ul style="list-style-type: none"> • Four 32-bit PCI slots capable of Ultra DMA bus mastering with transfer rates of 33/66/100 MB/sec • An 4xAGP slot • A CNR (Communications and Networking Riser) slot |
| Integrated I/O | <p>The mainboard has a full set of I/O ports and connectors:</p> <ul style="list-style-type: none"> • Two PS/2 ports for mouse and keyboard • Two serial ports • One parallel port • One MIDI/game port • Eight USB ports (two back-panel USB 2.0 ports, onboard USB headers providing maximum six extra ports: header USB3 for USB 2.0 and headers USB1, USB2 for USB 1.1) |

| | |
|---|--|
| | <ul style="list-style-type: none"> • Audio jacks for microphone, line-in and line-out |
| Built-in Ethernet LAN (optional) | <ul style="list-style-type: none"> • Built-in 10BaseT/100BaseTX Ethernet LAN • VT8233 integrates Fast Ethernet MAC and VT6013 LAN PHY in compliance with IEEE802.3u 100BASE-TX, 10BASE-T and ANSI X3.263 TP-PMD standards • In compliance with ACPI 1.0 and the Network Device Class Power Management 1.0 • High Performance achieved by 100Mbps clock generator and data recovery circuit for 100Mbps receiver |
| USB 2.0 (optional) | <p>The VIA VT6202 PCI USB 2.0 Controller is compliant with Universal Serial Bus Specification Revision 2.0.</p> <p>The USB 2.0 supports data transfer rates up to 480Mb/sec for high-speed devices and specifies a microframe that will be 1/8th of a 1msec frame. This allows the USB 2.0 devices to have small buffers even at high data rates.</p> <p>The USB 1.1 connectors and other full speed cables can support the higher speed of USB 2.0 without any changes.</p> <p>The chipset has the following advanced USB features:</p> <ul style="list-style-type: none"> • Compliant with Enhanced Host Controller Interface (EHCI) Specification Revision 0.95 and Universal Host Controller Interface (UHCI) Specification Revision 1.1 • PCI multi-function device consists of two UHCI Host Controllers for full/low-speed signaling and one EHCI Host Controller core for high-speed signaling • Supports PCI-Bus Power Management Interface Specification release 1.1 • Legacy support for all downstream facing ports |
| BIOS Firmware | <p>This mainboard uses AMI BIOS that enables users to configure many system features including the following:</p> <ul style="list-style-type: none"> • Power management • Wake-up alarms • CPU parameters and memory timing <p>The firmware can also be used to set parameters for different processor clock speeds.</p> |


Choosing a Computer Case

There are many types of computer cases on the market. The mainboard complies with the specifications for the ATX system case. Some features on the mainboard are implemented by cabling connectors on the mainboard to indicators and switches on the system case. Ensure that your case supports all the features required. The mainboard can support one or two floppy diskette drives and four enhanced IDE drives. Ensure that your case has sufficient power and space for all the drives that you intend to install.

Most cases have a choice of I/O templates in the rear panel. Make sure that the I/O template in the case matches the I/O ports installed on the rear edge of the mainboard.

This mainboard has an ATX form factor of 305 x 244 mm. Choose a case that accommodates this form factor.

Mainboard Components

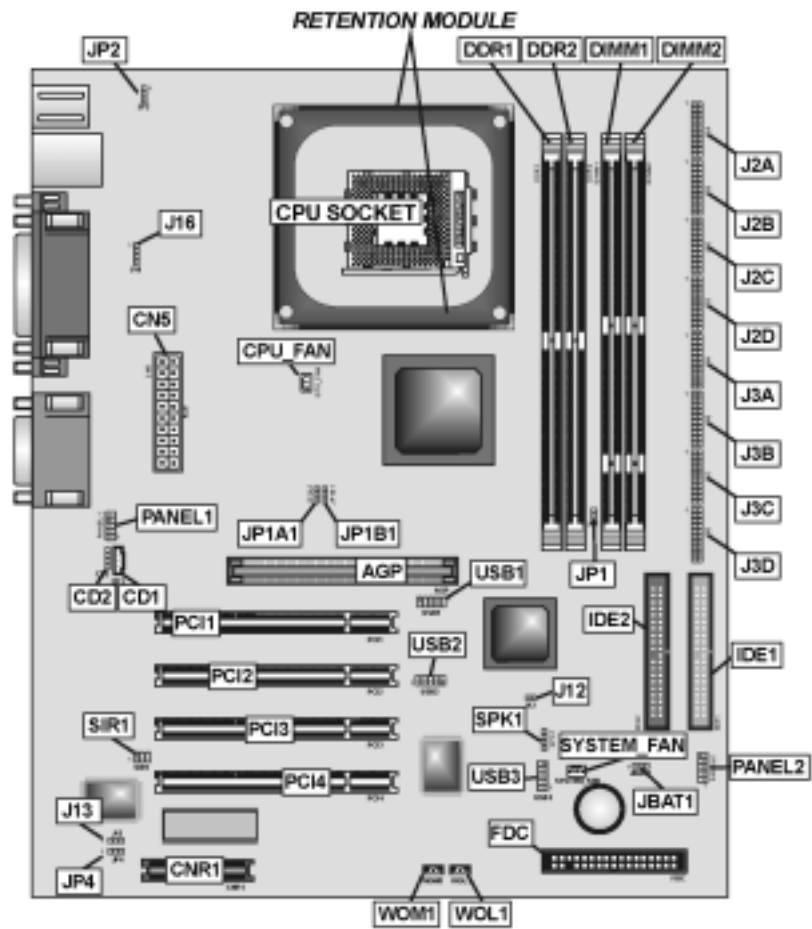

Chapter 2

Installing the Mainboard

Safety Precautions

Follow these safety precautions when installing the mainboard:

- Wear a grounding strap attached to a grounded device to avoid damage from static electricity.
- Discharge static electricity by touching the metal case of a safely grounded object before working on the mainboard.
- Leave components in the static-proof bags they came in.
- Hold all circuit boards by the edges. Do not bend circuit boards.

Quick Guide

This Quick Guide suggests the steps you can take to assemble your system with the mainboards.

The following table provides a reference for installing specific components:

| | |
|--|---------------|
| Locating Mainboard Components | Go to page 4 |
| Installing the Mainboard in a Case | Go to page 6 |
| Setting Jumpers | Go to page 6 |
| Installing Case Components | Go to page 9 |
| Installing the CPU | Go to page 11 |
| Installing Memory | Go to page 14 |
| Installing a HDD and CD-ROM Drive | Go to page 14 |
| Installing a FDD | Go to page 17 |
| Installing Add-on Cards | Go to page 17 |
| Connecting Options | Go to page 19 |
| Connecting Peripheral (I/O) Devices | Go to page 21 |

Installing the Mainboard in a Case


Refer to the following illustration and instructions for installing the mainboard in a case:

This illustration shows an example of a mainboard being installed in a tower-type case:

Note: Do not overtighten the screws as this can stress the mainboard.

Most system cases have mounting brackets installed in the case, which correspond to the holes in the mainboard. Place the mainboard over the mounting brackets and secure the mainboard onto the mounting brackets with screws.

2. Secure the mainboard with screws where appropriate.

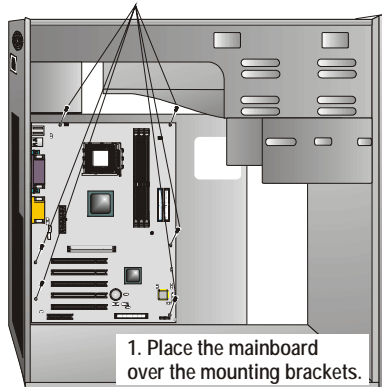

Ensure that your case has an I/O template that supports the I/O ports and expansion slots on your mainboard.

Checking Jumper Settings


This section explains how to set jumpers for correct configuration of the mainboard.

Setting Jumpers


Use the mainboard jumpers to set system configuration options. Jumpers with more than one pin are numbered. When setting the jumpers, ensure that the jumper caps are placed on the correct pins.

The illustrations below show a 2-pin jumper. When the jumper cap is placed on both pins, the jumper is **SHORT**. If you remove the jumper cap, or place the jumper cap on just one pin, the jumper is **OPEN**.


This illustration shows a 3-pin jumper. Pins 1 and 2 are **SHORT**.

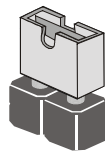

Short

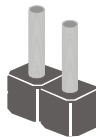


Open

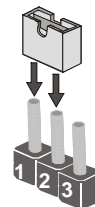





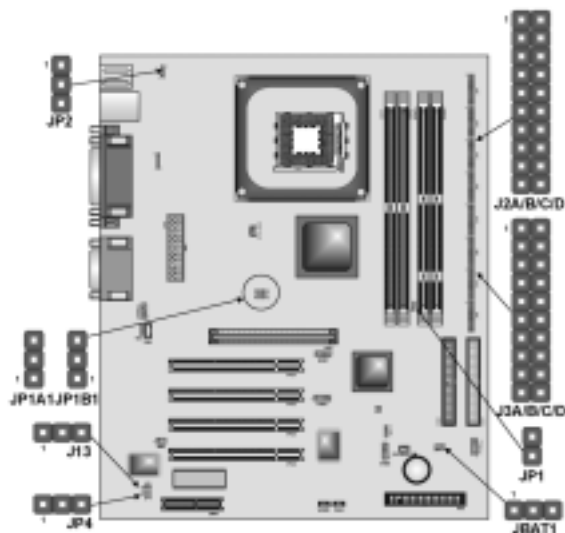




Checking Jumper Settings

The following illustration shows the location of the mainboard jumpers. Pin 1 is labeled.



Jumper Settings

| Jumper | Description | Setting (default) |
|--------|--------------------|--|
| JBAT1 | Clear CMOS jumper | 1-2: Normal 2-3: Clear CMOS JBAT1 1  |
| JP1A1 | CPU Clock | Short 1-2: 100M Open 2-3: 133M JP1A1 1  |
| JP1B1 | CPU Clock | Short 2-3: 100M Open 1-2: 133M JP1B1 1  |
| JP1 | DRAM Voltage (VCC) | Short 1-2: 3V (SDR) Open 1-2: 2.5V (DDR) JP1  |

| | | | |
|--------------------------|--------------------------------------|---|---|
| J2A J2B J2C J2D | DDR/SDR DRAM Type Selector | <i>Short all</i> <i>J2A/B/C/D:</i> <i>DDR1, DDR2</i> <i>Open all</i> <i>J2A/B/C/D:</i> <i>DIMM1, DIMM2</i> | J2A/B/C/D  |
| J3A J3B J3C J4D | DDR/SDR DRAM Type Selector | <i>Short all</i> <i>J3A/B/C/D:</i> <i>DDR1, DDR2</i> <i>Open all</i> <i>J3A/B/C/D:</i> <i>DIMM1, DIMM2</i> | J3A/B/C/D  |
| JP2 | Wake on Keyboard/ USB activity | <i>Short 1-2: 5V</i> <i>Short 2-3: 5VSB</i> | JP2  |
| J13 | Flash ROM Volt- age (VCC) | <i>Short 1-2: 5V</i> <i>Short 2-3: 3.3V</i> | J13  |
| JP4 | Flash ROM Size | <i>Short 1-2: 2M</i> <i>Short 2-3: 4M</i> | JP4  |

JBAT1: Clear CMOS Jumper

Use this jumper to clear the contents of the CMOS memory. You may need to clear the CMOS memory if the settings in the Setup Utility are incorrect and prevent your mainboard from operating. To clear the CMOS memory, disconnect all the power cables from the mainboard and then move the jumper cap into the CLEAR setting for a few seconds.

JP1: DRAM Voltage (VCC)

This jumper enables to select voltage of DRAM.

JP1A1: CPU Clock

This jumper enables to select CPU frequency.

JP1B1: CPU Clock

This jumper enables to select CPU frequency.

J2A/J2B/J2C/J2D: DDR/SDR DRAM Type Selector

This jumper enables to select the type of DDR or SDR DRAM.

J3A/J3B/J3C/J3D: DDR/SDR DRAM Type Selector

This jumper enables to select the type of DDR or SDR DRAM.

JP2: Wake on Keyboard/USB activity

This jumper enables any USB keyboard activity to power up a system previously in a standby or sleep state.

J13: Flash ROM Voltage (VCC)


This jumper enables to select voltage for Flash ROM.

JP4: Flash ROM Size

This jumper enables to select size for Flash ROM.

Connecting Case Components

After you have installed the mainboard into a case, you can begin connecting the mainboard components. Refer to the following:
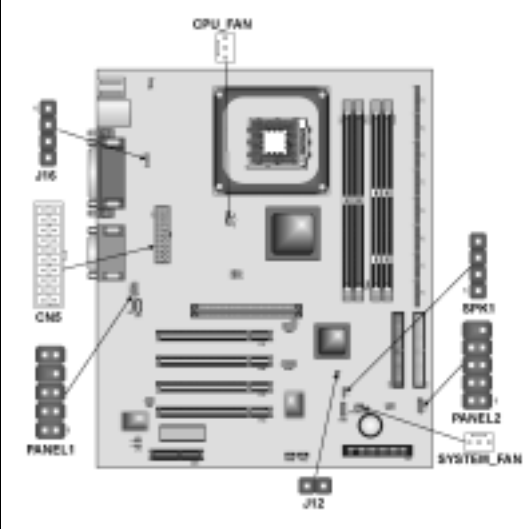
| | |
|---|---|
| <ol style="list-style-type: none">1. Connect the case power supply connector to CN5.2. Connect the CPU cooling fan cable to CPU_FAN.3. Connect the case cooling fan connector to SYSTEM_FAN.4. Connect the case switches and indicator LEDs to the PANEL1/ PANEL2 header.5. Connect the case speaker cable to SPK1.6. Connect the case sleep switch cable to J12.7. Connect the case LAN LED cable to J16. |  |
|---|---|

SPK1: Speaker Connector

Connect the cable from the PC speaker to the SPK1 header on the mainboard.

| Pin | Signal Name |
|-----|-------------|
| 1 | SPKR |
| 2 | NC |
| 3 | GND |
| 4 | +5V |

J12: Sleep Switch

This header is connected to the sleep button for suspending the computer's activity if pushing the button. Or, the computer is automatically suspended after passing a period of time.

| Pin | Signal Name |
|-----|-------------|
| 1 | -EXTSMI |
| 2 | GND |

J16: LAN LED Indicator

This connector is attached to LAN device that needs a LED indicator.


| Pin | Signal Name |
|-------|-------------|
| 1, +2 | Link LED |
| +3, 4 | ACT LED |

The Panel Connectors

The panel connector (PANEL1 and PANEL2) provides a standard set of switch and LED connectors commonly found on ATX or micro-ATX cases. Refer to the table below for information:


PANEL1

| Device | Pins |
|--------------|------|
| Line Out (L) | 9,10 |
| Line Out (R) | 5, 6 |
| MIC In | 1, 2 |

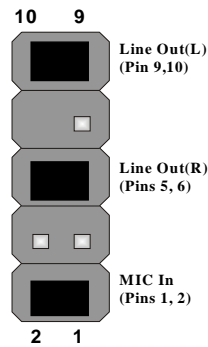

PANEL2

| Device | Pins |
|---------------------|--------|
| Empty | 10 |
| N/C | 9 |
| Power ON/OFF | 6, 8 |
| Reset Switch | 5, 7 |
| Green LED Indicator | 2, 4 |
| HDD LED | +1, -3 |

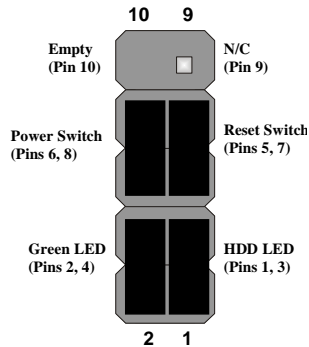

Note: The plus sign (+) indicates a pin which must be connected to a positive voltage.

Installing Hardware

Installing the Processor

Caution: When installing a CPU heatsink and cooling fan make sure that you DO NOT scratch the mainboard or any of the surface-mount resistors with the clip of the cooling fan. If the clip of the cooling fan scrapes across the mainboard, you may cause serious damage to the mainboard or its components.

On most mainboards, there are small surface-mount resistors near the processor socket, which may be damaged if the cooling fan is carelessly installed.

Avoid using cooling fans with sharp edges on the fan casing and the clips. Also, install the cooling fan in a well-lit work area so that you can clearly see the mainboard and processor socket.

Before installing the Processor

This mainboard automatically determines the CPU clock frequency and system bus frequency for the processor. You may be able to change these settings by making changes to jumpers on the mainboard, or changing the settings in the system Setup Utility. We strongly recommend that you do not overclock processors or other components to run faster than their rated speed.


Warning: Overclocking components can adversely affect the reliability of the system and introduce errors into your system. Overclocking can permanently damage the mainboard by generating excess heat in components that are run beyond the rated limits.

This mainboard has a Socket 478 processor socket. When choosing a proc-

essor, consider the performance requirements of the system. Performance is based on the processor design, the clock speed and system bus frequency of the processor, and the quantity of internal cache memory and external cache memory.

CPU Installation Procedure




The following illustration shows CPU installation components:

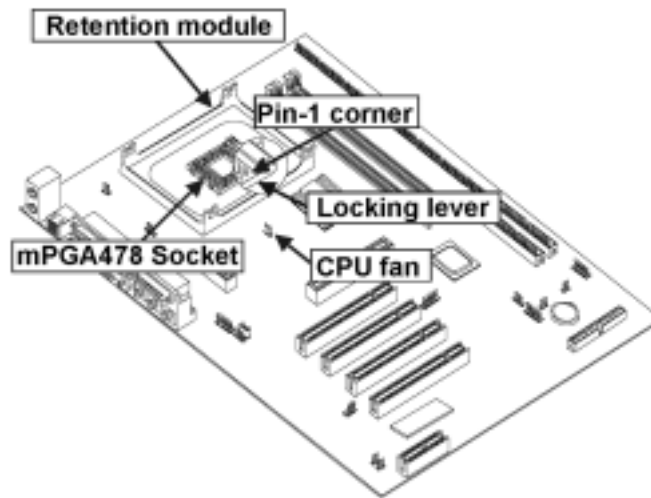

Note: The pin-1 corner is marked with an arrow ▼

Follow these instructions to install the CPU:

| | |
|---|--|
| <p>1. Pull the CPU socket locking lever away from the socket to unhook it and raise the locking lever to the upright position.</p> | <p>The diagram shows the 'Locking lever' being moved away from the 'mPGA478 Socket' and raised into an upright position. The 'Pin-1 corner' is also labeled.</p> |
| <p>2. Match the corner on the CPU marked with an arrow with pin-1 on the CPU socket (the corner with the pinhole noticeably missing). Insert the processor into the socket. Do not use force.</p> | |
| <p>3. Lower the heatsink over the CPU.</p> | |
| <p>4. Lower the CPU cooling fan onto the heatsink.</p> | |
| <p>5. Apply thermal grease to the top of the CPU.</p> | |
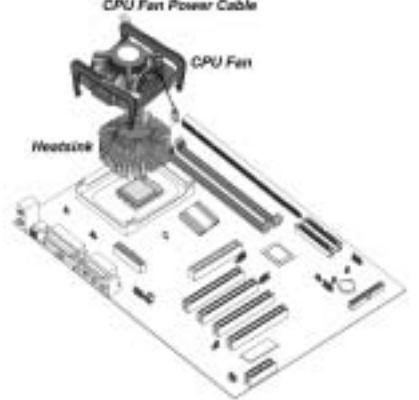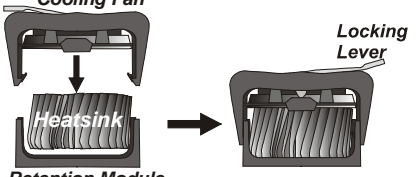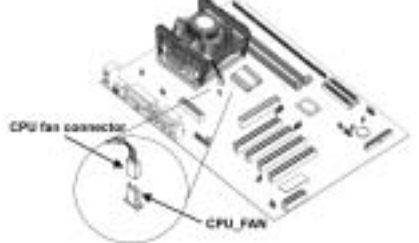
| | |
|--|--|
| <p>6. Swing the locking lever down and hook it under the latch on the edge of the socket.</p> |  |
| <p>7. Snap the four retention legs of the cooling fan into place.</p> |  |
| <p>8. Swing both lock levers on top of the cooling fan to their opposite sides to secure the cooling fan on top of the heatsink.</p> | |
| <p>9. Connect the CPU Cooling Fan power cable to the CPUFAN1 connector.</p> |  |

Note: CPU fan and heatsink installation procedures may vary with the type of CPU fan/heatsink supplied. The form and size of fan/heatsink may also vary.

Installing Memory Modules


This mainboard accommodates 168-pin 3.3V/184-pin 2.5V unbuffered SDRAM memory modules.

The CPU supports 100MHz system bus. The SDRAM DIMMs and DDRs can synchronously work with 100 MHz or operates over a 133 MHz system bus.

DDR SDRAM provides 800 MBps or 1 GBps data transfer depending on whether the bus is 100 MHz or 133 MHz. It doubles the rate to 1.6 GBps and 2.1 GBps by transferring data on both the rising and falling edges of the clock. DDR SDRAM uses additional power and ground lines and requires 184-pin 2.5V unbuffered DIMM module rather than the 168-pin 3.3V unbuffered DIMMs used by SDRAM.


Installation Procedure

You must install at least one memory module in order to use the mainboard, and **you can only use one of the both SDRAM and DDR SDRAM at the same time.**

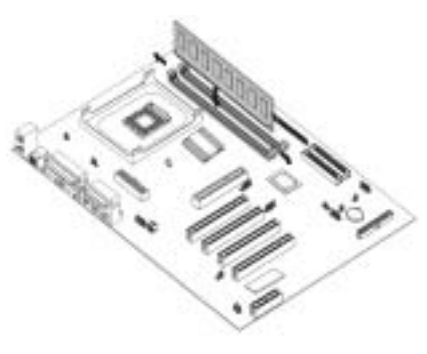

Refer to the following to install the memory modules.

1. Push the latches on each side of the DIMM slot down.
2. Align the memory module with the slot. The DIMM slots are keyed with notches and the DIMMs are keyed with cutouts so that they can only be installed correctly.
3. Check that the cutouts on the DIMM module edge connector match the notches in the DIMM slot:

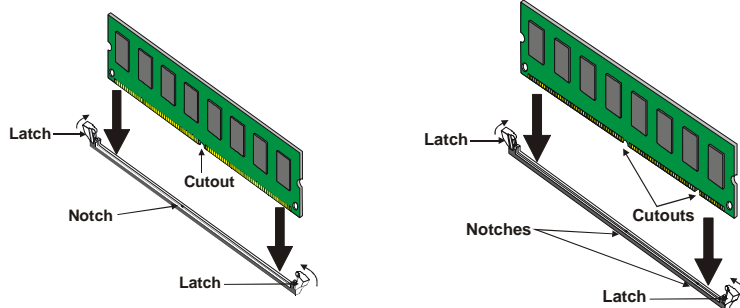

DDR SDRAM Module

SDRAM Module

4. Install the DIMM module into the slot and press it firmly down until it seats correctly. The slot latches are levered upwards and latch on to the edges of the DIMM.
5. Install any remaining DIMM modules.

Installing a Hard Disk Drive/CD-ROM

This section describes how to install IDE devices such as a hard disk drive and a CD-ROM drive.

About IDE Devices

Your mainboard has a primary and secondary IDE channel interface (IDE1 and IDE2). An IDE ribbon cable supporting two IDE devices is bundled with the mainboard.


If you want to install more than two IDE devices, get a second IDE cable and you can add two more devices to the secondary IDE channel.

IDE devices have jumpers or switches that are used to set the IDE device as MASTER or SLAVE. Refer to the IDE device user's manual. When installing two IDE devices on one cable, ensure that one device is set to MASTER and the other device is set to SLAVE. The documentation of your IDE device explains how to do this.

About UltraDMA


This mainboard supports UltraDMA 66/100. UDMA is a technology that accelerates the performance of devices in the IDE channel. To maximize performance, install IDE devices that support UDMA and use 80-pin IDE cables that support UDMA 66/100.

Installing a Hard Disk Drive
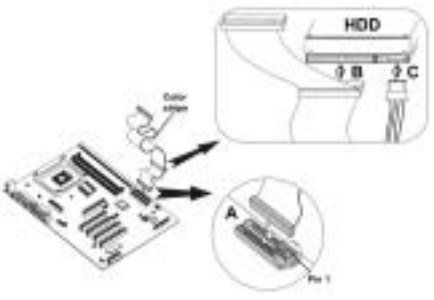
| | |
|---|--|
| 1. Install the hard disk drive into the drive cage in your system case. | |
| <p>2. Plug the IDE cable into IDE1 (A):</p> <p>Note: Ribbon cable connectors are usually keyed so that they can only be installed correctly on the device connector. If the connector is not keyed, make sure that you match the pin-1 side of the cable connector with the pin-1 side of the device connector. Each connector has the pin-1 side clearly marked. The pin-1 side of each ribbon cable is always marked with a colored stripe on the cable.</p> |  |
| 3. Plug an IDE cable connector into the hard disk drive IDE connector (B). It doesn't matter which connector on the cable you use. | |
| 4. Plug a power cable from the case power supply into the power connector on the hard disk drive (C). | |

When you first start up your system, the BIOS should automatically detect your hard disk drive. If it doesn't, enter the Setup Utility and use the IDE Hard Disk Auto Detect feature to configure the hard disk drive that you have installed.


Installing a CD-ROM/DVD Drive
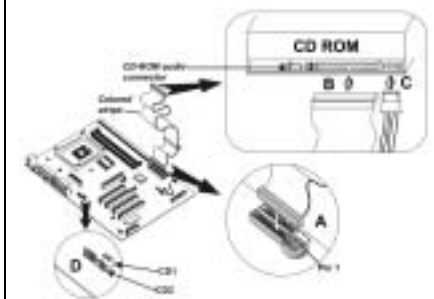
| | |
|---|--|
| 1. Install the CD-ROM/DVD drive into the drive cage in your system case. | |
| <p>2. Plug the IDE cable into IDE1 (A). If you have already installed an HDD, use the other connector on the IDE cable.</p> <p>Note: Ribbon cable connectors are usually keyed so that they can only be installed correctly on the device connector. If the connector is not keyed, make sure that you match the pin-1 side of the cable connector with the pin-1 side of the device connector. Each connector has the pin-1 side clearly marked. The pin-1 side of each ribbon cable is always marked with a colored stripe on the cable.</p> |  |
| 3. Plug an IDE cable connector into the CD-ROM/DVD drive IDE connector (B). It doesn't matter which connector on the cable you use. | |
| 4. Plug a power cable from the case power supply into the power connector on the CD-ROM/DVD drive (C). | |
| 5. Use the audio cable provided with the CD-ROM/DVD drive to connect to the mainboard CD-in connector CDIN1 or CDIN2 (D). | |

When you first start up your system, the BIOS should automatically detect your CD-ROM/DVD drive. If it doesn't, enter the Setup Utility and configure the CD-ROM/DVD drive that you have installed.

Installing a Floppy Diskette Drive

The mainboard has a floppy diskette drive (FDD) interface and ships with a diskette drive ribbon cable that supports one or two floppy diskette drives. You can install a 5.25-inch drive and a 3.5-inch drive with various capacities. The floppy diskette drive cable has one type of connector for a 5.25-inch drive and another type of connector for a 3.5-inch drive.

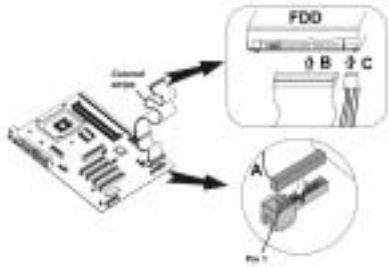
| | |
|---|--|
| <p>1. Install the FDD into the drive cage in your system case.</p> <p>2. Plug the FDD cable into FLOPPY1 (A):</p> <p>Note: Ribbon cable connectors are usually keyed so that they can only be installed correctly on the device connector. If the connector is not keyed, make sure that you match the pin-1 side of the cable connector with the pin-1 side of the device connector. Each connector has the pin-1 side clearly marked. The pin-1 side of each ribbon cable is always marked with a colored stripe on the cable.</p> |  |
| <p>3. Plug the correct connector on the FDD cable for the 5.25-inch or 3.5-inch drive into the FDD connector (B).</p> | |
| <p>4. Plug a power cable from the case power supply into the power connector on the FDD (C).</p> | |

When you first start up your system, go immediately to the Setup Utility to configure the floppy diskette drives that you have installed.

Installing Add-on Cards


This mainboard has four 32-bit PCI (Peripheral Components Interconnect) expansion slots, one 4xAGP slot, and one CNR slot.

- PCI Slots** PCI slots are used to install expansion cards that have the 32-bit PCI interface.
- 4xAGP Slot** The 4xAGP slot is used to install a graphics adapter that supports the 4xAGP specification and has a 4xAGP edge connector.
- CNR Slot** This slot is used to insert CNR cards with Modem and Audio functionality.

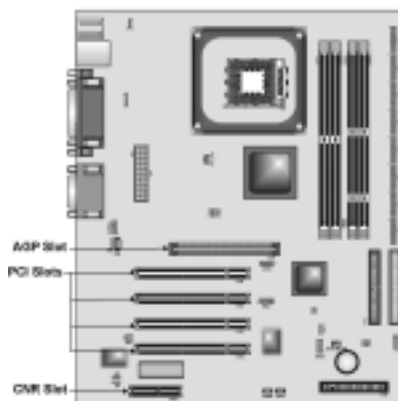

Note: Before installing an add-on card, check the documentation for the card carefully. If the card is not Plug and Play, you may have to manually configure the card before installation.


Follow these instructions to install an add-on card:
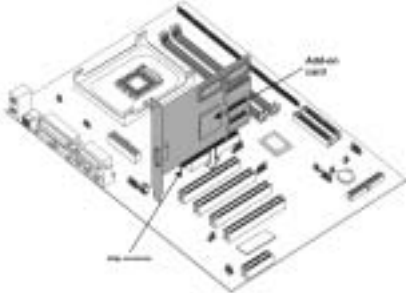
| | |
|---|--|
| 1. Remove a blanking plate from the system case corresponding to the slot you are going to use. | |
| 2. Install the edge connector of the add-on card into the expansion slot. Ensure that the edge connector is correctly seated in the slot. |  |
| 3. Secure the metal bracket of the card to the system case with a screw. | |

Note: For some add-on cards, for example graphics adapters and network adapters, you have to install drivers and software before you can begin using the add-on card.

Connecting Optional Devices

Refer to the following for information on connecting the mainboard's optional devices:

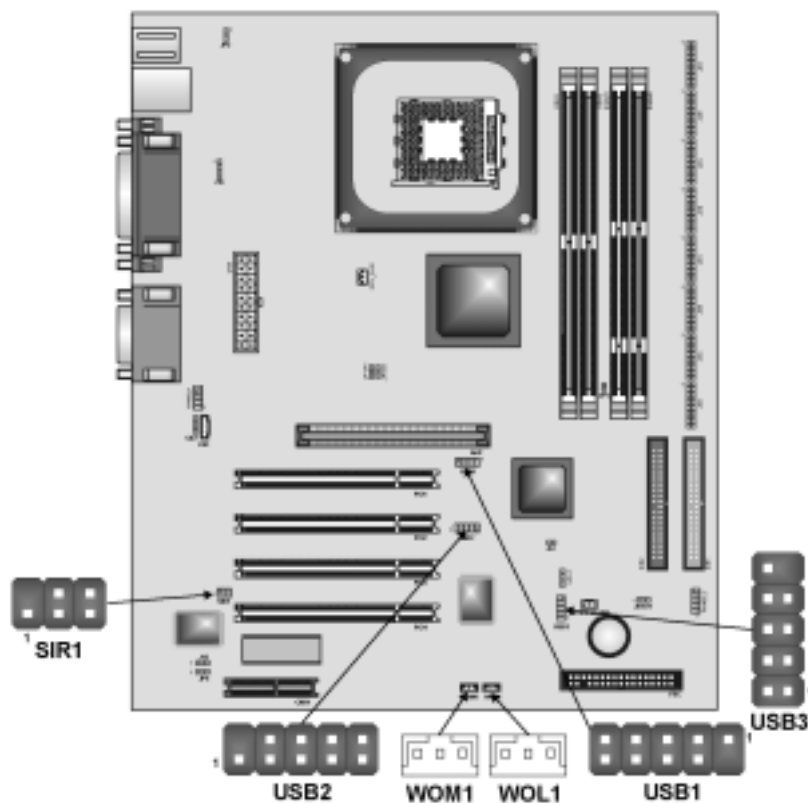

USB1/USB2/USB3: Front panel USB headers

The mainboard has USB ports installed on the rear edge I/O port array. Some computer cases have a special module that mounts USB ports at the front of the case. You can use auxiliary USB connectors USB1 and USB2 when the mainboard does not incorporate the VT6202 chipset; Otherwise, use **USB3** when VT6202 chipset (supports the USB 2.0 specification) is onboard.

| Pin | Signal Name | Pin | Signal Name |
|-----|-----------------|-----|-----------------|
| 1 | VERG_FP_USBPWR0 | 2 | VERG_FP_USBPWR0 |
| 3 | USB_FP_P0- | 4 | USB_FP_P1- |
| 5 | USB_FP_P0+ | 6 | USB_FP_P1- |
| 7 | GROUND | 8 | GROUND |
| 9 | KEY | 10 | KEY |

WOL1/WOM1: Wake On LAN/Wake On Modem

If you have installed a LAN card, use the cable provided with the card to plug into the mainboard WOL1 connector. This enables the Wake On LAN (WOL1) feature. When your system is in a power-saving mode, any LAN signal automatically resumes the system. You must enable this item using the Power Management page of the Setup Utility.

| Pin | Signal Name |
|------------|--------------------|
| 1 | 5VSB |
| 2 | GND |
| 3 | -RING |

If you have installed a modem, use the cable provided with the modem to plug into the mainboard WOM1 connector. This enables the Wake On Modem (WOM1) feature. When your system is in a power-saving mode, any modem signal automatically resumes the system. You must enable this item using the Power Management page of the Setup Utility. See Chapter 3 for more information.


SIR1: Serial infrared port

The mainboard supports a Serial Infrared (SIR1) data port. Infrared ports allow the wireless exchange of information between your computer and similarly equipped devices such as printers, laptops, Personal Digital Assistants (PDAs), and other computers.

| Pin | Signal Name | Pin | Signal Name |
|------------|--------------------|------------|--------------------|
| 1 | NC | 2 | Key |
| 3 | +5 | 4 | Ground |
| 5 | IRTX | 6 | IRRX |

Connecting I/O Devices

The backplane of the mainboard has the following I/O ports:

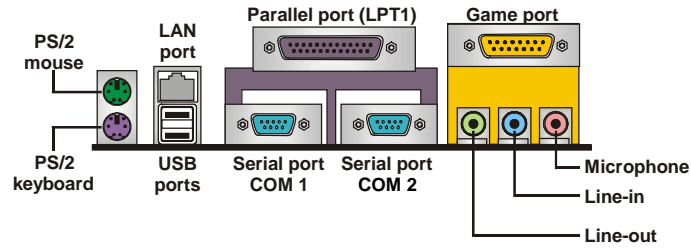

- PS/2 Mouse** Use the upper PS/2 port to connect a PS/2 pointing device.
- PS/2 Keyboard** Use the lower PS/2 port to connect a PS/2 keyboard.
- USB Ports** Use the USB ports to connect USB devices.
- LPT1** Use LPT1 to connect printers or other parallel communications devices.
- COM1/2** Use the COM ports to connect serial devices such as mice or fax/modems. COM1 is identified by the system as COM1/3. COM2 is identified by the system as COM2/4.
- Game Port** Use the game port to connect a joystick or a MIDI device.
- Audio Ports** Use the three audio ports to connect audio devices. The left side jack is for a stereo line-out signal. The middle jack is for a stereo line-in signal. The right side jack is for a microphone.
- PS/2 Mouse** Use the upper PS/2 port to connect a PS/2 pointing device.

External Connector Color Coding

Many connectors now use standard colors as shown in the table below.

| Connector | Color |
|---------------------------------|-------------------|
| Analog VGA | Blue |
| Audio line-in | Light blue |
| Audio line-out | Lime |
| Digital monitor/flat panel | White |
| IEEE 1394 | Grey |
| Microphone | Pink |
| MIDI/game | Gold |
| Parallel | Burgundy |
| PS/2-compatible keyboard | Purple |
| PS/2-compatible mouse | Green |
| Serial | Teal or Turquoise |
| Speaker out/subwoofer | Orange |
| Right-to-left speaker | Brown |
| USB | Black |
| Video out | Yellow |
| SCSI, network, telephone, modem | None |

This concludes Chapter 2. The next chapter covers the BIOS.

Chapter 3

Using BIOS

About the Setup Utility

The computer uses the latest AMI BIOS with support for Windows Plug and Play. The CMOS chip on the mainboard contains the ROM setup instructions for configuring the mainboard BIOS.

The BIOS (Basic Input and Output System) Setup Utility displays the system's configuration status and provides you with options to set system parameters. The parameters are stored in battery-backed-up CMOS RAM that saves this information when the power is turned off. When the system is turned back on, the system is configured with the values you stored in CMOS.

The BIOS Setup Utility enables you to configure:

- Hard drives, diskette drives, and peripherals
- Video display type and display options
- Password protection from unauthorized use
- Power management features

The settings made in the Setup Utility affect how the computer performs. Before using the Setup Utility, ensure that you understand the Setup Utility options.

This chapter provides explanations for Setup Utility options.

The Standard Configuration

A standard configuration has already been set in the Setup Utility. However, we recommend that you read this chapter in case you need to make any changes in the future.

This Setup Utility should be used:

- when changing the system configuration
- when a configuration error is detected and you are prompted to make changes to the Setup Utility
- when trying to resolve IRQ conflicts
- when making changes to the Power Management configuration
- when changing the password or making other changes to the Security Setup

Using BIOS

When you start the Setup Utility, the main menu appears. The main menu of the Setup Utility displays a list of the options that are available. A highlight indicates which option is currently selected. Use the cursor arrow keys to move the highlight to other options. When an option is highlighted, execute the option by pressing <Enter>.

Some options lead to pop-up dialog boxes that prompt you to verify that you wish to execute that option. Other options lead to dialog boxes that prompt you for information.

Some options (marked with a triangle ►) lead to submenus that enable you to change the values for the option. Use the cursor arrow keys to scroll through the items in the submenu.

In this manual, default values are enclosed in parenthesis. Submenu items are denoted by a triangle ►.

Standard CMOS Features

This option displays basic information about your system.

| AMIBIOS SETUP – STANDARD CMOS SETUP | | | | | | | | | |
|--|--------|------|------|------|---------------------|-----|------|------|-------|
| (C) 2000 American Megatrends, Inc. All Rights Reserved | | | | | | | | | |
| Date (mm/dd/yy) : Tue Sep.04, 2001 | | | | | | | | | |
| Time (hh/mm/ss) : 15:28:57 | | | | | | | | | |
| | Type | Size | Cyln | Head | WPcom | LBA | Blk | PIO | 32Bit |
| Pri Master | : Auto | | | | | Sec | Mode | Mode | Mode |
| Pri Slave | : Auto | | | | | | | | |
| Sec Master | : Auto | | | | | | | | |
| Sec Slave | : Auto | | | | | | | | |
| Floppy Drive A : Not Installed | | | | | | | | | |
| Floppy Drive B : Not Installed | | | | | | | | | |
| Month : Jan – Dec | | | | | ESC : Exit | | | | |
| Day : 01 – 31 | | | | | ↑↓ : Select Item | | | | |
| Year : 1901 – 2099 | | | | | PU/PD/+/- : Modify | | | | |
| | | | | | (Shift)F2 : Color | | | | |
| | | | | | F3 : Detect All HDD | | | | |

Date and Time

The Date and Time items show the current date and time on the computer. If you are running a Windows OS, these items are automatically updated whenever you make changes to the Windows Date and Time Properties utility.

IDE Pri Master/Slave and IDE Sec Master/Slave

Use these items to configure devices connected to the Primary and Secondary IDE channels. To configure an IDE hard disk drive, choose *Auto*. If the *Auto* setting fails to find a hard disk drive, set it to *User*, and then fill in the hard disk characteristics (Size, Cyls, etc.) manually. If you have a CD-ROM

drive, select the setting *CDROM*. If you have an ATAPI device with removable media (e.g. a ZIP drive or an LS-120), select *Floptical*.

Floppy Drive A and Floppy Drive B

Use these items to set up size and capacity of the floppy diskette drive(s) installed in the system.

Advanced Setup Page

This page sets up more advanced information about your system. Be more careful to this page. Any changes can affect the operation of your computer.

| AMIBIOS SETUP – ADVANCED SETUP (C) 2000 American Megatrends, Inc. All Rights Reserved | | | |
|--|----------|--------------------------|--------------------|
| Quick Boot | Enabled | AGP Comp. Driving | Auto |
| 1 st Boot Device | IDE-0 | Manual AGP Comp. Driving | CB |
| 2 nd Boot Device | Floppy | AGP Aperture Size | 64MB |
| 3 rd Boot Device | CDROM | Auto detect DIMM/PCI Clk | Disabled |
| Try Other Boot Devices | Yes | CLK Gen Spread Spectrum | Disabled |
| S.M.A.R.T. for Hard Disks | Disabled | | |
| BootUp Num-Lock | On | | |
| Floppy Drive Swap | Disabled | | |
| Floppy Drive Seek | Disabled | | |
| PS/2 Mouse Support | Enabled | | |
| Password Check | Setup | ESC : Quit | ↑↓←→ : Select Item |
| Boot To OS/2 > 64MB | No | F1 : Help | PU/PD/+/- : Modify |
| L1 Cache | Enabled | F5 : Old Values (Shift) | F2 : Color |
| L2 Cache | Enabled | F6 : Load BIOS Defaults | |
| System BIOS Cacheable | Enabled | F7 : Load Setup Defaults | |
| SDRAM Timing by SPD | Disables | | |
| SDRAM Frequency | 200MHz | | |
| SDRAM CAS# Latency | 2.5 | | |
| SDRAM Bank Interleave | Disabled | | |
| AGP Mode | 4X | | |

Quick Boot

If you enable this item, the system starts up more quickly by elimination of some of the power on test routines.

1st Boot Device/ 2nd Boot Device/ 3rd Boot Device

Use these items to determine the device order the computer uses to look for an operating system to load at start-up time.

Try Other Boot Device

If you enable this item, the system will also search for other boot devices if it fails to find an operating system from the first two locations.

S.M.A.R.T. for Hard Disks

Enable this item if any IDE hard disks support the S.M.A.R.T. (Self-Monitoring, Analysis and Reporting Technology) feature.

BootUp NumLock

This item determines if the Num Lock key is active or inactive at system start-up time.

Floppy Drive Swap

If you have two diskette drives installed and you enable this item, drive A becomes drive B and drive B becomes drive A.

Floppy Drive Seek

If you enable this item, your system will check all floppy disk drives at start up. Disable this item unless you are using an old 360KB drive.

PS/2 Mouse Support

Enable this item if you plan to use a PS/2 mouse.

Password Check

If you have entered a password for the system, use this item to determine, if the password is required to enter the Setup Utility (*Setup*) or required both at start-up and to enter the Setup Utility (*Always*).

Boot to OS/2 > 64MB

Enable this item if you are booting the OS/2 operating system and you have more than 64MB of system memory installed.

L1/L2 Cache

Leave these items enabled since all the processors that can be installed on this board have internal L1/L2 cache memory.

System BIOS Cacheable

If you enable this item, a segment of the system BIOS will be copied to main memory for faster execution.

SDRAM Timing by SPD

This item allows you to enable or disable the SDRAM timing defined by the Serial Presence Detect electrical.

SDRAM Frequency

This item determines frequency of SDRAM memory.

SDRAM CAS# Latency

This item determines the operation of SDRAM memory CAS (column address strobe). It is recommended that you leave this item at the default value. The 2T setting requires faster memory that specifically supports this mode.

SDRAM Bank Interleave

Enable this item to increase SDRAM memory speed. When enabled, separate memory banks are set for odd and even addresses and the next byte of memory can be accessed while the current byte is being refreshed.

AGP Comp. Driving

Use this item to signal driving current on AGP cards to auto or manual. Some AGP cards need stronger than normal driving current in order to operate. We recommend that you set this item to the default.

Manual AGP Comp. Driving

When AGP Driving is set to Manual, use this item to set the AGP current driving value.

AGP Mode

This item provides the OnBoard VGA mode with three options of 1,2, 4 multiplied frequency.

AGP Aperture Size

This item defines an AGP for the graphics. Leave this item at the default value 64MB.

Auto Detect DIMM/PCI Clock

When this item is enabled, BIOS will disable the clock signal of free DIMM/PCI slots.

CLK Spread Spectrum

Use this item to set the system bus spread spectrum for the installed processor.

Power Management Setup Page

This page sets some of the parameters for system power management operation.

| AMIBIOS SETUP – POWER MANAGEMENT SETUP (C) 2000 American Megatrends, Inc. All Rights Reserved | | |
|--|----------|------------------------------------|
| ACPI Aware O/S | Yes | |
| Power Management/APM | Enabled | |
| Video Power Down Mode | Suspend | |
| Hard Disk Power Down Mode | Standby | |
| Standby Time Out (Minute) | Disabled | |
| Suspend Time Out (Minute) | Disabled | |
| PowerOn by LAN/Ring | Disabled | |
| PowerOn by Onchip LAN | Disabled | |
| PowerOn by KBC | Disabled | ESC : Quit ↑↓←→ : Select Item |
| Wake up key | Any key | F1 : Help PU/PD/+/- : Modify |
| Wake up password | N/A | F5 : Old Values (Shift)F2 : Color |
| Power On RTC Alarm | Disabled | F6 : Load BIOS Defaults |
| RTC Alarm Date | 15 | F7 : Load Setup Defaults |
| RTC Alarm Hour | 12 | |
| RTC Alarm Minute | 30 | |
| RTC Alarm Second | 30 | |

ACPI Aware O/S

This item supports ACPI (Advanced Configuration and Power management Interface). Use this item to enable or disable the ACPI feature.

Power Management

Use this item to enable or disable a power management scheme. If you enable power management, you can use the items below to set the power management operation. Both APM and ACPI are supported.

Video Power Down Mode

Use this item to determine which power-saving mode is required to power down the graphics sub-system. You can force the graphics to power down in Stand By or Suspend modes, or you can disable the power down.

Hard Disk Power Down Mode

Use this item to determine which power-saving mode is required to power down the hard disk drive(s). You can force the hard disk to power down in Stand By or Suspend modes, or you can disable the powerdown.

Standby Time Out (Minute)

This sets the timeout for Standby mode in minutes. If the time selected passes without any system activity, the computer will enter power-saving Standby mode.

Suspend Time Out (Minute)

This sets the timeout for Suspend mode in minutes. If the time selected passes without any system activity, the computer will enter power-saving Suspend mode.

PowerOn by LAN/Ring

The system can be turned off with a software command. If you enable this item, the system can automatically resume if there is an incoming call on the Modem. You must use an ATX power supply in order to use this feature.

PowerOn by Onchip LAN

The system can be turned off with a software command. If you enable this item, the system can automatically resume on LAN. You must use an ATX power supply in order to use this feature.

PowerOn by KCB Wake up key/Wake up password

If you enable this item, system can automatically resume by pressing hot keys on the keyboard or typing in the password. You must enable the Keyboard Power On jumper and use an ATX power supply in order to use this feature.

PowerOn by RTC Alarm/Date/Hour/Minute/Second

The system can be turned off with a software command. If you enable this item, the system can automatically resume at a fixed time based on the system's RTC (realtime clock). Use the items below this one to set the date and time of the wake-up alarm. You must use an ATX power supply in order to use this feature.

PCI/Plug and Play Setup Page

This page sets some of the parameters for devices installed on the PCI bus and devices that use the system plug and play capability.

| AMIBIOS SETUP - PCI / PLUG AND PLAY SETUP (C) 2000 American Megatrends, Inc. All Rights Reserved | |
|---|-----|
| Plug and Play Aware O/S | Yes |
| Primary Graphics Adapter | AGP |
| Allocate IRQ for PCI VGA | Yes |
| ESC : Quit ↑↓←→ : Select Item | |
| F1 : Help PU/PD/+/- : Modify | |
| F5 : Old Values (Shift)F2 : Color | |
| F6 : Load BIOS Defaults | |
| F7 : Load Setup Defaults | |

Plug and Play Aware O/S

Enable this item if you are using an O/S that supports Plug and Play such as Windows 95 or 98.

Primary Graphics Adapter

This item indicates if the primary graphics adapter uses the PCI or the AGP bus. The default AGP setting still lets the onboard display work and allows the use of a second display card installed in an AGP slot.

Allocate IRQ for PCI VGA

If this item is enabled, an IRQ will be assigned to the PCI VGA graphics system. You set this value to No to free up an IRQ.

Load Optimal Settings

If you select this item and press **Enter** a dialog box appears. If you press **Y**, and then **Enter**, the Setup Utility loads a set of fail-safe default values. These default values are not very demanding and they should allow your system to function with most kinds of hardware and memory chips.

Load Best Performance Settings

If you select this item and press **Enter** a dialog box appears. If you press **Y**, and then **Enter**, the Setup Utility loads a set of best-performance default values. These default values are quite demanding and your system might not function properly if you are using slower memory chips or other low-performance components.

Features Setup Page

This page sets some of the parameters for peripheral devices connected to the system.

| AMBIOS SETUP – FEATURES SETUP (C) 2000 American Megatrends, Inc. All Rights Reserved | | |
|---|--------------|------------------------------------|
| OnBoard FDC | Enabled | |
| OnBoard Serial PortA | 3F8h/COM1 | |
| OnBoard Serial PortB | 2F8h/COM2 | |
| Serial Port2 Mode | Normal | |
| OnBoard Parallel Port | 378h | |
| Parallel Port Mode | SPP | |
| Parallel Port IRQ | 7 | |
| Parallel Port DMA | N/A | |
| OnBoard Game Port | 201h | |
| OnBoard MIDI Port | 300 | |
| MIDI Port IRQ | 10 | |
| OnBoard IDE | Both | |
| OnBoard LAN | Enabled | |
| OnBoard AC'97 Audio | Enabled | |
| OnBoard MC'97 Modem | Auto | |
| USB Controller | All USB Port | |
| USB Device Legacy Support | Disabled | |
| | | ESC : Quit ↑↓←→ : Select Item |
| | | F1 : Help PU/PD/+/- : Modify |
| | | F5 : Old Values (Shift)F2 : Color |
| | | F6 : Load BIOS Defaults |
| | | F7 : Load Setup Defaults |

OnBoard FDC

Use this item to enable or disable the onboard floppy disk drive interface.

OnBoard Serial Port A/B

Use these items to enable or disable the onboard COM1/2 serial port, and to assign a port address.

OnBoard Parallel Port

Use this item to enable or disable the onboard LPT1 parallel port, and to assign a port address. The Auto setting will detect and available address.

Parallel Port Mode

Use this item to set the parallel port mode. You can select SPP (Standard Parallel Port), ECP (Extended Capabilities Port), EPP (Enhanced Parallel Port), or ECP + EPP.

Parallel Port IRQ

Use this item to assign IRQ to the parallel port.

Parallel Port DMA

Use this item to assign a DMA channel to the parallel port.

OnBoard Game Port

This item enables or disables the I/O address for the game port.

OnBoard MIDI Port

Use this item to enable or disable the onboard MIDI port, and to assign a port address.

MIDI Port IRQ

Use this item to assign IRQ 7 to the parallel port.

OnBoard IDE

Use this item to enable or disable the onboard IDE channel.

OnBoard AC'97 Audio

This item enables or disables the AC'97 audio chip.

OnBoard MC'97 Modem

This item enables or disables the MC'97 modem chip.

USB Controller

Use this item to select the USB ports or disabled.

USB Device Legacy Support

This item allows you to enable the USB device, if you have installed a USB device on the system board.

CPU PnP Setup Page

This page helps you manually configure the mainboard for the CPU. The system will automatically detect the type of installed CPU and make the appropriate adjustments to the items on this page.

| AMIBIOS SETUP – CPU PnP SETUP (C) 2000 American Megatrends, Inc. All Rights Reserved | | |
|---|-----------|---|
| CPU BRAND | INTEL | |
| CPU Type | Pentium 4 | |
| CPU Speed | 800 MHz | |
| CPU Ratio Selection | 8.0x | |
| CPU Frequency | 100 MHz | |
| | | ESC : Quit ↑↓←→ : Select Item F1 : Help PU/PD/+/- : Modify F5 : Old Values (Shift)F2 : Color F6 : Load Optimal values F7 : Load Best performance values |

CPU BRAND/Type/Core Voltage/Ratio/Frequency

These items show the type, core voltage, ratio and frequency of CPU installed in your system.

CPU Speed

This item decides CPU speed installed in your system.

Hardware Monitor Page

This page helps you manually configure the mainboard for the CPU. The system will automatically detect the type of installed CPU and make the appropriate adjustments to the items on this page.

| AMIBIOS SETUP – HARDWARE MONITOR (C) 2000 American Megatrends, Inc. All Rights Reserved | | | |
|--|------------|--|---|
| *** System Hardware *** | | | |
| Vocore | 1.632V | | |
| Vcc 2.5V | 2.496V | | |
| Vcc 3.3V | 3.392V | | |
| Vcc 5V | 4.972V | | |
| +12V | 11.968V | | |
| -12V | -0.907V | | |
| SB5V | 5.053V | | |
| VBAT | 3.488V | | |
| SYSTEM Fan Speed | 0 RPM | | |
| CPU Fan Speed | 1350 RPM | | |
| Power Temperature | 32°C/89°F | | |
| SYSTEM Temperature | 39°C/102°F | | |
| CPU Temperature | 55°C/131°F | | |
| | | | ESC : Quit ↑↓←→ : Select Item F1 : Help PU/PD/+/- : Modify F5 : Old Values (Shift)F2 : Color F6 : Load BIOS Defaults F7 : Load Setup Defaults |

CPU/System Temperature

These items display CPU and system temperature measurement.

FANs & Voltage Measurements

These items indicate cooling fan speeds in RPM and the various system voltage measurements.

Change Password

If you highlight this item and press Enter, a dialog box appears that you can enter a Supervisor password. You can enter no more than six letters or numbers. Press Enter after you have typed in the password. There will be the second dialog box asking you to retype the password for confirmation. Press Enter after you have retyped it correctly. Then, the password is required for the access to the Setup Utility or for it at start-up, depending on the setting of the Password Check item in Advanced Setup.

Exit

Highlight this item and press Enter to save the changes that you have made in the Setup Utility configuration and exit the program. When the Save and Exit dialog box appears, press Y to save and exit, or press N to exit without saving.

This concludes Chapter 3. Refer to the next chapter for information on the software supplied with the mainboard.

Using the Mainboard Software

About the Software CD-ROM

The support software CD-ROM that is included in the mainboard package contains all the drivers and utility programs needed to properly run the bundled products. Below you can find a brief description of each software program, and the location for your mainboard version. More information on some programs is available in a README file, located in the same directory as the software.

Note: Never try to install software from a folder that is not specified for use with your mainboard.

Before installing any software, always inspect the folder for files named README.TXT, INSTALL.TXT, or something similar. These files may contain important information that is not included in this manual

Auto-installing under Windows 98

The Auto-install CD-ROM makes it easy for you to install the drivers and software for your mainboard.

Note: If the Auto-install CD-ROM does not work on your system, you can still install drivers through the file manager for your OS (for example, Windows Explorer). Refer to Utility Folder Installation Notes later in this chapter.

The support software CD-ROM disc loads automatically under Windows 98. When you insert the CD-ROM disc in the CD-ROM drive, the autorun feature will automatically bring up the install screen. The screen has three buttons on it, Setup, Browse CD and Exit.



Note: If the opening screen doesn't appear, double-click the file "setup.exe" in the root directory.

Setup Tab

| | |
|------------------|---|
| Setup | Click the Setup button to run the software installation program. Select from the menu which software you want to install. |
| Browse CD | <p>The Browse CD button is the standard Windows command that allows you to open Windows Explorer and show the contents of the support CD.</p> <p>Before installing the software from Windows Explorer, look for a file named README.TXT, INSTALL.TXT or something similar. This file may contain important information to help you install the software correctly.</p> <p>Some software is installed in separate folders for different operating systems, such as DOS, WIN NT, or WIN98/95. Always go to the correct folder for the kind of OS you are using.</p> <p>To install the software, execute a file named SETUP.EXE or INSTALL.EXE by double-clicking the file and then following the instructions on the screen.</p> |
| Exit | The Exit button closes the Auto Setup window. |

Application Tab

Lists the software utilities that are available on the CD.

Read Me Tab

Displays the path for all software and drivers available on the CD.

Running Setup

Follow these instructions to install device drivers and software for the mainboard:


1. Click **Setup**. The installation program begins:




Note: The following screens are examples only. The screens and driver lists will be different according to the mainboard you are installing.

The mainboard identification is located in the upper left-hand corner.

2. Click **Next**. The following screen appears:

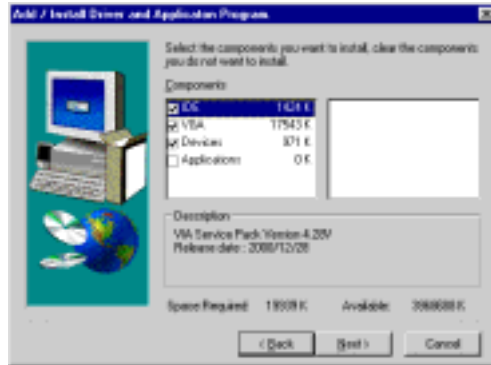

3. Check the box next to the items you want to install. The default options are recommended.
4. Click **Next** run the Installation Wizard. An item installation screen appears:

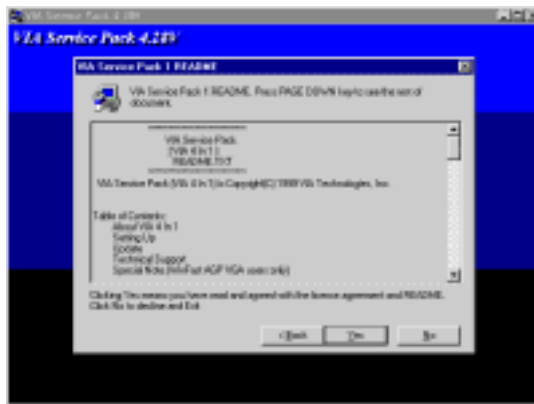

5. Follow the instructions on the screen to install the items.

Drivers and software are automatically installed in sequence. Follow the on-screen instructions, confirm commands and allow the computer to restart a few times to complete the installation.

Manual Installation

Insert the CD in the CD-ROM drive and locate the PATH.DOC file in the root directory. This file contains the information needed to locate the drivers for your mainboard.

Look for the chipset and mainboard model; then browse to the directory and path to begin installing the drivers. Most drivers have a setup program (SETUP.EXE) that automatically detects your operating system before installation. Other drivers have the setup program located in the operating system subfolder.

If the driver you want to install does not have a setup program, browse to the operating system subfolder and locate the readme text file (README.TXT or README.DOC) for information on installing the driver or software for your operating system.

Utility Software Reference

All the utility software available from this page is Windows compliant. They are provided only for the convenience of the customer. The following software is furnished under license and may only be used or copied in accordance with the terms of the license.

Note: These software(s) are subject to change at anytime without prior notice.
Please refer to the support CD for available software.

AMI Flash Memory Utility

This utility lets you erase the system BIOS stored on a Flash Memory chip on the mainboard, and lets you copy an updated version of the BIOS to the chip. Proceed with caution when using this program. If you erase the current BIOS and fail to write a new BIOS, or write a new BIOS that is incorrect, your system will malfunction. Refer to Chapter 3, *Using BIOS* for more information.

WinFlash Utility

The Award WinFlash utility is a Windows version of the DOS Award BIOS flash writer utility. The utility enables you to flash the system BIOS stored on a Flash Memory chip on the mainboard while in a Windows environment. This utility is currently available for WINXP\ME\2000\98SE. To install the WinFlash utility, run WINFLASH.EXE from the following directory:

UTILITY\WINFLASH 1.51

PC-CILLIN

The PC-CILLIN software program provides anti-virus protection for your system. This program is available for Windows 2000/ME/98SE and Windows NT. Be sure to check the readme.txt and install the appropriate anti-virus software for your operating system.

We strongly recommend users to install this free anti-virus software to help protect your system against viruses.

MediaRing Talk – Telephony Software

To install the MediaRing Talk voice modem software for the built-in modem, go to the directory \UTILITY\MEDIARING TALK, then run MRTALK-SETUP72.EXE to install the application software.

Super Voice – Fax/Modem Software

To install the Super Voice voice, fax, data communication application for use with the built-in fax/modem, go the directory \UTILITY\SUPER_VOICE, then run PICSHELL.EXE to install the application software.

CD Ghost

The CD Ghost software enables you to create a virtual cabinet of CD-ROM drives on your system to help you categorize and organize your CD collection. A user-friendly interface assists you in quickly creating images of both CDs and DVDs onto your system. To install the software, run SETUP.EXE from the following directory:

\UTILITY\CDGHOST\ENG\CDGHOST

Recovery Genius

The Recovery Genius software program is an innovative windows application system that protects your Hard Disk Drive from virus intrusion, accidental deletions and from system corruption. To install the Recovery Genius software program run SETUP.EXE from the following directory:

\UTILITY\RECOVERY GENIUS\ENG\RECOVERYGENIUS

Language Genius

The Language Genius is a software –based product that helps you to learn new languages. To install the Language Genius software program run SETUP.EXE from the following directory:

\UTILITY\LANGUAGE GENIUS\ENGLANGUAGEGENIUS

PageABC

The PageABC application software enables you to create your very own home page. To install the PageABC, go to the directory \UTILITYPageABC, and then run SETUP.EXE to install the application software.

This concludes Chapter 4.