


PISA-E12

Intel® Atom N270 945GSE PISA SBC

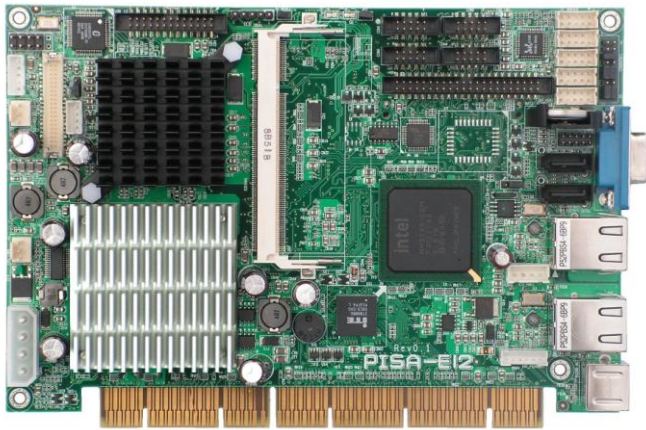

User's Manual

Version 1.0

Copyright Notice

This publication is protected by copyright and all rights are reserved. No part of it may be reproduced or transmitted by any means or in any form, without prior consent of the original manufacturer.

The information in this document has been carefully checked and is believed to be accurate. However, the original manufacturer assumes no responsibility for any inaccuracies that may appear in this manual. In no event will the original manufacturer be liable for direct, indirect, special, exemplary, incidental, incidental or consequential damages resulting from any defect or omission in this manual, even if advised of possibility of such damages. The material contained herein is for informational purposes only.

Acknowledgments

Award is a registered trademark of Award Software International, Inc.

IBM, PS/2 is trademarks of International Business Machines Corporation.

Intel Pentium M is registered trademarks of Intel Corporation.

Microsoft Windows is a registered trademark of Microsoft Corporation.

All other product names or trademarks are properties of their respective owners.

Contents

INTRODUCTION	1
CHAPTER 1 FEATURES & SPECIFICATIONS	2
FEATURES	3
SPECIFICATIONS	4
CHAPTER 2 JUMPER SETTING & CONNECTORS	7
2.1 JUMPERS ON THE E12	8
Jumper Locations on the E12	9
JP1: Clear CMOS RAM Data	10
JP2: CF Card Mode Selection	10
COM2MODE: RS232/RS422/RS485.....	11
AT MODE: AT Mode Selection	12
LCDPWR: LCD PANEL Power Selection	12
2.2 CONNECTORS ON THE E12	13
Connector Locations on the E12	14
AUDIO Connector.....	15
DIO Connector.....	15
USB12, 34, 56 Connectors	15
INT_VGA Connector.....	16
SATA1.2 Connectors.....	16
VGA Connector	17
LAN1, 2 GbE Connectors	17
ATX-PWR Connector	18
INT_KBMS Connector	19
PS/2 Keyboard & Mouse Connector.....	19
PWR_IN Connector	19
FRONT_PANEL Connector	20
BACK LITE Connector	21
System FAN Connector	21
CPUF FAN Connector	21
LVDS LCD Connector	22
LPT Port.....	23
IrDA Connector.....	23
CF-II Connector (bot)	24
COM1, 2, 3, 4 Serial Ports	25
TV-OUT Connector	25
PIDE1 Connector.....	26
CHAPTER 3 BIOS SETUP	27
BIOS Introduction	28
Starting Setup	28

Contents

Using Setup	29
Getting Help.....	31
In Case of Problems	31
3.1 MAIN MENU	32
Setup Items	32
Standard CMOS Features	32
Advanced BIOS Features	32
Advance Chipset Features	33
Integrated Peripherals	33
Power Management Setup.....	33
PnP/PCI Configurations.....	33
PC Health Status.....	33
Frequency/Voltage Control	33
Load Fail-Safe Defaults.....	33
Load Optimized Defaults	33
Set Supervisor/ User Password	33
Save & Exit Setup	34
Exit Without Saving.....	34
3.2 STANDARD CMOS FEATURES	35
IDE Channel 0, 1 Master/ Slave	37
Drive A/B.....	39
Video	39
Halt On.....	39
3.3 ADVANCED BIOS FEATURES	40
CPU Feature	41
Delay Prior to Thermal.....	41
Limit CPUID Max Val	41
C1E Function.....	41
Execute Disabled Bit	41
Hard Disk Boot Priority	42
Bootable Add-in Cards	42
Virus Warning.....	43
CPU L1 & L2 Cache	43
CPU L3 Cache.....	43
Quick Power On Self Test.....	43
First/Second/Third Boot Device.....	44
Boot Other Device.....	44
Swap Floppy Drive	44
Boot Up Floppy Seek	44
Boot Up Num Lock Status	44
Gate A20 Option	44
Typematic Rate Setting	45
Typematic Rate (Chars/Sec).....	45
Typematic Delay (Msec)	45
Security Option.....	46
APIC Mode	46
MPS Version Control For OS	46

OS Select For DRAM > 64MB	46
Report No FDD For WIN 95.....	46
3.4 ADVANCED CHIPSET FEATURES	47
DRAM Timing Selectable	48
CAS Latency Time	48
DRAM RAS# to CAS# Delay	48
DRAM RAS# Precharge	48
Precharge dealy (tRAS).....	48
System Memory Frequency	48
SLP_S4#Assertoin Width.....	49
System BIOS Cacheable.....	49
Video BIOS Cacheable	49
Memory Hole At 15M-16M	49
On-Chip Frame Buffer Size	49
DVMT Mode	49
DVMT / FIXED Memory Size.....	50
Boot Display.....	50
Panel Number.....	50
TV Standard	50
Video Connector	50
TV Format.....	50
Lan1 Chip Control	51
Lan2 Chip Control	51
3.5 INTEGRATED PERIPHERALS	52
On Chip IDE Device	53
IDE HDD Block Mode	53
On-Chip Primary PCI IDE	54
IDE Primary/Secondary, Master/Slave PIO	54
IDE Primary/Secondary, Master/ Slave UDMA.....	54
On-Chip Secondary PCI IDE	54
On-Chip Serial ATA.....	55
SATA Mode	57
PATA IDE Mode.....	57
SATA Mode	58
SATA Port Speed Settings	58
SATA Mode	59
On board Device	60
USB Controller.....	60
USB 2.0 Controller	60
USB Keyboard Support	60
Azalia/AC97 Audio Select	60
Super IO Device.....	61
Onboard Serial Port 1	61
Onboard Serial Port 2	61
UART Mode Select.....	62
RxD, TxD Active.....	62
IR Transmission Delay	62

Contents

UR2 Duplex Mode	62
Onboard Parallel Port	63
Parallel Port Mode	63
EPP Mode Select	64
ECP Mode Use DMA	65
EPP Mode Select	66
ECP Mode Use DMA	66
PWRON After PWR-Fail	66
Onboard Serial Port 3	67
Serial Port 3 Use IRQ	67
Onboard Serial Port 4	67
Serial Port 4 Use IRQ	67
Watch Dog Timer Select	67
3.6 POWER MANAGEMENT SETUP	68
PCI Express PM Function	69
PCI Express PME	69
Power-Supply Type	69
ACPI Function	69
Power Management	69
Video off Method	70
Video Off In Suspend	70
Suspend Type	70
MODEM Use IRQ	70
Suspend Mode	70
HDD Power Down	71
Soft-Off by PWR-BTTN	71
CPU THRM-Throttling	71
Wake-Up by PCI card	71
Power On by Ring	71
Resume by Alarm	72
Date (of Month) Alarm	72
Time (hh: mm: ss) Alarm	72
Primary/ Secondary IDE 0/1	72
FDD, COM, LPT Port	73
PCI PIRQ [A-D] #	73
3.7 PNP/PCI CONFIGURATION	74
Init Display First	74
Reset Configuration Data	75
Resources Controlled By	75
IRQ Resource	76
IRQ-3,4,5,7,9,10,11,12,14,15 assigned to	76
PCI/VGA Palette Snoop	77
INT Pin 1/2/3/4/5/6/7/8 Assignment	77
Maximum Payload Size	77
3.8 PC HEALTH STATUS	78
CPU Warning Temperature	78
Current System Temp	78

Current CPU Temperature	78
CPU FAN Speed.....	79
CHASSIS Fan Speed	79
Shutdown Temperature	79
3.9 FREQUENCY/VOLTAGE CONTROL	80
Spread Spectrum	80
3.10 LOAD FAIL-SAFE DEFAULTS	80
3.11 LOAD OPTIMIZED DEFAULTS	81
3.12 SET SUPERVISOR/USER PASSWORD	81
3.13 SAVE & EXIT SETUP	83
3.14 EXIT WITHOUT SAVING	84
CHAPTER 4 APPENDIX	85
A. I/O PORT ADDRESS MAP.....	86
B. INTERRUPT REQUEST LINES (IRQ)	87
C. POST BEEP	88

This page is intentionally left blank

Introduction

This manual is designed to give you information on the E12 Industrial Main Board.

The topics covered in this manual are as follows:

- ✓ **Features**
- ✓ **Specification**
- ✓ **Jumper setting and Connectors**
- ✓ **BIOS Setup**
- ✓ **Appendix**

Chapter 1 Features & Specifications

FEATURES	3
SPECIFICATIONS	4

❖ **Features**

- Intel Atom Processor N270 on board.
- Supports DDR2 533MHz memory up to 2GB.
- One Mini-PCI socket on board to support WLAN.
- Multiple I/O functions: 6 x USB2.0, 4 x COM ports, 2 x SATA, 1 x IRDA, 1x PIDE, 1x CF, 1x LPT.
- Dual GbE LANs maximize the transfer bandwidth.
- Multiple display technology: CRT, TVOUT, Dual 24-bits LVDS LCD. Dual Independent display supported.
- Support stand-alone operation with power input and screw holes.

❖ Specifications

Processor Support

- Intel Atom processor N270 on board.
- 1.6GHz Core Speed with Hyper-threading support.
- 533MHz front side bus speed.

BIOS

- Award Standard PnP Flash BIOS 6.0.
- 8Mbit FlashROM with BootBlock for Fail-safe.

System Memory

- One DDR2 SO-DIMM Socket supports up to 2.0GB memory
- Supports DDR2-533 non-ECC memory up to 2.0 GB.

Chipset

- Intel 945GSE and ICH7M chipset.

Video

- Intel 945GSE Integrated GMA950 graphic engine.
- One D-Sub Female connector for CRT displays.
- One 40-pins connector for Dual 18/24-bits LVDS LCD displays.
- One 4-pins connector for TVOUT displays.
- Support dual Independent display, Display devices can be selectable by BIOS or graphic drivers.

10/100M/1000M Ethernet

- Two Realtek RT8111C on board for Dual GbE LAN support.
- Support WOL and Remote Boot with PXE or RPL protocol.

On Board I/O

- Winbond 83627HF LPC I/F Super I/O chip.
- Four serial ports as COM1~COM4. COM2 is RS232/422/485 selectable by jumper.
- One Parallel port supports SPP/ECP/EPP mode.
- One IrDA port.
- Six USB 2.0 ports support USB KB/MS and storage devices.
- PS2 Keyboard and Mouse.
- One 8-bits digital I/O ports with configurable input and output.

PIDE and SATA

- PIDE controller built in ICH7M supports up to ATA100.
- One standard 44-pins box header to support 2.5" HDD or DOM Flash Disk.
- Two SATA connectors from ICH7M support SATA-I and SATA-II devices.
- One 50-pins CF-II socket for Compact Flash Card.

Watchdog Timer

- Programmable watchdog timer for 1~255 seconds.

CMOS

- On-board RTC with 242 bytes of Battery-back CMOS RAM.

Audio

- RealTek ALC888 High-Definition Audio chip on-board.
- Support Audio Line-In, Line-OUT and MIC.

PCI/ISA/Mini-PCI

- PISA BUS v1.7 compliant interface support standard PISA bus backplane with PCI and ISA slots.
- One Mini-PCI 124pins Type-B socket.

Power

- Support ATX and AT mode.
- 4-pins power connector on board for stand-alone operation.

Software Compatibility

- Microsoft windows: Win2K, Win XP 32/64-bits, Vista 32/64-bits, Windows 7 32/64-bits.
- Linux 32-bits/64-bits and DOS 6.22.

Cooling

- Two cooling FAN connectors for CPU cooler and System FAN.

Dimensions

- 185mm (W) x 122mm (L). PISA Half-size Card Standard form factor.
- 4 screw holes on four corners for stand-alone operation.

Operating Temperature

- 0 to 60 °C operating Range.
- -40 °C to 70 °C storage.
- Relative Humidity: 5~95%, non-condensing.

Chapter 2 Jumper setting & Connectors


2.1 JUMPERS ON THE E12.....	8
2.2 CONNECTORS ON THE E12	13

2.1 Jumpers on the E12

The jumpers on the E12 allow you to configure your Main Board according to the needs of your applications. If you have doubts about the best jumper configuration for your needs, contact your dealer or sales representative. The following table lists the jumpers on E12 and their respective functions.

Jumper Locations on the E12	9
JP1: Clear CMOS RAM Data	10
JP2: CF Card Mode Selection	10
COM2MODE: RS232/RS422/RS485.....	11
AT MODE: AT Mode Selection	12
LCDPWR: LCD PANEL Power Selection	12

Jumper Locations on the E12

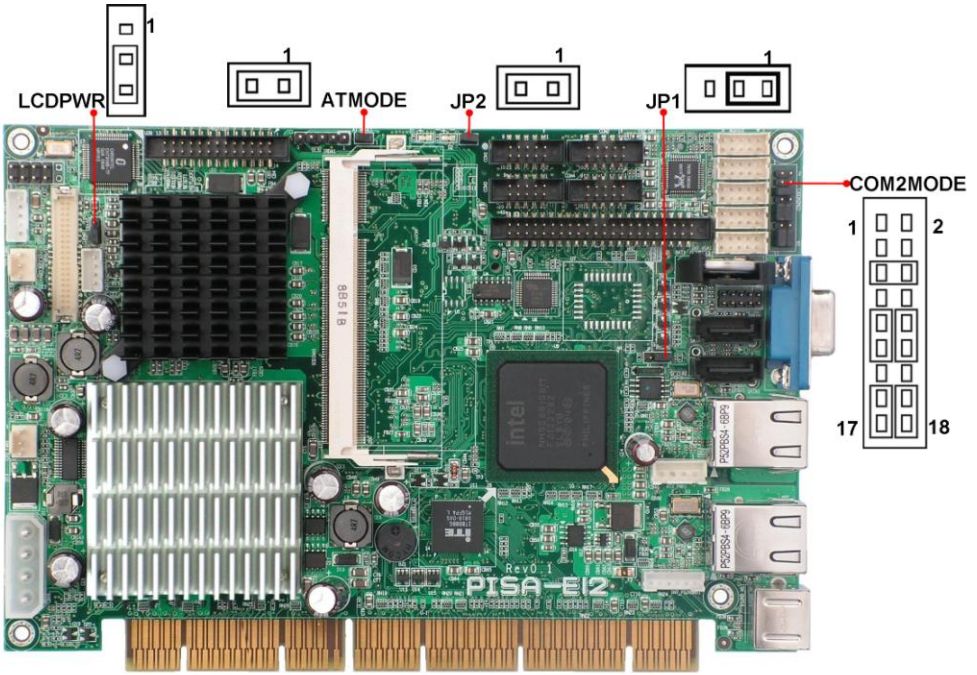


JP1: Clear CMOS RAM Data

This 3-pin Jumper allows the user to disconnect the built-in 3V battery power to clear the information stored in the CMOS RAM.


To clear the CMOS data:

- (1) Turn off the system power.
- (2) Remove Jumper cap from pin1&2.
- (3) Short the pin2 and pin3 for three seconds.
- (4) Put Jumper cap back to pin1 & 2.
- (5) Turn on your computer.
- (6) Hold Down <Delete> during boot up and enter BIOS setup to enter your preferences.

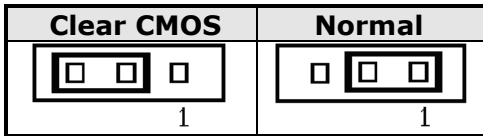

JP2: CF Card Mode Selection

This Jumper is to select the CF works as Secondary Channel Master device or Slave device.



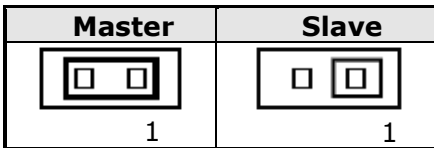


COM2MODE: RS232/RS422/RS485


COM2 support multi-protocols include RS232, RS422 and RS485, while COM1, COM3 and COM4 support diffused RS232 protocol.

The Protocols of COM2 can be set up through jumpers. COM2MODE: COM2 Protocols selection.

The pin-out for each mode is illustrated on next chapter.

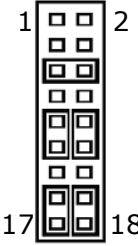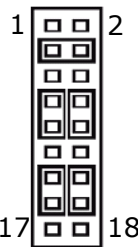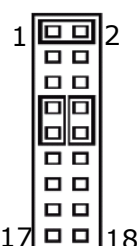
COM2MODE	I/F TYPE
	RS-232
	RS-422
	RS-485

AT MODE: AT Mode Selection

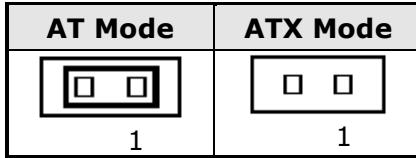

LCDPWR: LCD PANEL Power Selection

LCDPWR can be used to select the Panel LCD supply power: +3.3V or +5V. The default setting is on +3.3V. User need to check the LCD panel spec and adjust this jumper to make Panel work in specified power rail. This Jumper serves LVDS LCD connector.

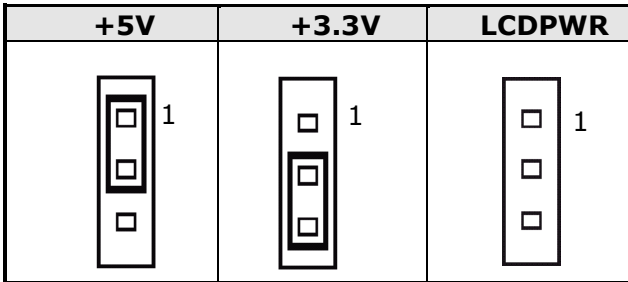


2.2 Connectors on the E12


The connector on the E12 allows you to connect external devices such as keyboard, floppy disk drives, hard disk drives, printers and etc. The following table lists the connectors on E12 and their respective page number.

Connector Locations on the E12	14
AUDIO Connector	15
DIO Connector	15
USB12, 34, 56 Connectors.....	15
INT_VGA Connector.....	16
SATA1.2 Connectors	16
VGA Connector	17
LAN1, 2 GbE Connectors	17
ATX-PWR Connector	18
INT_KBMS Connector.....	19
PS/2 Keyboard & Mouse Connector.....	19
PWR_IN Connector	19
FRONT_PANEL Connector	20
BACK LITE Connector.....	21
System FAN Connector	21
CPUF FAN Connector.....	21
LVDS LCD Connector	22
LPT Port	23
IrDA Connector	23
CF-II Connector (bot)	24
COM1, 2, 3, 4 Serial Ports	25
TV-OUT Connector.....	25
PIDE1 Connector	26

Connector Locations on the E12

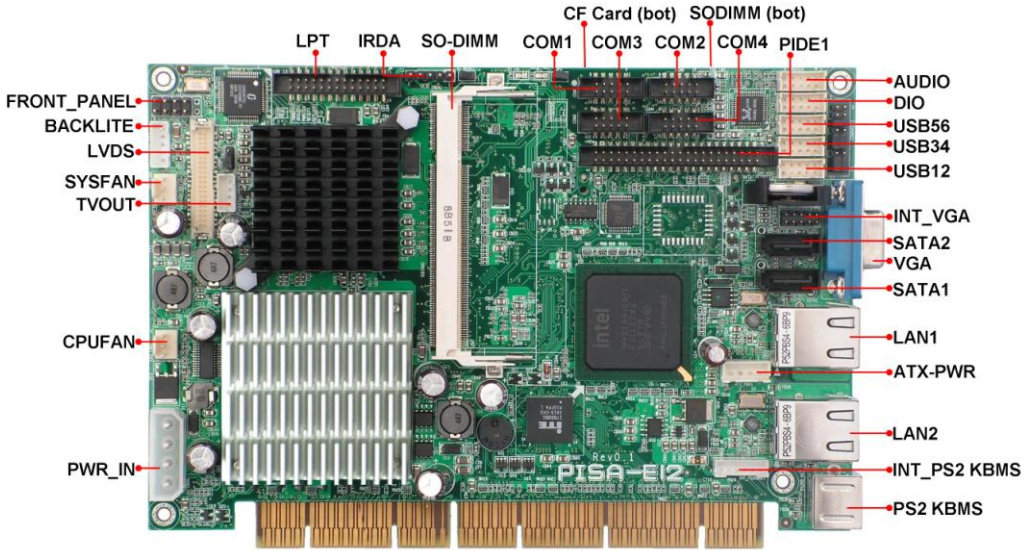

AUDIO Connector



Signal Name	Pin #	Pin #	Signal Name
JD0	1	2	NC
MIC1-IN-L	3	4	MIC1-IN-R
GND	5	6	GND
LINEOUT-L	7	8	LINE-IN-L
LINEOUT-R	9	10	LINE-IN-R

DIO Connector

DIO ports support 8 digital I/O bits. Each bit can be configured as Input or output individually. All bits are 5V tolerant.



Signal Name	Pin #	Pin #	Signal Name
GND	1	2	+5V
DIO_0	3	4	DIO_4
DIO_1	5	6	DIO_5
DIO_2	7	8	DIO_6
DIO_3	9	10	DIO_7

USB12, 34, 56 Connectors


The following table shows the pin outs of the USB12, USB34, USB56 connectors.



Signal Name	Pin #	Pin #	Signal Name
N.C.	1	2	VCC
GND	3	4	USB-
USB+	5	6	USB+
USB-	7	8	GND
VCC	9	10	N.C.


INT_VGA Connector

INT_VGA is for internal Video A/D board connection. The pin out is listed as below:

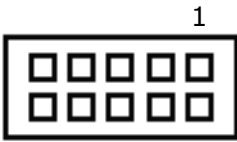


Signal Name	Pin #	Pin #	Signal Name
RED	1	2	GND
GREEN	3	4	GND
BLUE	5	6	GND
HSYNC	7	8	DDC_DATA
VSYNC	9	10	DDC_CLK

SATA1.2 Connectors



Pin #	Signal Name
1	GND
2	SATARX+
3	SATARX-
4	GND
5	SATATX-
6	SATATX+
7	GND


VGA Connector



Signal Name	Pin #	Pin #	Signal Name
Red	1	2	Green
Blue	3	4	N.C.
GND	5	6	GND
GND	7	8	GND
N.C.	9	10	GND
N.C.	11	12	DDC_DATA
HSYNC	13	14	VSYNC
DDC_CLK	15		

LAN1, 2 GbE Connectors


This connector is for the 10/100/1000Mbps Ethernet capability. The figure below shows the pin out assignments of this connector and its corresponding input jack.

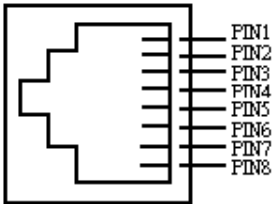

Pin #	Signal Name
1	MDI0+
2	MDI0-
3	MDI1+
4	MDI1-
5	MDI2+
6	MDI2-
7	MDI3+
8	MDI3-

ATX-PWR Connector

This is a four-pin connector to supports the ATX power and corresponding back-plane. When your back-plane is configured to perform ATX power supply Soft-on/off function, you have to connect the control signals and stand-by power on this connector to your back-plane by a corresponding cable.

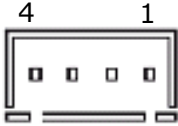

Pin #	Signal Name
1	PWOK
2	5VSB
3	PS_ON-
4	GND

When PWRMODE are chosen as AT Mode, please make sure short AT-MODE Jumper. The setting is illustrated as below :




AT-MODE

When PWRMODE are chosen as ATX Mode, you will need a cable to connect control signal and 5VSB standby power from backplane to ATX-PWR connector on PISA-E12.




AT-MODE
Jumper

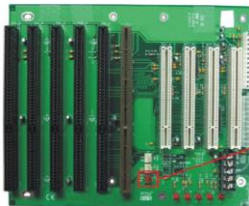

BACKPLANE




CABLE



PISA-E12

INT_KBMS Connector


INT_KBMS is for internal input devices or MSR connection. The pin out is listed as below:



Signal Name	Pin #	Pin #	Signal Name
KB-CLOCK	1	2	KB-DATA
MS-CLOCK	3	4	MS-DATA
KBVCC	5	6	GND


PS/2 Keyboard & Mouse Connector

The following table describes the pin assignment of PS/2 Keyboard and Mouse connector, which is mount on button of bracket. To attach PS/2 Keyboard and mouse, users need to connect trough a PS/2 1-to-2 Y-cable and plug into this Mini-Din connector. All the PISA-E12 boards come with a Y-cable. Contact with your dealer if the Y-cable is missing.

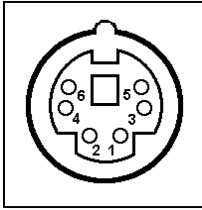

Pin #	Signal Name
1	Keyboard data
2	Mouse data
3	GND
4	5V
5	Keyboard clock
6	Mouse clock


PWR_IN Connector



Signal Name	Pin #	Pin #	Signal Name
+12V	1	2	GND
GND	3	4	+5V


FRONT_PANEL Connector

The front panel of the case has a control panel, which provides light indication of the computer activities and switches to change the computer status.

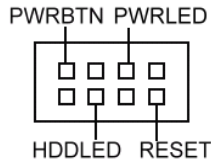

➤ ATX Power ON/OFF Button


This 2-pin connector acts as the “Power Supply On/Off Switch” on the E12 main board. When pressed, the switch will force the Main board to power on. When pressed again, it will force the main board to power off.

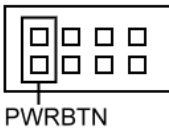

PWR BTN Pin #	Signal Name
1	PWR-BTN
5	GND

➤ IDE Hard Disk LED Connector


This connector connects to the hard drive activity LED on control panel. This LED will flash when the HDD is being accessed.

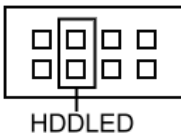

IDE LED Pin #	Signal Name
2	VCC
6	HDDLED

➤ Power-On LED


This connector allows users to connect to Front Panel Power indicator.

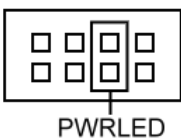

PWR LED Pin #	Signal Name
3	VCC
7	Ground

➤ RESET Switch

The reset switch allows the user to reset the system without turning the main power switch off and then on. Orientation is not required when making a connection to this header.

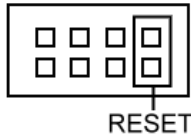

RESET Pin #	Signal Name
4	Reset
8	Ground


BACK LITE Connector



Pin #	Signal Name
1	+12V
2	GND
3	Brightness
4	ON/OFF
5	GND

System FAN Connector


This is a 3-pin header for the system fan.

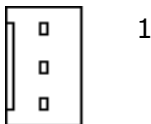

Pin #	Signal Name
1	Ground
2	+12V
3	SYSPWM

CPUF FAN Connector


This is a 3-pin header for the CPU fan.

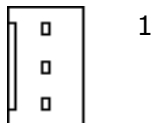

Pin #	Signal Name
1	Ground
2	+12V
3	CPUPWM

LVDS LCD Connector


The LCD panel, inverter for LCD LAMP, Touch-screen Serial Interface must be connected to this LVDS header, using the below described connector:

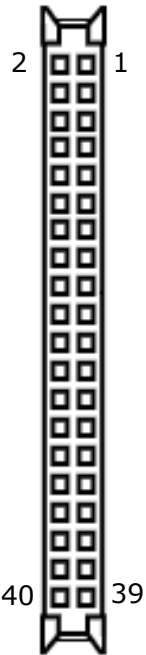

Signal Name	Pin #	Pin #	Signal Name
+12V	2	1	+12V
GND	4	3	GND
LCDVDD 5V/3.3V	6	5	LCDVDD 5V/3.3V
GND	8	7	GND
BCKLITE_ON	10	9	BRIGHTNES
LVDS_GND	12	11	LVDS_GND
CHB_TX0+	14	13	CHA_TX0+
CHB_TX0-	16	15	CHA_TX0-
LVDS_GND	18	17	LVDS_GND
CHB_TX1+	20	19	CHA_TX1+
CHB_TX1-	22	21	CHA_TX1-
LVDS_GND	24	23	LVDS_GND
CHB_TX2+	26	25	CHA_TX2+
CHB_TX2-	28	27	CHA_TX2-
LVDS_GND	30	29	LVDS_GND
CHB_TXC+	32	31	CHA_TXC+
CHB_TXC-	34	33	CHA_TXC-
LVDS_GND	36	35	LVDS_GND
CHB_TX3+	38	37	CHA_TX3+
CHB_TX3-	40	39	CHA_TX3-

LPT Port


The LPT parallel port is a standard DSUB 26-pins Female connector. It can be configured as EPP or ECP or SPP mode.

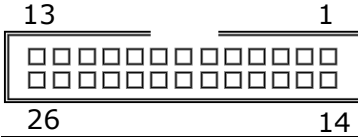

Signal Name	Pin #	Pin #	Signal Name
Strobe	1	14	/AUTOFD
DATA0	2	15	/ERROR
DATA1	3	16	/INIT
DATA2	4	17	SELIN
DATA3	5	18	GND
DATA4	6	19	GND
DATA5	7	20	GND
DATA6	8	21	GND
DATA7	9	22	GND
/ACK	10	23	GND
BUSY	11	24	GND
PE	12	25	GND
SLCT	13	26	GND


IrDA Connector

This connector is used for an IrDA connector for wireless communication.



IrDA Pin #	Signal Name
1	+5V
2	CIRRX
3	IRTX
4	Ground
5	IRTX

CF-II Connector (bot)

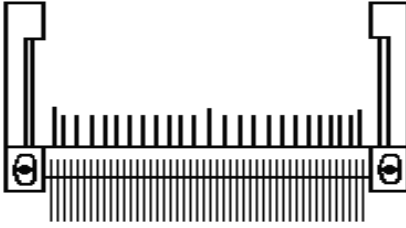


Signal Name	Pin #	Pin #	Signal Name
GND	1	2	PDD3
PDD4	3	4	PDD5
PDD6	5	6	PDD7
PCS1-	7	8	GND
GND	9	10	GND
GND	11	12	GND
VCC	13	14	GND
GND	15	16	GND
GND	17	18	PDA2
PDA1	19	20	PDA0
PDD0	21	22	PDD1
PDD2	23	24	N.C.
N.C.	25	26	N.C.
PDD11	27	28	PDD12
PDD13	29	30	PDD14
PDD15	31	32	PCS3-
N.C.	33	34	PDIOR-
PDIOW-	35	36	VCC
IRQ14	37	38	VCC
MST#_SLV	39	40	N.C.
PST1-	41	42	PIORDY
PDDREQ	43	44	PDDACK-
CF_LED-	45	46	N.C.
PDD8	47	48	PDD9
PDD10	49	50	GND

COM1, 2, 3, 4 Serial Ports

COM1, COM2, COM3, COM4 a 10-pin header connector, is the onboard COM1, COM2, COM3, COM4 serial port of the E12.

The following table shows its pin assignments.

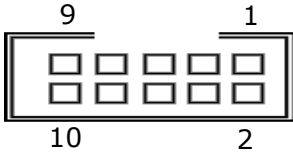


Pin #	RS232 Mode Signal Name
1	DCD, Data carrier detect
2	RXD, Receive data
3	TXD, Transmit data
4	DTR, Data terminal ready
5	GND, ground
6	DSR, Data set ready
7	RTS, Request to send
8	CTS, Clear to send
9	Ring-IN
10	N.C.

TV-OUT Connector



Pin #	Signal Name
1	LUMA
2	CHOMA
3	GND
4	CVBS

PIDE1 Connector

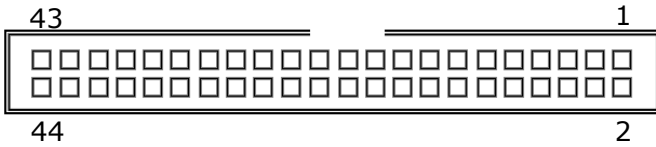

Signal Name	Pin #	Pin #	Signal Name
Reset IDE	1	2	Ground
Host data 7	3	4	Host data 8
Host data 6	5	6	Host data 9
Host data 5	7	8	Host data 10
Host data 4	9	10	Host data 11
Host data 3	11	12	Host data 12
Host data 2	13	14	Host data 13
Host data 1	15	16	Host data 14
Host data 0	17	18	Host data 15
Ground	19	20	Key
DRQ	21	22	Ground
Host IOW	23	24	Ground
Host IOR	25	26	Ground
IOCHRDY	27	28	Host PU 0
DACK	29	30	Ground
IRQ14	31	32	No connect
Address 1	33	34	P66DET
Address 0	35	36	Address 2
Chip select 1	37	38	Chip select 3
Activity	39	40	Ground
+5V	41	42	+5V
GND	43	44	No connect

Chapter 3 BIOS Setup

This chapter describes the different settings available in the Award BIOS that comes with the E12 CPU card. The topics covered in this chapter are as follows:

3.1 MAIN MENU.....	32
3.2 STANDARD CMOS FEATURES.....	35
3.3 ADVANCED BIOS FEATURES.....	40
3.4 ADVANCED CHIPSET FEATURES	47
3.5 INTEGRATED PERIPHERALS	52
3.6 POWER MANAGEMENT SETUP.....	68
3.7 PNP/PCI CONFIGURATION	74
3.8 PC HEALTH STATUS.....	78
3.9 FREQUENCY/VOLTAGE CONTROL	80
3.10 LOAD FAIL-SAFE DEFAULTS	80
3.11 LOAD OPTIMIZED DEFAULTS.....	81
3.12 SET SUPERVISOR/USER PASSWORD	81
3.13 SAVE & EXIT SETUP	83
3.14 EXIT WITHOUT SAVING.....	84

BIOS Introduction

This Chapter discusses Award™ Setup program built into the E12 BIOS. The Setup program allows users to modify the basic system configuration. This special information is then stored in battery-backed RAM so that it retains the Setup information when the power is turned off.

The AwardBIOS™ installed in E12 is a custom version of an industry standard BIOS. This means that it supports Intel Core 2 Duo in a standard IBM-AT compatible input/output system. The BIOS provides critical low-level support for standard devices such as disk drives and serial and parallel ports.

It also adds non-standard, features such as virus and password protection as well as special support for detailed fine-tuning of the chipset controlling the entire system.

The rest of this chapter is intended to guide you through the process of configuring your system using Setup.

Starting Setup

The AwardBIOS™ is immediately activated when you first power on the computer. The BIOS reads the system information contained in the CMOS and begins the process of checking out the system and configuring it. When it finishes, the BIOS will seek an operating system on one of the disks and then launch and turn control over to the operating system.

While the BIOS is in control, the Setup program can be activated in one of two ways:

1. By pressing immediately after switching the system on, or
2. by pressing the key when the following message appears briefly at the bottom of the screen during the POST (Power On Self-Test).

Press DEL to enter SETUP.

If the message disappears before you respond and you still wish to enter Setup, restart the system to try again by turning it OFF then ON or pressing the "RESET" button on the system case. You may also restart by simultaneously pressing <Ctrl>, <Alt>, and <Delete> keys. If you do not press the keys at the correct time and the system does not boot, an error message will be displayed and you will again be asked to...

PRESS F1 TO CONTINUE, DEL TO ENTER SETUP

Using Setup

In general, you use the arrow keys to highlight items, press <Enter> to select, use the PageUp and PageDown keys to change entries, press <F1> for help and press <Esc> to quit. The following table provides more detail about how to navigate in the Setup program using the keyboard.

Key	Function
Up Arrow	Move to the previous item
Down Arrow	Move to the next item
Left Arrow	Move to the item on the left (menu bar)
Right Arrow	Move to the item on the right (menu bar)
Esc	Main Menu: Quit without saving changes Submenus: Exit Current page to the next higher level menu
Move Enter	Move to the item you desired
PgUp key	Increase the numeric value or make changes
PgDn key	Decrease the numeric value or make changes
+ key	Increase the numeric value or make changes
- key	Decrease the numeric value or make changes
Esc key	Main Menu -- Quit and not save changes into CMOS Status Page Setup Menu and Option Page Setup Menu -- Exit current page and return to Main Menu
F1 key	General help on Setup navigation keys
F5 key	Load previous values from CMOS
F6 key	Load the fail-safe defaults from BIOS default table
F7 key	Load the optimized defaults
F10 key	Save all the CMOS changes and exit

Navigating through the menu bar

Use the left and right arrow keys to choose the menu you want to be in.

To display a sub menu

Use the arrow keys to move the cursor to the sub menu you want. Then press <Enter>. A ">" pointer marks all sub menus.


Getting Help

Press F1 to pop up a small help window that describes the appropriate keys to use and the possible selections for the highlighted item. To exit the Help Window press <Esc> or the F1 key again.

In Case of Problems

If, after making and saving system changes with Setup, you discover that your computer no longer is able to boot, the AwardBIOS™ supports an override to the CMOS settings which resets your system to its defaults. The best advice is to only alter settings that you thoroughly understand. To this end, we strongly recommend that you avoid making any changes to the chipset defaults. These defaults have been carefully chosen by both Award and E12 manufacturer to provide the absolute maximum performance and reliability. Even a seemingly small change to the chipset setup has the potential for causing you to use the override.

3.1 Main Menu

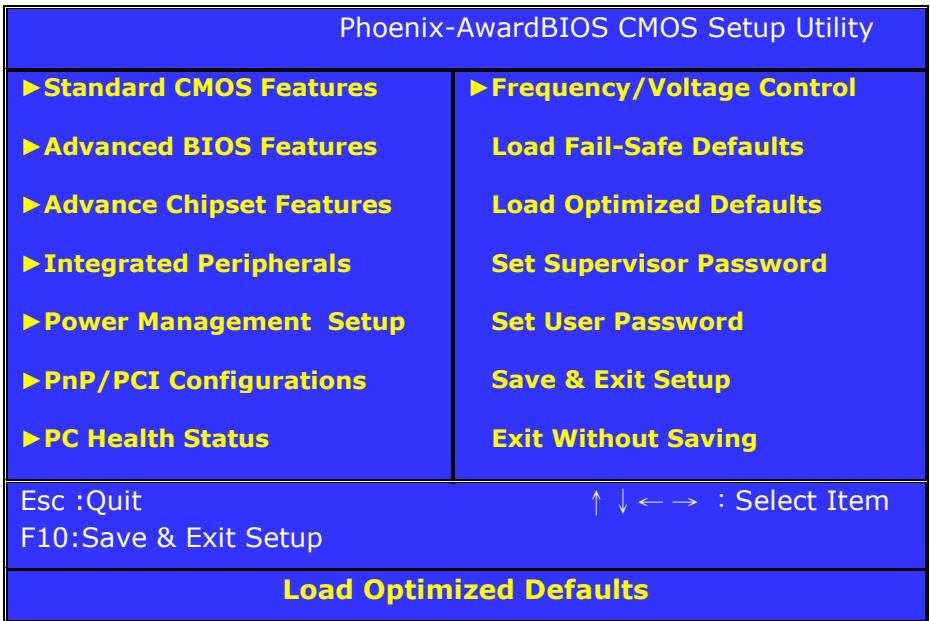

(Figure 1)

Note that a brief description of each highlighted selection appears at the bottom of the screen.

Setup Items

The main menu includes the following main setup categories.

▶ Standard CMOS Features

Use this menu for basic system configuration.

▶ Advanced BIOS Features

Use this menu to set the Advanced Features available on your system.

➤ **Advance Chipset Features**

Use this menu to change the values in the chipset registers and optimize your system's performance.

➤ **Integrated Peripherals**

Use this menu to specify your settings for integrated peripherals.

➤ **Power Management Setup**

Use this menu to specify your settings for power management.

➤ **PnP/PCI Configurations**

Use this menu to set up the PnP/PCI configuration.

➤ **PC Health Status**

Use this menu to display the CPU temperature, FAN speed and voltages.

➤ **Frequency/Voltage Control**

Use this menu to specify your settings for frequency/voltage control.

➤ **Load Fail-Safe Defaults**

Use this menu to load the BIOS default values for the minimal/stable performance for your system to operate.

➤ **Load Optimized Defaults**

Use this menu to load the BIOS default values that are factory settings for optimal performance system operations. While Award has designed the custom BIOS to maximize performance, the factory has the right to change these defaults to meet their needs.

➤ **Set Supervisor/ User Password**

Use this menu to set User and Supervisor Passwords.

➤ **Save & Exit Setup**

Save CMOS value changes to CMOS and exit setup.

➤ **Exit Without Saving**

Abandon all CMOS value changes and exit setup.

3.2 Standard CMOS Features

The items in Standard CMOS Setup Menu are divided into 10 categories. Each category includes no, one or more than one setup items. Use the arrow keys to highlight the item and then use the <PgUp> or <Pg Dn> keys to select the value you want in each item.

Phoenix-Award BIOS CMOS Setup Utility Standard CMOS Features		
Date (mm :dd: yy)	Mon, Apr 28 2008	Item Help Menu Level ► Change the day, month, year, and century
Time (hh: mm: ss)	15 : 35 : 35	
▶ IDE Channel 0 Master	[None]	
▶ IDE Channel 0 Slave	[None]	
▶ IDE Channel 1 Master	[None]	
▶ IDE Channel 1 Slave	[None]	
Drive A	[None]	
Drive B	[None]	
Video	[EGA/VGA]	
Halt On	[All , But Disk/Key]	
Base Memory	639K	
Extend Memory	1038336K	
Total Memory	1039360K	
↑ ↓ ← → : Move Enter: Select +/-/PU/PD: Value F10:Save Esc: Exit F1:General Help F5:Previous Value F6:Fail-Safe Defaults F7:Optimized Default		

(Figure 2)

This table shows the selections that you can make on the Standard CMOS Menu

Item	Options	Description
Date	Month DD YYYY	Set the system date. Note that the 'Day' automatically changes when you set the date
Time	HH : MM : SS	Set the system time
IDE Channel 0 Master	Options are in its sub menu	Press <Enter> to enter the sub menu of detailed options
IDE Channel 0 Slave	Options are in its sub menu	Press <Enter> to enter the sub menu of detailed options
IDE Channel 1 Master	Options are in its sub menu	Press <Enter> to enter the sub menu of detailed options
IDE Channel 1 Slave	Options are in its sub menu	Press <Enter> to enter the sub menu of detailed options
Drive A Drive B	None 360K, 5.25 in 1.2M, 5.25 in 720K, 3.5 in 1.44M, 3.5 in 2.88M, 3.5 in	Select the type of floppy disk drive installed in your system
Video	EGA/VGA CGA 40 CGA 80 MONO	Select the default video device
Halt On	All Errors No Errors All, but Keyboard All, but Diskette All, but Disk/Key	Select the situation in which you want the BIOS to stop the POST process and notify you
Base Memory	N/A	Displays the amount of conventional memory detected during boot up
Extended Memory	N/A	Displays the amount of extended memory detected during boot up
Total Memory	N/A	Displays the total memory available in the system

IDE Channel 0, 1 Master/ Slave

The IDE adapters control the hard disk drive. Use a separate sub menu to configure each hard disk drive. Figure 3 shows the IDE Channel 0 / Channel 1 master sub menu.

Phoenix-Award BIOS CMOS Setup Utility IDE Channel 0 Master		
IDE HDD Auto-Detection	[Press Enter]	Item Help Menu Level ►
IDE Channel 0 Master Access Mode	[Auto] [Auto]	To auto-detect the HDD's size, head...on this channel
Capacity	0 MB	
Cylinder	0	
Head	0	
Precomp	0	
Landing Zone	0	
Sector	0	
↑↓←→ : Move Enter: Select +/-/PU/PD: Value F10:Save Esc: Exit F1:General Help F5:Previous Value F6:Fail-Safe Defaults F7:Optimized Default		

(Figure 3)

Use the legend keys to navigate through this menu and exit to the main menu. Use the Table listed below to configure the hard disk.

Item	Options	Description
IDE HDD Auto-detection	Press Enter	Press Enter to auto-detect the HDD on this channel. If detection is successful, it fills the remaining fields on this menu.
IDE Channel 0 Master	None Auto Manual	Selecting 'manual' lets you set the remaining fields on this screen. Selects the type of fixed disk. "User Type" will let you select the number of cylinders, heads, etc. Note: PRECOMP=65535 means NONE !
Access Mode	CHS LBA Large Auto	Choose the access mode for this hard disk
Capacity	Auto Display your disk drive size	Disk drive capacity (Approximated). Note that this size is usually slightly greater than the size of a formatted disk given by a disk checking program.
The following options are selectable only if the 'IDE Channel 0 Master' item is set to 'Manual'		
Cylinder	Min = 0 Max = 65535	Set the number of cylinders for this hard disk.
Head	Min = 0 Max = 255	Set the number of read/write heads
Precomp	Min = 0 Max = 65535	**** Warning: Setting a value of 65535 means no hard disk
Landing zone	Min = 0 Max = 65535	****
Sector	Min = 0 Max = 255	Number of sectors per track

Drive A/B

These fields identify the types of floppy disk drive A or drive B that has been installed in the computer. The available specifications are:

None(**default**) 360K 1.2M 720K 1.44M 2.88M
5.25 in. 5.25 in. 3.5 in. 3.5 in. 3.5 in.

Video

This field selects the type of video display card installed in your system. You can choose the following video display cards:

EGA/VGA: For EGA, VGA, SEGA, SVGA or PGA monitor adapters. (**default**)

CGA 40: Power up in 40 column mode.

CGA 80: Power up in 80 column mode.

MONO: For Hercules or MDA adapters.

Halt On

This field determines whether the system will halt if an error is detected during power up.

All errors	Whenever the BIOS detects a non-fatal error, the system will stop and you will be prompted.
No errors	The system boot will not be halted for any error that may be detected.
All, But Keyboard	The system boot will not be halted for a keyboard error; it will stop for all other errors
All, But Diskette	The system boot will not be halted for a disk error; it will stop for all other errors.
All, But Disk/Key	The system boot will not be halted for a key- board or disk error; it will stop for all others. (default)

3.3 Advanced BIOS Features

This section allows you to configure your system for basic operation. You have the opportunity to select the system's default speed, boot-up sequence, keyboard operation, shadowing and security.

Phoenix-Award BIOS CMOS Setup Utility Advanced BIOS Features		
▶ CPU Features	[Press Enter]	Item Help
▶ Hard Disk Boot Priority	[Press Enter]	Menu Level ▶
Virus Warning	[Disabled]	
CPU L1 & L2 Cache	[Enabled]	
CPU L3 Cache	[Enabled]	
Quick Power On Self Test	[Enabled]	
First Boot Device	[Hard Disk]	
Second Boot Device	[CDROM]	
Third Boot Device	[LS120]	
Boot Other Device	[Enabled]	
Swap Floppy Drive	[Disabled]	
Boot Up Floppy Seek	[Enabled]	
Boot UP Num Lock Status	[Off]	
Gate A20 Option	[Fast]	
Typematic Rate Setting	[Disabled]	
x Typematic Rate (Chars/Sec)	6	
x Typematic Delay (Msec)	250	
Security Option	[Setup]	
x APIC Mode	Enabled	
MPS Version Control For OS	[1.4]	
OS Select For DRAM > 64MB	[Non-OS2]	
Report No FDD For WIN 95	[No]	
↑ ↓ ← → : Move Enter: Select +/-/PU/PD: Value F10:Save Esc: Exit F1:General Help F5:Previous Value F6:Fail-Safe Defaults F7:Optimized Default		

(Figure 4)

➤ CPU Feature

Phoenix-Award BIOS CMOS Setup Utility CPU Feature		
Delay Prior to Thermal	[16 Min]	Item Help Menu Level ▶
Limit CPUID MaxVal	[Disabled]	
C1E Function	[Auto]	
Execute Disabled Bit	[Enabled]	
↑↓←→ : Move Enter: Select +/-/PU/PD: Value F10:Save Esc: Exit F1:General Help F5:Previous Value F6:Fail-Safe Defaults F7:Optimized Default		

(Figure 5)

Delay Prior to Thermal

Delay Prior To Thermal is set at 16 minutes as default, which means the board will wait 16 minutes before it activates the processor's integrated thermal control circuit.

The choice: 4 Min , 8 Min, 16 Min **(default)**, 32 Min.

Limit CPUID Max Val

The choice: Enabled, Disabled **(default)**.


C1E Function

The choice: Auto **(default)**, Disabled

Execute Disabled Bit

The choice: Enabled **(default)**, Disabled

➤Hard Disk Boot Priority

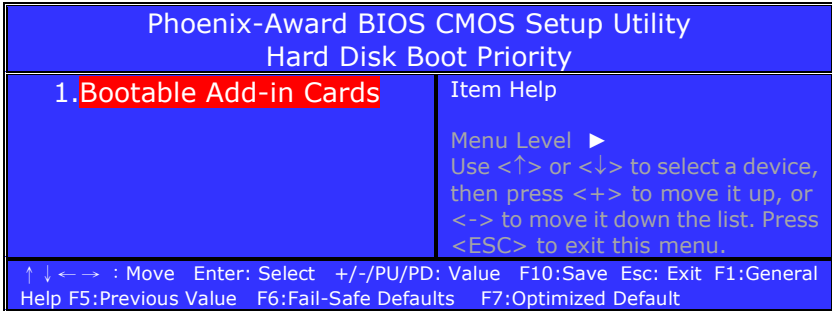

(Figure 6)

Bootable Add-in Cards

This is for setting the priority of the hard disk boot order when the "Hard Disk" option is selected in the "[First/Second/Third] Boot Device" menu item.

Virus Warning

Allows you to choose the VIRUS Warning feature for IDE Hard Disk boot sector protection.

If this function is enabled and someone attempt to write data into this area, BIOS will show a warning message on screen and alarm beep.

Enabled	Activates automatically when the system boots up causing a warning message to appear when anything attempts to access the boot sector or hard disk partition table.
Disabled	No warning message will appear when anything attempts to access the boot sector or hard disk partition table. (default)

CPU L1 & L2 Cache

These two categories speed up memory access. However, it depends on CPU/chipset design.

Enabled	Enable cache (default)
Disabled	Disable cache

CPU L3 Cache

This field is used to enable or disable the CPU's L3 cache. The choice: Enabled **(default)**, Disabled.

Quick Power On Self Test

Allows the system to skip certain tests while booting. This will decrease the time needed to boot the system.

Enabled	Enable quick POST (default)
Disabled	Normal POST

First/Second/Third Boot Device

The BIOS attempts to load the operating system from the devices in the sequence selected in these items. The Choice: Floppy, LS120, Hard-Disk, ZIP100, CDROM, Disabled, USB-FDD, USB-ZIP, USB-CDROM, Legacy LAN.

Item	Default
First Boot Device	Hard-Disk
Second Boot Device	CDROM
Third Boot Device	LS120

Boot Other Device

When enabled, BIOS will try to load the operating system from other device when it failed to load from the three devices above.

The choice: Enabled (**default**), Disabled.

Swap Floppy Drive

If the system has two floppy drives, choose "Enabled" to assign physical drive B to logical drive A and vice-versa. The choice: Enabled, Disabled (**default**).

Boot Up Floppy Seek

Selection of the command .Disabled. will speed the boot up. Selection of .Enabled. Searches disk drives during boot up.

The choice: Enabled (**default**), Disabled

Boot Up Num Lock Status

Selects power on state for Num Lock.

The choice: On, Off (**default**).

Gate A20 Option

The choice:

Normal: A pin in the keyboard controller controls GateA20.

Fast (**default**): Lets chipset control GateA20.

Typematic Rate Setting

Keystrokes repeat at a rate determined by the keyboard controller. When enabled, the typematic rate and typematic delay can be selected.

The choice: Enabled, Disabled (**default**).

**If Typematic Rate Setting is [Enabled]
can choice Rate and Delay:**

Typematic Rate (Chars/Sec)

Sets the number of times a second to repeat a keystroke when you hold the key down.

The choice: 6 (**default**), 8, 10, 12, 15, 20, 24, 30

Typematic Rate (Chars/Sec)	
6 [█]
8 []
10 []
12 []
15 []
20 []
24 []
30 []
↑↓: Move Enter: Accept ESC:Abort	

Typematic Delay (Msec)

Sets the delay time after the key is held down before it begins to repeat the keystroke.

The choice: 250 (**default**), 500, 750, and 1000.

Typematic Delay (Msec)	
250 [█]
500 []
750 []
1000 []
↑↓: Move Enter: Accept ESC:	

Security Option

Select whether the password is required every time the system boots or only when you enter setup.

System	The system will not boot and access to Setup will be denied if the correct password is not entered at the prompt.
Setup	The system will boot, but access to Setup will be denied if the correct password is not entered at the prompt. (default)

Note: To disable security, select PASSWORD SETTING at Main Menu and then you will be asked to enter password. Do not type anything and just press <Enter>, it will disable security. Once the security is disabled, the system will boot and you can enter Setup freely.

APIC Mode

This setting allows to enable the APIC mode.
The choice: Enabled **(default)**, Disabled

MPS Version Control For OS

The BIOS supports version 1.1 and 1.4 of the Intel multiprocessor specification.
Select version supported by the operation system running on this computer.
The choice: 1.1, 1.4 **(default)**.

OS Select For DRAM > 64MB


Select OS2 only if you are running OS/2 operating system with greater than 64MB of RAM on the system.
The choice: Non-OS2 **(default)**, OS2.

Report No FDD For WIN 95

The choice: No **(default)**, Yes.

3.4 Advanced Chipset Features

This section allows you to configure the system based on the specific features of the installed chipset. This chipset manages bus speeds and access to system memory resources, such as DRAM and the external cache. It also coordinates communications between the conventional ISA bus and the PCI bus. It must be stated that these items should never need to be altered. The default settings have been chosen because they provide the best operating conditions for your system. The only time you might consider making any changes would be if you discovered that data was being lost while using your system.

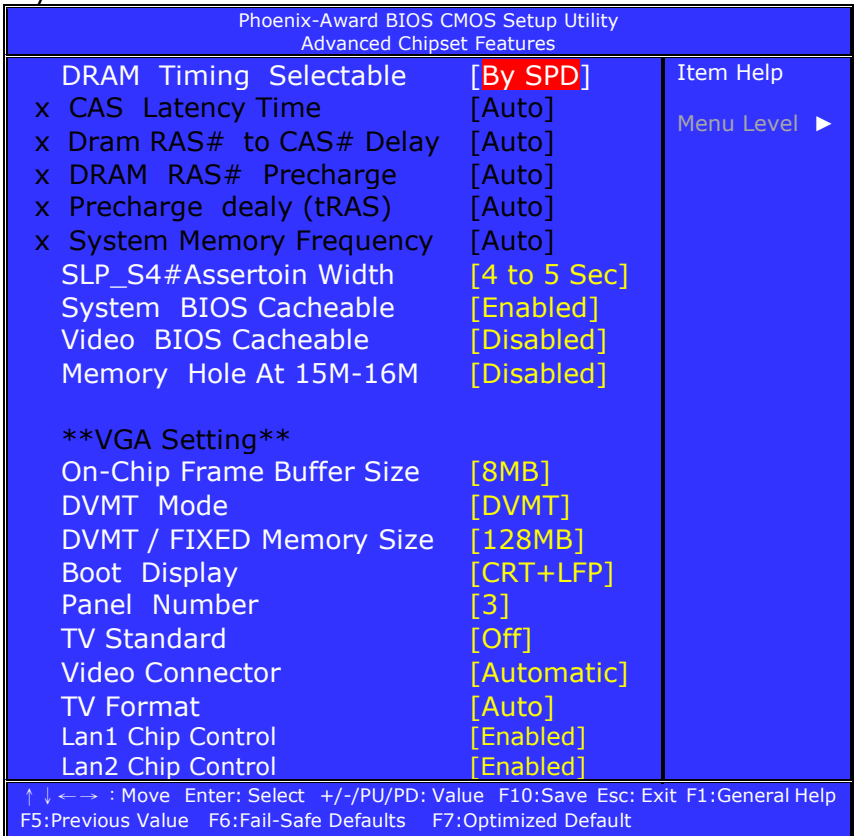

(Figure 7)

DRAM Timing Selectable

The choice: Manual, By SPD (**default**).

If DRAM Timing Selectable is [Manual], can choice these Items:

- ▶ CAS Latency Time
- ▶ Dram RAS# to CAS# Delay
- ▶ DRAM RAS# Precharge
- ▶ Precharge dealy (tRAS)
- ▶ System Memory Frequency

CAS Latency Time

This controls the latency between DDR RAM read command and the time that the data actually becomes available.

Leave this on the default setting.

The choice: 5, 4, 3, 6, Auto (**default**).

DRAM RAS# to CAS# Delay

In order to improve performance, certain space in memory is reserved for PISA cards.

This memory must be mapped into the memory space below 16MB.

The choice: 2, 3, 4, 5, 6, Auto (**default**).

DRAM RAS# Precharge

This controls the idle clocks after issuing a precharge command to DRAM.

Leave this on the default setting.

The choice: Auto (**default**), 2, 3,4,5,6.

Precharge dealy (tRAS)

The choice: Auto (**default**),
4,5,6,7,8,9,10,11,12,13,14,15.

System Memory Frequency

The choice: Auto (**default**), 533MHz, 667MHz

SLP_S4#Assertoin Width

Set SLP_S4# pin.

The choice: 4 to5 Sec (**default**), 3 to 4Sec, 2to 3Sec, 1to2Sec.

System BIOS Cacheable

Selecting the "Enabled" option allows caching of the system BIOS ROM at F0000h-FFFFFh, which is able to improve the system performance. However, any programs that attempts to write to this memory block will cause conflicts and result in system errors.

The choice: Enabled (**default**), Disabled.

Video BIOS Cacheable

Selecting Enabled allows caching of the video BIOS, resulting in better system performance. However, if any program writes to this memory area, a system error may occur.

The choice: Enabled, Disabled (**default**)

Memory Hole At 15M-16M

Enabling this feature reserves 15 MB to 16 MB memory address space for ISA expansion cards that specifically require this setting. This makes memory from 15 MB and up unavailable to the system. Expansion cards can only access memory up to 16 MB.

The choice: Enabled, Disabled (**default**)

On-Chip Frame Buffer Size

User can select frame buffer size.

The choice: 1MB, 8MB (**default**).

DVMT Mode

This field shows the current DVMT mode.

The choice: FIXED, DVMT (**default**), BOTH

DVMT / FIXED Memory Size

This field is used to select the graphics memory size used by DVMT/ Fixed mode.

The choice: 64MB, 128MB (**default**), 224MB

Boot Display

This field is used to select the type of display to use when the system boots.

The choice:

Auto	CRT	TV	EFP
LFP	CRT+LFP (default)	EFP+LFP	

Panel Number

The choice: 1,2,3

(default),4,5,6,7,8,9,10,11,12,13,14,15,16

TV Standard

The choice: Off (**default**), NTSC, PAL, SECAM.

Video Connector

The choice: Automatic (**default**), Composite, Component, Both.

TV Format

The choice:

Auto(default)	NTSC_M	NTSC_M_J
NTSC_433	NTSC_N	PAL_B
PAL_G	PAL_D	PAL_H
PAL_I	PAL_M	PAL_N
PAL_60	SECAM_L	SECAM_L1
SECAN_B	SECAN_D	SECAN_G
SECAN_H	SECAN_K	SECAN_K1


Lan1 Chip Control

The choice: Enabled (**default**), Disabled.

Lan2 Chip Control

The choice: Enabled (**default**), Disabled.

3.5 Integrated Peripherals

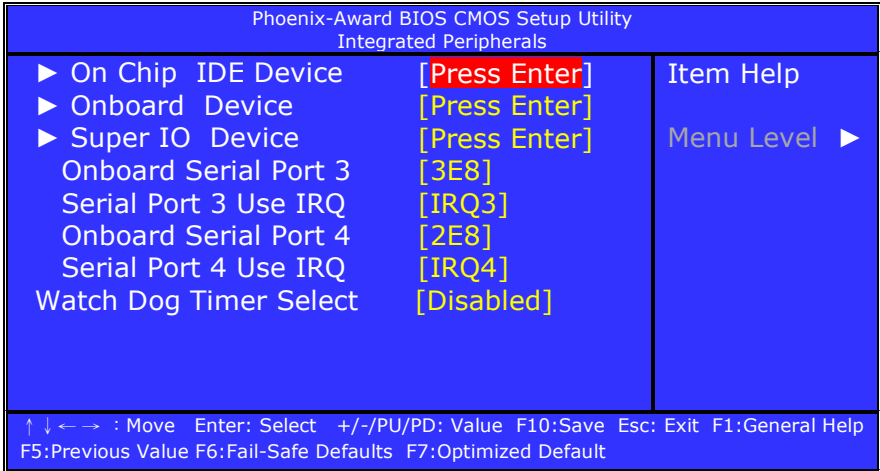

(Figure 8)

➤ On Chip IDE Device

Phoenix-Award BIOS CMOS Setup Utility On Chip IDE Device		
IDE HDD Block Mode	[Enabled]	Item Help
On-Chip Primary PCI IDE	[Enabled]	Menu Level ▶
IDE Primary Master PIO	[Auto]	If your IDE hard drive supports block mode select Enabled for automatic detection of the optimal number of block read/write s per sector the drive can support
IDE Primary Slave PIO	[Auto]	
IDE Primary Master UDMA	[Auto]	
IDE Primary Slave UDMA	[Auto]	
On-Chip Secondary PCI IDE	[Enabled]	
IDE Secondary Master PIO	[Auto]	
IDE Secondary Slave PIO	[Auto]	
IDE Secondary Master UDMA	[Auto]	
IDE Secondary Slave UDMA	[Auto]	
*** On-Chip Serial ATA Setting***		
x SATA Mode	IDE	
On-Chip Serial ATA	[Auto]	
x SATA PORT Speed Settings	Disable	
x PATA IDE Mode	Secondary	
x SATA Port	PO, P2 is Primary	
↑ ↓ ← → : Move Enter: Select +/-/PU/PD: Value F10:Save Esc: Exit F1:General Help F5:Previous Value F6:Fail-Safe Defaults F7:Optimized Default		

(Figure 9)

IDE HDD Block Mode

Block mode is also called block transfer, multiple commands, or multiple sectors read / write.

If your IDE hard drive supports block mode (most new drives do), select Enabled for automatic detection of the optimal number of block mode (most new drives do), select

Enabled for automatic detection of the optimal number of block read /write per sector where the drive can support. The choice: Enabled (**default**), Disabled

On-Chip Primary PCI IDE

This field allows you to enable or disable the primary and secondary IDE controller.

Select disabled if you want to add a different hard drive controller.

The choice: Enabled (**default**), Disabled

IDE Primary/Secondary, Master/Slave PIO

The choice: Auto (**default**), Mode0, Mode1, Mode2, Mode3, Mode4



Caution: Do not use the wrong setting or you will have drive errors

PIO means Programmed Input/output.

Rather than have the BIOS issue a series of commands to effect a transfer to or from the disk drive, PIO allows the BIOS to tell the controller what it wants and then let the controller and the CPU perform the complete task by themselves.

Your system supports five modes, 0 (default) to 4, which primarily differ in timing.

When Auto is selected, the BIOS will select the best available mode after checking your drive.

Auto	The BIOS will automatically set the system according to your hard disk drive's timing (default).
Mode 0-4	You can select a mode that matches your hard disk drive's timing.

IDE Primary/Secondary, Master/ Slave UDMA

The choice: Disabled, Auto (**default**)

On-Chip Secondary PCI IDE

These fields allow you to enable or disable the primary and secondary IDE controller.

Select disabled if you want to add a different hard drive controller.

The choice: Enabled (**default**), Disabled.


On-Chip Serial ATA

Choose the status of serial ATA, the default setting is "Auto" which let system to arrange all parallel and serial

Disabled	Will disable SATA controller. (Figure 12)
Combined Mode	Will combine PATA and SATA, and max of 2 IDE drives in each channel. (Figure 12)
Enhanced Mode	Will enable both SATA and PATA, and max of 6 IDE drives is supported. (Figure 13)
SATA Only	Means SATA is operating in legacy mode. (Figure 14)
Auto	This is the default setting.

ATA resource automatically.

The choice: Disabled, Auto **(default)**, Combined Mode, Enhanced Mode, SATA Only.

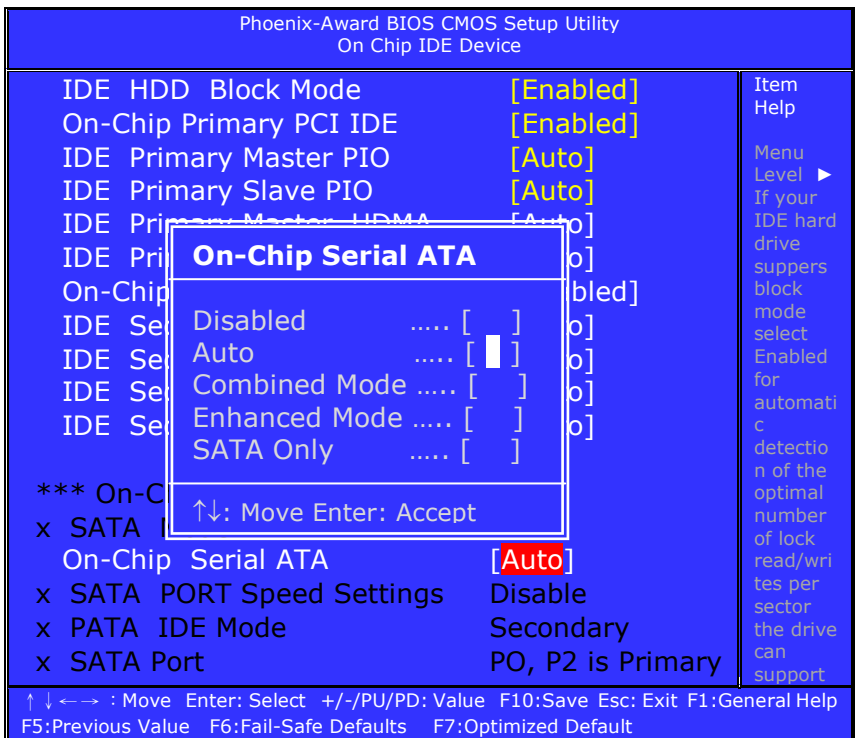

(Figure 10)

When you press [Disabled] or [Auto] on this item will show: [Auto] is the default choice.

Phoenix-Award BIOS CMOS Setup Utility		Item Help
On Chip IDE Device		
IDE HDD Block Mode	[Enabled]	Menu Level ► If your IDE hard drive supports block mode select Enabled for automatic detection of the optimal number of lock read/writes per sector the drive can support
On-Chip Primary PCI IDE	[Enabled]	
IDE Primary Master PIO	[Auto]	
IDE Primary Slave PIO	[Auto]	
IDE Primary Master UDMA	[Auto]	
IDE Primary Slave UDMA	[Auto]	
On-Chip Secondary PCI IDE	[Enabled]	
IDE Secondary Master PIO	[Auto]	
IDE Secondary Slave PIO	[Auto]	
IDE Secondary Master UDMA	[Auto]	
IDE Secondary Slave UDMA	[Auto]	
*** On-Chip Serial ATA Setting***		
x SATA Mode	IDE	
On-Chip Serial ATA	[Auto]	
x SATA PORT Speed Settings	Disable	
x PATA IDE Mode	Secondary	
x SATA Port	PO, P2 is Primary	
↑↓←→ : Move Enter: Select +/-/PU/PD: Value F10:Save Esc: Exit F1:General Help F5:Previous Value F6:Fail-Safe Defaults F7:Optimized Default		

(FigurE12)

When you press [Combined Mode] on this item will show:

Phoenix-Award BIOS CMOS Setup Utility On Chip IDE Device			
IDE HDD Block Mode	[Enabled]	Item Help Menu Level ► If your IDE hard drive supports block mode select Enabled for automatic detection of the optimal number of lock read/writes per sector the drive can support	
On-Chip Primary PCI IDE	[Enabled]		
IDE Primary Master PIO	[Auto]		
IDE Primary Slave PIO	[Auto]		
IDE Primary Master UDMA	[Auto]		
IDE Primary Slave UDMA	[Auto]		
On-Chip Secondary PCI IDE	[Enabled]		
IDE Secondary Master PIO	[Auto]		
IDE Secondary Slave PIO	[Auto]		
IDE Secondary Master UDMA	[Auto]		
IDE Secondary Slave UDMA	[Auto]		
*** On-Chip Serial ATA Setting***			
SATA Mode	[IDE]		
On-Chip Serial ATA	[CombinedMod]		
x SATA PORT Speed Settings	Disable		
PATA IDE Mode	[Secondary]		
x SATA Port	PO, P2 is Primary		
↑ ↓ ← → : Move Enter: Select +/-/PU/PD: Value F10:Save Esc: Exit F1:General Help F5:Previous Value F6:Fail-Safe Defaults F7:Optimized Default			

(Figure12)

SATA Mode

Controls the SATA controller's operating mode.
The choice: IDE (**default**), RAID, AHCI.

PATA IDE Mode

This field is used to select the function mode of the IDE connector.

The only choice:

Secondary: IDE serves as Secondary Master and Secondary Slave channel. SATA 1 and SATA 2 serve as Primary Master and Primary Slave channel.

When you press [Enhanced Mode] on this item will show:

Phoenix-Award BIOS CMOS Setup Utility On Chip IDE Device		Item Help
IDE HDD Block Mode	[Enabled]	Menu Level ▶ If your IDE hard drive supports block mode select Enabled for automatic detection of the optimal number of lock read/writes per sector the drive can support
On-Chip Primary PCI IDE	[Enabled]	
IDE Primary Master PIO	[Auto]	
IDE Primary Slave PIO	[Auto]	
IDE Primary Master UDMA	[Auto]	
IDE Primary Slave UDMA	[Auto]	
On-Chip Secondary PCI IDE	[Enabled]	
IDE Secondary Master PIO	[Auto]	
IDE Secondary Slave PIO	[Auto]	
IDE Secondary Master UDMA	[Auto]	
IDE Secondary Slave UDMA	[Auto]	
*** On-Chip Serial ATA Setting***		
SATA Mode	[IDE]	
On-Chip Serial ATA	[Enhanced Mode]	
SATA PORT Speed Settings	[Disable]	
x PATA IDE Mode	Secondary	
x SATA Port	PO, P2 is Primary	
↑ ↓ ← → : Move Enter: Select +/-/PU/PD: Value F10:Save Esc: Exit F1:General Help F5:Previous Value F6:Fail-Safe Defaults F7:Optimized Default		

(Figure13)

SATA Mode

Controls the SATA controller's operating mode.
The choice: IDE (**default**), RAID, AHCI.

SATA Port Speed Settings

Select SATA speed.
The choice: Disabled (**default**), Force GEN I, Force GEN II.

When you press [SATA Only] on this item will show:

Phoenix-Award BIOS CMOS Setup Utility On Chip IDE Device			Item Help
IDE HDD Block Mode	[Enabled]		Menu Level ► If your IDE hard drive supports block mode select Enabled for automatic detection of the optimal number of lock read/write s per sector the drive can support
On-Chip Primary PCI IDE	[Enabled]		
IDE Primary Master PIO	[Auto]		
IDE Primary Slave PIO	[Auto]		
IDE Primary Master UDMA	[Auto]		
IDE Primary Slave UDMA	[Auto]		
On-Chip Secondary PCI IDE	[Enabled]		
IDE Secondary Master PIO	[Auto]		
IDE Secondary Slave PIO	[Auto]		
IDE Secondary Master UDMA	[Auto]		
IDE Secondary Slave UDMA	[Auto]		
*** On-Chip Serial ATA Setting***			
SATA Mode	[IDE]		
On-Chip Serial ATA	[SATA Only]		
x SATA PORT Speed Settings	Disable		
x PATA IDE Mode	Secondary		
x SATA Port	PO, P2 is Primary		
↑ ↓ ← → : Move Enter: Select +/-/PU/PD: Value F10:Save Esc: Exit F1:General Help F5:Previous Value F6:Fail-Safe Defaults F7:Optimized Default			

(Figure14)

SATA Mode

Controls the SATA controller's operating mode.

The choice: IDE (**default**), RAID, AHCI.

➤ On board Device

Phoenix-Award BIOS CMOS Setup Utility		
Onboard Device		
USB Controller	[Enabled]	Item Help
USB 2.0 Controller	[Enabled]	Menu Level ▶
USB Keyboard Support	[Disabled]	
Azalia/AC97 Audio Select	[Auto]	
↑ ↓ ← → : Move Enter: Select +/-/PU/PD: Value F10:Save Esc: Exit F1:General Help F5:Previous Value F6:Fail-Safe Defaults F7:Optimized Default		

USB Controller

Select enabled if your system contains a Universal Serial Bus (USB) controller and you have USB peripherals.
The choice: Enabled (**default**), Disabled.

USB 2.0 Controller

This entry is for disable/enable USB2.0 controller only.
The BIOS itself may/may not have high speed USB support.
If the BIOS has high speed USB support built in, the support will be automatically turn on when high speed device were attached.
The choice: Enabled (**default**), Disabled

USB Keyboard Support

Select enabled if user plan to use an USB keyboard.
The choice: Enabled, Disabled (**default**).

Azalia/AC97 Audio Select

The choice: Auto (**default**), Azalia, AC97 Audio and Modem, AC97 Audio only, AC97 Modem only, ALL Disabled.

➤ Super IO Device

Phoenix-Award BIOS CMOS Setup Utility		
Super IO Device		
Onboard Serial Port 1	[3F8/IRQ4]	Item Help
Onboard Serial Port 2	[2F8/IRQ3]	Menu Level ▶
UART Mode Select	[Normal]	
x RxD , TxD Active	Hi, Lo	
x IR Transmission Delay	Enabled	
x UR2 Duplex Mode	Half	
Onboard Parallel Port	[378/IRQ7]	
Parallel Port Mode	[SPP]	
x EPP Mode Select	EPP1.7	
x ECP Mode Use DMA	3	
PWRON After PWR-Fail	[Off]	
↑ ↓ ← → : Move Enter: Select +/-/PU/PD: Value F10:Save Esc: Exit F1:General Help F5:Previous Value F6:Fail-Safe Defaults F7:Optimized Default		

Onboard Serial Port 1

Select an address and corresponding interrupt for the first serial ports.

The choice: Disable, 3F8/IRQ4 (**default**), 2F8/IRQ3, 3E8/IRQ4, 2E8/IRQ3, Auto.

Onboard Serial Port 2

Select an address and corresponding interrupt for the second serial ports.

The choice: Disable, 3F8/IRQ4, 2F8/IRQ3 (**default**), 3E8/IRQ4, 2E8/IRQ3, Auto.

UART Mode Select

This item allows you to select which mode for the Onboard Serial Port 2.

The choice: IrDA, ASKIR, Normal (**default**)

If UART Mode Select is IrDA and ASKIR will show:

Phoenix-Award BIOS CMOS Setup Utility Super IO Device		
Onboard Serial Port 1	[3F8/IRQ4]	Item Help
Onboard Serial Port 2	[2F8/IRQ3]	
UART Mode Select	[IrDA]	Menu Level
RxD , TxD Active	[Hi, Lo]	▶
IR Transmission Delay	[Enabled]	
UR2 Duplex Mode	[Half]	
Onboard Parallel Port	[378/IRQ7]	
Parallel Port Mode	[SPP]	
x EPP Mode Select	EPP1.7	
x ECP Mode Use DMA	3	
PWRON After PWR-Fail	[Off]	
↑ ↓ ← → : Move Enter: Select +/-/PU/PD: Value F10:Save Esc: Exit F1:General Help F5:Previous Value F6:Fail-Safe Defaults F7:Optimized Default		

RxD, TxD Active

The choice:

UART Mode Select	
Hi, Hi[]
Hi, Lo[]
Lo, Hi[]
Lo, Lo[]
↑↓: Move Enter: Accept ESC:	

IR Transmission Delay

The choice: Disabled, Enabled (**default**).

UR2 Duplex Mode

The choice: Full, Half (**default**).

Onboard Parallel Port

This item allows you to determine onboard parallel port controller I/O address setting.

The choice: 378/IRQ7 (**default**), 278/IRQ5, 3BC/IRQ7, Disabled.

Parallel Port Mode

The choice: SPP (**default**), EPP, ECP, ECP+EPP, Normal.

SPP	Sets the parallel port to function as a Standard Parallel Port. This is the default (and slowest) option.
EPP	Sets the parallel port to Enhanced Parallel Port mode. Sometimes also called "Bi-directional"
ECP	Sets the parallel port up as an Enhanced Capabilities Port. This setting requires the use of a DMA channel

If Parallel Port Mode Select is [SPP] and [Normal] will show:

Phoenix-Award BIOS CMOS Setup Utility Super IO Device		
Onboard Serial Port 1	[3F8/IRQ4]	Item Help
Onboard Serial Port 2	[2F8/IRQ3]	Menu Level ▶
UART Mode Select	[IrDA]	
RxD , TxD Active	[Hi, Lo]	
IR Transmission Delay	[Enabled]	
UR2 Duplex Mode	[Half]	
Onboard Parallel Port	[378/IRQ7]	
Parallel Port Mode	[SPP]	
x EPP Mode Select	EPP1.7	
x ECP Mode Use DMA	3	
PWRON After PWR-Fail	[Off]	
↑ ↓ ← → : Move Enter: Select +/-/PU/PD: Value F10:Save Esc: Exit F1:General Help F5:Previous Value F6:Fail-Safe Defaults F7:Optimized Default		

If Parallel Port Mode Select is [EPP] will show:

Phoenix-Award BIOS CMOS Setup Utility Super IO Device		
Onboard Serial Port 1	[3F8/IRQ4]	Item Help
Onboard Serial Port 2	[2F8/IRQ3]	Menu Level ►
UART Mode Select	[IrDA]	
RxD , TxD Active	[Hi, Lo]	
IR Transmission Delay	[Enabled]	
UR2 Duplex Mode	[Half]	
Onboard Parallel Port	[378/IRQ7]	
Parallel Port Mode	[EPP]	
EPP Mode Select	[1.7]	
x ECP Mode Use DMA	3	
PWRON After PWR-Fail	[Off]	
↑ ↓ ← → : Move Enter: Select +/-/PU/PD: Value F10:Save Esc: Exit F1:General Help F5:Previous Value F6:Fail-Safe Defaults F7:Optimized Default		

EPP Mode Select

Select EPP port type 1.7 or 1.9.

The choice: 1.7 (**default**), 1.9.

If Parallel Port Mode Select is [ECP] will show:

Phoenix-Award BIOS CMOS Setup Utility		
Super IO Device		
Onboard Serial Port 1	[3F8/IRQ4]	Item Help
Onboard Serial Port 2	[2F8/IRQ3]	Menu Level ►
UART Mode Select	[IrDA]	
RxD , TxD Active	[Hi, Lo]	
IR Transmission Delay	[Enabled]	
UR2 Duplex Mode	[Half]	
Onboard Parallel Port	[378/IRQ7]	
Parallel Port Mode	[ECP]	
x EPP Mode Select	1.7	
ECP Mode Use DMA	[3]	
PWRON After PWR-Fail	[Off]	

↑ ↓ ← → : Move Enter: Select +/-/PU/PD: Value F10:Save Esc: Exit F1:General
Help F5:Previous Value F6:Fail-Safe Defaults F7:Optimized Default

ECP Mode Use DMA

If your system supports ECP parallel port mode and you have the port set to use ECP, you must use this setting to assign a DMA channel for use by the port.

The choice: DMA1, DMA3 **(default)**.

If Parallel Port Mode Select is [ECP+EPP] will show:

Phoenix-Award BIOS CMOS Setup Utility Super IO Device		
Onboard Serial Port 1	[3F8/IRQ4]	Item Help
Onboard Serial Port 2	[2F8/IRQ3]	Menu Level ▶
UART Mode Select	[IrDA]	
RxD , TxD Active	[Hi, Lo]	
IR Transmission Delay	[Enabled]	
UR2 Duplex Mode	[Half]	
Onboard Parallel Port	[378/IRQ7]	
Parallel Port Mode	[ECP+EPP]	
EPP Mode Select	[1.7]	
ECP Mode Use DMA	[3]	
PWRON After PWR-Fail	[Off]	

↑ ↓ ← → : Move Enter: Select +/-/PU/PD: Value F10:Save Esc: Exit F1:General Help
F5:Previous Value F6:Fail-Safe Defaults F7:Optimized Default

EPP Mode Select

Select EPP port type 1.7 or 1.9.
The choice: 1.7 (**default**), 1.9.

ECP Mode Use DMA

If your system supports ECP parallel port mode and you have the port set to use ECP, you must use this setting to assign a DMA channel for use by the port.
The choice: DMA1, DMA3 (**default**).

PWRON After PWR-Fail

When power fails, you can select power ON or Off or Former status.
The choice: Off (**default**), On, Former-Sts.

Onboard Serial Port 3

This is used to select an I/O address for the onboard serial port 3.

The choice: Disabled, 3F8, 2F8, 3E8 (**default**), 2E8

Serial Port 3 Use IRQ

This is used to select an IRQ for the onboard serial port 3.

The choice: IRQ3 (**default**), IRQ4, IRQ5, IRQ7, IRQ10, IRQ11.

Onboard Serial Port 4

This is used to select an I/O address for the onboard serial port 4.

The choice: Disabled, 3F8, 2F8, 3E8, 2E8 (**default**).

Serial Port 4 Use IRQ

This is used to select an IRQ for the onboard serial port 4.

The choice: IRQ3, IRQ4 (**default**), IRQ5, IRQ7, IRQ10, IRQ11.

Watch Dog Timer Select

The choice: Disabled (**default**), Enable

3.6 Power Management Setup

The Power Management Setup allows you to configure your system to most effectively save energy while operating in a manner consistent with your own style of computer use.

Phoenix-Award BIOS CMOS Setup Utility Power Management Setup		Item Help
▶ PCI Express PM Function	[Press Enter]	Menu Level ▶
Power-Supply Type	[AT]	
ACPI Function	[Enabled]	
Power Management	[User Define]	
Video Off Method	[DPMS]	
Video Off In Suspend	[Yes]	
Suspend Type	[Stop Grant]	
MODEM Use IRQ	[3]	
Suspend Mode	[Disabled]	
HDD Power Down	[Disabled]	
Soft-Off by PWR-BTTN	[Instant-Off]	
CPU THRM-Throttling	[50.0%]	
Wake-Up by PCI card	[Enabled]	
Power On by Ring	[Enabled]	
Resume by Alarm	[Disabled]	
x Data(of Month)Alarm	0	
x Time(hh: mm: ss)Alarm	0 : 0 : 0	
Reload Global Timer Events		
Primary IDE 0	[Disabled]	
Primary IDE 1	[Disabled]	
Secondary IDE 0	[Disabled]	
Secondary IDE 1	[Disabled]	
FDD , COM , LPT Port	[Disabled]	
PCI PIRQ[A-D]#	[Disabled]	
↑ ↓ ← → : Move Enter: Select +/-/PU/PD: Value F10:Save Esc: Exit F1:General Help F5:Previous Value F6:Fail-Safe Defaults F7:Optimized Default		

➤ PCI Express PM Function

Phoenix-Award BIOS CMOS Setup Utility	
PCI Express PM Function	
PCI Express PME [Enabled]	Item Help Menu Level ▶
↑ ↓ ← → : Move Enter: Select +/-/PU/PD: Value F10:Save Esc: Exit F1:General Help F5:Previous Value F6:Fail-Safe Defaults F7:Optimized Default	

PCI Express PME

The choice: Enabled (**default**), Disabled.

Power-Supply Type

The choice: AT (**default**), ATX

ACPI Function

This item allows you to enable/disable the Advanced Configuration and Power Management (ACPI).

The choice: Enabled (**default**), Disabled.

Power Management

The choice: User Define (**default**), Min Saving, Max Saving.

Max Saving	Maximum power savings. Only Available for SL CPUs. Inactivity period is 1 minute in each mode.
User Define	Set each mode individually. Select time-out periods in the section for each mode, below.
Min Saving	Minimum power savings. Inactivity period is 1 hour in each mode (except the hard drive).

Video off Method

This determines the manner in which the monitor is blanked.

This specifies the power saving state that the VGA video subsystem enters after the specified period of display inactivity has expired.

The choice: Blank Screen, V/H SYNC+ Blank, DPMS **(default)**.

Blank Screen	The BIOS will only black the screen when the system gets into power management mode and writes blanks to the video buffer.
V/H SYNC + Blank	Writes blanks to the video buffer, and turns off the vertical and horizontal scanning.
DPMS	Allows the BIOS to control the video display card if it supports the DPMS feature (default) .

Video Off In Suspend

This field is used to activate the video off feature when the system enters the Suspend mode.

The choice: No, Yes **(default)**.

Suspend Type

The choice: Stop Grant **(default)**, PwrOn Suspend

MODEM Use IRQ

This field is used to set an IRQ channel for the modem installed in your system.

The choice: NA, 3 **(default)**, 4, 5, 7, 9, 10, 11.

Suspend Mode

This field specifies the length of time of system inactivity while in full power on state before the computer enters suspend mode and motivates the enable 'Wake up Events in Doze & Standby' / 'PM Events'.

The choice: 1Min, 2Min, 4Min, 8Min, 12Min, 20Min, 30Min, 40Min, 1Hour, Disable **(default)**.

HDD Power Down

When enable and after the set time of system inactivity, the hard disk drive will be powered down while all other devices remain active.

The choice: 1Min, 2Min, 3Min, 4Min, 5Min, 6Min, 7Min, 8Min, 9Min, 10Min, 11Min, 12Min, 13Min, 14Min, 15Min, Disable (**default**).

Soft-Off by PWR-BTTN

This field defines the power off mode when using an ATX power supply.

The choice: Instant-Off, Delay 4 Sec.

Instant-Off	Press power button then Power off instantly .(default)
Delay 4 Sec	Press power button 4 sec. to Power off. Enter suspend if button is pressed less than 4 sec.

CPU THRM-Throttling

This field allows you to select the CPU THRM-Throttling rate.

The choice: 75.0%, 50.0% (**default**), 25.0%.

Wake-Up by PCI card

Enable/Disable PCI PME wake up function.

The choice: Enabled (**default**), Disabled.

Power On by Ring

Enable/Disable Power On By Ring function.

The choice: Enabled (**default**), Disabled.

Resume by Alarm

You can set "Resume by Alarm" item to enabled and key in Date/time to power on system.

The choice: Enabled, Disabled (**default**)

If Resume by Alarm is [Enabled], can choice Date Alarm and Time Alarm:

Date (of Month) Alarm

Every day, 1~31

Date(of Moth)Alarm
Min= 0 Max= 31
Key in a DEC number: <input type="text"/>
↑↓: Move Enter: Accept ESC:Abort

Time (hh: mm: ss) Alarm

(0~23): (0~59): (0~59)

Time (hh: mm: ss) Alarm
Min= 0 Max= 23
Key in a DEC number: <input type="text"/>
↑↓: Move Enter: Accept ESC:Abort

Primary/ Secondary IDE 0/1

When Enabled, the system will resume from suspend mode if Primary IDE 0 (1) or Secondary IDE 0 (1) is active.

The choice: Enabled, Disabled (**default**)

FDD, COM, LPT Port

When Enabled, the system will resume from suspend mode if FDD, COM port, or LPT port is active.
The choice: Enabled, Disabled **(default)**.

PCI PIRQ [A-D] #

When Enabled, the system will resume from suspend mode if interrupt occurs.
The choice: Enabled, Disabled **(default)**.

3.7 PnP/PCI Configuration

This section describes configuring the PCI bus system. PCI, or Personal Computer Interconnect, is a system which allows I/O devices to operate at speeds nearing the speed the CPU itself uses when communicating with its own special components. This section covers some very technical items and it is strongly recommended that only experienced users should make any changes to the default settings.

Phoenix-Award BIOS CMOS Setup Utility PnP/PCI Configuration		
Init Display First	[PCI Slot]	Item Help
Reset Configuration Data	[Disabled]	Menu Level ▶
Resources Controlled By x IRQ Resources	[Auto(ESCD)] Press Enter	
PCI/VGA Palette Snoop	[Disabled]	
INT Pin 1 Assignment	[Auto]	
INT Pin 2 Assignment	[Auto]	
INT Pin 3Assignment	[Auto]	
INT Pin 4 Assignment	[Auto]	
INT Pin 5 Assignment	[Auto]	
INT Pin 6 Assignment	[Auto]	
INT Pin 7 Assignment	[Auto]	
INT Pin 8 Assignment	[Auto]	
PCI Express relative items		
Maximum Payload Size	[4096]	
↑ ↓ ← → : Move Enter: Select +/-/PU/PD: Value F10:Save Esc: Exit F1:General Help F5:Previous Value F6:Fail-Safe Defaults F7:Optimized Default		

Init Display First

This item allows you to choose which one to activate first, PCI Slot or onchip VGA.

The choice: PCI Slot (**default**), Onboard, PCIEx.

Reset Configuration Data

Default is disabled. Select Enabled to reset Extended System Configuration Data (ESCD) when you exit Setup if you have installed a new add-on and the system reconfiguration has caused such a serious conflict that the OS cannot boot.

The choice: Enabled, Disabled (**default**).

Resources Controlled By

BIOS can automatically configure all the boot and Plug and Play compatible devices. If you choose Auto, you cannot select IRQ DMA and memory base address fields, since BIOS automatically assigns them.

The choice: Auto (ESCD) (**default**), Manual.

If Resources Controlled By is [Manual], can choice IRQ Resource:

Phoenix-Award BIOS CMOS Setup Utility PnP/PCI Configuration		
Init Display First	[PCI Slot]	Item Help Menu Level ▶
Reset Configuration Data	[Disabled]	
Resources Controlled By	[Manual]	
▶ IRQ Resources	[Press Enter]	
PCI/VGA Palette Snoop	[Disabled]	
INT Pin 1 Assignment	[Auto]	
INT Pin 2 Assignment	[Auto]	
INT Pin 3 Assignment	[Auto]	
INT Pin 4 Assignment	[Auto]	
INT Pin 5 Assignment	[Auto]	
INT Pin 6 Assignment	[Auto]	
INT Pin 7 Assignment	[Auto]	
INT Pin 8 Assignment	[Auto]	
PCI Express relative items		
Maximum Payload Size	[4096]	
↑ ↓ ← → : Move Enter: Select +/-/PU/PD: Value F10:Save Esc: Exit F1:General Help F5:Previous Value F6:Fail-Safe Defaults F7:Optimized Default		

➤IRQ Resource

When resources are controlled manually, assign each system interrupt a type, depending on the type of device using the interrupt. This item allows you to determine the IRQ assigned to the ISA bus and is not available to any PCI slot.

Phoenix-Award BIOS CMOS Setup Utility		
IRQ Resource		
IRQ-3 assigned to	[PCI Device]	Item Help Menu Level ► Legacy ISA for devices compliant with the original PC AT bus specification, PCI/ISA PnP for devices compliant with the Plug and Play standard whether designed for PCI or ISA bus architecture
IRQ-4 assigned to	[PCI Device]	
IRQ-5 assigned to	[PCI Device]	
IRQ-7 assigned to	[PCI Device]	
IRQ-9 assigned to	[PCI Device]	
IRQ-10 assigned to	[PCI Device]	
IRQ-11 assigned to	[PCI Device]	
IRQ-12 assigned to	[PCI Device]	
IRQ-14 assigned to	[PCI Device]	
IRQ-15 assigned to	[PCI Device]	
↑ ↓ ← → : Move Enter: Select +/-/PU/PD: Value F10:Save Esc: Exit F1:General Help F5:Previous Value F6:Fail-Safe Defaults F7:Optimized Default		

IRQ-3,4,5,7,9,10,11,12,14,15 assigned to

IRQ-3 assigned to	
PCI Device [█]
Reserved []
↑↓: Move Enter: Accept	

The choice: PCI Device, Reserved.

PCI/VGA Palette Snoop

This BIOS feature determines if your graphics card should allow VGA palette snooping by a fixed function display card.

The choice: Enabled, Disabled (**default**).

INT Pin 1/2/3/4/5/6/7/8 Assignment

The choice: Auto (**default**), 3, 4, 5, 7, 9, 10, 11, 12, 14, 15.

Maximum Payload Size

The choice: 128 (**default**), 256, 512, 1024, 2048, 4096.

3.8 PC Health Status

This section helps you to get more information about your system including CPU temperature, FAN speed and voltages. It is recommended that you contact with your motherboard supplier to get proper value about your setting of the CPU temperature.

Phoenix-Award BIOS CMOS Setup Utility		
PC Health Status		
CPU Warning Temperature	[Disabled]	Item Help
Current System Temp.	40°C / 107°F	Menu Level ▶
Current CPU Temperature:	40°C / 100°F	
CPU FAN Speed	0 RPM	
CHASSIS Fan Speed	7670 RPM	
Vcore	1.20V	
+1.5V	1.52V	
+3.3V	3.47V	
+5V	5.16V	
+12V	12.22V	
-12V	-12.44V	
VBAT(V)	3.32V	
5VSB(V)	5.04V	
Shutdown Temperature	[Disabled]	
↑ ↓ ← → : Move Enter: Select +/-/PU/PD: Value F10:Save Esc: Exit F1:General Help F5:Previous Value F6:Fail-Safe Defaults F7:Optimized Default		

CPU Warning Temperature

Select the CPU over-heated warning temperature.
The choice: Disabled (**default**), 50°C/122°F, 53°C/127°F, 56°C/133°F, 60°C/140°F, 63°C/145°F, 66°C/151°F, 70°C/158°F.

Current System Temp

Show System Temperature.

Current CPU Temperature

Shows Board Temperature

CPU FAN Speed

Shows CPU Fan speed.

CHASSIS Fan Speed


Shows CHASSIS Fan speed

Shutdown Temperature

Select the CPU over-heated shutdown temperature.

The choice: Disabled **(default)**, 60°C/140°F, 65°C/149°F, 70°C/158°F, 75°C/167°F

3.9 Frequency/Voltage Control

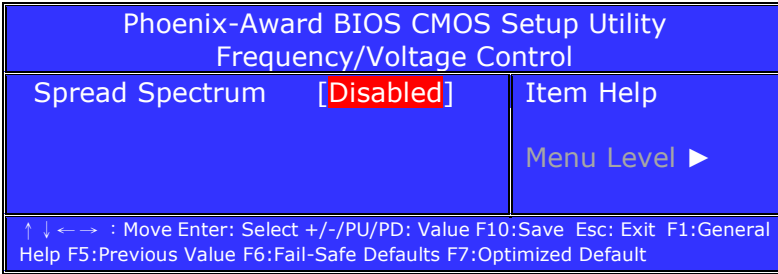


Spread Spectrum

Leave this field in its default setting. Do not alter this setting unless advised by an engineer or technician. The choice: Disabled (**default**), +/-0.1%, +/-0.2%, +/-0.3%, +/-0.4%, +/-0.5%, +/-0.6%, +/-0.7%, +/-0.8%, +/-0.9%.

3.10 Load Fail-Safe Defaults


When you press <Enter> on this item you get a confirmation dialog box with a message similar to:

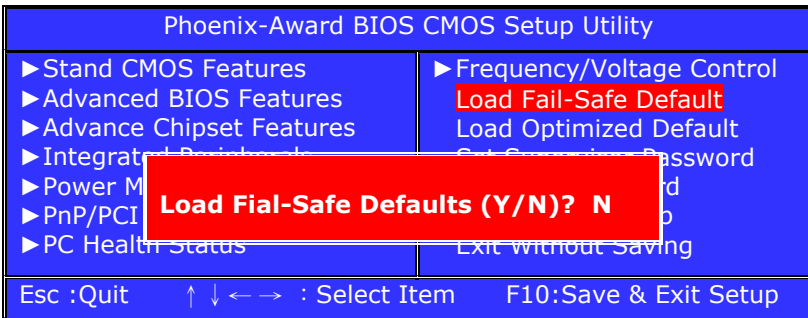

Pressing 'Y' loads the BIOS default values for the most stable, minimal-performance system operations.

3.11 Load Optimized Defaults

When you press <Enter> on this item you get a confirmation dialog box with a message similar to:

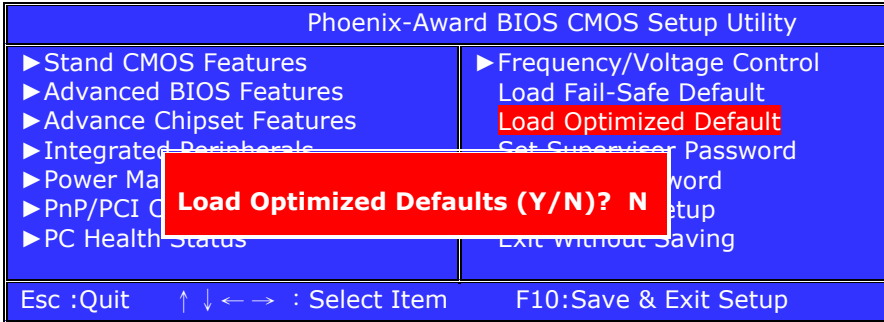


Pressing 'Y' loads the default values that are factory settings for optimal performance system operations.

3.12 Set Supervisor/User Password

You can set either supervisor or user password, or both of them. The differences between are:

Supervisor password: can enter and change the options of the setup menus.


User password: just can only enter but do not have the right to change the options of the setup menus. When you select this function, the following message will appear at the center of the screen to assist you in creating a password.

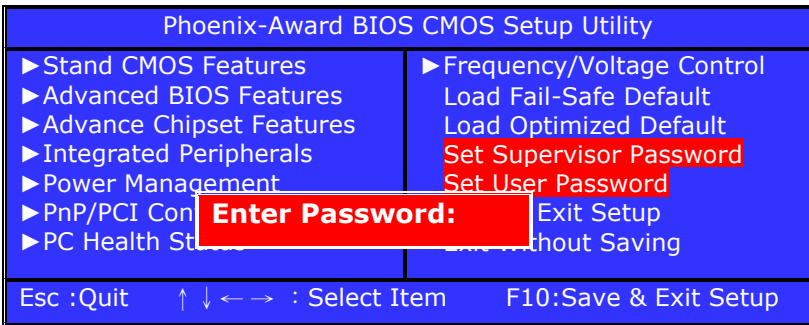

ENTER PASSWORD:

Type the password, up to eight characters in length, and press <Enter>. The password typed now will clear any previously entered password from CMOS memory. You will be asked to confirm the password. Type the password again and press <Enter>. You may also press <Esc> to abort the selection and not enter a password.

To disable a password, just press <Enter> when you are prompted to enter the password. A message will confirm the password will be disabled. Once the password is disabled, the system will boot and you can enter Setup freely.

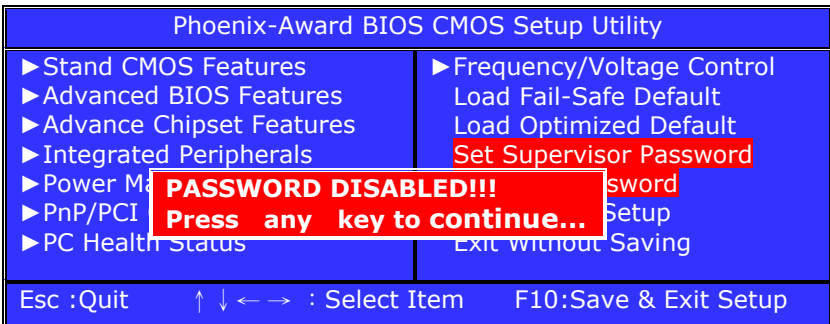

PASSWORD DISABLED:


When a password has been enabled, you will be prompted to enter it every time you try to enter Setup. This prevents an unauthorized person from changing any part of your system configuration.

Additionally, when a password is enabled, you can also require the BIOS to request a password every time your system is rebooted. This would prevent unauthorized use of your computer.

You determine when the password is required within the BIOS Features Setup Menu and its Security option. If the Security option is set to "System", the password will be required both at boot and at entry to Setup. If set to "Setup", prompting only occurs when trying to enter Setup.

3.13 Save & Exit Setup


Pressing <Enter> on this item asks for confirmation:

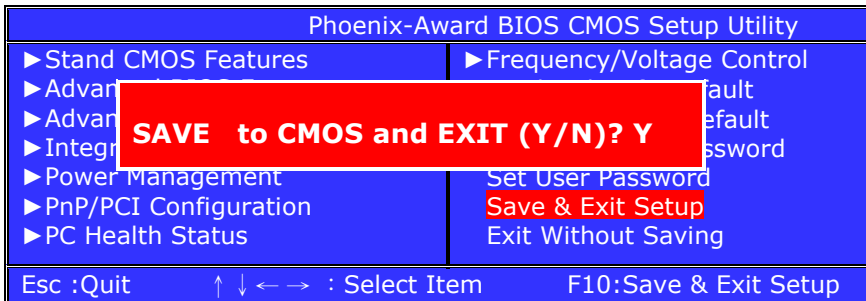

Pressing "Y" stores the selections made in the menus in CMOS – a special section of memory that stays on after you turn your system off. The next time you boot your computer, the BIOS configures your system according to the Setup selections stored in CMOS. After saving the values the system is restarted again.

3.14 Exit Without Saving

Pressing <Enter> on this item asks for confirmation:

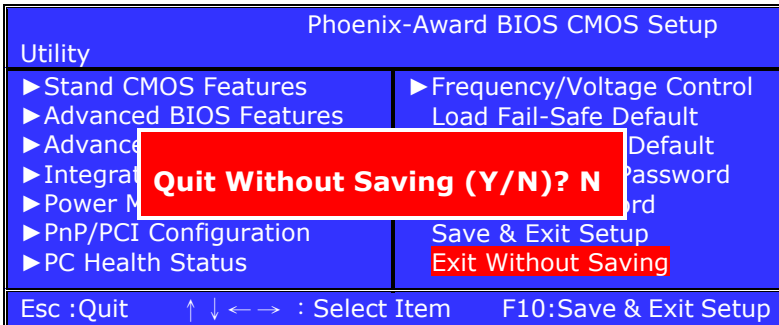

This allows you to exit Setup without storing in CMOS any change. The previous selections remain in effect. This exits the Setup utility and restarts your computer.

CHAPTER 4 Appendix

A. I/O PORT ADDRESS MAP	86
B. INTERRUPT REQUEST LINES (IRQ).....	87
C. POST BEEP	88

A. I/O Port Address Map

Each peripheral device in the system is assigned a set of I/O port addresses which also becomes the identity of the device. There is a total of 1K port address space available. The following table lists the I/O port addresses used on the Industrial CPU Card.

Address	Device Description
000h - 01Fh	DMA Controller #1
020h - 03Fh	Interrupt Controller #1
040h - 05Fh	Timer
060h - 06Fh	Keyboard Controller
070h - 07Fh	Real Time Clock, NMI
080h - 09Fh	DMA Page Register
0A0h - 0BFh	Interrupt Controller #2
0C0h - 0DFh	DMA Controller #2
0F0h	Clear Math Coprocessor Busy Signal
0F1h	Reset Math Coprocessor
1F0h - 1F7h	IDE Interface
278 - 27F	Parallel Port #2(LPT2)
2F8h - 2FFh	Serial Port #2(COM2)
2B0 - 2DF	Graphics adapter Controller
378h - 3FFh	Parallel Port #1(LPT1)
360 - 36F	Network Ports
3B0 - 3BF	Monochrome & Printer adapter
3C0 - 3CF	EGA adapter
3D0 - 3DF	CGA adapter
3F0h - 3F7h	Floppy Disk Controller
3F8h - 3FFh	Serial Port #1(COM1)

B. Interrupt Request Lines (IRQ)

There are a total of 15 IRQ lines available on the Industrial CPU Card. Peripheral devices use interrupt request lines to notify CPU for the service required. The following table shows the IRQ used by the devices on the Industrial CPU Card.

Level	Function
IRQ0	System Timer Output
IRQ1	Keyboard
IRQ2	Interrupt Cascade
IRQ3	Serial Port #2
IRQ4	Serial Port #1
IRQ5	Reserved
IRQ6	Floppy Disk Controller
IRQ7	Parallel Port #1
IRQ8	Real Time Clock
IRQ9	Software Redirected to Int 0Ah
IRQ10	Reserved
IRQ11	Reserved
IRQ12	PS/2 Mouse
IRQ13	80287
IRQ14	Primary IDE
IRQ15	Secondary IDE

C. POST Beep

Currently there are two kinds of beep codes in BIOS. This code indicates that a **video error** has occurred and the BIOS cannot initialize the video screen to display any additional information.

This beep code consists of a single long beep followed by two short beeps.

The other code indicates that your **DRAM error** has occurred. This beep code consists of a single long beep repeatedly.