


V55LA System

User's Guide

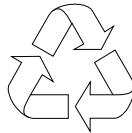

100% Recycled Paper

Copyright

Copyright © 1996 by this company. All rights reserved. No part of this publication may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language or computer language, in any form or by any means, electronic, mechanical, magnetic, optical, chemical, manual or otherwise, without the prior written permission of this company.

Disclaimer

This company makes no representations or warranties, either expressed or implied, with respect to the contents hereof and specifically disclaims any warranties, merchantability or fitness for any particular purpose. Any software described in this manual is sold or licensed "as is". Should the programs prove defective following their purchase, the buyer (and not this company, its distributor, or its dealer) assumes the entire cost of all necessary servicing, repair, and any incidental or consequential damages resulting from any defect in the software. Further, this company reserves the right to revise this publication and to make changes from time to time in the contents hereof without obligation to notify any person of such revision or changes.

Intel is a registered trademark of Intel Corporation.
Pentium and IntelDX4 are trademarks of Intel Corporation.

Other brand and product names are trademarks and/or registered trademarks of their respective holders.

IMPORTANT SAFETY INSTRUCTIONS

1. Read these instructions carefully. Save these instructions for future reference.
2. Follow all warnings and instructions marked on the product.
3. Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
4. Do not use this product near water.
5. Do not place this product on an unstable cart, stand, or table. The product may fall, causing serious damage to the product.
6. Slots and openings in the cabinet and the back or bottom are provided for ventilation; to ensure reliable operation of the product and to protect it from overheating, these openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should never be placed near or over a radiator or heat register, or in a built-in installation unless proper ventilation is provided.
7. This product should be operated from the type of power indicated on the marking label. If you are not sure of the type of power available, consult your dealer or local power company.
8. This product is equipped with a 3-wire grounding-type plug, a plug having a third (grounding) pin. This plug will only fit into a grounding-type power outlet. This is a safety feature. If you are unable to insert the plug into the outlet, contact your electrician to replace your obsolete outlet. Do not defeat the purpose of the grounding-type plug.

-
9. Do not allow anything to rest on the power cord. Do not locate this product where persons will walk on the cord.
 10. If an extension cord is used with this product, make sure that the total ampere rating of the equipment plugged into the extension cord does not exceed the extension cord ampere rating. Also, make sure that the total rating of all products plugged into the wall outlet does not exceed 15 amperes.
 11. Never push objects of any kind into this product through cabinet slots as they may touch dangerous voltage points or short out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.
 12. Do not attempt to service this product yourself, as opening or removing covers may expose you to dangerous voltage points or other risks. Refer all servicing to qualified service personnel.
 13. Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:
 - a. When the power cord or plug is damaged or frayed
 - b. If liquid has been spilled into the product
 - c. If the product has been exposed to rain or water
 - d. If the product does not operate normally when the operating instructions are followed. Adjust only those controls that are covered by the operating instructions since improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to normal condition.
 - e. If the product has been dropped or the cabinet has been damaged
 - f. If the product exhibits a distinct change in performance, indicating a need for service

-
14. Replace battery with the same type as the product's battery we recommend. Use of another battery may present a risk of fire or explosion. Refer battery replacement to a qualified serviceman.
 15. Warning! Battery may explode if not handled properly. Do not recharge, disassemble or dispose of in fire. Keep away from children and dispose of used battery promptly.
 16. Use only the proper type of power supply cord set (provided in your keyboard/manual accessories box) for this unit. It should be a detachable type: UL listed/CSA certified, type SVT/SJT, rated 6A 125V minimum, VDE approved or its equivalent. Maximum length is 15 feet (4.6 meters).

FCC Class B Radio Frequency Interference Statement

Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

1. Reorient or relocate the receiving antenna.
2. Increase the separation between the equipment and receiver.
3. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
4. Consult the dealer or an experienced radio/television technician for help.

Notice 1:

The changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Notice 2:

Shielded interface cables, if any, must be used in order to comply with the emission limits.

About this Manual

Purpose

This user's guide aims to give you all the necessary information to enable you to operate the system properly.

Manual Structure

This user's guide consists of two chapters.

Chapter 1 System Board

This chapter describes the system board and all its major components. It contains the system board layout, jumper settings, cache and memory configurations, and information on other internal devices.

Chapter 2 BIOS Utility

This chapter gives information about the system BIOS and tells how to configure the system by changing the settings of the BIOS parameters.

Conventions

The following are the conventions used in this manual:

Text entered by user

Represents text input by the user.

Screen messages

Denotes actual messages that appear on the screen.

a, e, s, etc.

Represent the actual keys that you have to press on the keyboard.



NOTE

Gives bits and pieces of additional information related to the current topic.



WARNING

Alerts you to any damage that might result from doing or not doing specific actions.



CAUTION

Gives precautionary measures to avoid possible hardware or software problems.




IMPORTANT

Reminds you to do specific actions relevant to the accomplishment of procedures.



TIP

Tells how to accomplish a procedure with minimum steps



through little shortcuts.

x

Table of Contents

Chapter 1 System Board

| | | |
|--------|---|------|
| 1.1 | Major Features..... | 1-2 |
| 1.1.1 | Layout..... | 1-3 |
| 1.1.2 | Slot Board..... | 1-4 |
| 1.2 | Jumpers and Connectors..... | 1-5 |
| 1.2.1 | Jumper and Connector Locations..... | 1-5 |
| 1.2.2 | Jumper Settings..... | 1-6 |
| 1.2.3 | Connector Functions..... | 1-9 |
| 1.3 | ESD Precautions..... | 1-11 |
| 1.4 | Memory Upgrade..... | 1-12 |
| 1.4.1 | Installing a SIMM..... | 1-14 |
| 1.4.2 | Removing a SIMM..... | 1-15 |
| 1.4.3 | Reconfiguring the System..... | 1-16 |
| 1.5 | IDE Hard Disk Support..... | 1-16 |
| 1.6 | CPU Installation..... | 1-17 |
| 1.7 | Video Memory Upgrade..... | 1-18 |
| 1.8 | Second-level Cache Configuration..... | 1-19 |
| 1.9 | Audio Features..... | 1-20 |
| 1.9.1 | Installing the Audio-I/O Board..... | 1-21 |
| 1.9.2 | Audio-I/O Board Features..... | 1-22 |
| 1.9.3 | WaveTable Daughterboard (Optional)..... | 1-23 |
| 1.9.4 | Audio-I/O Devices..... | 1-25 |
| 1.10 | Error Messages..... | 1-26 |
| 1.10.1 | Software Error Messages..... | 1-26 |

| | | |
|--------|----------------------------------|------|
| 1.10.2 | System Error Messages..... | 1-26 |
| 1.10.3 | Correcting Error Conditions..... | 1-29 |

Chapter 2 BIOS Utility

| | | |
|--------|------------------------------------|------|
| 2.1 | Entering Setup..... | 2-2 |
| 2.2 | Basic System Configuration..... | 2-3 |
| 2.2.1 | Date and Time..... | 2-4 |
| 2.2.2 | Diskette Drives..... | 2-5 |
| 2.2.3 | IDE Drives..... | 2-6 |
| 2.2.4 | System Memory..... | 2-8 |
| 2.2.5 | Math Coprocessor..... | 2-8 |
| 2.2.6 | Video Display..... | 2-8 |
| 2.2.7 | Communication Settings..... | 2-9 |
| 2.2.8 | Enhanced IDE Features..... | 2-9 |
| 2.2.9 | Num Lock After Boot..... | 2-10 |
| 2.2.10 | Memory Test..... | 2-11 |
| 2.2.11 | Auto Configuration Mode..... | 2-11 |
| 2.2.12 | Fast Boot Mode..... | 2-11 |
| 2.2.13 | Quiet Boot..... | 2-12 |
| 2.2.14 | Configuration Table..... | 2-12 |
| 2.3 | Advanced System Configuration..... | 2-13 |
| 2.3.1 | Shadow RAM..... | 2-14 |
| 2.3.2 | Internal Cache (CPU Cache)..... | 2-14 |
| 2.3.3 | External Cache..... | 2-14 |
| 2.3.4 | ECC/Parity Mode Selection..... | 2-15 |
| 2.3.5 | Memory at 15MB-16MB..... | 2-15 |
| 2.3.6 | Plug and Play OS..... | 2-15 |

| | | |
|-------|----------------------------------|------|
| 2.4 | Power Saving Configuration..... | 2-16 |
| 2.4.1 | Power Management Mode..... | 2-17 |
| 2.4.2 | Monitored Activities..... | 2-18 |
| 2.5 | System Security Setup..... | 2-19 |
| 2.5.1 | Disk Drive Control..... | 2-19 |
| 2.5.2 | Onboard Communication Ports..... | 2-21 |
| 2.5.3 | Onboard PS/2 Mouse (IRQ 12)..... | 2-24 |
| 2.5.4 | Crystal Audio Chip..... | 2-24 |
| 2.5.5 | Setup Password..... | 2-25 |
| 2.5.6 | Power On Password..... | 2-26 |
| 2.6 | PCI System Configuration..... | 2-27 |
| 2.6.1 | PCI IRQ Setting..... | 2-27 |
| 2.6.2 | PCI IRQ Sharing..... | 2-28 |
| 2.6.3 | VGA Palette Snoop..... | 2-28 |
| 2.7 | Load Setup Default Settings..... | 2-29 |
| 2.8 | Leaving Setup..... | 2-30 |
| 2.9 | IDE Hard Disk Types..... | 2-31 |

List of Figures

| | | |
|------|---|------|
| 1-1 | System Board Layout..... | 1-3 |
| 1-2 | 2-PCI/3-ISA Slot Board (for desktop systems)..... | 1-4 |
| 1-3 | 3-PCI/5-ISA Slot Board (for minitower systems)..... | 1-4 |
| 1-4 | System Board Jumper and Connector Locations..... | 1-5 |
| 1-5 | 20-Pin Multifunction Connector (CN19)..... | 1-10 |
| 1-6 | Installing a SIMM..... | 1-14 |
| 1-7 | Removing a SIMM..... | 1-15 |
| 1-8 | Installing a Pentium CPU..... | 1-17 |
| 1-9 | Installing a Video Memory Chip..... | 1-18 |
| 1-10 | Audio Connectors Onboard..... | 1-20 |
| 1-11 | Installing the Audio-I/O Board..... | 1-21 |
| 1-12 | Audio-I/O Board..... | 1-22 |
| 1-13 | WaveTable Daughterboard..... | 1-23 |
| 1-14 | Installing the WaveTable Daughterboard..... | 1-24 |
| 1-15 | Audio I/O External Devices..... | 1-25 |

List of Tables

| | | |
|------|--|------|
| 1-1 | System Board Jumper Settings..... | 1-6 |
| 1-2 | SW2 Settings 1 and 2..... | 1-8 |
| 1-3 | SW2 Settings 3 and 4..... | 1-8 |
| 1-4 | SW2 Setting 5..... | 1-8 |
| 1-5 | SW2 Setting 6..... | 1-8 |
| 1-6 | Connector Functions..... | 1-9 |
| 1-7 | Memory Configurations (64-bit)..... | 1-12 |
| 1-8 | Memory Configurations (32-bit)..... | 1-13 |
| 1-9 | IDE Hard Disk Configuration..... | 1-16 |
| 1-10 | Second-level Cache Configurations..... | 1-19 |
| 1-11 | System Error Messages..... | 1-27 |
| 2-1 | Drive Control Settings..... | 2-20 |
| 2-2 | Serial Port 1 Settings..... | 2-21 |
| 2-3 | Serial Port 2 Settings..... | 2-22 |
| 2-4 | Parallel Port Settings..... | 2-22 |
| 2-5 | Parallel Port Operation Mode Settings..... | 2-23 |

Chapter 1

System Board

The V55LA is a high-performance system board with a 64-bit architecture. It supports the Intel P54C, P54CTB, P54CS, P54CT, and P55C CPUs running at 75/90/100/120/133/150/166/200 MHz. It also supports Cyrix M1 and AMD K5 CPUs. The system board utilizes the Peripheral Component Interconnect (PCI) local bus architecture that maximizes the system performance by enabling high-speed peripherals to match the speed of the microprocessor with its 120 MB or 132 MB per second transfer rate in burst mode.

The board incorporates a Sound Blaster Pro-compatible audio subsystem that consists of CD-audio, WaveTable, and fax/modem line-in interfaces. A standard 1-MB video DRAM comes onboard and is upgradable up to 2 MB. Two DRAM banks composed of four 72-pin sockets come with the board to support single- and double-density SIMMs for a maximum system memory of 128 MB. The SIMM sockets accommodate both the standard page mode and extended data output (EDO) type SIMMs. The board supports a standard 256-KB asynchronous second-level cache. The board also supports a 256-KB pipeline burst mode cache a manufacturing option.

The system board includes a 188-pin connector for the slot board that contains the PCI and ISA bus slots. The two onboard PCI-enhanced IDE interfaces with a zero-wait state and 16.6 MB per second transfer rate support up to four IDE devices. Onboard I/O interfaces comprise of two UART 16550 serial ports, a parallel port with ECP/EPP feature, and PS/2 keyboard and mouse ports.


1.1 Major Features

The system board has the following major features:

- A zero-insertion force (ZIF) socket for Intel P54C, P54CTB, P54CS, P55C, Cyrix M1, and AMD K5
- Two DRAM banks composed of four 72-pin SIMM sockets that support 4/8/16/32-MB 60/70ns SIMMs
- 256-KB write-back pipeline burst or asynchronous second-level cache
- 128/256-KB boot block mode Flash ROM for system BIOS, VGA BIOS, and PnP ESCD
- Two PCI-enhanced IDE interfaces that support up to four IDE devices
- System clock/calendar with 256-byte CMOS RAM
- Interfaces for CD-audio, fax/voice modem, and WaveTable support
- Standard 1-MB video DRAM onboard plus two upgrade sockets for up to 2-MB video memory
- 188-pin connector for PCI/ISA slot board
- Feature socket for multimedia or Ethernet solution
- External ports:
 - PS/2 keyboard and mouse ports
 - Two buffered high-speed serial ports
 - One ECP/EPP high-speed parallel port
 - Video port

1.1.1 Layout

Figure 1-1 shows the locations of the system board major components.

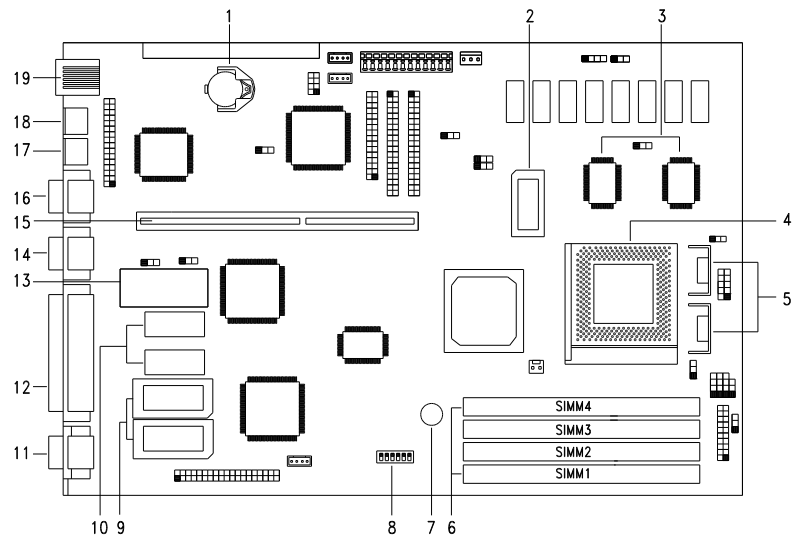

- | | |
|-------------------------------------|-------------------------|
| 1 Battery | 10 Video RAM |
| 2 Tag SRAM | 11 Video port |
| 3 Pipeline burst second-level cache | 12 Parallel port |
| 4 Pentium CPU socket | 13 BIOS |
| 5 CPU voltage regulators | 14 Serial port 2 |
| 6 SIMM sockets | 15 Slot board connector |
| 7 Buzzer | 16 Serial port 1 |
| 8 Switch 2 (SW2) | 17 Mouse port |
| 9 Video RAM upgrade sockets | 18 Keyboard port |
| | 19 RJ-45 connector |

Figure 1-1 System Board Layout

1.1.2 Slot Board

The system board comes with a slot board already installed. The slot board carries the PCI and ISA bus slots for system enhancements and future expansion.

The slot board may vary in size and layout depending on your system housing. Figures 1-2 and 1-3 show the two kinds of slot boards.

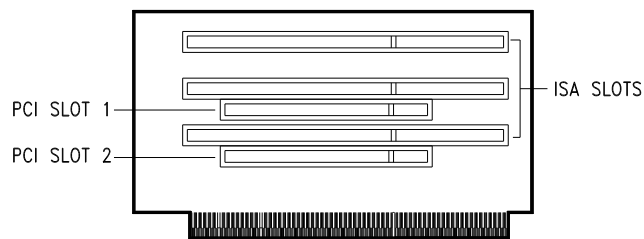
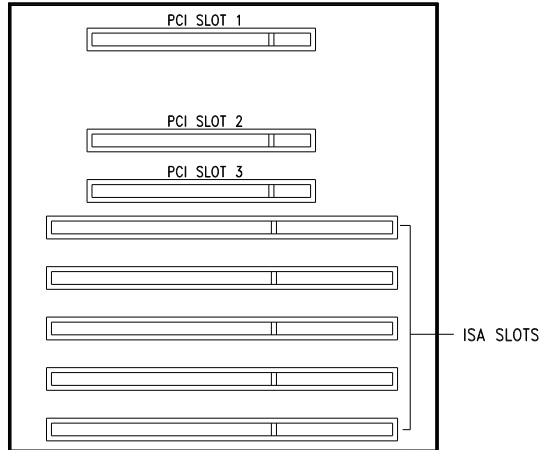


Figure 1-2 2-PCI/3-ISA Slot Board (for desktop systems)



**Figure 1-3 3-PCI/5-ISA Slot Board
(for minitower systems)**

1.2 Jumpers and Connectors

1.2.1 Jumper and Connector Locations

Figure 1-4 shows the jumper and connector locations on the system board.

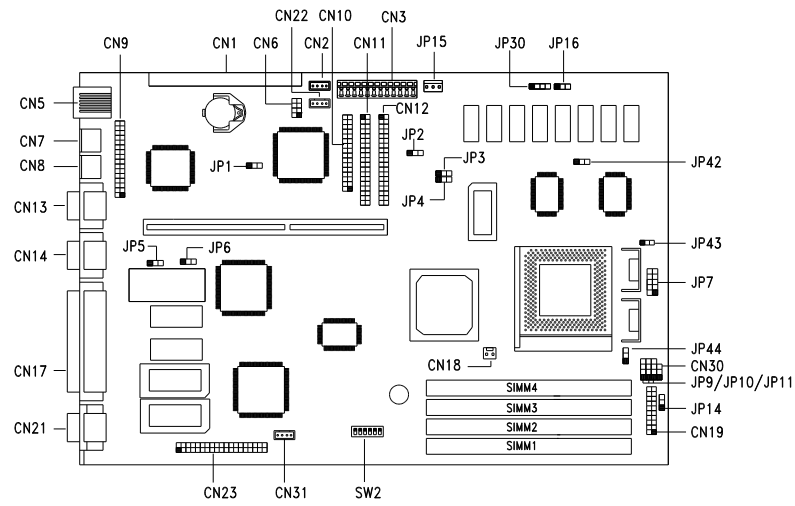


Figure 1-4 System Board Jumper and Connector Locations



The blackened pin of a jumper represents pin 1.

1.2.2 Jumper Settings

Table 1-1 lists the system board jumpers with their corresponding settings and functions.

Table 1-1 System Board Jumper Settings

| Jumper | Setting | Function |
|--------------------------------|--------------------|--|
| BIOS Type JP1 | 1-2 2-3 | For models with Acer BIOS For models with OEM BIOS |
| LED Function JP2 | 1-2 2-3 | LED for IDE and FDD LED for IDE only |
| Second-level Cache JP3, JP4 | 1-2, 1-2** | 256 KB asynchronous or pipeline burst SRAM |
| Flash BIOS Function JP5 | 1-2 2-3 | (for Intel 28F001) Allows boot block programming Normal operation |
| BIOS ROM Type JP6 | 1-2 2-3 Open | Flash ROM (28F010) EPROM Block Flash EEPROM (SST 29EE010) |
| Regulator JP7 | Closed Open | For CPUs using one voltage (P54C) For CPUs using two different voltages (P55C) |
| SMM/Reset Switch JP11 | 1-2 2-3 3-4 | Supports SMM switch Supports reset switch Functions as additional reset switch connector |

** Fixed setting

Table 1-1 System Board Jumper Settings (continued)

| Jumper | Setting | Function |
|--|------------------------------|--|
| Software Shutdown JP16 | 1-2 2-3 | UPS enabled UPS disabled |
| L2 Cache Mode JP42 | 1-2 2-3 | Intel or M1 "1+4" mode ¹ M1 linear burst mode ² |
| CPU Voltage JP43 (for I/O) JP44 (for core) | 1-2 2-3 1-2 2-3 | 3.5V 3.3V 2.5V 2.8V |

¹ In the "1+4" mode, the M1 CPU performs a single transfer read cycle prior to the burst cycle. This mode is compatible with Intel CPUs.

² In linear burst mode, the M1 CPU performs a burst cycle but the address sequences are different from those of the Intel Pentium. Operating the CPU in linear burst mode minimizes the CPU bus activity thus enhancing overall system performance.

Tables 1-2 to 1-5 show the settings and functions of DIP switch 2 (SW2).

Table 1-2 SW2 Settings 1 and 2

| Setting 1 | Setting 2 | CPU Clock Frequency |
|-----------|-----------|---------------------|
| ON | ON | 50 MHz |
| ON | OFF | 60 MHz |
| OFF | ON | 66 MHz |

Table 1-3 SW2 Settings 3 and 4

| Setting 3 | Setting 4 | Frequency Ratio | | |
|-----------|-----------|-----------------|-----|-----|
| | | Intel CPUs | M1 | K5 |
| ON | ON | 5/2 | 1/1 | 2/1 |
| OFF | OFF | 3/2 | 3/1 | 3/2 |
| ON | OFF | 2/1 | 2/1 | |
| OFF | ON | 3/1 | 4/1 | |

Table 1-4 SW2 Setting 5

| Setting 5 | Function |
|-----------|-----------------------------|
| ON | Onboard sound chip disabled |
| OFF | Onboard sound chip enabled |

Table 1-5 SW2 Setting 6

| Setting 5 | Function |
|-----------|-----------------|
| ON | Password bypass |
| OFF | Password check |

1.2.3 Connector Functions

Table 1-6 lists the different connectors on the system board and their respective functions.

Table 1-6 Connector Functions

| Connector | Function |
|------------------|---|
| CN1 | Feature connector for multimedia or Ethernet solution |
| CN2 | CD-audio line-in connector |
| CN3 | Power connector |
| CN5 | LAN connector |
| CN6 | WaveTable connector |
| CN7 | PS/2 keyboard connector |
| CN8 | PS/2 mouse connector |
| CN9 | Audio I/O board connector |
| CN10 | Diskette drive connector |
| CN11 | IDE connector 2 |
| CN12 | IDE connector 1 |
| CN13 | Serial port 1 |
| CN14 | Serial port 2 |
| CN17 | Parallel port |
| CN18 | CPU fan connector |
| CN19 | Multifunction connector |
| CN21 | Video port |
| CN22 | Fax/modem connector (Fujitsu) |
| CN23 | ATI multimedia connector |
| CN30 | Reset switch connector (pins 1-2) |

Table 1-6 Connector Functions (continued)

| Connector | Function |
|-----------|---|
| CN31 | Internal line-in connector |
| JP9 | Hard disk and power LED connector (Fujitsu) |
| JP10 | Hard disk and diskette drive LED connector |
| JP11 | SMM switch/reset switch 1-2 SMM switch 2-3 Reset switch 3-4 Reserved |
| JP14 | Power-on switch connector (pins 1-2) |
| JP15 | Standby power connector |
| JP30 | External battery connector |

The multifunction connector CN19 accommodates the front panel connectors for speaker, LEDs, keylock, reset, and turbo. Figure 1-5 shows the CN19 pin assignments for each of the front panel connectors.

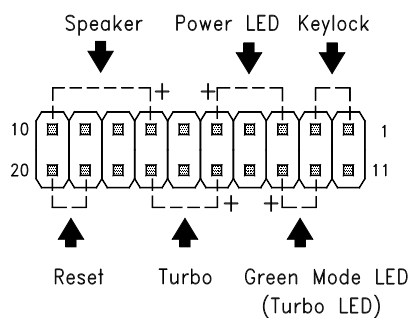


Figure 1-5 20-Pin Multifunction Connector (CN19)

1.3 ESD Precautions

Always observe the following electrostatic discharge (ESD) precautions before installing a system component:

1. Do not remove a component from its antistatic packaging until you are ready to install it.
2. Wear a wrist grounding strap before handling electronic components. Wrist grounding straps are available at most electronic component stores.



Do not attempt the procedures described in the following sections unless you are a qualified technician.

1.4 Memory Upgrade

The system board comes with four 72-pin SIMM sockets that support 4-MB and 16-MB single-density SIMMs and 8-MB and 32-MB double-density SIMMs. Table 1-7 lists the possible 64-bit memory configurations.

Table 1-7 Memory Configurations (64-bit)

| Bank 0 | | Bank 1 | | Total Memory |
|--------|--------|--------|--------|--------------|
| SIMM-1 | SIMM-2 | SIMM-3 | SIMM-4 | |
| 4 MB | 4 MB | | | 8 MB |
| | | 4 MB | 4 MB | 8 MB |
| 8 MB | 8 MB | | | 16 MB |
| | | 8 MB | 8 MB | 16 MB |
| 4 MB | 4 MB | 4 MB | 4 MB | 16 MB |
| 4 MB | 4 MB | 8 MB | 8 MB | 24 MB |
| 8 MB | 8 MB | 4 MB | 4 MB | 24 MB |
| 8 MB | 8 MB | 8 MB | 8 MB | 32 MB |
| 16 MB | 16 MB | | | 32 MB |
| | | 16 MB | 16 MB | 32 MB |
| 4 MB | 4 MB | 16 MB | 16 MB | 40 MB |
| 16 MB | 16 MB | 4 MB | 4 MB | 40 MB |
| 8 MB | 8 MB | 16 MB | 16 MB | 48 MB |
| 16 MB | 16 MB | 8 MB | 8 MB | 48 MB |
| 16 MB | 16 MB | 16 MB | 16 MB | 64 MB |
| 32 MB | 32 MB | | | 64 MB |
| | | 32 MB | 32 MB | 64 MB |
| 4 MB | 4 MB | 32 MB | 32 MB | 72 MB |
| 32 MB | 32 MB | 4 MB | 4 MB | 72 MB |
| 8 MB | 8 MB | 32 MB | 32 MB | 80 MB |
| 32 MB | 32 MB | 8 MB | 8 MB | 80 MB |
| 16 MB | 16 MB | 32 MB | 32 MB | 96 MB |
| 32 MB | 32 MB | 16 MB | 16 MB | 96 MB |

| | | | | |
|-------|-------|-------|-------|--------|
| 32 MB | 32 MB | 32 MB | 32 MB | 128 MB |
|-------|-------|-------|-------|--------|

The system also supports 32-bit memory configurations. This feature allows you to install only one SIMM in one configuration. Table 1-8 shows the 32-bit configurations.

Table 1-8 Memory Configurations (32-bit)

| Bank 0 | | Bank 1 | | Total Memory |
|--------|--------|--------|--------|-----------------|
| SIMM-1 | SIMM-2 | SIMM-3 | SIMM-4 | |
| 4 MB* | | | | 4 MB |
| 4 MB | 4 MB | 4 MB | | 12 MB |
| 4 MB | 4 MB | 8 MB | | 16 MB |
| 4 MB | 4 MB | 16 MB | | 24 MB |
| 4 MB | 4 MB | 32 MB | | 40 MB |
| 8 MB* | | | | 8 MB |
| 8 MB | 8 MB | 4 MB | | 20 MB |
| 8 MB | 8 MB | 8 MB | | 24 MB |
| 8 MB | 8 MB | 16 MB | | 32 MB |
| 8 MB | 8 MB | 32 MB | | 48 MB |
| 16 MB* | | | | 16 MB |
| 16 MB | 16 MB | 4 MB | | 36 MB |
| 16 MB | 16 MB | 8 MB | | 40 MB |
| 16 MB | 16 MB | 16 MB | | 48 MB |
| 16 MB | 16 MB | 32 MB | | 64 MB |
| 32 MB* | | | | 32 MB |
| 32 MB | 32 MB | 4 MB | | 68 MB |
| 32 MB | 32 MB | 8 MB | | 72 MB |
| 32 MB | 32 MB | 16 MB | | 80 MB |
| 32 MB | 32 MB | 32 MB | | 96 MB |

* May also be installed in SIMM-2, SIMM-3, or SIMM-4.

1.4.1 Installing a SIMM

Follow these steps to install a SIMM:

1. Carefully slip a SIMM at a 45° angle into a socket making sure that the curved edge indicating the pin 1 of the SIMM matches pin 1 of the socket.



A SIMM fits only in one direction. If you slip in a SIMM but would not completely fit, you may have inserted it the wrong way. Reverse the orientation of the SIMM.

2. Gently push the SIMM to a vertical position until the pegs of the socket slip into the holes on the SIMM, and the holding clips lock the SIMM into position. The SIMM should be at a 90° angle when installed.

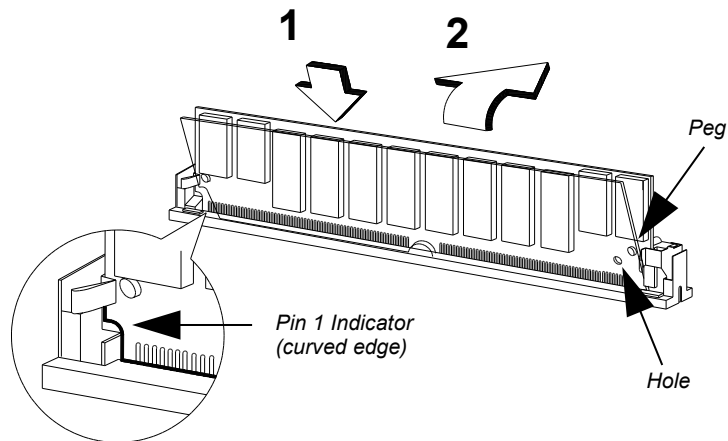


Figure 1-6 Installing a SIMM

1.4.2 Removing a SIMM

Follow these steps to remove a SIMM:

1. Press the holding clips on both sides of the SIMM outward to release it.
2. Move the SIMM to a 45° angle.
3. Pull the SIMM out of the socket.

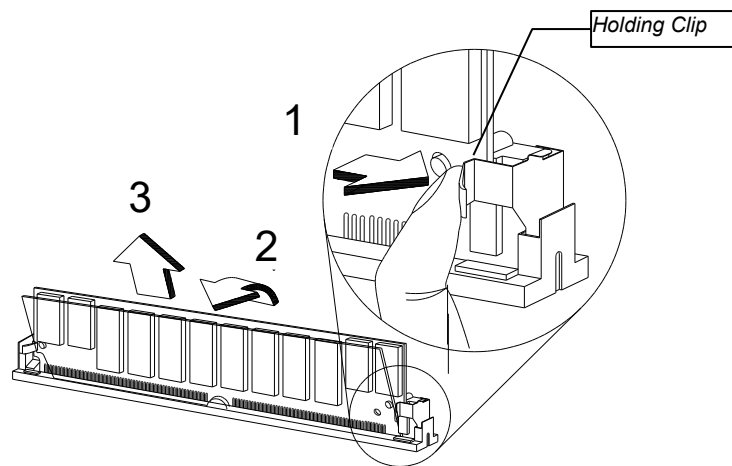


Figure 1-7 Removing a SIMM



Always remove SIMMs from the socket labeled SIMM-4, then SIMM-3, and so on.

1.4.3 Reconfiguring the System

You must enter Setup after installing or removing SIMMs to reconfigure the system.

Follow these steps to reconfigure the system:

1. Turn the system on. A memory error message appears, indicating that the total memory does not match the value stored in CMOS.
2. Press **CTRL** + **ALT** + **ESC** to enter Setup. A warning message appears indicating an incorrect memory configuration.
3. Press **ESC** twice to exit and reboot the system.

The system boots with the new memory configuration.

1.5 IDE Hard Disk Support

The system board supports four IDE hard disks, or any other IDE devices, through the two onboard PCI IDE interfaces. See Figure 1-1 for the location.

Follow the instructions in the housing installation manual on how to install a hard disk in the system. Connect the cables according to the IDE hard disk configuration in Table 1-9.

Table 1-9 IDE Hard Disk Configuration

| IDE Connector | Master | Slave |
|---------------|-------------|-------------|
| Channel 1 | Hard disk 0 | Hard disk 1 |
| Channel 2 | Hard disk 2 | Hard disk 3 |

1.6 CPU Installation

The system board comes with a zero-insertion force (ZIF) CPU socket for easy installation.

Follow these steps to install a Pentium CPU:

1. Lift up the socket lever.
2. Insert the CPU to the socket. Make sure that the notched corner of the CPU matches the pin 1 indicator on the socket.



Be careful not to bend any pins.

3. Pull down the socket lever.

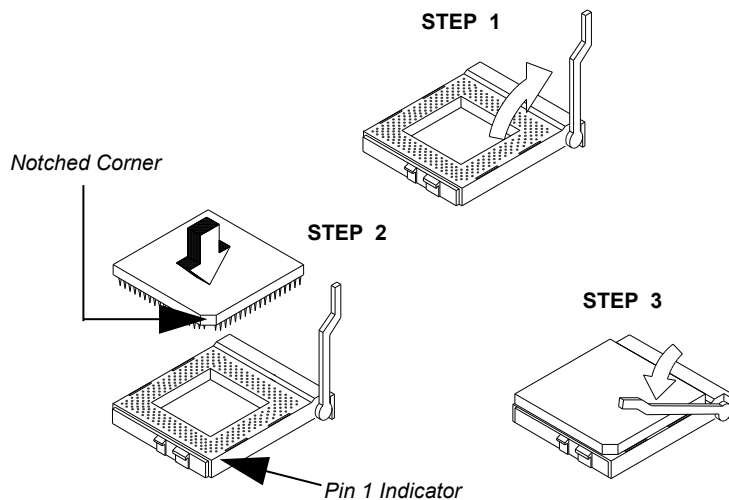


Figure 1-8 Installing a Pentium CPU

-
4. Set the CPU jumpers accordingly. Refer to Table 1-1.

1.7 Video Memory Upgrade

Larger video memory allows you to display higher resolutions and more colors. The system board comes with a 1-MB video memory onboard upgradable to 2 MB.

Follow these steps to upgrade the video memory:

1. Locate the video DRAM upgrade sockets labeled U3 and U4 on the system board. See Figure 1-1.
2. Gently insert a 256K x 16, 60 ns EDO SOJ) chip into each of the upgrade sockets.



Make sure that the pin 1 indicator on the chip matches the notched corner of the socket.

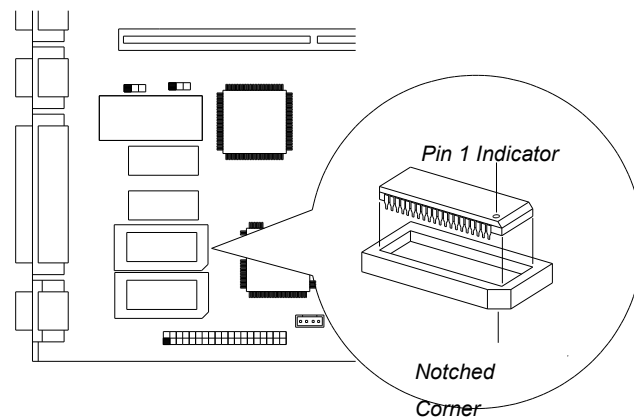


Figure 1-9 Installing a Video Memory Chip

1.8 Second-level Cache Configuration

The system board supports up to 256-KB asynchronous or pipeline burst second-level cache. Boards without onboard cache come with nine cache sockets for a 256-KB upgrade. Table 1-10 shows the second-level cache configuration options.

Table 1-10 Second-level Cache Configurations

| Cache Size | Cache Type | Upgrade Option |
|-------------------------------|---------------------------------------|--|
| 256 KB onboard | Asynchronous 32K * 8 (15 ns) x 9 | None |
| 256 KB onboard | Pipeline Burst 32K * 32 (7 ns) x 2 | None |
| 0 KB; 9 cache sockets mounted | Asynchronous | Upgradable to 256 KB using 32K * 8 (15 ns) x 9 including tag RAM |


1.9 Audio Features

The system board supports Sound Blaster Pro-compatible sound system. It has four connectors onboard to accommodate the audio-I/O board, WaveTable, CD-ROM, and fax-voice modem.



You may disable the audio feature in the BIOS Utility.

Figure 1-10 shows the four audio connectors on the system board.

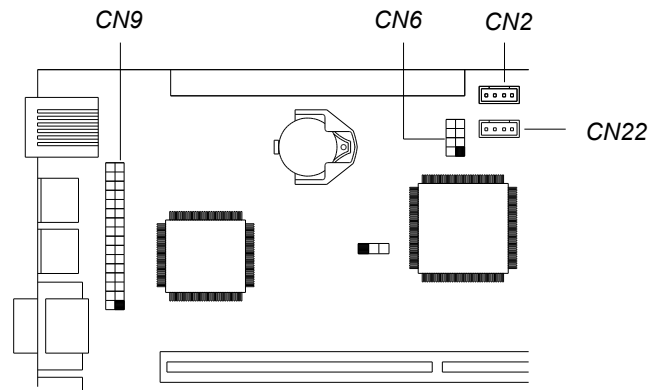

- 1 Audio-I/O board connector (CN9)
- 2 WaveTable connector (CN6)
- 3 CD audio connector (CN2)
- 4 Fax/voice modem connector (CN22)

Figure 1-10 Audio Connectors Onboard

1.9.1 Installing the Audio-I/O Board

The connector CN9 on the system board accommodates the audio-I/O board. Figure 1-11 shows how to install the board.

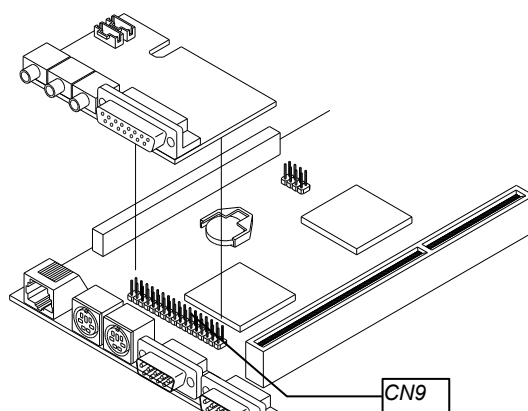


Figure 1-11 Installing the Audio-I/O Board

1.9.2 Audio-I/O Board Features

The audio-I/O board consists of microphone port, line-in port, line-out port, and MIDI/game port. These ports accommodate the external audio devices.

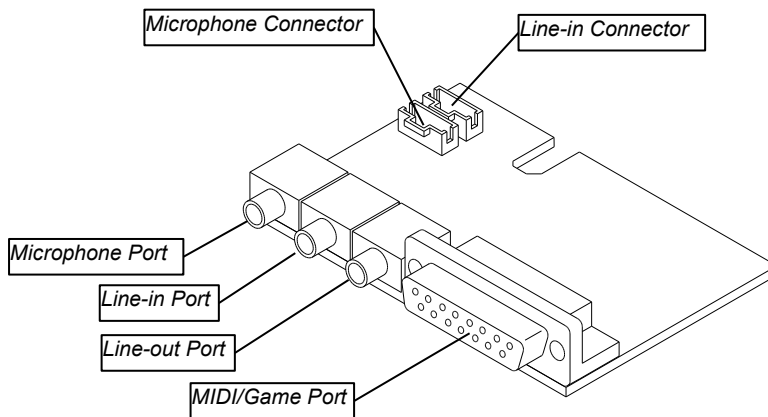


Figure 1-12 Audio-I/O Board

The internal connectors on the audio-I/O board are useful for system housings with built-in speakers, microphone, amplifier, or auxiliary devices. With the internal audio connectors functioning exactly as the external audio ports, you can utilize all the sound features supported by the system board.

Since external speakers, microphone, and other audio devices give better sound quality, the external audio ports take higher priority than the internal connectors. When you attach external audio devices to the ports, the internal audio devices are automatically disabled.

1.9.3 WaveTable Daughterboard (Optional)



The system board supports a WaveTable daughterboard as option. The WaveTable does not come with the basic system.

The WaveTable daughterboard supports the same external connectors as the audio-I/O board but comes with enhanced audio features. It bundles the Crystal chipsets that work together to produce better sound quality.

Figure 1-13 shows the WaveTable daughterboard layout.

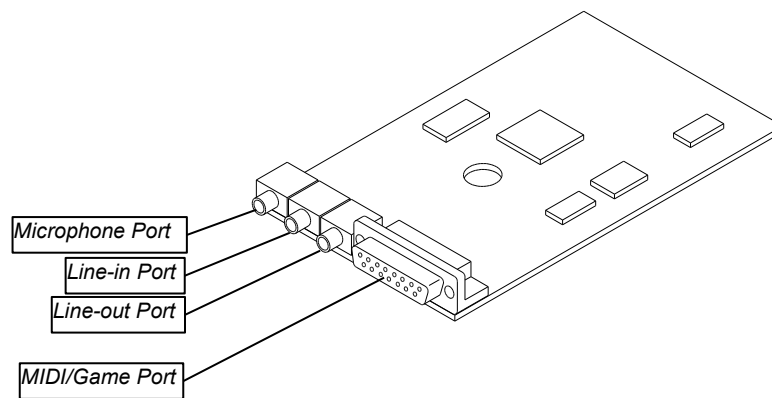


Figure 1-13 WaveTable Daughterboard

The WaveTable has two connectors, CN5 and CN6, located underside. Match these two connectors with the audio-I/O connector (CN9) and WaveTable connector (CN6) on the system board.

Figure 1-14 shows how to install the WaveTable connector.

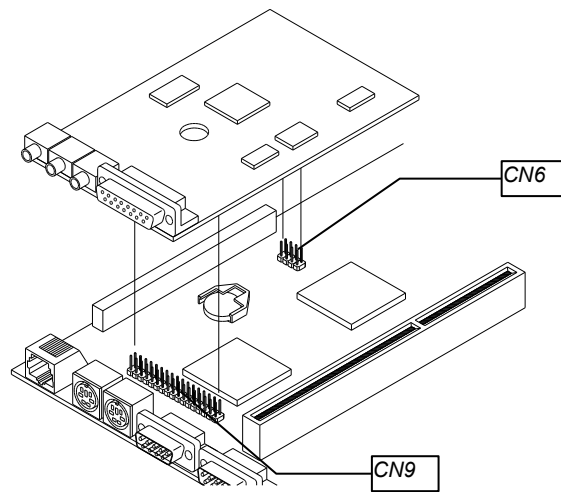


Figure 1-14 Installing the WaveTable Daughterboard

1.9.4 Audio-I/O Devices

Figure 1-15 shows the various devices that you can connect to the audio-I/O board.

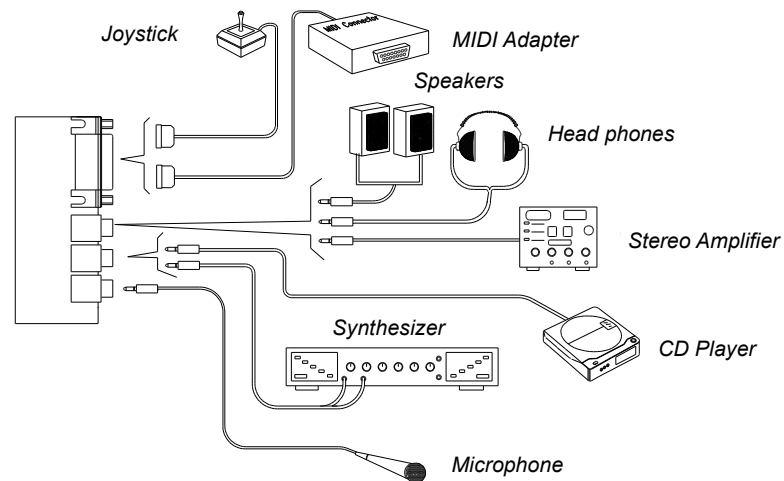


Figure 1-15 Audio I/O External Devices

1.10 Error Messages

Do not continue using the computer if you receive an error message of any type. Note the message and take corrective action. This section explains the different types of error messages and corresponding corrective measures.

There are two general types of error messages:

- Software
- System

1.10.1 Software Error Messages

Software error messages are returned by your operating system or application. These messages typically occur after you boot the operating system or when you run your applications. If you receive this type of message, consult your application or operating system manual for help.

1.10.2 System Error Messages

A system error message indicates a problem with the computer itself. A message of this type normally appears during the power-on self-test, before the operating system prompt appears.

Table 1-11 lists the system error messages.

Table 1-11 *System Error Messages*

| Message | Action |
|--|---|
| CMOS Battery Error | Replace the RTC chip or contact your dealer. |
| CMOS Checksum Error | Check the RTC chip and the necessary jumper. If the battery is still good, run Setup. |
| Display Card Mismatch | Run Setup |
| Diskette Drive Controller Error or Not Installed | Check and connect the control cable to the diskette controller. |
| Diskette Drive Error | Diskette may be defective. If not, replace the diskette drive. |
| Diskette Drive A Type Mismatch | Run Setup and select the proper drive type. |
| Diskette Drive B Type Mismatch | Run Setup and select the proper drive type. |
| Equipment Configuration Error | Modify the memory configuration to agree with one of the options in Table 1-3. |
| Hard disk Controller Error | Run Setup. |
| Hard disk 0 Error | Check all cable connections. Replace hard disk. |
| Hard disk 1 Error | Check all cable connections. Replace hard disk. |
| Keyboard Error or No Keyboard Connected | Check and connect the keyboard to the system unit. |
| Keyboard Interface Error | Replace the keyboard or contact your dealer. |

Table 1-11 System Error Messages (continued)

| Message | Action |
|--|---|
| Memory Error at: MMMM:SSSS:OOO (W:XXXX, R:YYYY) where: M: MB, S: Segment, O: Offset, X/Y: write/read pattern | Check SIMMs on the system board. Contact your dealer. |
| CPU Clock Mismatch | Run Setup. Check if the CPU clock is correct. If correct, exit Setup and reboot the system. If the error message reappears, ask for technical assistance. |
| Onboard Serial Port 1 Conflict | Run Setup and disable the port. |
| Onboard Serial Port 2 Conflict | Run Setup and disable the port. |
| Onboard Parallel Port Conflict | Run Setup and disable the port. |
| Pointing Device Error | Check and connect pointing device. |
| Pointing Device Interface Error | Replace the pointing device or contact your dealer. |
| Press l key to continue or b+a+^ for Setup | Press l or b+a+^ to enter Setup. |
| Real Time Clock Error | Check the RTC chip. If it is still good, run Setup. If not, replace the RTC chip. |

1.10.3 Correcting Error Conditions

As a general rule, if an error message says "Press F1 to continue," it is caused by a configuration problem, which can be easily corrected. An equipment malfunction is more likely to cause a fatal error, i.e., an error that causes complete system failure.

Here are some corrective measures for error conditions:

1. Run Setup. You must know the correct configuration values for your system before you enter Setup, which is why you should write them down when the system is correctly configured. An incorrect configuration is a major cause of power-on error messages, especially for a new system.
2. Remove the system unit cover. Check that the jumpers on the system board and any expansion boards are set correctly.
3. If you cannot access a new disk, it may be because your disk is not properly formatted. Format the disk first using the FDISK and FORMAT commands.
4. Check that all connectors and boards are securely plugged in.

If you go through the corrective steps above and still receive an error message, the cause may be an equipment malfunction.

If you are sure that your configuration values are correct and your battery is in good condition, the problem may lie in a damaged or defective chip.

In both cases, contact an authorized service center for assistance.

Chapter 2

BIOS Utility

Most systems are already configured by the manufacturer or the dealer. There is no need to run Setup when starting the computer unless you get a Run Setup message.

The Setup program loads configuration values into the battery-backed nonvolatile memory called CMOS RAM. This memory area is not part of the system RAM.



If you repeatedly receive Run Setup messages, the battery may be bad. In this case, the system cannot retain configuration values in CMOS. Ask a qualified technician for assistance.

Before running Setup, have the following information ready:

- **Diskette drive type** The standard type is either a 5.25-inch 1.2-MB or a 3.5-inch 1.44-MB diskette drive.
- **IDE hard disk drive type** The drive information is on a label pasted on your IDE drive or in the documentation supplied by the vendor. Refer also to the IDE drive table at the end of this chapter.


2.1 Entering Setup

To enter Setup, press the key combination **CTRL**+**ALT**+**ESC** .



*You must press **CTRL**+**ALT**+**ESC** while the system is booting. This key combination does not work during any other time.*

The BIOS Utility main menu then appears:

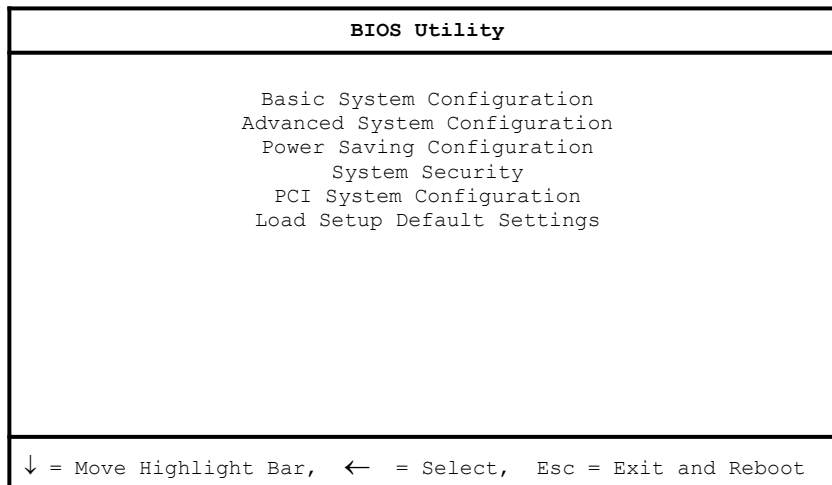

The parameters on the screens show default values. These values may not be the same as those in your system.

The grayed items (denoted with asterisks) on the screens have fixed settings and are not user-configurable.

2.2 Basic System Configuration

Select Basic System Configuration to input configuration values such as date, time, and disk types.

The following screen shows the Basic System Configuration menu.

| Basic System Configuration | | Page 1/2 | | |
|---|----------------------|----------|------|--------|
| Date | [MM/DD/YY] | | | |
| Time | [HH:MM:SS] | | | |
| Diskette Drive A | [xx-MB xx-inch] | | | |
| Diskette Drive B | [xx-MB xx-inch] | | | |
| | | Cylinder | Head | Sector |
| IDE Drive 0 (xxx MB)..... | [Auto] | xx | xx | xx |
| IDE Drive 1 (xxx MB)..... | [Auto] | xx | xx | xx |
| IDE Drive 2 | [Auto] | | | |
| IDE Drive 3 | [Auto] | | | |
| *Base Memory | [xxx] KB | | | |
| *Extended Memory | [xxxx] KB | | | |
| *Total Memory | [xxxx] KB | | | |
| *Math Coprocessor | [Installed] | | | |
| *Video Display | [VGA/EGA] | | | |
| ↓ = Move Highlight Bar, → ← = Change Setting PgDn/PgUp = Move Screen, F1 = Help, Esc = Exit | | | | |

The command line at the bottom of the menu tells you how to highlight items, change settings, and move from one screen to another.

Press **↑** or **↓** on the cursor-edit keypad to highlight the desired parameter.

Press **→** or **←** to select the desired option for a parameter.

Press **PGDN** to move to the next page or **PGUP** to return to the previous page.

Press **ESC** to exit the configuration menu.

The following screen shows page 2 of the Basic System Configuration menu.

```
Basic System Configuration                               Page 2/2
Communication Settings
  Baud Rate .....[9600] BPS
  Parity .....[None]
  Stop Bits .....[1] Bits
  Data Length .....[8] Bits
Enhanced IDE Features
  Hard Disk Block Mode .....[Enabled ]
  Advanced PIO Mode .....[Enabled ]
  Hard Disk Size > 504MB .....[Enabled ]
  Hard Disk 32-Bit Access .....[Enabled ]
  Num Lock After Boot .....[Enabled ]
*Memory Test .....[Disabled]
  Auto Configuration Mode.....[Enabled ]
  Fast Boot Mode .....[Enabled ]
  Quiet Boot .....[Enabled ]
  Configuration Table .....[Disabled]



↓ = Move Highlight Bar,   → ← = Change Setting
PgDn/PgUp = Move Screen,  F1 = Help,   Esc = Exit
```

The following sections explain the different parameters and their settings.

2.2.1 Date and Time

The real-time clock keeps the system date and time. After setting the date and time, you need not enter them every time you turn on the system. As long as the internal battery remains good (approximately seven years) and connected, the clock continues to keep the date and time accurately even when the power is off.



Date

Highlight the items on the date parameter and press  or  to set the date following the month-day-year format.

Valid values for month, day, and year are:

- Month 1 to 12
- Day 1 to 31
- Year 00 to 99



Time

Highlight the items on the time parameter and press  or  to set the time following the hour-minute-second format.

Valid values for hour, minute, and second are:

- Hour 00 to 23
- Minute 00 to 59
- Second 00 to 59

2.2.2 Diskette Drives



To enter the configuration value for the first diskette drive (drive A), highlight the Diskette Drive A parameter. Press  or  key to view the options and select the appropriate value.

Possible settings for the Diskette Drive parameters:

- [None]
- [360 KB, 5.25-inch]
- [1.2 MB, 5.25-inch]
- [720 KB, 3.5-inch]
- [1.44 MB, 3.5-inch]
- [2.88 MB, 3.5-inch]

Follow the same procedure for Diskette Drive B. Choose None if you do not have a second diskette drive.

2.2.3 IDE Drives

Move the highlight bar to the IDE Drive 0 parameter to configure the first IDE drive (drive C). Press  or  to display the IDE drive types with their respective values. Select the type that corresponds to your IDE hard disk drive. Follow the same procedure for the other IDE drives, if any. Choose `None` if you do not have other drives.

Selecting the “Auto” Option

If you do not know the exact type of your IDE hard disk drive, select the option `Auto`. During the power-on self-test (POST), when the system performs self-testing and self-initialization before loading the operating system and applications, the BIOS utility automatically determines your IDE drive type. You can see the drive type and its values when you enter the BIOS Utility.

```

                                     Cylinder Head Sector
IDE Drive 0 (xx MB)....[Auto]      xx      xx      xx
```

If desired, you can save the values under the option `User`.

```

                                     Cylinder Head Sector
IDE Drive 0 (xx MB)....[User]      xx      xx      xx
```

The next time you boot the system, the BIOS utility does not have to auto-configure your IDE drive as it detects the saved disk information during POST.



We recommend that you copy the IDE disk drive values and keep them in a safe place in case you have to reconfigure the disk in the future.

Follow the same procedure to auto-configure other IDE drives.

Selecting the “User” Option

There are cases when you cannot use the option *Auto*, instead you have to select *User*. Choose the *User* option when you have installed an IDE hard disk that was previously formatted but does not use the disk native parameters or structure, that is, the disk type may be in the IDE hard disk types list but the number of cylinders, heads, and sectors differ.

Follow these steps to configure an IDE hard disk with the *User* option:

1. Highlight an IDE drive parameter.
2. Select the option *User* and press .
3. Type in the number of cylinders, heads, and sectors of the drive under the appropriate columns.



Be sure to have the correct IDE hard disk drive information beforehand.

4. Choose *YES* when asked if you want to save CMOS data.

2.2.4 System Memory

The system automatically detects the total amount of onboard memory during the POST and sets the memory parameters accordingly. If you install additional memory, the system automatically adjusts the Total Memory parameter to display the new memory size.

2.2.5 Math Coprocessor

The CPU includes a math coprocessor so this parameter shows *Installed* by default.

2.2.6 Video Display

The video display is the monitor on which the operating system prompt appears when you boot the system. The system automatically detects the video mode of your primary display and sets the configuration value accordingly. Values for this parameter are:

- [Monochrome]
- [CGA 40 columns x 25 rows]
- [CGA 80 columns x 25 rows]
- [VGA/EGA]

2.2.7 Communication Settings

The Communication Settings parameters allow you to set the baud rate, parity, stop bit and data length for the first serial port (COM 1). The values for this parameter are:

- Baud rate : 110 to 9600 bits per second (BPS)
- Parity : odd, even, or none
- Stop bit : 1 or 2 stop bits
- Data length : 7- or 8-bit data word



The baud rate maximum value 9600 BPS applies only to POST under UNIX environment. The system I/O chipset SMC 37C665GT supports up to 115.2K BPS.

There is one restriction on the options available for the communication status parameters. If your data length parameter is an 8-bit data word, you must select one of the following combinations:

- 1 stop bit and odd or even parity
- 2 stop bits and no parity

2.2.8 Enhanced IDE Features

Hard Disk Block Mode

This function enhances disk performance depending on the hard disk in use. If you set this parameter to *Enabled*, it allows data transfer in block (multiple sectors). If your system does not boot after enabling this parameter, change the setting to *Disabled*. This parameter is normally set to *Enabled*.

Advanced PIO Mode

Enabling this parameter allows for faster data recovery and read/write timing that reduces hard disk activity time. This results to better hard disk performance.

To utilize this feature, your hard disk must support the advanced PIO mode. If not, set this parameter to *Disabled*. Refer to your hard disk documentation for information about the advanced PIO mode.

Hard Disk Size > 504 MB

This enhanced IDE feature works only under DOS and Windows 3.x environments. If enabled, it allows you to use a hard disk with a capacity of more than 504 MB. This is made possible through the Logical Block Address (LBA) mode translation. Other operating systems require this parameter to be set to *Disabled*.

To prevent data loss, keep this parameter set to *Enabled* if you are using a hard disk with more than 504 MB capacity that was previously configured through LBA mode. When you use a hard disk configured through the cylinder-head-sector (CHS) mode, set this parameter to *Disabled*.

Hard Disk 32-Bit Access

Enabling this parameter improves system performance by allowing the use of the 32-bit hard disk access. This enhanced IDE feature works only under DOS, Windows 3.x and Novell NetWare. If your software or hard disk does not support this function, set this parameter to Disabled.

2.2.9 Num Lock After Boot

This parameter allows you to activate the Num Lock function upon booting. The default setting is Enabled.

2.2.10 Memory Test

When set to Enabled, this parameter allows the system to perform a RAM test during the POST routine. When set to Disabled, the system detects only the memory size and bypasses the test routine. The default setting is Disabled.

This item is fixed to Disabled and is not user-configurable if you enabled the Fast Boot Mode parameter on page 2 of the Basic System Configuration menu. See section 2.2.12.

2.2.11 Auto Configuration Mode

When enabled, this parameter automatically sets the system configuration values to their optimized settings. Set this parameter to the default Enabled if you do not know the hard disk drive parameters and the onboard communication port configurations.

2.2.12 Fast Boot Mode

When enabled, this parameter allows the system to boot faster by skipping some POST routines. It bypasses memory test and enables the primary- and second-level cache. This parameter is enabled by default. When set to `Enabled`, this parameter causes the Memory Test parameter to be fixed to `Disabled`.

2.2.13 Quiet Boot

This parameter enables or disables the quiet boot function. When set to `Enabled`, BIOS is in graphical mode and displays only an identification logo during POST and while booting. After which the screen displays the operating system prompt (such as DOS) or logo (such as Windows 95). If any error occurred while booting, the system automatically switches to the text mode.

Even if your setting is `Enabled`, you may also switch to the text mode while booting by pressing `F9` after you hear a beep that indicates the activation of the keyboard.

When set to `Disabled`, BIOS is in the conventional text mode where you see the system initialization details on the screen.

2.2.14 Configuration Table

This parameter allows you to display the configuration table after POST but before booting. The configuration table gives a summary of the hardware devices and settings that BIOS detected during POST. Following is a sample configuration table.

| | | | |
|-------------------|-------------------|------------------|-------------------|
| CPU/CLK | : Pentium/133 MHz | Base Memory: | : xxx KB |
| Math Coprocessor: | Installed | Extended Memory: | xxxx KB |
| IDE Drive 0 | : xxx MB | Shadow RAM | : xxx KB |
| IDE Drive 1 | : xxx MB | Internal Cache | : xxx KB, Enabled |
| IDE Drive 2 | : xxx MB | External Cache | : xxx KB, Enabled |
| IDE Drive 3 | : xxx MB | Serial Port(s) | : 3F8h, 2F8h |
| Diskette Drive A: | xx-MB, xx-inch | Parallel Port | : 378h |
| Diskette Drive B: | None | Pointing Device: | None |

2.3 Advanced System Configuration

The Advanced System Configuration option allows you to configure the advanced system memory functions.



Do not change any settings in the Advanced Configuration if you are not a qualified technician to avoid damaging system.

The following screen shows page one of the Advanced System Configuration parameters.

```
Advanced System Configuration Page 1/1

Shadow RAM
*E0000h - FFFFh (System BIOS) . . . [Enabled ]
*C0000h - C7FFFh (Video BIOS)..... [Enabled ]
C8000h - CBFFFh..... [Disabled]
CC000h - CFFFFh..... [Disabled]
D0000h - D3FFFh..... [Disabled]
D4000h - D7FFFh..... [Disabled]
D8000h - DBFFFh..... [Disabled]
DC000h - DFFFFh..... [Disabled]

*Internal Cache (CPU Cache)..... [Enabled ]
*External Cache..... [Enabled ]
  *Cache Scheme..... [ Write Back ]

ECC/Parity Mode Selection..... [  ECC  ]
Memory at 15MB-16MB Reserved for.... [   System   ] Use
Plug & Play OS..... [Yes]
```

↓ = Move Highlight Bar, → ← = Change Setting
PgDn/PgUp = Move Screen, F1 = Help, Esc = Exit



The grayed parameters (denoted with asterisks) are not user-configurable.

2.3.1 Shadow RAM

The system reserves 384 KB of random access memory (RAM) for the shadow RAM function. This parameter has eight range addresses. When you set these addresses to *Enabled*, the system BIOS, video BIOS, and I/O ROM functions run directly from the shadow RAM for faster operation. When you set them to *Disabled*, the functions run normally from ROM.

The address range E0000h - FFFFFh is for shadowing the system BIOS. This item is always set to *Enabled* and is not user-configurable. The address range C0000h - C7FFFh is for shadowing the video BIOS. This item is fixed to *Enabled* and is not user-configurable. The remaining address ranges are for I/O ROM functions.

2.3.2 Internal Cache (CPU Cache)

This parameter enables or disables the internal cache memory. This item is fixed to *Enabled* and is not user-configurable if you enabled the *Auto configuration Mode* and *Fast Boot Mode* parameters on page 2 of the Basic System Configuration menu. Otherwise, you can choose to disable this item.

2.3.3 External Cache

This parameter enables or disables the external cache memory. This item is fixed to *Enabled* and is not user-configurable if you enabled the *Fast Boot Mode* parameter on page 2 of the Basic System Configuration menu. Otherwise, you can choose to disable this item.

Cache Scheme

This parameter fixes the cache setting to *Write-back mode*. *Write-back* updates the cache but not the memory when there is a write instruction. It updates the memory only when there is an inconsistency between the cache and the memory.

2.3.4 ECC/Parity Mode Selection

This parameter allows you to enable or disable the ECC and parity check feature. You must disable this parameter if you installed SIMMs without parity.

2.3.5 Memory at 15MB-16MB

To prevent memory address conflicts between the system and expansion boards, reserve this memory range for the use of either the system or an expansion board. Before setting this parameter, check your add-on card manual to determine if your add-on card needs this memory space. If not, set this parameter to *System Use*.

2.3.6 Plug & Play OS

Set this parameter to *Yes* if you installed the Windows 95 operating system. Enabling this parameter allows Windows 95 to initialize and enable non-boot plug-and-play (PnP) devices such as audio or modem cards. BIOS initializes only boot PnP devices such as SCSI cards.

Set this parameter to *No* if you do not use Windows 95. With this parameter disabled, BIOS initializes all boot or non-boot PnP devices.

2.4 Power Saving Configuration

The Power Saving Configuration parameters are configurable only if your system supports the power management feature.

The following screens show the Power Saving Configuration parameters and their default settings:

```
Power Saving Configuration                               Page 1/1

Power Management Mode .....[Enabled ]
*Monitor Power Saving Timer .....[15] Minute(s)
*IDE Hard Disk Standby Timer .....[15] Minute(s)
*System Standby Timer .....[OFF]
*System Suspend Timer .....[OFF]

Monitored Activities
IRQ 2/IRQ 9...[Disabled]      DRQ 0.....[Disabled]
IRQ 3.....[Disabled]         DRQ 1.....[Disabled]
IRQ 4.....[Disabled]         DRQ 3.....[Disabled]
IRQ 5.....[Disabled]         DRQ 5.....[Disabled]
IRQ 7.....[Disabled]         DRQ 6.....[Disabled]
IRQ 10.....[Disabled]        DRQ 7.....[Disabled]
IRQ 11.....[Disabled]
*IRQ 12.....[Enabled ]
*IRQ 15.....[Enabled ]

↓ = Move Highlight Bar,   → ← = Change Setting
PgDn/PgUp = Move Screen,  F1 = Help,  Esc = Exit
```

2.4.1 Power Management Mode

This parameter allows you to reduce power consumption. When this parameter is set to *Enabled*, you can configure the monitor, IDE hard disk, and system timers. Setting to *Disabled* deactivates the power management feature and all the timers.

Monitor Power Saving Timer

This parameter sets the VESA DPMS-compatible display monitor to standby mode. Any keyboard or mouse action returns the monitor to normal operation.

IDE Hard Disk Standby Timer

This parameter allows the hard disk to enter standby mode after inactivity of 1 to 15 minutes, depending on your setting. When you access the hard disk again, allow 3 to 5 seconds (depending on the hard disk) for the disk to return to normal speed. Set this parameter to *Off* if your hard disk does not support this function.

System Standby Timer

This parameter sets the system to a "fast-on" power saving mode. It automatically enters the standby mode after a specified period of inactivity. Any keyboard or mouse action, or any enabled monitored activities occurring through IRQ or DRQ channels, resume system operation. See section 2.4.2.

System Suspend Timer

This parameter supports the lowest power saving mode. To resume system operation from suspend mode, you can either press a key, move the mouse or press the reset button. If you run network, set this item to *OFF*.

2.4.2 Monitored Activities

The IRQ and DRQ items under this parameter allow you to monitor system activities occurring through the IRQ and DRQ channels to determine whether or not to enter power saving mode.

For example, if you assign IRQ 3 to a fax/modem and you set this item to *Enabled*, any fax/modem activity wakes up the system from standby mode.

2.5 System Security Setup

The Setup program has a number of security features to prevent unauthorized access to the system and its data.

Enter the Setup program and select System Security. The following screen appears:

```
System Security Page 1/1
Disk Drive Control
Diskette Drive.....[ Normal ]
Hard Disk Drive.....[ Normal ]
System Boot Drive.....[Drive A then C]
Boot from CD-ROM.....[Disabled]
Onboard Communication Ports
Serial Port 1 Base Address....[ 3F8h ]
Serial Port 2 Base Address....[ 2F8h ]
Parallel Port Base Address....[378 (IRQ 7)]
Operation Mode.....[Enhanced Parallel Port (EPP)] Mode
*ECP DMA Channel.....[-]
Onboard PS/2 Mouse (IRQ 12)....[Enabled ]
Crystal Audio Chip.....[Enabled ]
Setup Password.....[ None ]
Power On Password.....[ None ]

↓ = Move Highlight Bar, → ← = Change Setting
PgDn/PgUp = Move Screen, F1 = Help, Esc = Exit
```

2.5.1 Disk Drive Control

The disk drive control features allow you to enable or disable the read/write functions of a disk drive. These features can also control the diskette drive or the hard disk drive boot function to prevent loading operating systems or other programs from a certain drive while the other drives are operational.

Table 2-1 lists the drive control settings and their corresponding functions.

Table 2-1 Drive Control Settings

| Diskette Drive | |
|---------------------------|--|
| Setting | Description |
| Normal | Diskette drive functions normally |
| Write Protect All Sectors | Disables the write function on all sectors |
| Write Protect Boot Sector | Disables the write function only on the boot sector |
| Disabled | Disables all diskette functions |
| Hard Disk Drive | |
| Setting | Description |
| Normal | Hard disk drive functions normally |
| Write Protect All Sectors | Disables the write function on all sectors |
| Write Protect Boot Sector | Disables the write function only on the boot sector |
| Disabled | Disables all hard disk functions |
| System Boot Drive | |
| Setting | Description |
| Drive A then C | The system checks drive A first. If there is a diskette in the drive, the system boots from drive A. Otherwise, it boots from drive C. |
| Drive C then A | The system checks drive C first. If there is a hard disk (drive C) installed, the system boots from drive C. Otherwise, it boots from drive A. |
| C: | The system always boots from drive C. |
| A: | The system always boots from drive A. |

Table 2-1 Drive Control Settings (continued)

| Boot from CD-ROM | |
|------------------|--|
| Setting | Description |
| Enabled | The system for a bootable CD in the CD-ROM. If a CD is present, the system boots from the CD-ROM. Otherwise, it boots from the drive specified in the System Boot drive parameter. |
| Disabled | System boots from the drive specified in the System Boot Drive parameter. |

2.5.2 Onboard Communication Ports

Serial Port 1 Base Address

This parameter allows you to set the serial port 1 logical base address.

Table 2-2 Serial Port 1 Settings

| Setting | Description |
|----------|--|
| 3F8h | Serial port 1 with address 3F8h using IRQ4 |
| 2F8h | Serial port 1 with address 2F8h using IRQ3 |
| 3E8h | Serial port 1 with address 3E8h using IRQ4 |
| 2E8h | Serial port 1 with address 2E8h using IRQ3 |
| Disabled | Disables serial port 1 |

Serial Port 2 Base Address

This parameter allows you to set the serial port 2 logical base address.

Table 2-3 Serial Port 2 Settings

| Setting | Description |
|----------|--|
| 3F8h | Serial port 2 with address 3F8h using IRQ4 |
| 2F8h | Serial port 2 with address 2F8h using IRQ3 |
| 3E8h | Serial port 2 with address 3E8h using IRQ4 |
| 2E8h | Serial port 2 with address 2E8h using IRQ3 |
| Disabled | Disables serial port 2 |



If you assign 3F8h to serial port 1, you may only assign 2F8h or 2E8h to serial port 2.

If you assign 2F8h to serial port 1, you may only assign 3F8h or 3E8h to serial port 2.

Parallel Port Base Address

The system has one parallel port. Table 2-4 lists the options for selecting the parallel port address. You also have the option to disable the parallel port.

Table 2-4 Parallel Port Settings

| Setting | Function |
|--------------|--|
| 3BCh (IRQ 7) | Corresponds to the parallel port with address 3BCh |
| 378h (IRQ 7) | Corresponds to the parallel port with address 378h |
| 278h (IRQ 5) | Corresponds to the parallel port with address 278h |

| | |
|----------|----------------------------|
| Disabled | Disables the parallel port |
|----------|----------------------------|

To deactivate the parallel port, select the `Disabled` option. If you install an add-on card that has a parallel port whose address conflicts with the parallel port onboard, the system automatically disables the onboard functions.

Check the parallel port address on the add-on card and change the address to one that does not conflict.

OPERATION MODE

This item allows you to set the operation mode of the parallel port. Table 2-5 lists the different operation modes.

Table 2-5 Parallel Port Operation Mode Settings

| Setting | Function |
|----------------------------------|---|
| Standard Parallel Port (SPP) | Allows normal speed one-way operation |
| Standard and Bidirectional | Allows normal speed operation in a two-way mode |
| Enhanced Parallel Port (EPP) | Allows bidirectional parallel port operation at maximum speed |
| Extended Capabilities Port (ECP) | Allows parallel port to operate in bidirectional mode and at a speed higher than the maximum data transfer rate |

ECP DMA CHANNEL

This item becomes active only if you select `Extended Capabilities Port (ECP)` as the operation mode. It allows you to select DMA channel 1 or DMA channel 3 (as required in Windows95).

2.5.3 Onboard PS/2 Mouse (IRQ 12)

This parameter enables or disables the onboard PS/2 mouse. When set to *Enabled*, it allows you to use the onboard PS/2 mouse assigned with IRQ12. When set to *Disabled*, it deactivates the mouse and frees IRQ12 for the use of other devices.

2.5.4 Crystal Audio Chip

This parameter allows you to enable or disable the onboard Crystal 4236 sound chip. The default setting is *Enabled*. If you install a sound card, disable this parameter to avoid conflict with the onboard chip.

2.5.5 Setup Password


The Setup Password prevents unauthorized access to the BIOS utility.



Set jumper JP3 to pins 1-2 to enable the password function.

Setting a Password

1. Highlight the Setup Password parameter and press the left- or right-arrow key. The password prompt appears:





2. Type a password. The password may consist of up to seven characters.



Exercise caution when typing your password because the characters do not appear on the screen.

3. Press **ENTER**. A prompt asks you to retype the password to verify your first entry.



4. Retype the password then press **ENTER**.

After setting the password, the system automatically sets the Setup Password parameter to `Present`. The next time you want to enter the BIOS utility, you must key-in your Setup password.

If You Forget the Password

If you forget your password, you must return the configuration values stored in CMOS to their default values. Should this happen, call your dealer for assistance.

2.5.6 Power On Password

The Power On Password secures your system against unauthorized use. Once you set this password, you have to type it whenever you boot the system. To set this password, follow the same procedure as in setting the Setup password.

2.6 PCI System Configuration

The PCI System Configuration allows you to specify the settings for your PCI devices.

| PCI System Configuration | | Page 1/1 | | | |
|--|------|----------|------|------|------|
| PCI IRQ Setting[Auto] | | | | | |
| | | INTA | INTB | INTC | INTD |
| *PCI Slot 1..... | [--] | [--] | [--] | [9] | |
| *PCI Slot 2..... | [--] | [--] | [--] | [9] | |
| *PCI Slot 3..... | [--] | [--] | [--] | [9] | |
| *Onboard PCI VGA..... | [9] | | | | |
| PCI IRQ Sharing.....[Yes] | | | | | |
| VGA Palette Snoop[Disabled] | | | | | |
| ↓ = Move Highlight Bar, → ← = Change Setting | | | | | |
| PgDn/PgUp = Move Screen, F1 = Help, Esc = Exit | | | | | |

2.6.1 PCI IRQ Setting





This parameter allows for Auto or Manual configuration of PCI devices. If you use plug-and-play (PnP) devices, you can keep the default setting `Auto`. The system then automatically configures the PnP devices. If your PCI device is not a PnP, you can manually assign the interrupt for each of the device.



Refer to your manual for technical information about the PCI card.

PCI Slots

These parameters allow you to specify the appropriate interrupt for each of the PCI devices. You can assign IRQ5, IRQ9, IRQ10, IRQ11, IRQ14, or IRQ15 to the slots.

Press  or  to move between fields. Press  or  to select options.

2.6.2 PCI IRQ Sharing

When set to *Yes*, this parameter allows you to assign the same IRQ to more than one PCI device installed in the system. When set to *No*, you must assign different IRQs to the PCI devices.


2.6.3 VGA Palette Snoop

PCI devices support the palette snooping technique that enables the device to control access to their palette registers. Set this parameter to *Enabled* to activate the palette snooping function in the PCI VGA devices installed in your system. Check your VGA card manual for more information about this function.

2.7 Load Setup Default Settings

Use this option to load the default settings for the optimized system configuration. When you load the default settings, some of the parameters are grayed-out with their fixed settings. These grayed parameters are not user-configurable. If you want to change the settings of these items, disable the Fast Boot Mode parameter in the Basic System Configuration menu.

The following dialog box appears when you select Load Setup Default Settings from the main menu.

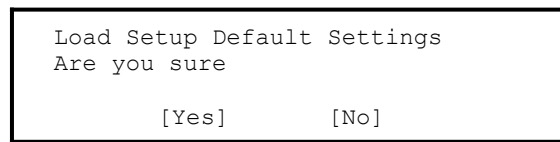

Select [Yes] to load the default settings.

2.8 Leaving Setup

Examine the system configuration values. When you are satisfied that all the values are correct, write them down. Store the recorded values in a safe place. In the future, if the battery loses power or the CMOS chip is damaged, you will know what values to enter when you rerun Setup.

Press **ESC** to leave the system configuration setup. If there is any change in the BIOS utility functions, the following screen appears:

```
Do you want to save CMOS data?
      [Yes]      [No]
```

Use the arrow keys to select your response. Select **Yes** to store the new data in CMOS. Select **No** to retain the old configuration values. Press **ENTER**.

2.9 IDE Hard Disk Types

| Type | Cylinders | Heads | Sectors Per Track |
|------|----------------------------------|-------|-------------------|
| None | (indicates SCSI or no hard disk) | | |
| 1 | 306 | 4 | 17 |
| 2 | 615 | 4 | 17 |
| 3 | 615 | 6 | 17 |
| 4 | 940 | 8 | 17 |
| 5 | 940 | 6 | 17 |
| 6 | 615 | 4 | 17 |
| 7 | 462 | 8 | 17 |
| 8 | 733 | 5 | 17 |
| 9 | 900 | 15 | 17 |
| 10 | 820 | 3 | 17 |
| 11 | 855 | 5 | 17 |
| 12 | 855 | 7 | 17 |
| 13 | 306 | 8 | 17 |
| 14 | 733 | 7 | 17 |
| 15 | (reserved) | | |
| 16 | 612 | 4 | 17 |
| 17 | 977 | 5 | 17 |
| 18 | 977 | 7 | 17 |
| 19 | 1024 | 7 | 17 |
| 20 | 733 | 5 | 17 |
| 21 | 733 | 7 | 17 |
| 22 | 733 | 5 | 17 |
| 23 | 306 | 4 | 17 |
| 24 | 612 | 4 | 17 |
| 25 | 306 | 4 | 17 |
| 26 | 612 | 4 | 17 |
| 27 | 698 | 7 | 17 |

| Type | Cylinders | Heads | Sectors Per Track |
|------|-----------|-------|-------------------|
| 28 | 976 | 5 | 17 |
| 29 | 306 | 4 | 17 |
| 30 | 611 | 4 | 17 |
| 31 | 732 | 7 | 17 |
| 32 | 1023 | 5 | 17 |
| 33 | 751 | 8 | 17 |
| 34 | 755 | 16 | 17 |
| 35 | 731 | 13 | 26 |
| 36 | 980 | 15 | 17 |
| 37 | 936 | 16 | 17 |
| 38 | 981 | 5 | 17 |
| 39 | 981 | 10 | 17 |
| 40 | 762 | 8 | 39 |
| 41 | 980 | 5 | 17 |
| 42 | 832 | 8 | 33 |
| 43 | 683 | 12 | 38 |
| 44 | 513 | 16 | 38 |
| 45 | 776 | 8 | 33 |
| 46 | 683 | 16 | 38 |
| 47 | 832 | 6 | 33 |
| 48 | 615 | 2 | 34 |
| 49 | 989 | 16 | 63 |
| 50 | 823 | 4 | 38 |
| 51 | 1001 | 15 | 17 |
| 52 | 1024 | 17 | 22 |
| 53 | 723 | 13 | 51 |
| 54 | 548 | 8 | 38 |
| 55 | 1013 | 4 | 41 |
| 56 | 929 | 15 | 17 |

| Type | Cylinders | Heads | Sectors Per Track |
|------|------------|-------|-------------------|
| 57 | 817 | 14 | 36 |
| 58 | 723 | 13 | 81 |
| 59 | 802 | 4 | 39 |
| 60 | 1024 | 9 | 17 |
| 61 | 895 | 5 | 55 |
| 62 | (reserved) | | |
| 63 | 966 | 10 | 34 |
| 64 | 1024 | 8 | 17 |
| 65 | 1024 | 11 | 17 |
| 66 | 918 | 11 | 17 |
| 67 | 965 | 14 | 49 |
| 68 | 1024 | 10 | 17 |
| 69 | 1024 | 12 | 17 |
| 70 | 1024 | 13 | 17 |
| 71 | 1024 | 14 | 17 |
| 72 | 1024 | 11 | 50 |
| 73 | 1024 | 16 | 17 |
| 74 | 918 | 15 | 17 |
| 75 | 1010 | 16 | 51 |
| 76 | 1024 | 5 | 17 |
| 77 | 1024 | 8 | 17 |
| 78 | (reserved) | | |
| 79 | 1001 | 15 | 32 |
| 80 | 1024 | 16 | 63 |
| 81 | 1024 | 7 | 17 |
| 82 | 988 | 16 | 52 |
| 83 | 1024 | 15 | 17 |
| 84 | 776 | 8 | 33 |
| 85 | 926 | 13 | 17 |

| Type | Cylinders | Heads | Sectors Per Track |
|--------------|----------------|-------|-------------------|
| 86 | 805 | 4 | 26 |
| 87 | 976 | 5 | 17 |
| 88 | 685 | 16 | 38 |
| 89 | 1011 | 15 | 22 |
| 90 | 997 | 10 | 53 |
| 91 | 985 | 13 | 32 |
| 92 | 816 | 15 | 32 |
| 93 | 968 | 5 | 17 |
| 94 | 903 | 8 | 46 |
| 95 | 966 | 5 | 34 |
| 96 | 535 | 10 | 50 |
| 97 | 715 | 10 | 50 |
| 98 | 1016 | 16 | 63 |
| 99 | 996 | 16 | 63 |
| Auto or User | (User-defined) | | |