
## **EAGLE TECHNOLOGY** NE1500T

NIC Type Transfer Rate Ethernet 10Mbps Data Bus 16-bit ISA Topology Wiring Type Boot ROM Star

Unshielded twisted pair

Available

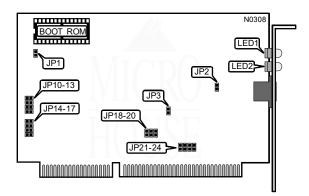

WAIT STATE			
Setting	JP1		
í0 wait states enabled	Open		
1 wait state enabled	Closed		

LOOPBACK TEST			
Setting	JP2		
íDisabled	Closed		
Enabled	Open		

LINK INTEGRITY TEST			
Setting	JP3		
íEnabled	Open		
Disabled	Closed		

	DMA CHANNEL							
Channel	JP10	JP11	JP12	JP13	JP14	JP15	JP16	JP17
íDMA5	Open	Closed	Open	Open	Open	Closed	Open	Open
DMA3	Closed	Open	Open	Open	Closed	Open	Open	Open
DMA6	Open	Open	Closed	Open	Open	Open	Closed	Open
DMA7	Open	Open	Open	Closed	Open	Open	Open	Closed

Continued on next page . . .

NOVELL, INC. N E 1 5 0 0 T

. . . continued from previous page

BOOT ROM			
Setting	JP18		
íDisabled	Open		
Enabled	Closed		

BASE I/O AND BOOT ROM ADDRESS				
Address	Boot ROM	JP19	JP20	
í300h	C8000h	Closed	Closed	
320h	CC000h	Closed	Open	
340h	D0000h	Open	Closed	
360h	D4000h	Open	Open	

	ı	NTERRUPT REQUEST		
IRQ	JP21	JP22	JP23	JP24
í3	Open	Open	Closed	Open
2/9	Open	Open	Open	Closed
4	Open	Closed	Open	Open
5	Closed	Open	Open	Open

DIAGNOSTIC LED(S)			
LED Status Condition			
LED1	On	Twisted pair network connection is good	
LED1	Off	Twisted pair network connection is broken	
LED2	On	Normal operation	
LED2	Off	Twisted pair receive wires are reversed	