


D-LINK  
DT-100 for PC/XT/AT

**NIC Type** Token-Ring  
**Transfer Rate** 4/16Mbps  
**Data Bus** 8-bit ISA  
**Topology** Ring  
**Wiring Type** MAU via DB-9 port  
**Boot ROM** Available

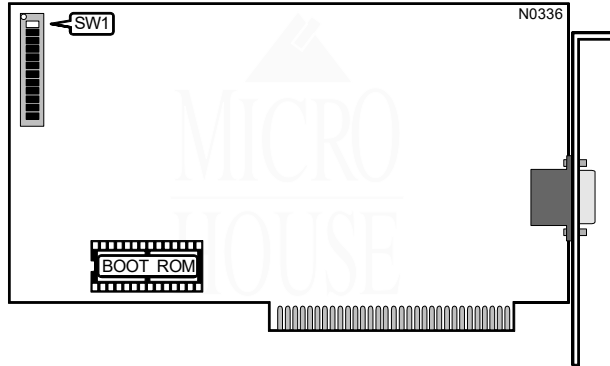

BOOT ROM ADDRESS						
Address	SW1/1	SW1/2	SW1/3	SW1/4	SW1/5	SW1/6
C000h	Off	On	On	On	On	On
C200h	Off	On	On	On	On	Off
C400h	Off	On	On	On	Off	On
C600h	Off	On	On	On	Off	Off
C800h	Off	On	On	Off	On	On
CA00h	Off	On	On	Off	On	Off
CC00h	Off	On	On	Off	Off	On
CE00h	Off	On	On	Off	Off	Off
D000h	Off	On	Off	On	On	On
D200h	Off	On	Off	On	On	Off
D400h	Off	On	Off	On	Off	On
D600h	Off	On	Off	On	Off	Off
D800h	Off	On	Off	Off	On	On
DA00h	Off	On	Off	Off	On	Off
DC00h	Off	On	Off	Off	Off	On
DE00h	Off	On	Off	Off	Off	Off

Continued on next page . . .

## D-LINK DT-100 for PC/XT/AT

... continued from previous page

INTERRUPT REQUEST		
IRQ	SW1/7	SW1/8
2	On	On
i3	On	Off
7	Off	Off

PRIMARY/SECONDARY CARD SELECT	
Setting	SW1/9
iPrimary	Off
Secondary	On

Note: If two NICs are installed in the system, one must be set to primary, and the other to secondary.

SHARED MEMORY SIZE		
Size	SW1/10	SW1/11
8KB	On	On
i16KB	Off	On
32KB	On	Off
64KB	Off	Off

Note: Shared memory is the page size used when copying the NIC's ROM to system memory.

NETWORK SPEED	
Speed	SW1/12
16Mbps	Off
4Mbps	On

Note: All NICs on the network must be set to the same speed.