


# CREATIVE LABS, INC. SOUNDBLASTER PRO 2 (CT1600)

<b>Card Type</b>	Sound Card
<b>Chipset/Controller</b>	Creative Technology
<b>I/O Options</b>	CD-ROM interface, Game/MIDI port, line in, microphone jack, speaker, volume control
<b>Maximum DRAM</b>	N/A
<b>Data Bus</b>	16-bit ISA

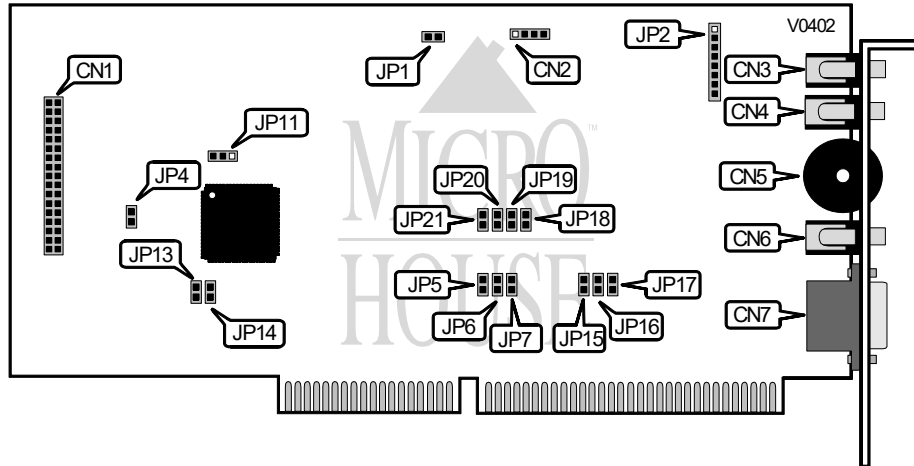

CONNECTIONS			
Purpose	Location	Purpose	Location
CD-ROM interface connector	CN1	Speaker jack	CN6
CD audio cable connector	CN2	Game/MIDI port	CN7
Line in	CN3	PC speaker connector	JP1
Microphone jack	CN4	Testing point connector	JP2
Volume control	CN5		

I/O ADDRESS CONFIGURATION			
Address	JP13	JP14	
220h	Closed	Open	
240h	Open	Closed	

INTERRUPT SELECT				
IRQ	JP18	JP19	JP20	JP21
IRQ5	Open	Open	Closed	Open
IRQ2	Open	Open	Open	Closed
IRQ7	Open	Closed	Open	Open
IRQ10	Closed	Open	Open	Open

Continued on next page . . .

**CREATIVE LABS, INC.**  
**SOUNDBLASTER PRO 2 (CT1600)**

... continued from previous page

DMA CONFIGURATION							
DRQ	DACK	JP5	JP6	JP7	JP15	JP16	JP17
í 1	í 1	Open	Closed	Open	Open	Closed	Open
0	0	Closed	Open	Open	Closed	Open	Open
3	3	Open	Open	Closed	Open	Open	Closed

GAME PORT CONFIGURATION	
Setting	JP4
í Enabled	Closed
Disabled	Open

DMA SHARING	
Setting	JP11
í Disabled	Pins 1 & 2 closed
Enabled	Pins 2 & 3 closed
Note: This jumper allows the SB Pro to share a DMA channel with another device.	