
AZTECH LABS, INC. SOUND GALAXY VOYAGER 6X

Card Type Chipset Controller I/O Options Sound Card Unidentified IDE CD-ROM interface, game/MIDI port, Speaker, Microphone, Line in, Line out None

Maximum DRAM

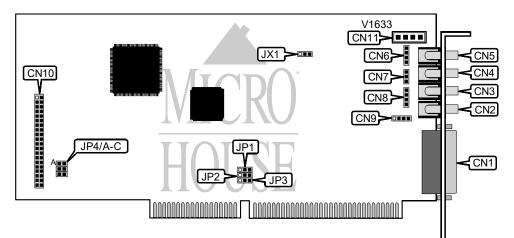

CONNECTIONS					
Purpos 3	Location	Purpos 🕴	Location		
Game/MIDI port	CN1	MPC microphone	CN7		
Speaker	CN2	MPC line out	CN8		
Line out	CN3	MPC speaker	CN9		
Microphone	CN4	IDE CD-Rom interface	CN10		
Line in	CN5	CD Audio in	CN11		
MPC line in	CN6				

USER CONFIGURABLE SETTINGS				
Setting	Label	Position		
í IDE CD-ROM interface enabled	JP3	Pins 2 & 3 closed		
IDE CD-ROM interface disabled	JP3	Pins 1 & 2 closed		
í Microphone type select condenser	JX1	Pins 1 & 2 closed		
Microphone type select carbon	JX1	Pins 2 & 3 closed		

BASE I/O ADDRESS				
Setting	JP2			
í 220h	Pins 1 & 2 closed			
240h	Pins 2 & 3 closed			

Continued next page...

AZTECH LABS, INC. SOUND GALAXY VOYAGER 6X

... continued from previous page.

INTERUPT					
IRQ	JP4/A	JP4/B	JP4/C		
10	Open	Open	Closed		
11	Open	Closed	Open		
í 15	Closed	Open	Open		