## CREATIVE LABS, INC. SOUNDBLASTER AWE32 VALUE (CT3780)

Sound card

**Card Type** 

**Chip Set** Creative Technology None


**Maximum Onboard Memory** 

**I/O Options** 

Line in connector, microphone in connector, line out connector, speaker out connector, game/MIDI port, CD-ROM audio in connector, CD-ROM

interfaces (3), PC internal speaker

16-bit ISA **Data Bus** 

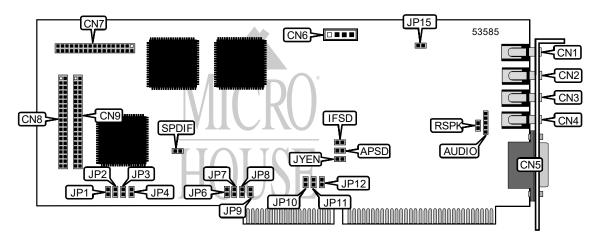

CONNECTIONS			
Function	Label	Function	Label
Line in connector	CN1	CD-ROM audio in connector	CN6
Microphone connector	CN2	Sony CD-ROM interface	CN7
Line out connector	CN3	Panasonic CD-ROM interface	CN8
Speaker out connector	CN4	Mitsumi CD-ROM interface	CN9
Game/MIDI port	CN5	PC internal speaker	JP15

USER CONFIGURABLE SETTINGS			
Function	Label	Position	
í Factory configured – do not alter	AUDIO	Unidentified	
MP-401 I/O address select 330	JP8	Closed	
MP-401 I/O address select 300	JP8	Open	
í Factory configured – do not alter	RSPK	Unidentified	
í Factory configured – do not alter	SPDIF	Unidentified	

Continued on next page. . .

## CREATIVE LABS, INC. SOUNDBLASTER AWE32 VALUE (CT3780)

. . . continued from previous page

		CD-ROM SELECTIO	N	
Type	JP1	JP2	JP3	JP4
Creative	Open	Open	Open	Closed
Sony	Open	Open	Closed	Open
Mitsumi	Open	Closed	Open	Open
Disabled	Closed	Open	Open	Open

MITSUMI CD-ROM INTERRUPT SELECTION			
IRQ JP10 JP11 JP12			
3	Open	Open	Closed
10	Open	Closed	Open
í 11	Closed	Open	Open

JOYSTICK SELECTION			
Setting	JP9	JYEN	
Enabled	Closed	Closed	
Disabled	Open	Open	

AUDIO I/O ADDRESS SELECTION			
Address	JP6	JP7	
í 220	Closed	Closed	
240	Open	Closed	
260	Closed	Open	
280	Open	Open	

CSP CHIP SELECTION			
Setting	APSD	IFSD	
Enabled	Open	Open	
Disabled	Closed	Closed	