CREATIVE LABS, INC. SOUNDBLASTER EASY 16 ASP (CT2750 & CT2759)

SOUNDBLASTER EASY 16 (CT2750 & CT2759)


Card Type Sound card

Chip Set Creative Technology

Maximum Onboard Memory Nor

I/O Options Line out connector, game/MIDI port, feature connector

Data Bus 16-bit ISA

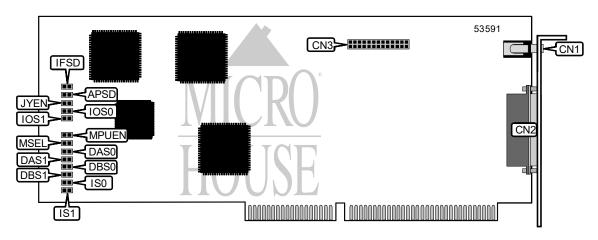

CONNECTIONS			
Function	Label	Function	Label
Line out connector	CN1	Feature connector	CN3
Game/MIDI port	CN2		

USER CONFIGURABLE SETTINGS			
Function	Label	Position	
í Joystick enabled	JYEN	Closed	
Joystick disabled	JYEN	Open	
í MP-401 enabled	MPUE	Closed	
	N		
MP-401 disabled	MPUE	Open	
	N		
í MP-401 I/O address select 330	MSEL	Closed	
MP-401 I/O address select 300	MSEL	Open	

Continued on next page. . .

CREATIVE LABS, INC. SOUNDBLASTER EASY 16 ASP (CT2750 & CT2759) SOUNDBLASTER EASY 16 (CT2750 & CT2759)

. . . continued from previous page

8-BIT DMA CHANNEL SELECTION			
Channel	DAS0	DAS1	
0	Closed	Closed	
í 1	Open	Closed	
3	Closed	Open	

16-BIT DMA CHANNEL SELECTION			
Channel	DBS0	DBS2	
í 5	Closed	Closed	
6	Open	Closed	
7	Closed	Open	

INTERRUPT SELECTION			
IRQ	IS0	IS1	
2	Closed	Closed	
í 5	Open	Closed	
7	Closed	Open	
10	Open	Open	

AUDIO I/O ADDRESS SELECTION			
Address	IOS0	IOS1	
í 220	Closed	Closed	
240	Open	Closed	
260	Closed	Open	
280	Open	Open	

CSP CHIP SELECTION			
Setting	APSD	IFSD	
Enabled	Open	Open	
Disabled	Closed	Closed	