


# UNIDENTIFIED

## V 2 8 6 - 1 2

<b>Processor</b>	80286
<b>Processor Speed</b>	12MHz
<b>Chip Set</b>	VLSI
<b>Max. onboard DRAM</b>	4MB
<b>Cache</b>	None
<b>BIOS</b>	Unknown
<b>Dimensions</b>	330mm x 218mm
<b>I/O Options</b>	None
<b>NPU Options</b>	80287

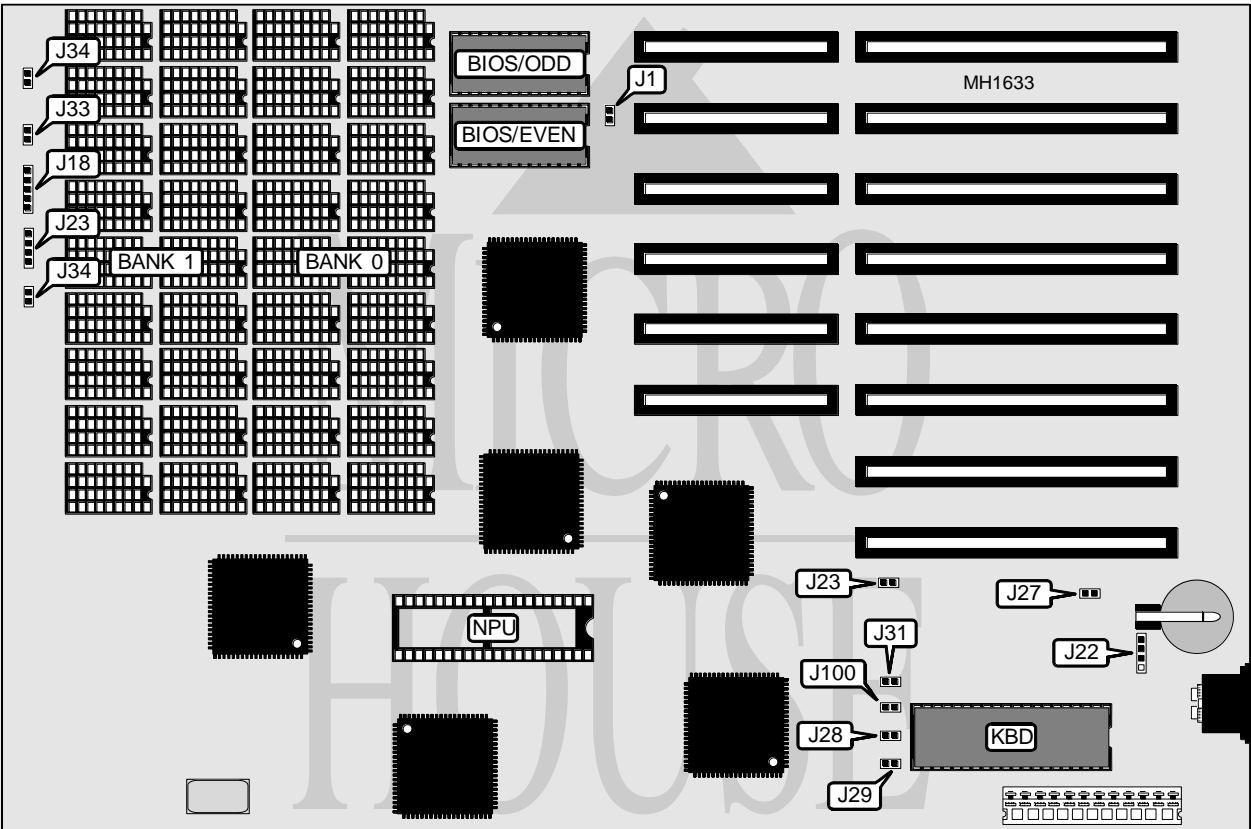

CONNECTIONS			
Purpose	Location	Purpose	Location
Keylock	J18	Turbo LED	J33
External battery	J22	Reset switch	J34
Speaker	J23	Turbo Switch	J43

Continued on next page . . .

## UNIDENTIFIED

V 2 8 6 - 1 2

... continued from previous page

USER CONFIGURABLE SETTINGS		
Function	Jumper/Switch	Position
í BIOS type select 27256	J1	Closed
BIOS type select 27128	J1	Open
íMonitor type select color	J27	Closed
Monitor type select monochrome	J27	Open
í RAM select 0 wait states	J31	Closed
RAM select 1 wait state	J31	Open
í ROM select 0 wait states	J32	Closed
ROM select 1 wait state	J32	Open

DRAM CONFIGURATION					
Size	Bank 0	Bank 1	J28	J29	J100
512KB	(18) 41256	NONE	Closed	Closed	Closed
640KB	(18) 41256	NONE	Closed	Open	Closed
1024KB	(18) 41256	(18) 4164	Open	Closed	Closed
2048KB	(18) 411000	NONE	Open	Open	Closed
4096KB	(18) 411000	(18) 411000	Closed	Closed	Open