
## **OLIVETTI** M300-30

80486SX/80487SX **Processor** 

**Processor Speed** 25MHz Unidentified Chip Set Max. Onboard DRAM 36MB Cache None **BIOS** Unidentified **Dimensions** 220mm x 220mm

I/O Options Parallel port, PS/2 mouse port, serial ports (2), VGA port, riser card

**NPU Options** None

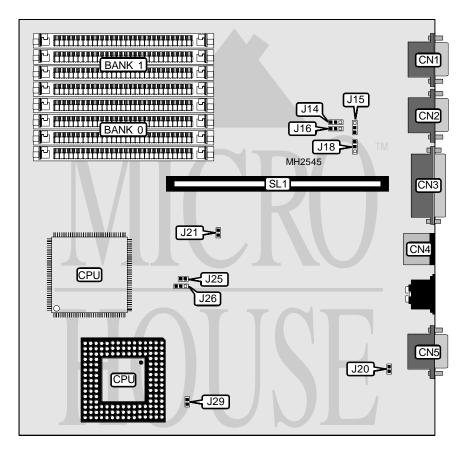

CONNECTIONS					
Purpose	Location	Purpose	Location		
VGA port	CN1	PS/2 mouse port	CN4		
Serial port 1	CN2	Serial port 2	CN5		
Parallel port	CN3	Riser Card	SL1		

Continued on next page. . .

## **OLIVETTI** M 3 0 0 - 3 0

. . . continued from previous page

USER CONFIGURABLE SETTINGS				
Function	Jumper	Position		
í Password enabled	J14	pins 1 & 2 closed		
Password disabled	J14	pins 2 & 3 closed		
í Floppy drive write enabled	J16	pins 2 & 3 closed		
Floppy drive write disabled	J16	pins 1 & 2 closed		
í Factory configured - do not alter	J20	N/A		
í Factory configured - do not alter	J21	N/A		
í Factory configured - do not alter	J25	N/A		
í Factory configured - do not alter	J26	N/A		
í Factory configured - do not alter	J29	N/A		

DRAM CONFIGURATION					
Size	Bank 0	Bank 1	Bank 2		
4MB	NONE	NONE	4MB		
8MB	(4) 1M x 9	NONE	4MB		
12MB	(4) 1M x 9	(4) 1M x 9	4MB		
20MB	NONE	(4) 4M x 9	4MB		
24MB	(4) 1M x 9	(4) 4M x 9	4MB		
36MB	(4) 4M x 9	(4) 4M x 9	4MB		
Note: Bank 2 is factory installed and is not configurable. The location is unidentified.					

SERIAL PORT CONFIGURATION				
Setting	J15	J18		
Read, write & boot through serial ports enabled	pins 2 & 3 closed	pins 2 & 3 closed		
Read, write & boot through serial ports disabled	pins 1 & 2 closed	pins 1 & 2 closed		