
CHICONY, INC. C H - 4 8 6

X/80487SX/80486DX
33/50MHz
/256KB
x 218mm

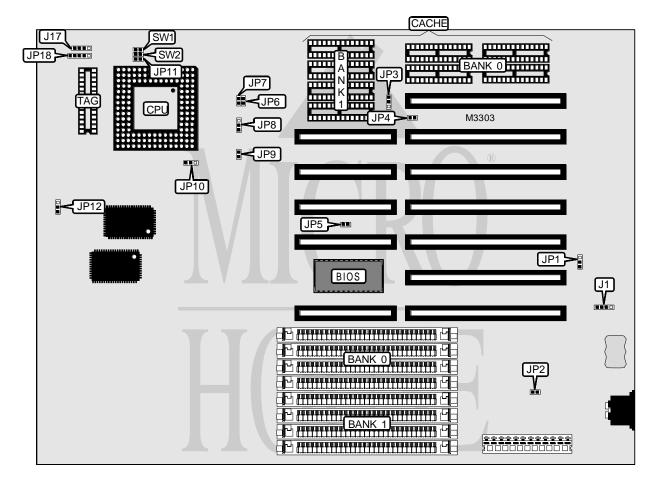

CONNECTIONS			
Function Label Function Label			
External battery	J1	Power LED & keylock	JP18
Speaker	J17	Reset switch	SW1
Turbo LED	JP11	Turbo switch	SW2

Continued on next page. . .

CHICONY, INC. CH-486

... continued from previous page

USER CONFIGURABLE SETTINGS		
Setting	Label	Position
í CMOS memory normal operation	JP1	Pins 2 & 3 closed
CMOS memory clear	JP1	Pins 1 & 2 closed
Monitor type select color	JP2	Closed
Monitor type select monochrome	JP2	Open
í Jumper information unavailable	JP5	N/A

	DRAM	
Size	Bank 0	Bank 1
1MB	(4) 256K x 9	None
2MB	(4) 256K x 9	(4) 256K x 9
4MB	(4) 1M x 9	None
5MB	(4) 256K x 9	(4) 1M x 9
8MB	(4) 1M x 9	(4) 1M x 9
16MB	(4) 4M x 9	None
20MB	(4) 1M x 9	(4) 4M x 9
20MB	(4) 4M x 9	(4) 1M x 9
32MB	(4) 4M x 9	(4) 4M x 9

CACHE SIZE			
Size	Bank 0	Bank 1	TAG
64KB	(4) 8K x 8	(4) 8K x 8	(1) 8K x 8
128KB	(4) 32K x 8	None	(1) 8K x 8
256KB	(4) 32K x 8	(4) 32K x 8	(1) 32K x 8

CACHE JUMPER				
Size	JP3	JP4	JP6	JP7
64KB	Pins 2 & 3 closed	Open	Open	Open
128KB	Pins 1 & 2 closed	Closed	Closed	Open
256KB	Pins 2 & 3 closed	Closed	Closed	Closed

CPU TYPE			
Setting	JP8	JP9	JP10
80486SX	Pins 1 & 2 closed	Closed	Pins 1 & 2 closed
80487SX	Pins 2 & 3 closed	Open	Open
80486DX	Pins 1 & 2 closed	Closed	Pins 2 & 3 closed

CPU SPEED		
Setting	JP12	
20MHz	Pins 2 & 3 closed	
25MHz	Pins 2 & 3 closed	
33MHz	Pins 2 & 3 closed	
50MHz	Pins 1 & 2 closed	