


OCEAN INFORMATION SYSTEMS, INC.

JAGUAR V 386

Configuration

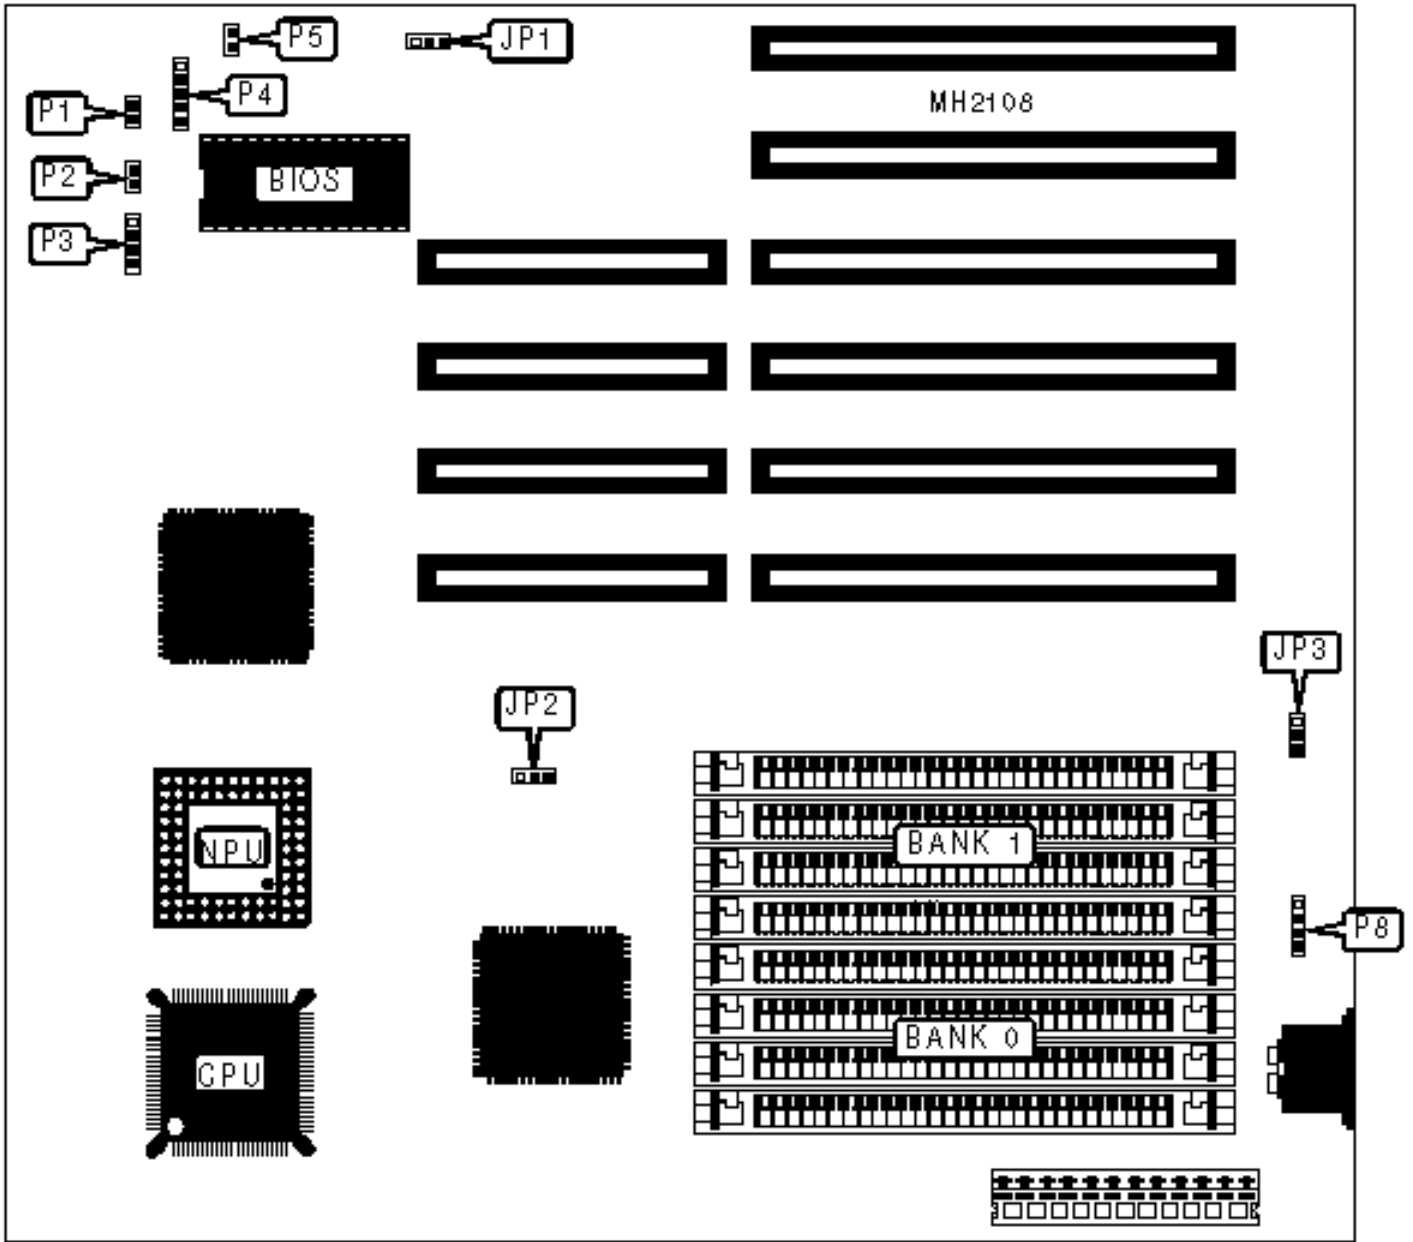

## CONNECTIONS

Purpose	Location	Purpose	Location
Reset switch	P1	Turbo LED	P4
Speaker	P2	Power LED & keylock	P5
Turbo switch	P3	External battery	P8

## USER CONFIGURABLE SETTINGS

	Function	Jumper	Position
»	Monitor type select CGA/EGA/VGA	JP1	pins 1 & 2 closed
	Monitor type select monochrome	JP1	pins 2 & 3 closed
»	Factory configured - do not alter	JP2	N/A
»	CMOS memory normal operation	JP3	pins 1 & 2 closed
	CMOS memory clear	JP3	pins 2 & 3 closed

## DRAM CONFIGURATION

Size	Bank 0	Bank 1
1MB	(4) 256K x 9	NONE
2MB	(4) 256K x 9	(4) 256K x 9
4MB	(4) 1M x 9	NONE
5MB	(4) 256K x 9	(4) 1M x 9
8MB	(4) 1M x 9	(4) 1M x 9
16MB	(4) 4M x 9	NONE
20MB	(4) 1M x 9	(4) 4M x 9
32MB	(4) 4M x 9	(4) 4M x 9