


TEXAS MICRO, INC.

D386SX CPU (REV. B)

Configuration

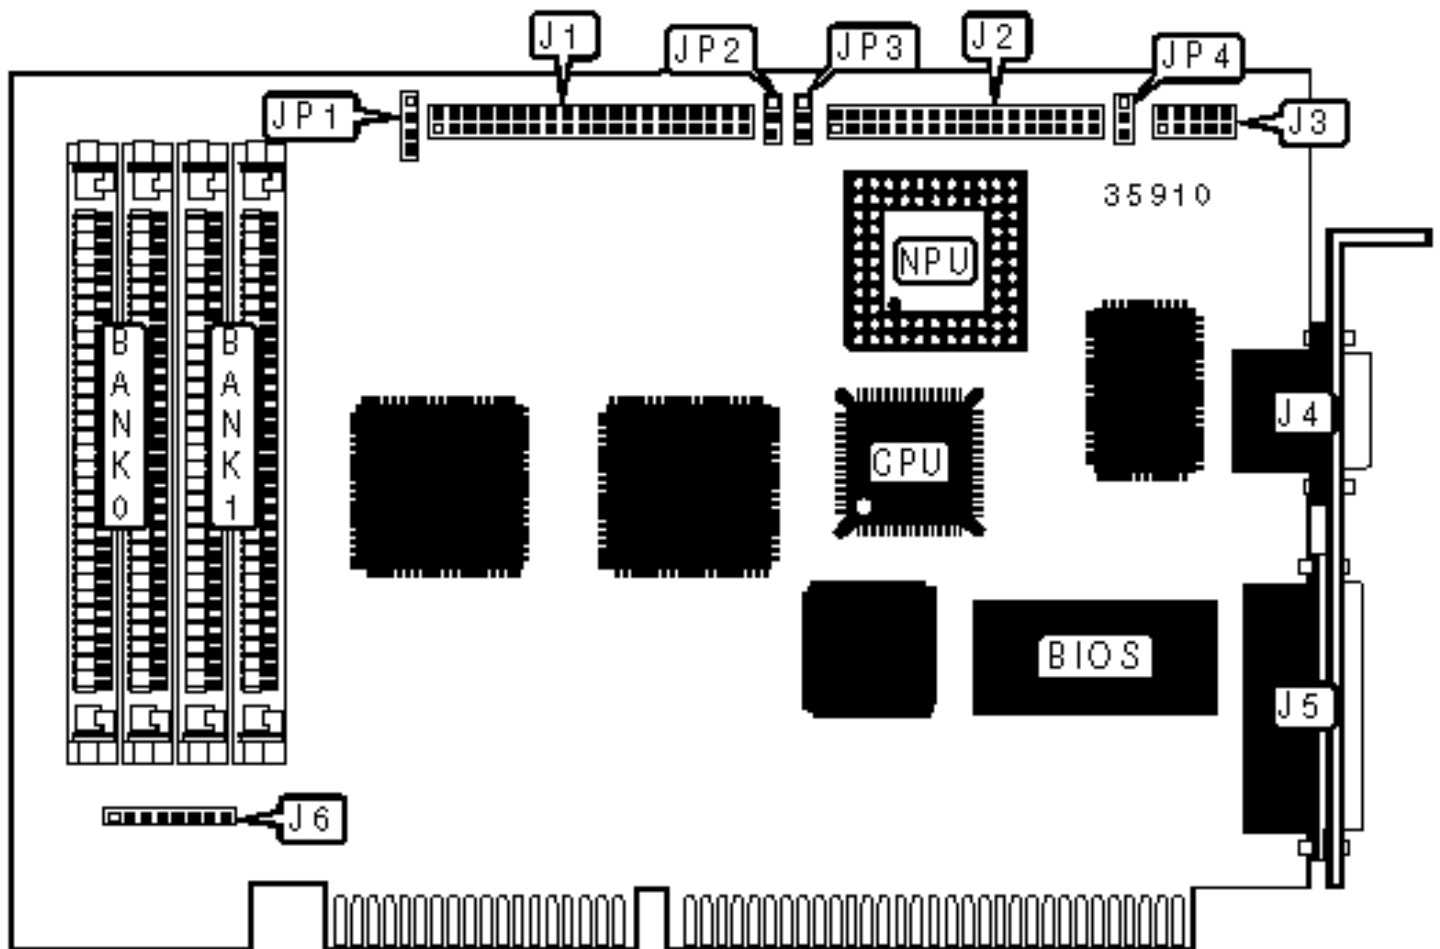

CONNECTIONS

Purpose	Location	Purpose	Location
IDE interface	J1	Serial port 1	J4
Floppy drive interface	J2	Parallel port	J5
Serial port 2	J3	External battery	JP1

USER CONFIGURABLE SETTINGS

Function		Label	Position
»	Battery enabled	JP1	Pins 1 & 2 closed
	Battery disabled	JP1	Pins 2 & 3 closed
	External battery installed	JP1	Closed
»	Parallel port IRQ select IRQ7	JP2	Pins 2 & 3 closed
	Parallel port IRQ select IRQ5	JP2	Pins 1 & 2 closed
»	User program setup loaded	JP3	Pins 2 & 3 closed
	Default program setup loaded	JP3	Pins 1 & 2 closed
»	Monitor type select color	JP4	Pins 1 & 2 closed
	Monitor type select monochrome	JP4	Pins 2 & 3 closed

SIMM CONFIGURATION

Size	Bank 0	Bank 1
512KB	(2) 256K x 9	None
1MB	(2) 256K x 9	(2) 256K x 9
2MB	(2) 1M x 9	None
4MB	(2) 1M x 9	(2) 1M x 9
8MB	(2) 4M x 9	None
16MB	(2) 4M x 9	(2) 4M x 9

