
UNIDENTIFIED

DIGIS-286S AT TURBO

Configuration

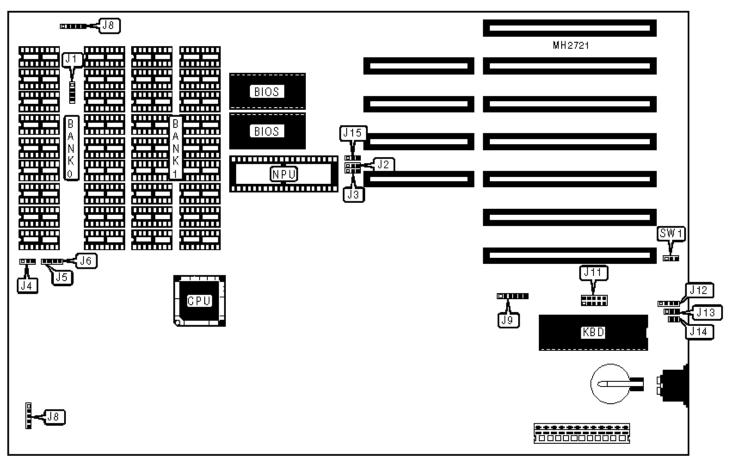

CONNECTIONS				
Purpose	Location	Purpose	Location	
Speaker	J1	Power LED & keylock	J8	
Turbo switch	J4	Serial port	J11	
Turbo LED	J5	External battery	J12	
Power LED & keylock	J8	Reset switch	J14	
Note: Either J8 may be used.				

	USER CONFIGURABLE SETTINGS				
Function		Switch	Position		
»	ROM chip installed	J2	pins 2 & 3 closed		
	EPROM chip installed	J2	pins 1 & 2 closed		
»	BIOS type select 27128	J3	pins 2 & 3 closed		
	BIOS type select 27256	J3	pins 1 & 2 closed		
»	Turbo disabled	J4	pins 2 & 3 closed		
	Turbo enabled	J4	pins 1 & 2 closed		
»	Wait state select 0 wait states	J6	Closed		
	Wait state select 1 wait state	J6	Open		
»	Power supply type select AT power	J13	pins 2 & 3 closed		
	Power supply type select XIT power	J13	pins 1 & 2 closed		
»	Serial port enabled	J15	pins 1 & 2 closed		
	Serial port disabled	J15	pins 2 & 3 closed		
»	Monitor type select color	SW1	pins 2 & 3 closed		
	Monitor type select monochrome	SW1	pins 1 & 2 closed		

DRAM CONFIGURATION

Size	Bank 0	Bank 1
256KB	(18) 4164	(18) 4164
512KB	(18) 41256	NONE
640KB	(18) 41256	(18) 4164
1MB	(18) 41256	(18) 41256

DRAM JUMPER CONFIGURATION			
Size	J9		
256KB	pins 2 & 3, 5 & 6 closed		
512KB	pins 2 & 3, 4 & 5 closed		
640KB	pins 1 & 2, 5 & 6 closed		
1MB	pins 1 & 2, 4 & 5 closed		