


# UNIDENTIFIED

## 351 386DX/486DLC

### Configuration

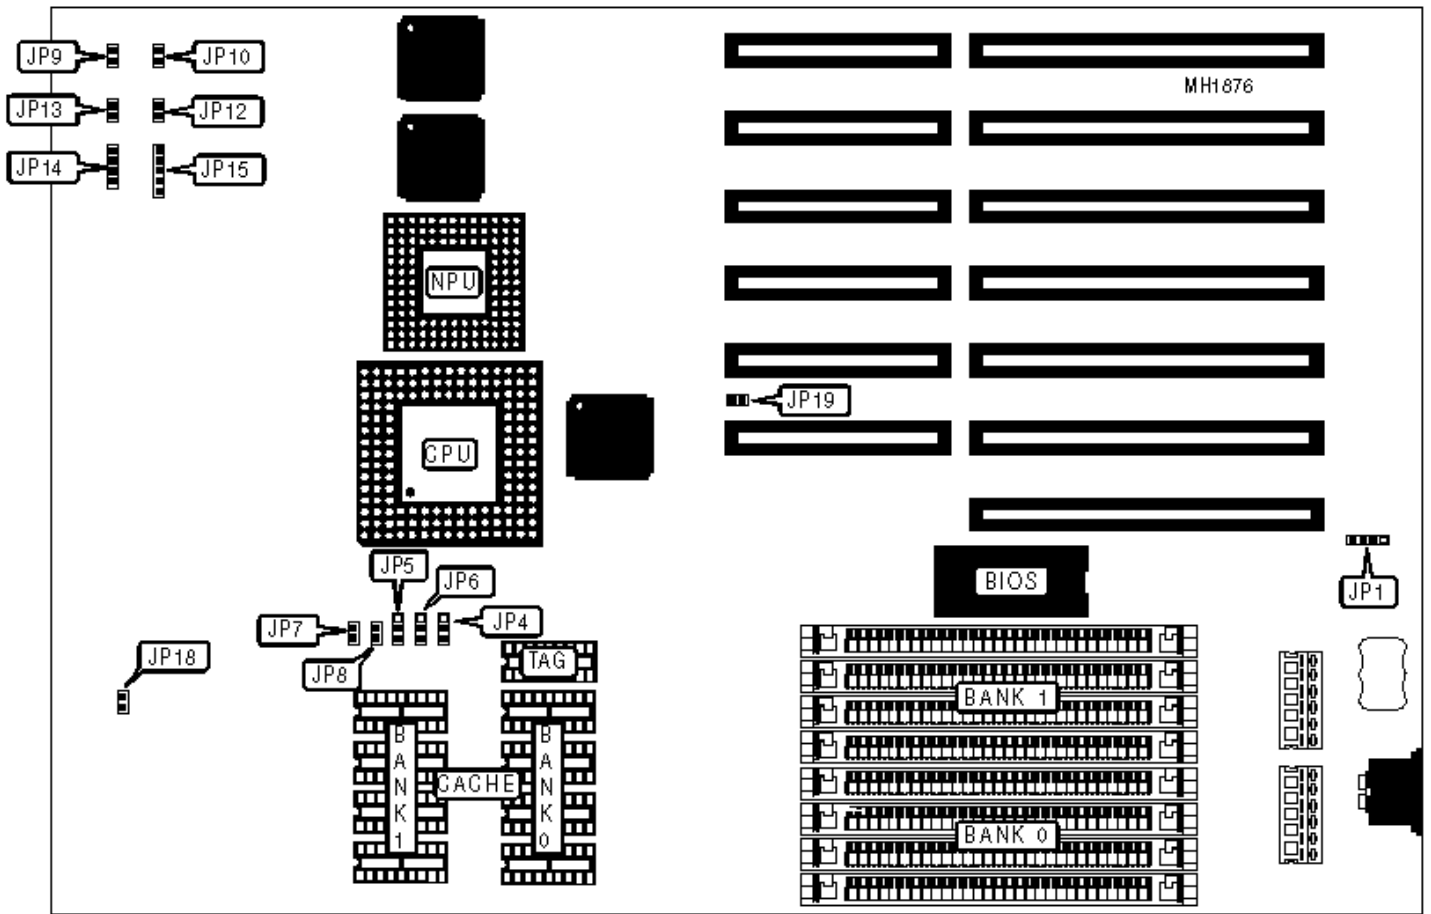

## CONNECTIONS

Purpose	Location	Purpose	Location
External battery	JP1	Turbo LED	JP12
Reset switch	JP9	Speaker	JP14
Turbo switch	JP10	Keylock & power LED	JP15

## USER CONFIGURABLE SETTINGS

	Function	Jumper	Position
	Monitor type select color	JP13	Closed
	Monitor type select monochrome	JP13	Open
»	Coprocessor not installed	JP18 & JP19	Open
	Coprocessor installed	JP18 & JP19	Closed

## CACHE CONFIGURATION

Size	Bank 0	Bank 1	TAG
64KB	(4) 8K x 8	(4) 8K x 8	(1) 8K x 1
128KB	(4) 32K x 8	NONE	(1) 8K x 8
256KB	(4) 32K x 8	(4) 32K x 8	(1) 32K x 8

## CACHE JUMPER CONFIGURATION

Size	JP4	JP5	JP6	JP7	JP8
64KB	pins 1 & 2	pins 2 & 3	Open	Open	Open
128KB	pins 2 & 3	pins 1 & 2	pins 1 & 2	Open	Closed
256KB	pins 1 & 2	pins 1 & 2	pins 2 & 3	Closed	Closed

Note: Pins designated should be in the closed position.

## DRAM CONFIGURATION

Size	Bank 0	Bank 1
1MB	(4) 256K x 9	NONE
2MB	(4) 256K x 9	(4) 256K x 9
4MB	(4) 1M x 9	NONE
5MB	(4) 256K x 9	(4) 1M x 9
8MB	(4) 1M x 9	(4) 1M x 9
16MB	(4) 4M x 9	NONE
20MB	(4) 1M x 9	(4) 4M x 9
32MB	(4) 4M x 9	(4) 4M x 9