


UNIDENTIFIED

ETEQ 80486

Configuration

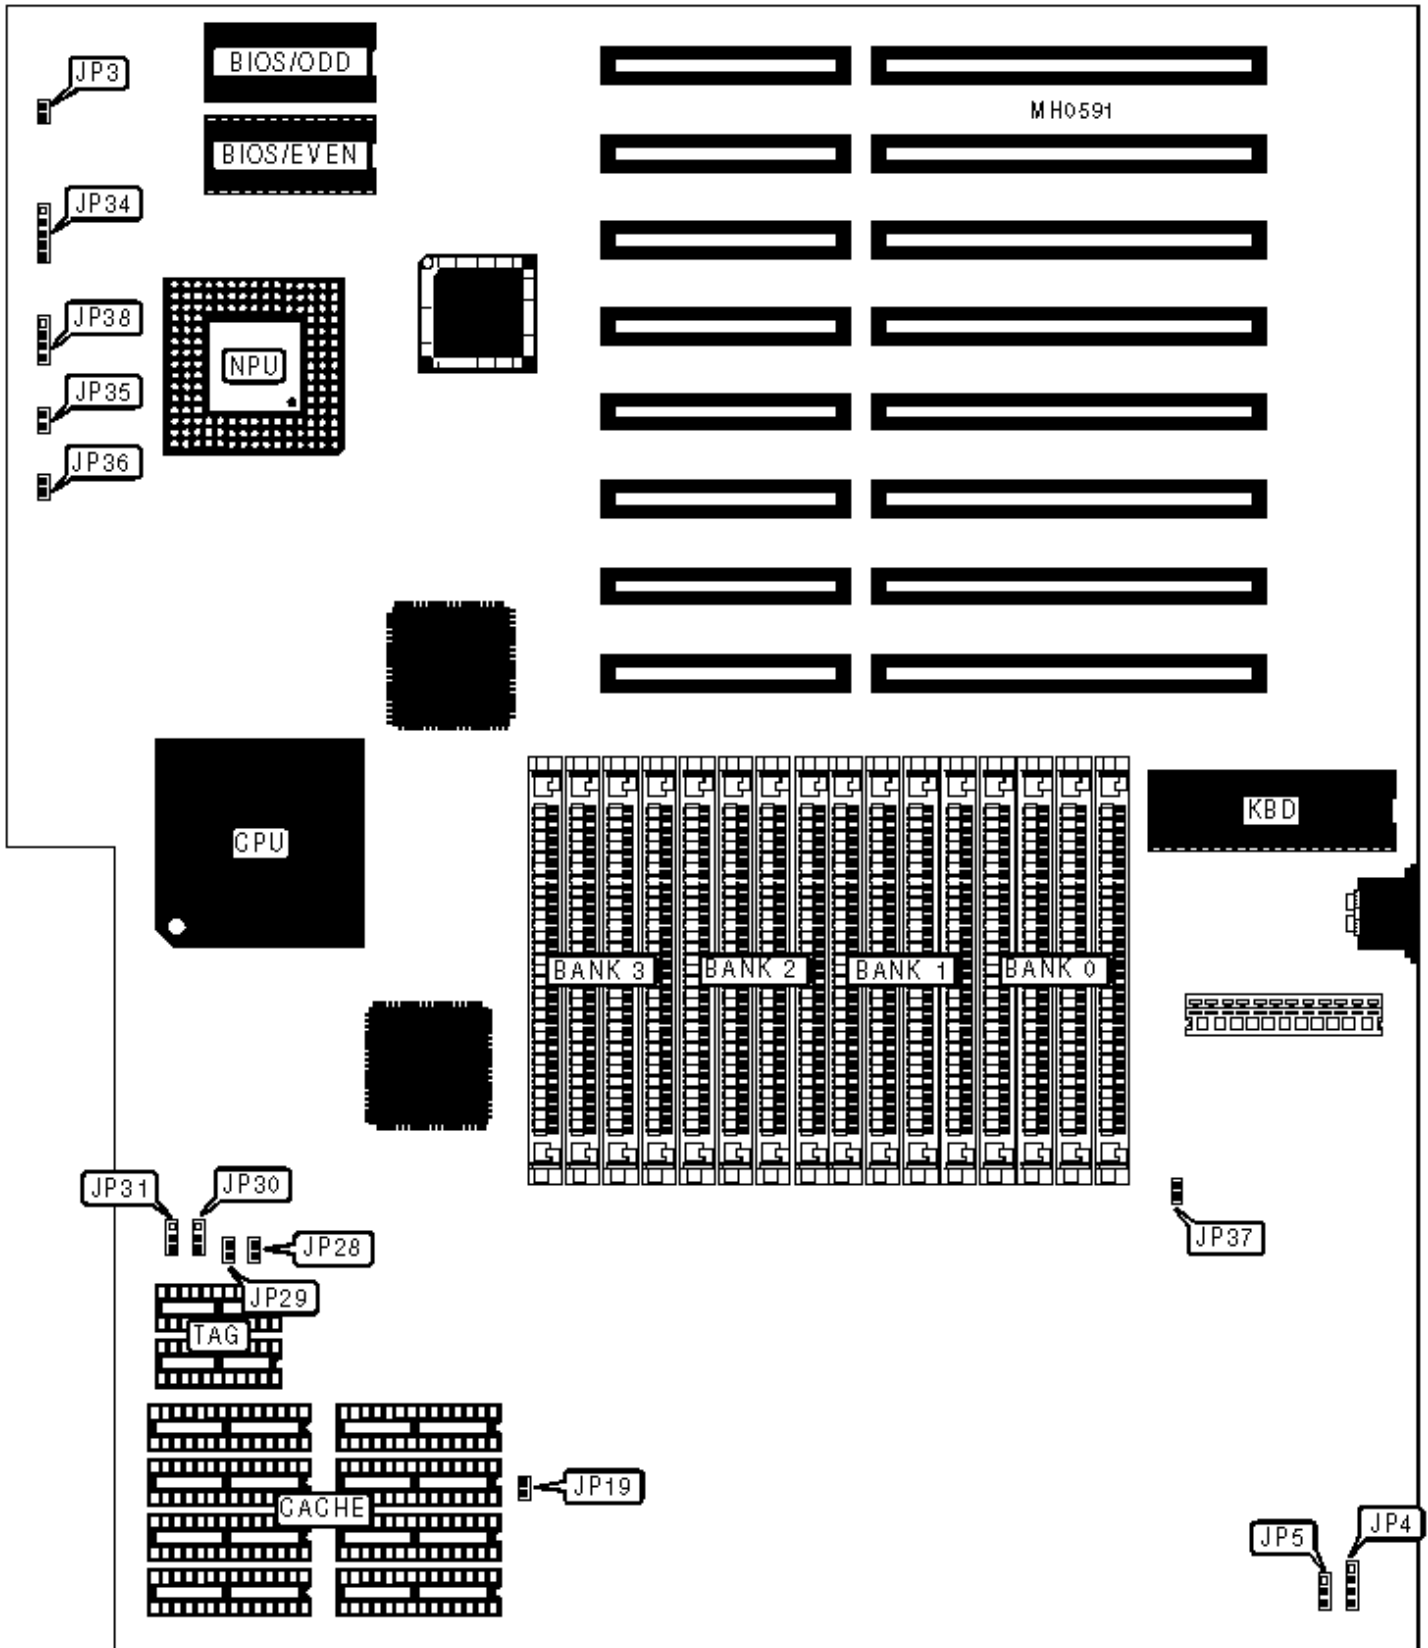

CONNECTIONS

Purpose	Location	Purpose	Location
Reset switch	JP3	Turbo switch	JP35
External battery	JP4	Turbo LED	JP36
Power LED & keylock	JP34	Speaker	JP38

USER CONFIGURABLE SETTINGS

Function	Jumper	Position
» Battery select internal/external	JP5	N/A
» Monitor type select color	JP37	Closed
Monitor type select monochrome	JP37	Open

DRAM CONFIGURATION

Size	Bank 0	Bank 1	Bank 2	Bank 3
1MB	(4) 256K x 9	NONE	NONE	NONE
2MB	(4) 256K x 9	(4) 256K x 9	NONE	NONE
3MB	(4) 256K x 9	(4) 256K x 9	(4) 256K x 9	NONE
4MB	(4) 256K x 9	(4) 256K x 9	(4) 256K x 9	(4) 256K x 9
5MB	(4) 1M x 9	(4) 256K x 9	NONE	NONE
6MB	(4) 256K x 9	(4) 256K x 9	(4) 1M x 9	NONE
7MB	(4) 256K x 9	(4) 256K x 9	(4) 256K x 9	(4) 1M x 9
8MB	(4) 1M x 9	(4) 1M x 9	NONE	NONE
9MB	(4) 256K x 9	(4) 1M x 9	(4) 1M x 9	NONE
10MB	(4) 256K x 9	(4) 256K x 9	(4) 1M x 9	(4) 1M x 9
12MB	(4) 1M x 9	(4) 1M x 9	(4) 1M x 9	NONE
13MB	(4) 256K x 9	(4) 1M x 9	(4) 1M x 9	(4) 1M x 9

16MB	(4) 1M x 9	(4) 1M x 9	(4) 1M x 9	(4) 1M x 9
20MB	(4) 1M x 9	(4) 4M x 9	NONE	NONE
24MB	(4) 1M x 9	(4) 1M x 9	(4) 4M x 9	NONE
28MB	(4) 1M x 9	(4) 1M x 9	(4) 1M x 9	(4) 4M x 9
32MB	(4) 4M x 9	(4) 4M x 9	NONE	NONE
36MB	(4) 1M x 9	(4) 4M x 9	(4) 4M x 9	NONE
37MB	(4) 256K x 9	(4) 1M x 9	(4) 4M x 9	(4) 4M x 9
40MB	(4) 1M x 9	(4) 1M x 9	(4) 4M x 9	(4) 4M x 9
48MB	(4) 4M x 9	(4) 4M x 9	(4) 4M x 9	NONE
49MB	(4) 256K x 9	(4) 4M x 9	(4) 4M x 9	(4) 4M x 9
52MB	(4) 1M x 9	(4) 4M x 9	(4) 4M x 9	(4) 4M x 9
64MB	(4) 4M x 9	(4) 4M x 9	(4) 4M x 9	(4) 4M x 9

CACHE CONFIGURATION		
Size	Bank 0	TAG
64KB	(8) 8K x 8	(2) 4K x 4
256KB	(8) 32K x 8	(2) 16K x 4

CACHE JUMPER CONFIGURATION					
Size	JP19	JP28	JP29	JP30	JP31
64KB	Open	Open	Open	2 & 3	2 & 3
256KB	Closed	Closed	Closed	1 & 2	1 & 2

Note: Pins designated should be in the closed position.