


CA230-BF

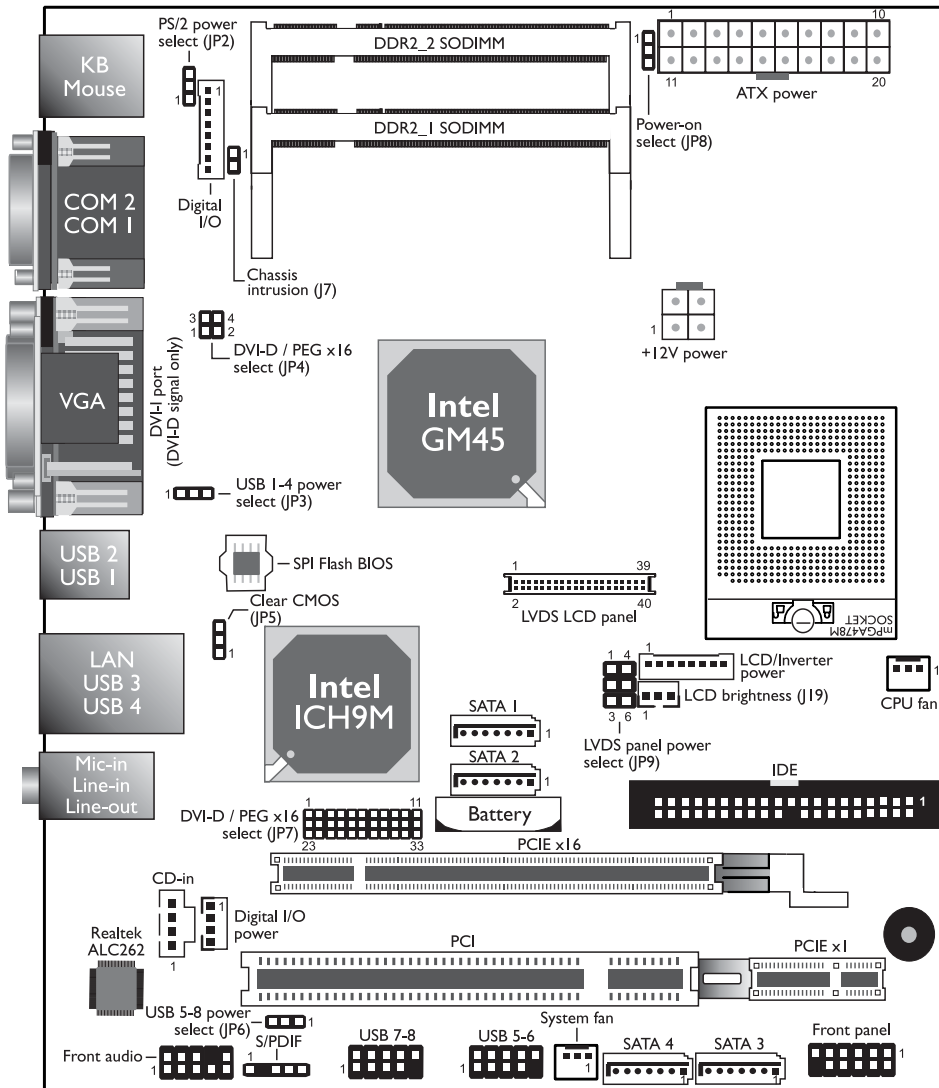

DVI-D / PEG x16 Select	JP4	JP7
Onboard DVI-D enabled. (default)	1-2 On	1-22 On
PEG x16 slot enabled (PCIe x16/x8/x4/x1, ADD2 card) (onboard DVI-D will be disabled)	1-2 On	12-33 On

Chassis Intrusion	J7	USB Power: 1-4 (JP3), 5-8 (JP6)
Chassis intrusion disabled (default)	Off	5V (default) 1-2 On
Chassis intrusion enabled	On	5V_standby 2-3 On

Clear CMOS Data	JP5	PS/2 Power	JP2
Normal (default)	1-2 On	5V (default)	1-2 On
Clear CMOS Data	2-3 On	5V_standby	2-3 On

LVDS Panel Power Select	JP9	Power-on Select	JP8
12V	1-4 On	Power-on via power button (default)	1-2 On
5V	2-5 On	Power-on via AC power	2-3 On
3.3V (default)	3-6 On		

LCD Brightness Control (Voltage Level Adjust)	J19
Increases the voltage level	1-2 On
Decreases the voltage level	2-3 On

Note: Increasing or decreasing the voltage to control the LCD panel's brightness varies among Inverters. You must refer to the Inverter's specification to make the appropriate adjustment to the brightness of the LCD panel.