COMPAQ COMPUTER CORPORATION

DESKPRO 386N

Configuration
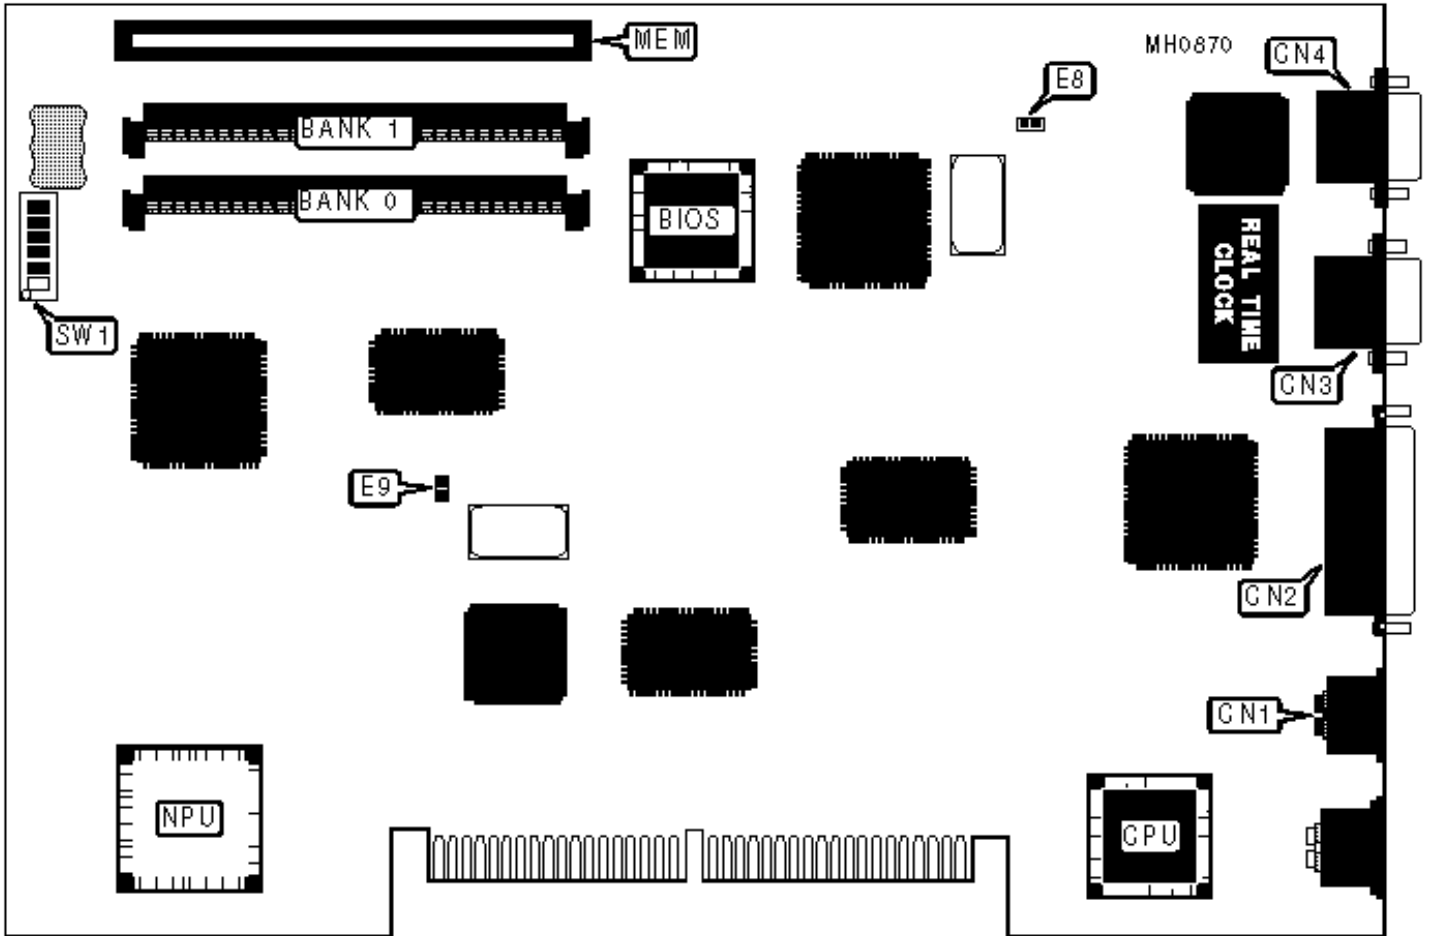
CONNECTIONS

Purpose	Location	Purpose	Location
Bus mouse port	CN1	VGA port	CN4
Parallel port	CN2	Proprietary system memory card slot	MEM
Serial port	CN3		

USER CONFIGURABLE SETTINGS

	Function	Jumper/Switch	Position
»	Factory configured - do not alter	E8	Open
»	Factory configured - do not alter	E9	Open
»	Onboard VGA controller enabled	SW1/1	On
	Onboard VGA controller disabled	SW1/1	Off
»	Setup enabled (ROM resident)	SW1/2	On
	Setup disabled (ROM resident)	SW1/2	Off
»	External boot enabled	SW1/3	On
	Extrenal boot disabled	SW1/3	Off
»	Power-on password enabled	SW1/4	On
	Power-on password disabled	SW1/4	Off
»	Factory configured - do not alter	SW1/5	On
»	Floppy drive write enabled	SW1/6	On
	Floppy drive write disabled	SW1/6	Off

DRAM CONFIGURATION

Size	Bank 0	Bank 1
1MB	(1) 1M x 9	NONE
2MB	(1) 1M x 9	(1) 1M x 9

4MB	(1) 4M x 9	NONE
8MB	(1) 4M x 9	(1) 4M x 9
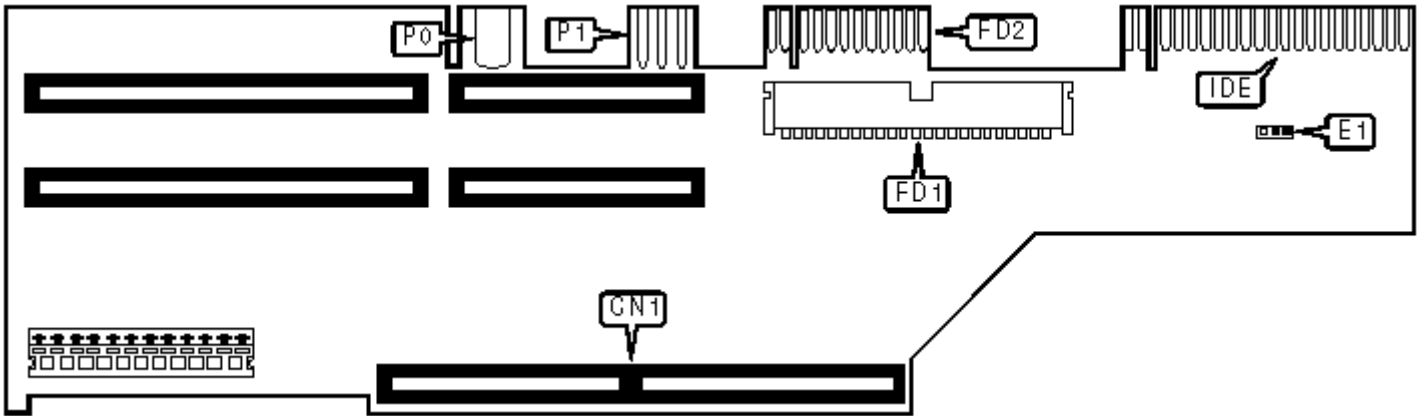
CONNECTIONS

Purpose	Location	Purpose	Location
CPU module	CN1	IDE interface	IDE
5.25 Floppy drive interface	FD1	Fan power	P0
3.5 Floppy drive interface/power	FD2	IDE drive/5.25 drive power	P1

USER CONFIGURABLE SETTINGS

	Function	Jumper	Position
»	Fan speed select automatic (thermostat enabled)	E1	pins 2 & 3 closed
	Fan speed select high (thermostat disabled)	E1	pins 1 & 2 closed