

ASUS® V3000 Series
AGP&PCI Graphics Cards

USER'S MANUAL
Hardware & Video Drivers

AGP-V3000/TV

AGP-V3000

3DP-V3000/TV

3DP-V3000

AGP-V3000ZX/TV/4M

AGP-V3000ZX/4M

AGP-V3000ZX/TV

AGP-V3000ZX

USER'S NOTICE

No part of this manual, including the products and software described in it, may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language in any form or by any means, except documentation kept by the purchaser for backup purposes, without the express written permission of ASUSTeK COMPUTER INC. ("ASUS").

ASUS PROVIDES THIS MANUAL "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OR CONDITIONS OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. IN NO EVENT SHALL ASUS, ITS DIRECTORS, OFFICERS, EMPLOYEES OR AGENTS BE LIABLE FOR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES (INCLUDING DAMAGES FOR LOSS OF PROFITS, LOSS OF BUSINESS, LOSS OF USE OR DATA, INTERRUPTION OF BUSINESS AND THE LIKE), EVEN IF ASUS HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES ARISING FROM ANY DEFECT OR ERROR IN THIS MANUAL OR PRODUCT.

Product warranty or service will not be extended if: (1) the product is repaired, modified or altered, unless such repair, modification or alteration is authorized in writing by ASUS; or (2) the serial number of the product is defaced or missing.

Products and corporate names appearing in this manual may or may not be registered trademarks or copyrights of their respective companies, and are used only for identification or explanation and to the owners' benefit, without intent to infringe.

- Intel, LANDesk, and Pentium are registered trademarks of Intel Corporation.
- Windows and MS-DOS are registered trademarks of Microsoft Corporation.
- Adobe and Acrobat are registered trademarks of Adobe Systems Incorporated.

The product name and revision number are both printed on the product itself. Manual revisions are released for each product design represented by the digit before and after the period of the manual revision number. Manual updates are represented by the third digit in the manual revision number.

For previous or updated manuals, BIOS, drivers, or product release information, contact ASUS at <http://www.asus.com.tw> or through any of the means indicated on the following page.

SPECIFICATIONS AND INFORMATION CONTAINED IN THIS MANUAL ARE FURNISHED FOR INFORMATIONAL USE ONLY, AND ARE SUBJECT TO CHANGE AT ANY TIME WITHOUT NOTICE, AND SHOULD NOT BE CONSTRUED AS A COMMITMENT BY ASUS. ASUS ASSUMES NO RESPONSIBILITY OR LIABILITY FOR ANY ERRORS OR INACCURACIES THAT MAY APPEAR IN THIS MANUAL, INCLUDING THE PRODUCTS AND SOFTWARE DESCRIBED IN IT.

Copyright © 1999 ASUSTeK COMPUTER INC. All Rights Reserved.

Product Name:	ASUS V3000 Series
Manual Revision:	2.20 E298B
Release Date:	January 1999

ASUS CONTACT INFORMATION

ASUSTeK COMPUTER INC. (Asia-Pacific)

Marketing

Address: 150 Li-Te Road, Peitou, Taipei, Taiwan 112
Telephone: +886-2-2894-3447
Fax: +886-2-2894-3449
Email: info@asus.com.tw

Technical Support

Tel (English): +886-2-2894-3447 ext. 706
Tel (Chinese): +886-2-2894-3447 ext. 701
Fax: +886-2-2895-9254
Email: tsd@asus.com.tw
Newsgroup: news2.asus.com.tw
WWW: www.asus.com.tw
FTP: ftp.asus.com.tw/pub/ASUS

ASUS COMPUTER INTERNATIONAL (America)

Marketing

Address: 6737 Mowry Avenue, Mowry Business Center, Building 2
Newark, CA 94560, USA
Fax: +1-510-608-4555
Email: info-usa@asus.com.tw

Technical Support

Fax: +1-510-608-4555
BBS: +1-510-739-3774
Email: tsd-usa@asus.com.tw
WWW: www.asus.com
FTP: ftp.asus.com.tw/pub/ASUS

ASUS COMPUTER GmbH (Europe)

Marketing

Address: Harkort Str. 25, 40880 Ratingen, BRD, Germany
Telephone: 49-2102-445011
Fax: 49-2102-442066
Email: info-ger@asus.com.tw

Technical Support

Hotline: 49-2102-499712
BBS: 49-2102-448690
Email: tsd-ger@asus.com.tw
WWW: www.asuscom.de
FTP: ftp.asuscom.de/pub/ASUSCOM

CONTENTS

I. Introduction	7
Key Benefits	7
Features	7
II. Hardware Installation	8
ASUS AGP-V3000 Layout (AGP Bus)	8
ASUS AGP-V3000/TV Layout (AGP Bus)	9
ASUS 3DP-V3000 Layout (PCI Bus)	10
ASUS 3DP-V3000/TV Layout (PCI Bus)	11
ASUS AGP-V3000ZX / ASUS AGP-V3000ZX/4M Layout (AGP Bus)	12
ASUS AGP-V3000ZX/TV / ASUS AGP-V3000ZX/TV/4M Layout (AGP Bus)	13
III. Windows 95/98	14
Installation Procedures	14
New Systems	14
Systems with Existing VGA Card	14
Operating System Requirements	15
Windows 95	15
Windows 98	15
Install V3000 Series Driver (existing ASUS V3000)	16
Install V3000 Series Driver (replacing other VGA card)	20
Display Properties (desktop utilities)	22
Advanced Menu	22
Color Correction Menu	23
Information Menu	23
TV Out Menu (AGP-V3000ZX/TV only)	24
Settings Menu	24
Hotkey Menu	25
Monitor Menu	25
Refresh Rate Menu	26

CONTENTS

Install DirectX6.....	26
Install VGARTD (AGP only)	28
Install ASUS LIVE3000 (for TV models only)	31
Using ASUS LIVE3000 (for TV models only)	31
Show/Hide Video Source Option	32
Video Capture Driver	32
Remove V3000 Series Driver	33
Using Windows 95/98 Control Panel	33
IV. Microsoft Windows NT	35
Windows NT 4.0	35
Installation Procedures	35
V. Display Information	36
VI. Troubleshooting	38
Description	38
Recommended Action	38

FCC & DOC COMPLIANCE

Federal Communications Commission Statement

This device complies with FCC Rules Part 15. Operation is subject to the following two conditions:

- This device may not cause harmful interference, and
- This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with manufacturer's instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

WARNING! The use of shielded cables for connection of the monitor to the graphics card is required to assure compliance with FCC regulations. Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

Canadian Department of Communications Statement

This digital apparatus does not exceed the Class B limits for radio noise emissions from digital apparatus set out in the Radio Interference Regulations of the Canadian Department of Communications.

I. Introduction

Thank you for purchasing an ASUS V3000 Series Graphics & Video Accelerator. With the ST/nVidia RIVA 128™/128ZX™ built-in, the ASUS V3000 Series provides you with fast acceleration in both 2D/3D graphics and high quality scalable video playback, which can fully support 3D Gaming and Multimedia Applications.

Key Benefits

- Supports professional graphics design, gaming, learning, and business applications
- Flicker free, high refresh rates reduce eye strain
- Powerful 3D rendering
- Crisp, realistic images
- Striking cinema-quality video

Features

- Built-in ST/nVidia RIVA 128™/128ZX™ 128-bit 3D Multimedia Accelerator
- User-friendly Installation for Windows 95/98.
- Acceleration for Windows 95/98 APIs, including Direct3D, DirectDraw (+ VPE), and OpenGL-ICD
- Acceleration for Windows NT APIs, including Direct3D, DirectDraw, and OpenGL-ICD
- Massive array of floating point Geometry Processing Units
- 128-bit 2D/GUI/DirectDraw Acceleration
- Windows 95/98 Video for Windows video capture driver included
- Video Acceleration (including acceleration for MPEG-I, MPEG-II, and Indeo)
- X and Y up and down video scaling
- Excellent performance at high resolutions and color depths
- VESA VBE 3.0 Compliant
- Onboard video capture and TV out (TV models only)

AGP-V3000, AGP-V3000/TV, and 3DP-V3000


- 4MB 128-bit 100MHz SGRAM frame buffer interface
- 230MHz Palette-DAC
- AGP 1.0 (1x mode) or PCI 2.1 Bus Interface

AGP-V3000ZX, AGP-V3000ZXTV and AGP-V3000ZX/4M, AGP-V3000ZXTV/4M

- 8MB and 4MB (4M models) 128-bit 100MHz SGRAM frame buffer interface
- 250MHz Palette-DAC
- AGP 1.0 (2x mode) Bus Interface

IMPORTANT! External devices and ASUS Video cards both have NTSC and PAL versions. You must make sure that all your devices and the ASUS Video card are of the same type or else you will not have video capabilities.

ASUS AGP-V3000 Layout (AGP Bus)

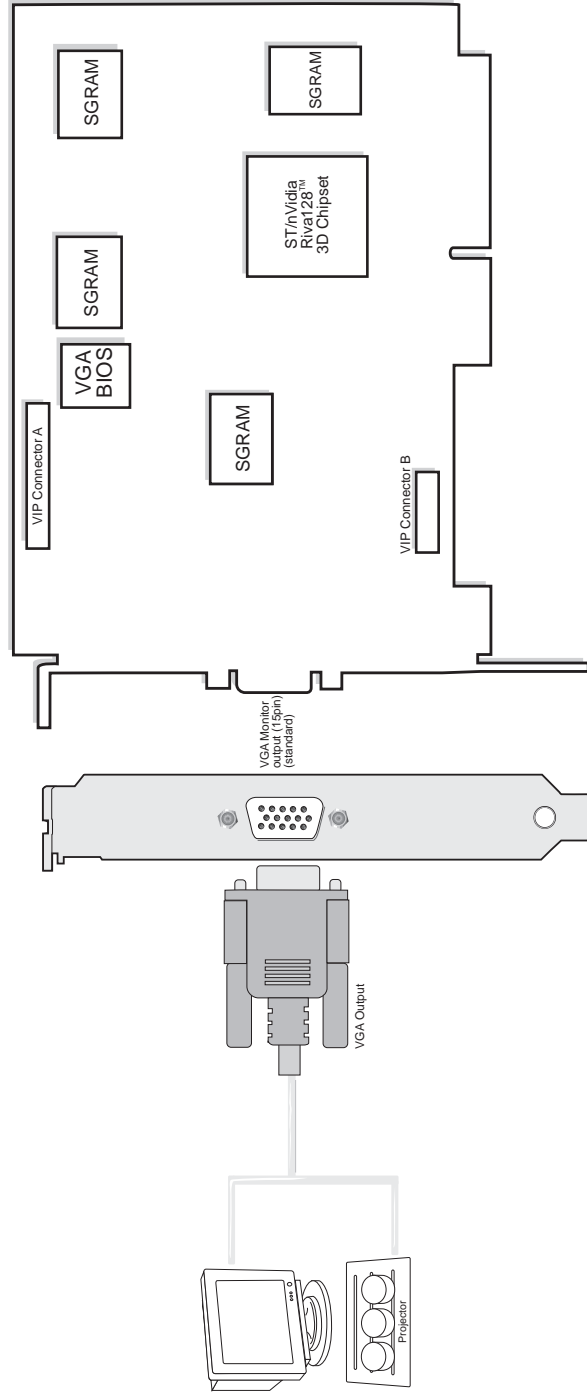


Item Checklist

- ASUS AGP-V3000
- This User's Manual
- Manual (Adobe® Acrobat® PDF)
- ASUS V3000 Series Driver & Utility CD

Note: AGP-V3000 does not have video-in and TV-out connectors. The corresponding video/TV utilities will also be excluded.

II. Hardware Installation

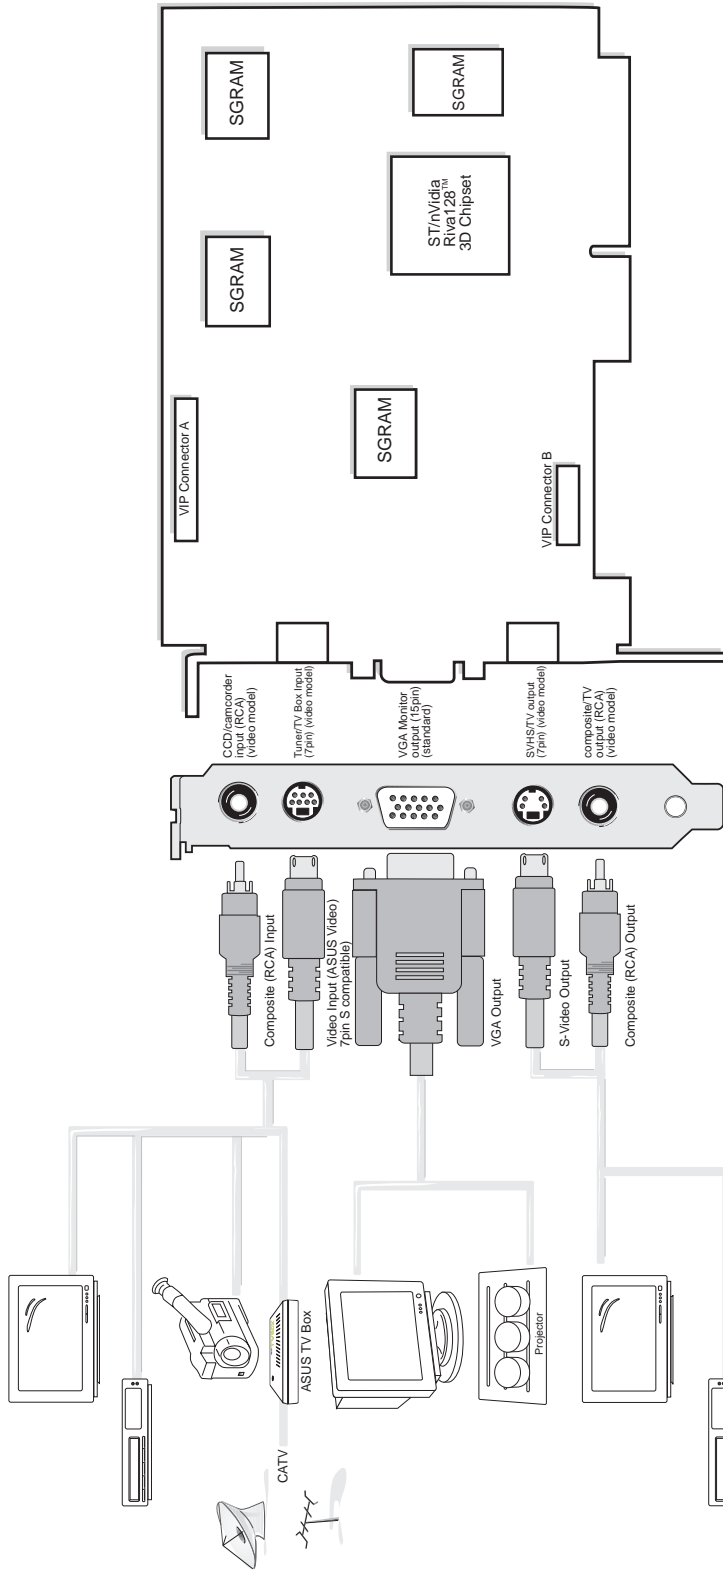

ASUS AGP-V3000/TV Layout (AGP Bus)




Item Checklist

- ASUS AGP-V3000/TV (PAL or NTSC)
- Video-in and TV-out cables
- This User's Manual
- Manual (Adobe® Acrobat® PDF)
- ASUS V3000 Series Driver & Utility CD

Notes:

- Use the same standard for all devices.
- VGA compatible devices and video displaying/recording devices cannot be connected at the same time on this card.
-  and  cannot be connected at the same time.

ASUS 3DP-V3000 Layout (PCI Bus)

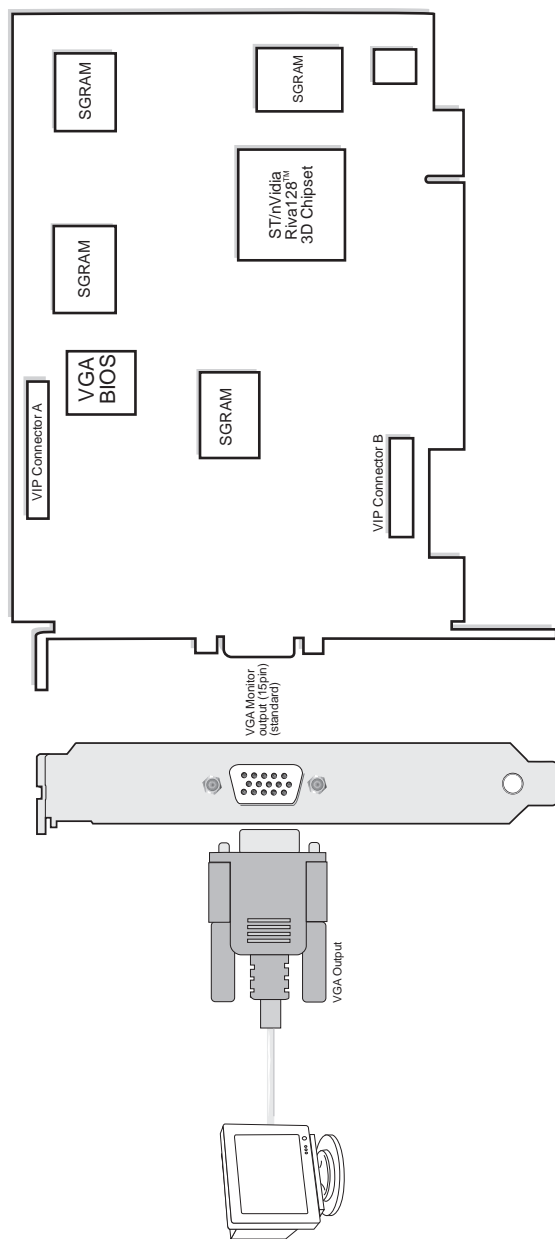


Item Checklist

- ASUS 3DP-V3000
- This User's Manual
- Manual (Adobe® Acrobat® PDF)
- ASUS V3000 Series Driver & Utility CD

Note: 3DP-V3000 does not have video-in and TV-out connectors. The corresponding video/TV utilities will also be excluded.

II. Hardware Installation

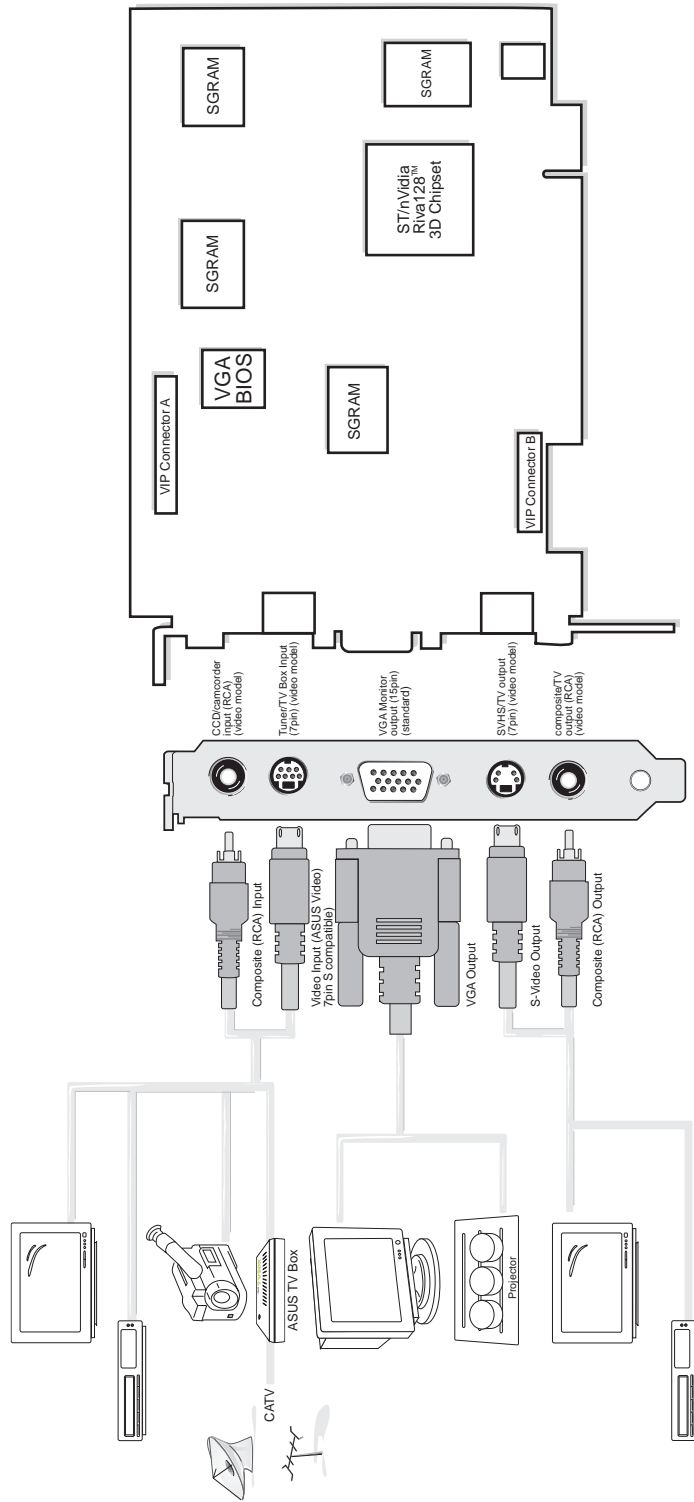

ASUS 3DP-V3000/TV Layout (PCI Bus)




Item Checklist

- ASUS 3DP-V3000/TV (PAL or NTSC)
- Video-in and TV-out cables
- This User's Manual
- Manual (Adobe® Acrobat® PDF)
- ASUS V3000 Series Driver & Utility CD

Notes:

- Use the same standard for all devices.
- VGA compatible devices and video displaying/recording devices cannot be connected at the same time on this card.
-  and  cannot be connected at the same time.

ASUS AGP-V3000ZX ASUS AGP-V3000ZX/4M Layout (AGP Bus)

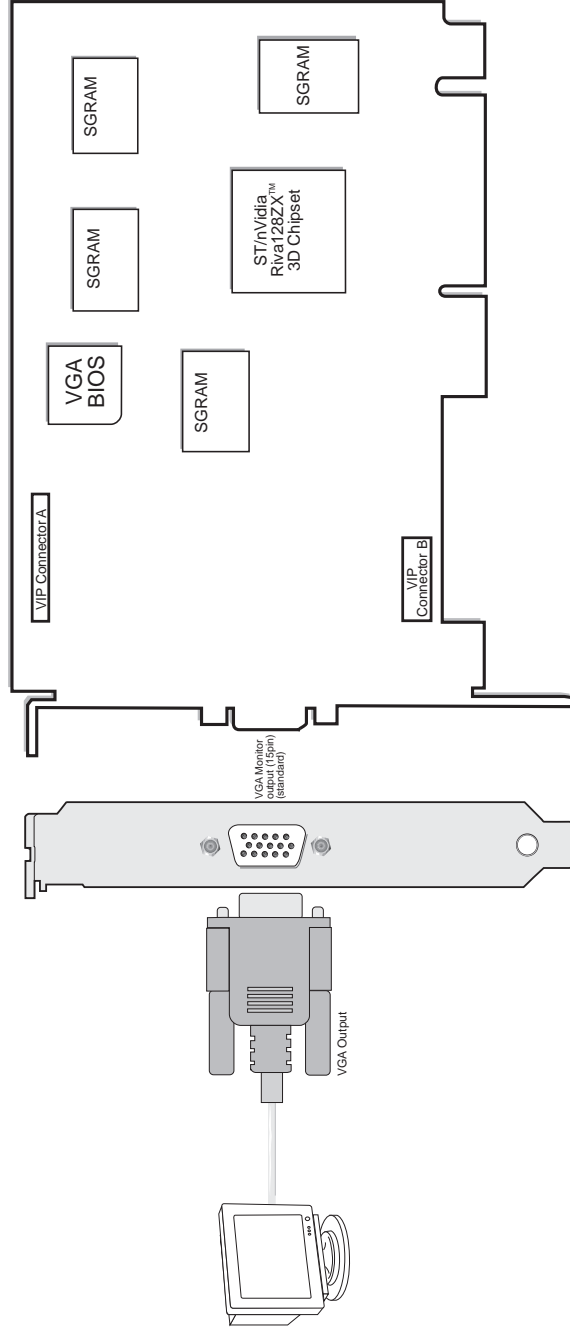


Item Checklist

- ASUS AGP-V3000ZX or ASUS AGP-V3000ZX/4M
- This User's Manual
- Manual (Adobe® Acrobat® PDF)
- ASUS V3000 Series Driver & Utility CD

Note: AGP-V3000ZX or AGP-V3000ZX/4M does not have video-in and TV-out connectors. The corresponding video/TV utilities will also be excluded.

II. Hardware Installation

ASUS AGP-V3000ZX/TV ASUS AGP-V3000ZX/TV/4M Layout (AGP Bus)

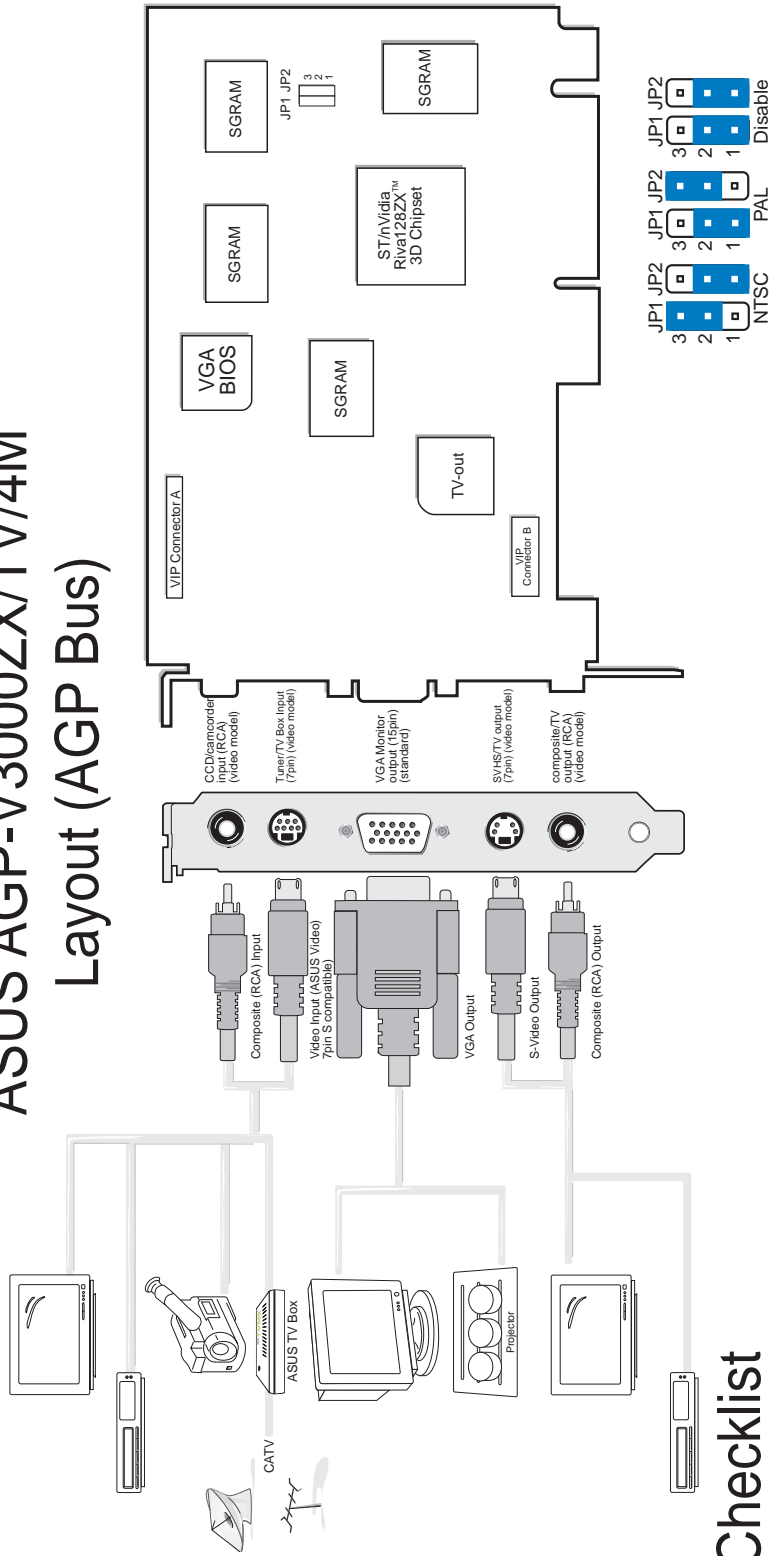

Item Checklist

- ASUS AGP-V3000ZX/TV (PAL or NTSC) or
- ASUS AGP-V3000ZX/TV/4M (PAL or NTSC)
- Video-in and TV-out cables
- This User's Manual
- Manual (Adobe® Acrobat® PDF)
- ASUS V3000 Series Driver & Utility CD

Notes:

- Use the same TV standard for all devices.
- VGA compatible devices and video displaying/recording devices can be connected at the same time on this card.
- and ~~TV~~ cannot be connected at the same time.
- Use JP1 and JP2 to select the boot up TV-out format.

III. Windows 95/98

NOTE: The ASUS AGP-V3000, AGP-V3000/TV, AGP-V3000ZX and AGP-V3000ZXTV can only be installed in motherboards with an AGP slot. The ASUS 3DP-V3000 and 3DP-V3000/TV can be installed in standard PCI motherboards.

WARNING! Computer boards and components contain very delicate Integrated Circuit (IC) chips. To protect the computer board and other components against damage from static electricity, you must follow some precautions.

1. Make sure that you unplug your power supply when adding or removing expansion cards or other system components. Failure to do so may cause severe damage to both your motherboard and expansion cards.
2. Keep all components, such as the host adapter, in its antistatic bag until you are ready to install it.
3. Use a grounded wrist strap before handling computer components. If you do not have one, touch both of your hands to a safely grounded object or to a metal object, such as the power supply case. Hold components by the edges and try not to touch the IC chips, leads, or circuitry.
4. Place components on a grounded antistatic pad or on the bag that came with the component whenever the components are separated from the system.

Installation Procedures

New Systems

1. Unplug all electrical cords on your computer.
2. Remove the system unit cover.
3. Locate the AGP or PCI bus expansion slot. Make sure this slot is unobstructed.
4. Remove the corresponding expansion slot cover from the computer chassis.
5. Ground yourself to an antistatic mat or other grounded source (see **WARNING!**).
6. Pick up the board (still in its sleeve) by grasping the edge bracket with one hand and then remove the plastic sleeve.
7. Position the card directly over the AGP slot and insert one end of the board in the slot first. Firmly but gently press the bus connector on the bottom of the card down into the slot. Be sure the metal contacts on the bottom of the host adapter are securely seated in the slot.
8. Anchor the board's mounting bracket to the computer chassis using the screw from the slot cover that you set aside previously.
9. Replace the cover on the system unit.
10. Connect your analog monitor's 15-pin VGA connector to the card and fasten the retaining screws (if any).
11. Connect other cables and devices if available -You are now ready to install the software drivers and utilities.

Systems with Existing VGA Card

1. Install the ASUS V3000 Series display drivers with your current VGA card.
2. Shut down your computer and unplug all electrical cords.
3. Replace the existing VGA card with the ASUS V3000 Series graphics card.
4. Restart your computer — the ASUS V3000 Series graphics card should be automatically detected and the display drivers automatically updated.

III. Windows 95/98

Operating System Requirements

IMPORTANT! This card requires its own IRQ to work normally. If you have problems during installation, please check your BIOS setting or motherboard jumpers to make sure that “VGA INT/IRQ” has been enabled.

Windows 95

To take advantage of all the AGP features, you must use Windows 95 OSR2.0, install the USB upgrade and then install the VGARTD driver for the corresponding chipset on your motherboard. (see **III. Windows 95/98 “Install VGARTD”**).
Note: This is not necessary for the 3DP-V3000/TV.

To install Win95 OSR2.0 with USB, you must have OSR2.0 installed already. Otherwise, first install OSR2.0 and then use the USB support update (you must use the same update language of your Windows language). On the April 1997 MSDN Disc-1 “Windows 95, SDKs, and Tools”, OSR2.0 is found in “\OSR2” while the USB support update is found in “\OSR2\USBSUPP”. To determine the installed version of the operating system, look in the registry at:

HKEY_LOCAL_MACHINE\SOFTWARE\Microsoft\Windows\CurrentVersion\Version
HKEY_LOCAL_MACHINE\SOFTWARE\Microsoft\Windows\CurrentVersion\VersionNumber

OSR2.0 with USB has:

Version “Windows 95” and VersionNumber “4.03.1212” or “4.03.1214”.

Windows 98

Only Windows 98 **Beta3** or later supports full Direct3D and AGP features. If you are not using Beta3 or later, you must upgrade your Windows before installing the AGP display driver.

NOTE: Windows 98 includes VGARTD for the major chipsets but it is recommended that you install VGARTD from the V3000 Series installation CD to make sure that you have the latest version of VGARTD.

NOTE: This Manual assumes that your CD-ROM disc drive is drive **D:** and that MS Windows is in “**c:\windows**”. Replace either with the actual location, if necessary.


III. Windows 95/98

Install V3000 Series Driver (existing ASUS V3000)

Follow the steps below if you are using a V3000 Series graphics card with AGP bus or if you want to install it in Windows 98.

Note: “New hardware found” refers to the prompt for drivers when installing Windows 95/98 with the ASUS V3000 Series VGA card already installed. This Manual assumes that your CD-ROM disc drive is drive **D:** and that Windows 95/98 is in **C:\windows**. Replace either with the actual location, if necessary.

1. When installing Windows 95/98, a **New Hardware Found** window will appear:

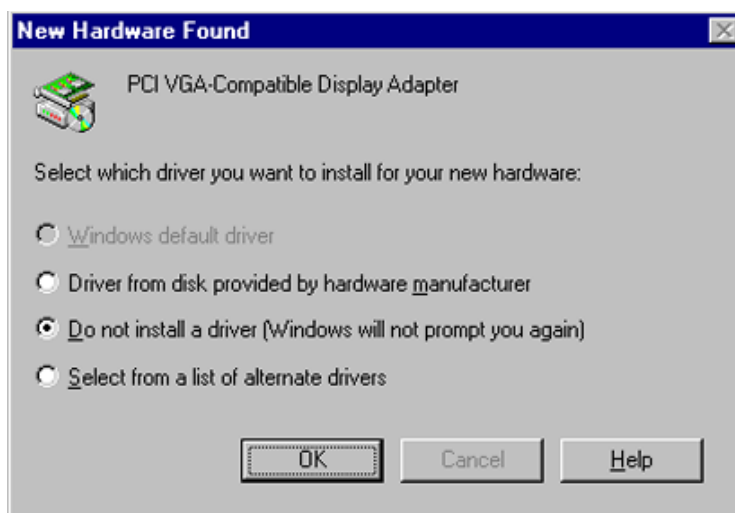

Select **Do not install a driver** and go to step 3.

When installing Windows 95 OSR 2.0, the **Update Device Driver Wizard** window will appear:



This wizard will complete the installation of the Standard PCI Graphics Adapter (VGA). Click **Next >** to let Windows search for an updated driver.

WARNING! Only click **Next >**. The system will hang if you click **Cancel!**


III. Windows 95/98

2. Click **F**inish to install the VGA driver. You will then be asked for your Windows95/98 CD in order to complete the VGA driver installation.



If you do not have your CD handy, direct the installation path to your **\Windows\System** directory. Windows will prompt you to restart your windows. Choose **No**.

3. Insert your CD or double click on your CD drive icon in My Computer to bring up the autorun screen or run **Setup.exe** in the root directory of the CD.
4. From the **Setup** panel, click **VGA Driver** and follow the installation steps.

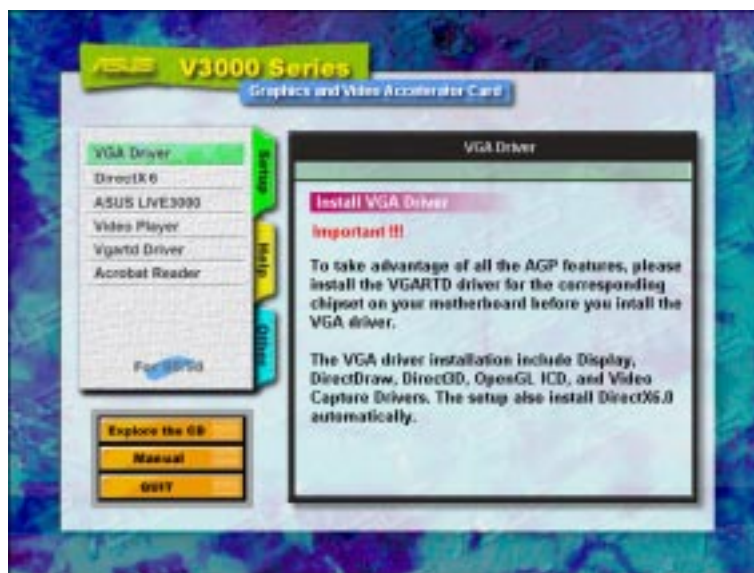


III. Windows 95/98

5. When the **Welcome** window appears, click **Next >** to install V3000 Series display drivers on your computer.




The install program will detect whether you are using OSR2.0 with USB (OSR2.1). If not, a message will be given to exit the install program (Click **Yes**) or continue (Click **No**).

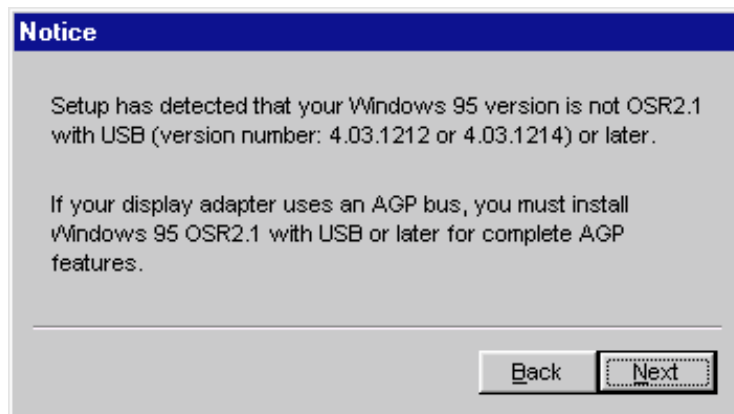


III. Windows 95/98

6. When the **Check Setup Information** window appears, click **Next >** to begin the file transfer.

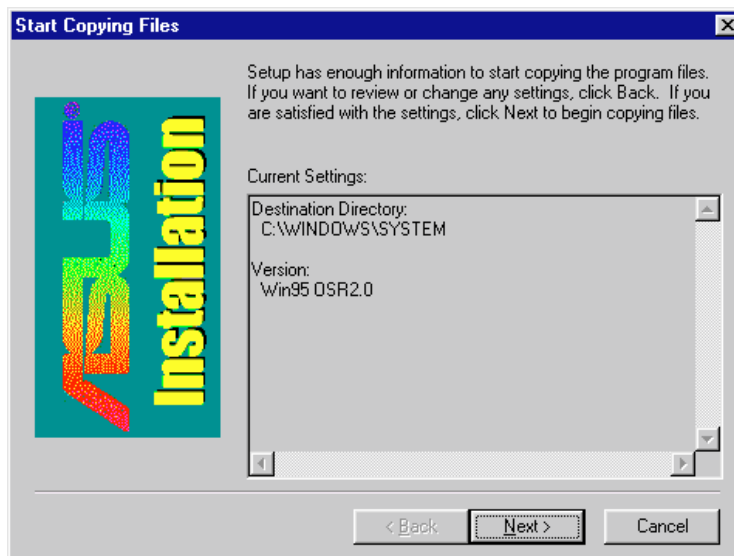

The **Installing Microsoft DirectX6** dialog box will automatically appear because the V3000 Series display driver requires DirectX 6 to have access to the advanced 3D features.

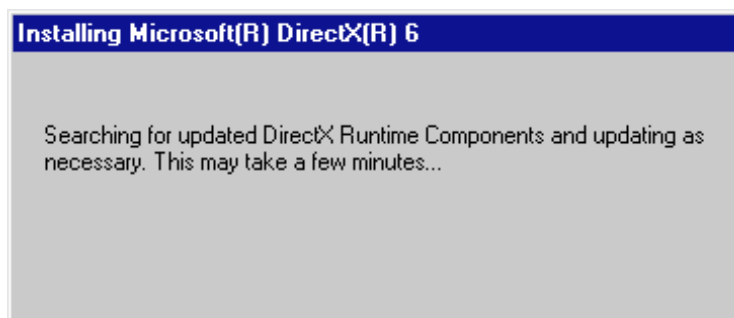

This box indicates that the **Setup program** is searching for the updated DirectX Runtime Components and updating as necessary.


III. Windows 95/98

Install V3000 Series Driver (replacing other VGA card)

If you wish to replace an existing VGA card with an ASUS V3000 Series graphics card, the current display drivers must be replaced first (see **II. Hardware Installation “Systems with Existing VGA Card”**).

Note: The following procedure works only for Windows 95. For Windows 98 users, follow the procedures for “Install V3000 Series Driver (existing ASUS 3000)”.

1. Insert your CD or double click on your CD drive icon in My Computer to bring up the autorun screen or run **Setup.exe** in the root directory of the CD.

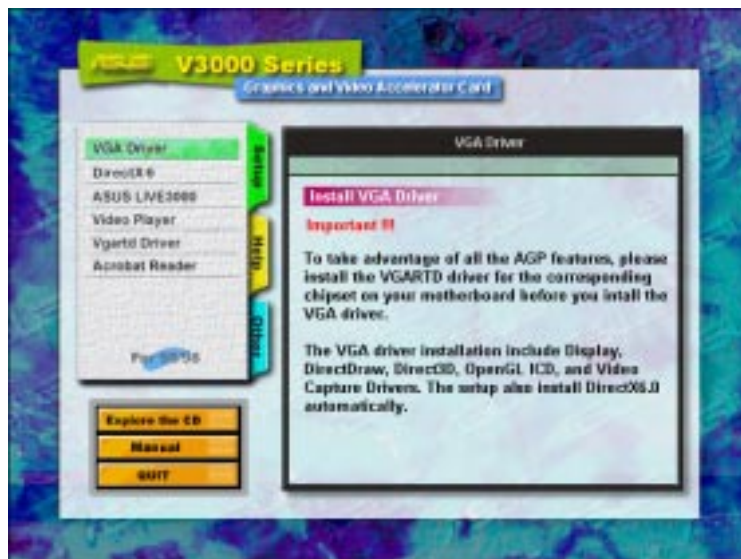


2. From the **Setup** panel, click **VGA Driver** and the **Welcome** window will appear.




3. Click **Next >** to install the V3000 Series display drivers on your computer.

III. Windows 95/98


4. The install program will detect whether you are using OSR2.0 with USB (OSR2.1). If not, a message will be given to exit the install program (Click **Yes**) or continue (Click **No**).

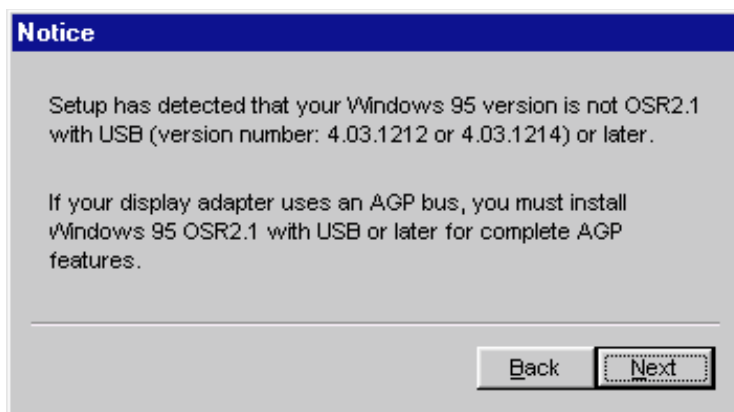

The **Installing Microsoft DirectX6** dialog box will automatically appear because the V3000 Series display driver requires DirectX6 to have access to the advanced 3D features. Click **Next >** to begin file transfer.

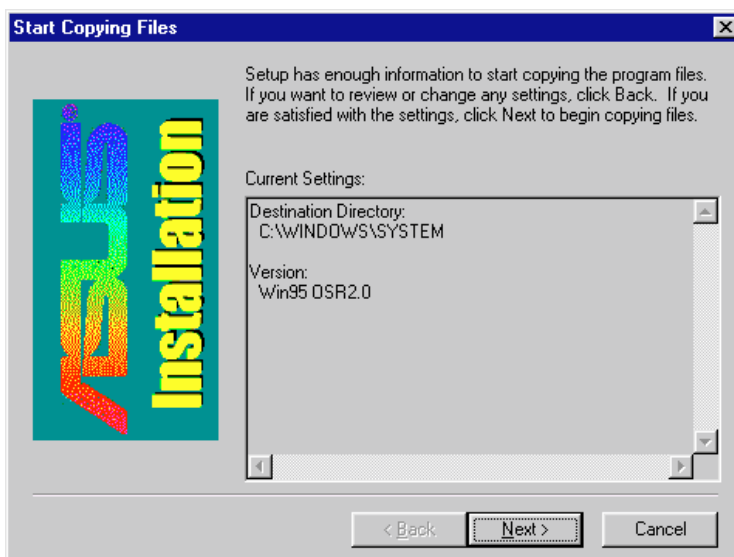

5. The **Setup program** will then search for the updated DirectX Runtime Components and update as necessary.

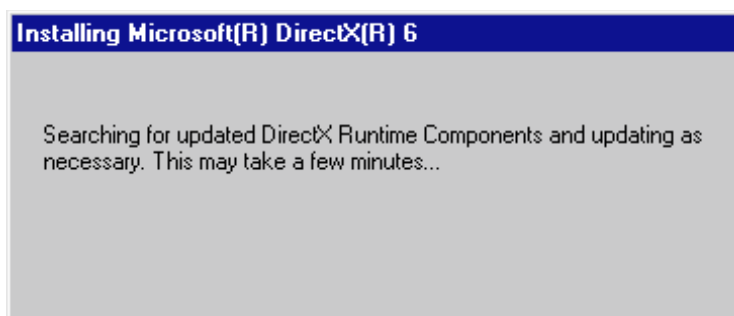

6. After all drivers are installed, power off your system and replace your VGA card with the ASUS V3000 Series card. Restart your computer, and the drivers should be installed automatically.

III. Windows 95/98

Display Properties (desktop utilities)

To run Desktop Utilities, click the right mouse button on the Windows 95/98 desktop, then choose **Properties** in the list.

Advanced Menu

This menu provides some advanced settings for Direct3D. You can set “Texture Heap” (available only for the 3DP-V3000TV) to maximum value for those texture-greedy applications or games.

III. Windows 95/98 Desktop Utilities

The main dialog box, **ASUS V3000 V2.00 Properties**, has several tabs: General, Adapter, Monitor, Performance, Color Management, Hotkey, Monitor, Advanced, Color Correction, Information, and TV Out. The **Advanced** tab is active, showing the **ASUS** logo and the following settings:

- Texture Heap Size (PCI):** A slider set to 5 MB. A checkbox for **Enable Custom Size** is present.
- Direct3D Feature Settings:**
 - Enable fog table capacity
 - Enable square texture only capacity
 - Enable texture 5-6-5 format
 - Enable anti-aliasing capacity
 - Enable linear/tri-linear mipmap capacity
 - Enable iterated vertex alpha capacity
 - MIPMAP Levels: 8
 - Buttons: Load Default, Level of Detail, Texture Address, OpenGL Settings

Annotations for the main dialog:

- Allows customizing of texture buffer size (points to the Texture Heap Size slider)
- Adjusts the size of the texture buffer in the system memory. This function will be disabled when using an AGP card. (points to the Texture Heap Size slider)
- Enables/Disables each Direct3D component (points to the Direct3D Feature Settings list)

Level of Detail Settings dialog box:

- Level of Detail (LOD) Options:
 - No per-pixel mipmapping
 - Do per-pixel mipmapping only for linear mipmaps nearest/furthest
 - Perform most accurate LOD calculation for all mipmapping modes
- Buttons: OK, Cancel, Load Default

Annotations for Level of Detail:

- Fastest-uses per-polygon mipmapping (points to the "No per-pixel mipmapping" option)
- Best Quality-uses the most accurate mipmapping calculation (points to the "Perform most accurate LOD calculation for all mipmapping modes" option)

OpenGL Settings dialog box:

- Texture Quality/Performance Adjustment:
 - Best texture quality
 - Average performance/quality
 - Best performance
- Buttons: OK, Cancel, Load Default

Texture Addressing Adjustment dialog box:

- Origin of Point Sampling Textel:
 - Upper left corner
 - Center
- Origin of B-linear Filtering Textel:
 - Upper left corner
 - Center
- Buttons: OK, Cancel, Load Default

Annotations for Texture Addressing Adjustment:


- Origin selection for non-filtering texels (points to the Point Sampling Textel options)
- Origin selection for bilinear filtering texels (points to the B-linear Filtering Textel options)

Note: The screen displays are provided as examples only and may not reflect the screen contents displayed on your system.

III. Windows 95/98


Color Correction Menu

You can adjust the brightness, contrast, and gamma values of the screen output from the Color Correction Menu. This function is only available in 16-bit and 32-bit color depth.

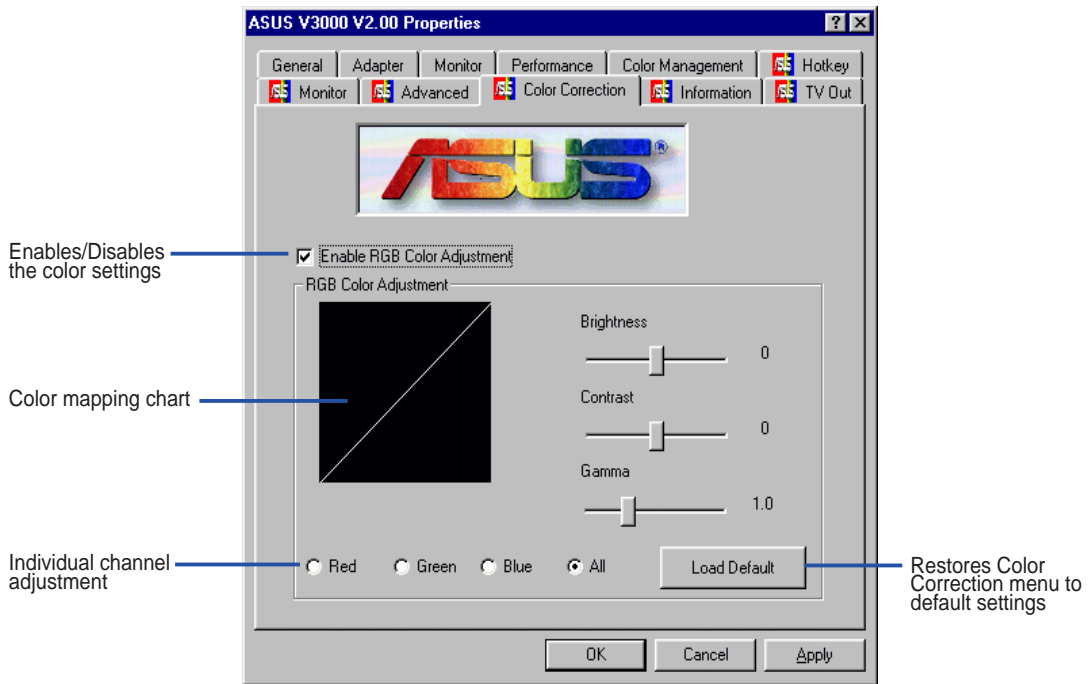

Information Menu


You can lists all the information about the VGA card and video configurations from the Information Menu.

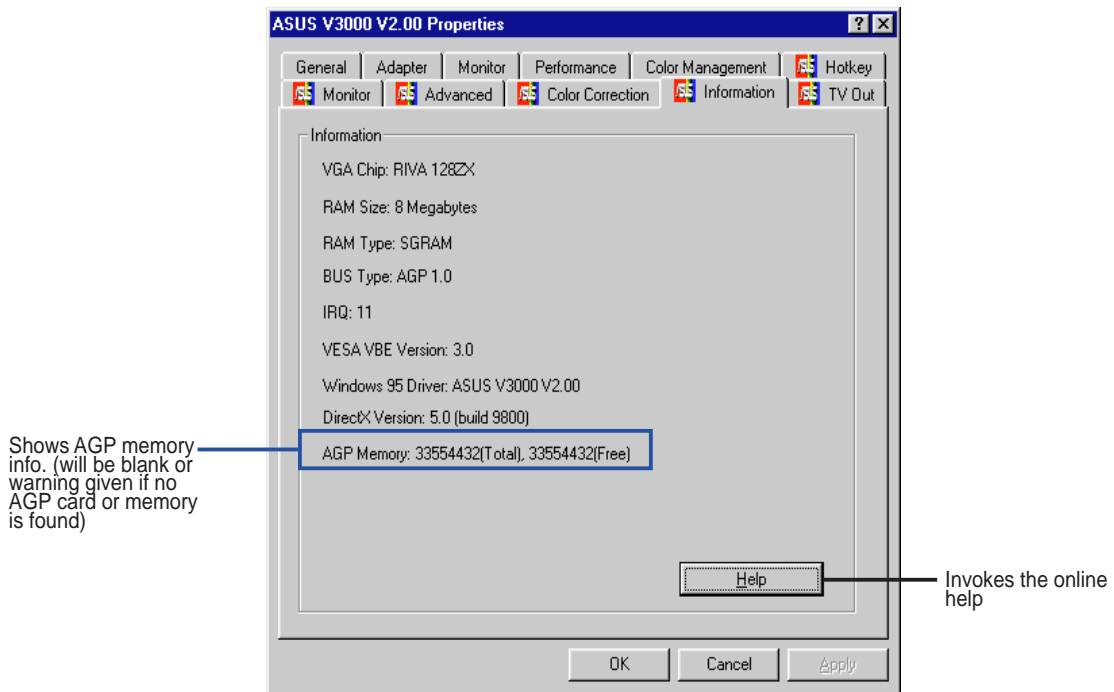

III. Windows 95/98

TV Out Menu (AGP-V3000ZXTV only)


The TV Out tab will appear if your card came with an S-Video and/or Composite connector, a TV is connected to one of these connectors (S-Video provides better quality) and turned on, and you are in any one of these modes: 640x480@60Hz or 800x600@60Hz for NTSC, 640x480@50Hz or 800x600@50Hz for PAL.

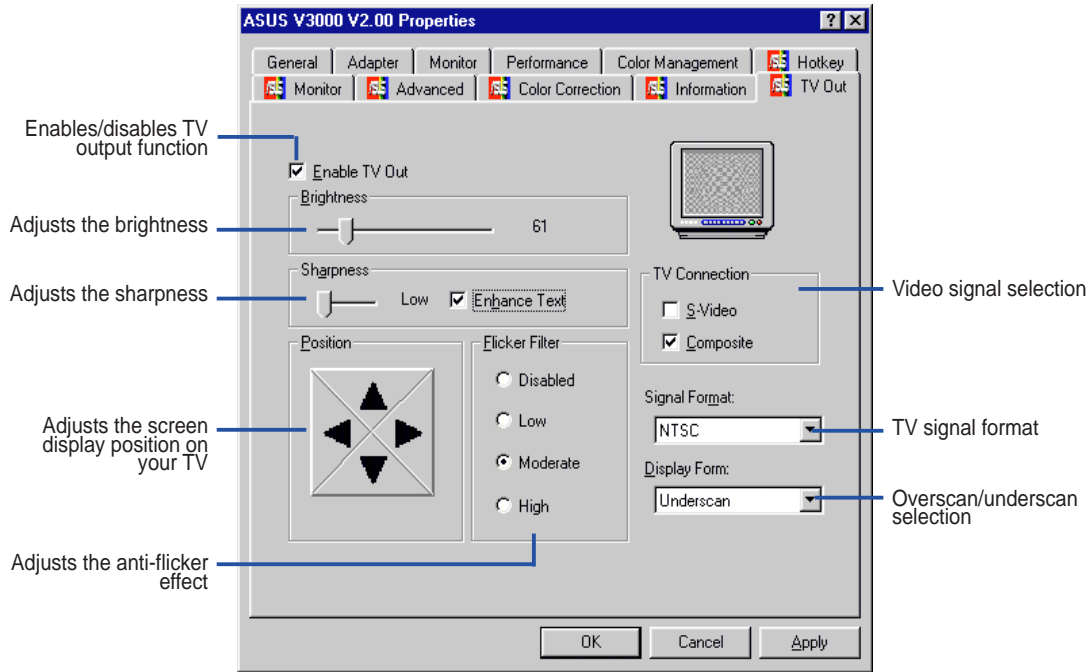

Note: If TV output is turned on, the display refresh rate will be forced to 60Hz for NTSC and 50Hz for PAL. **Display Modes** will only be available for you to set other frame rates when you turn off TV output, close the **Properties** dialog box, and then enter it again.

Settings Menu


You can set the resolution, color depth, fonts, and virtual desktop from this menu.

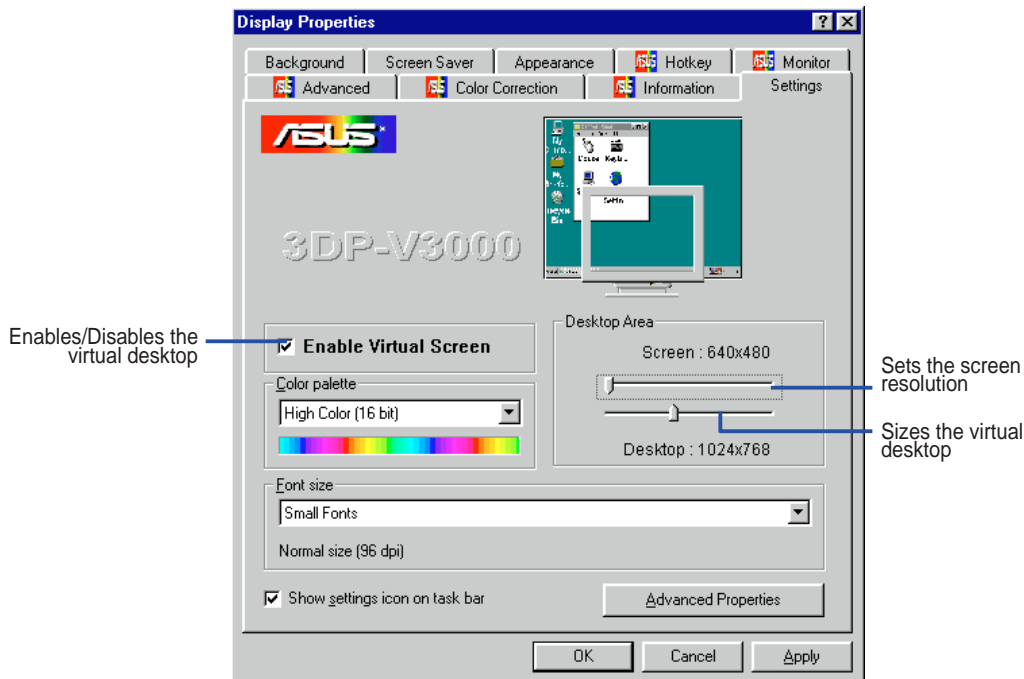

III. Windows 95/98


Hotkey Menu

You can define hotkeys for the virtual screen operation from the Hotkey Menu.

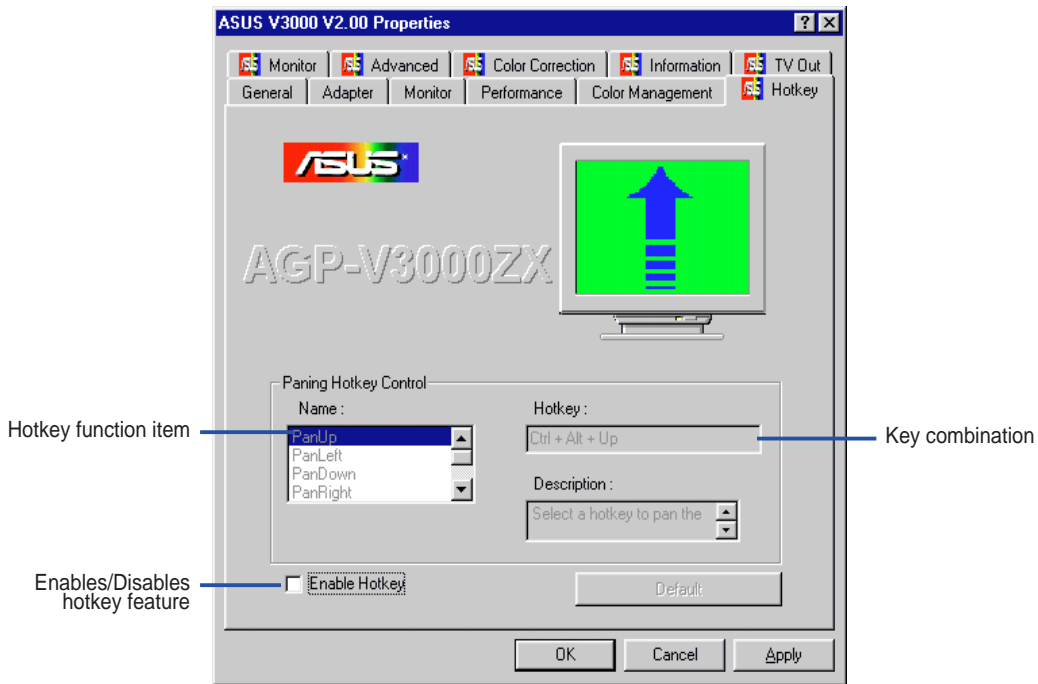

Monitor Menu


You can adjust the screen output on the monitor from the Monitor Menu.

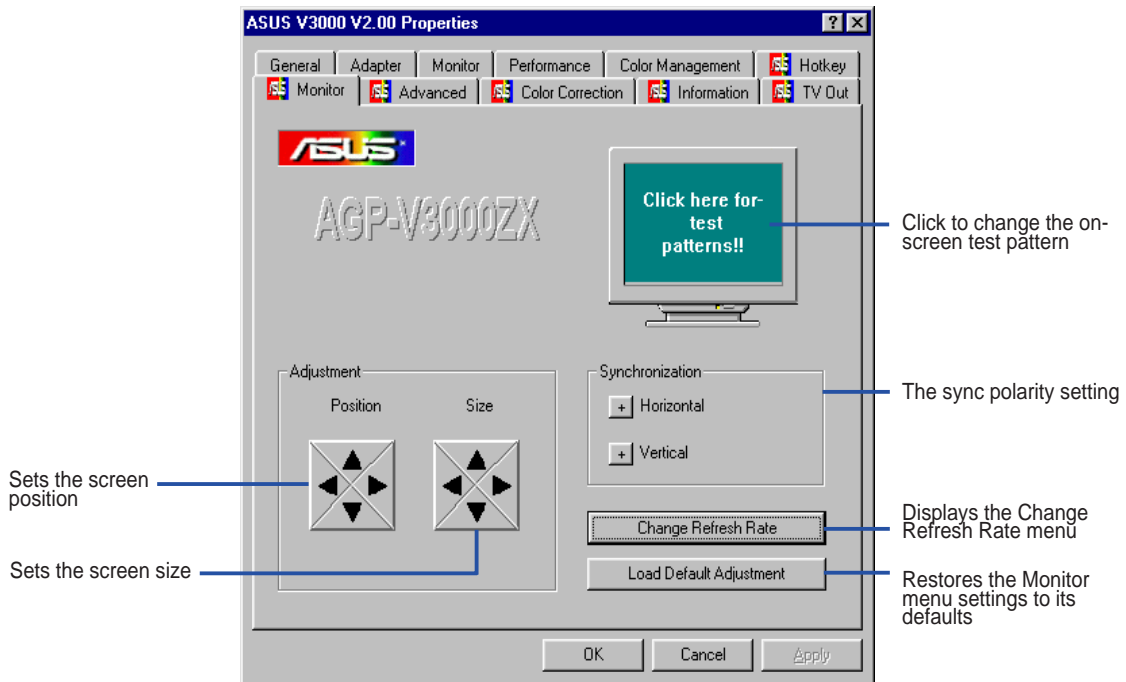

III. Windows 95/98

Refresh Rate Menu


You can change the refresh rate setting for your monitor from this Menu.

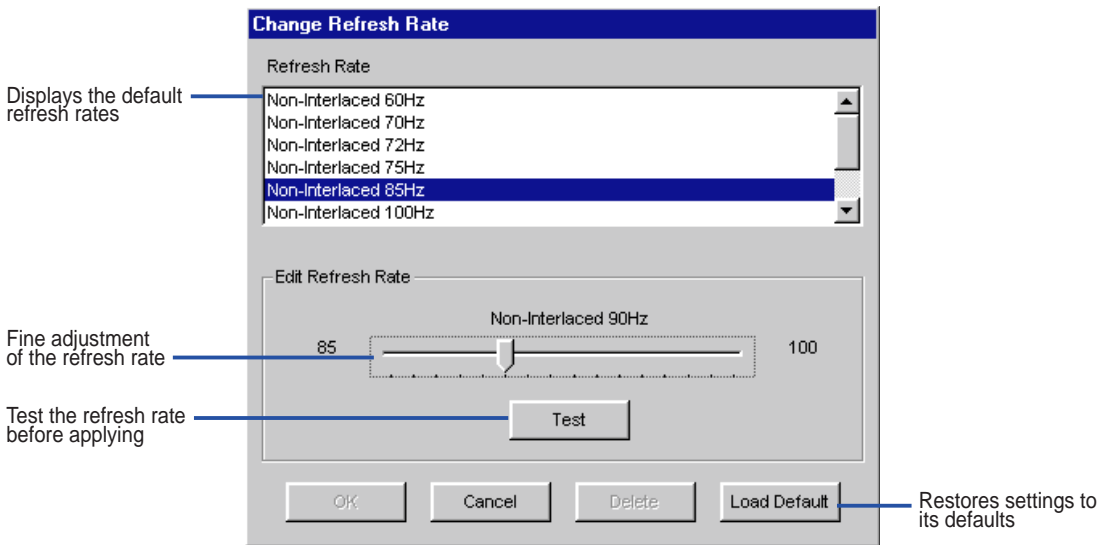

Install DirectX6


Microsoft DirectX6 allows 3D hardware acceleration support in Windows 95/98. For Software MPEG support in Windows 95/98, you must first install the **Microsoft DirectX6** libraries, and then the MPEG Video Player.

1. Insert your CD or double click on your CD drive icon in My Computer to bring up the autorun screen or run Setup.exe in the root directory of the CD.
2. From the **Setup** panel, click **DirectX6.0**.

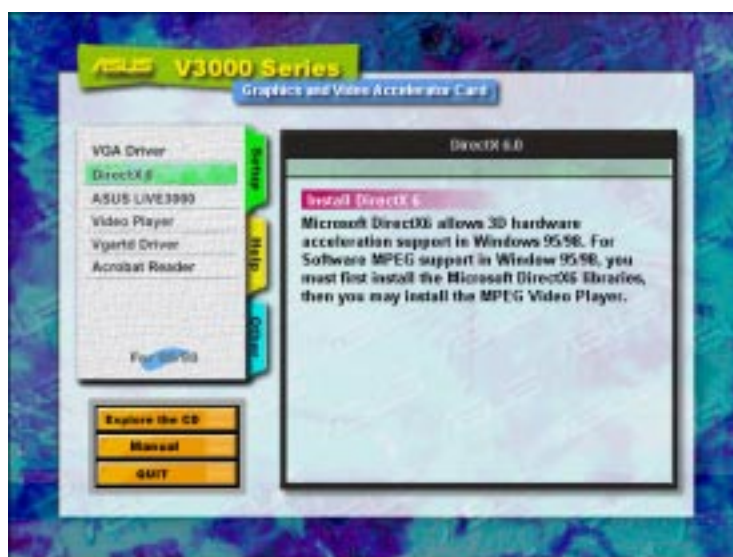

III. Windows 95/98

The DirectX6 Setup Screen appears

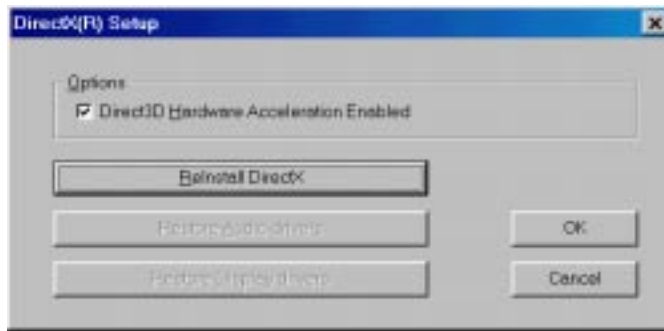


3. Check **Direct 3D Hardware Acceleration Enabled** and then click the **Reinstall DirectX** button.
4. After reinstalling DirectX6, you will be prompted to restart your machine. Click **OK**.

III. Windows 95/98

Install VGARTD (AGP only)

1. Insert your CD or double click on your CD drive icon in My Computer to bring up the autorun screen or run Setup.exe in the root directory of the CD.
2. From the **Setup** panel, click **Vgartd Driver** for AGP chipset support from Intel, SiS, VIA, and ALi. A message appears that only the AGP version requires this driver installation.

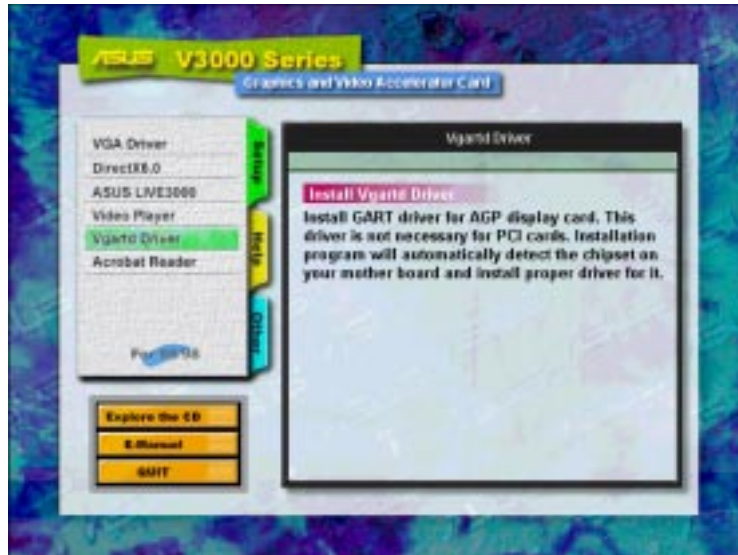


3. A driver detection screen appears to tell you which chipset is detected. Click **OK** to install the appropriate driver for your chipset.



Note: Installation dialogs are slightly different for each chipset. Please follow the instructions to finish the VGARTD installation. The steps provided are for Intel chipsets.

III. Windows 95/98

4. If you selected **No...**, on the previous screen before clicking **OK**, you will be presented with a selection of other drivers. Make your driver selection and click **Install**.

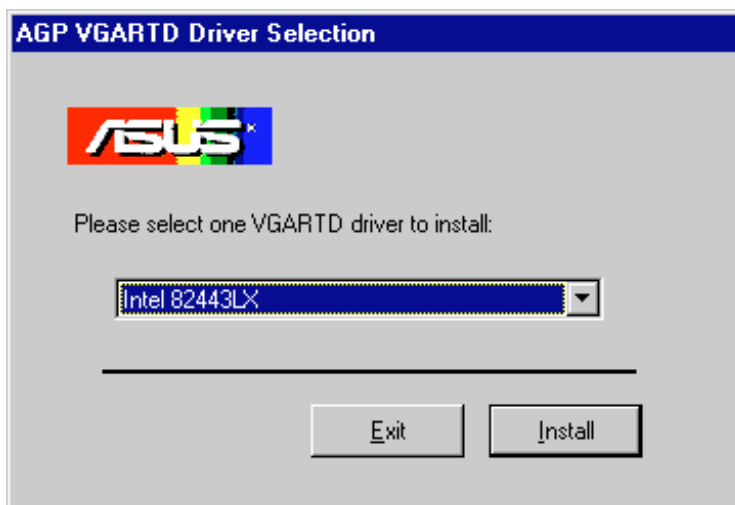

5. When the **Welcome** screen appears, click **Next** to continue.



6. Once the driver installation is finished, click **Finish**.



(This page was intentionally left blank.)

III. Windows 95/98

Install ASUS LIVE3000 (for TV models only)

ASUS LIVE3000 must be installed to use the video-in function on the V3000 Series accelerator cards.


1. Reinsert your CD or double click on your CD drive icon in My Computer to bring up the autorun screen or run Setup.exe in the root directory of the CD.
2. From the **Setup** panel, click **ASUS LIVE3000** and follow the self-explanatory instructions to complete the installation.



III. Windows 95/98
ASUS LIVE3000

After installation, you may run the program through the “Start” button-Programs-ASUS LIVE3000-LIVE3000 or remove the program using the unInstallSHIELD.


Using ASUS LIVE3000 (for TV models only)

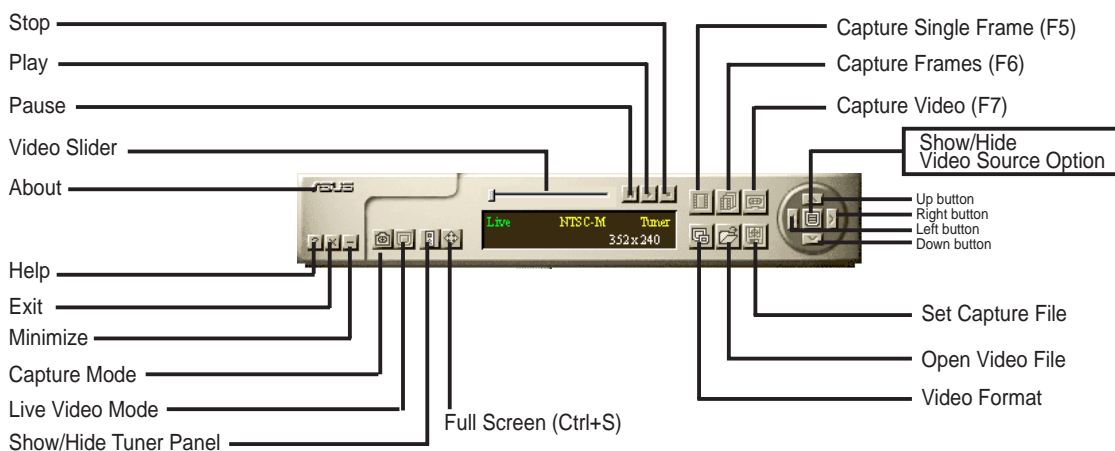

III. Windows 95/98

Show/Hide Video Source Option

When first using ASUS LIVE3000, you must setup the Video Source. By clicking the **Show/Hide Video Source Option** button on the panel, you can show or hide the video source setting.

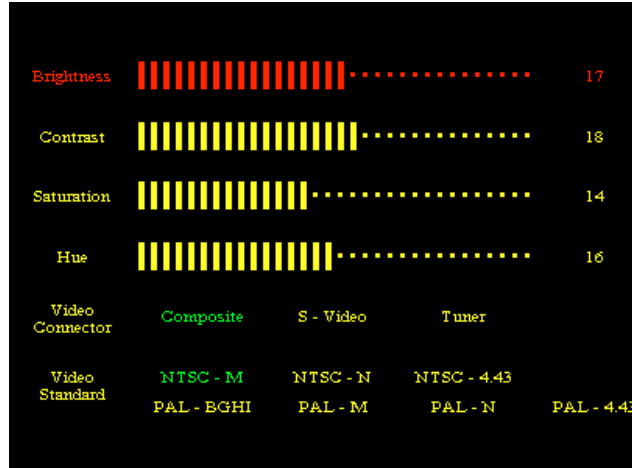

You can use the Up or Down arrow buttons on the control panel to select the Video Connector or the Video Standard. The Left and Right arrow buttons are used for making selections.

Video Capture Driver

When you install the V3000 Series Windows 95/98 Driver, the video capture driver will automatically be installed on your system. This video capture driver follows Microsoft Video for Windows standard and can open up to a capture window size of 352x240. It can be used with some applications that use video capture as an option, such as video conference, net meeting, or digital video authoring applications.


III. Windows 95/98

Remove V3000 Series Driver


If you want to install other graphics cards or if you no longer need the V3000 Series display drivers, you can use one of the following procedures to completely uninstall the drivers from Windows 95/98 to save disk space.

Using Windows 95/98 Control Panel

1. Click **Start**, and then point to **Settings**.
2. Click **Control Panel**.
3. Double-click the **Add/Remove Programs** icon.
4. Click the **Install/Uninstall** tab.
5. Select ASUS VGA driver from the list.
6. Click **Add/Remove**.

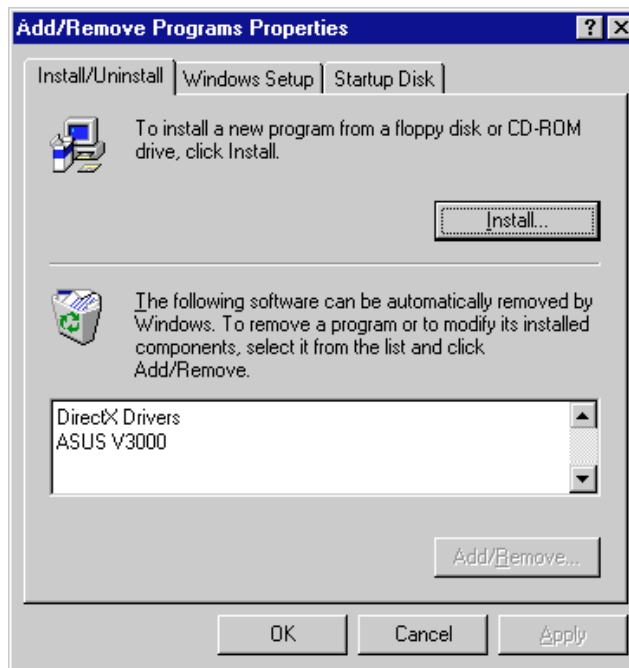


7. You will be warned that files will be deleted. Click **Yes** to continue.

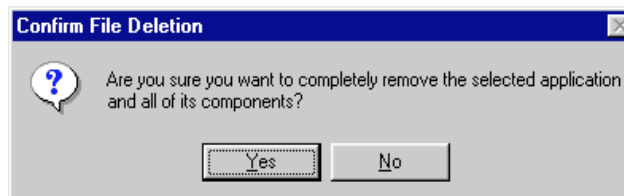


III. Windows 95/98

8. A **Remove Shared File?** dialog box will ask for confirmation on removing some shared files. Click **Yes To All** to remove the shared files.

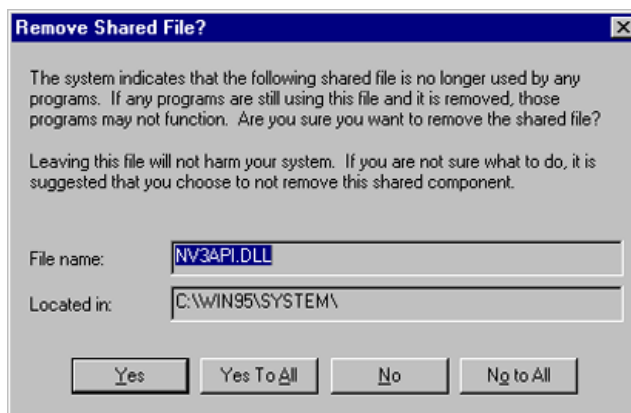

9. You will be warned that shared files may be used by other devices. Click **Yes** to continue.

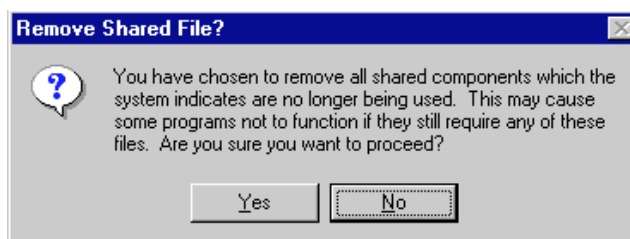

10. This progress screen will show the components that are being uninstalled.



IV. Microsoft Windows NT

Windows NT 4.0

WARNING! Before installing the ASUS AGP-V3000 Series display driver in Windows NT 4.0, make sure that you have installed **Windows NT 4.0 Service Pack3** (available on the Internet at http://www.microsoft.com/isapi/support/bldqpage.idc?ProductPage=q_servpk). Otherwise, the system will hang and will not be able to start up! This is not required for the ASUS 3DP-V3000/TV.

NOTE: For all the AGP features to be available you must be using Windows NT 5.0 (available in the future).

Installation Procedures

1. Start Windows NT, switch display properties to VGA mode (16 colors, 640 x 480 pixels), then restart your computer to make the change.
2. After your computer restarts, right-click the desktop and click **Properties**.
3. Click the **Settings** tab.
4. Select **Change Display Type**.
5. Select **Adapter Type** and click **Change**.
6. Click **Have Disk**.
7. Insert the ASUS V3000 Series Installation CD.
8. Type **D:\NT40** (assuming your CD-ROM disc drive is in drive D) or click **Browse** to select the path of the display driver for Windows NT. Click **OK**.
9. You will see a list of ASUS V3000 Series drivers. Select your driver and then click **OK**.
10. Windows NT will once again prompt for confirmation. All appropriate files are then copied to the hard disk. When all files are copied, go back to the **Display Properties** box by clicking **Close**. Click **Apply**.
11. The **System Settings Change** dialog box is displayed. Click **Yes** to restart Windows.
12. Windows NT will restart with the default settings. The Display applet will appear to allow for mode selection.

V. Display Information

Resolution Table 4MB Video Memory

(AGP-V3000, AGP-V3000/TV, 3DP-V3000, 3DP-V3000/TV, AGP-V3000ZX/4M, AGP-V3000ZXTV/4M)

Resolution	Vertical Frequency	Horizontal Frequency	Color Depth		
			8bpp = 256 colors Standard	16bpp = 65K colors High Color	32bpp = True Color
640 x 480	60Hz	31.4KHz	yes	yes	yes
	72Hz	36.1KHz	yes	yes	yes
	75Hz	37.6KHz	yes	yes	yes
	85Hz	43.0KHz	yes	yes	yes
	100Hz	50.9KHz	yes	yes	yes
	120Hz	61.8KHz	yes	yes	yes
800 x 600	60Hz	37.9KHz	yes	yes	yes
	72Hz	45.1KHz	yes	yes	yes
	75Hz	47.1KHz	yes	yes	yes
	85Hz	53.5KHz	yes	yes	yes
	100Hz	63.6KHz	yes	yes	yes
	120Hz	77.3KHz	yes	yes	yes
960 x 720	60Hz	44.8KHz	yes	yes	yes
	72Hz	54.0KHz	yes	yes	yes
	75Hz	56.4KHz	yes	yes	yes
	85Hz	64.2KHz	yes	yes	yes
	100Hz	76.4KHz	yes	yes	yes
	120Hz	92.5KHz	yes	yes	yes
1024 x 768	60Hz	48.4KHz	yes	yes	yes
	72Hz	57.6KHz	yes	yes	yes
	75Hz	60.2KHz	yes	yes	yes
	85Hz	68.7KHz	yes	yes	yes
	100Hz	81.9KHz	yes	yes	yes
	120Hz	98.8KHz	yes	yes	yes
1152 x 864	60Hz	53.6KHz	yes	yes	yes
	72Hz	64.9KHz	yes	yes	yes
	75Hz	67.7KHz	yes	yes	yes
	85Hz	77.2KHz	yes	yes	yes
	100Hz	91.4KHz	yes	yes	yes
	120Hz	110.8KHz	yes	yes	yes
1280 x 1024	60Hz	64.0KHz	yes	yes	----
	72Hz	77.0KHz	yes	yes	----
	75Hz	80.4KHz	yes	yes	----
	85Hz	91.2KHz	yes	yes	----
	100Hz	108.5KHz	yes	yes	----
	1600 x 1200	60Hz	74.9KHz	yes	yes
72Hz	89.9KHz	yes	yes	----	
75Hz	93.8KHz	yes	yes	----	
85Hz	107.1KHz	yes	yes	----	
1920 x 1080	60Hz	67.1KHz	yes	yes	----
	72Hz	81.3KHz	yes	yes	----
	75Hz	84.4KHz	yes	yes	----
	85Hz	96.2KHz	yes	yes	----
1920 x 1200	60Hz	74.6KHz	yes	----	----
	72Hz	89.9KHz	yes	----	----
	75Hz	93.9KHz	yes	----	----

V. Display Information

Resolution Table 8MB Video Memory (AGP-V3000ZX, AGP-V300ZXTV)

Resolution	Vertical Frequency	Horizontal Frequency	Color Depth		
			8bpp = 256 colors Standard	16bpp = 65K colors High Color	32bpp = True Color
640 x 480	60Hz	31.4KHz	yes	yes	yes
	72Hz	36.1KHz	yes	yes	yes
	75Hz	37.6KHz	yes	yes	yes
	85Hz	43.0KHz	yes	yes	yes
	100Hz	50.9KHz	yes	yes	yes
	120Hz	61.8KHz	yes	yes	yes
800 x 600	60Hz	37.9KHz	yes	yes	yes
	72Hz	45.1KHz	yes	yes	yes
	75Hz	47.1KHz	yes	yes	yes
	85Hz	53.5KHz	yes	yes	yes
	100Hz	63.6KHz	yes	yes	yes
	120Hz	77.3KHz	yes	yes	yes
960 x 720	60Hz	44.8KHz	yes	yes	yes
	72Hz	54.0KHz	yes	yes	yes
	75Hz	56.4KHz	yes	yes	yes
	85Hz	64.2KHz	yes	yes	yes
	100Hz	76.4KHz	yes	yes	yes
	120Hz	92.5KHz	yes	yes	yes
1024 x 768	60Hz	48.4KHz	yes	yes	yes
	72Hz	57.6KHz	yes	yes	yes
	75Hz	60.2KHz	yes	yes	yes
	85Hz	68.7KHz	yes	yes	yes
	100Hz	81.9KHz	yes	yes	yes
	120Hz	98.8KHz	yes	yes	yes
1152 x 864	60Hz	53.6KHz	yes	yes	yes
	72Hz	64.9KHz	yes	yes	yes
	75Hz	67.7KHz	yes	yes	yes
	85Hz	77.2KHz	yes	yes	yes
	100Hz	91.4KHz	yes	yes	yes
	120Hz	110.8KHz	yes	yes	yes
1280 x 1024	60Hz	64.0KHz	yes	yes	yes
	72Hz	77.0KHz	yes	yes	yes
	75Hz	80.4KHz	yes	yes	yes
	85Hz	91.2KHz	yes	yes	yes
	100Hz	108.5KHz	yes	yes	yes
	1600 x 1200	60Hz	74.9KHz	yes	yes
72Hz		89.9KHz	yes	yes	----
75Hz		93.8KHz	yes	yes	----
85Hz		107.1KHz	yes	yes	----
1800 x 1440		60Hz	89.5KHz	----	yes
1920 x 1080	60Hz	67.1KHz	yes	yes	----
	72Hz	81.3KHz	yes	yes	----
	75Hz	84.4KHz	yes	yes	----
	85Hz	96.2KHz	yes	yes	----
1920 x 1200	60Hz	74.6KHz	yes	yes	----
	72Hz	89.9KHz	yes	yes	----
	75Hz	93.9KHz	yes	yes	----

VI. Troubleshooting

Description

Recommended Action

After installation and re-starting, Windows 95/98 informs me that the display setting is still incorrect.

- Make sure the “Assign IRQ to VGA” option is enabled in the BIOS
- Check if there is enough IRQ for VGA
- Uninstall the driver, restart, and reinstall the driver

My monitor is not capable of high resolution or refresh rate.

- It depends on the display characteristics of your monitor. Consult your monitor documentation for the proper configuration.

DirectX or the other applications report no AGP memory available.

- Windows 95 is not OSR2.1 or later.
- DirectX version is not 6.0 or later.
- You have not installed appropriate drivers for the AGP chipset. (e.g. VGARTD.VXD for Intel 440LX which ASUS installation automatically installs)
- Incorrect BIOS setting. BIOS must support at least 64MB for AGP aperture size.

LIVE3000 reports no SAA7111A EVIP detected on your card.

- Your adapter has no video-in options.
- Your monitor has wrong DDC circuit implemented. Contact your monitor dealer for a solution.

Games or applications report “No 3D acceleration hardware found.”

- 3D works only in 16-bit color depth. Switch your color depth display mode to 16-bit (high color).
- Check necessary libraries such as DirectX or OpenGL

