

4MBO

Version 1.3
G52-MA00554

Manual Rev: 1.3
Release Date: Feb. 2002



FCC-B Radio Frequency Interference Statement

This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference, in which case the user will be required to correct the interference at his own expense.


Notice 1

The changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Notice 2

Shielded interface cables and A.C. power cord, if any, must be used in order to comply with the emission limits.

VOIR LA NOTICE D'INSTALLATION AVANT DE RACCORDER AU RESEAU.

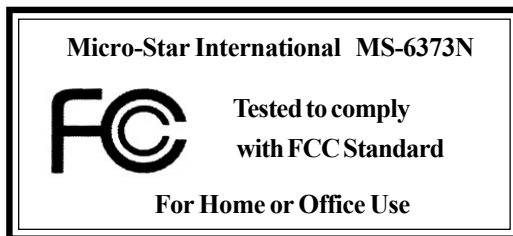

Edition

Feb. 2002

Copyright Notice

The material in this document is the intellectual property of **MICRO-STAR INTERNATIONAL**. We take every care in the preparation of this document, but no guarantee is given as to the correctness of its contents. Our products are under continual improvement and we reserve the right to make changes without notice.

Trademarks

All trademarks are the properties of their respective owners.

Intel® and Pentium® are registered trademarks of Intel Corporation.

PS/2 and OS®/2 are registered trademarks of International Business Machines Corporation.

Windows® 95/98/2000/NT/XP are registered trademarks of Microsoft Corporation.

Netware® is a registered trademark of Novell, Inc.

Award® is a registered trademark of Phoenix Technologies Ltd.

AMI® is a registered trademark of American Megatrends Inc.

Revision History

Revision	Revision History	Date
V1.3	Release for 4MBO	Feb. 2002

Safety Instructions

1. Read the safety instructions carefully.
2. Save this User's Guide for possible use later.
3. Keep this equipment away from humidity.
4. Lay this equipment on a stable and flat surface before setting it up.
5. The openings on the enclosure are used for air convection and to prevent the equipment from overheating. Note: Do not cover the openings.
6. Make sure that the power voltage is within its safety range and has been adjusted properly to the value of 110/220V before connecting the equipment to the power inlet.
7. Place the power cord in a way that people are unlikely to step on it. Do not place anything on the power cord.
8. Always unplug the power cord before inserting any add-on card or module.
9. All cautions and warnings on the equipment should be noted.
10. Never pour any liquid into the opening that could damage the equipment or cause an electrical shock.
11. If any of the following situations arises, get the equipment checked by a service personnel:
 - the power cord or plug is damaged
 - liquid has penetrated into the equipment
 - the equipment has been exposed to moisture
 - the equipment has not work well or you can not get it work according to User's Guide
 - the equipment was dropped and damaged
 - the equipment has obvious signs of breakage
12. Do not leave the equipment in an unconditioned environment with a storage temperature of 60⁰C (140⁰F) or above, which may damage the equipment.



CAUTION: To prevent explosion caused by improper battery replacement, use the same or equivalent type of battery recommended by the manufacturer only.

CONTENTS

Chapter 1 Getting Started	1-1
Mainboard Specification	1-2
Mainboard Layout	1-4
Quick Components Guide	1-5
Chapter 2 Hardware Setup	2-1
Central Processing Unit: CPU	2-2
CPU Installation Procedure	2-2
CPU Core Speed Derivation Procedure	2-3
Memory	2-4
Introduction to DDR	2-4
DDR Module Combination	2-5
DDR Module Installation Procedure	2-5
Power Supply	2-6
ATX 20-Pin Power Connector	2-6
Back Panel	2-7
Back Panel Shield Installation	2-7
Mouse Connector	2-8
Keyboard Connector	2-8
Serial Port Connectors: COM A & COM 2	2-9
LAN Jack (optional)	2-10
USB Connectors	2-10
Game Port & Audio Ports	2-11
Parallel Port: LPT1	2-12
Connectors	2-13
Floppy Disk Drive Connector: FDD1	2-13
USB Front Connector: USB3 & USB4	2-13

Hard Disk Connectors: IDE1 & IDE2	2-14
CD1/AUX1/MODEM1/JSP1	2-15
CPUFAN1/PSFAN1/SYSFAN1	2-16
IrDA Infrared Module Header: IR1	2-17
Case/Speaker Connectors:JFP2/MSIFP	2-18
Front Panel Audio Connector: JAUDIO2	2-19
Jumpers	2-20
Clear CMOS Jumper: JBAT1	2-20
FSB Mode Jumper: SW2	2-21
Audio Control Jumper: JA1	2-21
Keyboard Wake-up Jumper: JKBV1	2-22
Slots	2-23
AGP Slot	2-23
PCI Slots	2-24
CNR Slot	2-24
PCI Interrupt Request Routing	2-24
Chapter 3 BIOS Setup	3-1
Entering Setup	3-2
Control Keys	3-2
Getting Help	3-3
Main Menu	3-3
Sub-Menu	3-3
General Help <F1>	3-3
Default Settings	3-3
Setup Menus	3-4
Main Menu	3-4
Standard CMOS Features	3-6

Advanced BIOS Features	3-9
Advanced Chipset Features	3-13
Integrated Peripherals	3-15
Power Management Setup	3-20
PnP/PCI Configurations	3-24
PC Health Status	3-26
Frequency/Voltage Control	3-28
Load High Performance/BIOS Setup Defaults	3-29
Set Supervisor/User Password	3-30
Appendix A: DDRDIMM Configuration	A-1
Appendix B: Installing nForce Core Drivers under Windows 98	B-1
Installing GART Drivers	B-2
Installing the Audio Drivers	B-3
Installing Ethernet Drivers	B-4
Installing SMBus Drivers	B-5
Updating Memory Controller Drivers	B-6
Glossary	G-1

Getting Started **1**

Congratulations on purchasing the MSI mainboard. **K7N415 Pro (MS-6373N)** ATX mainboard is an excellent computer mainboard based on the innovative *nForce* 415D chipset, which supports the latest **AMD**[®] **Athlon/Athlon XP/Duron** processor series and provides you with a cost-effective solution.

TOPICS

<i>Mainboard Specification</i>	<i>1-2</i>
<i>Mainboard Layout</i>	<i>1-4</i>
<i>Quick Components Guide</i>	<i>1-5</i>

Mainboard Specification

CPU

- Supports Socket A (Socket 462) for AMD Athlon/Athlon XP/Duron processors up to 2000+MHz

Chipset

- nForce 415D chipset
 - Support 200/266MHz FSB
 - Twinbank Memory Architecture/128-bit DDR memory controller
 - AGP 4x support
 - Hyper Transport interface to MCP (800MB/sec max.)
- MCP-D(Media Communications Processor)
 - Dual ATA/100 controller
 - Support USB UHCI 1.0a, provide up to six USB ports
 - IEEE 802.3 compatible MAC (MII)
 - Integrated Audio Processor Unit, AC'97 2.1 compliant
 - SPDIF output function

Main Memory

- Support up to three DDR DIMMs
 - Maximum memory size up to 1.5 GB
 - Support 128-bit system memory

Slots

- One AGP slot
 - Support AGP 4x (1.5V only)
- One CNR slot
- Five PCI slots
 - 32-bit Master PCI 2.2 compliant
 - Support 3.3v/5v PCI bus interface

On-board IDE

- An IDE controller on the MCP chipset provides IDE HDD/CD-ROM with PIO, Bus Master and Ultra DMA 100 operation modes
- Support up to four IDE devices connection

Audio

- APU (audio processing unit) integrated in MCP
 - Support up to 256 hardware-processed voices or 64 hardware voice in 3D
 - CNR card for 6 channel analog (optional)
 - S/PDIF out through external bracket

Network (optional)

- Chipset integrated 10/100 Base-T Ethernet/Fast Ethernet

On-board Peripherals

- One floppy port that supports two FDD with 360KB, 720KB, 1.44MB and 2.88MB
- Two serial ports COM A+COM 2 (pin header)
- One parallel port that supports SPP/EPP/ECP modes
- Six USB ports (2 x rear connectors and 2 x USB front pin header to support four ports)
- One IrDA connector
- One RJ-45 connector for Ethernet (optional)
- One Audio/Game port
- One D-Bracket pin header (optional)

BIOS

- The mainboard BIOS provides “Plug & Play” function that can detect the peripheral devices and expansion cards installed on the board automatically
- Support Desktop Management Interface (DMI) function that can record your mainboard specifications


Dimension

- 30.5cm x 22.5cm

Mounting

- Six mounting holes

Mainboard Layout

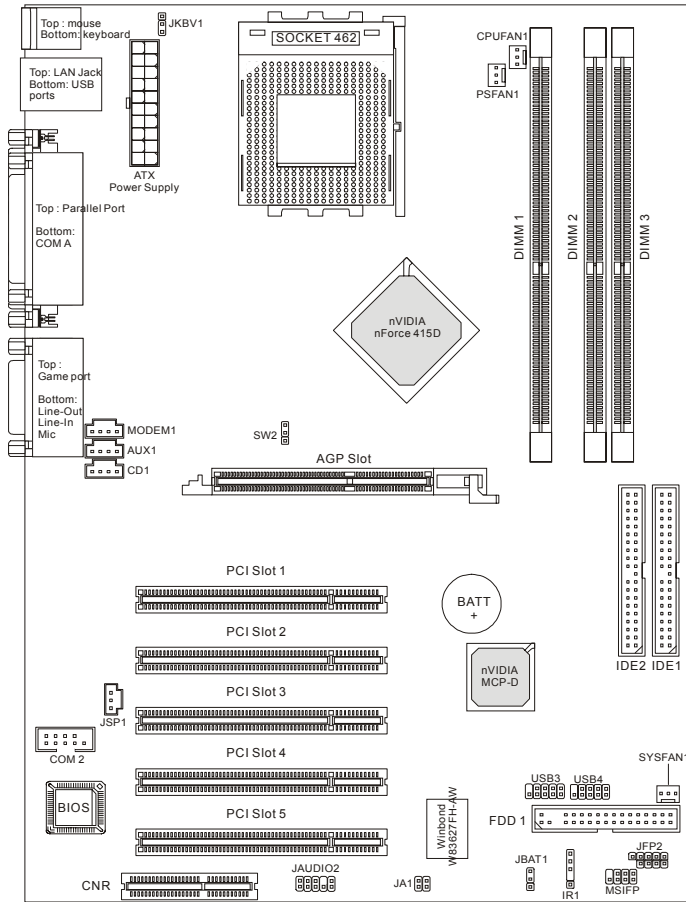

K7N415 Pro (MS-6373N v1.X) ATX Mainboard

Quick Components Guide

Component	Function	Reference
Power Connector	ATX 20-pin power connector	See p. 2-6
Mouse Connector	Connecting to Mouse	See p. 2-8
Keyboard Connector	Connecting to Keyboard	See p. 2-8
COM A & COM 2	Serial port connectors	See p. 2-9
USB Connectors	Connecting to USB devices	See p. 2-10
LPT1	Parallel port connector	See p. 2-12
FDD1	Floppy disk drive connector	See p. 2-13
USB3/USB4	Front USB connectors	See p. 2-13
IDE1~ IDE2	Hard disk connectors	See p. 2-14
CD1	CD-in connector	See p. 2-15
AUX1	Aux line-in connector	See p. 2-15
MODEM1	Modem-in connector	See p. 2-15
JSP1	SPDIF-Out connector	See p. 2-15
CPUFAN1/PSFAN1/SYSFAN1	Fan power connectors	See p. 2-16
IR1	IrDA infrared module connector	See p. 2-17
JFP2/MSIFP	Case/speaker connectors	See p. 2-18
JAUDIO2	Front panel audio connector	See p. 2-19
JBAT1	Clear CMOS jumper	See p. 2-20
SW2	FSB Mode jumper	See p. 2-21
JA1	Audio Control jumper	See p. 2-21
JKBV1	Keyboard wake-up jumper	See p. 2-22
AGP Slot	Connecting to AGP card	See p. 2-23
PCI Slots	Connecting to expansion cards	See p. 2-24
CNR Slot	Connecting to expansion card	See p. 2-24

Hardware Setup **2**

This chapter provides you with the information about hardware setup procedures. While doing the installation, be careful in holding the components and follow the installation procedures. For some components, if you install in the wrong orientation, the components will not work properly.

Use a grounded wrist strap before handling computer components. Static electricity may damage the components.

TOPICS

<i>Central Processing Unit: CPU</i>	2-2
<i>Memory</i>	2-4
<i>Power Supply</i>	2-6
<i>Back Panel</i>	2-7
<i>Connectors</i>	2-13
<i>Jumpers</i>	2-20
<i>Slots</i>	2-23




Central Processing Unit: CPU

The mainboard provides a Socket A (Socket 462) to support the latest AMD Athlon/Athlon XP processor series. **To avoid the thermal issue* of the CPU, please make sure that the CPU has a heatsink and a cooling fan attached on its top.**

CPU Installation Procedure

To install the CPU, please follow the steps below:

1. Pull the lever sideways away from the socket; then, raise it up to a 90-degree angle.
2. Locate the cut edge on the CPU, and point it towards the lever pivot. Insert the pins of the CPU directly into the holes on the socket.
3. Press the lever down to complete the installation.

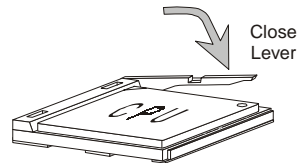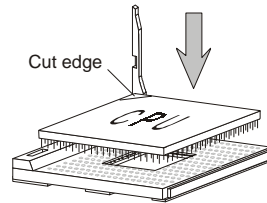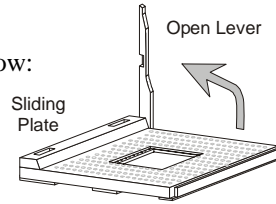

Note: The CPU is designed with the “corner pin” on the two of the four corners; thus, it should only fit in one correctly orientation as installing. In addition, with the weight of the heatsink and cooling fan attached, you can insert the CPU into the socket easily. **DO NOT** press the CPU down by force when installing in wrong orientation, this would bend and damage

CPU Core Speed Derivation Procedure

If	CPU Clock	=	100MHz
	Core/Bus ratio	=	14
then	CPU core speed	=	Host Clock x Core/Bus ratio
		=	100MHz x 14
		=	1.4GHz

*** Thermal issue for CPU**


As processor technology pushes to faster speeds and higher performance, thermal management becomes increasingly crucial when building computer system. Maintaining the proper thermal environment is key to reliable operation. As such, the processor must be maintained in the specified thermal requirements. AMD recommends the use of high performance thermal interface material.

AMD Athlon/Athlon XP processors with a speed of 600MHz and above require the LARGER heatsink and cooling fan. You also need to add thermal grease between the CPU and heatsink to improve heat dissipation; then, make sure that the CPU and the heatsink are securely fastened and in good contact with each other. These are needed to prevent damaging the processor and ensuring reliable operation.

Please visit AMD's website for more information.

Memory

The mainboard provides three 184-pin DDR DIMM slots and supports a total memory size up to 1.5 GB.

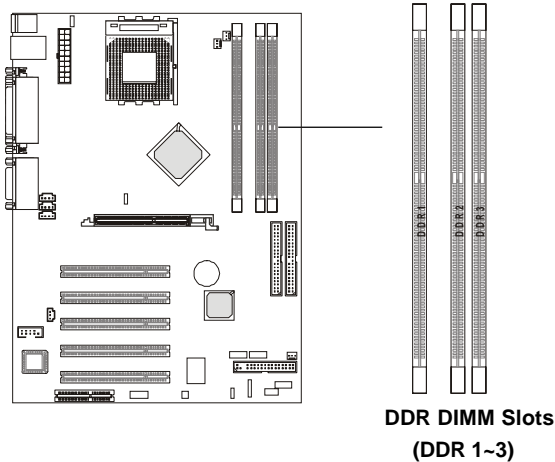

Introduction to DDR SDRAM

DDR (Double Data Rate) SDRAM is similar to conventional SDRAM, but doubles the rate by transferring data twice per cycle. It uses 2.5 volts as opposed to 3.3 volts used in SDR SDRAM, and requires 184-pin DIMM modules rather than 168-pin DIMM modules used by SDR SDRAM. Two types of DDR are available at the time of writing: PC1600 & PC2100. PC1600 DDR SDRAM running at 100MHz will produce about 1.6GB/s memory bandwidth. PC2100 running at 133MHz will produce 2.1GB/s memory bandwidth. High memory bandwidth makes DDR an ideal solution for high performance PC, workstations and servers.


DDR Module Combination

You can install PC1600/PC2100 DDR SDRAM modules into the DDR DIMM slots (DDR 1~3) in any combination as follows:


Socket	Memory Module	Total Memory
DIMM 1	64MB, 128MB, 256MB, 512MB	64MB ~ 512MB
DIMM 2	64MB, 128MB, 256MB, 512MB	64MB ~ 512MB
DIMM 3	64MB, 128MB, 256MB, 512MB	64MB ~ 512MB
Maximum System Memory Supported		64MB ~ 1.5GB

DDR Module Installation Procedure

1. The DDR DIMM has only one notch on the center of module. The module will only fit in the right orientation.
2. Insert the DIMM memory module vertically into the DIMM slot. Then push it in.

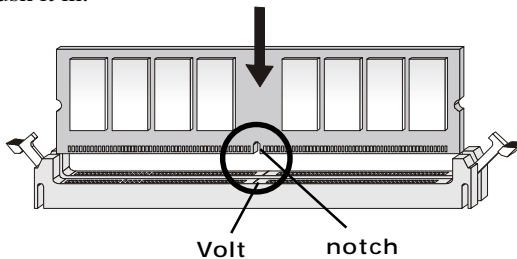

3. The plastic clip at each side of the DIMM slot will automatically close.

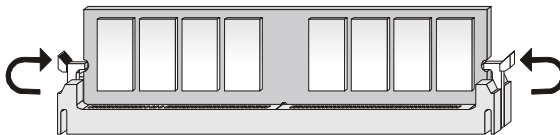


Power Supply

The mainboard supports ATX power supply for the power system. Before inserting the power supply connector, always make sure that all components are installed properly to ensure that no damage will be caused.

ATX 20-Pin Power Connector

This connector allows you to connect to an ATX power supply. To connect to the ATX power supply, make sure the plugs of the power supply is inserted in the proper orientation and the pins are aligned. Then push down the power supply firmly into the connector. The power connector supports **instant power on** function which means that system will boot up immediately when the power supply connector is inserted on the board.

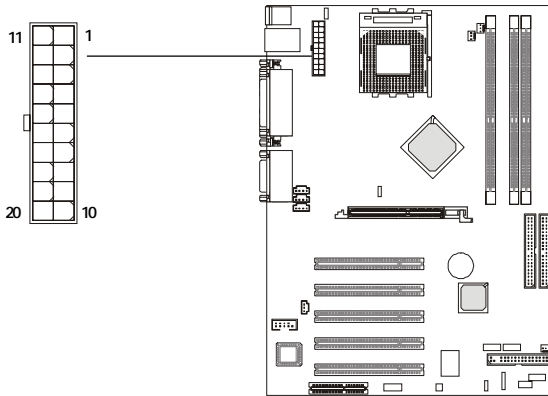


Pin Definition

PIN	SIGNAL	PIN	SIGNAL
1	3.3V	11	3.3V
2	3.3V	12	-12V
3	GND	13	GND
4	5V	14	PS_ON
5	GND	15	GND
6	5V	16	GND
7	GND	17	GND
8	PW_OK	18	-5V
9	5V_SB	19	5V
10	12V	20	5V


Back Panel

The Back Panel provides the following connectors:

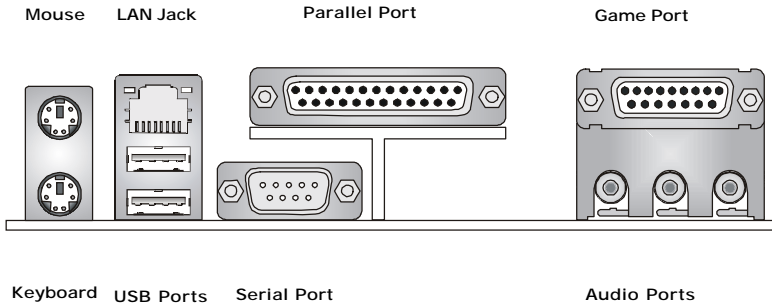

Back Panel Shield Installation


The following back panel shield is included with your purchase. Please align the shield with the back panel and clip the shield onto the back panel.

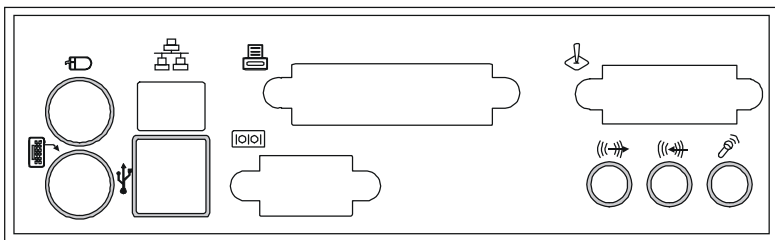

Chapter 2

Mouse Connector

The mainboard provides a standard PS/2[®] mouse mini DIN connector for attaching a PS/2[®] mouse. You can plug a PS/2[®] mouse directly into this connector. The connector location and pin assignments are as follows:

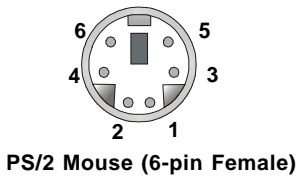


Pin Definition

PIN	SIGNAL	DESCRIPTION
1	Mouse DATA	Mouse DATA
2	NC	No connection
3	GND	Ground
4	VCC	+5V
5	Mouse Clock	Mouse clock
6	NC	No connection

Keyboard Connector

The mainboard provides a standard PS/2[®] keyboard mini DIN connector for attaching a PS/2[®] keyboard. You can plug a PS/2[®] keyboard directly into this connector.

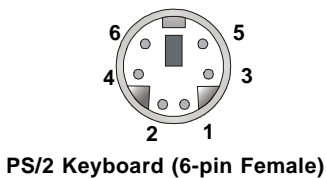


Pin Definition

PIN	SIGNAL	DESCRIPTION
1	Keyboard DATA	Keyboard DATA
2	NC	No connection
3	GND	Ground
4	VCC	+5V
5	Keyboard Clock	Keyboard clock
6	NC	No connection

Serial Port Connectors: COM 2 (optional) & COM A

The mainboard offers two 9-pin DIN connectors as serial ports COM A and COM 2. The ports are 16550A high speed communication ports that send/receive 16 bytes FIFOs. You can attach a serial mouse or other serial devices directly to them.

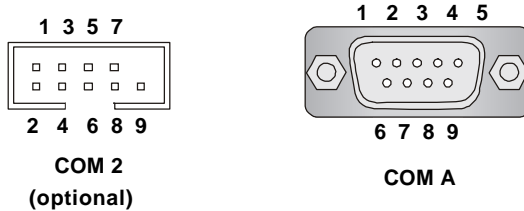

COM 2 Pin Definition

PIN	SIGNAL	DESCRIPTION
1	NDCDB	Data carry detect
2	NDSRB	Data set ready
3	NSINB	Serial or receive data
4	NRTSB	Request to send
5	NSOUT	Serial out or transmit data
6	NCTSB	Clear to send
7	NDTRB	Data terminal ready
8	NRIB	Ring Indicate
9	GND	Ground


COM A Pin Definition

PIN	SIGNAL	DESCRIPTION
1	DCD	Data Carry Detect
2	SIN	Serial In or Receive Data
3	SOUT	Serial Out or Transmit Data
4	DTR	Data Terminal Ready
5	GND	Ground
6	DSR	Data Set Ready
7	RTS	Request To Send
8	CTS	Clear To Send

Chapter 2

RJ-45 LAN Jack (Optional)

The mainboard provides a RJ-45 connector that allows your computer to be connected to a network environment.

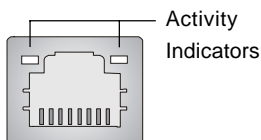


LAN Jack
(RJ-45)

Pin	Signal	Description
1	TDP	Transmit differential pair
2	TDN	Transmit differential pair
3	RDP	Receive differential pair
4	NC	Not used
5	NC	Not used
6	RDN	Receive differential pair
7	NC	Not used
8	NC	Not used

USB Connectors

The mainboard provides a UHCI (Universal Host Controller Interface) Universal Serial Bus root for attaching USB devices such as keyboard, mouse or other USB-compatible devices. You can plug the USB device directly into the connector.

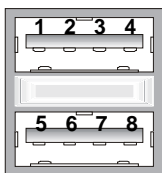


USB Ports

USB Port Description

PIN	SIGNAL	DESCRIPTION
1	VCC	+5V
2	-Data 0	Negative Data Channel 0
3	+Data0	Positive Data Channel 0
4	GND	Ground
5	VCC	+5V
6	-Data 1	Negative Data Channel 1
7	+Data 1	Positive Data Channel 1
8	GND	Ground

Joystick/Midi Connectors


You can connect a joystick or game pad to this connector.

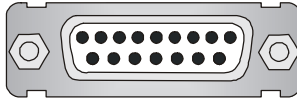

Audio Port Connectors

Line Out is a connector for Speakers or Headphones. **Line In** is used for external CD player, Tape player, or other audio devices. **Mic** is a connector for microphones.


1/8" Stereo Audio Connectors

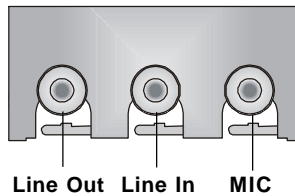

Chapter 2

Parallel Port Connector: LPT1

The mainboard provides a 25-pin female centronic connector for LPT. A parallel port is a standard printer port that supports Enhanced Parallel Port (EPP) and Extended Capabilities Parallel Port (ECP) mode.

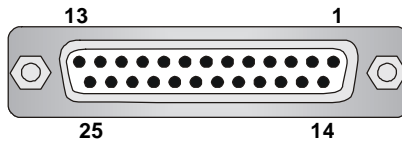


Pin Definition

PIN	SIGNAL	DESCRIPTION
1	STROBE	Strobe
2	DATA0	Data0
3	DATA1	Data1
4	DATA2	Data2
5	DATA3	Data3
6	DATA4	Data4
7	DATA5	Data5
8	DATA6	Data6
9	DATA7	Data7
10	ACK#	Acknowledge
11	BUSY	Busy
12	FE	Paper End
13	SELECT	Select
14	AUTO FEED#	Automatic Feed
15	ERR#	Error
16	INIT#	Initialize Printer
17	SLIN#	Select In
18	GND	Ground
19	GND	Ground
20	GND	Ground
21	GND	Ground
22	GND	Ground
23	GND	Ground
24	GND	Ground
25	GND	Ground

Connectors


Floppy Disk Drive Connector: FDD1

The mainboard provides a standard floppy disk drive connector that supports 360K, 720K, 1.2M, 1.44M and 2.88M floppy disk types.

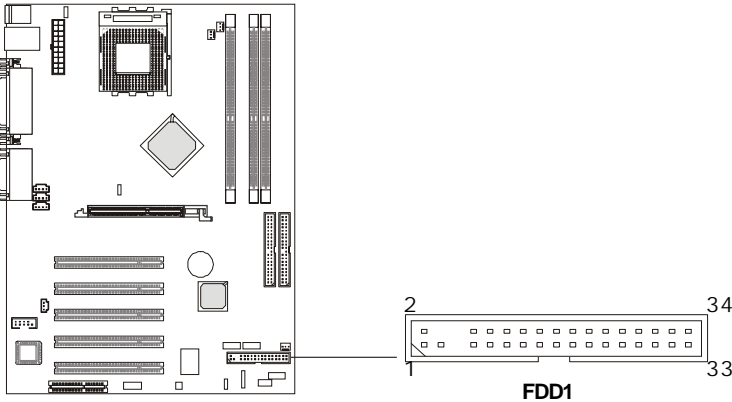


USB Front Connector: USB3 & USB4

The mainboard provides the Front USB (Universal Serial Bus) pin headers that allow you to connect optional USB ports for front panel.

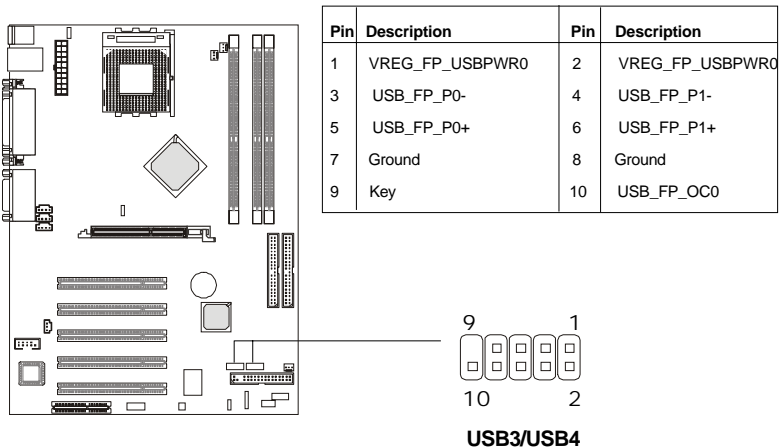

Hard Disk Connectors: IDE1 & IDE2

The mainboard has a 32-bit Enhanced PCI IDE and Ultra DMA 33/66/100 controller that provides PIO mode 0~4, Bus Master, and Ultra DMA/33/66/100 function. You can connect up to four hard disk drives, CD-ROM, 120MB Floppy (reserved for future BIOS) and other devices. These connectors support the provided IDE hard disk cable.

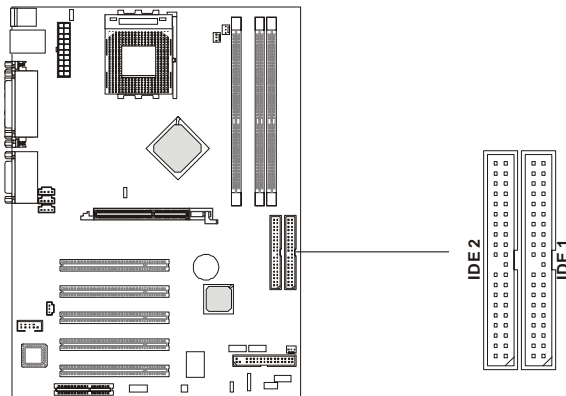

IDE1 (Primary IDE Connector)

The first hard drive should always be connected to IDE1. IDE1 can connect a Master and a Slave drive. You must configure second hard drive to Slave mode by setting the jumper accordingly.

IDE2 (Secondary IDE Connector)

IDE2 can also connect a Master and a Slave drive.



TIP:

If you install two hard disks on cable, you must configure the second drive to Slave mode by setting its jumper. Refer to the hard disk documentation supplied by hard disk vendors for jumper setting instructions.

CD-In Connector: CD1

The connector is for CD-ROM audio connector.

Aux Line-In Connector: AUX1


The connector is for DVD add-on card with Line-in connector.

Modem-In Connector: MODEM1

The connector is for modem with internal audio connector.


SPDIF-Out Connector:JSP1

This connector is used to connect to the audio device with digital signal input.

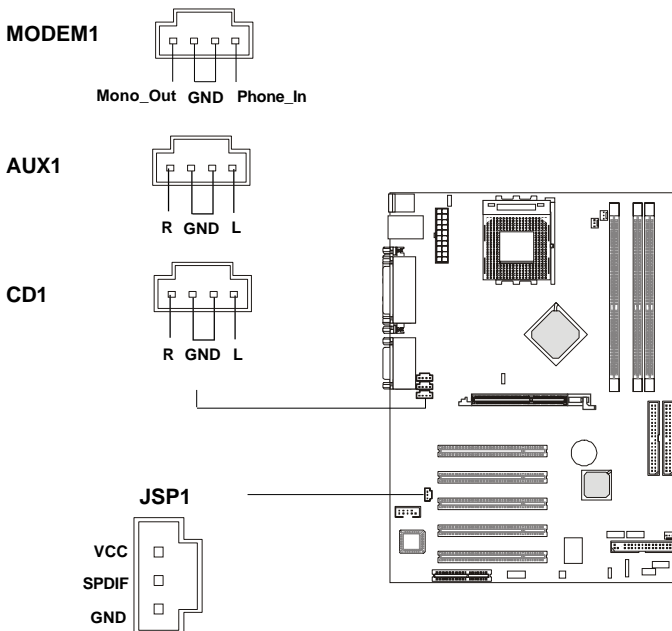

Fan Power Connectors: CPUFAN1/PSFAN1/SYSFAN1


The CPUFAN1 (processor fan), SYSFAN1 (system fan) & PSFAN1 (power supply fan) support system cooling fan with +12V. It supports three-pin head connector. When connecting the wire to the connectors, always take note that the red wire is the positive and should be connected to the +12V, the black wire is Ground and should be connected to GND. If the mainboard has a System Hardware Monitor chipset on-board, you must use a specially designed fan with speed sensor to take advantage of the CPU fan control.

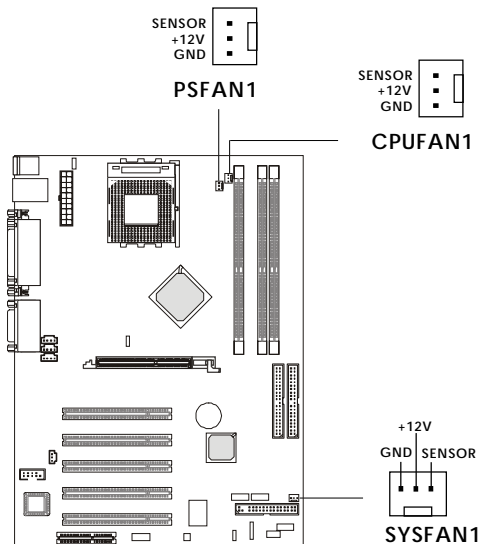

Note: Always consult the vendor for proper CPU cooling fan.

IrDA Infrared Module Header: IR1

You may use IR1 as the pin header to connect to an IrDA Infrared module. You must configure the setting through the BIOS setup to use the IR function.

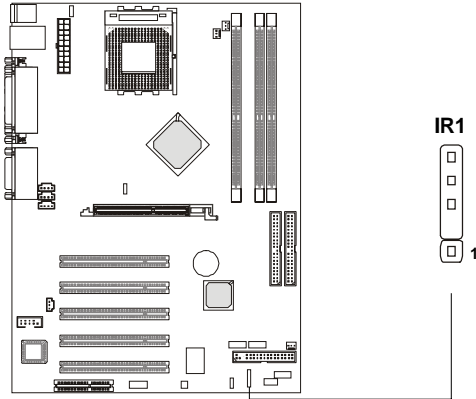


IR1 Pin Definition

PIN	SIGNAL
1	VCC
2	NC
3	IRRX
4	GND
5	IRTX

Case Connector: JFP2/Speaker Connector: MSIFP

The connector JFP2 is used to connect to the front panel switches and LEDs whereas MSIFP is for speaker connection.

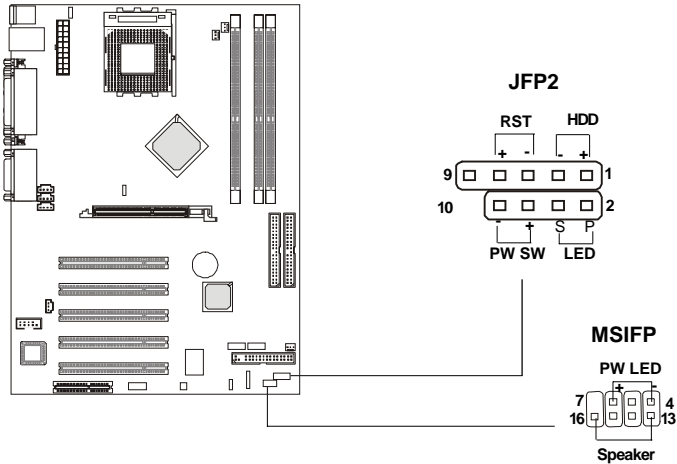

JFP2 Pin Definition

PIN	SIGNAL	DESCRIPTION
1	HD_LED_P	Hard disk LED pull-up
2	FP PWR/SLP	MSG LED pull-up
3	HD_LED_N	Hard disk active LED
4	FP PWR/SLP	MSG LED pull-up
5	RST_SW_N	Reset Switch low reference pull-down
6	PWR_SW_P	Power Switch high reference pull-up
7	RST_SW_P	Reset Switch high reference pull-up
8	PWR_SW_N	Power Switch low reference pull-down to GND
9	RSVD_DNU	Reserved. Do not use.
10	NC	No connection

MSIFP


If on-board Buzzer is available:

Short pin (14, 15) : On-board Buzzer Enabled

Open pin (14, 15) : On-board Buzzer Disabled

Front Panel Audio Connector: JAUDIO2

You can connect an optional audio connector to the JAUDIO2 front panel audio connector. The JAUDIO2 is compliant with the Intel Front Panel I/O Connectivity Design Guide.

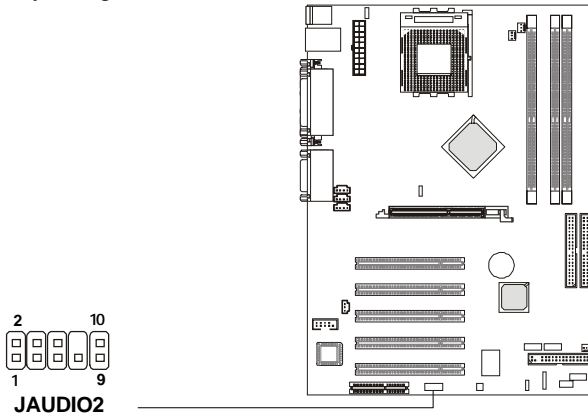


Pin Definition

PIN	SIGNAL	DESCRIPTION
1	AUD_MIC	Front panel microphone input signal
2	AUD_GND	Ground used by analog audio circuits
3	AUD_MIC_BIAS	Microphone power
4	AUD_VCC	Filtered +5V used by analog audio circuits
5	AUD_FPOUT_R	Right channel audio signal to front panel
6	AUD_RET_R	Right channel audio signal return from front panel
7	HP_ON	Reserved for future use to control headphone amplifier
8	KEY	No pin
9	AUD_FPOUT_L	Left channel audio signal to front panel
10	AUD_RET_L	Left channel audio signal return from front panel



Note:

1. If you don't want to connect to the front audio header, pins 5 and 6, 9 and 10 have to be shorted by jumper caps in order to have signal output directed to the rear audio ports.
2. Disconnect the rear speakers before using the front earphone jack.

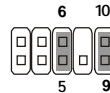


Jumpers

The motherboard provides one jumper for you to set the computer's function. This section will explain how to change your motherboard's function through the use of the jumper.

Clear CMOS Jumper: JBAT1

There is a CMOS RAM on board that has a power supply from external battery to keep the data of system configuration. With the CMOS RAM, the system can automatically boot OS every time it is turned on. That battery has long life time for at least 5 years. If you want to clear the system configuration, use the JBAT1 (Clear CMOS Jumper) to clear data. Follow the instructions below to clear the data:

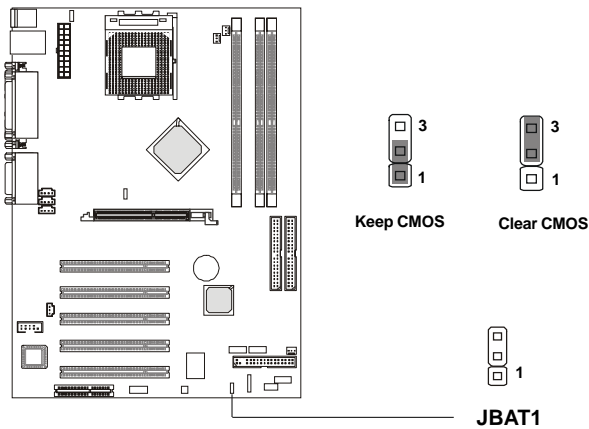


WARNING!

You can clear CMOS by shorting 2-3 pin while the system is off. Then return to 1-2 pin position. Avoid clearing the CMOS while the system is on; it will damage the mainboard.


FSB Mode Jumper: SW2

This jumper allows you to set the CPU FSB mode.

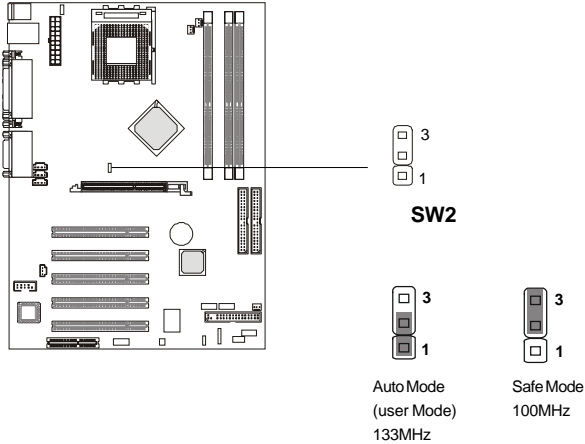

Audio Control Jumper: JA1


This jumper is used to control the audio interface. The factory default is set to short connected. Please do not change the default setting to ensure proper audio outputs.

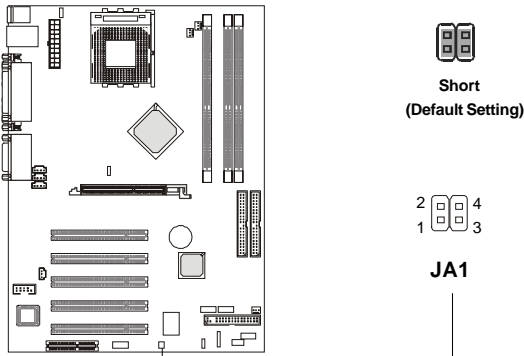

Keyboard Wake-up Jumper: JKBV1

The JKBV1 jumper is used to set the PS/2 keyboard/mouse and **Rear USB** wake-up function. To use the function, you should also go to BIOS to enable the PS/2 keyboard/mouse & USB wake-up (power on) function.

Please note that once the ATX Power Supply cord was unplugged, the keyboard wake-up password will be cleared. Reset the keyboard password to restart the keyboard wake-up function.

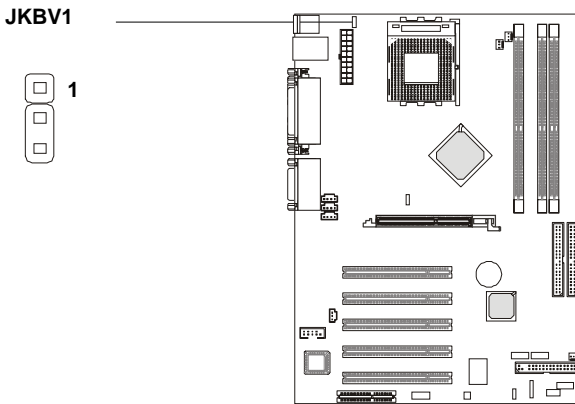

5V Standby

Enable Keyboard Power On function



VCC 5V (Default)


Disable Keyboard Power On Function



Note: To enable this function, you need a power supply that provides enough power for this feature. (Power Supply with 750mA 5V Standby)

Slots

The motherboard provides five 32-bit Master PCI bus slots, one AGP slot and one CNR slot.

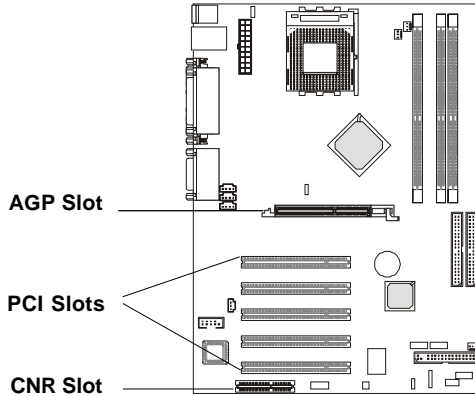

AGP (Accelerated Graphics Port) Slot

The AGP slot allows you to insert the AGP graphics card. AGP is an interface specification designed for the throughput demands of 3D graphics. It introduces a 66MHz, 32-bit channel for the graphics controller to directly access main memory and provides three levels of throughputs: 1x (266Mbps), 2x (533Mbps) and 4x (1.07Gbps).

Please note that the AGP slot does not support 3.3V AGP card. Use of 3.3V AGP card may cause damages to the mainboard. To avoid the risk of causing permanent damages to the mainboard, the AGP slot is protected with MSI electrical routing device. If users have inserted a 3.3V AGP card into the slot, the MSI routing device will disable the computer's boot-up system. Remove the 3.3V AGP card and the boot-up system will return to normal.



WARNING!

*The AGP slot **DOES NOT support 3.3V AGP card**. Use of 3.3V AGP card may cause damages to the mainboard. To identify the spec of your AGP card, refer to the documentation supplied with the AGP card or check the view of its contact pins (golden fingers) before you install it.*



Attention!

DO NOT use the following 3.3V AGP cards which would cause damages to the mainboard. The following list is subject to change without prior notice.

Model	AGP Chip (3.3V)
ATI Xpert2000	3D RAGE 128VR
ATI Rage Fury Maxx	3D RAGE 128 Pro
Diamond Monster Fusion	3DFX VooDoo Banshee
Hercules KYRO II 4500	
Leadtek Winfast VR300	SiS300
Matrox Millennium G400	G4+MDHA32G
STB 3Dfx VooDoo3 3500TV	3Dfx VooDoo 3500TV

PCI Slots

Five PCI slots allow you to insert the expansion cards to meet your needs. When adding or removing expansion cards, make sure that you unplug the power supply first. Meanwhile, read the documentation for the expansion card to make any necessary hardware or software settings for the expansion card, such as jumpers, switches or BIOS configuration.

CNR (Communication Network Riser)

The CNR slot allows you to insert the CNR expansion cards. CNR is a specially designed network, audio, or modem riser card for ATX family motherboards. Its main processing is done through software and controlled by the motherboard's chipset.

PCI Interrupt Request Routing

The IRQ, abbreviation of interrupt request line and pronounced I-R-Q, are hardware lines over which devices can send interrupt signals to the microprocessor. The PCI IRQ pins are typically connected to the PCI bus INT A# ~ INT D# pins as follows:

Hardware Setup

	Order 1	Order 2	Order 3	Order 4
PCI Slot 1	INT A#	INT B#	INT C#	INT D#
PCI Slot 2	INT B#	INT C#	INT D#	INT A#
PCI Slot 3	INT C#	INT D#	INT A#	INT B#
PCI Slot 4	INT D#	INT A#	INT B#	INT C#
PCI Slot 5	INT A#	INT B#	INT C#	INT D#

AWARD BIOS Setup **3**

This chapter provides information on the BIOS Setup program and allows you to configure the system for optimum use.

You may need to run the Setup program when:

- An error message appears on the screen during the system booting up, and requests you to run SETUP.
- You want to change the default settings for customized features.

TOPICS

<i>Entering Setup</i>	3-2
<i>The Main Menu</i>	3-4
<i>Standard CMOS Features</i>	3-6
<i>Advanced BIOS Features</i>	3-9
<i>Advanced Chipset Features</i>	3-13
<i>Integrated Peripherals</i>	3-15
<i>Power Management Setup</i>	3-20
<i>PnP/PCI Configurations</i>	3-24
<i>PC Health Status</i>	3-26
<i>Frequency/Voltage Control</i>	3-28
<i>HighPerformance/BIOS Setup Defaults</i>	3-29
<i>Set Supervisor/User Password</i>	3-30

Chapter 3

Entering Setup















Turn on the computer. When the below message appears briefly at the bottom of the screen during the POST (Power On Self Test), press <Delete> key or simultaneously press <Ctrl>, <Alt> and <Esc> to enter the SETUP program.

TO ENTER SETUP BEFORE BOOT, PRESS <CTRL-ALT-ESC>

If the message disappears before you respond and you still want to enter SETUP, restart the system by turning off then on the power or pressing the Reset button to try again. You may also restart by simultaneously pressing <Ctrl>, <Alt>, and <Delete> keys.

Control Keys

After entering the BIOS setup program, you can use the keyboard to navigate through the setup menus and change the settings. A brief description of keyboard usage is listed below:

Key(s)	Function
 	Move to the previous/next item
 	Move to the item in the left/right hand
  or  	Increase/decrease the numeric value or make changes
	Select the item
	Jump to the Exit menu or return to the Main menu from a sub-menu
	General help
	Restore the previous CMOS value from CMOS
	Load BIOS Setup defaults
	Save all the CMOS changes and exit

Getting Help

Main Menu

The Main menu lists the setup functions you can make changes to. You can use the control keys (↑, ↓) to select the item. The on-line description of the highlighted setup function is displayed at the bottom of the screen.

Sub-Menu

If you find a right pointer symbol (as shown as below) appears to the left of certain fields, which means a sub-menu can be launched from this field. A sub-menu contains additional options for a field parameter. You can use control keys (↑, ↓) to highlight the field and press <Enter> to call up the sub-menu. Then you can use the control keys to enter values and move from field to field within a sub-menu. If you want to return to the main menu, press the <Esc >.



General Help <F1>

The BIOS setup program provides a General Help screen. You can call up this screen from any menu by simply pressing <F1>. The Help screen lists the appropriate keys to use and the possible selections for the highlighted item. Press <Esc> to exit the Help screen.


Default Settings

The BIOS setup program contains two kinds of default settings: the High Performance and BIOS Setup defaults. The High Performance defaults provide the best system performance but may affect the system stability.

Setup Menus

Main Menu

Once you enter Award® BIOS CMOS Setup Utility, the Main Menu will appear on the screen. The Main Menu allows you to select from twelve setup functions and two exit choices. Use arrow keys to select among the items and press <Enter> to enter the sub-menu.

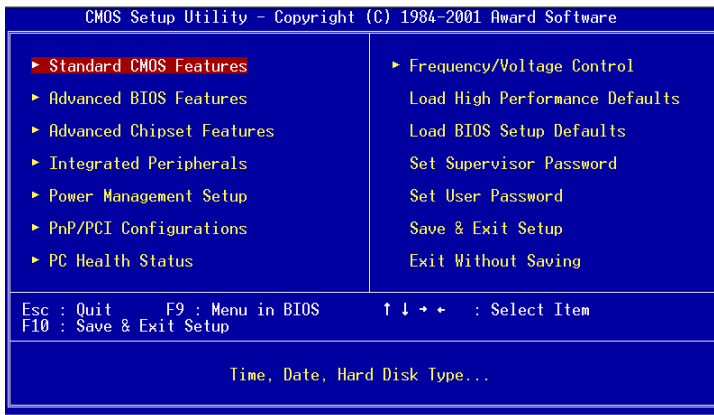

Standard CMOS Features

Use this menu for basic system configurations.

Advanced BIOS Features

Use this menu to set the items of Award special enhanced features.

Advanced Chipset Features

Use this menu to change the values in the chipset registers and optimize your system's performance.

Integrated Peripherals

Use this menu to specify your settings of integrated peripherals.

Power Management Setup

Use this menu to specify your settings of power management.

PnP/PCI Configurations

This entry appears if your system supports PnP/PCI.

PC Health Status

This entry shows your PC health status.

Frequency/Voltage Control

Use this menu to specify your settings of frequency/voltage control.

Load BIOS SetupDefaults

Use this menu to load the BIOS default values for the most stable system performance.

Load High Performance Defaults

Use this menu to load the BIOS default values that are factory settings for optimal system performance.

Set Supervisor Password


Use this menu to set Supervisor Password.

Set User Password

Use this menu to set User Password.

Standard CMOS Features

The items in Standard CMOS Features menu are divided into 13 categories. Each category includes none, one or more than one setup items. Use the arrow keys to highlight the item and then use the <PgUp> or <PgDn> keys to select the value you want in each item.

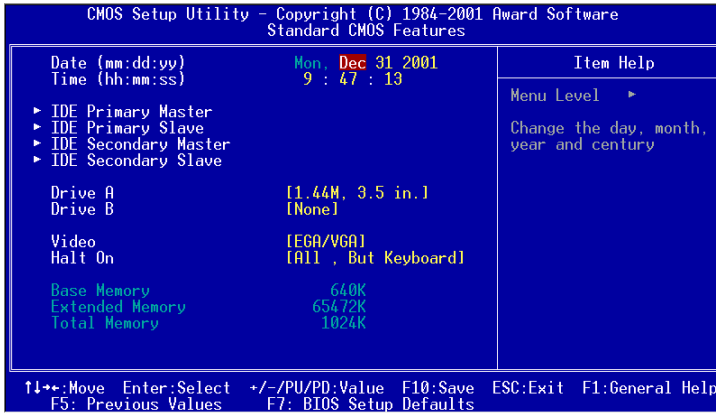

Date(mm:dd:yy)

This item allows you to set the system to the date that you specify (usually the current date). The format is <day> <month> <date> <year>.

Day Day of the week, from Sun. to Sat., determined by

BIOS (read only).

Month The month from Jan. through Dec.

Date The date from 1 to 31 can be keyed by numeric function keys.


Year The year, depends on the year of the BIOS.

Time (hh:mm:ss)

This item allows you to set the system to the time that you specify (usually the current time). The time format is <hour> <minute> <second>.

IDE Primary/Secondary Master/Slave

Press PgUp/<+> or PgDn/<-> to select the hard disk drive category. The specification of hard disk drive will show on the right hand according to your selection. You can press <Enter> to enter the sub-menu. The sub-menu will appear as the following example:

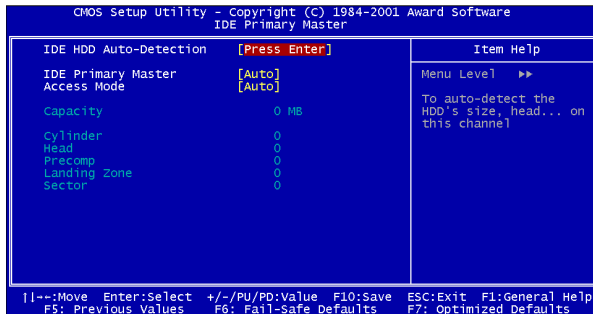

<i>Access Mode</i>	The settings are CHS,LBA, Large, and Auto
<i>Capacity</i>	The formatted size of the storage device
<i>Cylinder</i>	Number of cylinders
<i>Head</i>	Number of heads
<i>Precomp</i>	Write precompensation
<i>Landing Zone</i>	Cylinder location of the landing zone
<i>Sector</i>	Number of sectors

Drive A/B

The two items allow you to set the type of floppy drivers installed. Available options are [None], [360K, 5.25 in], [1.2M, 5.25 in], [720k, 3.5 in], [1.44M, 3.5in], and [2.88M, 3.5in].

Video

This item allows you to set the type of video card. Available options are [EGA/VGA], [CGA40], [CGA80], and [MONO].

Chapter 3

Halt on


This item allows you to set the type of errors that will cause system halt on. Available options are [All Errors], [No Errors], [All, But Keyboard], [All, But Diskette], and [All, But Disk/Key].

<i>All Errors</i>	The system will halt on and display the error message if any error happens.
<i>No Errors</i>	The system will not halt on no matter any error happens.
<i>All, But Keyboard</i>	The system will halt on if any error happens. But the system will not halt on if the keyboard function is not normal.
<i>All, But Diskette</i>	The system will halt on if any error happens. But the system will not halt on if the disk drive function is not normal.
<i>All, But Disk/Key</i>	The system will halt on if any error happens. But the system will not halt on if the disk drive and keyboard function is not normal.

Base/Extended/Total Memory

The three items show the memory status of your system (read only).

Advanced BIOS Features

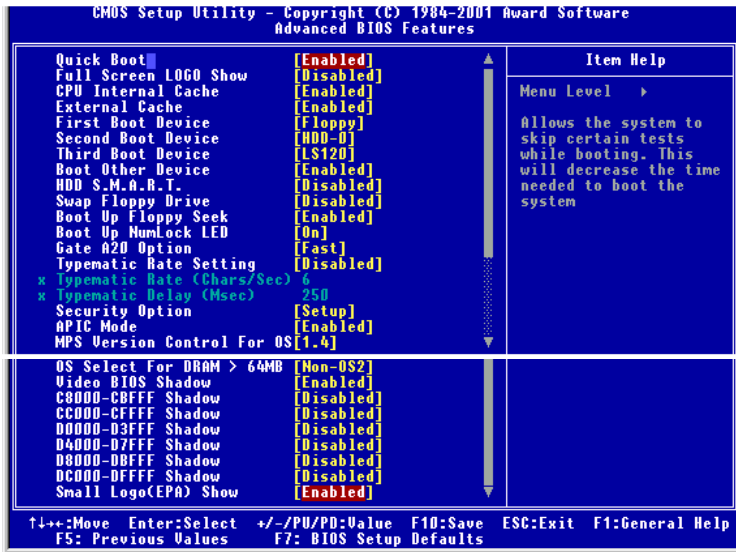

Quick Boot

The option speeds up Power On Self Test (POST) after you power on the computer. When setting the item to *Enabled*, BIOS will shorten or skip some check items during POST. Settings: *Enabled* and *Disabled*.

Full Screen Logo Show

This item allows you to enable or disable the full screen Logo show capability. Available options are [Disabled] and [Enabled].

CPU Internal Cache

Cache memory is additional memory that is much faster than the system memory. This item allows you to enable or disable the level 1 (L1) cache. The internal cache is built in the processor. Available options are [Disabled] and [Enabled].

External Cache

This item allows you to enable or disable the level 2 (L2) cache. Available options are [Disabled] and [Enabled].

Chapter 3

Quick Power On Self Test

This item allows you to speed up Power On Self Test (POST) after you power on the computer. If this is set to [Enabled], BIOS will shorten or skip some check items during POST. Available options are [Disabled] and [Enabled].

First/Second/Third Boot Device

These three items allow you to set the sequence of boot device from that the BIOS attempts to load the operating system. Available options are [Floppy], [LS120], [HDD-0], [SCSI], [CDROM], [HDD-1], [HDD-2], [HDD-3], [ZIP100], [LAN], and [Disabled].

Boot Other Device

This item allows the system to try to boot from other device if the system fails to boot from the 1st/2nd/3rd boot device. Available options are [Disabled] and [Enabled].

HDDS.M.A.R.T.

This allows you to activate the S.M.A.R.T. (Self-Monitoring Analysis & Reporting Technology) capability for the hard disks. S.M.A.R.T is a utility that monitors your disk status to predict hard disk failure. This gives you an opportunity to move data from a hard disk that is going to fail to a safe place before the hard disk becomes offline. Settings: *Enabled* and *Disabled*.

Swap Floppy Drive

This item allows you to choose from the default of [Disabled] or choose [Enabled] to switch the floppy disk drives between being designated as A and B. Available options are [Disabled] and [Enabled].

Boot Up Floppy Seek

This function allows the system to check if floppy installed or uninstalled when booting up the computer. Available options are [Disabled] and [Enabled].

Boot Up Num-Lock LED

This item allows you to set the NumLock status when you boot up your computer. When you choose from the default of [On], the keypad is numeric

keys; when you choose [Off], the keypad is arrow keys. Available options are [On] and [Off].

Gate A20 Option

This allows you to set the Gate A20 status. When set to [Fast], Gate A20 is controlled by chipset. When set to [Normal], Gate A20 is controlled by a specific pin from the keyboard controller. Available options are [Fast] and [Normal].

Typematic Rate Setting

This item allows you to set the keystrokes repeat rate determined by keyboard controller. When set to [Enabled], the following two items **Typematic Rate** and **Typematic Delay** can be selected. Available options are [Disabled] and [Enabled].

Typematic Rate (Chars/Sec)

This item allows you to set the number of times a second to repeat a keystroke when you hold the key down. Available options are [6], [8], [10], [12], [15], [20], [24], and [30]. Default value is [6].

Typematic Delay (Msec)

This item allows you to set the delay time before the key begins to repeat the keystroke while holding down the key. Available options are [250], [500], [750], and [1000]. Default value is [250].

Security Option

This item allows you to limit access to the system and Setup program, or just to Setup program. When set to [Setup], the system will boot, but access to Setup program will be denied if the correct password is not entered at the prompt. When you choose [System], the system will not boot and access to Setup program will be denied if the correct password is not entered at the prompt. Available options are [Setup] and [System].

APICMode

This item is used to enable or disable the APIC (Advanced Programmable Interrupt Controller). Due to compliance to PC2001 design guide, the system is able to run in APIC mode. Enabling APIC mode will expand available IRQs resources for the system. Available options are [Enabled] and [Disabled].

Chapter 3

MPS Version Control For OS

This item allows you to select which MPS (Multi-Processor Specification) version to be used for the operating system. You need to select the MPS version supported by your operating system. To find out which version to use, consult the vendor of your operating system. Available options are [1.4] and [1.1].

OS Select For DRAM > 64MB

This item is set for the users running OS/2® operating system. When set to [Non-OS2], you can not run the OS/2® operating system when DRAM installed is larger than 64 MB. When set to [OS2], it is possible. Available options are [Non-OS2] and [OS2].

Video BIOS Shadow

This item allows you to increase the video performance by caching the data from video ROM to Shadow RAM. When set to [Enabled], the system obtains better video performance but, at this time, any program attempts to write to this memory area will cause a system error. Available options are [Disabled] and [Enabled].

C8000-CBFFF/CC000-CFFFF/D0000-D3FFF/D4000-D7FFF/D8000-DBFFF/DC000-DFFFFShadow


These items specify whether the contents of the adapter ROM named in the items will be copied into RAM to improve the performance of ROM firmware for adapters. You need to know the address of each adapter ROM occupies to shadow (copy) it into the correct area of RAM. Available options are [Disabled] and [Enabled].

Small Logo (EPA) Show

This item enables you to show the EPA logo (brand specific graphics) on the bootup screen. Settings are:

- | | |
|----------|---|
| Disabled | Shows the normal POST screen at boot. |
| Enabled | Shows a still image (EPA logo) on the screen at boot. |

Advanced Chipset Features

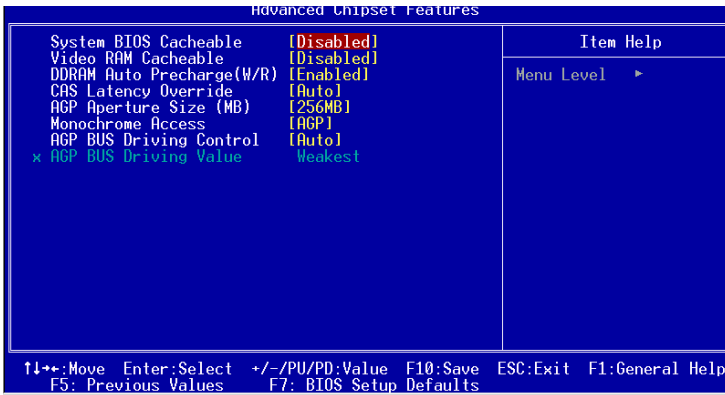

Note: Change these settings only if you are familiar with the chipset

System BIOS Cacheable

Selecting [Enabled] allows caching of the system BIOS ROM at F0000h-FFFFFh, resulting in better system performance. However, if any program writes to this memory area, a system error may result. Available options are [Enabled] and [Disabled].

Video RAM Cacheable

Selecting [Enabled] allows caching of the video RAM, resulting in better system performance. However, if any program writes to this memory area, a system error may result. Available options are [Enabled] and [Disabled].

DDRAM Auto Precharge (W/R)

Auto Precharge is a SDRAM feature that allows the memory to close a page (bits along one row) automatically at the end of the burst. You can enable the Auto Precharge function of the installed DDR SDRAM to provide a self-timed row precharge for each burst access. Available options are [Enabled] and [Disabled].

CAS Latency Override

This allows you to set the function of CAS Latency Override. Available options are [2 clocks], [2.5 clocks], [3 clocks] and [Auto].

Chapter 3

AGP Aperture Size (MB)

This setting controls just how much system RAM can be allocated to AGP for video purposes. The aperture is a portion of the PCI memory address range dedicated to graphics memory address space. Host cycles that hit the aperture range are forwarded to the AGP without any translation. The option allows the selection of an aperture size of 32MB, 64MB, 128MB, 256MB and 512MB.

Monochrome Access

This allows you to control when MDA (Monochrome Display Adapter) accesses are sent to the AGP device or to PCI bus. Available options are [AGP] and [PCI].


AGP Bus Driving Control

This filed is used to adjust the AGP driving force. Selecting [Manual] allows you to select an AGP driving force in **AGP Bus Driving Value**. It is strongly suggested to select [Auto] to avoid causing any system error.

AGP Bus Driving Value


This item specifies an AGP bus driving value. Available options are [Weakest], [Medium], and [Strongest].

Integrated Peripherals

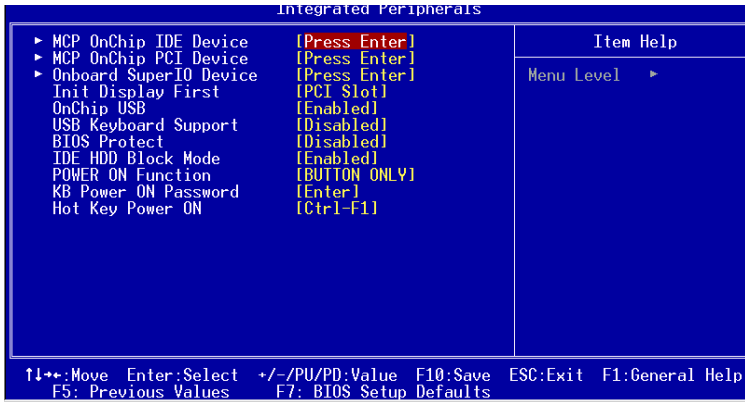

MCP OnChip IDE Device

Press <Enter> to enter the sub-menu, which contains the following items for advanced control:

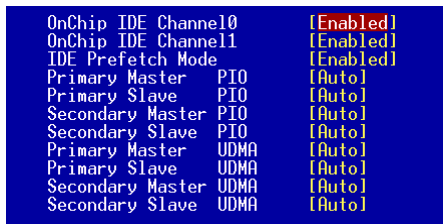

OnChip IDE Channel0/1

The integrated peripheral controller contains an IDE interface with support for two IDE channels. Choose [Enabled] to activate each channel separately.

IDE Prefetch Mode

The onboard IDE drive interfaces supports prefetching, for faster drive accesses. Set to [Disabled] if your primary and/or secondary add-in IDE interface does not support prefetching.

Chapter 3

Primary/Secondary Master/Slave PIO


The four fields allow you to set a PIO (Programmed Input/Output) mode for each of the four IDE devices that the onboard IDE interface supports. Modes 0~4 provide increased performance. In Auto mode, BIOS automatically determines the best mode for each IDE device.

Primary/Secondary Master/Slave UDMA

Ultra DMA implementation is possible only if your IDE device supports it and your operating environment contains a DMA driver. If both your hard drive and software support Ultra DMA, select [Auto] to enable BIOS support.

MCP OnChip PCI Device

Press <Enter> to enter the sub-menu, which contains the following items for advanced control:

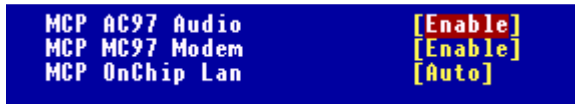

MCP AC97 Audio

This item allows you to enable/disable the MCP chipset's feature to support AC97 Audio.

MCP MC97 Modem


This item allows you to enable/disable the MCP chipset's feature to support MC97 Modem.

MCP OnChip Lan

This item allows you to enable/disable the onboard LAN function.

Onboard SuperIO Device

Press <Enter> to enter the sub-menu, which contains the following items for advanced control:

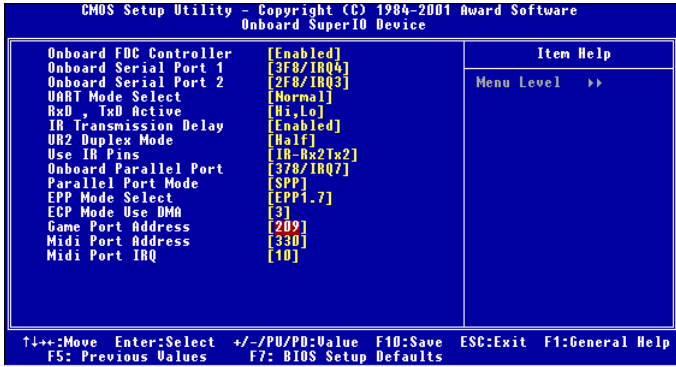

Onboard FDC Controller

Select Enabled if your system has a floppy disk controller (FDD) installed on the system board and you wish to use it. If you install add-on FDC or the system has no floppy drive, select Disabled in this field. Available options are [Enabled] and [Disabled].

Onboard Serial Port 1/Onboard Serial Port 2

Select an address and corresponding interrupt for the first and second serial ports. Available options are [3F8/IRQ4], [2E8/IRQ3], [3E8/IRQ4], [2F8/IRQ3], [Disabled], and [Auto].

UART Mode Select

This item allows you to determine which InfraRed(IR) function of the onboard I/O chip, this functions uses.

RxD, TxD Active

This item allows you to determine the active of RxD, TxD. Available options are [Hi,Hi], [Lo,Lo], [Lo,Hi], and [Hi,Lo].

IR Transmission Delay

This item allows you to enable/disable the IR transmission delay. Available options are [Enabled] and [Disabled].

Chapter 3

UR2 Duplex Mode

This item allows you to select the IR half/full duplex function. Available options are [Half] and [Full].

Use IR Pins

Consult your IR peripheral documentation to select the correct setting of the TxD and RxD signals.

Onboard Parallel Port

Select a logical LPT port address and corresponding interrupt for the physical parallel port.

Parallel Port Mode

The item allows you to select the operating mode for the parallel port. Available options are [SPP], [EPP], [ECP], and [ECP+EPP].

EPP Mode Select

The item allows you to select the EPP version by the parallel port when the port is set to [EPP] or [ECP+EPP] mode. Available options are [EPP1.7] and [EPP1.9].

ECP Mode Use DMA

The item automatically specifies an DMA channel 1 or 3 for the parallel port when it is set to [EPP] or [ECP+EPP] mode.

Game Port Address

The items disable or assign the address of the Game port.

Midi Port Address

The items disable or assign the address of the Midi port.

Midi Port IRQ

The item specifies an IRQ for the Midi port.

Init Display First

Initialize the AGP video display before initializing any other display device on the system. Thus the AGP display becomes the primary display. Available options are [PCI slot] and [AGP].

OnChip USB

Select [Enabled] if your system contains a Universal Serial Bus (USB) controller and you have USB peripherals. Available options are [Enabled] and [Disabled].

USB Keyboard Support

Select [Enabled] if your system contains a Universal Serial Bus (USB) controller and you have a USB keyboard. Available options are [Enabled] and [Disabled].

BIOS Protect

This function protects the BIOS from accidental corruption by unauthorized users or computer viruses. When set to [Enabled], the BIOS data cannot be changed when attempting to update the BIOS with a Flash utility. To successfully update the BIOS, you'll need to disable this BIOS protection function.

IDE HDD Block Mode

Block mode is also called block transfer, multiple commands, or multiple sector read/write. If your IDE hard drive supports block mode (most new drives do), select Enabled for automatic detection of the optimal number of block read/writes per sector the drive can support. Available options are [Enabled] and [Disabled].

POWER ON Function

This controls how the PS/2 mouse or keyboard can power on the system. Available settings are [Password], [Hot KEY], [BUTTON ONLY] and [Keyboard 98].

KB Power ON Password


If POWER ON Function is set to [Password], then you can set a password in the field for the PS/2 keyboard to power on the system.

Hot Key Power ON

If POWER ON Function is set to [Hot KEY], you can assign a hot key combination in the field for the PS/2 keyboard to power on the system. Settings: [Ctrl-F1] through [Ctrl-F12].

Power Management Setup

The Power Management Setup allows you to configure your system to most effectively save energy while operating in a manner consistent with your own style of computer use.

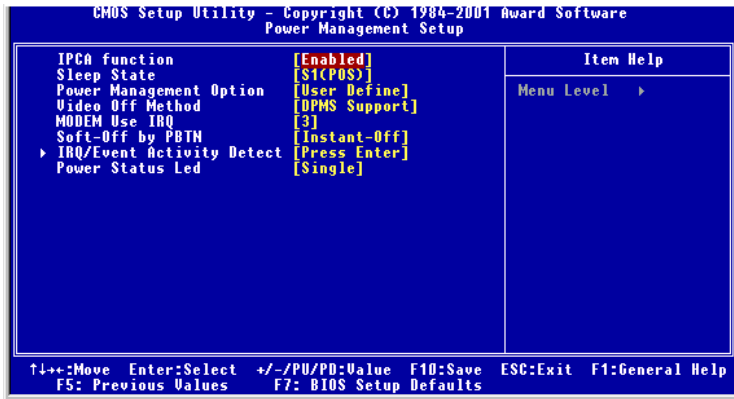

IPCA Function

This item allows you to set ACPI (Advanced Configuration and Power Management) function. Available options are [Enabled] and [Disabled].

Sleep State

This item specifies the power saving modes for ACPI function. Available options are:

S1(POS) The S1 state is low power state. In this state, no system context (CPU or chipset) is lost and the hardware maintains all system context.

S3(STR) The S3 state is a lower power state where the information of system configuration and open applications/files is saved to main memory that remains power while most other hardware components turn off to save energy. The information stored in memory will be used to restore the system when an “wake up” event occurs.

Power Management Option

This category allows you to select the type (or degree) of power saving and is directly related to the following items: **Standby Mode** and **HDD Power Down**. There are three selections for Power Management, two of which have fixed mode settings:

<i>Min Power Saving</i>	Minimum power management. Standby Mode = 1 Hour; HDD Power Down = 15 min.
<i>Max Power Saving</i>	Maximum power management. Standby Mode = 30 Sec; HDD Power Down = 1 min.
<i>User Defined</i>	Allows you to set the values of each mode individually.

Video Off Method

This determines the manner in which the monitor is blanked.

<i>V/H SYNC+Blank</i>	This selection will cause the system to turn off the vertical and horizontal synchronization ports and write blanks to the video buffer.
<i>Blank Screen</i>	This option only writes blanks to the video buffer.
<i>DPMS</i>	Initial display power management signaling.

Modem Use IRQ

Name the interrupt request (IRQ) line assigned to the modem (if any) on your system. Activity of the selected IRQ always awakens the system. Settings are 3, 4, 5, 7, 9, 10, 11 and NA.

Soft-Off by RBTN

This item allows you to configure the power button as a normal power ON/OFF button or a soft-off button. Settings are:


<i>Instant-Off</i>	The power button functions as a normal power ON/OFF button.
<i>Delay 4 Sec.</i>	Pressing the power button for more than 4 seconds will place the system in a very low power usage state (Soft-Off state), with only

Chapter 3

enough circuitry receiving power to detect power button activity or Wake Up On LAN/Ring activity.

IRQ/Event Activity Detect

Press <Enter> to enter the sub-menu and the following screen appears:

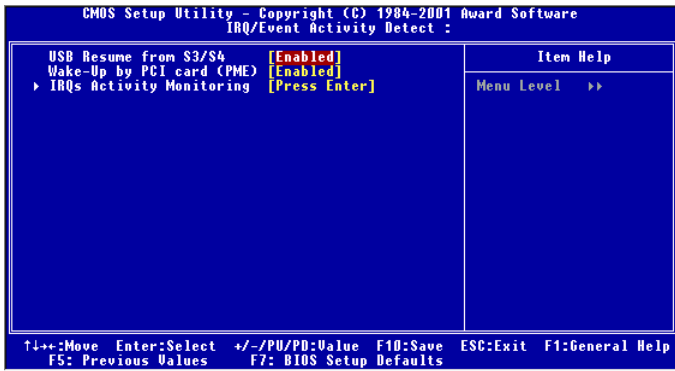

USB Resume from S3/S4


Allows the activity of USB device to wake up the system from S3 or S4 power saving modes. Settings are *Enabled* and *Disabled*.

Wake Up by PCI CARD (PME)


These items specify whether the system will be awakened from power saving modes (S1, S3, S4) when activity or input signal of the specified hardware peripheral or component is detected.

IRQs Activity Monitoring

Press <Enter> to enter the sub-menu. A similar screen to the following appears:

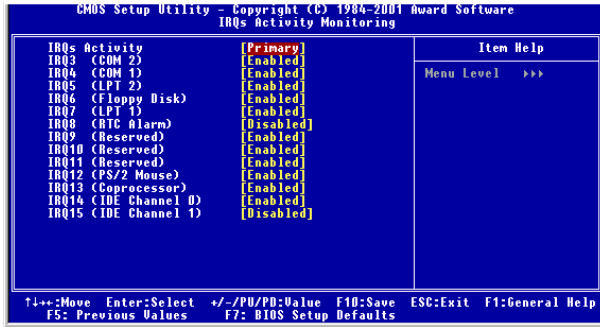

IRQ3 ~ IRQ15 enable or disable the monitoring of the specified IRQ line. If set to [Enabled], the activity of the specified IRQ line will prevent the system from entering power saving modes or awaken it from power saving modes.

 **Note:** *IRQ (Interrupt Request) lines are system resources allocated to I/O devices. When an I/O device needs to gain attention of the operating system, it signals this by causing an IRQ to occur. After receiving the signal, when the operating system is ready, the system will interrupt itself and perform the service required by the I/O device.*


Power Status LED

This item configures how the system uses power LED on the case to indicate the sleep/suspend state. Available options are:

- Single The Power LED turns off during the sleep/suspend mode.
- Dual The Power LED changes its color to indicate the suspend state.

PnP/PCI Configurations

This section describes the PCI bus system configuration. PCI (Personal Computer Interconnect) is a system which allows I/O devices to operate at speeds nearing the speed the CPU itself uses when communicating with its own special components. This section covers some very technical items and it is strongly recommended that only experienced users should make any changes to the default settings.

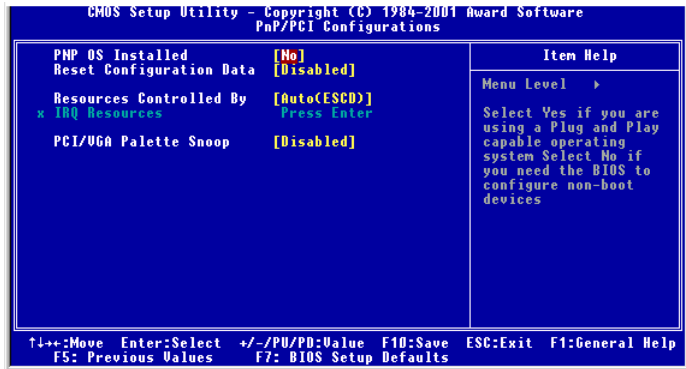

PNP OS Installed

When set to [Yes], BIOS will only initialize the PnP cards used for booting (VGA, IDE, SCSI). The rest of the cards will be initialized by the PnP operating system like Windows 98. When set to [No], BIOS will initialize all the PnP cards. So, select [Yes] if your operating system is Plug & Play aware.

Reset Configuration Data

Normally, you leave this field [Disabled]. Select [Enabled] to reset Extended System Configuration Data (ESCD) when you exit Setup if you have installed a new add-on and the system reconfiguration has caused such a serious conflict that the operating system can not boot. Available options are [Enabled] and [Disabled].

Resources Controlled By

The Award Plug and Play BIOS has the capacity to automatically configure all of the boot and Plug and Play compatible devices. However, this capability means absolutely nothing unless you are using a Plug and Play operating

system such as Windows 98. When set to [manual], you can choose specific resources by going into each of the sub menu that follows this field (a sub-menu is preceded by a “8”). Available options are [Auto(ESCD)] and [Manual]. (If you choose *Auto*, the IRQ Resources will not have function.)

IRQ Resources


This item is adjustable only when **Resources Controlled By** is set to [Manual]. Press [Enter] and you will enter the sub-menu of the items. This item lists IRQ 3/4/5/7/9/10/11/12/14/15 for users to set each IRQ a type depending on the type of device using the IRQ/DMA.

PCI/VGA Palette Snoop

When set to [Enabled], multiple VGA devices operating on different buses can handle data from the CPU on each set of palette registers on every video device. Bit 5 of the command register in the PCI device configuration space is the VGA Palette Snoop bit (0 is disabled). Available options are [Enabled] and [Disabled].

PC Health Status

This section helps you to get more information about your system including CPU temperature, FAN speed and voltages. It is recommended that you contact with your mainboard supplier to get proper value about your setting of the CPU temperature.

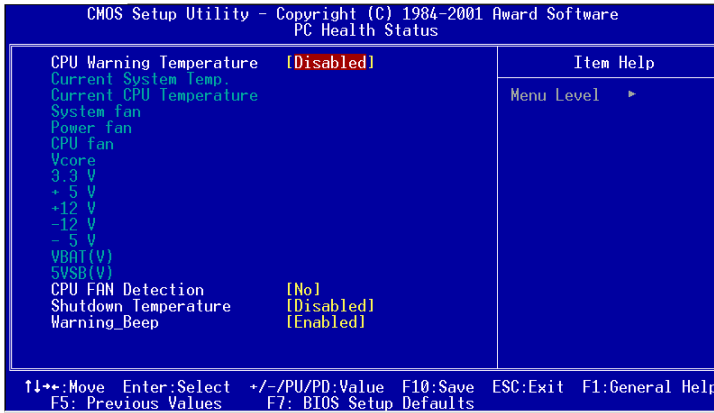

CPU Warning Temperature

Select the combination of lower and upper limits for the CPU temperature. If the CPU temperature extends beyond either limit, any warning mechanism programmed into your system will be activated. Available options are [50°C/122°F], [53°C/127°F], [56°C/133°F], [60°C/140°F], [63°C/145°F], [66°C/151°F], [70°C/158°F], and [Disabled].

Current SystemTemp./Current CPU Temperature/System fan/Power fan/CPU fan/Vcore(V)/+3.3V/+ 5V/+ 12V/- 12V/- 5V/VBAT(V)/5VSB(V)

These items display the current status of all of the monitored hardware devices and components such as CPU voltages, temperatures and all fans's speed.

CPU FAN Detection

Select [Yes] to detect the CPU FAN status. If the CPU FAN stops running, the system will beep and shows a warning message on the screen. Select [No] and the OS the will bypass the detection.

Shutdown Temperature

This item allows you to set the shutdown temperature level for the processor. When the processor reach the temperature you set, this will shutdown the system. This function only works in ACPI-aware OS (such as Windows 98/ME/2000). Available options are [80°C/176°F], [85°C/185°F], [90°C/194°F] and [Disabled].


Warning_Beep

This allows you to use the function of warning beep. Available options: [Disabled], [Enabled].

Chapter 3

Frequency/Voltage Control

This section is for setting CPU Frequency/Voltage Control.

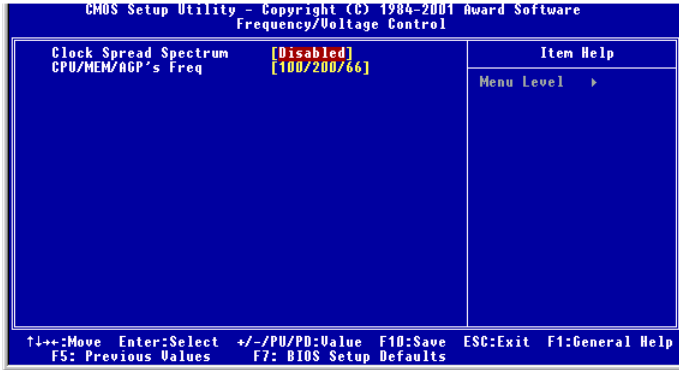

Clock Spread Spectrum

This item is used to enable or disable the clock generator's Spread Spectrum feature. When overclocking the processor, always set it to *Disabled*. Setting options: [0.5%], [1.00%], [2.00%] and [Disabled]

CPU/MEM/AGP's Freq

This item specifies the clock frequency of CPU host bus, DDR RAM bus, and AGP bus.

Load High Performance/BIOS Setup Defaults

The two options on the main menu allow users to restore all of the BIOS settings to the default High Performance or BIOS Setup values. The High Performance Defaults are the default values set by the mainboard manufacturer specifically for the optimal performance of the mainboard. The BIOS Setup Defaults are the default values set by the BIOS vendor for the stable system performance.

When you select Load High Performance Defaults, a message as below appears:



Load High Performance (Y/N)? N

Pressing Y loads the BIOS default values for the optimal system performance.

When you select Load BIOS Setup Defaults, a message as below appears:



Load BIOS Setup Defaults (Y/N)? N

Pressing Y loads the default factory settings for the most stable system performance.



WARNING!

*The option is for power or overclocking users only. Use of high performance defaults will tighten most timings to increase the system performance. Therefore, a high-end system configuration is a must, which means you need high-quality VGA adapter, RAM and so on. **We don't recommend that users should apply the high performance defaults in their regular systems.** Otherwise, the system may become unstable or even crash. If the system crashes or hangs after enabling the feature, please CLEAR CMOS DATA to resolve the problem. For more information, refer to "Clear CMOS Jumper:JBAT1" on page 2-19.*

Set Supervisor/User Password

When you select this function, a message as below will appear on the screen.



Enter Password:

Type the password (up to eight characters in length) and press <Enter>. The password typed now will clear any previously entered password from CMOS memory. You will be asked to confirm the password. Type the password again and press <Enter>. You may also press <Esc> to abort the selection and not enter a password.

To disable a password, just press <Enter> when you are prompted to enter the password. A message will confirm the password will be disabled. Once the password is disabled, the system will boot and you can enter Setup freely.

When a password has been enabled, you will be prompted to enter it every time you try to enter Setup. This prevents an unauthorized person from changing any part of your system configuration.

Additionally, when a password is enabled, you can also require the BIOS to request a password every time your system is rebooted. This would prevent unauthorized use of your computer.

You determine when the password is required within the BIOS Features Setup Menu and its Security option. If the Security option is set to “System”, the password will be required both at boot and at entry to Setup. If set to “Setup”, prompting only occurs when trying to enter Setup.

About Supervisor Password & User Password

Supervisor Password

Can enter and change the options of the setup menus.

User Password

Can only enter but do not have the right to change the options of the setup menus. When you select this function, the following message will appear at the center of the screen to assist you in creating a password.

Appendix A: DDR DIMM Configuration

Configuration Rules

Observe the following rules when configuring DDR DIMMs:

1. Follow correct DIMM installation order. DIMMs must be populated consecutively, in order, starting with the DIMM1 socket.
2. Do not populate DIMM3 socket with any dual load (dual bank) modules (for BIOS ver. 210 or later).

*Do not populate DIMM2 socket with any dual load (dual bank) modules (for BIOS ver. 200).

Note: Dual load refers to physical device beds on the data bus

Note: For best performance on 128bit system, we recommend you to use the same DDR DIMM for both slots.

Population Rules

Table 1. Memory Loads

Capacity	DIMM1	DIMM2	DIMM3
128MB	64MB - 1B or 2B	64MB - 1B or 2B	X
192MB	128MB - 1B or 2B	64MB - 1B or 2B	X
256MB	128MB - 1B or 2B	128MB - 1B or 2B	X
128MB - 1B or 2B	64MB - 1B or 2B	64MB - 1B	64MB - 1B
384MB	256MB - 1B or 2B	128MB - 1B or 2B	X
128MB - 1B or 2B	128MB - 1B or 2B	128MB - 1B	128MB - 1B
512MB	256MB - 1B or 2B	256MB - 1B or 2B	X
256MB - 1B or 2B	128MB - 1B or 2B	128MB - 1B	128MB - 1B
768MB	512MB - 1B or 2B	256MB - 1B or 2B	X
256MB - 1B or 2B	256MB - 1B or 2B	256MB - 1B	256MB - 1B
1GB	512MB - 1B or 2B	512MB - 1B or 2B	X
512MB - 1B or 2B	256MB - 1B or 2B	256MB - 1B	256MB - 1B
1.25GB	512MB - 1B or 2B	512MB - 1B or 2B	256MB - 1B
1.5GB	512MB - 1B or 2B	512MB - 1B or 2B	512MB - 1B

Appendix A

Note:

Memory loads must be distributed as provided in the Table 1. Not all possible combinations are listed in the table. Populate designs only with DIMMs that follow JEDEC standard 184-pin unbuffered non-ECC DDR DIMMs. DDR DIMMS with CAS LATENCY of 2.0 (PC2100A) or 2.5 (PC2100B) are supported.

Legend:

1B: A one bank (single load) module

2B: A two bank (dual load) module

64MB - 1B: 64MB DDR DIMM using 4 8Mx16 (128Mb) devices - ONE BANK

64MB - 2B: 64MB DDR DIMM using 8 4Mx16 (64Mb) devices - TWO BANKS 1

128MB - 1B: 128MB DDR DIMM using 8 16Mx8 (128Mb) devices - ONE BANK

128MB - 2B: 128MB DDR DIMM using 8 8Mx16 (128Mb) devices - TWO BANKS

256MB - 1B: 256MB DDR DIMM using 8 32Mx8 (256Mb) devices or 16 32Mx4
(128Mb) devices - ONE BANK 2

256MB - 2B: 256MB DDR DIMM using 16 16Mx8 (128Mb) devices – TWO BANKS

512MB - 1B: 512MB DDR DIMM using 16 64Mx4 (256Mb) devices – ONE BANK

512MB - 2B: 512MB DDR DIMM using 16 32Mx8 (256Mb) devices – TWO BANKS

X: DO NOT POPULATE

Notes:

1 64MB - 2B is an uncommon configuration and is included in the population matrix for completeness

2 256MB - 1B using 16 32Mx4 devices is an uncommon configuration and is included in the population matrix for completeness

3 512MB - 1B using 16 64Mx4 devices is an uncommon configuration and is included in the population matrix for completeness

Recommended DDR Devices

SECK4H280838B-TCBO 128MB PC2100

Hyundai HY5DU28822T-H 128MB PC2100

Winbond W942516AH-7 128MB PC2100

Micron MT46V16M8TG-75 128MB PC2100

Toshiba TC59WM807BFT-70 256MB PC2100

Winbond W942508AH-7 256MB PC2100

Micron MT46V16M8TG-75A 256MB PC2100

Appendix B: Installing nForce Core Drivers under Windows 98

This application note provides instructions to install the NVIDIA nForce core drivers (GART, Ethernet, Audio, Audio Utilities, SMBUS, and Memory Controller) under Windows 98. **Currently, the NVIDIA installer supports Windows XP, Windows 2000 and Windows ME.** Use the following procedure to **manually install all NVIDIA devices under Windows 98** until the release of windows 98 installer support.

TOPICS

<i>Installing GART Drivers</i>	<i>B-2</i>
<i>Installing the Audio Drivers</i>	<i>B-3</i>
<i>Installing Ethernet Drivers</i>	<i>B-4</i>
<i>Installing SMBus Drivers</i>	<i>B-5</i>
<i>Updating Memory Controller Drivers</i>	<i>B-6</i>

Installing GART Drivers

When a Windows 98 operating system is installed, there are a series of unknown devices in Windows 98 Device Manager. To install the nForce GART drivers, use the following procedure:

1. Extract the GART driver package to a temporary location. GART Manager is present in Device Manager under: PCI Standard Host CPU Bridge. Microsoft Generic Drivers are used until you upgrade with the proper GART drivers.
2. Go to the Device Manager
(START-->CONTROL PANEL-->SYSTEM-->DEVICE MANAGER)
3. Look for the following devices:
 - NVIDIA nForce GART Manager
 - PCI Standard Host CPU Bridge
 - PCI standard PCI-to-PCI bridge device
4. Update the drivers using the ones saved into the temporary location in step 1.
5. Restart your system.

Installing the Audio Drivers

Use the following procedure to install nForce Audio drivers:

1. Extract the Audio driver package to a temporary location.
Use the drivers from Audio Driver package to enumerate all unknown media class devices.
2. Go to the Device Manager
(START-->CONTROL PANEL-->SYSTEM-->DEVICE MANAGER)
3. Look for the following devices:
Unknown Drivers
 - NVIDIA Audio Codec Interface
 - NVIDIA Media Controller Processor*Sound, Video, and Game Controllers*
 - NVIDIA nForce Audio Codec Interface
 - NVIDIA nForce MCP Audio Processing Unit



Note: Various nForce Audio items under Sound, Video and Game Controllers will be replaced when the System Devices are updated.

4. Update the drivers using the ones saved into the temporary location in step 1.
5. Restart your system.

Installing Ethernet Drivers

Use the following procedure to install Ethernet drivers:

1. Extract the Ethernet driver package to a temporary location.
Use the drivers from the Ethernet Driver package to enumerate the unknown Ethernet Devices.
2. Go to the Device Manager
(START-->CONTROL PANEL-->SYSTEM-->DEVICE MANAGER)
3. Look for the following devices:
Unknown Drivers
 - NVIDIA Ethernet Device*Network Adapters*
 - NVIDIA nForce MCP Networking Adapter
4. Update the drivers using the ones saved into the temporary location in step 1.
5. Restart your system.

Installing SMBus Drivers

Use the following procedure to install SMBus drivers:

1. Extract the SMBus driver package to a temporary location.
SMBus needs to be enabled for DDC to function correctly and system management functions to be enabled.
2. Go to the Device Manager
(START-->CONTROL PANEL-->SYSTEM-->DEVICE MANAGER)
3. Go to **Unknown Devices / PCI System Management Bus**.
4. Update the drivers using the ones saved into the temporary location in step 1.
5. Restart your system.

Updating Memory Controller Drivers

1. Extract the files from the (os) \ memory directory of the driver package to a temporary location.
Microsoft Generic Drivers will be used. To replace the Microsoft drivers with NVIDIA drivers, continue with Step 2.



Note: Several instances of Memory Controller may be present in Device Manager under:

- Windows 9x/ME or Windows 2000/XP
- PCI Standard RAM Controller

2. Go to the Device Manager
(START-->CONTROL PANEL-->SYSTEM-->DEVICE MANAGER)
3. Look for the following devices:
System Devices
 - PCI Standard RAM Controller
 - NVIDIA nForce 415 Memory Controller
 - NVIDIA nForce 415 Memory Controller
4. Update *all* instances of these drivers using the ones saved into the temporary location in step 1.
5. Restart your system.



Note: It is important to restart your computer after all drivers are installed.

Glossary

ACPI (*Advanced Configuration & Power Interface*)

This power management specification enables the OS (operating system) to control the amount of power given to each device attached to the computer. Windows 98/98SE, Windows 2000 and Windows ME can fully support ACPI to allow users managing the system power flexibly.

AGP (*Accelerated Graphics Port*)

A new, high-speed graphics interface that based on PCI construction and designed especially for the throughput demands of 3-D graphics. AGP provides a direct channel (32-bit wide bus) between the display controller and main memory for high graphics quality and performance.

ATX

A modern shape and layout of mainboard that supersedes the widely-used Baby AT form factor. It improves many placement of components and makes a more efficient design.

BIOS (*basic input/output system*)

On PCs, an essential software that contains all the control code of input/output interface (such as keyboard, disk drives, etc.). It executes hardware test on booting the system, starts the OS, and provides an interface between the OS and the components. The BIOS is stored in a ROM chip.

Bus

A set of hardware lines within the computer system, through which the data is transferred among different components. In a PC, the term **bus** usually refers to a local bus that connects the internal components to the CPU and main memory.

Cache

A special memory subsystem that is used to speed up the data transfer. It stores the contents of frequently accessed RAM locations and the addresses where these data items are stored.

Chipset

A collection of integrated chips designed to perform one or more related functions. For

Glossary

example, a modem chipset contains all the primary circuits for transmitting and receiving data; a PC chipset provides the electronic interfaces between all subsystems.

CMOS (*complementary metal-oxide semiconductor*)

CMOS is a widely used type of semiconductor, which features high speed and low power consumption. PCs usually contain a small amount of battery-powered CMOS memory to retain the date, time, and system setup parameters.

COM

In MS-DOS system, the name of a serial communications port. DOS supports four serial ports. For example, if a modem is connected to one serial port and a serial mouse to another, they are identified as COM1 and COM2.

DIMM (*dual in-line memory module*)

A small circuit board that holds memory chips. A *SIMM* (*single in-line memory module*) has a 32-bit path to the memory chips whereas a DIMM has 64-bit path.

DRAM (*Dynamic RAM*)

A most common type of computer memory. It usually uses one transistor and a capacitor to represent a bit. As the development of technology, the memory type and specification used in computer becomes variety, such as SDRAM, DDR SDRAM, and RDRAM. For further instruction, please see the table below:

Dynamic RAM (DRAM) Memory Technologies					
Type	First Used	Clock Rate	Bus* Width	Peak Bandwidth	Volts
FPM (60,70ns)	1990	25MHz	64 bits	200 MBps	5v
EDO (50,60,70ns)	1994	40MHz	64 bits	320 MBps	5v
SDRAM (66MHz)	1996	66MHz	64 bits	528 MBps	3.3v
SDRAM (100MHz)	1998	100MHz	64 bits	800 MBps	3.3v
SDRAM (133MHz)	1999	133MHz	64 bits	1.1 GBps	3.3v
RDRAM (Direct Rambus)	1999	400MHz	16 bits	1.6 GBps	2.5v
DDR SDRAM (100MHz)	2000	100MHz	64 bits	1.6 GBps	2.5v
DDR SDRAM (133MHz)	2000	133MHz	64 bits	2.1 GBps	2.5v

* Memory channel width (64 bits started with 75MHz Pentium)

Source: Computer Desktop Encyclopedia

ECC Memory (*error correcting code memory*)

A type of memory that contains special circuitry for testing the accuracy of data and correcting the errors on the fly.

IDE (*Integrated Drive Electronics*)

A type of disk-drive interface widely used to connect hard disks, CD-ROMs and tape drives to a PC, in which the controller electronics is integrated into the drive itself, eliminating the need for a separate adapter card. The IDE interface is known as the ATA (AT Attachment) specification.

IEEE 1394

A new, high speed external bus standard, also known as *FireWire* or *iLink*, which supports data transfer rates of up to 400 Mbps for connecting up to 63 external devices.

IrDA (*Infrared Data Association*)

A group of device vendors, including computer, component and telecommunications, who have developed a standard for transmitting data via infrared light waves. This enables you to transfer data from one device to another without any cables.

LAN (*local area network*)

A computer network that covers a relatively smaller area, such as in a building or an enterprise. It is made up of servers, workstations, shared resources, a network operating system and a communications link. These individual PCs and devices on a LAN are known as “nodes”, and are connected by cables to access data and devices anywhere on the LAN, so that many users can share expensive devices and data.

LED (*light emitting diode*)

A semiconductor device that converts electrical energy into light. Since it lights up (usually red) when electricity is passed through it, it is usually used for the activity lights on computer’s component, such as disk drivers.

LPT (*line printer terminal*)

Logical device name for a line printer; a name reserved by the MS-DOS for up to three parallel printer ports: LPT1, LPT2, and LPT3. It is frequently used by the OS to identify a printer.

Glossary

PCI (*Peripheral Component Interconnect*)

A local bus standard developed by Intel that first appeared on PCs in late 1993. PCI provides “plug and play” capability and allows IRQs to be shared. The PCI controller can exchange data with the system's CPU either 32 bits or 64 bits at a time.

PnP (*Plug and Play*)

A set of specifications that allows a PC to configure itself automatically to work with peripherals. The user can “plug” in a peripheral device and “play” it without configuring the system manually. To implement this useful feature, both the BIOS that supports PnP and a PnP expansion card are required.

POST (*Power On Self Test*)

During booting up your system, the BIOS executes a series of diagnostic tests, include checking the RAM, the keyboard, the disk drives, etc., to see if they are properly connected and operating.

PS/2 Port

A type of port developed by IBM for connecting a mouse or keyboard to a PC. The PS/2 port supports a mini DIN plug containing just 6 pins. Most modern PCs equipped with PS/2 ports so that the special port can be used by another device, such as a modem.

USB (*universal serial bus*)

A hardware interface for low-speed peripherals such as the keyboard, mouse, joystick, etc. USB provides a maximum bandwidth of 12 Mbit/sec (Mbps) for connecting up to 127 peripheral devices to PC. USB features hot swap capability and multiple data streams, allows external devices to be plugged in and unplugged without turning the system off.

Virus

A program or a piece of code that infects computer files by inserting in those files copies of itself. The virus code is buried within an existing program, and is activated when that program is executed. All the viruses are man-made, and often have damaging side effects.