

USER'S MANUAL

ProX-1230

**VIA C3 Mini Board
With VGA/Sound/LAN**

Prox-1230 M2

ProX-1230
3.5" Embedded Board
With VGA / Sound / LAN

OPERATION MANUAL

COPYRIGHT NOTICE

This operation manual is meant to assist both Embedded Computer manufacturers and end-users in installing and setting up the system. The information contained in this document is subject to change without any prior notice.

This manual is copyrighted October 28, 2002. Revised Edition: Nov. 29, 2002. You may not reproduce or transmit in any form or by any means, electronic, or mechanical, including photocopying and recording.

ACKNOWLEDGEMENTS

All trademarks and registered trademarks mentioned herein are the property of their respective owners.

TABLE OF CONTENTS

CHAPTER 1 INTRODUCTION

1-1	About This Manual	1-2
1-2	System Specifications	1-3
1-3	Safety Precautions	1-6

CHAPTER 2 HARDWARE CONFIGURATION

2-1	Jumper & Connector Quick Reference Table	2-2
2-2	Component Locations	2-3
2-3	How to Set the Jumpers	2-4
2-4	COM Port Connector	2-6
2-5	RS232/422/485 (COM2) Selection	2-7
2-6	COM RI & Voltage Selection	2-8
2-7	RI Voltage Selection	2-9
2-8	Keyboard Connector	2-10
2-9	PS/2 Mouse Connector	2-10
2-10	KB/Y-cable Selection	2-11
2-11	Power LED Connector	2-11
2-12	Reset Connector	2-11
2-13	Hard Disk Drive LED Connector	2-12
2-14	External Speaker Connector	2-12
2-15	Power Button	2-12
2-16	Green Function Connector	2-13
2-17	SLPBTN Connector	2-13
2-18	IrDA Connector	2-13
2-19	VGA Connector	2-14
2-20	LVDS Connector	2-15
2-21	LVDS Panel Voltage Selection	2-16
2-22	Universal Serial Bus Connector	2-16
2-23	Floppy Disk Drive Connector	2-17
2-24	Hard Disk Drive Connector	2-18
2-25	Printer Connector	2-19
2-26	Reset/NMI/Clear Watchdog Selection	2-20
2-27	LAN Connector	2-20
2-28	ATX Power Connector	2-21
2-29	AT/ATX Power Selection	2-22
2-30	Sound Connector	2-23
2-31	Sound Selection	2-23

2-32	CD Audio-In Connector	2-24
2-33	Clear CMOS Selection	2-24
2-35	Memory Installation	2-25
2-36	CPU Ratio Frequency Connector	2-25

CHAPTER 3 SOFTWARE UTILITIES

3-1	Introduction	3-2
3-2	VGA Driver Utility	3-2
3-3	Flash BIOS Update	3-3
3-4	LAN Driver Utility	3-5
3-5	Sound Driver Utility	3-7
3-6	Watchdog Timer Configuration	3-8

CHAPTER 4 AWARD BIOS SETUP

4-1	Introduction	4-2
4-2	Entering Setup	4-3
4-3	The Standard CMOS Features	4-4
4-4	The Advanced BIOS Features	4-8
4-5	Advanced Chipset Features	4-12
4-6	Integrated Peripherals	4-16
4-7	Power Management Setup	4-19
4-8	PNP/PCI Configuration	4-22
4-9	PC Health Status	4-24
4-10	Frequency/Voltage Control	4-25
4-11	Load Fail-Safe Defaults	4-26
4-12	Load Optimized Defaults	4-26
4-13	Password Setting	4-27
4-14	Save & Exit Setup	4-28
4-15	Exit Without Saving	4-29


APPENDIX A EXPANSION BUS

PC/104 Plus Bus Connector Pin Assignment		A-2
Compact Flash Card Connector Pin Assignment		A-3

APPENDIX B TECHNICAL SUMMARY

Block Diagram		B-2
Interrupt Map		B-3
RTC & CMOS RAM Map		B-4
Timer & DMA Channels Map		B-5
I/O & Memory Map		B-6

INTRODUCTION

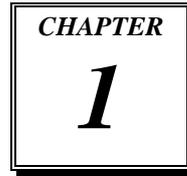

This chapter gives you the information for Prox-1230. It also outlines the System specifications.

Section includes:

- About This Manual
- System Specifications
- Safety precautions

Experienced users can skip to chapter 2 on page 2-1 for a Quick Start.

1-1. ABOUT THIS MANUAL

Thank you for purchasing our Prox-1230, 3.5" Embedded Board enhanced with VGA/Sound/LAN, is fully PC / AT compatible. The Prox-1230 provides faster processing speed, greater expandability and can handle more tasks than before. This manual is designed to assist you how to install and set up the system. It contains four chapters. The user can apply this manual for configuration according to the following chapters :

Chapter 1 Introduction

This chapter introduces you to the background of this manual, and the specifications for this system. The final page of this chapter will indicate how to avoid damaging this Embedded Board.

Chapter 2 Hardware Configuration

This chapter outlines the component locations and their functions. In the end of this chapter, you will learn how to set jumper and how to configure this card to meet your own needs.

Chapter 3 Software Utilities

This chapter contains helpful information for proper installations of the VGA Utility, LAN Utility, Sound Utility, and Flash BIOS Update. It also describes the Watchdog-timer configuration.

Chapter 4 Award BIOS Setup

This chapter indicates you how to set up the BIOS configurations.

Appendix A Expansion Bus

This Appendix introduces you the expansion bus for PCI BUS.

Appendix B Technical Summary

This section gives you the information about the Technical maps.

1-2. SYSTEM SPECIFICATIONS

- **CPU :**
 - VIA C3™ low power processors (667/800 MHz)
 - Auto detect voltage regulator.

- **SYSTEM CHIPSET :**
 - VIA VT8606, VT82C686B

- **MEMORY :**
 - Up to 512MB SDRAM
 - One 144-pin SO-DIMM socket on board.

- **CACHE :**
 - Built-in CPU.

- **REAL-TIME CLOCK / CALENDAR :**
 - CMOS data back up from BIOS set or BIOS default.
 - Built-in VIA VT82C686B.

- **BIOS :**
 - PhoenixAward PnP BIOS Memory size 2 Mbytes, with VGA BIOS.
 - Easy update 256KB flash EEPROM.
 - Supports Green Function.
 - Supports S/IO Setup.

- **KEYBOARD CONNECTOR :**
 - PS/2 keyboard with mini DIN connector or one external 5-pin boxheader connector with mini DIN cable
 - Supports Y-Cable.

- **MOUSE CONNECTOR :**
 - PS/2 mouse connector with min DIN cable
 - Selectable with keyboard DIN connector

- **BUS SUPPORT :**
 - PC/104 Plus Bus

● **DISPLAY :**

Built-in VIA VT8606, supports CRT & LCD (LVDS).
Integrated S3®'s Savage4™ 2D/3D/Video Accelerator.
Optimized Shared Memory Architecture (SMA).
2~32 MB Frame Buffer using system memory.
Supports simultaneous display of CRT & LCD.
Interface:
One 15-pin connector supports for CRT Monitor.
Two 21-pin connector support up to 36bit LVDS, with selectable resolution for 1024 x 768 (default), 800 x 600, and 640 x 480.

● **WATCHDOG :**

I / O port 0443H to Enable watchdog.
I / O port 0441H to Disable watchdog.
Selectable for Reset / NMI Watchdog function.
Time-out timing select 0 / 8 / 16 / 24 / 32 / 40 / 48 / 56 / 64 / 72 / 80 / 88 / 96 / 104 / 112 / 120 sec +/- 25%.

● **IDE INTERFACE :**

One EIDE port supports Ultra DMA-100/66/33.
One channel supports up to two devices.
One Compact Flash Card connector

● **FLOPPY DISK DRIVER INTERFACE :**

Supports up to two Floppy Disk Drives, 3.5" and 5.25" (360K / 720K / 1.2M / 1.44M / 2.88M / LS-120).

● **USB CONNECTOR :**

Universal Serial Bus Connector, supports up to two USB ports.

● **LAN ADAPTER :**

Realtek 8100BL PCI Fast Ethernet
10/100 Base-TX PCI-BUS

● **INFRARED FUNCTION :**

One Infrared port.
Supports IrDA v1.0 SIR protocol.

● **SERIAL PORT :**

Two high speed 16550 Compatible UARTs with Send / Receive 16 Byte FIFOs; COM1 for RS-232; COM2 for RS-232/422/485
COM1 with 9-pin D-SUB connector on board
COM2 with two 5-pin boxheader connector on board
MIDI Compatible
Programmable Baud Rate Generator

● **PARALLEL PORT :**

Supports SPP, ECP, EPP Function mode.
Bi-directional parallel port.

● **SOUND FUNCTION :**

Integrated Sound Blaster / DirectSound AC97 audio.
Dual Full duplex direct sound channels bet. system memory & AC97 link.
32 byte FIFO of each Direct Sound Channel.
VIA VT1612A, AC97 SoundMAX® Codec
Interface: MIC, line-out, and speaker.

● **GREEN FUNCTION :**

Software supported by BIOS setup.
Hardware supported by switch control.

● **HARDWARE MONITORING FUNCTION :**

Monitor CPU Voltage, CPU temperature, and Cooling Fan.

● **LED INDICATOR :**

HDD LED: one 2-pin headpin on board
power LED: one 2-pin headpin on board

● **DMA CONTROLLER :**

82C37 x 2

● **DMA CHANNELS :**

7

● **INTERRUPT CONTROLLERS :**

82C59 x 2

● **INTERRUPT LEVELS :**

15

● **OPERATING TEMPERATURE :**

0 to 60°C (32°F to 140°F)

● **SYSTEM POWER REQUIREMENT :**

DC Voltage: +5V Standby, minimum +4.75V, maximum +5.25V.

DC Ampere: 0.04A.

DC Voltage: +5V, minimum +4.75V, maximum +5.25V.

DC Ampere: 2.4A.

DC Voltage: +12V, minimum +11.4V, maximum +12.6V.

DC Ampere: 0.2A.

● **BOARD DIMENSION :**

102mm x 145mm (4.02" x 5.71")

● **BOARD NET WEIGHT :**

175g (0.385 lb)

1-3. SAFETY PRECAUTIONS

Follow the messages below to avoid your systems from damage:

1. Keep your system away from static electricity on all occasions.
2. Prevent electric shock. Don't touch any components of this card when the card is power-on. Always disconnect power when the system is not in use.
3. Disconnect power when you change any hardware devices. For instance, when you connect a jumper or install any cards, a surge of power may damage the electronic components or the whole system.

HARDWARE CONFIGURATION

CHAPTER

2

**** *QUICK START* ****

Helpful information describes the jumper & connector settings, and component locations.


This section includes:

- Jumper & Connector Quick Reference Table
- Component Locations
- Configuration and Jumper settings
- Connector's Pin Assignments

2-1. JUMPER & CONNECTOR QUICK REFERENCE TABLE

COM Connector	COM1, COM2
RS232/422/485 (COM2) Selection	JP9
COM RI Selection	JP6
RI Voltage Selection	JP6
Keyboard Connector	KB1
Mouse Connector	MS1
KB/Y-cable Selection	JP10
Power LED Connector	JP3 (1-3)
Reset Connector	JP3 (9-10)
Hard Disk Drive LED Connector	JP3 (2-4)
External Speaker Connector	JP3 (7-8)
Power Button	JP3 (5-6)
Green Function Connector	JP3 (11-12)
SLPBTN Connector	JP3 (13-14)
IrDA Connector	IR1
VGA Connector	VGA1
LVDS Connector	LVDS1, LVDS2
LVDS Panel Voltage Selection	JP7
Universal Serial Bus Connector	CN2
Floppy Disk Drive Connector	FDD1
Hard Disk Drive Connector	IDE1
Printer Connector	LPT1
NMI/Reset/Clear Watchdog	JP4
LAN Connector	UTP1
ATX Power Connector	CN4
AT/ATX Power Selection	J2, J3
Sound Connector	CN1
Sound Selection	J1
CD Audio-in Connector	CD_IN1
Clear CMOS Selection	JP2
Memory Installation	DIMM1
CPU Ratio Frequency Connector	JP1

2-2. COMPONENT LOCATIONS

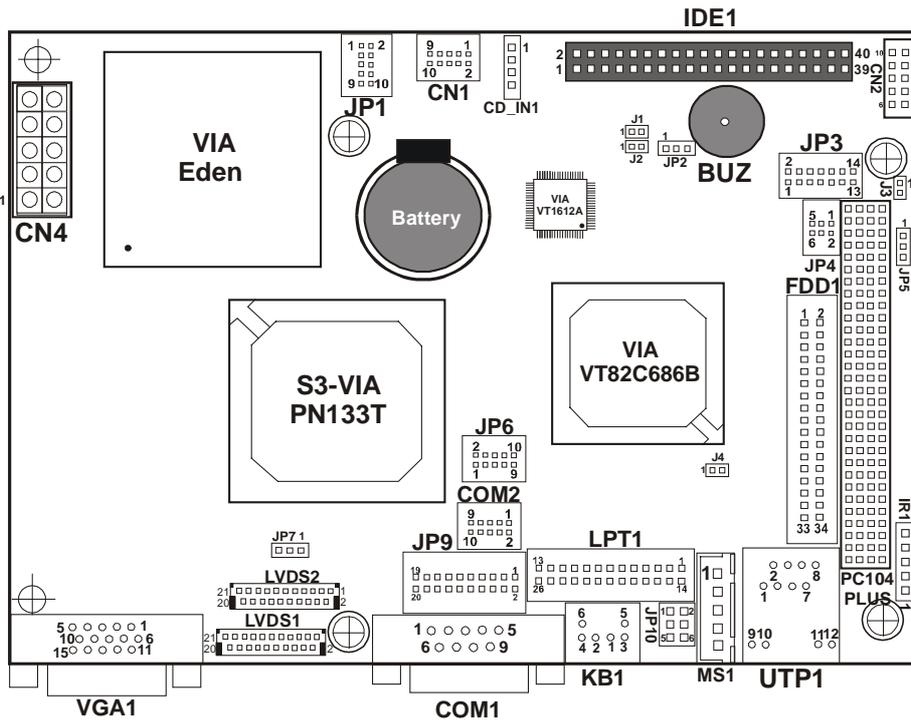


Prox-1230 Connector, Jumper and Component locations

2-3. HOW TO SET THE JUMPERS

You can configure your board by setting the jumpers. Jumper is consists of two or three metal pins with a plastic base mounted on the card, and by using a small plastic "cap", Also known as the jumper cap (with a metal contact inside), you are able to connect the pins. So you can set-up your hardware configuration by "opening" or "closing" pins.

The jumper can be combined into sets that called jumper blocks. When the jumpers are all in the block, you have to put them together to set up the hardware configuration. The figure below shows how this looks like.

JUMPERS AND CAPS

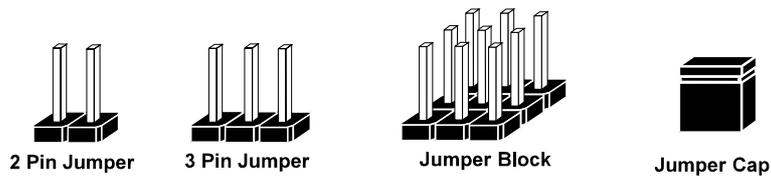


If a jumper has three pins (for example, labelled PIN1, PIN2, and PIN3), You can connect PIN1 & PIN2 to create one setting and shorting. You can either connect PIN2 & PIN3 to create another setting. The same jumper diagrams are applied all through this manual. The figure below shows what the manual diagram looks like and what they represent.


JUMPER DIAGRAMS




Jumper Cap looks like this

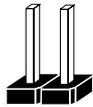

2 pin Jumper looks like this

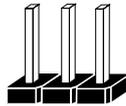

3 pin Jumper looks like this

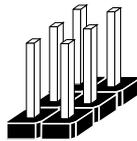

Jumper Block looks like this



JUMPER SETTINGS



2 pin Jumper close(enabled)
looks like this



1




3 pin Jumper
2-3 pin close(enabled)
looks like this



1



Jumper Block
1-2 pin close(enabled)
looks like this

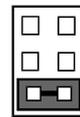

1 2


2-4. COM PORT CONNECTOR

There are two COM ports enhanced in this board namely: COM1 and COM2. COM1 is fixed for RS-232, while COM2 is selectable for RS-232/422/485.

COM1 : COM1 Connector

The COM1 Connector assignments are as follows :

PIN	ASSIGNMENT
1	DCD
2	RX
3	TX
4	DTR
5	GND
6	DSR
7	RTS
8	CTS
9	RI / +5V / +12V selectable
10	NC

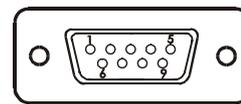


COM1

COM2 : COM2 Connector

The COM2 Connector assignments are as follows :

PIN	ASSIGNMENT		
	RS-232	RS-422	RS-485
1	DCD	TX-	TX-
2	RX	TX+	TX+
3	TX	RX+	RX+
4	DTR	RX-	RX-
5	GND	GND	GND
6	DSR	RTS-	NC
7	RTS	RTS+	NC
8	CTS	CTS+	NC
9	RI/+5V/+12	CTS-	NC
10	NC	NC	NC

COM2

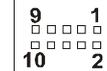


2-5. RS232/422/485 (COM2) SELECTION

JP9 : RS-232/422/485 Selection

COM2 is selectable for RS-232, 422, 485 function.

The jumper settings are as follows :

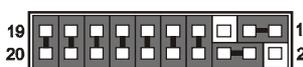COM 2 FUNCTION	JUMPER SETTING (pin closed)	JUMPER ILLUSTRATION
RS-232	Open	 <p style="text-align: center;">JP9</p>
RS-422	1-2, 5-6, 7-8, 9-10 11-12, 13-14, 15-16 17-18, 19-20	 <p style="text-align: center;">JP9</p>
RS-485	1-3, 4-6, 7-8, 9-10 11-12, 13-14, 15-16 17-18, 19-20	 <p style="text-align: center;">JP9</p>


*** Manufactory default --- RS-232.

2-6. COM RI & VOLTAGE SELECTION

JP6 (7-9) : COM1 RI & Voltage Selection

JP6 (8-10) : COM2 RI & Voltage Selection

The selections are as follows:

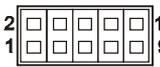COM PORT	SELECTION	JUMPER SETTINGS	JUMPER ILLUSTRATION
COM1	RI	7-9	 <p>JP6</p>
	Voltage	Open	 <p>JP6</p>
COM2	RI	8-10	 <p>JP6</p>
	Voltage	Open	 <p>JP6</p>

***Manufacturing Default – RI. (All jumpers are closed).



 For Voltage Selection, user may select +5V / +12V, please refer to our “RI Voltage Selection”.

2-7. RI VOLTAGE SELECTION

JP6 (1,3,5) : COM1 Voltage Selection

JP6 (2,4,6) : COM2 Voltage Selection


The selections are as follows:

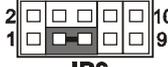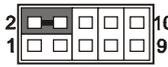COM PORT	VOLTAGE SELECTION	JUMPER SETTINGS	JUMPER ILLUSTRATION
COM1	+5V	3-5	 <p>JP6</p>
	+12V	1-3	 <p>JP6</p>
COM2	+5V	4-6	 <p>JP6</p>
	+12V	2-4	 <p>JP6</p>

2-8. KEYBOARD CONNECTOR

KB1 : PC/AT Keyboard Connector, support Y-cable
The jumper settings are as follows:

PIN	ASSIGNMENT
1	KBDATA
2	NC
3	GND
4	KBVCC
5	KBCLK
6	NC

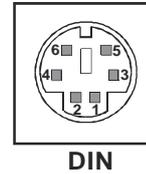


DIN

2-9. PS/2 MOUSE CONNECTOR

MS1 : PS/2 Mouse Connector
The pin assignments are as follows :


PIN	ASSIGNMENT
1	MSCLK
2	MSDATA
3	NC
4	GND
5	MSVCC

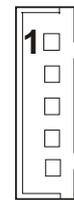

MS1

2-10. KB/Y-CABLE SELECTION


JP10 : KB/Y-cable Selection
 The selections are as follows:

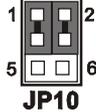FUNCTION	JUMPER SETTING (pin closed)	JUMPER ILLUSTRATION
KB	1-3, 2-4	 JP10
Y-cable	3-5, 4-6	 JP10

2-11. POWER LED CONNECTOR

JP3 (1-3) : Power LED Connector
 The pin assignment is as follows:


PIN	ASSIGNMENT
1	VCC
3	PW_LED

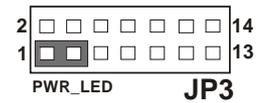

2-12. RESET CONNECTOR

JP3 (9-10) : Reset Connector.
 The pin assignments are as follows :


PIN	ASSIGNMENT
9	GROUND
10	RESET

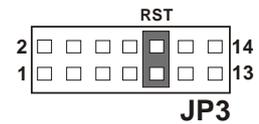

2-13. HARD DISK DRIVE LED CONNECTOR

JP3 (2-4) : Hard Disk Drive LED Connector
The pin assignments are as follows :


PIN	ASSIGNMENT
2	VCC
4	HDD Active Signal

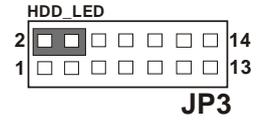

2-14. EXTERNAL SPEAKER CONNECTOR

JP3 (7-8) : External Speaker Connector
The pin assignments are as follows :


PIN	ASSIGNMENT
7	Speaker Signal (Buz)
8	VCC

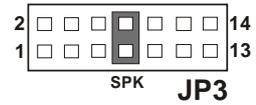

2-15. POWER BUTTON

JP3 (5-6) : Power Button
The pin assignments are as follows:


PIN	ASSIGNMENT
5	GROUND
6	PW_BN

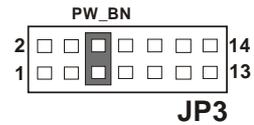

2-16. GREEN FUNCTION CONNECTOR

JP3 (11-12) : Green Function Connector
 The pin assignments are as follows:


PIN	ASSIGNMENT
11	EXTSMI
12	GND

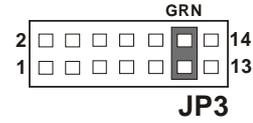

2-17. SLPBTN CONNECTOR

JP3 (13-14) : SLPBTN Connector
 The pin assignments are as follows:

PIN	ASSIGNMENT
13	GND
14	SLPBTN

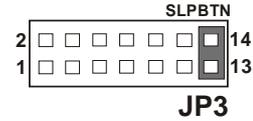

2-18. IRDA CONNECTOR

IR1 : IrDA (SIR) Connector
 The pin assignments are as follows:

PIN	ASSIGNMENT
1	VCC
3	NC
5	IRRX
7	GND
9	IRTX




2-19. VGA CONNECTOR

VGA1 : VGA Connector

The pin assignments are as follows:

PIN	ASSIGNMENT
1	RED
2	GREEN
3	BLUE
4	NC
5	GND
6	GND
7	GND
8	GND
9	NC
10	GND
11	NC
12	I2CCK
13	HSYNC
14	VSYNC
15	I2CDA

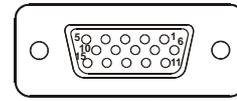

VGA

2-20. LVDS CONNECTOR

LVDS1 : LVDS Connector

The pin assignments are as follows :

PIN	ASSIGNMENT	PIN	ASSIGNMENT
1	GND	12	TXL1+
2	GND	13	TXL1-
3	TXL3+	14	GND
4	TXL3-	15	TXL0+
5	GND	16	TXL0-
6	TXCLK1+	17	GND
7	TXCLK1-	18	GND
8	GND	19	VCC
9	TXL2+	20	VCC
10	TXL2-	21	PANELDET
11	GND		



LVDS2 : LVDS Connector (reserved)

The pin assignments are as follows :


PIN	ASSIGNMENT	PIN	ASSIGNMENT
1	GND	12	TXU1+
2	GND	13	TXU1-
3	TXU3+	14	GND
4	TXU3-	15	TXU0+
5	GND	16	TXU0-
6	TXCLKU+	17	GND
7	TXCLKU-	18	GND
8	GND	19	VCC
9	TXU2+	20	VCC
10	TXU2-	21	PANELDET
11	GND		



 24bit and below panel used LVDS1, 36/48bit panel used LVDS1 and LVDS2.

2-21. LVDS PANEL VOLTAGE SELECTION


JP7 : LVDS Panel Voltage Selection
 The voltage selection are as follows:

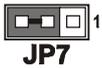VOLTAGE SELECTION	JUMPER SETTINGS (pin closed)	JUMPER ILLUSTRATION
5V VCC	1-2	 1 JP7
3.3V VCC	2-3	 1 JP7

2-22. UNIVERSAL SERIAL BUS CONNECTOR

USB : Universal Serial Bus Connector
 USB connector of this board can support two USB ports.
 The pin assignments are as follows:

PIN	ASSIGNMENT
1	VCC
2	USBP0-
3	USBP0+
4	GND
5	GND
6	VCC
7	USBP1-
8	USBP1+
9	GND
10	GND

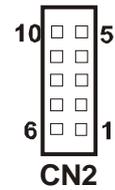

2-23. FLOPPY DISK DRIVE CONNECTOR


FDD1 : Floppy Disk Drive Connector

You can use a 34-pin daisy-chain cable to connect two FDDs. On one end of this cable there is a 34-pin flat cable to attach the FDD on the board, the other side attaches to two FDDs.

The pin assignments are as follows :

PIN	ASSIGNMENT	PIN	ASSIGNMENT
1	GND	2	DRV DEN0
3	GND	4	NC
5	GND	6	DRV DEN1
7	GND	8	INDEX
9	GND	10	MTR0
11	GND	12	DRV1
13	GND	14	DRV0
15	GND	16	MTR1
17	GND	18	DIR
19	GND	20	STEP
21	GND	22	WDATA
23	GND	24	WGATE
25	GND	26	TRK0
27	GND	28	WRPRT
29	GND	30	RDATA
31	GND	32	SEL
33	GND	34	DSKCHG

FDD1

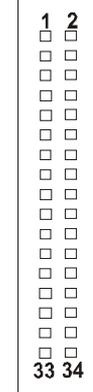

2-24. HARD DISK DRIVE CONNECTOR

IDE1 : Hard Disk Drive Connector
 The pin assignments are as follows:

IDE1




PIN	ASSIGNMENT	PIN	ASSIGNMENT
1	IDERST	2	GND
3	PDD7	4	PDD8
5	PDD6	6	PDD9
7	PDD5	8	PDD10
9	PDD4	10	PDD11
11	PDD3	12	PDD12
13	PDD2	14	PDD13
15	PDD1	16	PDD14
17	PDD0	18	PDD15
19	GND	20	NC
21	DDREQA	22	GND
23	-DIOWA	24	GND
25	-DIOA	26	GND
27	HDRDYA	28	PULL LOW
29	-DDACKA	30	GND
31	IRQ14	32	NC
33	PDA1	34	PD_80P
35	PDA0	36	PDA2
37	-PDCS1	38	-PDCS3
39	HDLED1	40	GND

2-25. PRINTER CONNECTOR

LPT1 : Printer Connector

As to link the Printer to the card, you need a cable to connect both DB25 connector and parallel port.

The pin assignments are as follows :


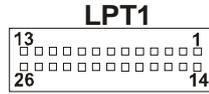


PIN	ASSIGNMENT	PIN	ASSIGNMENT
1	STB	14	AUTFE
2	P0	15	ERROR
3	P1	16	INIT
4	P2	17	SLCTIN
5	P3	18	GND
6	P4	19	GND
7	P5	20	GND
8	P6	21	GND
9	P7	22	GND
10	ACK	23	GND
11	BUSY	24	GND
12	PE	25	GND
13	SLCT	26	NC

2-26. RESET/NMI/CLEAR WATCHDOG SELECTION

JP4 : Reset/NMI/Clear Watchdog Selection

The selections are as follows:

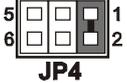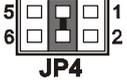FUNCTION	JUMPER SETTING (pin closed)	JUMPER ILLUSTRATION
RESET	1-2	 JP4
NMI	3-4	 JP4
CLEAR WATCHDOG	5-6	 JP4


***Manufacturing Default is set as Reset.

2-27. LAN CONNECTOR


UTP1 : LAN Connector

The pin assignments are as follows:

PIN	ASSIGNMENT
1	TX+
2	TX-
3	RX+
4	ISOLATED GND
5	ISOLATED GND
6	RX-
7	CT
8	CT
9	PULL HI
10	LED-Green
11	PULL HI
12	LED-Yellow

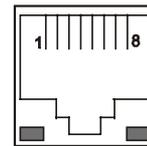

UTP1

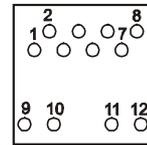


Green Yellow

2-28. ATX POWER CONNECTOR

CN4 : Power Connector

The pin assignments are as follows :



PIN	ASSIGNMENT
1	VCC
2	VCC
3	GND
4	GND
5	+12V
6	+5V SBY
7	VCC
8	GND
9	PS_ON
10	-12V

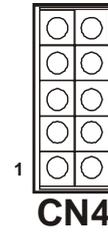

2-29. AT/ATX POWER SELECTION

J2, J3 : AT/ATX Power Selection

The selections are as follows:

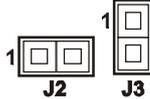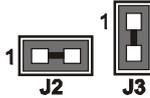POWER SELECTION	JUMPER SETTING (pin closed)		JUMPER ILLUSTRATION
	J2	J3	
ATX	Open	Open	
AT	Close	Close	

***Manufacturing Default: ATX

⚠ As a reminder, when you choose to use the ATX function, please be sure to set the corresponding configuration found in BIOS setup such as:


1. Inside the “CHIPSET FEATURES” setting, set the power supply type to ATX.
2. Inside the “POWER MANAGEMENT” setting, set the ACPI function to enable.

2-30. SOUND CONNECTOR

CN1 : Sound Connector

This connector is used to connect the microphone, line-in, and line-out through our adapter card. The pin assignments are as follows:

PIN	ASSIGNMENT
1	MIC-IN
2	MIC-VDD
3	GND
4	GND
5	LINE-L
6	LINE-R
7	GND
8	GND
9	SPK-L
10	SPK-R

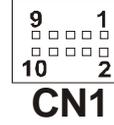

Please refer our Appendix A for more information about installation.

2-31. SOUND SELECTION

J1 : Sound Selection


The selections are as follows:

FUNCTION	JUMPER SETTING (pin closed)	JUMPER ILLUSTRATION
Enabled	1-2	
Disabled	open	

2-32. CD AUDIO-IN CONNECTOR

CD_IN1 : CD Audio-in Connector
The pin assignments are as follows:

PIN	ASSIGNMENT
1	AUXAL
2	GND
3	GND
4	AUXAR

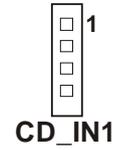

2-33. CLEAR CMOS SELECTION

JP2 : Clear CMOS Selection
The selections are as follows:

FUNCTION	JUMPER SETTING (pin closed)	JUMPER ILLUSTRATION
Normal	1-2	 JP2
Clear CMOS	2-3	 JP2

*** Manufacturing Default – Normal.

2-34. MEMORY INSTALLATION

The Prox-1230 Embedded Computer supports one SODIMM bank.

DRAM BANK CONFIGURATION


DIMM 1	TOTAL MEMORY
32MB	32MB
64MB	64MB
128MB	128MB
256MB	256MB
512MB	512MB

2-35. CPU RATIO FREQUENCY CONNECTOR

JP1 : CPU Ratio Frequency Connector

The pin assignment is as follows:

PIN	ASSIGNMENT
1	Ratio0
2	BR0
3	Ratio1
4	BR1
5	Ratio2
6	BR2
7	Ratio3
8	BR3
9	Ratio4
10	BR4

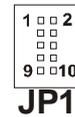

The following table indicates how to set CPU Ratio Frequency.

RATIO	BR0	BR1	BR2	BR3	BR4
9.0X	0	0	0	0	0
3.0X	1	0	0	0	0
4.0X	0	1	0	0	0
10.0X	1	1	0	0	0
5.5X	0	0	1	0	0
3.5X	1	0	1	0	0
4.5X	0	1	1	0	0
9.5X	1	1	1	0	0
5.0X	0	0	0	1	0
7.0X	1	0	0	1	0
8.0X	0	1	0	1	0
6.0X	1	1	0	1	0
12.0X	0	0	1	1	0
7.5X	1	0	1	1	0
8.5X	0	1	1	1	0
6.5X	1	1	1	1	0
	0	0	0	0	1
11.0X	1	0	0	0	1
12.0X	0	1	0	0	1
	1	1	0	0	1
13.5X	0	0	1	0	1
11.5X	1	0	1	0	1
12.5X	0	1	1	0	1
10.5X	1	1	1	0	1
13.0X	0	0	0	1	1
15.0X	1	0	0	1	1
16.0X	0	1	0	1	1
14.0X	1	1	0	1	1
	0	0	1	1	1
15.5X	1	0	1	1	1
	0	1	1	1	1
14.5X	1	1	1	1	1

SOFTWARE UTILITIES

CHAPTER

3

This chapter comprises the detailed information of VGA driver, LAN driver, sound driver, and Flash BIOS update. It also describes how to install the watchdog timer configuration.

Section includes:

- VGA Driver Utility
- Flash BIOS Update
- LAN Driver Utility
- Sound Driver Utility
- Watchdog Timer Configuration


3-1. INTRODUCTION

Enclosed with our Prox-1230 package is our driver utility, which may come in a form of a CD ROM disc or floppy diskettes. For CD ROM disc user, you will only need some of the files contained in the CD ROM disc, please kindly refer to the following chart:

Filename (Assume that CD ROM drive is D:)	Purpose
D:\VGA\VIA S3 Twister	For VGA driver installation
D:\Flash\	For BIOS update
D:\LAN\RTL8100BL	Realtek RTL8100BL For LAN Driver installation
D:\Sound\VIA\VT1612A	For Sound Driver installation

3-2. VGA DRIVER UTILITY

The VGA interface embedded with our Prox-1230 can support a wide range of display mode, such as SVGA, STN, TFTetc. You can display CRT and LVDS simultaneously with the same mode.

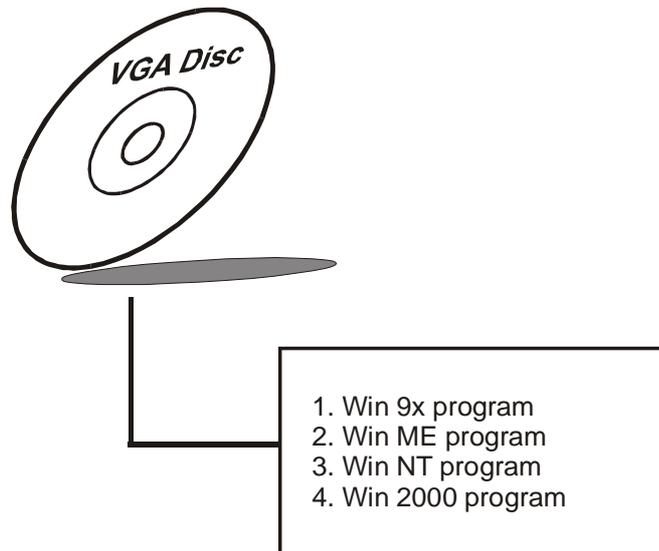

3-3. FLASH BIOS UPDATE

3-3-1. System BIOS Update:

Users of Prox-1230 can use the program "Awdflash.exe" contained in the Utility Disk for system BIOS and VGA BIOS update.

3-3-2. To update VGA BIOS for LCD Flat Panel Display:

As Prox-1230 user, you have to update the VGA BIOS for your specific LCD flat panel you are going to use. For doing this, you need two files. One is the "Awdflash.exe" file and the other is the VGA BIOS for LCD panel display. Both file must be provided by the vendor or manufacturer. When you get these two files ready, follow the following steps for updating your VGA BIOS:

1. Install "Awdflash.exe" from Utility Disk to Drive C.
2. Insert the VGA BIOS file you have obtained from the vendor.
3. Type the path to Awdflash.exe and execute the VGA BIOS update with file C30bxxxx.bin
C:\UTIL\AWDFLASH>AWDFLASH C30bxxxx.bin
4. The screen will display the table below:

FLASH MEMORY WRITER v7.XX (C) Award Software 2000 All Rights Reserved	
For 8604-686B-6A6LLP69C-0	DATE: 04/23/2001
Flash Type - MXIC 29F002(N)T /5V	
File Name to Program: C30bxxxx.bin	
Checksum: XXXXX	
Error Message : Do You Want To Save BIOS (Y/N)	

If you want to save up the original BIOS, enter "Y" and press < Enter > .
If you choose "N", the following table will appear on screen.

FLASH MEMORY WRITER v7.XX (C) Award Software 2000 All Rights Reserved
For 8604-686B-6A6LLP69C-0 DATE: 04/23/2001 Flash Type - MXIC 29F002(N)T /5V File Name to Program: C30bxxxx.bin Checksum: XXXXX
Error Message : Are You Sure To Program (Y/N)

Select "Y", and the BIOS will be renewed. When you are refreshing the BIOS, do not turn off or reset the system, or you will damage the BIOS. After you have completed all the programming, the screen displays the table below:


FLASH MEMORY WRITER v7.XX (C) Award Software 2000 All Rights Reserved
For 8604-686B-6A6LLP69C-0 DATE: 04/23/2001 Flash Type - MXIC 29F002(N)T /5V File Name to Program: C30bxxxx.bin Checksum: XXXXX Reset System or Power off to accomplish update process!
F1: Reset F10: Exit

Please reset or power off the system, and then the Flash BIOS is fully implemented.

3-4. LAN DRIVER UTILITY

3-4-1. Introduction

Prox-1230 Embedded Board is enhanced with LAN function that can support various network adapters. Installation programs for LAN drivers are listed as follows:

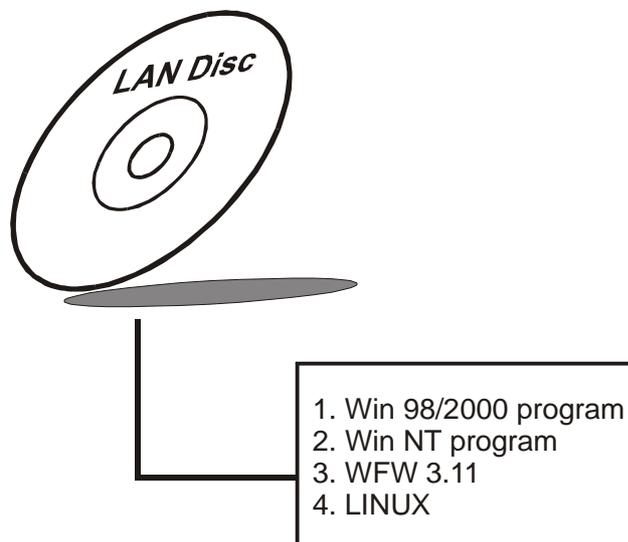

3-4-2. Installation Procedures of LAN Driver

1. Install LAN Driver to Windows 98/2000

Executing Windows 98/Windows 2000, it will auto-detect your system configuration and find the adapter hardware.

- (1) Ask you to select which driver you want to install, select "Driver from disk provided by hardware manufacturer".
- (2) Insert the Realtek RTL8100B driver disk into the drive A or CD drive and specify the setup file pathname, ex: A:\ .
- (3) Win 98/ Win 2000 will appear some messages to insert Windows 98/Win2000 system disk to complete setup step.
- (4) Windows 98/Windows 2000 will finish the other installation procedure automatically, and then restart the system.

2. Install LAN Driver to Windows NT 3.0/4.0

- (1) In the Main group of NT, select the "Control Panel" icon.
- (2) In the Control Panel window, choose the "Network" icon.
- (3) In the Network Settings dialog box, choose the "Add adapter" button. The Add Network Adapter dialog box appears.
- (4) In the list of network cards, select "<other> Requires disk from manufacturer", and then press <Enter> button.
- (5) Insert the LAN driver utility, and enter the filename (ex. A:\pathname) where the setup file OEMSETUP.INF is located, and then choose OK button.
- (6) The screen will appear "Select Line Speed" dialog box, which is provided by R8139n5.SYS driver. The default value is "auto" so that the line speed can be auto detected as 10MB or 100MB, while the R8139n5.SYS is loading.
- (7) The screen will appear "Input Ethernet ID" dialog box, which is provided by R8139n5.SYS driver. This option is only required when you have more than one RTL8100B PCI Fast Ethernet adapters on this computer. Select "SKIP" if only one adapter is installed on this computer.
- (8) "Bus Location" displayed in next screen. Your machine contains more than one hardware bus, please select the Bus Type and Bus number on which your network adapter card is installed.
- (9) NT will then perform the binding process. If any additional network software options were installed, you may be prompted for specific information for these packages.
- (10) Re-starting your system you will acquire network service.

 **Note: For Installing Multiple LAN Adapters:**


Enter Windows NT and follow above setup procedure step 2, in the "Network Settings" dialog box, choose the "Configure..." button. The "Input Ethernet ID" dialog box appears and input adapter's Ethernet ID. Last step to select OK and close NETWORK SETUP. Select SKIP if only one adapter is installed on this computer.

For more information on installation procedure, please refer to TXT directory found on LAN DRIVER UTILITY.

3-5. SOUND DRIVER UTILITY

3-5-1. Introduction

The sound function enhanced in this system is fully compatible with Windows 9x/98SE/ME, Windows NT, DOS, OS2, Linux, and Windows 2000. Below, you will find the content of the Sound driver :

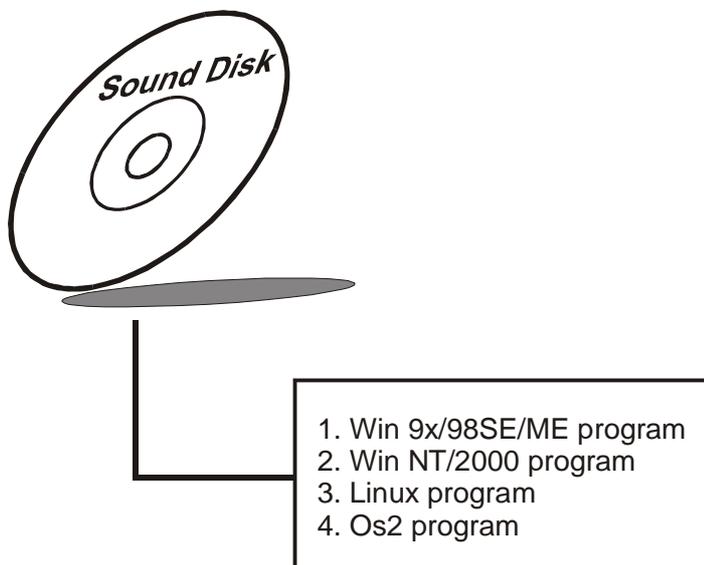

3-5-2. Installation Procedure In Windows NT

- (1) Open "Main" Window in Program Manager.
- (2) Select "Control Panel" in Main Window, then open it.
- (3) Select "Drivers" in Control Panel. Double Click it to open this window. Then choose "ADD" item to add driver.
- (4) Choose "Unlisted or Updated Driver" on the list. Then press "OK" button.
- (5) Change the "Install Driver" directory to the "VIA Audio Driver directory". Then press "OK" button.
- (6) If it correct, you will see a pop window, which shows "VIA PCI Audio Controller". Press "OK" button to process installing.
- (7) Restart the computer.

3-6. WATCHDOG TIMER CONFIGURATION

This board has watchdog timer function for monitoring whether the system is still work or not after a period of time. The user can select watchdog timer to system reset or NMI (Non Maskable interrupt) depending on the jumper set in “Reset/NMI/Clear Watchdog Selection” found in chapter 2. This is defined at I/O port **443H**. When you want to enable the watchdog timer, please write I/O port **443H**, and then the system will either reset itself or perform the NMI function. Likewise, when you want to disable the function, write I/O port **441H**, the system will run the command to stop the Watchdog function.

In Prox-1230 watchdog function, you must write your program so when it writes I/O port address 443 for enable watchdog and write I/O port address 441 for disable watchdog. The timer's intervals have a tolerance of 25% so you should program an instruction that will refresh the timer about every second.

The following program shows you how to program the watch timer in your program.

Watchdog enable program:

```
MOVAX, 000FH(choose the values you need; start from 0)
MOVDX, 443H
OUTDX, AX
```


Watchdog disable program:

```
MOVAX, 000FH(this value can be ignored)
MOVDX, 441H
OUTDX, AX
```

The Watchdog Timer control table is as follows:

Level	Value	Time/sec	Level	Value	Time/sec
1	F	0	9	7	64
2	E	8	10	6	72
3	D	16	11	5	80
4	C	24	12	4	88
5	B	32	13	3	96
6	A	40	14	2	104
7	9	48	15	1	112
8	8	56	16	0	120

AWARD BIOS SETUP

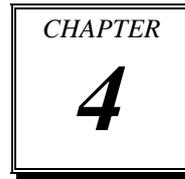

This chapter shows how to set up the Award BIOS.

Section includes:

- Introduction
- Entering Setup
- The Standard CMOS Features
- The Advanced BIOS Features
- The Advanced Chipset Features
- Integrated Peripherals
- Power Management Setup
- PNP/PCI Configuration
- PC Health Status
- Frequency/Voltage Control
- Load Fail-Safe Defaults
- Load Optimized Defaults
- Password Setting
- Save and Exit Setup
- Exit Without Saving


4-1. INTRODUCTION

This chapter will show you the function of the BIOS in managing the features of your system. The Prox-1230 3.5" Embedded Board is equipped with the BIOS for system chipset from Award Software Inc. This page briefly explains the function of the BIOS in managing the special features of your system. The following pages describe how to use the BIOS for system chipset Setup menu.

Your application programs (such as word processing, spreadsheets, and games) rely on an operating system such as DOS or OS/2 to manage such things as keyboard, monitor, disk drives, and memory.

The operating system relies on the BIOS (Basic Input and Output system), a program stored on a ROM (Read-only Memory) chip, to initialize and configure your computer's hardware. As the interface between the hardware and the operating system, the BIOS enables you to make basic changes to your system's hardware without having to write a new operating system.

The following diagram illustrates the interlocking relationships between the system hardware, BIOS, operating system, and application program:

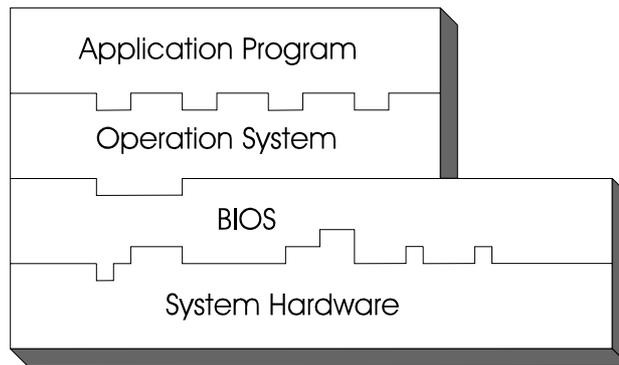

4-2. ENTERING SETUP

When the system is powered on, the BIOS will enter the Power-On Self Test (POST) routines and the following message will appear on the lower screen:

PRESS TO ENTER SETUP, ESC TO SKIP MEMORY TEST

As long as this message is present on the screen you may press the key (the one that shares the decimal point at the bottom of the number keypad) to access the Setup program. In a moment, the main menu of the Award SETUP program will appear on the screen:

Phoenix - AwardBIOS CMOS Setup Utility	
<ul style="list-style-type: none"> ▶ Standard CMOS Features ▶ Advanced BIOS Features ▶ Advanced Chipset Features ▶ Integrated Peripherals ▶ Power Management Setup ▶ PnP/PCI Configurations ▶ PC Health Status 	<ul style="list-style-type: none"> ▶ Frequency/Voltage Control Load Fail-Safe Defaults Load Optimized Defaults Set Password Save & Exit Setup Exit Without Saving
Esc : Quit	↑↓→← : Select Item
F10 : Save & Exit Setup	
Time, Date, Hard Disk Type	

Setup program initial screen

You may use the cursor the up/down keys to highlight the individual menu items. As you highlight each item, a brief description of the highlighted selection will appear at the bottom of the screen.

4-3. THE STANDARD CMOS FEATURES

Highlight the "STANDARD CMOS FEATURES" and press the <ENTER> key and the screen will display the following table:

Phoenix - AwardBIOS CMOS Setup Utility
Standard CMOS Features

Date (mm:dd:yy)	Wed, Oct 9 2002	Item Help
Time (hh:mm:ss)	5 : 43 : 0	
▶ IDE Primary Master	[Maxtor 32049H2]	Menu Level ▶
▶ IDE Primary Slave	[FX54++W]	Change the day, month, year and century
▶ IDE Secondary Master	[None]	
▶ IDE Secondary Slave	[None]	
Drive A	[1.44M, 3.5 in.]	
Drive B	[None]	
Video	[EGA/VGA]	
Halt On	[All, But Keyboard]	
Base Memory	640K	
Extended Memory	113664K	
Total Memory	114688K	
↑↓→←:Move Enter: Select +/-/PU/PD:Value F10:Save ESC:Exit F1:General Help F5: Previous Values F6:Fail-Safe Defaults F7:Optimized Defaults		

CMOS Setup screen

In the above Setup Menu, use the arrow keys to highlight the item and then use the <PgUp> or <PgDn> keys to select the value you want in each item.

Date:

< Month >, < Date > and <Year >. Ranges for each value are in the CMOS Setup Screen, and the week-day will skip automatically.

Time:

< Hour >, < Minute >, and < Second >. Use 24 hour clock format, i.e., for PM numbers, add 12 to the hour. For example: 4: 30 P.M. You should enter the time as 16:30:00.

IDE Primary Master / Slave:

IDE Secondary Master / Slave:

The options for these items are found in its sub menu. By pressing the <ENTER> key, you are prompt to enter the sub menu of the detailed options as shown below:

Phoenix - AwardBIOS CMOS Setup Utility
IDE Primary Master

IDE HDD Auto-Detection	[Press Enter]	Item Help
IDE Primary Master Access Mode	[Auto] [Auto]	Menu Level ►►
Capacity	13022 MB	To auto-detect the HDD's size, head...on this channel
Cylinder	25232	
Head	16	
Precomp	65535	
Landing Zone	25231	
Sector	63	
↑↓→←:Move Enter: Select +/-/PU/PD:Value F10:Save ESC:Exit F1:General Help F5: Previous Values F6:Fail-Safe Defaults F7:Optimized Defaults		

Table 1 – IDE Primary Master sub menu

Descriptions on each item above are as follows:

1. IDE HDD Auto-detection
Press the enter key to auto-detect the HDD on this channel. If detection is successful, it fills the remaining fields on this menu.
2. IDE Primary Master
There are three available options on this category, namely: None, Auto, and Manual. By selecting “Manual”, you can set the remaining fields on this screen, such as -
 - a. Cylinder – Set the number of cylinders for this hard disk.
 - b. Head – Set the number of read/write heads.
 - c. Precomp - *****Warning!** Setting a value of 65535 means no HDD.
 - d. Landing Zone
 - e. Sector – Set the number of sector per track

3. Access Mode

There are four available options for this item, namely: Normal, LBA, Large and Auto. Choose the access mode for this hard disk.

4. Capacity

Disk Drive capacity (Approximated). Note that this size is usually slightly greater than the size of a formatted disk given by a disk-checking program.

DRIVE A AND DRIVE B:

Select the type of floppy disk drive installed in your system. The available options are 360KB 5.25in, 1.2KB 5.25in, 720KB 3.5in, 1.44MB 3.5in, 2.88MB 3.5in and None.

VIDEO:

This category selects the type of video adapter used for the primary system monitor. Although secondary monitors are supported, you do not have to select the type in Setup. Available Options are as follows:

EGA/VGA	Enhanced Graphics Adapter/Video Graphics Array. For EGA, VGA, SEGA, SVGA or PGA monitor adapters.
CGA 40	Color Graphics Adapter, power up in 40 column mode.
CGA 80	Color Graphics Adapter, power up in 80 column mode.
MONO	Monochrome adapter, includes high resolution monochrome adapters.

HALT ON:

This category allows user to choose whether the computer will stop if an error is detected during power up. Available options are "All errors", "No errors", "All, But keyboard", "All, But Diskette", and "All But Disk/Key".

BASE MEMORY:

Displays the amount of conventional memory detected during boot up.

EXTENDED MEMORY:

Displays the amount of extended memory detected during boot up.

TOTAL MEMORY:

Displays the total memory available in the system.

HARD DISK ATTRIBUTES:

Type	Cylinders	Heads	V-P comp	LZone	Sect	Capacity
1	306	4	128	305	17	10
2	615	4	300	615	17	20
3	615	6	300	615	17	30
4	940	8	512	940	17	62
5	940	6	512	940	17	46
6	615	4	65535	615	17	20
7	642	8	256	511	17	30
8	733	5	65535	733	17	30
9	900	15	65535	901	17	112
10	820	3	65535	820	17	20
11	855	5	65535	855	17	35
12	855	7	65535	855	17	49
13	306	8	128	319	17	20
14	733	7	65535	733	17	42
15	000	0	0000	000	00	00
16	612	4	0000	663	17	20
17	977	5	300	977	17	40
18	977	7	65535	977	17	56
19	1024	7	512	1023	17	59
20	733	5	300	732	17	30
21	733	7	300	732	17	42
22	733	5	300	733	17	30
23	306	4	0000	336	17	10
24	977	5	65535	976	17	40
25	1024	9	65535	1023	17	76
26	1224	7	65535	1223	17	71
27	1224	11	65535	1223	17	111
28	1224	15	65535	1223	17	152
29	1024	8	65535	1023	17	68
30	1024	11	65535	1023	17	93
31	918	11	65535	1023	17	83
32	925	9	65535	926	17	69
33	1024	10	65535	1023	17	85
34	1024	12	65535	1023	17	102
35	1024	13	65535	1023	17	110
36	1024	14	65535	1023	17	119
37	1024	2	65535	1023	17	17
38	1024	16	65535	1023	17	136
39	918	15	65535	1023	17	114
40	820	6	65535	820	17	40
41	1024	5	65535	1023	17	42
42	1024	5	65535	1023	26	65
43	809	6	65535	852	17	40
44	809	6	65535	852	26	61
45	776	8	65335	775	33	100
47			AUTO			

Award Hard Disk Type Table

4-4. THE ADVANCED BIOS FEATURES

Choose the "ADVANCED BIOS FEATURES" in the main menu, the screen shown as below.

Phoenix - AwardBIOS CMOS Setup Utility
Advanced BIOS Features

Virus Warning	[Disabled]	Item Help
CPU Internal Cache	[Enabled]	
External Cache	[Enabled]	Menu Level ►
CPU L2 Cache ECC Checking	[Enabled]	
Quick Power On Self Test	[Enabled]	Allows you to choose the VIRUS warning feature for IDE Hard Disk boot sector protection. If this function is enabled and someone attempt to write data into this area, BIOS will show a warning message on screen and alarm beep
First Boot Device	[Floppy]	
Second Boot Device	[HDD-0]	
Third Boot Device	[LS120]	
Boot Other Device	[Enabled]	
Swap Floppy Drive	[Disabled]	
Boot Up Floppy Seek	[Disabled]	
Boot Up NumLock Status	[On]	
Gate A20 Option	[Fast]	
Typematic Rate Setting	[Disabled]	
x Typematic Rate (Chars/Sec)	6	
x Typematic Delay (Msec)	250	
Security Option	[Setup]	
OS Select for DRAM > 64MB	[Non-OS2]	
Video BIOS Shadow	[Enabled]	
C8000-CBFFF Shadow	[Disabled]	
CC000-CFFFF Shadow	[Disabled]	
D0000-D3FFF Shadow	[Disabled]	
D4000-D7FFF Shadow	[Disabled]	
D8000-DBFFF Shadow	[Disabled]	
DC000-DFFFF Shadow	[Disabled]	
Small Logo (EPA) Show	[Enabled]	
↑↓→←:Move Enter: Select +/-/PU/PD:Value F10:Save ESC:Exit F1:General Help F5: Previous Values F6:Fail-Safe Defaults F7:Optimized Defaults		

BIOS Features Setup Menu

The "BIOS FEATURES SETUP" allow you to configure your system for basic operation. The user can select the system's default speed, boot-up sequence, keyboard operation, shadowing and security.

A brief introduction of each setting in the BIOS FEATURES SETUP program is given below.

VIRUS WARNING :

This item allows you to choose the Virus Warning feature for IDE Hard Disk boot sector protection. If this function is enabled and someone attempt to write data into this area, BIOS will show a warning message on screen and alarm beep.

CPU INTERNAL CACHE/EXTERNAL CACHE :

These two categories speed up memory access. However, it depends on CPU/chipset design.

CPU L2 CACHE ECC CHECKING :

This item allows you to enable or disable CPU L2 Cache ECC checking.

QUICK POWER ON SELF-TEST:

This item allows you to speed up Power On Self Test (POST) after power-up the computer. When enabled, the BIOS will shorten or skip some check items during POST.

FIRST/SECOND/THIRD/OTHER BOOT DEVICE:

The BIOS attempt to load the operating system from the devices in the sequence selected in these items.

SWAP FLOPPY DRIVE:

This field is effective only in systems with two floppy drives. Selecting Enabled assigns physical drive B to logical drive A, and physical drive A to logical drive B.

BOOT UP FLOPPY SEEK:

You may enable / disable this item to define whether the system will look for a floppy disk drive to boot at power-on, or proceed directly to the hard disk drive.

BOOT UP NUMLOCK STATUS:

Select power on state for NumLock.

GATE A20 OPTION:

This entry allows you to select how the gate A20 is handled. When Normal was set, a pin in the keyboard controller controls Gate A20. And when Fast was set, the chipset controls Gate A20.

TYPEMATIC RATE SETTING:

Enable this item if you wish to be able to configure the characteristics of your keyboard. Typematic refers to the way in which characters are entered repeatedly if a key is held down. For example, if you press and hold down the "A" key, the letter "a" will repeatedly appear on your screen on your screen until you release the key. When enabled, the typematic rate and typematic delay can be selected.

TYPEMATIC RATE (CHARS/SEC):

This item sets the number of times a second to repeat a key stroke when you hold the key down.

TYPEMATIC DELAY (MSEC):

The item sets the delay time after the key is held down before it begins to repeat the keystroke.

SECURITY OPTION:

This category allows you to limit access to the system and Setup, or just to Setup.

System	The system will not boot and access to Setup will be denied if the correct password is not entered at the prompt.
Setup	The system will boot, but access to Setup will be denied if the correct password is not entered at the prompt.

 To disable security, select PASSWORD SETTING at Main Menu and then you will be asked to enter password. Do not type anything and just press <Enter>, it will disable security. Once the security is disabled, the system will boot and you can enter Setup freely.

OS SELECT FOR DRAM >64MB :

Select the operating system that is running with greater than 64MB or RAM on the system. You may choose OS2 or Non-OS2.

VIDEO BIOS SHADOW :

Determines whether video BIOS will be copied to RAM. However, it is optional depending on chipset design. Video Shadow will increase the video speed.

C8000-CBFFF SHADOW ~ DC000-DFFFF SHADOW:

These categories determine whether option ROMs will be copied to RAM. An example of such option ROM would be support of on-board SCSI.

4-5. ADVANCED CHIPSET FEATURES

Choose the "ADVANCED CHIPSET FEATURES" from the main menu, the screen shown as below.

Phoenix - AwardBIOS CMOS Setup Utility
Advanced Chipset Features

		Item Help
DRAM Timing by SPD	[Enabled]	
x DRAM Clock	Host CLK	
x SDRAM Cycle Length	3	Menu Level ►
x Bank Interleave	Disabled	
Memory Hole	[Disabled]	
P2C/C2P Concurrency	[Enabled]	
System BIOS Cacheable	[Disabled]	
Video RAM Cacheable	[Disabled]	
Frame Buffer Size	[16M]	
AGP Aperture Size	[64M]	
AGP-4X Mode	[Enabled]	
AGP Driving Control	[Auto]	
x AGP Driving Value	DA	
Panel Type	[07]	
Boot Device Select	[Auto]	
OnChip USB	[Enabled]	
USB Keyboard Support	[Disabled]	
OnChip Sound	[Auto]	
CPU to PCI Write Buffer	[Enabled]	
PCI Dynamic Bursting	[Enabled]	
PCI Master 0 WS Write	[Enabled]	
PCI Delay Transaction	[Disabled]	
PCI#2 Access #1 Retry	[Enabled]	
AGP Master 1 WS Write	[Disabled]	
AGP Master 1 WS Read	[Disabled]	
IO Channel check NMI	[Disabled]	
↑↓→←:Move Enter: Select +/-/PU/PD:Value F10:Save ESC:Exit F1:General Help F5: Previous Values F6:Fail-Safe Defaults F7:Optimized Defaults		

Chipset Features Setup Screen

The parameter allows you to configure the system based on the specific features of the installed chipset. The chipset manages bus speed and access to system memory resources, such as DRAM and the external cache.

It also coordinates communications between conventional ISA bus and the PCI bus. It must be stated that these items should never need to be altered. The default settings have been chosen because they provide the best operating conditions for the system. The only time you might consider making any changes would be if you discovered that data was being lost while using your system.

DRAM CLOCK:

This item allows you to control the DRAM speed.

SDRAM CYCLE LENGTH:

When synchronous DRAM is installed, the number of clock cycles of CAS latency depends on the DRAM timing. Do not reset this field from the default value specified by the system designer.

MEMORY HOLE:

In order to improve performance, certain space in memory is reserved for ISA cards. This memory must be mapped into the memory space below 16MB.

P2C/C2P CONCURRENCY:

This item allows you to enable/disable the PCI to CPU, CPU to PCI concurrency.

SYSTEM BIOS CACHEABLE:

This item allows you to enable caching of the system BIOS ROM at F0000h-FFFFFh, resulting in better system performance. However, if any program writes to this memory area, a system error may result.

VIDEO RAM CACHEABLE:

Select Enabled allows caching of the video RAM, resulting in better system performance. However, if any program writes to this memory area, a system error may result.

AGP APERTURE SIZE:

This allows you to adjust the graphics aperture size. The aperture is a portion of the PCI memory address range dedicated for graphics memory address space. Host cycles that hit the aperture range are forwarded to the AGP without any translation.

AGP-4X MODE:

This item allows you to enable or disable the AGP-4X Mode.

AGP DRIVING CONTROL:

This item allows you to adjust the AGP driving force. Choose *Manual* to key in an AGP Driving Value in the next selection. This field is recommended to set in *Auto* for avoiding any error in your system.

AGP DRIVING VALUE:

This item allows you to adjust the AGP driving force.

ONCHIP USB:

This should be enabled if your system has a USB installed on the system board and you want to use it. Even when so equipped, if you add a higher performance controller, you will need to disable this feature.

USB KEYBOARD SUPPORT:

Select Enabled if your system contains a Universal Serial Bus (USB) controller and you have a USB keyboard.

ONCHIP SOUND:

This item allows you to control the onboard AC '97 audio.

CPU TO PCI WRITE BUFFER:

When this field is Enabled, writes from the CPU to the PCI bus are buffered, to compensate for the speed differences between the CPU and the PCI bus. When Disabled, the writes are not buffered and the CPU must wait until the write is complete before starting another write cycle.

PCI DYNAMIC BURSTING:

When Enabled, every write transaction goes to the write buffer. Burstable transactions then burst on the PCI bus and non-burstable transaction don't.

PCI MASTER 0 WS WRITE:

When Enabled, writes to the PCI bus are executed with zero wait states.

PCI DELAY TRANSACTION:

The chipset has an embedded 32-bit posted write buffer to support delay transactions cycles. Select Enabled to support compliance with PCI specification version 2.1.

PCI#2 ACCESS #1 RETRY:

When disabled, PCI#2 will not be disconnected until access finishes. When Enabled, PCI#2 will be disconnected if max retries are attempted without success.

AGP MASTER 1 WS WRITE:

When Enabled, writes to the AGP (Accelerated Graphics Port) are executed with one wait state.

AGP MASTER 1 WS READ:

When Enabled, read to the AGP (Accelerated Graphics Port) are executed with one wait state.

IO CHANNEL CHECK NMI:

This field enables or disables IO channel check NMI. Before selecting this function, the user should check first that NMI function is enabled as described in chapter 2 (Reset/NMI/Clear Watchdog Selection).

4-6. INTEGRATED PERIPHERALS

Choose "INTEGRATED PERIPHERALS" from the main setup menu, a display will be shown on screen as below:

Phoenix - AwardBIOS CMOS Setup Utility
Integrated Peripherals

On-Chip IDE Channel0	[Enabled]	Item Help
On-Chip IDE Channel1	[Enabled]	
IDE Prefetch Mode	[Enabled]	
Primary Master PIO	[Auto]	Menu Level ►
Primary Slave PIO	[Auto]	
Secondary Master PIO	[Auto]	
Secondary Slave PIO	[Auto]	
Primary Master UDMA	[Auto]	
Primary Slave UDMA	[Auto]	
Secondary Master UDMA	[Auto]	
Secondary Slave UDMA	[Auto]	
Init Display First	[Onboard]	
IDE HDD Block Mode	[Enabled]	
Onboard FDD Controller	[Enabled]	
Onboard Serial Port 1	[Auto]	
Onboard Serial Port 2	[Auto]	
UART 2 Mode	[Standard]	
x IR Function Duplex	Half	
x TX,RX inverting enable	No, Yes	
Onboard Parallel Port	[378/IRQ7]	
Onboard Parallel Mode	[Normal]	
x ECP Mode Use DMA	3	
x Parallel Port EPP Type	EPP1.9	
↑↓→←:Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit F1:General Help F5: Previous Values F6:Fail-Safe Defaults F7:Optimized Defaults		

Integrated Peripherals Setup Screen

By moving the cursor to the desired selection and by pressing the <F1> key, the all options for the desired selection will be displayed for choice.

ONCHIP IDE CHANNEL 0:

The chipset contains a PCI IDE interface with support for two IDE channels. Select Enabled to activate the primary IDE interface. Select Disabled to deactivate this interface.

ONCHIP IDE CHANNEL 1:

The chipset contains a PCI IDE interface with support for two IDE channels. Select Enabled to activate the secondary IDE interface. Select Disabled to deactivate this interface.

IDE PREFETCH MODE:

The onboard IDE drive interfaces supports IDE pre-fetching for faster drive accesses. If you install a primary and or secondary add-in IDE interface, set this field to *Disabled* if the interface does not support pre-fetching.

PRIMARY MASTER/SLAVE PIO:

SECONDARY MASTER/SLAVE PIO:

The four IDE PIO fields allow you to set a PIO mode (0-4) for each of the four IDE devices that the onboard IDE interface supports. Modes 0 through 4 provide successively increased performance. In Auto mode, the system automatically determines the best mode for each device.

PRIMARY MASTER/SLAVE UDMA:

SECONDARY MASTER/SLAVE UDMA:

Ultra DMA/33 implementation is possible only if your IDE hard drive supports it and the operating environment includes a DMA driver (Windows 95 OSR2 or a third-party IDE bus master driver). If you hard drive and your system software both support Ultra DMA/33, select Auto to enable BIOS support.

INIT DISPLAY FIRST:

This item allows you to decide to active whether PCI Slot or on-chip VGA first. The choices are PCI Slot and Onboard.

IDE HDD BLOCK MODE:

Block mode is also called block transfer, multiple commands, or multiple sector read/write. If your IDE hard drive supports block mode (most new drives do), select Enabled for automatic detection of the optimal number of block read/writes per sector the drive can support.

ONBOARD FDC CONTROLLER:

Select Enabled if the system has a floppy disk controller (FDC) installed on the system board and you wish to use it. If you install and-in FDC or the system has no floppy drive, select Disabled.

ONBOARD SERIAL PORT 1:

ONBOARD SERIAL PORT 2:

Select an address and corresponding interrupt for the 1st, 2nd, 3rd and forth serial ports.

UART 2 MODE:

This item allows you to select which mode for the Onboard Serial Port 2.

IR FUNCTION DUPLEX:

This item allows you to select the IR half/full duplex function.

TX, RX INVERTING ENABLE:

This item allows you to enable TX, RX inverting which depends on different H/W requirement. This field is not recommended to change its default setting for avoiding any error in your system.

ONBOARD PARALLEL PORT:

This item allows you to determine access onboard parallel port controller with which I/O address.

ONBOARD PARALLEL MODE:

Select an operating mode for the onboard (printer) port. Select *Normal* unless you are certain your hardware and software both support one of the other available modes.

ECP MODE USE DMA:

Select a DMA channel for the parallel port for use during ECP mode.

PARALLEL PORT EPP TYPE:

Select EPP port type 1.7 or 1.9 as required by your parallel peripheral.

4-7. POWER MANAGEMENT SETUP

Choose "POWER MANAGEMENT SETUP" option on the main menu, a display will be shown on screen as below :

Phoenix - AwardBIOS CMOS Setup Utility
Power Management Setup

ACPI Function [Enabled] ▶ Power Management [Press Enter] PM Control by APM [Yes] Video Off Option [Suspend -> Off] Video Off Method [V/H SYNC+Blank] MODEM Use IRQ [3] Soft-Off by PWRBTN [Instant-Off] State After Power Failure [Off] ▶ Wake Up Events [Press Enter]	Item Help <hr/> Menu Level ▶
↑↓→←:Move Enter: Select +/-/PU/PD:Value F10:Save ESC:Exit F1:General Help F5: Previous Values F6:Fail-Safe Defaults F7:Optimized Defaults	

Power Management Setup Screen

The "Power Management Setup" allows the user to configure the system to the most effectively save energy while operating in a manner consistent with your own style of computer use.

ACPI FUNCTION:

Users are allowed to enable or disable the Advanced Configuration and Power Management (ACPI).

POWER MANAGEMENT:

This item allows the user to select the type or degree of power saving and is directly related to HDD Power Down, Doze Mode and Suspend Mode.

PM CONTROL BY APM:

If Advanced Power Management (APM) is installed on your system, selecting Yes gives better power savings.

VIDEO OFF OPTION:

This category determines the power-saving modes during which the monitor goes blank:

ALWAYS ON	Monitor remains on during power-saving modes.
SUSPEND → OFF	Monitor blanked when system enters Suspend mode.
SUSP,STBY → OFF	Monitor blanked when system enters either Suspend or Standby mode.
ALL MODES → OFF	Monitor blanked when system enters any power saving mode.

VIDEO OFF METHOD:

This category determines the manner in which the monitor is blanked.

V/H SYNC+BLANK	This selection will cause the system to turn off the vertical & horizontal synchronization ports and writes blanks to video buffer.
BLANK SCREEN	This selection only writes blanks to video buffer.
DPMS SUPPORT	Initial display power management signaling.

MODEM USE IRQ:

This item enable you to name the interrupt request (IRQ) line assigned to the modem (if any) on your system. Activity of the selected IRQ always awakens the system.

SOFT-OFF BY PWRBTN:

Pressing the power button for more than 4 seconds forces the system to enter the Soft-Off state when the system has “hung”. The choices are Delay 4 Sec and Instant-Off.

STATE AFTER POWER FAILURE:

This field lets you determine the state that your system returns to after a power failure. When set to OFF, the system will not boot after a power failure. When set to ON, the system will restart after a power failure.

WAKE UP EVENTS:

Wake up events are I/O events whose occurrence can prevent the system from entering a power saving mode or can awaken the system from such a mode.

In effect, the system remains alert for anything that occurs to a device, which is configured as ON, even when the system is in a power down mode.

VGA:

When Enabled, you can set the VGA awakens the system.

LPT & COM:

When ON of LPT & COM, any activity from one of the listed system peripheral devices or IRQs wakes up the system.

HDD & FDD:

When ON of HDD & FDD, any activity from one of the listed system peripheral devices wakes up the system.

PCI MASTER:

When ON of PCI Master, any activity from one of the listed system peripheral devices wakes up the system.

WAKE UP ON LAN/RING:

This category allows you to wake up the system from LAN from remote host. And it also can be awakened from an input signal on serial Ring Indicator (RI) line (incoming call on the modem).

RTC ALARM RESUME:

When Enabled, you can set the date and the time at which the RTC alarm awakens the system from Suspend mode.

PRIMARY INTR:

When set to Off, IRQ Activity Monitoring is set to BIOS default. When set to On, user may select the desired setting.

4-8. PNP/PCI CONFIGURATION

Choose "PNP/PCI CONFIGURATION" from the main menu, a display will be shown on screen as below:

Phoenix - AwardBIOS CMOS Setup Utility
PnP/PCI Configurations

PNP OS Installed	[Yes]	Item Help
Reset Configuration Data	[Disabled]	
Resources Controlled By	[Auto(ESCD)]	Menu Level ►
x IRQ Resources	Press Enter	Select Yes if you are using a Plug and Play capable operating system Select No if you need the BIOS to configure non-boot devices
x DMA Resources	Press Enter	
PCI/VGA Palette Snoop	[Disabled]	
Assign IRQ for VGA	[Enabled]	
Assign IRQ for USB	[Enabled]	
↑↓→←:Move Enter: Select +/-/PU/PD:Value F10:Save ESC:Exit F1:General Help F5: Previous Values F6:Fail-Safe Defaults F7:Optimized Defaults		

PNP/PCI Configuration Setup Screen

This section describes how to configure PCI bus system. PCI, also known as Personal Computer Interconnect, is a system, which allows I/O devices to operate at speeds nearing the speed of the CPU itself uses when communicating with its own special components. This section covers technical items, which is strongly recommended for experienced users only.

PNP OS INSTALLED:

This item allows you to determine install PnP OS or not.

RESET CONFIGURATION DATA:

Normally, you leave this field Disabled. Select Enabled to reset Extended System Configuration Data (ESCD) when you exit Setup if you have installed a new add-on and the system configuration has caused such a serious conflict that the operating system cannot boot.

RESOURCE CONTROLLED BY:

The Award Plug and Play Bios can automatically configure all of the booth and Plug and Play-compatible devices. However, this capability means absolutely nothing unless you are using a Plug and Play operating system such as Windows 95. By choosing “manual”, you are allowed to configure the *IRQ Resources*, *DMA Resources* and *Memory Resources*. The choices are Auto (ESCD) and Manual.

IRQ RESOURCES:

You may assign each system interrupt a type, depending on the type of device using the interrupt.

DMA RESOURCES:

When resources are controlled manually, assign each system DMA channel a type, depending on the type of device using the DMA channel.

PCI/VGA PALETTE SNOOP:

Leave this field at disabled.

ASSIGN IRQ FOR USB:

Enable or Disable to assign IRQ for USB.

ASSIGN IRQ FOR VGA:

Enable or Disable to assign IRQ for VGA.

4-9. PC HEALTH STATUS

Choose "PC HEALTH STATUS" from the main menu, a display will be shown on screen as below:

Phoenix - AwardBIOS CMOS Setup Utility
PC Health Status

Current CPU Temp.	34½C/ 93½F	Item Help
Current CPU FAN Speed	0 RPM	Menu Level ►
Vcore	1.14V	
2.5V	2.56V	
3.3V	3.33V	
5V	5.20V	
12V	12.24V	

↑↓→←:Move Enter: Select +/-/PU/PD:Value F10:Save ESC:Exit F1:General Help
F5: Previous Values F6:Fail-Safe Defaults F7:Optimized Defaults

PC Health Status Setup Screen

The setup menu allows you to select whether to choose between monitoring or ignoring the hardware monitoring function of your system.

CURRENT CPU TEMPERATURE:

This item shows you the current CPU temperature.

CURRENT CPUFAN SPEED:

This item shows you the current CPUFAN speed.

VCORE:

This item shows you the current system voltage.

4-10. FREQUENCY/VOLTAGE CONTROL

Choose "FREQUENCY/VOLTAGE CONTROL" from the main menu, a display will be shown on screen as below:

Phoenix - AwardBIOS CMOS Setup Utility
Frequency Control

VIA C3 Clock Ratio [Default] Auto Detect DIMM/PCI Clk [Enabled] Spread Spectrum [Disabled]	Item Help <hr/> Menu Level ► This item is for VIA C3 CPU Ratio adjustment.
↑↓→←:Move Enter: Select +/-/PU/PD:Value F10:Save ESC:Exit F1:General Help F5: Previous Values F6:Fail-Safe Defaults F7:Optimized Defaults	

Frequency / Voltage Control Setup Screen

This setup menu allows you to specify your settings for frequency/voltage control.

AUTO DETECT DIMM/PCI CLK:

This item allows you to enable or disable auto detect DIMM/PCI Clock.

SPREAD SPECTRUM:

This item allows you to enable or disable the spread spectrum modulate.

4-11. LOAD FAIL-SAFE DEFAULTS

By pressing the <ENTER> key on this item, you get a confirmation dialog box with a message similar to the following:

Load Fail-Safe Defaults (Y/N) ? N

To use the BIOS default values, change the prompt to "Y" and press the <Enter > key. CMOS is loaded automatically when you power up the system.

4-12. LOAD OPTIMIZED DEFAULTS

When you press <Enter> on this category, you get a confirmation dialog box with a message similar to the following:

Load Optimized Defaults (Y/N) ? N

Pressing "Y" loads the default values that are factory setting for optimal performance system operations.

4-13. PASSWORD SETTING

User is allowed to set either supervisor or user password, or both of them. The difference is that the supervisor password can enter and change the options of the setup menus while the user password can enter only but do not have the authority to change the options of the setup menus.

TO SET A PASSWORD

When you select this function, the following message will appear at the center of the screen to assist you in creating a password.

Enter Password:

Type the password up to eight characters in length, and press < Enter >. The password typed now will clear any previously entered password from CMOS memory. You will be asked to confirm the password. Type the password again and press the < Enter > key. You may also press < Esc > to abort the selection and not enter a password.

 User should bear in mind that when a password is set, you will be asked to enter the password everything you enter CMOS setup Menu.

TO DISABLE THE PASSWORD


To disable the password, select this function (do not enter any key when you are prompt to enter a password), and press the <Enter> key and a message will appear at the center of the screen:

PASSWORD DISABLED!!!
Press any key to continue...

Press the < Enter > key again and the password will be disabled. Once the password is disabled, you can enter Setup freely.

4-14. SAVE & EXIT SETUP

After you have completed adjusting all the settings as required, you must remember to save these setting into the CMOS RAM. To save the settings, select "SAVE & EXIT SETUP" and press <Enter>, a display will be shown as follows:

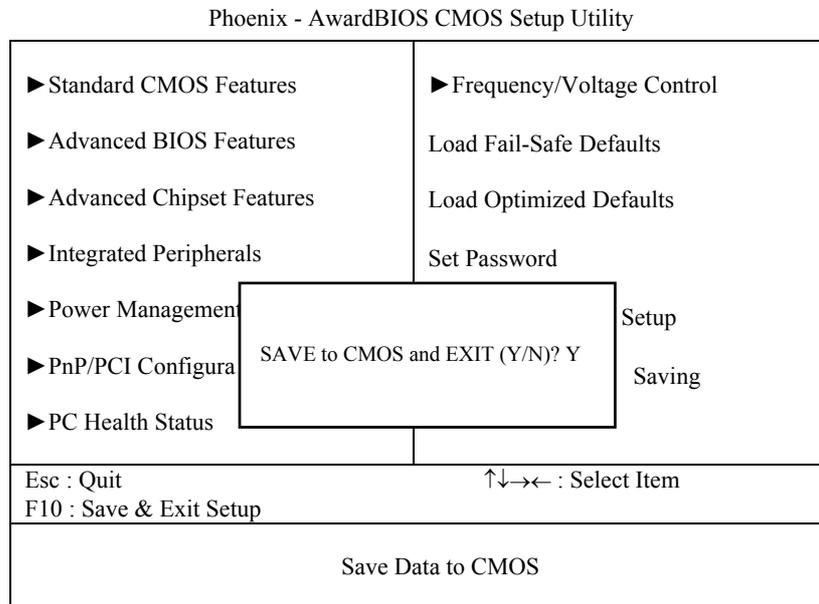

When you confirm that you wish to save the settings, your system will be automatically restarted and the changes you have made will be implemented. You may always call up the setup program at any time to adjust any of the individual items by pressing the key during boot up.

EXPANSION BUS



This appendix indicates the pin assignments.


Section includes:

- PC/104 Plus BUS Connector Pin Assignment
- Compact Flash Card Connector Pin Assignment

PC/104 PLUS BUS CONNECTOR PIN ASSIGNMENT

PC/104 Plus Bus connector is divided into four rows. Each row consists of 30 pins.

The pin assignments are as followed:

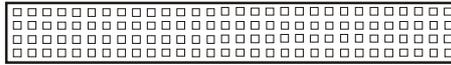


A		B		C		D	
PIN	ASSIGNMENT	PIN	ASSIGNMENT	PIN	ASSIGNMENT	PIN	ASSIGNMENT
A1	GND	B1	Reserved	C1	+5V	D1	AD00
A2	V/I/O	B2	AD02	C2	AD01	D2	+5V
A3	AD05	B3	GND	C3	AD04	D3	AD03
A4	C/BE0#	B4	AD07	C4	GND	D4	AD06
A5	GND	B5	AD09	C5	AD08	D5	GND
A6	AD11	B6	V/I/O	C6	AD10	D6	M66EN
A7	AD14	B7	AD13	C7	GND	D7	AD12
A8	+3.3V	B8	C/BE1#	C8	AD15	D8	+3.3V
A9	SERR#	B9	GND	C9	SB0#	D9	PAR
A10	GND	B10	PERR#	C10	+3.3V	D10	SDONE
A11	STOP#	B11	+3.3V	C11	LOCK#	D11	GND
A12	+3.3V	B12	TRDY#	C12	GND	D12	DEVSEL
A13	FRAME#	B13	GND	C13	IRDY#	D13	+3.3V
A14	GND	B14	AD16	C14	+3.3V	D14	C/BE2#
A15	AD18	B15	+3.3V	C15	AD17	D15	GND
A16	AD21	B16	AD20	C16	GND	D16	AD19
A17	+3.3V	B17	AD23	C17	AD22	D17	+3.3V
A18	IDSEL0	B18	GND	C18	IDSEL1	D18	IDSEL2
A19	AD24	B19	C/BE3#	C19	V/I/O	D19	IDSEL3
A20	GND	B20	AD26	C20	AD25	D20	GND
A21	AD29	B21	+5V	C21	AD28	D21	AD27
A22	+5V	B22	AD30	C22	GND	D22	AD31
A23	REQ0#	B23	GND	C23	REQ1#	D23	V/I/O
A24	GND	B24	REQ2#	C24	+5V	D24	GNT0#
A25	GNT1#	B25	V/I/O	C25	GNT2#	D25	GND
A26	+5V	B26	CLK0	C26	GND	D26	CLK1
A27	CLK2	B27	+5V	C27	CLK3	D27	GND
A28	GND	B28	INTD#	C28	+5V	D28	RST#
A29	+12V	B29	INTA#	C29	INTB#	D29	INTC#
A30	-12V	B30	Reserved	C30	Reserved	D30	GND

COMPACT FLASH CARD CONNECTOR PIN ASSIGNMENT

The pin assignments of Compact Flash Card connector are stated below.

PIN	ASSIGNMENT	PIN	ASSIGNMENT
1	GND	26	-CD1
2	D03	27	D111
3	D04	28	D121
4	D05	29	D131
5	D06	30	D141
6	D07	31	D151
7	-CS0	32	-CS11
8	A102	33	-VS1
9	-ATASEL	34	-IORD
10	A092	35	-IOWR
11	A082	36	-WE3
12	+3.3V	37	INTRQ
13	VCC	38	VCC
14	A062	39	-CSEL
15	A052	40	-VS2
16	A042	41	-RESET
17	A032	42	IORDY
18	A02	43	-INPACK
19	A01	44	-REG3
20	A00	45	-DASP
21	D00	46	-PDIAG
22	D01	47	D081
23	D02	48	D091
24	-IOCS16	49	D101
25	-CD2	50	GND

TECHNICAL SUMMARY

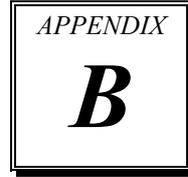


This section introduce you the maps concisely.

Section includes:

- Block Diagram
- Interrupt Map
- RTC & CMOS RAM Map
- Timer & DMA Channels Map
- I / O & Memory Map

BLOCK DIAGRAM

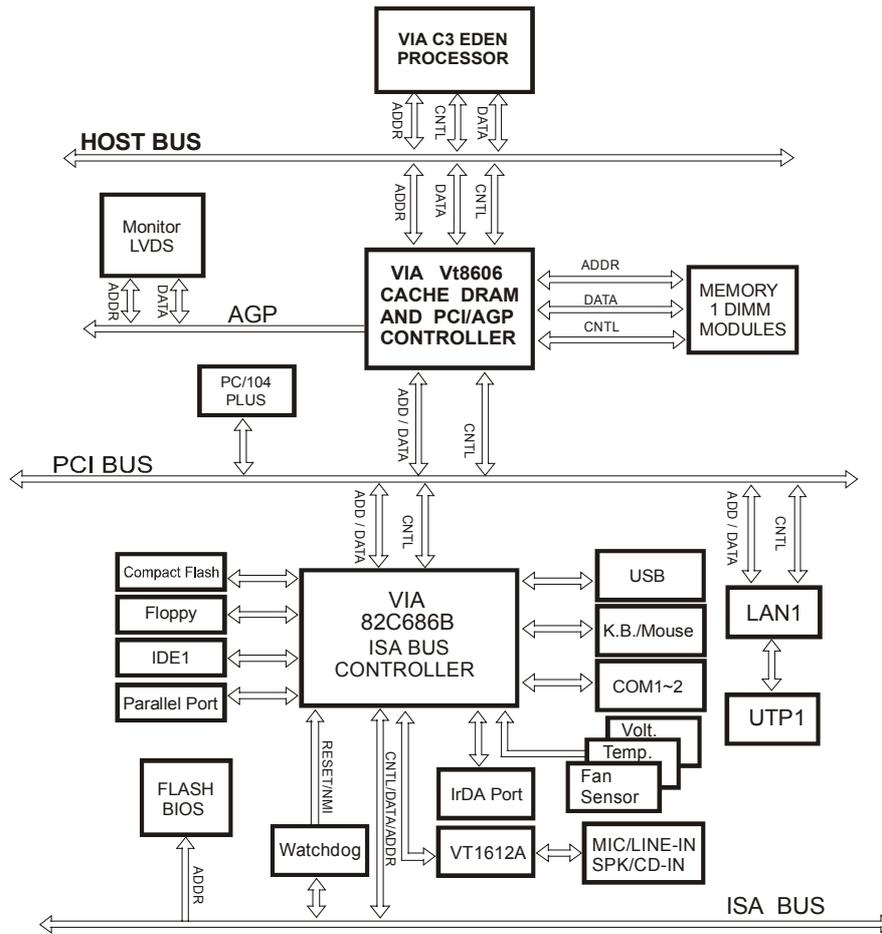

INTERRUPT MAP

IRQ	ASSIGNMENT
0	System TIMER interrupt from TIMER-0
1	Keyboard output buffer full
2	Cascade for IRQ 8-15
3	Serial port 2 / Modem
4	Serial port 1
5	Parallel port 2 / Sound Blaster
6	Floppy
7	Parallel port 1
8	RTC clock
9	Available
10	COM4
11	COM3
12	PS/2 Mouse
13	Math coprocessor
14	IDE1
15	IDE2

RTC & CMOS RAM MAP

CODE	ASSIGNMENT
00	Seconds
01	Second alarm
02	Minutes
03	Minutes alarm
04	Hours
05	Hours alarm
06	Day of week
07	Day of month
08	Month
09	Year
0A	Status register A
0B	Status register B
0C	Status register C
0D	Status register D
0E	Diagnostic status byte
0F	Shutdown byte
10	Floppy Disk drive type byte
11	Reserve
12	Hard Disk type byte
13	Reserve
14	Equipment byte
15	Base memory low byte
16	Base memory high byte
17	Extension memory low byte
18	Extension memory high byte
30	Reserved for extension memory low byte
31	Reserved for extension memory high byte
32	Date Century byte
33	Information Flag
34-3F	Reserve
40-7f	Reserved for Chipset Setting Data

TIMER & DMA CHANNELS MAP

Timer Channel Map :

Timer Channel	Assignment
0	System timer interrupt
1	DRAM Refresh request
2	Speaker tone generator

DMA Channel Map :

DMA Channel	Assignment
0	Available
1	Available / Sound Blaster
2	Floppy
3	Available / ECP
4	Cascade for DMA controller 1
5	Available
6	Available
7	Available

I/O & MEMORY MAP

Memory Map :

MEMORY MAP	ASSIGNMENT
0000000-009FFFF	System memory used by DOS and application
00A0000-00BFFFF	Display buffer memory for VGA/ EGA / CGA / MONOCHROME adapter
00C0000-00DFFFF	Reserved for I/O device BIOS ROM or RAM buffer.
00E0000-00EFFFF	Reserved for PCI device ROM
00F0000-00FFFFFF	System BIOS ROM
0100000-FFFFFFF	System extension memory

I/O Map :

I/O MAP	ASSIGNMENT
000-01F	DMA controller (Master)
020-021	Interrupt controller (Master)
022-023	Chipset controller registers I/O ports.
040-05F	Timer control registers.
060-06F	Keyboard interface controller (8042)
070-07F	RTC ports & CMOS I/O ports
080-09F	DMA register
0A0-0BF	Interrupt controller (Slave)
0C0-0DF	DMA controller (Slave)
0F0-0FF	Math coprocessor
1F0-1F8	Hard Disk controller
278-27F	Parallel port-2
2B0-2DF	Graphics adapter controller
2F8-2FF	Serial port-2
360-36F	Net work ports
378-37F	Parallel port-1
3B0-3BF	Monochrome & Printer adapter
3C0-3CF	EGA adapter
3D0-3DF	CGA adapter
3F0-3F7	Floppy disk controller
3F8-3FF	Serial port-1