

Motherboard 7KT400

- 1. 7KT400 Specifications 4
 - 1.1 Introduction 4
 - 1.2 Package Contents 5
 - 1.3 Specifications and Features 6
 - CPU Processor 6
 - Chipset 6
 - PCI 6
 - DDR SDRAM Memory 6
 - Universal Serial Bus 6
 - AGP 6
 - WOL (Wake On LAN) 6
 - Award BIOS 7
 - ATA 133 On Board 7
 - PC'99 Color-coded I/O Ports 7
 - Hardware Monitoring in Chip W83697HF 7
 - 1.4 7KT400 Layout Diagram 8
 - 1.5 CPU Installation 10
 - CPU Installation Procedures for Socket 462 10
 - 1.6 DDR SDRAM Installation 11
 - 1.7 Connectors & Jumpers Setting 12
 - 1.7.1 Back Panel I/O Connectors 12
 - 1.7.1.1 PS/2 Mouse / Keyboard CONN: 12
 - 1.7.1.2 USB0/1/2/3 12
 - 1.7.1.3 Serial Interface Port: COM1/2 13
 - 1.7.1.4 Parallel Interface Port 13
 - 1.7.1.5 Audio Ports 13
 - 1.7.2 ATX Main Power Connectors: ATXPWR 14
 - 1.7.3 Floppy Disk Connector: FDD 15
 - 1.7.4 Hard Disk Connectors: IDE1/IDE2 15
 - 1.7.5 Fan Connectors: FAN1/CPUFAN/SYSFAN 15
 - 1.7.6 CD Audio-In Connectors: CDIN1 16
 - 1.7.7 IR infrared module: IR/CIR Connector 16
 - 1.7.8 USB Pin Header: USB4/5 17
 - 1.7.9 Front Panel Connectors: PANEL1 18

- 1.7.10 Wake On LAN Connector: WOL 20
- 1.7.11 Game/MIDI Connector: J1 20
- 1.7.12 Smart Panel Connectors (optional): 21
 - 1.7.12.1 Front COM2 Header Connector: COM2 21
 - 1.7.12.2 Audio/Mic Auto Connector: JP1 21
 - 1.7.12.3 SP11 Printer Error LED Port: SP-J6 22
 - 1.7.12.4 Second BIOS Connector: SP-J2 22
 - 1.7.12.5 6-channel SP-DIF Audio Connector: J6 23
- 1.7.13 CMOS Function Selector: Clear_CMOS 24
- 1.7.14 USB4/5 Wake-up Selector: J4 24
- 1.7.15 CPU Clock Frequency Selector: J3 & J5 25
- 1.7.16 Ports USB0/1, 2/3 Wake-up Selector : J2 26
- 2. BIOS Setup 27**
 - 2.1 BIOS Support 27
 - 2.2 Main Menu 30
 - 2.3 Standard CMOS Features 33
 - 2.4 Advanced BIOS Features 37
 - 2.5 Advanced Chipset Features 41
 - 2.6 Integrated Peripherals 49
 - 2.7 Power Management Setup 56
 - 2.8 PnP/PCI Configurations 62
 - 2.9 PC Health Status 65
 - 2.10 Frequency/Voltage Control 66
 - 2.11 Load Fail-Safe Defaults 67
 - 2.12 Load Optimized Defaults 68
 - 2.13 Set Supervisor / User Password 69
 - 2.14 Save & Exit Setup 70
 - 2.15 Exit Without Saving 71
- 3. Drivers & Utilities 72**
 - 3.1 Auto-run Menu 72
 - 3.2 Installing VIA Service Pack 73
 - 3.3 Installing Audio Driver 76
 - 3.4 Installing USB 2.0 Driver 78
- Appendices 80**
 - Appendix I Quick Jumper Setup 80

Memo

Chapter 1

Motherboard 7KT400

1. 7KT400 Specifications

1.1 Introduction

The 7KT400 motherboard is an integration of AMD Athlon/Duron CPU in Socket 462 packaging and the North Bridge VIA KT400 (VT8377) supporting 100/133/166 MHz Front Side Bus.

North Bridge KT400 on board also supports DDR 200/266/333 SDRAMs, while the South Bridge VT8235 provides stable supports of ULTRA ATA 133, 6-channel Audio playback and USB 2.0/1.1 interface.

The resulting architecture will provide an ideal multi-task environment to support operating systems such as MS-DOS, Windows, WindowsNT, Windows ME, Windows 2000, Novell, OS/2, Windows 95/98, Windows 98SE, Windows XP, UNIX, Liunx, SCO UNIX etc. This user-friendly manual is to describe in detail how to install, configure and use this motherboard with drivers and BIOS setup illustrations.

This manual is a general reference of the first release of this motherboard which is subject to update without notice. If any difference is found between this manual and the motherboard you are using, please visit our Web Site provided on the cover of this manual.

1.2 Package Contents

- ◆HDD UDMA66/100 Cable x1.
- ◆FDD Cable.
- ◆Flash Memory with BIOS.
- ◆I/O Shielding
- ◆Fully Setup Driver CD with built in utilities.
- ◆User Manual.

1.3 Specifications and Features

CPU Processor

- ◆ Support 100/133/166 MHz System Interface speed
- ◆ Single Socket 462 for AMD™ Athlon CPUs 700MHz~2700+ or higher*, and Duron CPUs 600 ~ 1300 MHz or higher*

* The higher frequency CPU should be compatible with AMD CPU specification and the motherboard latest BIOS version which will be released in our Web Site (url printed on the cover page).

Chipset

- ◆ VIA KT400 North Bridge
- ◆ VIA VT8235 South Bridge

PCI

- ◆ Supports 5 x PCI slots, 32-bit 33MHz PCI Bus speed.

DDR SDRAM Memory

- ◆ Supporting 64/128/256/512/1G....MB DDR module in 3 slots
- ◆ Supporting Synchronous 333/266/200MHz DDR SDRAM
- ◆ Supporting a maximum memory size of 3GB of DDR SDRAM

Universal Serial Bus

- ◆ Supporting two on-board Universal Serial Bus(USB)Ports and four external Universal serial Bus(USB)Ports.
- ◆ Supporting USB 2.0/1.1

AGP

- ◆ Supporting 1 x AGP8X slot, V3.0 compliant.

WOL (Wake On LAN)

- ◆ Supporting system power-on by LAN Ring-up signal.

Award BIOS

- ◆ Supporting Plug & Play specification which detects the peripheral devices and expansion cards automatically
- ◆ Supporting CD-ROM, SCSI, LAN BOOT, Temperature sensor, LAN, Alarm Bus CLK setup
- ◆ Supporting Desktop Management Interface (DMI) function for recording mainboard specification

ATA 133 On Board

- ◆ Supporting PIO Mode 5, Master Mode, high performance hard disk drives.
- ◆ Supporting Ultra DMA 33/66/100/133 Bus Master Mode.
- ◆ Supporting 4xIDE devices, including CD-ROM, CD-R, CD-RW, LS-120 and high capacity hard disk drives with LBA mode

PCI-Based AC 97 Digital Audio Processor

- ◆ AC 97 2.2 compatible Codec, 6-channel Audio interface.
- ◆ 8-bit Stereo Full-Duplex Codec with up to 48 KHz sampling rate
- ◆ 4 Analog Line-level Stereo inputs for connection from Line, CD, Video and AUX
- ◆ 2 Analog Line-level Stereo inputs for speakerphone and PC beep


PC'99 Color-coded I/O Ports

- ◆ 6 USB ports, USB 2.0 compliant.
- ◆ 2 COM ports; 1 Parallel port
- ◆ 1 PS/2 Mouse port; 1 PS/2 Keyboard port
- ◆ 1 Line-in; 1 Line-out; 1 Mic

Hardware Monitoring in Chip W83697HF

- ◆ Core voltage, CPU temperature and Fan speed monitoring

1.4 7KT400 Layout Diagram

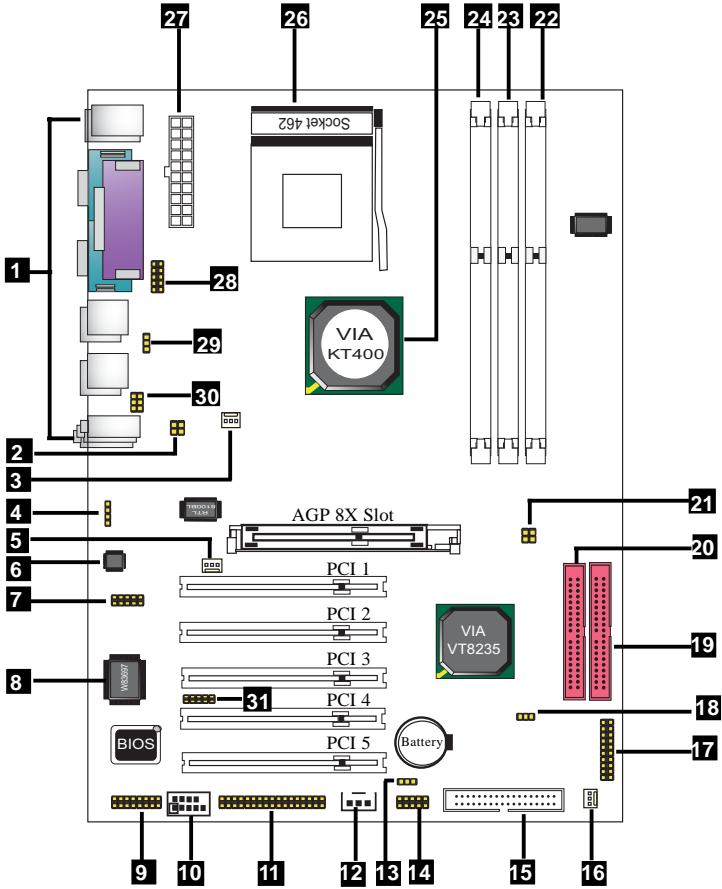

7KT400 Component Layout :


- 1. Back Panel: Back Panel I/O Connectors (Mouse, Keyboard, COM1, COM2, Printer, Mic in, Line in, Speaker-out, USB0/1/2/3)**
- 2. J3: CPU clock Frequency Connector**
- 3. CPUFAN1: CPU Fan Connector**
- 4. CDIN1: CD Audio In Connector**
- 5. FAN1: Cooling Fan Connector**
- 6. ALC650: AC'97 Audio Codec**
- 7. J6: Connector for 6-channel SP-DIF Audio (optional)**
- 8. W83697HF: Winbond I/O chip**
- 9. J1: Game Port/MIDI Connector**
- 10. COM2 Header: Pin Header for an external COM Port**
- 11. SP-J2: BIOS2 Connector(for Smart Panel Connector)**
- 12. WOL: Wake-on LAN Connector**
- 13. J4: USB4/5 Power Option**
- 14. USB4/5: USB Header for 2 USB Ports**
- 15. FDD: Floppy Drive Connector**
- 16. SYSFAN1: System Cooling Fan Connector**
- 17. Panel1: Front Panel Connector**
- 18. Clear CMOS: Jumper for clearing CMOS**
- 19. IDE2: IDE Connector**
- 20. IDE1: IDE Connector**
- 21. J5: CPU Clock Frequency Connector**
- 22. DIM3: DDR SDRAM Slot**
- 23. DIM2: DDR SDRAM Slot**
- 24. DIM1: DDR SDRAM Slot**
- 25. VIA KT400: North Bridge**
- 26. Socket 462: CPU socket for AMD CPUs**
- 27. ATXPWR: ATX Main Power Connector**
- 28. SP-J6: Printer Error LED Connector for Smart Panel Connection**
- 29. J2: Jumper for USB0/1, 2/3 Power Option**
- 30. JP1: Audio connector for Smart Panel connection**
- 31. IR/CIR: IR/CIR Connector for Infrared Signal Transmission/Reception**

1.5 CPU Installation

The motherboard operates with Socket 462 for AMD Athlon™ and Duron™ processor. The CPU should always have a Heat Sink and cooling fan attached to prevent overheating.

CPU Installation Procedures for Socket 462

1. Pull the lever sideways away from the socket then raise the lever to a 90-degree angle.
2. Locate Pin 1 in the socket and look for the white dot or cut edge in the CPU. Match Pin 1 with the white dot/cut edge then insert the CPU.
3. Press the lever down to complete the installation.
4. Make sure the spec of the cooling fan is good enough.
5. Please lock the fan on CPU very carefully, or you will damage the resistor array even circuit line on the mainboard.

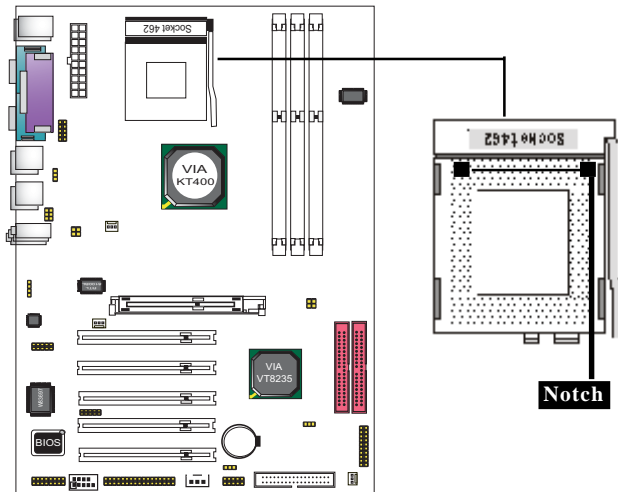


1.6 DDR SDRAM Installation

The motherboard supports a maximized 3GB memory. It provides three 184-pin unbuffered DDR sockets and each supports 64MB to 1GB DDR memory module.

DDR SDRAM Installation Procedures:

1. The DDR socket has a “Plastic Safety Tab” and the DDR memory module has an asymmetrical notch”, so the DDR memory module can only fit into the slot in one direction.
2. Push the tabs out. Insert the DDR memory modules into the socket at a 90-degree angle then push down vertically to fit onto place.
3. The Mounting Holes and plastic tabs should fit over the edge and hold the DDR memory modules in place.

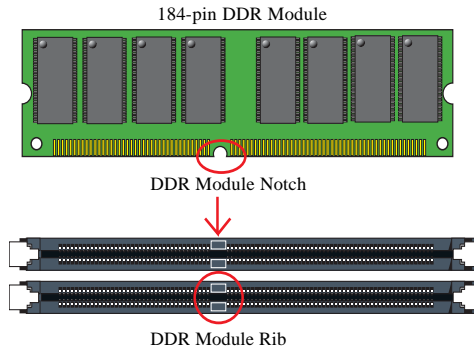
**Note:**

When you plug or unplug DDR module, you must check your power supply is OFF.

1.7 Connectors & Jumpers Setting

1.7.1 Back Panel I/O Connectors

This motherboard provides the following back panel connectors:

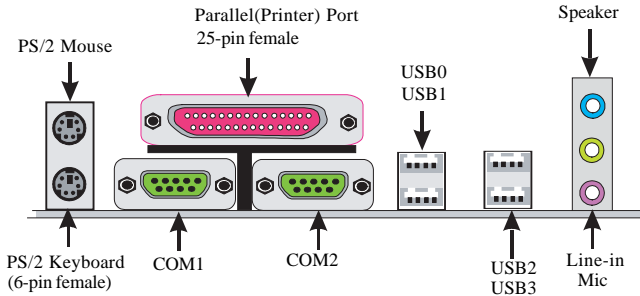


1.7.1.1 PS/2 Mouse / Keyboard CONN:

The motherboard provides a standard PS/2 mouse / Keyboard mini DIN connector for attaching a PS/2 mouse. You can plug a PS/2 mouse / Keyboard directly into this connector.

1.7.1.2 USB0/1/2/3

The motherboard provides a OHCI(Universal Host Controller Interface) & EHCI (Enhance Host Controller Interface) Universal Serial Bus Roots for connecting USB devices such as a keyboard, mouse and other USB devices.



USB Pin	Signal
1	+5V_SB
2	USBP0-(USBP1-/2-/3-)
3	USBP0+(USBP1+/2+/3+)
4	GND

1.7.1.3 Serial Interface Port: COM1/2

The serial interface port is sometimes referred to as an RS-232 port or an asynchronous communication port. Mice, printers, modems and other peripheral devices can be connected to a serial port. The serial port can also be used to connect computer systems together. If you like to transfer the contents of your hard disk to another system, it can be accomplished with serial port.



1.7.1.4 Parallel Interface Port


Unlike serial ports, parallel interface ports have been standardized and should not present any difficulty interfacing peripherals to your system. Sometimes called a Centronics port, the parallel port is almost exclusively used with printers. The parallel port on your system is a 25-pin, DB 25 connector.

1.7.1.5 Audio Ports

Speaker out is a connector for Speakers or Headphones. Line in is used for external CD player, Tape player, or other audio devices. Mic is a connector for the microphones.

1.7.2 ATX Main Power Connectors: ATXPWR

This connector supports the power button on-board. Using the ATX power supply, functions such as Modem Ring Wake-Up and Soft Power Off are supported on this motherboard. This power connector supports instant power-on functionality, which means that the system will boot up instantly when the power connector is inserted on the board. ATX 4-pin power connector only support +12V voltage.

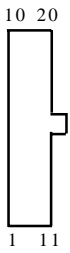

Pin	Signal	Pin	Signal
1	3.3V	11	3.3V
2	3.3V	12	-12V
3	GND	13	GND
4	5V	14	PS-ON
5	GND	15	GND
6	5V	16	GND
7	GND	17	GND
8	PW-OK	18	-5V
9	5V_SB	19	5V
10	12V	20	5V

Note:

When you set up P4 power supply, both PW1 and PW2 must be connected to power.

Important:

To switch on your power supply, please make sure:

1. Memory Module is properly installed.
2. Power supply setup is OK.


1.7.3 Floppy Disk Connector: FDD

This connector supports the provided floppy drive ribbon cable. After connecting the single end to the board, connect the two plugs on the other end to the floppy drives.

1.7.4 Hard Disk Connectors: IDE1/IDE2

These connectors are provided with IDE hard disk ribbon cable into the package. After connecting the end of cable with single connector to the mainboard, connect the other two connectors at the other end to your hard disk. If you install two hard disks, you must configure the second drive to Slave mode by setting its jumper settings. BIOS now supports SCSI device or IDE CD-ROM boot up (see "HDD Sequence SCSI/IDE First" & "Boot Sequence" in the BIOS Features Setup of the BIOS SOFTWARE).

1.7.5 Fan Connectors: FAN1/CPUFAN/SYSFAN

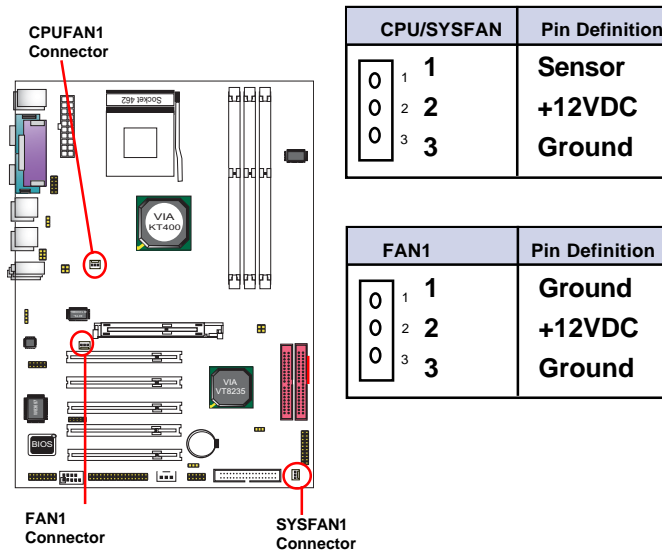

1.7.6 CD Audio-In Connectors: CDIN1


CDIN1 and CDIN2 are the connectors for CD-Audio Input signal. Please connect them to CD-ROM CD-Audio output connector. CDIN1 and CDIN2 have the same pin assignment but different pin pitch.

Pin	CDIN1	Definition
1		CD-L
2		GND
3		GND
4		CD-R

1.7.7 IR infrared module: IR/CIR Connector



This connector supports the optional wireless transmission and reception infrared module. You must configure the setting through the BIOS setup to use the IR function.

IR1 Pin	Assignment
1	+5V
2	N/A
3	IRRX
4	GND
5	IRTX

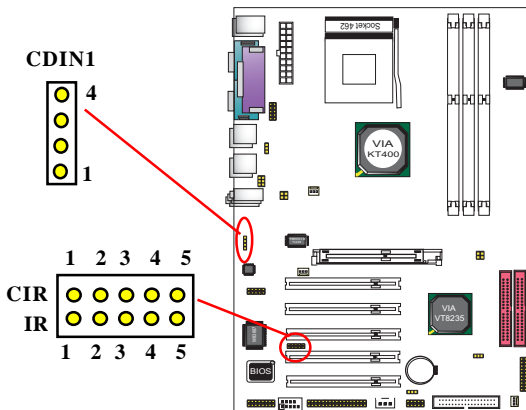


1.7.8 USB Pin Header: USB4/5

USB4/5 is 2x5 Pin Headers for support of external USB ports. Each USB pin header requires a USB cable for expansion of two USB ports. This optional USB cable is available from your motherboard dealer or vendor.

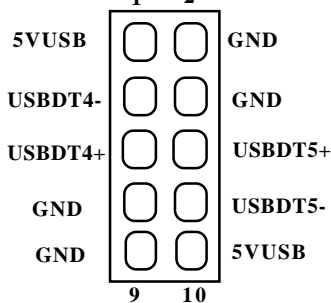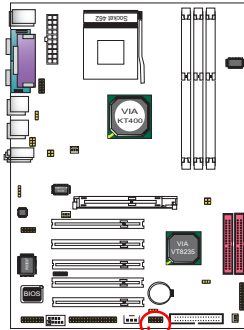

1.7.9 Front Panel Connectors: PANEL1

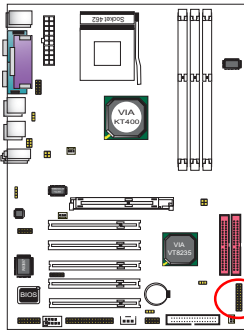

Front Panel Connectors

20 (+)	SMI LED	(-) 19
18	RST	17
16	EXTSMI	15
14 (+)	HD LED	13
12	(Void)	11
10	SPEAKER	PW LED/Keylock
8		
6		
4 (+)		(+) 3
2	PS_SW	(+) 1

PSSW

The system power is controlled by a momentary switch connected to this lead. Pushing the button once will switch the system ON.

PowerLEDLead(PW_LED)

The system power LED lights when the system power is on.

Speaker Connector (SPEAKER)

The speaker (onboard or offboard) provides error beep code information during the Power Self-Test when the computer cannot use the video interface. The speaker is not connected to the audio subsystem and does not receive output from the audio subsystem.

Hard Drive LED Connector (HD_LED)

This connector supplies power to the cabinet IDE activity LED. Read and write activity by devices connected to the Primary or Secondary IDE connectors will cause the LED to light up.

SMI Suspend Switch Lead



This allows the user to manually place the system into the Suspend Green mode . System activity will be instantly decreased to save electricity and expand the life of certain components when the system is not in use. This 2-pin connector (see the figure) connects to the case-mounted suspend switch. If you do not have a switch for the connector, you may use the "Turbo Switch" instead since it does not have a function. If you want to use this connector, the "Suspend Switch" in the Power Management Setup of the BIOS SOFTWARE section should be enabled.

Reset Switch Lead (RST)

The connector can be connected to a reset switch. Press this reset switch to restart system.

1.7.10 Wake On LAN Connector: WOL


WOL connector is designed to connect to connect to PCI LAN card for waking up system by Ring signal sent in .

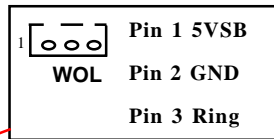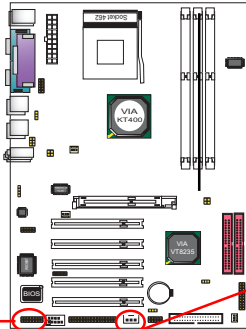


See 1.7.11 (below)

1.7.11 Game/MIDI Connector: J1

J1 connector is designed to support a Gsae Port or MIDI Port .

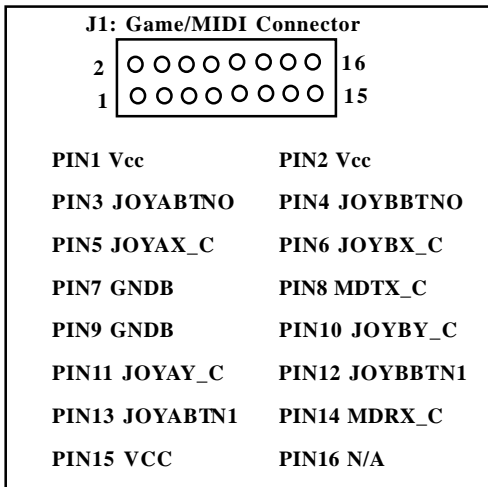

1.7.12 Smart Panel Connectors (optional):

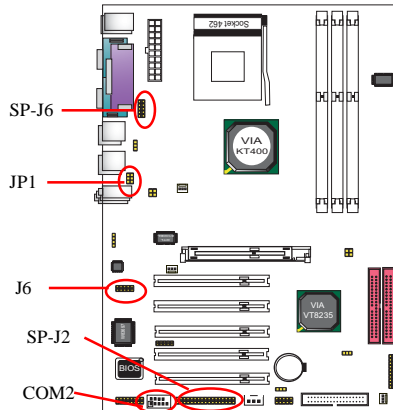

The motherboard provides the pin leads COM2, JP1, SP-J6 and SP-J2 for Smart Panel connection. If you want POST Error Code or Smart Panel function, please refer to Smart Panel manual.

1.7.12.1 Front COM2 Header Connector: COM2

For Smart Panel Serial connector to M/B COM2.

COM2 Pin Assignment		COM2 Pin Assignment	
1	RIN12	2	RIN32
3	DOUT22	4	DOUT32
5	GND	6	RIN22
7	DOUT12	8	RIN42
9	-XR12		

1.7.12.2 Audio/Mic Auto Connector: JP1

For Smart Panel connector to M/B JP1.

Pin Assignment		Pin Assignment	
1	FRONT_OUTL_L	2	FRONT_OUTL_R
3	MIC1_L	4	MIC2_R
5	LINE_IN_L	6	LINE_IN_R

1.7.12.3 SPII Printer Error LED Port: SP-J6

For Smart Panel connector ERR1 to M/B SP-J6.

Pin Assignment		Pin Assignment	
1	ERD4	2	ERD0
3	ERD5	4	ERD1
5	ERD6	6	ERD2
7	ERD7	8	ERD3
9	GND	10	NC

1.7.12.4 Second BIOS Connector: SP-J2

For Smart Panel connector SP-J2 to M/B SP-J2.

Pin Assignment		Pin Assignment	
1	XD0	2	+5V
3	XD1	4	SA0
5	XD2	6	SA1
7	XD3	8	SA2
9	XD4	10	SA3
11	XD5	12	SA4
13	XD6	14	SA5
15	XD7	16	SA6
17	GND	18	DISABLE
19	-ROMCS	20	SA7
21	-MBMR	22	SA8
23	-MBMW	24	SA9
25	SA18	26	SA10
27	SA17	28	SA11
29	SA16	30	SA12
31	SA15	32	SA13
33	GND	34	SA14


1.7.12.5 6-channel SP-DIF Audio Connector: J6



J6 is designed to support the 6-channel SP-DIF Audio Connector, and this is an optional function.

Pin Assignment		Pin Assignment	
1	AVDD5V	2	Center
3	NC	4	Lef-out
5	SPDIFI	6	GND-Aud
7	SPDIFO	8	Sur-out-L
9	GND	10	Sur-out-R

1.7.13 CMOS Function Selector: Clear_CMOS

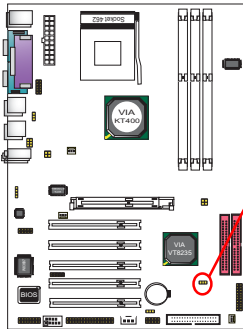When you have problem with booting system, you may clear CMOS to restore the optimum default BIOS data.






Jumper Clear CMOS	
1-2 closed 1 	Normal (Default)
2-3 closed 1 	Clear CMOS

1. Remove the Jumper cap of JP3 from 1-2.
2. After 1 or two seconds, set JP3 to 2-3 closed with the jumper cap.
3. After 1 or two seconds, restore the JP3 to 1-2 closed.
Now, the CMOS RAM has restored to the optimum default setting.

1.7.14 USB4/5 Wake-up Selector: J4






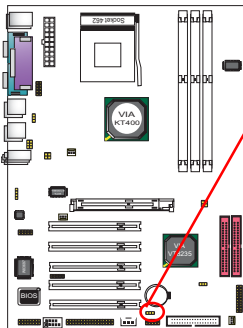
JP4 is designed to select the USB1 wake up function of system from ACPI S3 Suspend Mode.




J4: USB4/5 Wake-up Select	
1-2 closed 1 	Enabled
2-3 closed 1 	Disabled (Default)

1.7.15 CPU Clock Frequency Selector: J3 & J5


J3 & J5 are designed to detect the CPU Frequency on board. This motherboard support 133/166 MHz overclocking, while 100 MHz is default CPU clock.

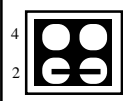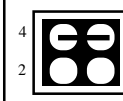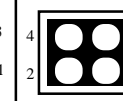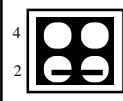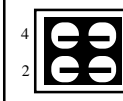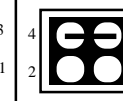J3 Setting			
J5 Setting			
CPU(MHz)	166 MHz	100 MHz (default)	133 MHz

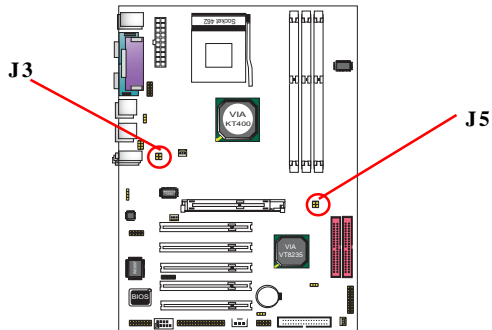

1.7.16 Ports USB0/1, 2/3 Wake-up Selector : J2

J2 is designed to select the USB1 wake up function of system from ACPI S3 Suspend Mode.

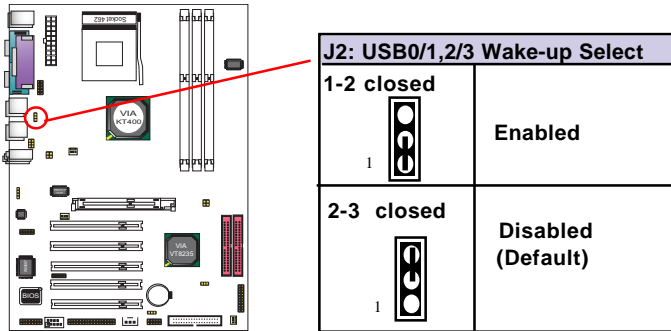

1-2 closed

2-3 closed

Chapter 2

BIOS Setup

2. BIOS Setup

2.1 BIOS Support

This chapter discusses the Award BIOS Setup program built in the ROM BIOS. The Setup program allows the user to modify the basic system configuration. The modification is then stored in battery-backed RAM so that it can retain the setup information after the power is turned off. The Award BIOS installed in your computer system ROM (Read Only Memory) is a custom version of an industry standard BIOS. The BIOS provides critical low-level support for standard devices such as disk drives and serial and parallel ports. This chapter is intended for guiding you through the process of configuring your system BIOS.

Plug and Play Support

This AWARD BIOS supports the Plug and Play Version 1.0A specification. ESCD(Extended System Configuration Data) write is also supported.

EPA Green PC Support

This AWARD BIOS supports Version 1.03 of the EPA Green PC specification.

PCI Bus Support

This AWARD BIOS also supports Version 2.1 of the Intel PCI (Peripheral Component Interconnect) local bus specification.

APM Support

This AWARD BIOS supports Version 1.1&1.2 of the Advanced Power Management(APM) specification.Power management features are implemented via the System Management Interrupt(SMI). Sleep and Suspend power management modes are supported. Power to the hard disk drives and video monitors can be managed by this AWARD BIOS.

DRAM Support

DDR (Double Data Rate) are supported.

Setup Menu

In general, you use the arrow keys to highlight items of the Main BIOS Setup Menu, press <Enter>to select, use the <PgUp>and <PgDn>keys to change entries, press<F1>for help and press <Esc> to quit The following table provides more detail about how to navigate in the Setup program by using the keyboard.

Note:

BIOS version 1.0 is for reference only. If there is a change in BIOS version, please use the actual version on the BIOS.

Keystroke	Function
Up arrow	Move to previous item
Down arrow	Move to next item
Left arrow	Move to the item on the left(menu bar)
Right arrow	Move to the item on the right(menu bar)
Esc	Main Menu: Quit without saving changes Submenus: Exit Current page to the next higher level menu
Move Enter	Move to item you desired
PgUp key	Increase the numeric value or make changes
PgDn key	Decrease the numeric value or make changes
+Key	Increase the numeric value or make changes
-Key	Decrease the numeric value or make changes
Esc Key	Main menu-Quit and not save changes into CMOS Status Page Setup Menu and option Page Setup Menu-Exit Current page and return to Main Menu
F1 Key	General help on Setup navigation keys.
F5 Key	Load previous values from CMOS
F6 Key	Load the fail-safe defaults from BIOS default table
F7 Key	Load the optimized defaults
F10 Key	Save all the CMOS changes and exit

Standard CMOS Features

This setup page includes all the items in standard compatible BIOS.

Advanced BIOS Features

This setup page includes all the items of the BIOS special enhanced features.

Advanced Chipset Features

This setup page includes all the items of the Chipset special enhanced features.

Integrated Peripherals

This selection page includes all the items of the IDE hard drive and Programmed Input/Output features.

Power Management Setup

This setup page includes all the items of the power management features.

PnP/PCI Configurations

This setup page includes the user defined or default IRQ Setting.

PC Health Status

This page shows the hardware Monitor information of the system.

Frequency/Voltage Control

This setup page controls the CPU's clock and frequency ratio.

Load Fail-safe Defaults

Use this menu to load the BIOS default values for the minimal/stable performance for your system to operate.

Load Optimized Defaults

These settings are for configuring a workable computer when something is wrong. If you cannot boot the computer successfully, select the BIOS Setup options and try to diagnose the problem after the computer boots. These settings do not provide optional performance.

Set Supervisor/User Password

Change, set, or, disable password. It allows you to limit access to the system and Setup, or just to Setup.

Save & Exit Setup

Save CMOS value changes to CMOS and exit setup.

Exit Without Saving

Abandon all CMOS value changes and exit setup.

2.3 Standard CMOS Features

This main option in the Standard CMOS Setup Menu is divided into 10 fields or items. Each field provides one or more setup choices. Use the arrow keys to highlight the field and then use the <PgUp> or <PgDn> keys to select the value or choice.

Phoenix - AwardBIOS CMOS Setup Utility Standard CMOS Features

Date(mm:dd:yy)	Tue,Jun 6 2002	Item Help
Time (hh:mm:ss)	11:26:10	
IDE Primary Master	None	Menu Level
IDE Primary Slave		Change the day, month,year and century.
IDE Secondary Master	None	
IDE Secondary Master	None	
Drive A	1.44M,3.5 in	
Drive B	None	
Floppy 3 Mode Support	Disabled	
Video	EGA/VGA	
Halt On	All,But Keyboard	
Base Memory	640K	
Extended Memory	65472K	
Total Memory	1024K	

←→↑↓: Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit F1:General Help
F5:Previous Values F6:Fail-Safe Defaults F7:Optimized Defaults

Main Menu Selections

Item	Options	Description
Date (mm : dd :yy)	Month Day Year	Set the system,date. Note that the 'Day' automatically changes when you set the data.
Time (hh : mm : SS)	Hour Minute Second	Select the hour, minute and second of the time.
IDE Primary Master	Options are in its sub menu.	Press<Enter> to enter sub menu.
IDE Primary/ Slave	Options are in its sub menu.	Press<Enter> to enter sub menu.
IDE Second- ary Master	Options are in its sub menu.	Press<Enter> to enter sub menu.
IDE Second- ary Slave	Options are in its sub menu.	Press<Enter> to enter sub menu
Drive A Drive B	None 360K,5.25in, 1.2M,5.25in 720K,3.5M 1.44M,3.5in 2.88M,3.5in	Select the type of floppy disk drive installed in your system.
Floppy 3 Mode Support	Disabled Driver A	Disable or support the 3rd floppy mode in Drive A
Video	EGA/VGA CGA 40 CGA 80 MONO	Select the default video device.

Item	Options	Description
Halt On	All Errors No Errors All, but Keyboard All, but Diskette All, but Disk/Key	Select the situation in which you want the BIOS to stop the POST process and notify.
Base Memory	(640K)	The amount of conventional memory detected during boot up.
Extended Memory	(65472K)	The amount of conventional memory detected during boot up.
Total Memory	(1024K)	The total memory available in system.

IDE Primary(Master/Slave)/Secondary(Master/Slave)

Press Enter on these items to show the following sub-menu:

Primary Master/Secondary

IDE HDD Auto-Detection	Press Enter	Item Help
IDE Primary Master	Auto	Menu Level
Access Mode	Auto	
Capacity	13022MB	
Cylinder	25232	
Head	16	
Precomp	0	
Landing Zone	25231	
Sector	61	

←→↑↓: Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit F1:General Help
 F5:Previous Values F6:Fail-Safe Defaults F7:Optimized Defaults

IDE HDD Auto-Detection

Press Enter on this item to let BIOS auto-detect your Hard Disk and show all the Primary Hard Disk Parameters (Capacity, Cylinder, Head, Precomp, Landing Zone, Sector) on the menu.

IDE Primary(Master/Slave)/Secondary(Master/Slave)

This item allows you to detect the Hard Disk in 3 ways.

- The Choices: Auto: BIOS Auto-detect HDD;
- None: No Hard Disk detected;
- Manual: Manually detect HDD

Access Mode

This item allows you to select the Access mode to the Hard Disk..

The Choices:

- CHS: Select the Cylinder, Head, Sector addressing mode to access Hard Disk;
- LBA: Select the Logical Block Addressing mode to access Hard Disk.
- Large: Select Large Mode to access Hard Disk;
- Auto: Allow BIOS to auto-access Hard Disk;

Capacity

Showing the capacity of Hard Disk in MB.

Cylinder

Showing the number of cylinder in the Hard Disk.

Head

Showing the number of heads in the Hard Disk.

Precomp

The number of Pre-compensation.

Landing Zone

Number of Landing zone in the Hard Disk.

Sector

The number of Sector in the Hard Disk.

2.4 Advanced BIOS Features

Phoenix - AwardBIOS CMOS Setup Utility Advanced BIOS Features

Virus Warning	Disabled	Item Help
CPU Internal Cache	Enabled	
External Cache	Enabled	
Quick Power On Self Test	Enabled	
First Boot Device	Floppy	
Second Boot Device	HDD-0	
Third Boot Device	CD-ROM	
Boot Other Device	Enabled	
Swap Floppy Drive	Disabled	
Boot Up Floppy Seek	Disabled	
Boot Up NumLock Status	On	
Gate A20 Option	Fast	
Typematic Rate Setting	Disabled	
X Typematic Rate (Chars/Sec)	6	
X Typematic Delay (Msec)	250	
Security Option	Setup	
OS Select For DRAM >64MB	Non-OS2	
HDD S.M.A.R.T. Capability	Disabled	
Video BIOS Shadow	Enabled	
EPA / (H/W Monitor) Show	H/W Monitor	

←→↑↓: Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit F1:General Help
F5:Previous Values F6:Fail-Safe Defaults F7:Optimized Defaults

Virus Warning

This option allows you to choose the VIRUS Warning feature for IDE Hard Disk boot sector protection. If this function is enabled and someone attempts to write data into this area, BIOS will show a warning message on screen and alarm beep.

The Choices:

Disabled(default), Enabled.

CPU Internal / External Cache

Allows you to Enable or Disable the CPU's L1(Internal) / L2 (External) cache to provide better performance.

The choices:

Enabled(default); Disabled

Quick Power On Self Test

This category speeds up Power on self-Test(POST) after you power up the computer. If it is set to Enabled, BIOS will shorten or skip some check items during POST.

The choices:

Enabled(default); Disabled

First/Secondary/Third Boot Device

This BIOS attempts to load the operating system from the devices in the sequence selected in these items.

The Choices:

Floppy, LS120, HDD-0, SCSI, CDROM, HDD-1, HDD-2, HDD-3, ZIP100, LAN, USB-FDD, USB-Zip, USB-CDROM, USB-HDD, Disabled.

Boot Other Device

Allows user to set booting from other devices.

The Choices:

Enabled(default), Disabled.

Swap Floppy Drive

If the system has two floppy drives, you can swap the logical drive name assignments.

The Choices:

Disabled(default), Enabled.

Boot Up Floppy Seek

If enabled, this item allows BIOS to test floppy drives to determine whether they have 40 or 80 tracks.

The Choices:

Disabled(default), Enabled.

Boot Up NumLock Status

Select power on state for Numlock..

The Choices

On (default): Numpad is number keys;

Off: Numpad is arrow keys;

Gate A20 Option

Select if chipset or keyboard controller should control Gate A20.

The choices:

Normal: A pin in the keyboard controller controls Gate A20.

Fast (default): Lets chipset control Gate A20.

Typematic Rate Setting

Allows user to adjust the key stroke repeat rate.

The choices:

Enabled: Enabled this option to adjust the keystroke repeat rate; Disabled (default): Enabled.

Typematic Rate (Char/Sec)

Range between 6(**default**) and 30 characters per second. This option controls the speed of repeating keystrokes.

Typematic Delay (Msec)

This option sets the time interval for displaying the first and the second characters.

The Choices: 250(default), 500, 750, 1000.

Security Option

This category allows you to determine whether to use password access the system and Setup, or just Setup.

The choices:

System: To access system and BIOS Setup with correct password.

Setup (default): To access BIOS Setup with correct password.

OS Select For DRAM >64MB

Select the operating system that is running with greater than 64MB of RAM on the system.

The Choices: Non-OS2(default), OS2.

HDDS.M.A.R.T. Capability

Allows user to choose the Self-monitoring Analysis and Reporting Technology for Hard Disk Drive.

The choices: Disabled(default); Enabled

Video BIOS Shadow

Use this item to enable/disable the Video BIOS Shadow function.

The Choices: Enabled; Disabled

EPA / (H/W Monitor) Show

Use this item to enable/disable the Environmental Protection Association (EPA) / Hardware Monitor logo on initiating screen..

The choices: H/W Monitor; EPA Logo

2.5 Advanced Chipset Features

This section allows you to configure the system based features of the installed chipset. This chipset manages bus speeds and access to system memory resources, such as DRAM and external cache. It also coordinates communications of the PCI bus. It must be stated that these items should never be altered. The default settings are set up to provide the best operating conditions for your system. The time you might need to make any changes would be if you discover that data is lost while using your system.

Phoenix - AwardBIOS CMOS Setup Utility Advanced Chipset Features

		Item Help
▶ DRAM Clock/Drive Control	Press Enter	
▶ AGP & P2P Bridge Control	Press Enter	
▶ CPU & PCI Bus Control	Press Enter	
Memory Hole	Disabled	
System BIOS Cacheable	Disabled	
Video RAM Cacheable	Disabled	

←→↑↓: Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit F1:General Help
F5:Previous Values F6:Fail-Safe Defaults F7:Optimized Defaults

DRAM Clock/Drive Control

Press Enter on this item to open the Sub-menu as shown below:

Phoenix - AwardBIOS CMOS Setup Utility
DRAM Clock/Drive Control

Current FSB Frequency	100MHz	Item Help
Current DRAM Frequency	100MHz	
DRAM Clock	By SPD	
DRAM Timing	Auto By SPD	
x DRAM CAS Latency	2.5	
x Bank Interleave	Disabled	
x Precharge to Active(Trp)	3T	
x Active to Precharge(Tras)	6T	
x Active to CMD(Trcd)	3T	
DRAM Burst Length	4	
DRAM Queue Depth	4 Level	
DRAM Command Rate	2T Command	
Write Recovery Time	3T	
DRAM twTR	3T	
DRAM Access	2T	

←→↑↓: Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit F1:General Help
 F5:Previous Values F6:Fail-Safe Defaults F7:Optimized Defaults

Current FSB Frequency

This item shows the current FSB Frequency

Current DRAM Frequency

This item shows the current DRAM Frequency

DRAM Clock

This item is to set the DRAM clock..

The Choices: By SPD; 100 MHz; 133 MHz; 166 MHz; 200 MHz

DRAM Timing

This item is to set the DRAM transaction timing.

The Choices: Auto by SPD; Turbo; Ultra; Manual

x DRAM CAS Latency

When DRAM Timing is set Manual, use this item to set the DRAM CAS Latency time. .

The Choices: 1.5; 2; 2.5; 3

x Bank Interleave

When DRAM Timing is set Manual, use this item to set the DRAM Bank Interleave.

The Choices: Disabled; 2 Bank; 4 Bank

x Precharge to Active(Trp)

When DRAM Timing is set Manual, use this item to set the DRAM Precharge to Active(Trp) cycle.

The Choices: 2T; 3T

x Active to Precharge(Tras)

When DRAM Timing is set Manual, use this item to set the DRAM Active to Precharge(Tras) cycle.

The Choices: 6T; 5T

x Active to CMD(Trcd)

When DRAM Timing is set Manual, use this item to set the DRAM Active to CMD(Trcd) cycle.

The Choices: 3T; 2T

DRAM Burst Length

Use this item to set the DRAM Burst cycle Length.

The Choices: 4; 8

DRAM Queue Depth

Use this item to set the DRAM Queue Depth level.

The Choices: 4 level; 3 level; 2 level

DRAM Command Rate

Use this item to set the DRAM Command Rate.

The Choices: 2T Command; 1T command

Write Recovery Time

Use this item to set the Write Recovery Time.

The Choices: 3T; 2T

DRAM twTR

Use this item to set the DRAM twTR time.

The Choices: 3T; 1T

DRAM Access

Use this item to set the DRAM Access time..

The Choices: 3T; 2T

AGP P2P Bridge Control

Press Enter on this item to open the Sub-menu as shown below:

Phoenix - AwardBIOS CMOS Setup Utility
AGP P2P Bridge Control

		Item Help
AGP Aperture Size	128M	
AGP Mode	4X	
AGP Driving Control	Auto	
x AGP Driving Value	DA	
AGP Fast Write	Enabled	
AGP Master 1 WS Write	Disabled	
AGP Master 1 WS Read	Disabled	
DBI Output For AGP Trans.	Enabled	

←→↑↓: Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit F1:General Help
F5:Previous Values F6:Fail-Safe Defaults F7:Optimized Defaults

AGP Aperture Size

This item is to set the AGP Aperture memory size.

The Choices: 256M; 128M; 64M; 32M; 16M; 8M; 4M

AGP Mode

This item is to set the AGP mode.

The Choices: 8X; 4X; 2X; 1X

AGP Driving Control

This item is to set the AGP Driving Control mode.

The Choices: Auto; Manual

xAGPDriving Value

When AGP Driving Control is set manual, use this item to set the AGP Driving address value.

The Choices: 00 ~ FF in 1h stepping

AGP Fast Write

This item is to enable / disable the AGP Fast Write function.

The Choices: Enabled; Disabled

AGP Master 1 WS Write

This item is to enable / disable the AGP Master 1 WS Write function.

The Choices: Enabled; Disabled

AGP Master 1 WS Read

This item is to enable / disable the AGP Master 1 WS Read function.

The Choices: Enabled; Disabled

DBI Output for AGP Trans

This item is to enable / disable the DBI Output for AGP Transaction function.

The Choices: Enabled (default); Disabled

CPU & PCI Bus Control

Press Enter on this item to open the Sub-menu as shown below:

Phoenix - AwardBIOS CMOS Setup Utility
CPU & PCI Bus Control

PCI1 Master 0 WS Write	Enabled	Item Help
PCI2 Master 0 WS Write	Enabled	
PCI1 Post Write	Enabled	
PCI2 Post Write	Enabled	
VLink 8X Support	Enabled	
PCI Delay Transaction	Enabled	

←→↑↓: Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit F1:General Help
F5:Previous Values F6:Fail-Safe Defaults F7:Optimized Defaults

PCI1/2 Master 0 WS Write

This item is to enable / disable the PCI1/2 Master 0 Wait State Write function.

The Choices: Enabled; Disabled

PCI1/2 Post Write

This item is to enable / disable the PCI1/2 POST Write function.

The Choices: Enabled; Disabled

VLink 8X Support

This item is to Enable / disable the VLink 8X Support.

The Choices: Enabled; Disabled

PCI Delay Transaction

This item is to Enable / disable the PCI Delay Transaction.

The Choices: Enabled; Disabled

MemoryHole

Use this item to enable or disable the Memory Hole.

The Choices: Disabled; 15M ~ 16M

System BIOS Cacheable

Use this item to enable / disable the System BIOS Cacheable function.

The choices: Enabled; Disabled

Video RAM Cacheabled

Use this item to enable / disable the Video BIOS Cacheable function.

The choices: Enabled; Disabled

2.6 Integrated Peripherals

Phoenix - AwardBIOS CMOS Setup Utility Integrated Peripherals

		Item Help
USB 2.0 Support	Enabled	
▶ VIA Onchip IDE Device	Press Enter	
▶ VIA Onchip PCI Device	Press Enter	
▶ Super IO Device	Press Enter	
Init Display First	PCI Slot	
Onchip USB Control	All Enabled	
USB Keyboard Support	Enabled	
IDE HDD Block Mode	Enabled	

←→↑↓: Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit F1:General Help
F5:Previous Values F6:Fail-Safe Defaults F7:Optimized Defaults

USB 2.0 Support

Use this item to enable or disable the USB 2.0 support.

The Choices: Enabled (default); Disabled

►VIA OnChip IDE Device

Press Enter on this item to open the Sub-menu as shown below:

Phoenix - AwardBIOS CMOS Setup Utility
VIA OnChip IDE Device

		Item Help
OnChip IDE Channel0	Enabled	
OnChip IDE Channel1	Enabled	
IDE Prefetch Mode	Enabled	
Primary Master PIO	Auto	
Primary Slave PIO	Auto	
Secondary Master PIO	Auto	
Secondary Slave PIO	Auto	
Primary Master UDMA	Auto	
Primary Slave UDMA	Auto	
Secondary Master UDMA	Auto	
Secondary Slave UDMA	Auto	

←→↑↓: Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit F1:General Help
F5:Previous Values F6:Fail-Safe Defaults F7:Optimized Defaults

OnChip IDE Channel0

This item is to enable / disable the IDE Primary Master/Slave channel.

The choices: Enabled; Disabled

OnChip IDE Channel1

This item is to enable / disable the IDE Secondary Master/Slave channel.

The choices: Enabled; Disabled

IDE Prefetch Mode

This item is to enable / disable the IDE Prefetch Mode. If enabled, data will be prefetched into buffer during data access.

The choices: Enabled; Disabled

Primary Master/Slave PIO

If OnChip IDE Channel is enabled, this item is to select the IDE Primary Master/Slave PIO mode (Programmed Input Output Mode). Mode4 is the fastest mode.

The choices: Auto; Mode0; Mode1; Mode2; Mode3; Mode4

Secondary Master/Slave PIO

If OnChip IDE Channel1 is enabled, this item is to select the IDE Secondary Master/Slave PIO mode (Programmed Input Output Mode). Mode4 is the fastest mode.

The choices: Auto; Mode0; Mode1; Mode2; Mode3; Mode4

Primary Master/Slave UDMA

If OnChip IDE Channel0 is enabled, this item is to select the IDE Primary Master/Slave UDMA mode (Ultra Direct Memory Access Mode).

The choices: Auto; Disabled

Secondary Master/Slave UDMA

If OnChip IDE Channel0 is enabled, this item is to select the IDE Secondary Master/Slave UDMA mode (Ultra Direct Memory Access Mode).

The choices: Auto; Disabled

► **VIA OnChip PCI Device**

Press Enter on this item to open the Sub-menu as shown below:

Phoenix - AwardBIOS CMOS Setup Utility
VIA OnChip PCI Device

VIA-3058 AC97 Audio	Auto	Item Help
VIA-3068 MC97 Modem	Auto	

←→↑↓: Move Enter: Select +/-/PU/PD: Value F10: Save ESC: Exit F1: General Help
F5: Previous Values F6: Fail-Safe Defaults F7: Optimized Defaults

VIA-3058 AC97 Audio

This item is to autodetect or disable the VIA AC'97 Audio.

The choices: Auto; Disabled

VIA-3068 MC97 Modem

This item is to autodetect or disable the VIA MC'97 Modem.

The choices: Auto; Disabled

► Super IO Device

Press Enter on this item to open the Sub-menu as shown below:

Phoenix - AwardBIOS CMOS Setup Utility
VIA OnChip IDE Device

		Item Help
Onboard FDC Controller	Enabled	
Onboard Serial Port 1	3F8/IRQ4	
Onboard Serial Port 2	2F8/IRQ3	
UART Mode Select	Normal	
RxD, TxD Active	Hi, Lo	
IR Transmission Delay	Enabled	
UR2 Duplex Mode	Half	
Use IR Pins	IR-Rx2Tx2	
Onboard Parallel Port	378/IRQ7	
Parallel Port Mode	ECP	
EPP Mode Select	EPP1.7	
ECP Mode Use DMA	3	
Game Port Address	201	
MIDI Port Address	330	
MIDI Port IRQ	10	

←→↑↓: Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit F1:General Help
F5:Previous Values F6:Fail-Safe Defaults F7:Optimized Defaults

Onboard FDC Controller

The choices: Enabled; Disabled

Onboard Serial Port 1/2

Select an address and corresponding interrupt for the first and second serial ports.

The Choices: Auto; 3F8/IRQ4; 2F8/IRQ3; 3E8/IRQ4; 2E8/IRQ3; Disabled.

UART Mode Select

This item allows you to select which Infra Red(IR) function of the onboard I/O chip you wish to use.

The Choices: Normal(default), IrDA, ASKIR.

RxD' TxD Active

This item allows you to select the high /Low status of the RxD, TxD Active mode.

The Choices: Hi,Lo; Lo,Hi; Lo,Lo; Hi,Hi

IR Transmission delay

This item allows you to enable / disable the IR Transmission Delay function.

The Choices: Enabled; Disabled

UR2 Duplex Mode

This item allows you to select which Infra Red(IR) function of the onboard I/O chip you wish to use.

The Choices: Half (default), Full.

Use IR Pins

This item allows you to select the IR Pins.

The Choices: IR-Rx2Tx2; Rx2D2, Tx2D2

Onboard Parallel Port

This item allows you to select the Onboard Parallel Port .

The Choices: 378/IRQ7; 278/IRQ5; 3BC/IRQ7; Disabled

Parallel Port Mode

The choices are for Parallel Port Mode select:

SPP: Using Parallel port as Standard Parallel Port;

EPP: Using Parallel port as Enhanced Parallel Port;

ECP: Using Parallel port as Extended Capabilities Port;

ECP+EPP Using Parallel port as ECP+EPP mode;

Normal;

EPP Mode Select

The Choices: EPP1.7; EPP1.9

ECP Mode Use DMA

The Choices: 3, 1.

Game Port Address

The choices are for setting Game Port Address:
201 (default); 209; Disabled

MIDI Port Address

The choices are for setting MIDI Port Address:
290:300; 330 (default); Disabled.

MIDI Port IRQ

The choices are for setting MIDI Port IRQ:
10 (default); 5

Init Display First

Use this item to select the initial Display as the first display.
The choices: PCI Slot; AGP

OnChip USB Controller

Use this item to enable/disable the USB ports.
The choices: All disabled; All enabled; 1&2 USB ports; 2&3
USB ports; 1&3 USB ports; 1 USB port; 2 USB port; 3 USB port

USB Keyboard Support

Use this item to enable / disable the USB Keyboard support.
The choices: Disabled; Enabled

IDE HDD Block Mode

Use this item to enable / disable the IDE HDD Block Mode (Multi-
sector Mode).
The choices: Disabled; Enabled

2.7 Power Management Setup

Phoenix - AwardBIOS CMOS Setup Utility
Power Management Setup

ACPI Function	Enabled	Item Help
ACPI Suspend Type	S1(POS)	
Power Management Option	User Define	
HDD Power Down	Disabled	
Suspend Mode	Disabled	
Video Off Option	Suspend -> Off	
Video Off Method	V/H SYNC+Blank	
Modem Use IRQ	3	
Soft-off by PWR-BTTN	Instant-off	
▶ IRQ/Event Activity Detect	Press Enter	

←→↑↓: Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit F1:General Help
F5:Previous Values F6:Fail-Safe Defaults F7:Optimized Defaults

ACPIFunction

The choices are for enabling or disabling the Advanced Configuration and Power Management (ACPI).

ACPI Suspend Type

The choices are for setting the suspend type under ACPI operating system.

S1(POS) (default): Power on Suspend.

S3(STR): Suspend to RAM.

Power Management Option

The choices are for setting the Power management mode:

User Define (default); Min Saving; Max Saving.

HDD Power Down

The Choices are for enabling or disabling the HDD Power Down function.

Disabled(default); 1Min~15 Min in 1 minute stepping

Suspend Mode

The Choices are for setting the length of suspend:

Disabled(default); 1Min~1hour.

Video Off Option

This field determines when to activate the video off feature for monitor power management.

The Choices: Always on; Suspend->off

Video Off Method

The choices are for determining the manner in which the monitor is blanked.

The choices:

V/H SYNC+Blank: Turn off the vertical and horizontal synchronization ports and write blanks to the video buffer.

Blank Screen: Writes blanks to the video buffer.

DPMS Support: Initial display power management signaling.

Modem Use IRQ

This determines the IRQ, which can be applied in Modem use.

The choices: 3; 4; 5; 7; 9; 10; 11; NA

Soft-Off by PWRBTN

Use this item to select the Soft-Off by Power Button mode.

The Choices: Instant-Off; Delay 4 Sec.

►IRQ/Event Activity Detect

Press Enter on this item to open the Sub-menu as shown below:

Phoenix - AwardBIOS CMOS Setup Utility
VIA OnChip IDE Device

		Item Help
PS2KB Wakeup Select	Hot Key	
PS2KB Wakeup From S3/S4/S5	Disabled	
PS2MS Wakeup From S3/S4/S5	Disabled	
USB Resume from S3	Disabled	
VGA	Off	
LPT & COM	LPT/COM	
HDD & FDD	On	
PCI Master	Off	
Power On By PME	Disabled	
Power On By WOL/ Ring	Disabled	
RTC Alarm Resume	Disabled	
X Date (of Month) Alarm	0	
X Time(hh:mm:ss) Alarm	0 : 0 : 0	
► IRQs Activity Monitoring	Press Enter	

←→↑↓: Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit F1:General Help
F5:Previous Values F6:Fail-Safe Defaults F7:Optimized Defaults

PS2KB Wakeup Select

Use this item to select the PS/2 KB Wake up mode.

The choices: Hot Key; Password

PS2KB Wakeup From S3/S4/S5

If PS2KB Wakeup is set to Hot Key, use this item to select Hot Key.

The choices: Ctrl+1~12; Disabled; Any Key; Wake; Power

PS2MS Wakeup From S3/S4/S5

Use this item to enable / disable the PS2 Mouse Wake up from S3/S4/S5 function.

The choices: Enabled; Disabled

USB Resume from S1-S3

Use this item to enable / disable the USB resume from S3 (Suspend To RAM) function.

The Choices: Enabled; Disabled

VGA

Use this item to turn On or off the VGA.

The Choices: On; Off

LPT & COM

Use this item to select the LPT / COM support.

The Choices: LPT; COM; LPT/COM; None

HDD & FDD

Use this item to turn On or off the HDD / FDD

The Choices: On; Off

PCI Master

Use this item to turn On or off the PCI Master.

The Choices: On; Off

Power On By PME

Use this item to enable/disable the Power On by PME function.

Power On By WOL/Ring

Use this item to enable/disable the Power On by WOL/Ring function.

RTC Alarm Resume

Use this item to enable/disable the RTC Alarm Resume function.
Date: If RTC Alarm Resume is enabled, set the date with this item.

Time: If RTC Alarm Resume is enabled, set the time with this item.

►IRQs Activity Monitoring

Press Enter on this item to open the Sub-menu as shown below:

Phoenix - AwardBIOS CMOS Setup Utility
VIA OnChip IDE Device

		Item Help
Primary INTR	On	
IRQ3 (COM 2)	Disabled	
IRQ4 (COM 1)	Disabled	
IRQ5 (LPT 2)	Disabled	
IRQ6 (Floppy Disk)	Disabled	
IRQ7 (LPT 1)	Disabled	
IRQ8 (RTC Alarm)	Disabled	
IRQ9 (IRQ2 Redir)	Disabled	
IRQ10 (Reserved)	Disabled	
IRQ11 (Reserved)	Disabled	
IRQ12 (PS/2 Mouse)	Enabled	
IRQ13 (Coprocessor)	Disabled	
IRQ14 (Hard Disk)	Disabled	
IRQ15 (Reserved)	Disabled	

←→↑↓: Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit F1:General Help
F5:Previous Values F6:Fail-Safe Defaults F7:Optimized Defaults

Primary INTR

Use this item to enable / disable the Primary Interrupt setup.

The choices: Enabled; Disabled

IRQ3(COM 2)

Use this item to enable / disable the IRQ3 for COM 2.

The choices: Enabled; Disabled

IRQ4(COM 1)

Use this item to enable / disable the IRQ4 for COM 1.

The choices: Enabled; Disabled

IRQ5(LPT 2)

Use this item to enable / disable the IRQ5 for LPT 2.

The choices: Enabled; Disabled

IRQ6 (Floppy Disk)

Use this item to enable / disable the IRQ6 for Floppy Disk.

The choices: Enabled; Disabled

IRQ7(LPT1)

Use this item to enable / disable the IRQ7 for Floppy Disk.

The choices: Enabled; Disabled

IRQ8(RTCAlarm)

Use this item to enable / disable the IRQ8 for RTC Alarm.

The choices: Enabled; Disabled

IRQ9(IRQ2Redir)

Use this item to enable / disable the IRQ2 redirect.

The choices: Enabled; Disabled

IRQ10 (Reserved)

Use this item to enable / disable the reserved IRQ10.

The choices: Enabled; Disabled

IRQ11 (Reserved)

Use this item to enable / disable the reserved IRQ11.

The choices: Enabled; Disabled

IRQ12 (PS/2 Mouse)

Use this item to enable / disable the IRQ12 for PS/2 Mouse.

The choices: Enabled; Disabled

IRQ13 (Coprocessor)

Use this item to enable / disable the IRQ13 for Coprocessor.

The choices: Enabled; Disabled

IRQ14 (Hard Disk)

Use this item to enable / disable the IRQ14 for hard disk.

The choices: Enabled; Disabled

IRQ15 (Reserved)

Use this item to enable / disable the reserved IRQ15.

The choices: Enabled; Disabled

2.8 PnP/PCI Configurations

This section describes configuration of the PCI bus system. PCI or Personal Computer Interconnect, is a system which allows I/O devices to operate at speeds nearing the speed of the CPU itself when communicating with the components on board. This section covers some very technical items and it is strongly recommended that only experienced users should make any changes to the default settings.

Phoenix - AwardBIOS CMOS Setup Utility
PnP/PCI Configurations

PNP OS Installed	No	Item Help
Reset Configuration Data	Disabled	
Resources Controlled by x IRQ Resources	Auto(ESCD) Press Enter	
PCI/VGA Pallette Snoop	Disabled	

←→↑↓: Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit F1:General Help
F5:Previous Values F6:Fail-Safe Defaults F7:Optimized Defaults

PNP OS Installed

Use this item to announce the PNP operating system installed.
The choices: No; Yes

Reset Configuration Data

The system BIOS supports the PnP feature so the system needs to record which resource is assigned and proceeds to get rid of resource conflict. Every peripheral device has a node, which is called ESCD (Extended System Configuration Data. This node records which resources are assigned to it. If Disabled (Default) is chosen, the system ESCD will update only when the new configuration varies from the last one. If Enabled is chosen, the system is forced to update ESCDs and then is automatically reset to the “Disabled” mode.

Resources Controlled By

By Choosing “Auto(ESCD)” , the system BIOS will detect the system resources and automatically assign the relative IRQ and DMA channel for each peripheral. By choosing “Manual”, the user will need to assign IRQ & DMA for add-on cards. Be sure that no IRQ/DMA and I/O port conflict exists.

X IRQ Resources :

Press Enter to configure the following Submenus

IRQ Resources

IRQ Resources		Item Help
IRQ-3 assigned to	: PCI Device	
IRQ-4 assigned to	: PCI Device	
IRQ-5 assigned to	: PCI Device	
IRQ-7 assigned to	: PCI Device	
IRQ-9 assigned to	: PCI Device	
IRQ-10 assigned to	: PCI Device	
IRQ-11 assigned to	: PCI Device	
IRQ-12 assigned to	: PCI Device	
IRQ-14 assigned to	: PCI Device	
IRQ-15 assigned to	: PCI Device	

←→↑↓: Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit F1:General Help
F5:Previous Values F6:Fail-Safe Defaults F7:Optimized Defaults

IRQ Resources

When resources are controlled manually, assign each system interrupt a type, depending on the type of device using the interrupt.

PCI/VGA Palette Snoop

Choose Disabled or Enabled. Some graphic controllers which are not VGA compatible take the output from a VGA controller and map it to their display as a way to provide boot information and VGA compatibility.

However, the color information coming from the VGA controller is drawn from the palette table inside the VGA controller to generate the proper colors, and the graphic controller needs to know what is in the palette of the VGA controller. To do this, the non-VGA graphic controller watches for the write access to the VGA palette and registers the snoop data. In PCI based systems, the Write Access to the palette will not show up on the ISA bus if the PCI VGA controller responds to the Write.

In this case, the PCI VGA controller should not respond to the Write, it should only snoop the data and permit the access to be forwarded to the ISA bus. The non-VGA ISA graphic controller can then snoop the data on the ISA bus. Unless you have the above situation, you should disable this option.

The choices: Disabled (default); Enabled

2.9 PC Health Status

Phoenix - AwardBIOS CMOS Setup Utility

PC Health Status

		Item Help
CPU Warning Temperature	Disabled	
System Temperature	()	
CPU Temperature	()	
FAN 1 Speed	()	
FAN 2 Speed	()	
Vcore	()	
Vcc 3.3V	()	
Vcc 5.0V	()	
Vcc 12.V	()	
Vbat	()	
Vsb 5.0V	()	
Shutdown Temperature	Disabled	

←→↑↓: Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit F1:General Help
 F5:Previous Values F6:Fail-Safe Defaults F7:Optimized Defaults

CPU Warning Temperature

Use this item to set the CPU Warning Temperature.

The choices: 50°C/122°F; 53°C/127°F; 56°C/133°F; 60°C/140°F;
 63°C/145°F; 66°C/151°F; 70°C/158°F; Disabled

System/CPU Temp

This item shows the current System/CPU temperature.

FAN1/2/Speed

This item shows the fan speed running on board.

Vcc 3.3V/5.0V/12V/Vbat/Vsb 5.0

These items show the respective voltage running on board.

Shutdown Temperature

Use this item to set the system shutdown temperature.

The choices: 60°C/140°F; 65°C/149°F; 70°C/158°F; 75°C/167°F;
 Disabled

2.10 Frequency/Voltage Control

Phoenix - AwardBIOS CMOS Setup Utility Frequency/Voltage Control

Auto Detect DIMM/PCI Clk	Enabled	Item Help
Spread Spectrum	Disabled	
CPU Clock	100MHz	
Auto Detect PCI CLK	Enabled	

←→↑↓: Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit F1:General Help
F5:Previous Values F6:Fail-Safe Defaults F7:Optimized Defaults

Auto Detect DIMM/PCI CLK

This item allows you to enable/disable auto detect DIMM/PCI CLOCK.

The Choices: Disabled; Enabled

Spread Spectrum

Allows you to enable / disable the Spread Spectrum function.

The Choices: Disabled; Enabled


CPU Clock

Allows you to set the CPU clock for next boot..

The Choices: 100MHz ~200MHz in 1MHz stepping

2.11 Load Fail-Safe Defaults


When you press <Enter> on this item, you get a confirmation dialog box with a message similar to below:

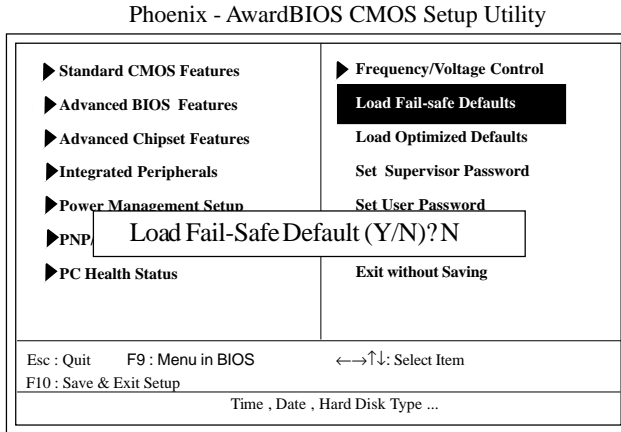

Pressing ‘Y’ loads the default values that are factory settings for optimal performance of system operations.

2.12 Load Optimized Defaults

When you press <Enter> on this item, you get a confirmation dialog box with a message similar to:

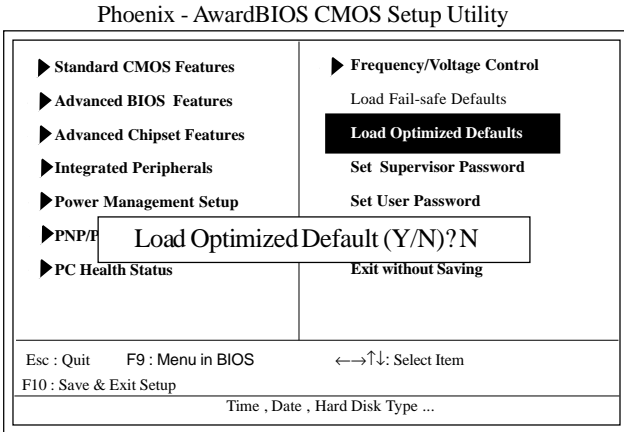

Pressing ‘Y’ loads the default values that are factory settings for optimal performance of system operations.

2.13 Set Supervisor / User Password

Phoenix - AwardBIOS CMOS Setup Utility

<ul style="list-style-type: none"> ▶ Standard CMOS Features ▶ Advanced BIOS Features ▶ Advanced Chipset Features ▶ Integrated Peripherals ▶ Power Management Setup ▶ PNP/PCI ▶ PC Health Status 	<ul style="list-style-type: none"> ▶ Frequency/Voltage Control <ul style="list-style-type: none"> Load Fail-safe Defaults Load Optimized Defaults Set Supervisor Password Set User Password Exit without Saving
<div style="border: 1px solid black; padding: 5px; display: inline-block;">Enter Password:</div>	
Esc : Quit F9 : Menu in BIOS ←→↑↓: Select Item F10 : Save & Exit Setup	
Time , Date , Hard Disk Type ...	

When you select this function, the following message will appear at the center of the screen to assist you in creating a password.


Enter Password (for Supervisor/User)

Type a password, up to eight characters, and press <Enter>. The password you type now will clear any previously entered password from CMOS memory. You will be asked to confirm the password. Type the password again and press <Enter>. You may also press <ESC> to abort the selection and not enter a password. To disable the password, just press <Enter> when you are prompted to enter a password. A message will confirm that you wish to disable the password. Once the password is disabled, the system will boot without asking user to enter a password.

Password for System or BIOS Setup

If you select “System” at the Security Option of BIOS Features Setup Menu, you will be prompted for the password every time when the system is rebooted, or any time when you try to enter Setup. If you select “Setup” at the Security Option of BIOS Features Setup Menu, you will be prompted only when you try to enter Setup.


2.14 Save & Exit Setup

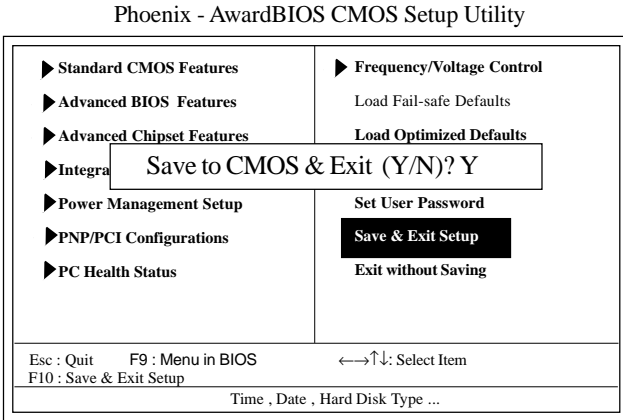

Typing “Y” will quit the Setup Utility and save the user setup value to RTC CMOS RAM.

Typing “N” will return to the Setup Utility.

2.15 Exit Without Saving

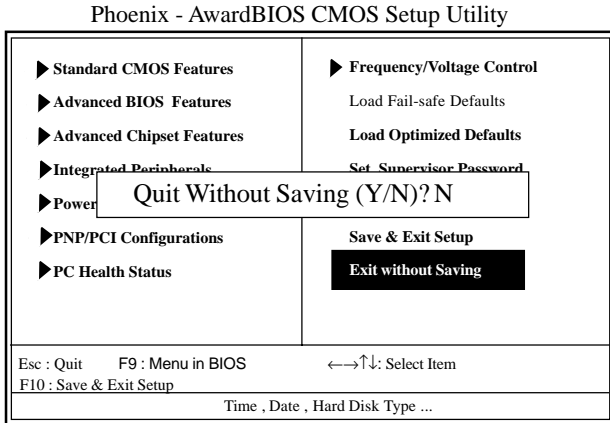

Typing “Y” will quit the Setup Utility without saving to RTC CMOS RAM.

Typing “N” will return to the Setup Utility.

Chapter 3

Drivers & Utilities

3. Drivers & Utilities

There are motherboard drivers and utilities included in the disc attached in this motherboard package. You don't have to install all of them for booting your system. But after you have finished the hardware installation, you have to install an operation system (such as windows XP) before you are able to install any drivers or utilities.

Note: Please be aware of the different Procedures for installing drivers for Windows 98/ME/XP/2000 .

3.1 Auto-run Menu

You can use the auto-run menu in the driver CD attached in the motherboard package. Then choose the utility or driver and select model name. The autorun starting screen looks like below:




3.2 Installing VIA Service Pack


Enter the item "Chipset" of the Autorun program and install the VIA Service Pack. Follow the illustrations below :




(1)
Click "Driver" Item.

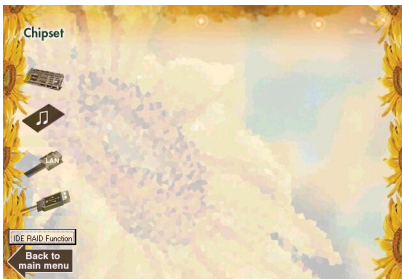


(2)
Click "Chipset" Item.

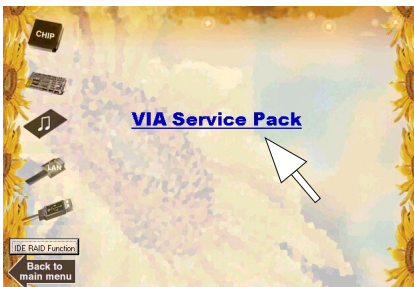


(3)
Click "VIA service Pack"
Item.

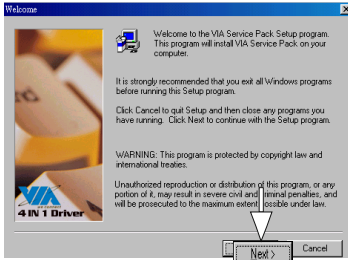

(4)
Click "Next".

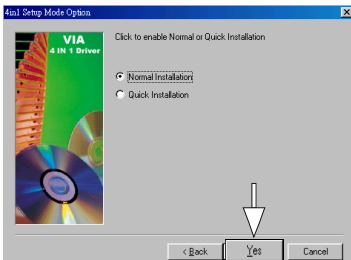

(5)
Click "Yes".

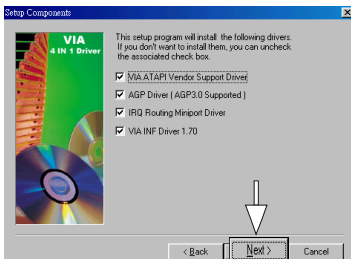

(6)
Tick all four items and
click "Next".



(7)


The Setup Program will install all items until the Restart screen appears. Click "OK" to restart system.

3.3 Installing Audio Driver

This motherboard comes with an AC97 CODEC V2.2, 6-channel compatible. You can find the Audio driver from this Auto-run menu.




(1)
Click "Driver" Item.

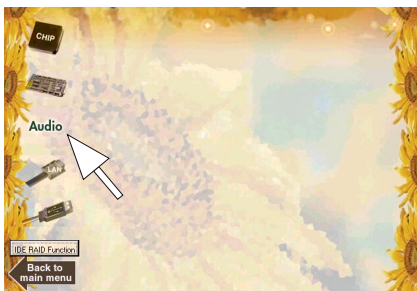


(2)
Click "Audio" Item.



(3)
Click "ALC650" Item.

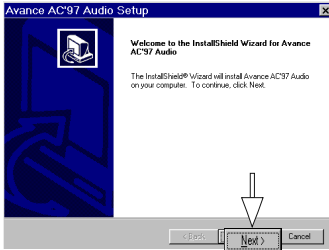

(4)
Click "Next".

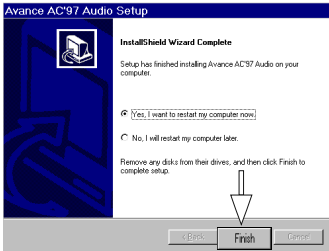

(5)
Click "Finish".


3.4 Installing USB 2.0 Driver



(1)
Click the "Driver " item.




(2)
Click the "USB " item.

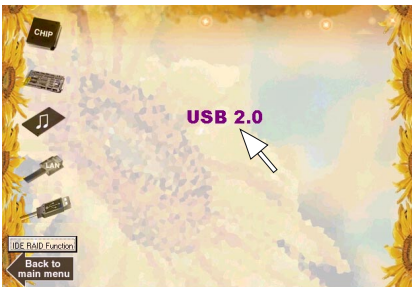


(3)
Click the "USB2.0 " item.



(4)
Click the "Next " item.

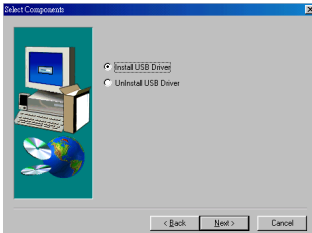


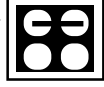
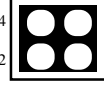

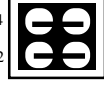

(2)
Tick "Install USB Driver" and click the "Next " item.

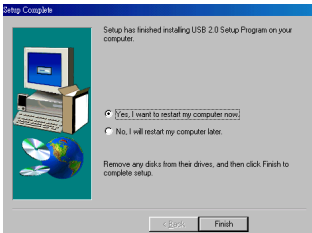




(6)
Click the "Finish " item to restart system.



Appendices



Appendix I Quick Jumper Setup

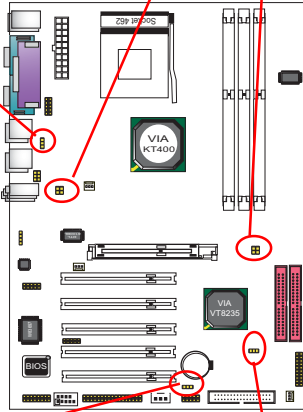J3 Setting				J3
J5 Setting				J5
CPU(MHz)	166 MHz	100 MHz (default)	133 MHz	

J2: USB0/1, 2/3 Wake-up Selector	
1-2 closed 	Enabled
2-3 closed 	Disabled(Default)



JP4: USB4/5 Wake-up Selector	
1-2 	Enabled
2-3 	Enabled(default)

Jumper Clear CMOS	
1-2 closed 	Normal (Default)
2-3 closed 	Clear CMOS

Appendices

Test Report

7KT400 System Compatibility Test Report

Note: This test report is for your reference only .we would like to suggest you to use these devices which we had approved

A. CPU Compatibility Test

Nucleus	Model	Voltage	RESET 10 Time	PW On/Off 10 Time	CC WS 2002 Test
Athlon XP	2700	166	PASS	PASS	42.7
Athlon XP	2600	133	PASS	PASS	40.8
Athlon XP	2400	133	PASS	PASS	34.1
Athlon XP	2200	133	PASS	PASS	37
Athlon XP	2100	133	PASS	PASS	36.1
Athlon XP	2000	133	PASS	PASS	35.2
Athlon XP	1900	133	PASS	PASS	34.4
Athlon XP	1800	133	PASS	PASS	33.2
Athlon XP	1700	133	PASS	PASS	32.5
Athlon XP	1600	133	PASS	PASS	31.6
Athlon XP	1500	133	PASS	PASS	30
Athlon XP B2	2400	166	PASS	PASS	40.5
Athlon XP B2	2400	133	PASS	PASS	39.3
Athlon XP B2	2200	133	PASS	PASS	37.4
Athlon XP B2	2000	133	PASS	PASS	35
MORGAN	1.3G	100	PASS	PASS	26.1
MORGAN	1.2G	100	PASS	PASS	24.8
MORGAN	1G	100	PASS	PASS	20.6
Athlon	1400	133	PASS	PASS	30.3
Athlon	1333	133	PASS	PASS	29.2
Athlon	1133	133	PASS	PASS	25.8
Athlon	1000	133	PASS	PASS	23.8
Athlon	1200	133	PASS	PASS	25.8
Athlon	1100	133	PASS	PASS	24.1
Athlon	1000	133	PASS	PASS	22.9
Duron	950	100	PASS	PASS	20
Duron	850	100	PASS	PASS	18.5

B. Memory Compatibility Test

Module Vendor	IC_Vendor	IC_Serial Numbers	CAPACITY	SIDE	DRAM CLK	Location	Memtest 1.04	WS-2001 Business
Kingmax	KINGMAX	KDL684T4AA-50	256M	D	400	DIMM 1,2,3	NA (Non-Support by VIA KT400 chipset)	64.7
Transcend	SAMSUNG	K4H560838C-TCB3	512M	D	333	DIMM 1,2,3	PASS	54.9
TwinMos	WINBOND	W942508AH-6	512M	D	333	DIMM 1,2,3	PASS	61.4
Kingmax	KINGMAX	KDL684T4A2A-05	256M	D	333	DIMM 1,2,3	PASS	48.2
China	KINGMAX	KDL684T4AA-60	256M	D	333	DIMM 1,2,3	PASS	38.5
Kingston	HYUNDAI	HY5DU2882ZAT-H	256M	D	266	DIMM 1,2,3	PASS	51.6
Armas	SAMSUNG	K4H280838B-TCB0	256M	D	266	DIMM 1,2,3	PASS	29.5
Retail	NANYA	NT5DS16M8AT-7K	512M	D	266	DIMM 1,2,3	PASS	47.8
Webink	ELIXIR	N2DS12860AT-75B	256M	D	266	DIMM 1,2,3	PASS	60.3

Appendices

Apacer	INFINEON	HYB25D256800AT-7	256M	D	266	DIMM 1,2,3	PASS	58
Kingmax	KINGMAX	KDL684T4AA-50	256M	D	400	DIMM 1,2	PASS	60.8
Transcend	SAMSUNG	K4H560838C-TCB3	512M	D	333	DIMM 1,2	PASS	47
TwinMos	WINBOND	W942508AH-6	512M	D	333	DIMM 1,2	PASS	54.5
Kingmax	KINGMAX	KDL684T4A2A-05	256M	D	333	DIMM 1,2	PASS	59.4
China	KINGMAX	KDL684T4AA-60	256M	D	333	DIMM 1,2	PASS	55.8
Kingston	HYUNDAI	HY5DU28822AT-H	256M	D	266	DIMM 1,2	PASS	49.2
Armas	SAMSUNG	K4H280838B-TCB0	256M	D	266	DIMM 1,2	PASS	36.3
Retail	NANYA	NT5DS16M8AT-7K	512M	D	266	DIMM 1,2	PASS	63
Webblink	ELIXIR	N2DS12880AT-75B	256M	D	266	DIMM 1,2	PASS	58.5
Apacer	INFINEON	HYB25D256800AT-7	256M	D	266	DIMM 1,2	PASS	62.7
Kingmax	KINGMAX	KDL684T4AA-50	256M	D	400	DIMM 2,3	PASS	63.1
Transcend	SAMSUNG	K4H560838C-TCB3	512M	D	333	DIMM 2,3	PASS	58.5
TwinMos	WINBOND	W942508AH-6	512M	D	333	DIMM 2,3	PASS	52.3
Kingmax	KINGMAX	KDL684T4A2A-05	256M	D	333	DIMM 2,3	PASS	37.2
China	KINGMAX	KDL684T4AA-60	256M	D	333	DIMM 2,3	PASS	62.1
Kingston	HYUNDAI	HY5DU28822AT-H	256M	D	266	DIMM 2,3	PASS	57.2
Armas	SAMSUNG	K4H280838B-TCB0	256M	D	266	DIMM 2,3	PASS	39
Retail	NANYA	NT5DS16M8AT-7K	512M	D	266	DIMM 2,3	PASS	40.8
Webblink	ELIXIR	N2DS12880AT-75B	256M	D	266	DIMM 2,3	PASS	55.5
Apacer	INFINEON	HYB25D256800AT-7	256M	D	266	DIMM 2,3	PASS	52.6

C. AGP Display Compatibility Test

Win98 SE 1024 x 768 x 32 bit

AGP Model	Vendor	AGP Mode	Dirver Version	3DMARK 2001SE Bench Mode	Quake III Demo 001		
					frames	seconds	fps
GeForce3 Ti 500	WinFast	4X	4.13.01.2942	5409	1346	12.7	106.1
GeForce4 MX-440	ASUS	4X	4.13.01.2942	4730	1346	12.9	104.3
GeForce 3	MSI	4X	4.13.01.2942	5096	1346	12.6	106.9
G450	Matrox	4X	4.12.01.2120	1019	1346	22.7	59.4
GeForce 3	ELSA	4X	4.13.01.2942	5081	1346	12.7	105.9

Win98 SE 800 x 600 x 16 bit

AGP Model	Vendor	AGP Mode	Dirver Version	3DMARK 2001SE Bench Mode	Quake III Demo 001		
					frames	seconds	fps
XABRE Pro 64M 8X	TRIPLEX		4.13.01.3030	Fail	1346	9.7	138.2
GeForce2 MX-400	TRIPLEX	4X	4.13.01.2942	2645	1346	15.5	86.7
VOODOO 4500	3Dfx	2X	4.12.01.0666	2176	1346	12.7	106.2
GA-GF2560	GIGABYTE	4X	4.13.01.2942	3902	1346	14	95.9
GeForce2 Ti	ON-DATA	4X	4.13.01.2942	4846	1346	12.7	105.7

Win 2000 1024 x 768 x 32 bit

AGP Model	Vendor	AGP Mode	Dirver Version	3DMARK 2001SE Bench Mode	Quake III Demo 001		
					frames	seconds	fps
GLADIAC 921 DVI	ELSA	4X	6.13.10.2942	6330	1346	8.3	162

Appendices

GeForce4 MX-440	ASUS	4X	6.13.10.2942	4731	1346	8.4	159.7
GeForce 3	WinFast	4X	6.13.10.2942	5946	1346	8.3	161.7
G450	Matrox	4X	5.12.01.1820	1165	1346	21	64
XPERT 2000 PRO	ATI	4X	5.13.01.3279	558	1346	41.6	32.3

Win 2000 800 x 600 x 16 bit

AGP Model	Vendor	AGP Mode	Driver Version	3DMARK 2001SE Bench. Mode	Quake III Demo 001		
					frames	seconds	fps
V7100	ASUS	4X	6.13.10.2942	3965	1346	8.6	157.2
GeForce2 MX	WinFast	4X	6.13.10.2942	3382	1346	8.8	153.5
GeForce2 MX-400	CHINA	4X	6.13.10.2942	3525	1346	8.7	154.3
GeForce2 GTS	ELSA	4X	6.13.10.2942	4088	1346	8.4	161
MS-8826	MSI	4X	6.13.10.2942	3598	1346	8.7	155.1

Win XP 1024 x 768 x 32 bit

AGP Model	Vendor	AGP Mode	Driver Version	3DMARK 2001SE Bench. Mode	Quake III Demo 001		
					frames	seconds	fps
GeForce4 MX-440	PROLINK	4X	6.13.10.2942	4325	1346	10.8	124.5
GeForce4 Ti 4600	WinFast	4X	6.13.10.2942	7098	1346	10.9	123.8
G550	Matrox	4X	5.13.01.1320	1338	1346	19.2	69.9
GV-GF1280RT	GIGABYTE	4X	6.13.10.2942	2703	1346	11.4	117.8
RADEON 8500LE	ATI	4X	6.13.10.6071	6100	1346	10.8	125

Win XP 800 x 600 x 16 bit

AGP Model	Vendor	AGP Mode	Driver Version	3DMARK 2001SE Bench. Mode	Quake III Demo 001		
					frames	seconds	fps
GeForce2 GTS Ultra	Creative	4X	6.13.10.2942	4195	1346	10.9	123.7
GeForce2 MX-200	PROLINK	4X	6.13.10.2942	3266	1346	11.6	116.3
V7700	ASUS	4X	6.13.10.2942	4069	1346	10.8	124.1
MS-8817	MSI	4X	6.13.10.2942	3720	1346	10.9	123.6
GeForce2 MX-200	CHINA	4X	6.13.10.2942	3059	1346	12.3	109.7

D. PCI/ISA Device Compatibility Test

Device Model	Slot	Vendor Model	O.S.	Driver Version	Result
LAN Card	PCI 1	D-Link DFE 530 TX	Win98 SE	3.52	PASS
	PCI 2	Intel Ether Express Pro 100 (82558)		3.37.07.0000	PASS
	PCI 3	3COM Etherlink III 3C905C-TXM		1.60.00.0000	PASS
	PCI 4	Realtek 8139C		5.373.0119.2000	PASS
	PCI 5	MPX - EN5038A1		1.15.0120.2000	PASS
	PCI 6	Ⓜ		N/A	N/A
VGA Card	ISA 1	D-Link 220 PTC	Win98 SE	N/A	N/A
	PCI 3	S3 775 Trio 64 V2/DX		4.10.1715	PASS
SCSI Card	PCI 4	S3 375 Virge / DX	Win98 SE	4.10.1681	PASS
	PCI 1	A-HA 29160 UW		d3.4 (4.10.2020)	PASS
	PCI 2	TEKRAM 395U		3.02	PASS
	PCI 3	INTTIO INT 950P		2.14	PASS
	PCI 4	ACORP AEC-6712TU		3. 00	PASS
	PCI 5	TEKRAM 390U2W		3.22	PASS
PCI 6	Ⓜ	N/A	N/A		

Appendices

Sound Card	PCI 1	Creative VIBRA 128	Win98 SE	4.12.01.2003	PASS
	PCI 2	YAMAHA YF-754		4.07.00.2013	PASS
	PCI 3	Creative PCI 128 BLASTER		4.12.01.0905	PASS

Vendor Model	BUS	O.S Environment	Description	Result
D-Link 530 TX	PCI	Windows XP	LAN PnP Function test	PASS
			NetWare Link test	PASS
			NetWare file copy test	PASS
			TCP/IP Link test	PASS
			LAN PnP Function test	N/A
S3 775 Trio 64 V2/DX	PCI	Windows XP	VGA PnP Function test	PASS
A-HA 29160 UW	PCI	Windows XP	SCSI Card PnP Function test	PASS
			SCSI HDD Win98 SE Install test	PASS
Creative VIBRA 128	PCI	Windows XP	Sound Card PnP Function test	PASS
			MP3 Player 5 min test	PASS
			CD Player 5 min test	PASS

Device Model	Slot	Vendor Model	O.S.	Driver Version	Result
MODEM Card	PCI 1	PC Tel PCT789T	Win98 SE	7.66-9K-03	PASS
	PCI 2	Motorola 62412-51		4.10.80.56	PASS
	PCI 3	ESS ES2838S		4.43.022	PASS
IEEE 1394 Card	PCI 1	ACORP 1394 TTO	Win98 SE	4.10.2222	PASS
	PCI 2	DOMEX DMX 5340		4.10.2222	PASS
	PCI 3	KOUWELL KW582V2		4.10.2222	PASS
USB 2.0 Card	PCI 1	ADAPTEC AUA3100LP	Win98 SE	3.0.0.4000	PASS
	PCI 2	ADAPTEC ULTRA UP 205		1.0.0.0	PASS
TV / FM Capture Card	PCI 3	ACORP BT787	Win98 SE	4.1.8.8	PASS
AMR / CNR / ACR Card	N/A	N/A	N/A	N/A	N/A

Vendor Model	BUS	O.S Environment	Description	Result
PC Tel PCT789T	PCI	Windows XP	Modem Card PnP Function test	PASS
			Internet Link test	PASS
			Browser file Download test	PASS
ACORP 1394 TTO	PCI	Windows XP	IEEE1394 Card PnP Function test	PASS
			1394 Fire Write Case R/W Function test	PASS
ADAPTEC AUA3100LP	PCI	Windows XP	USB 2.0 Card PnP Function test	PASS
ACORP BT787	PCI	Windows XP	IDE to USB Case R/W Function Test	PASS
AMR / CNR / ACR	N/A		TV / FM Capture Card PnP Function test	PASS
AMR / CNR / ACR	N/A	N/A	Internet Link test	N/A