

**AK32V/AK32VN**

**SocketA**

**AMD Athlon XP/Athlon/Duron**

**Processor Based DDR Main Board**

*User's Manual*

# Shuttle® AK32V/AK32VN

SocketA

AMD Athlon XP/Athlon/Duron Processor

based DDR Mainboard

Manual Version 1.0

## Copyright

Copyright© 2003 by Shuttle® Inc. All Rights Reserved.

This publication, including all photos, illustrations, and software, is protected under international copyright laws, with all rights reserved. Reproducing any of the material contained herein is prohibited without the consent of the publisher.

## Disclaimer

Shuttle® Inc. shall not be liable for any incidental or consequential damages resulting from the performance or use of this product.

This company makes no representations or warranties regarding the contents of this manual. Information in this manual has been carefully checked for reliability; however, no guarantee is given as to the correctness of the contents. In the interest of continued product improvement, this company reserves the right to revise the manual or include changes in the specifications of the product described within it at any time without notice and without obligation to notify any person of such revision or changes. The information contained in this manual is provided for general use by the customers.

## Trademarks

Shuttle is a registered trademark of Shuttle Inc.

VIA is a registered trademark of VIA Corporation.

AMD, Athlon/Duron are registered trademarks of AMD Corporation.

PS/2 is a registered trademark of IBM Corporation.

AWARD is a registered trademark of Award Software Inc.

Microsoft and Windows are registered trademarks of Microsoft Corporation.

**General Notice:** Other product names used in this manual are ascribed to their respective owners and acknowledged.

## Statement of Shuttle Mainboard via the EMI Test

Shuttle mainboards have been via the EMI test in terms of series of regulations: EN55022/ CISPR22/AS/NZS3548 Class B, EN55024 (1998/AS/NZS), EN4252.1 (1994), EN61000, ANSI

C63.4 (1992), CFR47 Part 15 Subpart B, and CNS13438 (1997). The items tested are illustrated as follows:

(A) Voltage: AC 110V/60HZ & AC 230V/50HZ

(B) Tested Product Information:

Product Name: PC Mainboard

Status: Sample

Model Name: AK32V

S/N:

CPU:

External Frequency: 100 MHz

AMD Athlon 750/800/850/900/950MHz,1.00/1.10/1.20/1.30/1.40GHz

AMD Duron 750/800/850/900/950MHz,1.00/1.10/1.20/1.30GHz

External Frequency: 133 MHz

AMD Athlon XP 1500+/1600+/1700+/1800+/1900+/2000+/2100+/2400+/2600+

AMD Athlon 1.00/1.13/1.20/1.33/1.40GHz

Keyboard Port: one port with 6 pins

Mouse Port: one port with 6 pins

USB 2.0 Port: four ports with 4 pins respectively

Parallel Port: one port with 9 pins

LAN Port: one port with 8 pins

Line-Out & Line-In & Mic-In Ports: one port for each

DDR Memory: 256 MB \*2

All CPUs have completely been tested, and values offered by the worst EMI combination of CPU external frequency are listed as follows:

Test Mode	External Frequency	CPU	Case Open/Closed
1	133MHz	Athlon XP 2600+	Close
2	133MHz	Athlon XP 2600+	Open
3	133MHz	Athlon 1.4 GHz	Close
4	133MHz	Athlon 1.4 GHz	Open
5	100MHz	Athlon 1.4 GHz	Close
6	100MHz	Athlon 1.4 GHz	Open
7	100MHz	Duron 1.2GHz	Close
8	100MHz	Duron 1.2GHz	Open

(C) Remedy for the Tested Product & Its EMI Interference:

Remedy: N/A

EMI Interference:

Crystal: 14.318MHz(X3)/32.768 KHz(X4)/24.576 MHz(X1)/25.00 MHz(X2)

Clock Generator: U13

(D) Supported Host Peripherals:

Host Peripheral	Product Name	Model Name	S/N	FCC ID
#1	Case	AK32V	N/A	
#2	Power Supply (300W)	Seventeam	ST-250HK	
#3	IBM HDD (82.3GB)	IC35L080AVVA07-0	A4DEENPG	39021082
#4	MITSUMI FDD	D353M3		
#5	SONY VCD Player	CDU4811		3892A291
#6	AGP Card	CV22		D33032

# TABLE OF CONTENTS

---

<b>WHAT'S IN THE MANUAL .....</b>	<b>5</b>
<b>Quick Reference .....</b>	<b>5</b>
<b>About This Manual .....</b>	<b>5</b>
<b>1 INTRODUCTION .....</b>	<b>6</b>
<b>1.1 TO DIFFERENT USERS .....</b>	<b>6</b>
First-Time DIY System Builder .....	6
Experienced DIY User .....	6
System Integrator .....	6
<b>1.2 ITEM CHECKLIST .....</b>	<b>7</b>
<b>2 FEATURES .....</b>	<b>8</b>
<b>2.1 SPECIFICATIONS .....</b>	<b>8</b>
<b>3 HARDWARE INSTALLATION .....</b>	<b>11</b>
<b>3.1 STEP-BY-STEP INSTALLATION.....</b>	<b>11</b>
STEP 1 Install the CPU .....	12
STEP 2 Set Jumpers .....	13
STEP 3 Install SDRAM System Memory .....	13
STEP 4 Install Internal Peripherals in System Case .....	14
STEP 5 Mount the Mainboard on the Computer Chassis .....	15
STEP 6 Connect Front-panel Switches/LEDs/Speaker/USB .....	16
STEP 7 Connect IDE & Floppy Disk Drives .....	17
STEP 8 Connect Other Internal Peripherals .....	17
STEP 9 Connect Power Supply .....	18
STEP 10 Install Add-on Cards in Expansion Slots .....	19
STEP 11 Connect External Peripherals to Back-panel .....	20
STEP 12 First Time System Boot Up .....	21
STEP 13 Install Driver & Software Components .....	22

---

<b>3.2 JUMPER SETTINGS .....</b>	<b>23</b>
JUMPER & CONNECTOR GUIDE .....	24
<b><i>Jumpers</i></b>	
Clear CMOS Setting (JP1) .....	26
CPU Frequency select (JP2) .....	26
<b><i>Back-Panel Connectors</i></b>	
PS/2 Keyboard & PS/2 Mouse Connectors .....	27
Parallel Port Connector .....	27
COM1 Connector .....	27
USB Port Connectors .....	27
LAN Port Connector (AK32VN only) .....	28
Line-In Port .....	28
Line-Out Port .....	28
Mic-In Port .....	28
<b><i>Front-Panel Connectors</i></b>	
ATX Power On/Off Switch Connector (PWR) .....	29
HDD LED Connector (HDLED) .....	29
MSG LED Connector (MSGLED) .....	30
Hardware Reset Connector (RST) .....	30
Front-Panel Audio Header (AUDIO1) .....	31
Extended USB Header (USB3) .....	31
<b><i>Internal Peripherals Connectors</i></b>	
Enhanced IDE Ports and Floppy Connector .....	32
<b><i>Other Connectors</i></b>	
ATX Power Supply Connector (ATX1) .....	33
Cooling FAN Connectors - CPU FAN1, CASFAN1 .....	34
CD_IN Connector (CD1) .....	34
Speaker Connector (SPK1) .....	35

---

---

<b>3.3 SYSTEM MEMORY CONFIGURATION .....</b>	<b>36</b>
Install Memory .....	36
Upgrade Memory .....	36
<b>4 SOFTWARE UTILITY .....</b>	<b>37</b>
<b>4.1 Mainboard CD Overview .....</b>	<b>37</b>
<b>4.2 Install Mainboard Software .....</b>	<b>38</b>
<b>4.2A Install VIA 4in1 Driver .....</b>	<b>39</b>
<b>4.2.B Install VIA LAN Driver (AK32VN only) .....</b>	<b>40</b>
<b>4.2.C Install VIA Audio Driver .....</b>	<b>41</b>
<b>4.2.D Install VIA USB2.0 Driver .....</b>	<b>42</b>
<b>4.3 View the User's Manual .....</b>	<b>43</b>
<b>5 BIOS SETUP .....</b>	<b>44</b>
<b>5.1 ENTER THE BIOS .....</b>	<b>44</b>
<b>5.2 THE MAIN MENU .....</b>	<b>45</b>
STANDARD CMOS FEATURES .....	47
ADVANCED BIOS FEATURES .....	51
ADVANCED CHIPSET FEATURES .....	55
INTEGRATED PERIPHERALS .....	59
POWER MANAGEMENT SETUP .....	63
PNP/PCI CONFIGURATION.....	67
PC HEALTH STATUS .....	69
FREQUENCY/VOLTAGE CONTROL .....	70
LOAD FAIL-SAFE DEFAULTS .....	71
LOAD OPTIMIZED DEFAULTS .....	71
SET SUPERVISOR PASSWORD .....	72
SET USER PASSWORD .....	72

---

---

SAVE & EXIT SETUP .....	73
EXIT WITHOUT SAVING .....	73

# WHAT'S IN THE MANUAL

---

## Quick Reference

Hardware Installation >> Step-by-Step .....	Page 11
Jumper Settings >> A Closer Look .....	Page 23
Software Utility >> How to Install .....	Page 37
BIOS Setup >> How to Configure .....	Page 44

## About This Manual

For First-Time DIY System Builder .....	Page 6
For Experienced DIY User .....	Page 6
For System Integrator .....	Page 6

# 1 INTRODUCTION

---

## 1.1 To Different Users

### **First-Time DIY System Builder**

Welcome to the DIY world! Building your own computer system is not as difficult as you may think. To make your first computer DIY experience successful, right from the start, we have designed the Chapter 3 Hardware Installation section in a step-by-step fashion for all the first-time DIY system builders. Prior to installation, we also suggest you to read the whole manual carefully to gain a complete understanding of your new Shuttle AK32V/AK32VN mainboard.

### **Experienced DIY User**

Congratulate on your purchase of the Shuttle AK32V/AK32VN mainboard. You will find that installing your new Shuttle AK32V/AK32VN mainboard is just easy. Bundled with an array of onboard functions, the highly-integrated AK32V/AK32VN mainboard provides you with a total solution to build the most stable and reliable system. Refer to sections 3.2 Jumper Settings and Chapter 4 Software Utility to find out how to get the best out of your new mainboard. Chapter 5 BIOS Setup also contains the relevant information on how to tune up your system to achieve higher performance.

### **System Integrator**


You have wisely chosen Shuttle AK32V/AK32VN to construct your system. Shuttle AK32V/AK32VN incorporates all the state-of-the-art technology of the KT266A chipset from VIA. It integrates the most advanced functions you can find to date in a compact ATX board. Refer to sections 3.2 Jumper Settings and Chapter 4 Software Utility for an in-depth view of system construction.

---

## 1.2 Item Checklist

Check all items with your AK32V/AK32VN mainboard to make sure nothing is missing. The complete package should include:

- \* One piece of Shuttle AK32V/AK32VN Mainboard

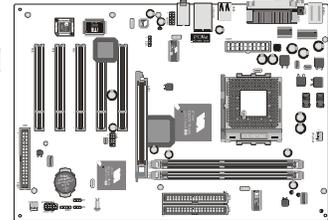


- \* One piece of ATA133/100/66/33 Ribbon Cable




- \* One piece of Floppy Ribbon Cable




- \* One piece of twin ports USB2.0 Cable (optional)

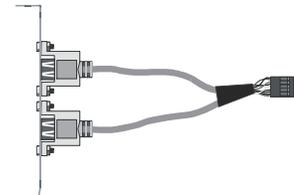

- \* AK32V/AK32VN User's Manual

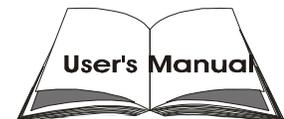

- \* I/O Shielding

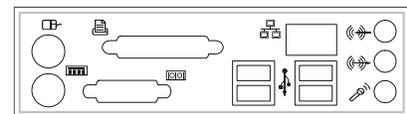

- \* One piece of Bundled CD-ROM with containing:
  - AK32V/AK32VN user's manual on PDF format
  - VIA 4-in-1 driver
  - VIA LAN driver (AK32VN only)
  - VIA Audio driver
  - VIA USB 2.0 driver
  - Award Flashing Utility



# 2 FEATURES

---

AK32V/AK32VN mainboard is carefully designed for the demanding PC user who wants high performance and maximum intelligent features in a compact package.

## 2.1 Specifications

### \* CPU Support

Support Socket462 package CPU  
AMD Athlon XP Processor with 200/266 MHz FSB  
AMD Athlon Processor with 200/266 MHz FSB  
AMD Duron Processor with 200 MHz FSB

### \* Chipset

Features VIA KT266A N.B. and VT8235 S.B..

### \* Onboard Lan (AK32VN only)

VT6103 PHY is for 10/100 Mbps operation.

### \* Jumperless CPU Configuration

Soft-configuration FSB (The FSB speed is software configurable at 100MHz and 133MHz).

### \* AC'97 Link for Audio and Telephony CODEC

AC'97 2.2 compliant  
Spread independent PCI functions for Audio and Modem

### \* Versatile Memory Support

Two 184-pin DIMM slots to support up to 2GB of PC1600 or PC2100 compliant DDR SDRAM module.

### \* PCI Expansion Slots

Provides five 32-bit PCI slots.

### \* AGP Expansion Slot

Provides one 32-bit AGP slot which supports up to 4X AGP device.

---

## ★ I/O Interface

Provides a variety of I/O interfaces:

- 1 x Floppy interface for 3.5-inch FDD with 720KB, 1.44MB, or 2.88MB format or for 5.25-inch FDD with 360K or 1.2MB format.
- 1 x PS/2 mouse connector.
- 1 x PS/2 Keyboard connector.
- 1 x DB9 Serial connectors 16550 UART compatible.
- 1 x DB25 Parallel port supporting Standard Parallel Port (SPP), Enhanced Parallel Port (EPP), and Extended Capabilities Port (ECP) data transmission schemes.
- 4 x USB connection.
- 1 x RJ45 LAN connection. (AK32VN only)
- 1 x Line-Out port.
- 1 x Line-In port.
- 1 x Mic-In port.

## ★ 6 USB2.0 Supported Onboard

- 4 USB connectors on back-panel and 2 sets of dual USB ports headers on mid-board.

## ★ PCI Bus Master IDE Controller Onboard

Two UltraDMA 133/100/66/33 Bus Master Dual-channel IDE ports provide support to a maximum of four IDE devices (one Master and one Slave per channel). The IDE Bus implements the data transfer speed up to 133/100/66/33 MB/sec and also supports Enhanced PIO Modes 0~4.

80-pin Cable Backward Compatible Legacy ATAPI Devices, ATAPI IDE CD-ROM, CD-R, CD-RW, and LS-120 Supports.

## ★ ATX Power Supply Connector

ATX power supply unit can be connect to the onboard 20-pin ATX power connector, supporting Suspend and Soft-On/Off by dual-function power button.

## ★ Advanced Configuration and Power Interface

Features four power saving modes: Snoop, Suspend to Disk, and Soft-Off. ACPI provides more efficient Energy Savings Features controlled by your operating system that supports OS Direct Power Management (OSPM) functionality.

---

## \* **System BIOS**

Provides licensed Award BIOS V6.0 PG on 2Mb Flash EEPROM and supports Green PC, Desktop Management Interface (DMI).

## \* **Form Factor**

System board conforms to the ATX specification.

Board dimension: 305mm\* 190mm.

## \* **Advanced Features**

- Dual Function Power Button - The system can be in one of two states ; one is Suspend mode and the other is Soft-Off mode. Pushing the power button for less than 4 seconds places the system into Suspend mode. When the power button is pressed for longer than 4 seconds, the system enters the Soft-Off mode.
- CPU Clock Setting - This item allows users to adjust CPU Host Clock in BIOS.

## \* **Intelligent Features**

- Voltage Monitoring - Monitors various voltages of key elements, such as the CPU, and other critical system voltage levels to ensure stable current passing through mainboard components. System voltages include + 3.3VIN, + 5V, + 12V, -12V, -5V on system etc.
- Fan Status Monitoring - To prevent CPU from overheating, the CPU fan is monitored for RPM and failure. (CPU Cooling FAN with RPM sensor is required.)
- Temperature Monitoring - This item allows users to make sure whether the CPU or system runs in a suitable temperature.


# 3 HARDWARE INSTALLATION

Before removing or installing any of these devices including CPU, DIMMs, Add-On Cards, Cables, please make sure to unplug the onboard power connector.

This section outlines how to install and configure your AK32V/AK32VN mainboard. Refer to the following mainboard layout to help you identify various jumpers, connectors, slots, and ports. Then follow these steps to guide you through a quick and correct installation of your system.

## 3.1 Step-by-Step Installation

### Accessories Of AK32V/AK32VN

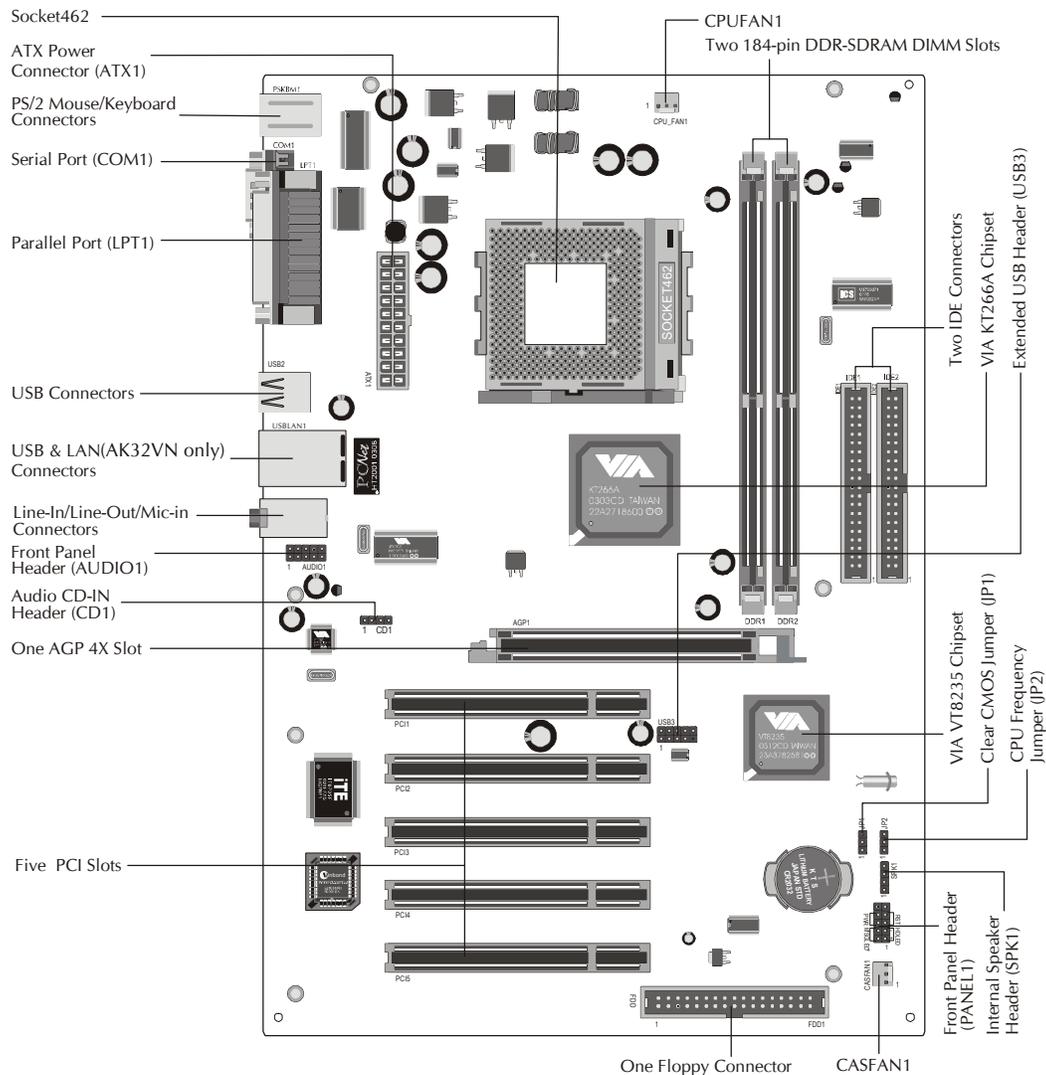


---

## Step 1

### Install the CPU:

1. Locate the CPU ZIF (Zero Insertion Force) socket on the upper-right sector of your mainboard (between the back-panel connectors and the DIMM memory slots).
2. Pull the CPU ZIF socket lever slightly sideways away from the socket to unlock the lever, and then bring it to an upwardly vertical position.
3. Place your AMD 462 Athlon/Duron processor in the socket A. Note that the CPU's edges have been purposely designed non-symmetrically to prevent from inserting the processor in the wrong direction. The following diagram demonstrates the correct placement of the CPU in the ZIF socket. You can see that the two blunt-edged corners should face towards the socket-lever.

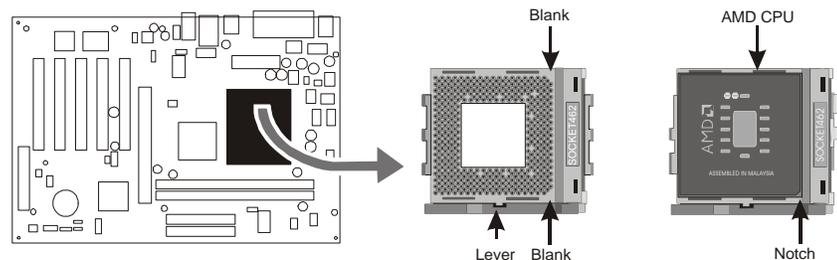

4. Slightly push the AMD 462 Athlon/Duron processor into the socket without applying excessive force while making sure there is no gap between CPU and socket. Then lower the socket-lever all the way down to its horizontal position and lock it to secure the CPU in place.
5. The AMD 462 Athlon/Duron processor requires a set of heatsink/fan to ensure proper cooling of the processor. If heatsink/fan have not been already mounted on your CPU, you must purchase the heatsink/fan separately and have it installed. Plug the cable through the heatsink/fan in the CPU fan power connector located nearby. Note that there are several types of CPU fan connectors. Normally, if your mainboard supports the hardware monitoring function, a 3-pin fan power connector should allow your system to detect the CPU fan's speed. The CPU fan can also run with a 2-pin fan power connector, however, detection of CPU fan's speed is not supported. Another type of CPU fan may feature a large 4-pin fan power connector, which does not support CPU fan's speed detection and must be directly connected to the system's power supply unit. Please refer to the following diagram.

---

## **Step 2.**

### **Set Jumpers**

This mainboard is jumperless! The default jumper settings have been set for the common usage standard of this mainboard. Therefore, you do not need to reset the jumpers unless you require special adjustments as in any of the following cases:

1. Clear CMOS setting
2. CPU frequency select


For first-time DIY system builders, we recommend that you do not change the default jumper settings if you are not totally familiar with mainboard configuration procedures. The factory-set default settings are tuned for optimum system performance. For the advanced users who wish to customize their system, section 3.2 Jumper Settings will provide detailed information on how to configure your mainboard manually.

## **Step 3.**

### **Install DDR SDRAM System Memory**

To install memory, insert DDR SDRAM memory module(s) in DIMM slot(s). Note that DDR SDRAM modules are directional and will not go in the DIMM slots unless properly oriented. After the module is fully inserted into the DIMM slot, lift the clips of both sides of the DIMM slot to lock the module in place.

#### **DDR SDRAM**

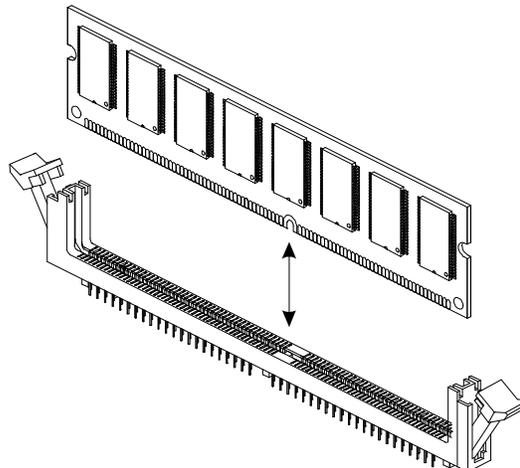

---

## **Step 4**

### **Install Internal Peripherals in System Case**

Before you install and connect the mainboard into your system case, we recommend that you first assemble all the internal peripheral devices into the computer housing, including but not limited to the hard disk drive (IDE /HDD), floppy disk drive (FDD), CD-ROM drive, and ATX power supply unit. This will greatly facilitate in making the connections to the mainboard described below.

To install IDE & FDD drives, follow this procedure:


1. Set the required jumpers on board each device according to the instructions provided by the manufacturer. (IDE devices, HDD, and CD-ROM have to set jumpers on Master or Slave mode depending on your willing to install more than one device for each kind.)
2. Connect IDE cable and FDD cable on the back-panel of the internal peripheral devices to the corresponding headers on board. Note that the cable should be oriented with its colored stripe (usually in red or magenta) connected to pin#1 both on the mainboard IDE or FDD connector and on the device as well.
3. Connect an available power cable through your system power supply unit to the back-panel of each peripheral device. Note that the power cable is directional and cannot fit in if it is not properly positioned.

---

## Step 5

### Mount the Mainboard on the Computer Chassis

1. You may find that there are a lot of different mounting hole positions both on your computer chassis and on the mainboard. To choose a correct mounting hole, the key point is to keep the back-panel of the mainboard in a close fit with your system case, as shown below.

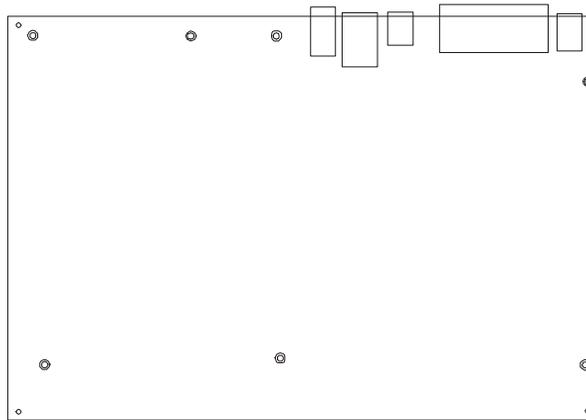


2. After deciding on the proper mounting holes, position the studs between the frame of chassis and the mainboard. The studs are used to fix the mainboard and to keep a certain distance between the system chassis and the mainboard, in order to avoid any electrical shortage between the board and the metal frame of chassis. (If your computer case is already equipped with mounting studs, you will need to tighten screws to attach the mainboard.)

**Note:** In most computer housings, you will be able to find 4 or more attachment points to install mounting studs and fix the mainboard. If there aren't enough matching holes, then make sure to install at least 4 mounting studs to ensure proper attachment of the mainboard.


## Step 6

### Connect Front-Panel LEDs/Switch/USBs

You can find there are several different cables already existing in the system case and originating from computer's front-panel devices (MSG LED, HDD LED, PWR BTN, RST switch, or USB devices etc.). These cables serve to connect the front-panel LEDs, switch, and USB connectors to mainboard's front-panel connector groups (PANEL1 and USB3), as shown below.

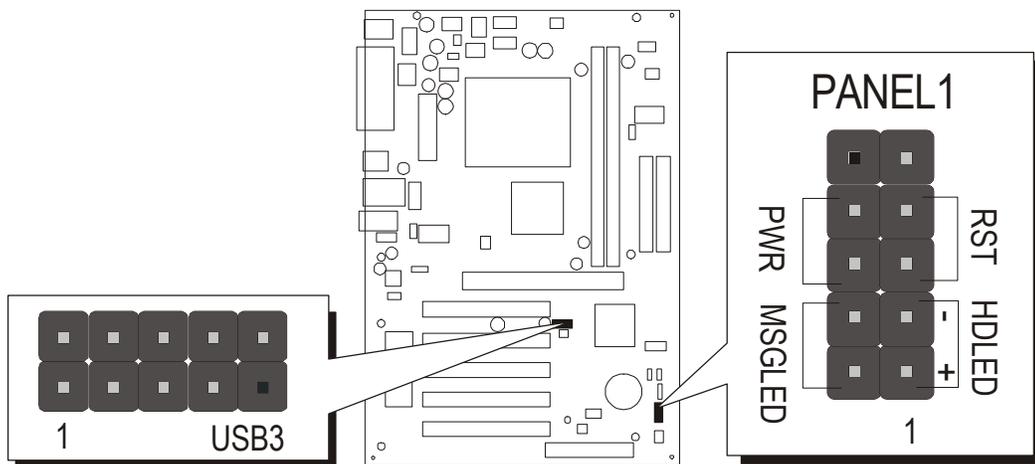

1. ATX Soft Power On/Off (PWR)
2. Hardware Reset Switch Button (RST)
3. Green-LED (MSG LED)
4. HDD-LED (HD LED)
5. Extended USB Headers (USB 2&3)

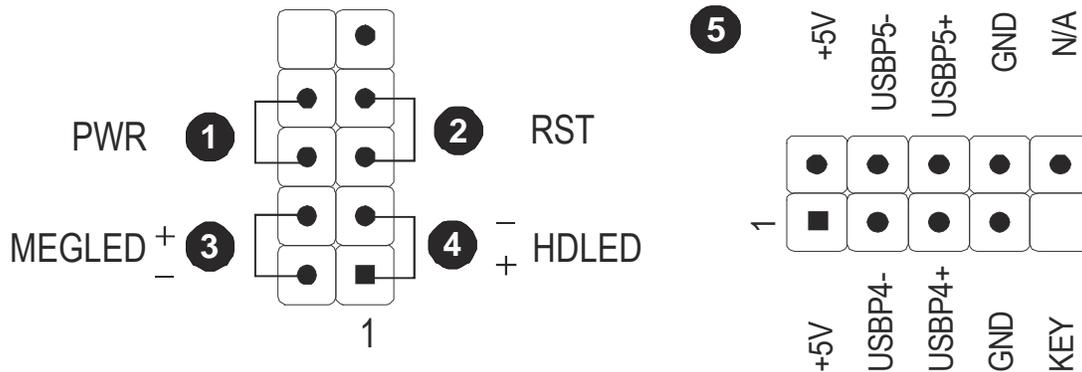


---


## Step 7

### Connect IDE and Floppy Disk Drives

1. IDE cable connectors

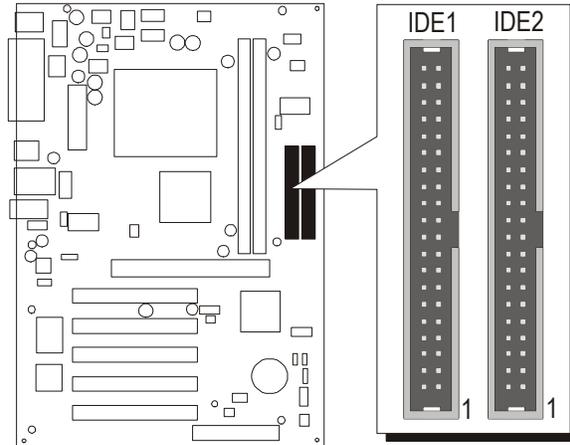


2. Floppy cable connector

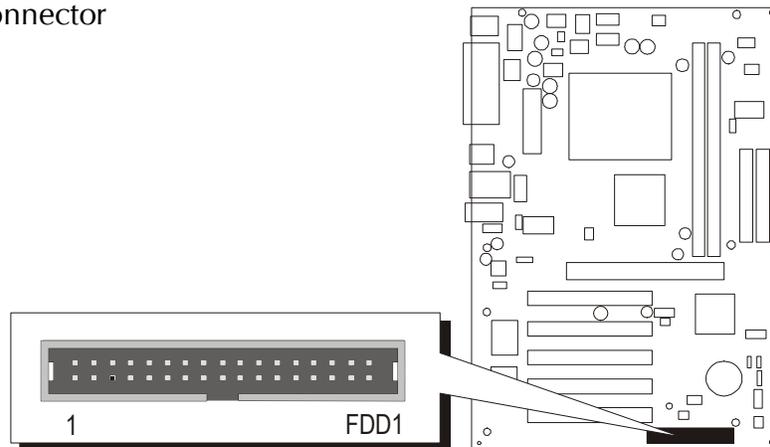

## Step 8


### Connect Other Internal Peripherals

1. CD-IN (CD1)

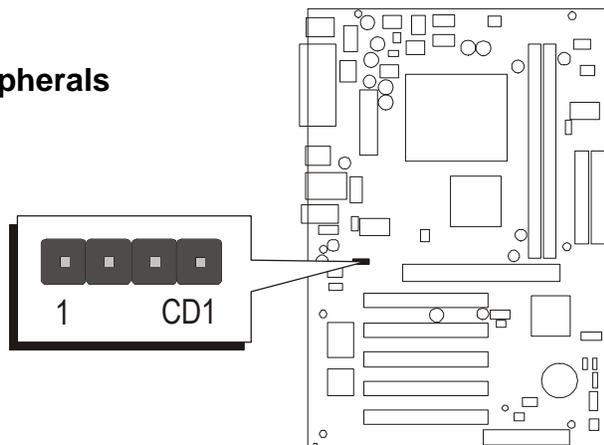


---

2. Internal Speaker Header (SPK1)

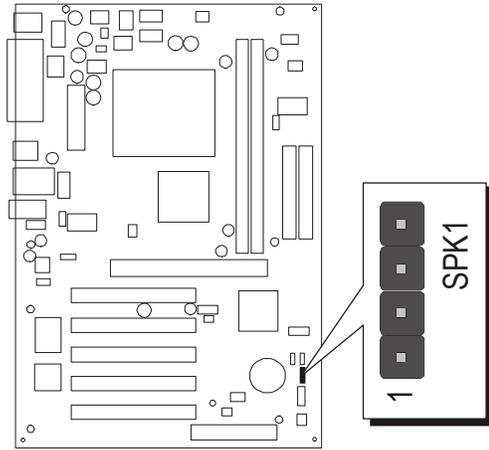


3. Front-panel Audio Header (AUDIO1)

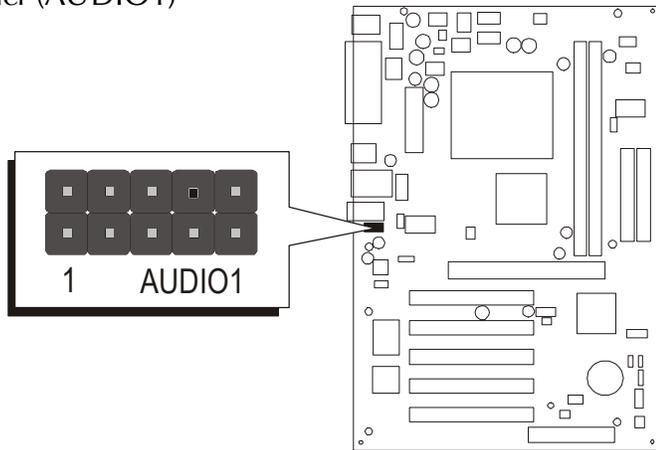

**Step 9**

**Connect the Power Supply**

1. System power connector (ATX1)

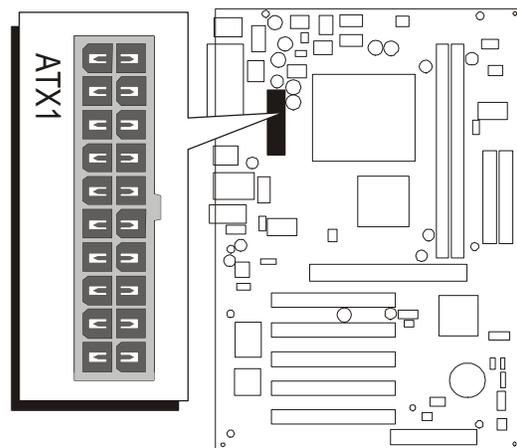


---


## Step 10

### Install Add-on Cards in Expansion Slots

1. AGP Card

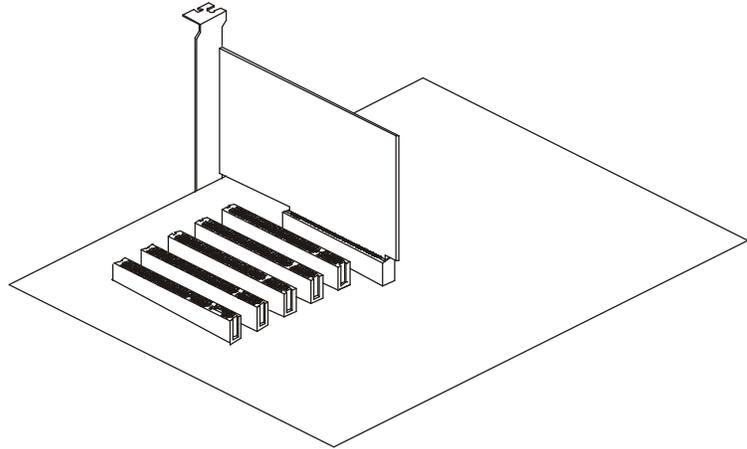

2. PCI Card

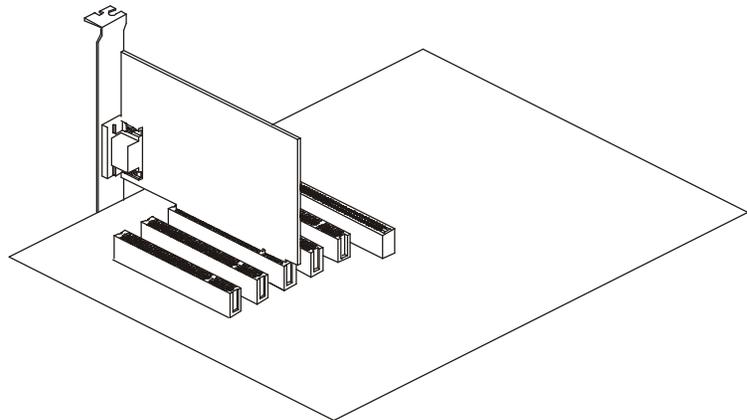


---


## Step 11

### Connect External Peripherals to Back-Panel

You are now ready to put the computer case back together and get on to the external peripherals connections to your system's back-panel.

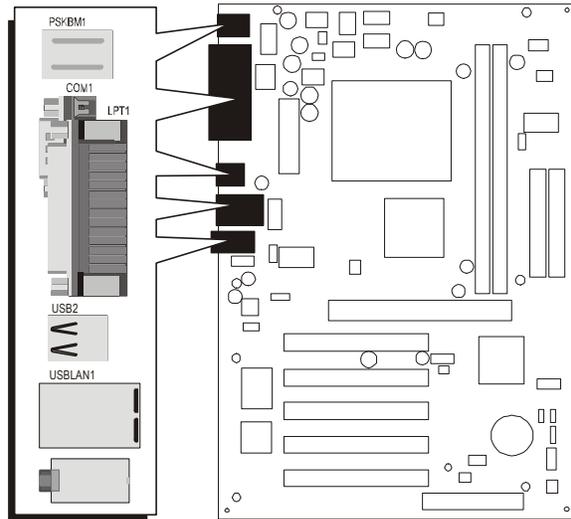

1. PS/2 Mouse Port
2. PS/2 Keyboard Port
3. Parallel port
4. COM1 Port
5. LAN Port (AK32VN only)
6. USB Ports
7. Line-in Port
8. Lin-out Port
9. Microphone Port

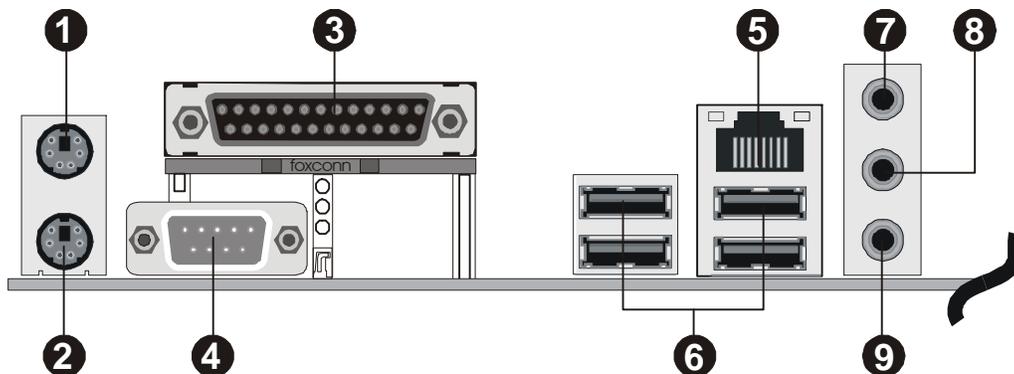

---

## Step 12

### First Time System Boot Up

To assure the completeness and correctness of your system installation, you may check the above installation steps once again before you boot up your system for the first time.

1. Insert a bootable system floppy disk (DOS 6.2x, Windows 95/98/NT, or others) which contains FDISK and FORMAT utilities into the FDD.
2. Turn on the system power.
3. First, you must use the FDISK utility to create a primary partition of the hard disk. You can also add an extended partition if your primary partition does not use all of the available hard disk space. If you choose to add an extended partition, you will have to create one or more logical partitions to occupy all the space available to the extended partition. The FDISK utility will assign a drive letter (i.e., C:, D:, E:,...) to each partition which will be shown in the FDISK program. After FDISK procedure, reboot your system by using the same system floppy disk.

Note: DOS 6.2x and Windows 95A can only support up to 2.1GB of HDD partition. If you use the FDISK utility with one of the operating systems mentioned above, you can only install your HDD into partitions no larger than 2.1GB each.

4. Now, use the FORMAT utility to format all the partitions you've created. When formatting the primary partition (C:), make sure to use the FORMAT C: /S command.

Note: FORMAT C: /S can transfer all the necessary system files into the primary partition of your hard disk. Then, your HDD will become a bootable drive.

5. Install all the necessary drivers for CD-ROM, Mouse, etc.
6. Setup the complete operating system according to your OS installation guide.

---

## **Step 13**

### **Install Drivers & Software Components**

Please note that all the system utilities and drivers are designed for Win 9x/2000/ME/XP/NT operating systems only. Make sure your operating system is already installed before running the drivers installation CD-ROM programs.

1. Insert the AK32V/AK32VN bundled CD-ROM into your CD-ROM drive. The autorun program will display the drivers main installation window on screen.
2. Choose "Install VIA 4 in 1Driver" and complete it.
3. Choose "Install VIA LAN Driver" and complete it. (AK32VN only)
4. Choose "Install VIA Audio Driver" and complete it.
5. Choose "Install VIA USB2.0 Driver" and complete it.
6. Exit from the autorun drivers installation program.

✿ Please refer to section Chapter 4 Software Utility to install driver.

---

## 3.2 Jumper Settings

Several hardware settings are made through the use of jumper caps to connect jumper pins to the mainboard. Pin #1 could be located at any corner of each jumper; you just find a location marked with a white right angle, which stands for pin 1#. There are several types of pin 1# shown as below:

3-pin and multi-pin (> 3) jumpers show as follows:

Pin #1 to the left:



Pin #1 on the top:



Pin #1 to the right:



Pin #1 on the bottom:



Jumpers with two pins are shown as  for Close [On] or  for Open [Off]. To Short jumper pins, simply place a plastic jumper cap over the desired pair of pins.


### Caution!

1. Do not remove the mainboard from its antistatic protective packaging until you are ready to install it.
2. Carefully hold the mainboard by its edges and avoid touching its components. When putting the mainboard down, place it on the top of its original packaging film and on an even surface, and components side up.
3. Wear an antistatic wrist strap or take other suitable measures to prevent electrostatic discharge (ESD) whenever handling this equipment.

---

## Jumper & Connector Guide

Use the mainboard layout on page 11 to locate CPU socket, memory slots, expansion slots, jumpers and connectors on the mainboard during installation. The following list will help you identify jumpers, slots, and connectors along with their assigned functions:

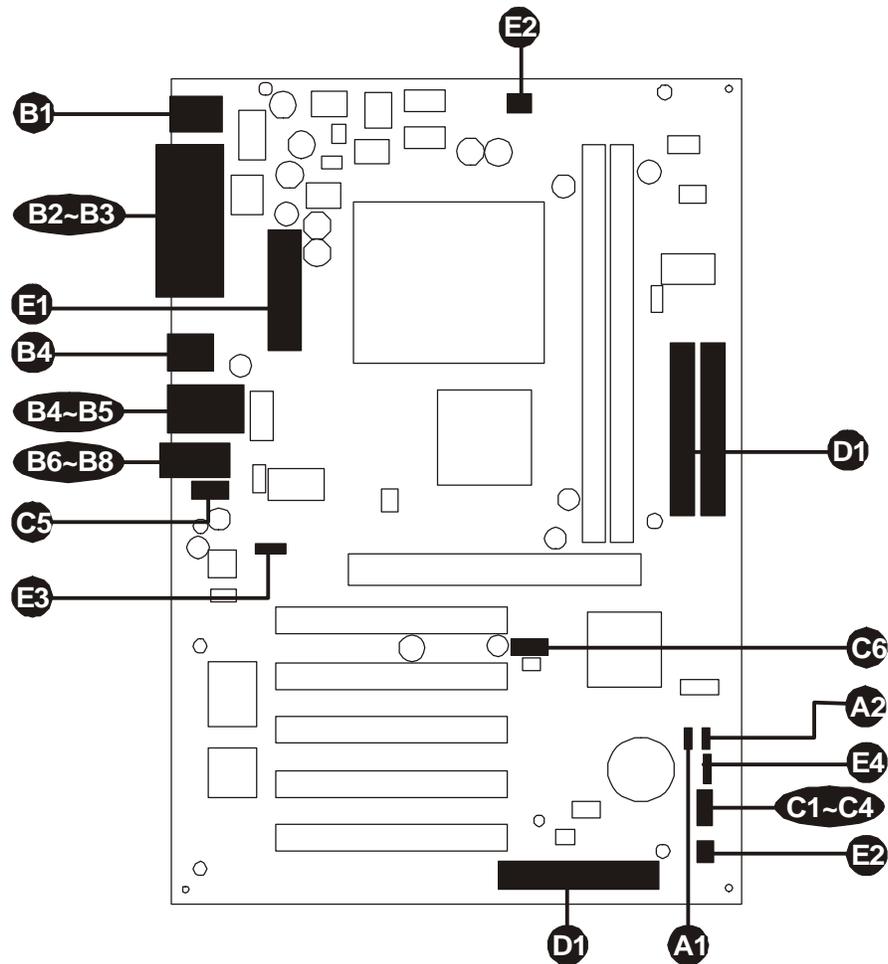

### ***CPU/Memory/Expansion Slots***

- |                 |   |
|-----------------|---|
| Socket          | : CPU Socket for AMD Athlon XP, Athlon and Duron 462-pin processors   |
| DIMM1/2         | : Two 184-pin DIMM Slots for 128, 256, 512 MB, and 1GB of 2.5V DDR SDRAM<br>(The total installed memory does not exceed 2GB.) |
| Expansion Slots | : Five 32-bit PCI Slots ; one 4x AGP Slot   |

---

### ***Jumpers***

- A1** JP1 : Clear CMOS
- A2** JP2 : CPU frequency selection

### ***Back-Panel Connectors***

- B1** KB : PS/2 Keyboard Port
- MS : PS/2 Mouse Port
- B2** LPT1 : Parallel Port (DB25 female)
- B3** COM1 : Serial Port (DB9 male)
- B4** USB1/2 : 4 USB (Universal Serial Bus) Ports
- B5** LAN : 10/100 base-TLAN Port (AK32VN only)
- B6** LINE-OUT : Line-Out Port
- B7** LINE-IN : Line-In Port
- B8** MIC-IN : Mic-In Port

### ***Front-Panel Connectors (PANEL1, AUDIO1 and USB3)***

- C1** PWR : ATX power on/off momentary type switch
- C2** HD LED : IDE drive active LED
- C3** MSG LED : Green LED
- C4** RST : Hardware reset switch
- C5** AUDIO1 : Front-panel audio header
- C6** USB3 : Front-panel USB headers

### ***Internal Peripherals Connectors***

- D1** FDD : Floppy Disk Drive Interface
- D1** IDE1 : IDE Primary Interface (Dual-channel)
- D1** IDE2 : IDE Secondary Interface (Dual-channel)

### ***Other Connectors:***

- E1** ATX1 : ATX Power (20-pin header)
- E2** CPUFAN1 : Cooling fan for CPU
- E2** CASFAN1 : Auxiliary case cooling fan
- E3** CD1 : CD-in connector
- E4** SPK1 : Speaker connector

---

## Jumpers

### A1 Clear CMOS Setting (JP1)


JP1 is used to clear CMOS data. Clearing CMOS will result in the permanently erasing previous system configuration settings and the restoring original(factory-set) system settings.



Pin 1-2 (Default)



Pin 2-3 (Clear CMOS)

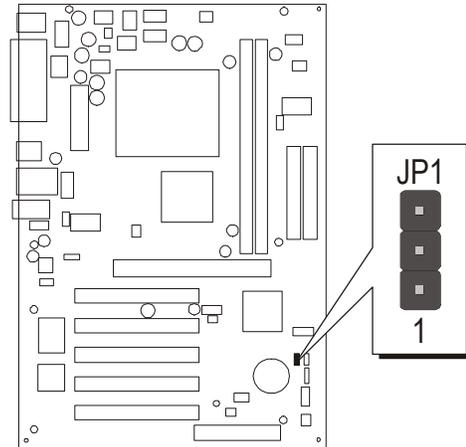

- Step 1. Turn off the system power (PC-> Off).
- Step 2. Remove ATX Power cable from ATX Power connector.
- Step 3. Remove jumper cap from JP1 pins 1-2.
- Step 4. Place the jumper cap on JP1 pin 2-3 for a few seconds.
- Step 5. Return the jumper cap to pin 1-2.
- Step 6. Plug ATX Power cable into ATX Power connector.
- Step 7. Turn on the system power (PC-> On).

### A2 CPU frequency select (JP2)


JP2 is used to set the CPU frequency (100 MHz or 133 MHz) according to the CPU.



Pin 1-2 (100 MHz)



Pin 2-3 (133 MHz)

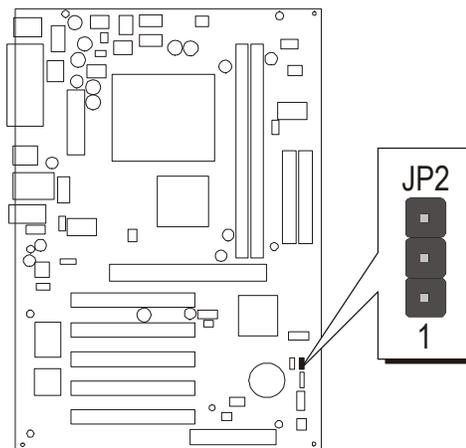


---

## ☞ Back-Panel Connectors


### ⓔ1 PS/2 Keyboard & PS/2 Mouse Connectors

Two 6-pin female PS/2 keyboard & Mouse connectors are located at the rear panel of mainboard. Depending on the computer housing you use (desktop or tower), the PS/2 Mouse connector is situated at the top of the PS/2 Keyboard connector when the mainboard is laid into a desktop, as opposed to a tower where the PS/2 Mouse connector is located at the right of the PS/2 Keyboard. Plug the PS/2 keyboard and mouse jacks into their corresponding connectors.

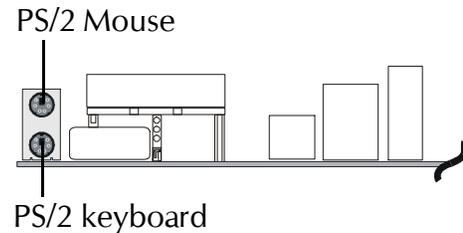


### ⓔ2 Parallel Port Connector

One DB25 female parallel connector is located at the rear panel of the mainboard. Plug the connection cable from your parallel device (printer, scanner, etc. ) into this connector.

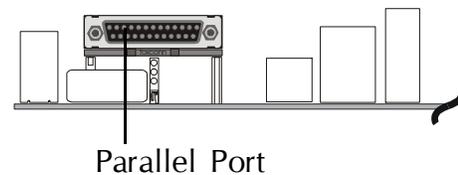


### ⓔ3 COM1 Connector

This mainboard can accommodate one serial device on COM1. Attach a serial device cable to the DB9 serial port COM1 at the back-panel of your computer.

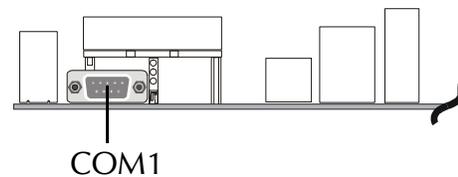

### ⓔ4 USB Port Connectors

This mainboard offers 4 USB ports on back-panel. Plug each USB device jack into an available USB1/USB2/USB3/USB4 connector.

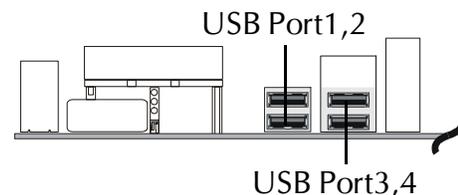


---

## B5 LAN Port Connector (AK32VN only)


This mainboard can accommodate one device on LAN.

Attach a RJ45 cable to the LAN port at the back-panel of your computer.

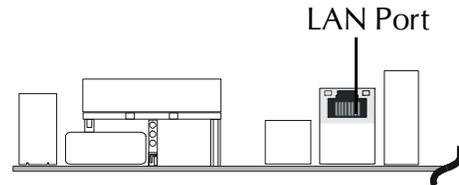


## B6 Line-in Port

Line-In is a stereo line-level input port that accepts a 1/8-inch TRS stereo plug. It can be used as a source for digital sound recording, a source to be mixed with the output, or both.

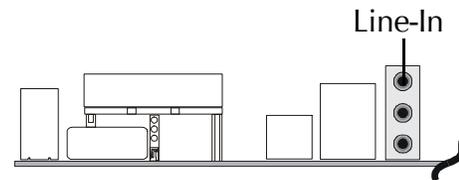


## B7 Line-Out Port

Line-Out is a stereo output port through which the combined signal of all internal and external audio sources on the board is output. It can be connected to 1/8-inch TRS stereo headphones or to amplified speakers.

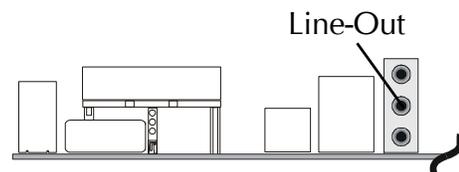

## B8 Mic-In Port

MIC-IN is a 1/8-inch jack that provides a mono input. It can use a dynamic mono or stereo microphone with a resistance of not more than 600 Ohms. ware to run MIDI instruments with your computer.

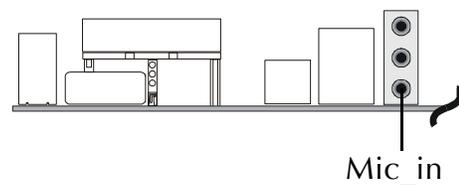


---

## ☞ Front-Panel Connectors

### ① ATX Power On/Off Switch Connector (PWR)


The Power On/Off Switch is a momentary type switch used for turning on or off the system ATX power supply. Attach the connector cable from the Power Switch to the 2-pin (PWR) header on the mainboard.

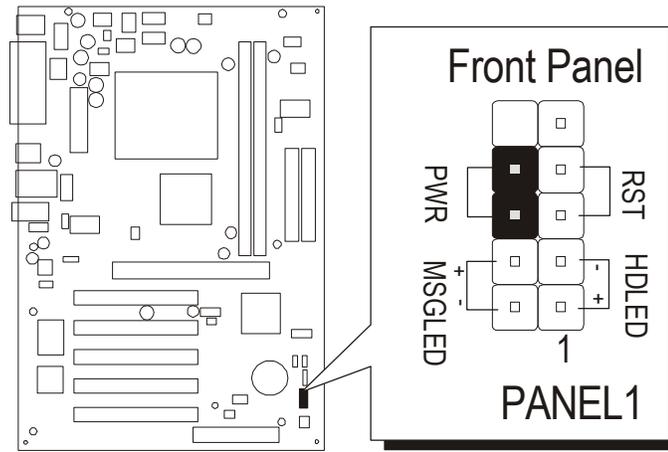

Note : Please notice all the LED connectors are directional. If your chassis's LED does not light up during running, please simply change to the opposite direction.

### ② HDD LED Connector (HDLED)


Attach the connector cable from the IDE device LED to the 2-pin (HDLED) header. The HDD LED lights up whenever an IDE device is active.

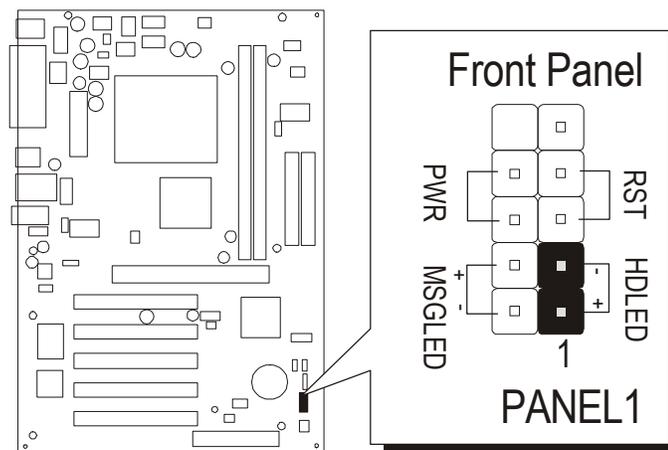

---

### ③ MSG LED Connector (MSGLED)


Connecting MSG LED a single- or dual-color, front panel mounted LED provides power on/off, sleep and message waiting indication.

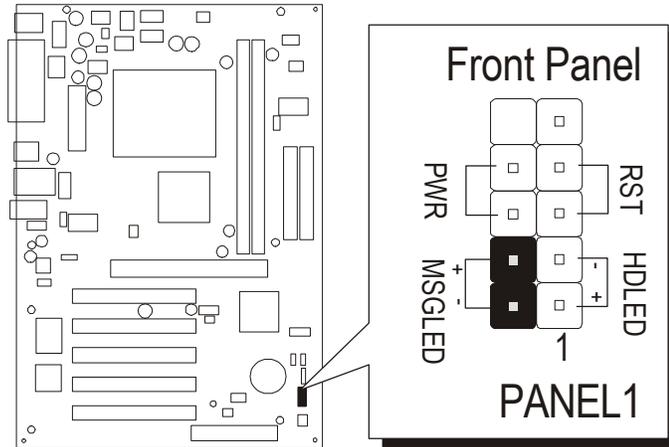

Note : Please notice all the LED connectors are directional. If your chassis's LED does not light up during running, please change it to an opposite direction.


### ④ Hardware Reset Connector (RST)

Attach the 2-pin hardware reset switch cable to the (RST) header. Pressing the reset switch causes the system to restart.

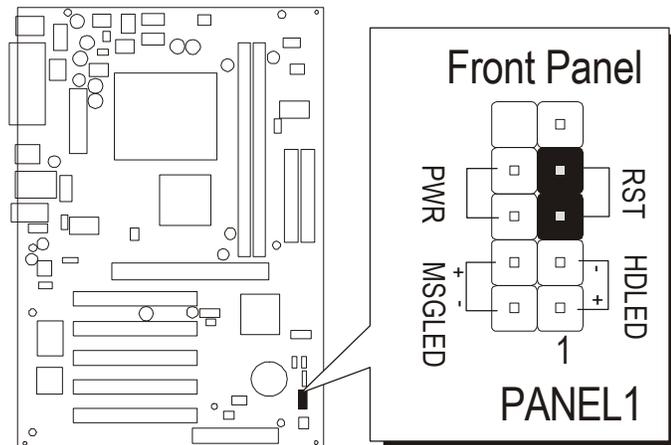

## Ⓒ5 Front-Panel Audio Header (AUDIO1)

This header allows users to install an auxiliary Front-Oriented Audio port for easier access. Either the Line-Out port connector on back-panel or Front-Panel Audio header is available at the same time. If you would like to use this header on front-panel, please remove all jumpers from the Audio header and install your special extra audio cable instead. Two mini jumpers must be setted on pins 5-6 and pins 9-10, when this header is not used.

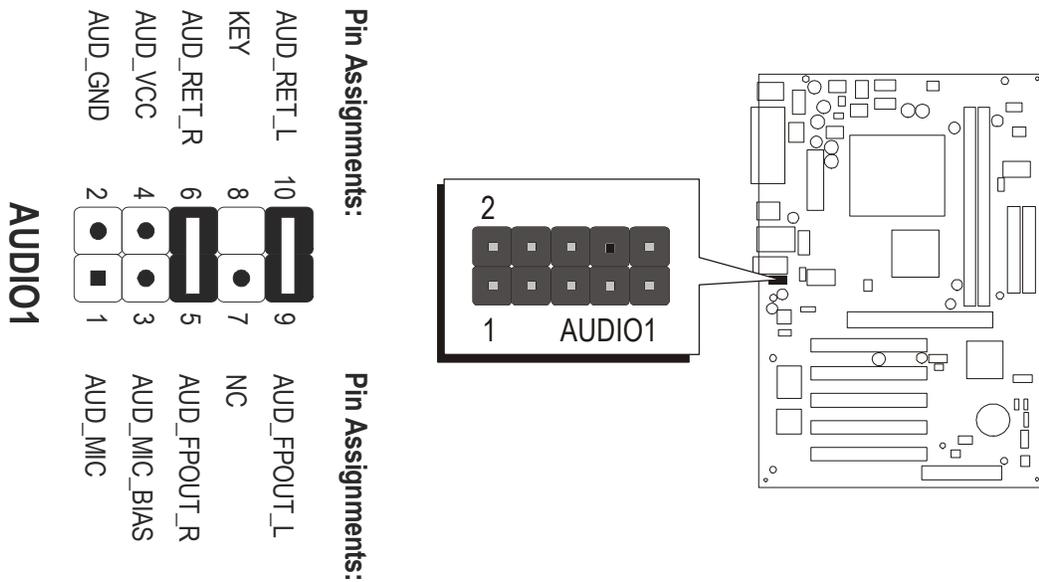


## Ⓒ6 Extended USB Header (USB3)

The headers are used to connect the cable attached to USB connectors which are mounted on front-panel or back-panel. But the USB cable is optional at the time of purchase.

Pins Assignment:

1 = +5V	2 = +5V
3 = USBP4-	4 = USBP5-
5 = USBP4+	6 = USBP5+
7 = GROUND	8 = GROUND
9 = KEY	10 = NC

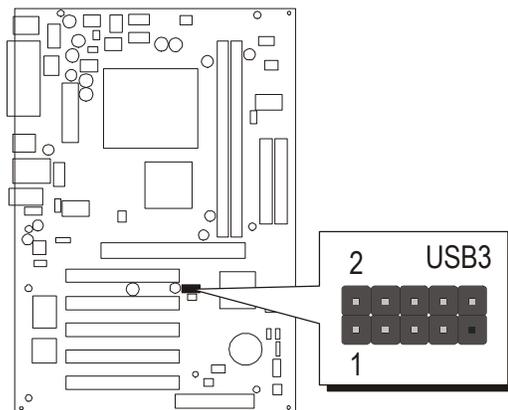


---

## ☞ **Internal Peripherals Connectors**

### **① Enhanced IDE Ports and Floppy Connector**

The AK32V/AK32VN mainboard features two 40-pin dual-channel IDE device connectors (IDE1/IDE2) providing support to up to four IDE devices, such as CD-ROM and Hard Disk Drives (H.D.D.). This mainboard also includes one 34-pin floppy disk controller (FDC) to accommodate the Floppy Disk Drive (F.D.D.). Moreover, this mainboard comes with one 80pin ATA133/100/66/33 ribbon cable to connect to IDE H.D.D. and one 34-pin ribbon cable for F.D.D. connection.

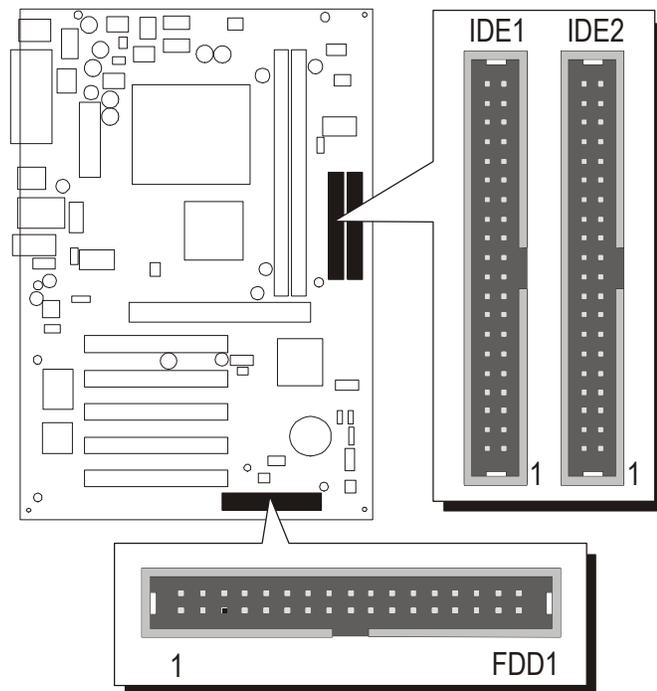

Note: Please connect your system H.D.D. to IDE 1


Important: Ribbon cables are directional, therefore, make sure to always connect with the red cable stripe on the same side as pin #1 of the IDE1/IDE2 or FDC connector on the mainboard.

---

☞ **Other Connectors**

**E1 ATX Power Supply Connector (ATX1)**

Locate the 20-pin male header ATX power connector (ATX1) on your mainboard. Plug the power cable from the ATX power supply unit directly into ATX1 ATX power supply connector.

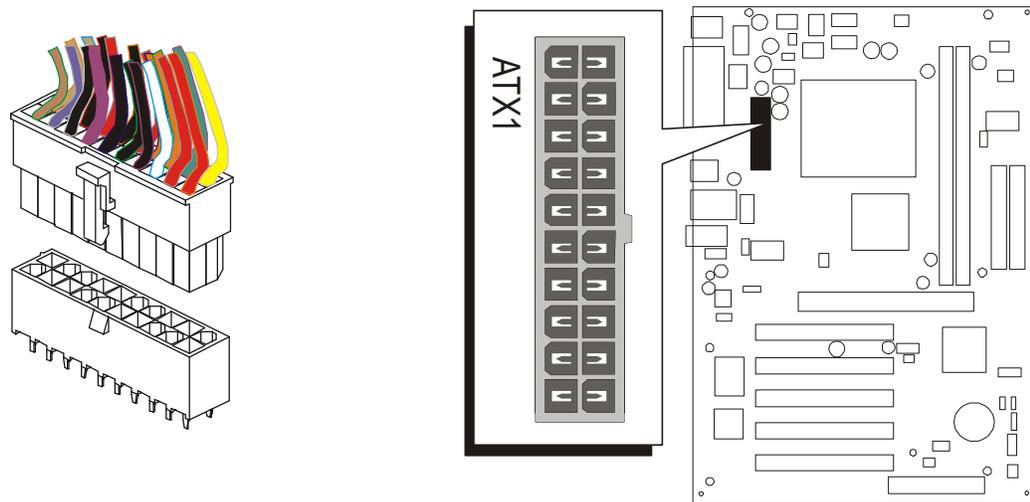

Note 1: The ATX power connector is directional and will not go in unless the guides match perfectly making sure that pin#1 is properly positioned.

Note 2: Make sure the latch of the ATX power connector clicks into place to ensure a solid attachment.


Note 3: Your ATX power supply must be supplied to ACPI +5V standby power and at least 720mA compatible.

Note 4: Make sure your power supply have enough power for higher speed processor installed.

---


## Ⓔ Cooling Fan Connectors - CPUFAN1 & CASFAN1

The mainboard provides two onboard 12V cooling fan power connectors to support CPU (CPUFAN1), and System (CASFAN1) cooling fans.

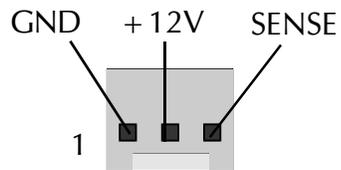

### Note:

Both cable wiring and type of plug may vary, which depends on the fan maker. Keep in mind that the red wire should always be connected to the +12V header and the black wire to the ground (GND) header.

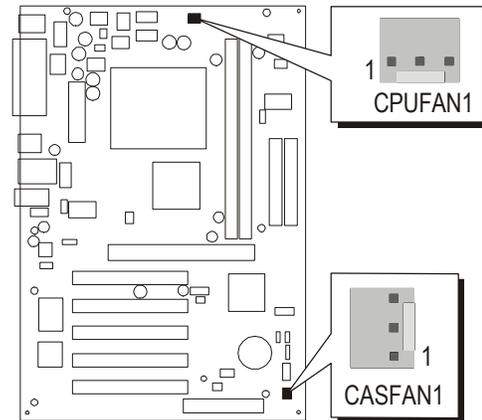


## ⒺⒻ CD\_IN Connector (CD1)

Port CD1 is used to attach an audio connector cable from the CD-ROM drive.

### Pin Assignments:

- 1 = CD IN L
- 2 = GND
- 3 = GND
- 4 = CD IN R

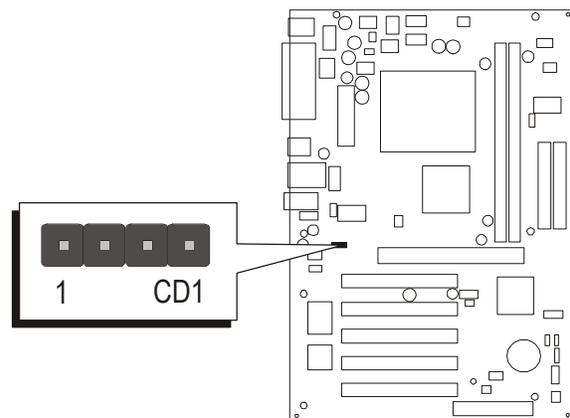

---

## **4** Speaker connector (SPK1)

Attach the PC speaker cable from the case to the 4-pin speaker connector (SPK1).


Pin Assignments:

1 = Signal

2 = NA

3 = GND

4 = VCC

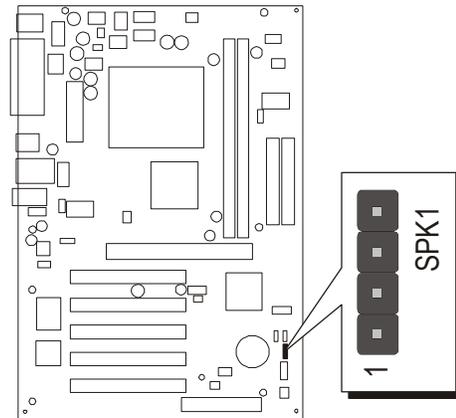

---

### 3.3 System Memory Configuration

AK32V/AK32VN mainboard has two 184-pin DIMM slots that allow you to install from 64MB up to 1GB of system memory.

Each 184-pin DIMM (Dual In-line Memory Module) Slot can accommodate 128MB, 256MB, 512MB, and 1G of PC1600/PC2100 compliant 2.5V single (1 Bank) or double (2 Bank) side 64-bit wide data path DDR SDRAM modules.

#### Install Memory:

Install memory in any or all of the slots and in any combination shown as follows.

DIMM Socket	Memory Modules	Module Quantity
DIMM 1	128MB, 256MB, 512MB, and 1G 184-pin 2.5V DDR SDRAM DIMM	x 1
DIMM 2	128MB, 256MB, 512MB, and 1G 184-pin 2.5V DDR SDRAM DIMM	x 1

Note: Maximum installed memory is 2GB.

Note: You do not need to set any jumper to configure memory since the BIOS utility can detect the system memory automatically. You can check the total system memory value in the BIOS Standard CMOS Setup menu.

#### Upgrade Memory:

You can easily upgrade the system memory by inserting additional DDR SDRAM modules in available DIMM slots. The total system memory is calculated by simply adding up the memory in all DIMM slots. After upgrade, the new system memory value will automatically be computed and displayed in the field "Standard CMOS Setup" of BIOS setup program.

# 4 SOFTWARE UTILITY

---


## 4.1 Mainboard CD Overview

Note: The CD contents attached in AK32V/AK32VN mainboard are subject to change without notice.

To start your mainboard CD disc, just insert it into your CD-ROM drive and the CD AutoRun screen should appear. If the AutoRun screen does not appear, double click or run D:\Autorun.exe (assuming that your CD-ROM drive is drive D:)

### Navigation Bar Description:

- ☞ Install Mainboard AK32V Driver- Installing VIA 4in1, Audio, USB2.0 drivers.
- ☞ Install Mainboard AK32VN Driver- Installing VIA 4in1, LAN drivers, Audio, USB2.0.
- ☞ Manual - AK32V/AK32VN Series mainboard user's manual in PDF format.
- ☞ Link to Shuttle Homepage - Link to shuttle website homepage.
- ☞ Browse this CD - Allows you to see contents of this CD.
- ☞ Quit - Close this CD.

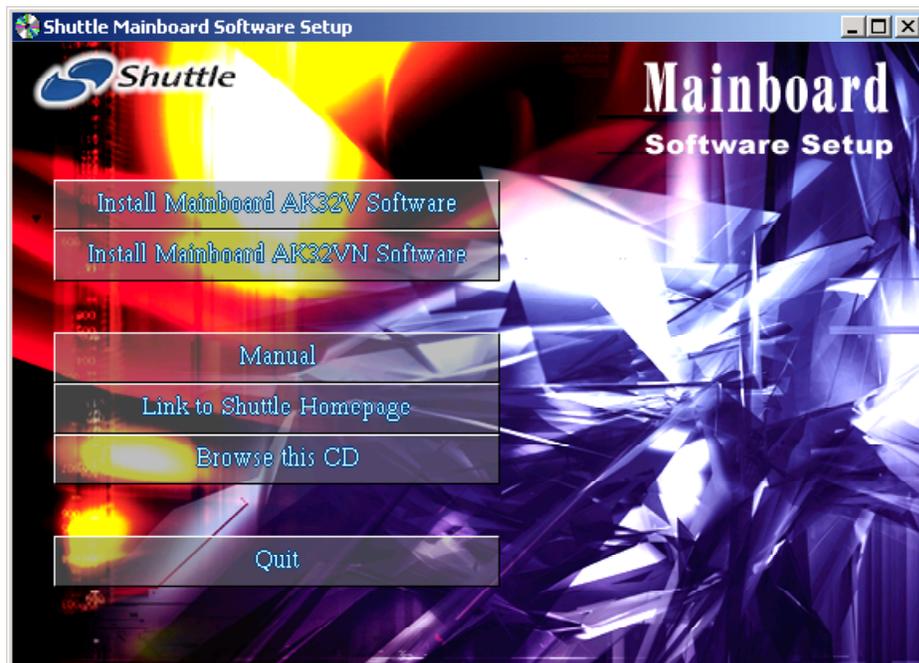

---

## 4.2 Install Mainboard Software

Insert the attached CD into your CD-ROM drive and the CD AutoRun screen should appear. If the AutoRun screen does not appear, double click on Autorun icon in My Computer to bring up Shuttle Mainboard Software Setup screen.

Select using your pointing device (e.g. mouse) on the "Install Mainboard AK32V Driver" or "Install Mainboard AK32VN Driver" bar to run into sub-menu.

The Mainboard AK32V Driver include:

- [4.2.A] Install VIA 4in1 Driver
- [4.2.C] Install VIA Audio Driver
- [4.2.D] Install VIA USB2.0 Driver



The Mainboard AK32VN Driver include:

- [4.2.A] Install VIA 4in1 Driver
- [4.2.B] Install VIA LAN Driver (AK32VN only)
- [4.2.C] Install VIA Audio Driver
- [4.2.D] Install VIA USB2.0 Driver



---

## 4.2.A Install VIA 4in1 Driver

Select using your pointing device (e.g. mouse) on the "Install VIA 4in1 Driver" bar to install VIA 4in1 Driver.



AK32V



AK32VN

Once you made your selection, a Setup window run the installation automatically.

When the copying files is done, make sure you reboot the system to take the installation effect.

---

## 4.2.B Install VIA LAN Driver (AK32VN only)

Select using your pointing device (e.g. mouse) on the "Install VIA LAN Driver" bar to install VIA LAN driver.



AK32VN

Once you made your selection, a Setup window run the installation automatically.

When the copying files is done, make sure you reboot the system to take the installation effect.


---

### 4.2.C Install VIA Audio Driver

Select using your pointing device (e.g. mouse) on the "Install VIA Audio Driver" bar to install AC'97 Audio driver.



AK32V

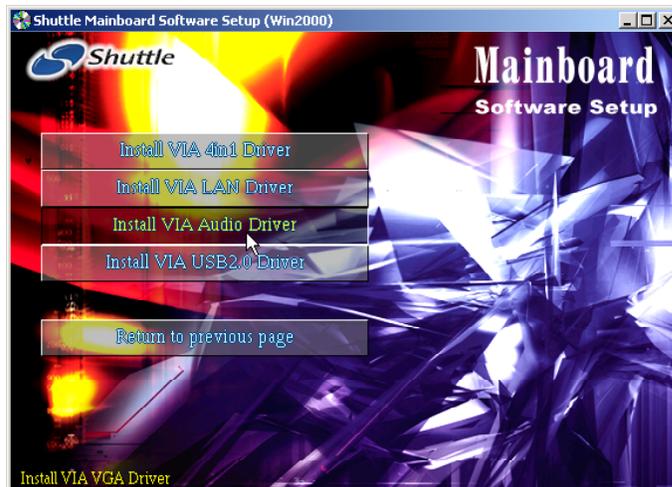

AK32VN

Once you made your selection, a Setup window run the installation automatically.

When the copying files is done, make sure you reboot the system to take the installation effect.

---

#### 4.2.D Install VIA USB2.0 Driver

Select using your pointing device (e.g. mouse) on the "Install VIA USB2.0 Driver" bar to install VIA USB2.0 driver.



AK32V



AK32VN

Once you made your selection, a Setup window run the installation automatically.

When the copying files is done, make sure you reboot the system to take the installation effect.

---

### 4.3 View the User's Manual

Insert the attached CD into your CD-ROM drive and the CD AutoRun screen should appear. If the AutoRun screen does not appear, double click on AutoRun icon in My Computer to bring up Shuttle Mainboard Software Setup screen.

Select using your pointing device (e.g. mouse) on the "Manual" bar.



Then Online Information windows will appear on your screen. Click on the "Install Acrobat Reader" bar if you need to install acrobat reader.



Then click on "Manual" bar to view user's manual.

# 5 BIOS SETUP

---

AK32V/AK32VN BIOS ROM has a built-in Setup program that allows users to modify the basic system configuration. This information is stored in battery-backed RAM so that it retains the Setup information even if the system power is turned off.

The system BIOS is managing and executing a variety of hardware related functions in the system, including:

- System date and time
- Hardware execution sequence
- Power management functions
- Allocation of system resources

## 5.1 Enter the BIOS

To enter the BIOS (Basic Input / Output System) utility, follow these steps:

- Step 1. Power on the computer, and the system will perform its POST (Power-On Self Test) routine checks.
- Step 2. Press <Del> key immediately, or at the following message:  
Press DEL to enter SETUP"/,or simultaneously press <Ctrl> , <Alt> , <Esc> keys.

Note 1. If you miss trains of words mentioned in step2 (the message disappears before you can respond) and you still wish to enter BIOS Setup, restart the system and try again by turning the computer OFF and ON again or by pressing the <RESET> switch located at the computer's front-panel. You may also reboot by simultaneously pressing the <Ctrl> , <Alt> , <Del> keys simultaneously.

Note 2. If you do not press the keys in time and system does not boot, the screen will prompt an error message, and you will be given the following options:

"Press F1 to Continue, DEL to Enter Setup"


- Step 3. As you enter the BIOS program, the CMOS Setup Utility will prompt you the Main Menu, as shown in the next section.

---

Note: The content of this manual is subject to any change without notice in advance.

## 5.2 The Main Menu

Once you enter the AwardBIOS(tm) CMOS Setup Utility, the Main Menu will appear on the screen. The Main Menu allows you to select from several setup functions and two exit choices. Use the arrow keys to select among the items and press <Enter> to accept and enter the sub-menu.

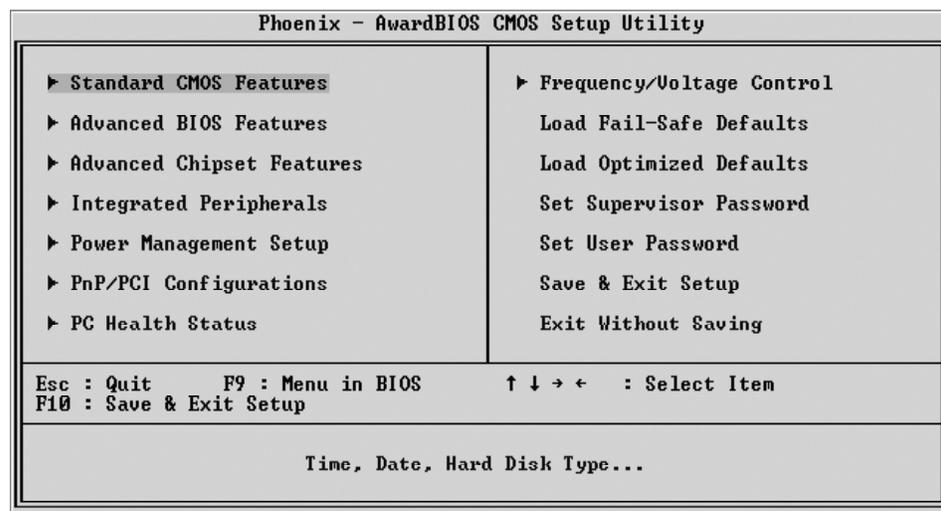

Note that a brief description of each highlighted selection appears at the bottom of the screen.

### **Setup Items**

The main menu includes the following main setup categories. Recall that some systems may not include all entries.

#### **Standard CMOS Features**

Use this menu for basic system configuration.

#### **Advanced BIOS Features**

Use this menu to set the Advanced Features available on your system.

#### **Advanced Chipset Features**

Use this menu to change the values in the chipset registers and optimize your system's performance.

---

### ***Integrated Peripherals***

Use this menu to specify your settings for integrated peripherals.

### ***Power Management Setup***

Use this menu to specify your settings for power management.

### ***PnP / PCI Configuration***

This entry appears if your system supports PnP / PCI.

### ***PC Health Status***

This entry shows the current system temperature, Voltage, and FAN speed.

### ***Frequency/Voltage Control***

Use this menu to specify your settings for frequency/voltage control.

### ***Load Fail-Safe Defaults***

Use this menu to load the BIOS default values for the minimal/stable performance of your system to operate.

### ***Load Optimized Defaults***

Use this menu to load the BIOS default values that are factory-set for optimal performance system operation. While Award has designed the custom BIOS to maximize performance, the factory has the right to change these defaults to meet users' needs.

### ***Supervisor / User Password***

Use this menu to change, set, or disable supervisor/user password. It allows you to limit access to the system and Setup, or only to Setup.

### ***Save & Exit Setup***

Save CMOS value changes in CMOS and exit from setup.

### ***Exit Without Saving***

Abandon all CMOS value changes and exit from setup.

---

## ☞ **Standard CMOS Features**

The items in Standard CMOS Setup Menu are divided into 10 categories. Each category includes no, one or more than one setup items. Use the arrow keys to highlight the item and then use the <PgUp> or <PgDn> keys to select the value you want in each item.

Phoenix - AwardBIOS CMOS Setup Utility		Item Help
Standard CMOS Features		
Date (mm:dd:yy)	Thu, May 8 2003	Menu Level ▶ Change the day, month, year and century
Time (hh:mm:ss)	7 : 17 : 6	
▶ IDE Primary Master	[ None ]	
▶ IDE Primary Slave		
▶ IDE Secondary Master		
▶ IDE Secondary Slave	[ None ]	
Drive A	[1.44M, 3.5 in.]	
Drive B	[None]	
Video	[EGA/UGA]	
Halt On	[All Errors]	
Base Memory	640K	
Extended Memory	64512K	
Total Memory	65536K	

↑↓→←:Move Enter:Select +/-/PU/PD=Value F10:Save ESC:Exit F1:General Help  
F5: Previous Values F6: Fail-Safe Defaults F7: Optimized Defaults

### Date

<Month> <DD> <YYYY>

Set the system date. Note that the 'Day' automatically changes when you set the date.

### Time

<HH : MM : SS>

The time is converted based on the 24-hour military-time clock. For example, 5 p.m. is 17:00:00.

### IDE Primary Master

Options are in its sub-menu.

Press <Enter> to enter the sub-menu of detailed options.

### IDE Primary Slave

Options are in its sub-menu.

Press <Enter> to enter the sub-menu of detailed options.

### IDE Secondary Master

Options are in its sub-menu.

Press <Enter> to enter the sub-menu of detailed options.

---

### IDE Secondary Slave

Options are in its sub menu.

Press <Enter> to enter the sub-menu of detailed options.

### Drive A/Drive B

Select the type of floppy disk drive installed in your system.

- The choice: None, 360K, 5.25 in, 1.2M, 5.25 in, 720K, 3.5 in, 1.44M, 3.5 in, or 2.88M, 3.5 in

### Video

Select the default video device.

- The choice: EGA/VGA, CGA 40, CGA 80, or MONO

### Halt On

Select the situation in which you want the BIOS to stop the POST process and notify you.

- The choice: All Errors, No Errors, All, But Keyboard, All, But Diskette, or All, But Disk/Key

### Base Memory

Displays the amount of conventional memory detected during boot up.

- The choice: N/A

### Extended Memory

Displays the amount of extended memory detected during boot up.

- The choice: N/A

### Total Memory

Displays the total memory available in the system.

- The choice: N/A

---

\*\*\*\*\*

### **IDE Adapters**

The IDE adapters control the hard disk drive. Use a separate sub-menu to configure each hard disk drive.

#### IDE HDD Auto-Detection

Press <Enter> to auto-detect HDD on this channel. If detection is successful, it fills the remaining fields on this menu.

- Press Enter

#### IDE Primary Master

Selecting 'manual' lets you set the remaining fields on this screen and select the type of fixed disk. "User Type" will let you select the number of cylinders, heads, etc., Note: PRECOMP = 65535 means NONE!

- The choice: None, Auto, or Manual.

#### Access Mode

Choose the access mode for this hard disk.

- The choice: CHS, LBA, Large, or Auto.

#### Capacity

Disk drive capacity (Approximated). Note that this size is usually slightly greater than the size of a formatted disk given by a disk checking program.

- Auto-Display your disk drive size.

The following options are selectable only if the 'IDE Primary Master' item is set to 'Manual'

#### Cylinder

Set the number of cylinders for this hard disk.

- Min = 0, Max = 65535

#### Head

Set the number of read/write heads.

- Min = 0, Max = 255

---

Precomp

Warning: Setting a value of 65535 means no hard disk.

➤ Min = 0, Max = 65535

Landing zone

Set the Landing zone size.

➤ Min = 0, Max = 65535

Sector

Number of sector per track.


➤ Min = 0, Max = 255

\*\*\*\*\*

---

## ☞ **Advanced BIOS Features**

This section allows you to configure your system for basic operation. You have the opportunity to select the system's default speed, boot-up sequence, keyboard operation, shadowing, and security.

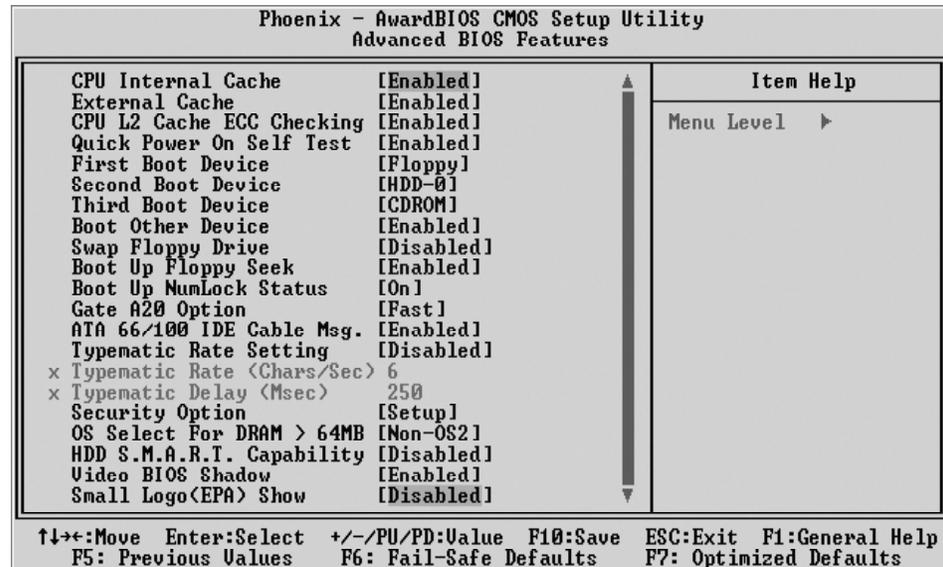

### CPU Internal Cache

All processors that can be installed in this mainboard use internal level1 (L1) cache memory to improve performance. Leave this item at the default value for better performance.

- The choice: Enabled or Disabled.

### External Cache

Most processors that can be installed in this system use external level2(L2) cache memory to improve performance. Leave this item at the default value for better performance.

- The choice: Enabled or Disabled.

### CPU L2 Cache ECC Checking

When you select Enabled, memory checking is enabled when the CPU internal L2 cache contains ECC SRAMs.

- The choice: Enabled or Disabled.

### Quick Power On Self Test

This item speeds up Power-On Self Test (POST) after you power on the computer. If it is set to enabled, BIOS will shorten or skip some check items during POST.

- The choice: Enabled, or Disabled.

---

### First/Second/Third Boot Device

The BIOS attempts to load the operating system from the devices in the sequence selected in these items.

- The Choice: Floppy, LS120, HDD-0, SCSI, CDROM, HDD-1, HDD-2, HDD-3, ZIP100, LAN, or Disabled.

### Boot Other Device

Select Your Boot Device Priority.

- The choice: Enabled or Disabled.

### Swap Floppy Drive

If the system has two floppy drives, you can swap the logical drive name assignment.

- The choice: Enabled or Disabled.

### Boot Up Floppy Seek

Seeks disk drives during boot-up. Disabling speed boots up.

- The choice: Enabled or Disabled.

### Boot Up NumLock Status

Selects power-on state for NumLock.

- The choice: Off or On.

### Gate A20 Option

This entry allows you to select how the gate A20 is handled. The gate A20 is a device used for above 1MByte of address memory. Initially, the gate A20 was handled via a pin on the keyboard. Today, while a keyboard still provides this support, it is more common and much faster in setting to Fast for the system chipset to provide support for gate A20.

- The choice: Normal, or Fast.

### ATA 66/100 Cable Msg

This choice is enable or disable.

- The choice: Enabled or Disabled.

### Typematic Rate Setting

Keystrokes repeat at a rate determined by the keyboard controller. When this controller enabled, the typematic rate and typematic delay can be selected.

- The choice: Enabled or Disabled.

---

### Typematic Rate (Chars/Sec)

This item sets how many times the keystroke will be repeated in a second when you hold the key down.

- The choice: 6, 8, 10, 12, 15, 20, 24, or 30.

### Typematic Delay (Msec)

Sets the delay time after the key is held down before it begins to repeat the keystroke.

- The choice: 250, 500, 750, or 1000.

### Security Option

Select whether the password is required every time the system boots or only when you enter setup.

System     The system will not boot and access to Setup will be denied if the correct password is not entered promptly.

Setup       The system will boot, but access to Setup will be denied if the correct password is not entered promptly.

- The choice: System or Setup.

Note: To disabled security, select PASSWORD SETTING at Main Menu, and then you will be asked to enter password. Do not type anything and just press <Enter >; it will disable security. Once the security is disabled, the system will boot, and you can enter Setup freely.

### OS Select For DRAM > 64MB

Selects the operating system that is running with greater than 64MB of RAM in the system.

- The choice: Non-OS2 or OS2.

### HDD S.M.A.R.T. Capability

The S.M.A.R.T (Self-Monitoring, Analysis, and Reporting Technology) system is a diagnostics technology that monitors and predicts device performance. S.M.A.R.T. software resides on both the disk drive and the host computer.

- The choice: Enabled or Disabled.

---

### Video BIOS Shadow

Determines whether video BIOS will be copied to RAM. However, it is optional depending on chipset design. Video Shadow will increase the video speed.

- The choice: Enabled or Disabled.

### Small Logo(EPA) Show

This item allows you to enable/disable the EPA Logo.


- The choice: Enabled or Disabled.

---

## ☞ **Advanced Chipset Features**

This section allows you to configure the system based on the specific features of the installed chipset. This chipset manages bus speeds and access to system memory resources, such as DRAM and the external cache. It also coordinates communications between the conventional ISA bus and the PCI bus. It states that these items should never need to be altered.

The default settings have been chosen because they provide the best operating conditions for your system. If you discovered that data was being lost while using your system, you might consider making any changes.

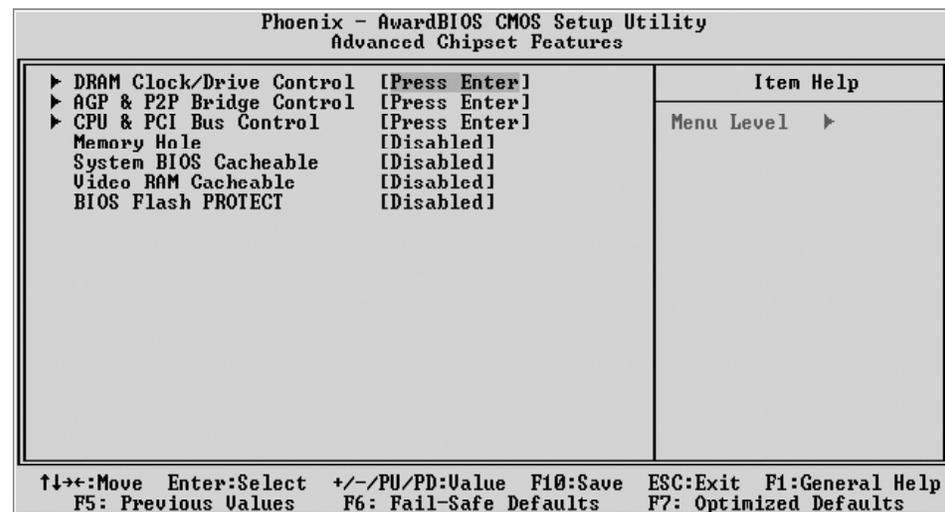

### DRAM Clock/Drive Control

Options are in its sub-menu.

Press <Enter> to enter the sub-menu of detailed options.

Current FSB Frequency

This item show Current CPU Front Side Bus speed.

Current DRAM Frequency

This item show Current DRAM speed.

DRAM Clock

This item allows you to control the DRAM speed.

➤ The Choice: 100MHz, 133MHz, or By SPD.

---

### DRAM Timing

This item allows you to select the value in this field, depending on whether the board using which kind of DDR DRAM.

- The Choice: By SPD or Manual.

The following five items will become selectable if you choose "Manual" item.

### DRAM CAS Latency

- The Choice: 2.5 or 2.

### Bank Interleave

- The Choice: Disabled, 2 Bank, or 4 Bank.

### Precharge to Active(Trp)

- The Choice: 2T or 3T.

### Active to Precharge(Tras)

- The Choice: 5T or 6T.

### Active to CMD(Trcd)

- The Choice: 2T or 3T.

### DRAM Burst Length

This item allows you to select the DRAM burst length.

- The Choice: 4 or 8.

### DRAM Queue Depth

This item allows you to select the DRAM queue depth.

- The Choice: 2 level, 4 level, or 3 level.

### DRAM Command Rate

This item allows you to select the DRAM executed rate.

- The Choice: 2T Command or 1T Command.

### AGP & P2P Bridge Control

Options are in its sub-menu.

Press <Enter> to enter the sub-menu of detailed options.

### AGP Aperture Size (MB)

Select the size of Accelerated Graphics Port (AGP) aperture. The aperture is a portion of the PCI memory address range dedicated to graphics memory address space. Host cycles that hit the aperture range are forwarded to the AGP without any translation.

- The Choice: 4M, 8M, 16M, 32M, 64M, 128M, or 256M.

---

#### AGP Mode

This item allows you to select the AGP Mode.

- The Choice: 1x, 2x, or 4x.

#### AGP Driving Control

This item enables the system to automatically select its output buffer drive strength or make it manually selectable by an end user.

- The Choice: Auto or Manual.

#### AGP Driving Value

This item enables an end user to manually select the AGP output buffer drive strength.

- Key in a HEX number: Min = 0000, Max = 00FF.

#### CPU & PCI Bus Control

Options are in its sub-menu.

Press <Enter> to enter the sub-menu of detailed options.

#### PCI1Master 0 WS Write

When this item enabled, writing to the PCI bus is executed with zero wait state.

- The Choice: Enabled or Disabled.

#### PCI2 Master 0 WS Write

When this item enabled, writing to the AGP bus is executed with zero wait state.

- The Choice: Enabled or Disabled.

#### PCI1 Post Write

This Item enable/disable AGP post write function, which means when cpu accessing the AGP data, the chipset can queue the instruction when the AGP bus is busy, then write the data when AGP bus is available .

- The Choice: Enabled or Disabled.

#### PCI2 Post Write

This Item enable/disable PCI post write function, which means when cpu accessing the PCI data, the chipset can queue the instruction when the PCI bus is busy, then write the data when AGP bus is available.

- The Choice: Enabled or Disabled.

---

### PCI Delay Transaction

The chipset has an embedded 32-bit posted write buffer to support delay transactions cycles. Select Enabled to support compliance with PCI specification version 2.1.

- The Choice: Enabled or Disabled.

### Memory Hole

In order to improve performance, some space in memory can be reserved for ISA cards.

- The Choice: Disabled or 15M-16M.

### System BIOS Cacheable

Selecting Enabled allows caching of the system BIOS ROM at F0000h-FFFFFh, resulting in better system performance. However, if any program is written to this memory area, a system error may result.

- The choice: Enabled or Disabled.

### Video RAM Cacheable

Selecting Enabled allows caching of the video RAM , resulting in better system performance. However, if any program is written to this memory area, a system error may result.

- The Choice: Enabled or Disabled.


### BIOS Flash PROTECT

This item let you enable or disable the Bios Flash Protect.

- The Choice: Enabled or Disabled.

---

## ☞ **Integrated Peripherals**

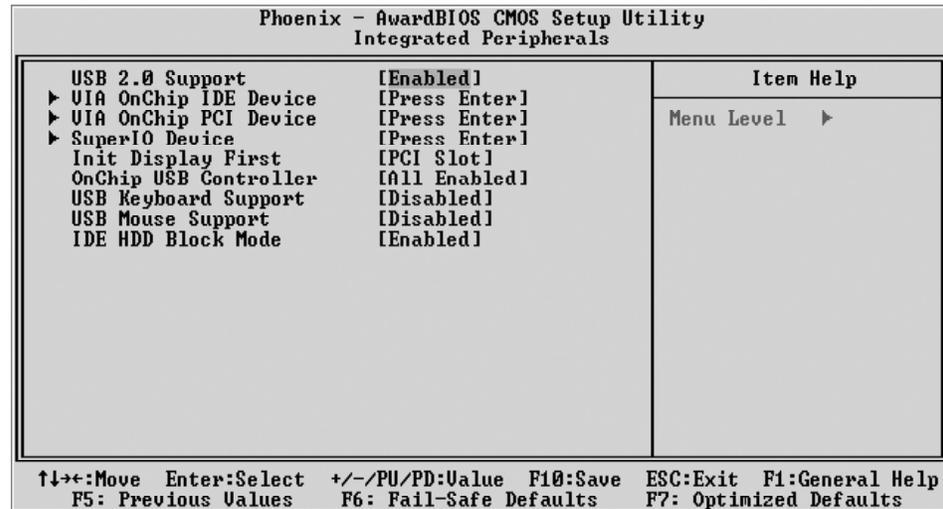

### USB 2.0 Support

The item allows you to enable/disable the USB2.0 support.

- The Choice: Disabled or Enabled.

### VIA OnChip IDE Device

Options are in its sub-menu.

Press <Enter> to enter the sub-menu of detailed options.

#### OnChip IDE Channel0

The chipset contains a PCI IDE interface with support to two IDE channels. Select Enabled to activate the primary IDE interface; select Disabled to deactivate this interface

- The choice: Enabled or Disabled.

#### OnChip IDE Channel1

The chipset contains a PCI IDE interface with support to two IDE channels. Select Enabled to activate the secondary IDE interface; select Disabled to deactivate this interface

- The choice: Enabled or Disabled.

---

### IDE Prefetch Mode

The onboard IDE drive interfaces support IDE prefetching for faster drive access. If you install a primary and/or secondary add-on IDE interface, set this field to Disabled if the interface does not support prefetching.

- The choice: Enabled or Disabled.

### Primary/Secondary Master/Slave PIO

The four IDE PIO (Programmed Input/Output) fields let you set a PIO mode (0-4) for each of the four IDE devices that the onboard IDE interface supports. Modes 0 through 4 provide successively increased performance. In Auto mode, the system automatically determines the best mode for each device.

- The choice: Auto, Mode 0, Mode 1, Mode 2, Mode 3, or Mode 4.

### Primary/Secondary Master/Slave UDMA

Ultra DMA/100 implementation is possible only if your IDE hard drive supports it and the operating environment includes a DMA driver (Windows 95 OSR2 or a third-party IDE bus master driver). If both of your hard drive and your system software support Ultra DMA/100, select Auto to enable BIOS support.

- The choice: Auto or Disabled.

### VIA OnChip PCI Device

Options are in its sub-menu.

Press <Enter> to enter the sub-menu of detailed options.

### VIA-3058 AC97 Audio

Enables and disables the onboard audio chip. Disable this item if you are going to install a PCI audio add-on card.

- The choice: Audio or Disabled.

### VIA-3043 OnChip LAN

The item allows you to control the onboard LAN.

- The choice: Enabled or Disabled.

### Onboard Lan Boot ROM

Decide whether to invoke the boot ROM of the onboard LANchip.

- The choice: Enabled or Disabled.

---

## Super IO Device

Options are in its sub-menu.

Press <Enter> to enter the sub-menu of detailed options.

### Onboard FDC Controller

Select Enabled if your system has a floppy disk controller (FDC) installed on the system board and you want to use it. If you install add-on FDC or the system has no floppy drive, select Disabled in this field.

➤ The choice: Enabled or Disabled.

### Onboard Serial Port1/Port2

Select an address and corresponding interrupt for the first and second serial ports.

➤ The choice: 3E8/IRQ4, 2E8/IRQ3, 3F8/IRQ4, 2F8/IRQ3, Auto, or Disabled.

### Onboard Parallel Port

This item allows you to determine onboard parallel port controller I/O address setting.

➤ The choice:: 378/IRQ7, 278/IRQ5, 3BC/IRQ7, or Disabled.

### Parallel Port Mode

Select an operating mode for the onboard parallel (printer) port. Select Normal, Compatible, or SPP unless you are certain your hardware and software both support one of the other available modes.

➤ The choice: SPP, EPP, ECP, or ECP + EPP.

### ECP Mode Use DMA

Select a DMA channel for the parallel port for use during ECP mode.

➤ The choice: 1 or 3.

## Init Display First

Use this item to specify whether your graphics adapter is installed in one of the PCI slots or is integrated on the mainboard.

➤ The choice: PCI Slot or AGP.

---

### OnChip USB Controller

This should be enabled if your system has a USB installed on the system board and you want to use it. Even when on chip USB so equipped, if you add a higher performance controller, you will need to disable this feature.

- The Choice: All Disabled, All Enabled

### USB Keyboard Support

Select Enabled if your system contains a Universal Serial Bus (USB) controller and you have a USB keyboard.

- The Choice: Enabled or Disabled.

### USB Mouse Support

Select Enabled if your system contains a Universal Serial Bus (USB) controller and you have a USB Mouse.


- The Choice: Enabled or Disabled.

### IDE HDD Block Mode

Block mode is also called block transfer, multiple commands, or multiple sector read/write. If your IDE hard drive supports block mode (most new drives do), select Enabled for automatic detection of the optimal number of block read/write per sector the drive can support.

- The choice: Enabled or Disabled.

## Power Management Setup

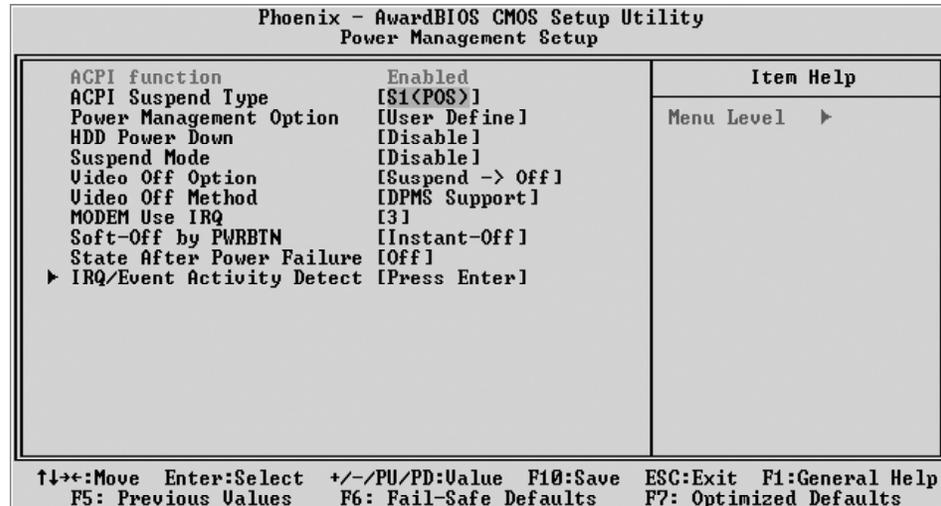

The Power Management Setup allows you to configure your system to most effectively saving energy while operating in a manner consistent with your own style of computer use.

### ACPI Function

This item always enable the Advanced Configuration and Power Interface. (ACPI).

- The choice: Enabled.

### ACPI Suspend Type

This item always you to select sleep state when suspend.

- The choice: S1(POS).

### Power Management Option

This category allows you to select the type (or degree) of power saving mode settings.

- |             |  |
|-------------|--|
| Min Saving  | Minimum power management.<br>HDD Power Down = Disabled or 1min. ~ 15min.<br>Suspend Mode = 1 hr.                                     |
| Max Saving  | Maximum power management.<br>HDD Power Down = Disabled or 1min. ~ 15min.<br>Suspend Mode = 1 min.                                    |
| User Define | Allows you to set each mode individually.<br>HDD Power Down = Disabled or 1min. ~ 15min.<br>Suspend Mode = Disabled or 1 min ~ 1 hr. |

- The choice: User Define, Min Saving, or Max Saving.

---

### HDD Power Down

When this item enabled and after the set up time of system inactivity, the hard disk drive will be powered down while all other devices remain active.

- The choice: Disabled or 1 Min ~ 15 Min.

### Suspend Mode

When this item enabled and after the set up time of system inactivity, all devices except the CPU will be shut off.

- The choice: Disabled, 1 Min, 2 Min, 4 Min, 6 Min, 8 Min, 10 Min, 20 Min, 30 Min, 40 Min, or 1 Hour.

### Video Off Option

When enabled, this feature allows the VGA adapter to operate in a power saving mode.

- |                 |   |
|-----------------|---|
| Always On       | Monitor will remain on during power saving mode.            |
| Suspend --> Off | Monitor is blanked when the system enters the Suspend mode. |

- The choice: Always On or Suspend -> off.

### Video Off Method

This determines the manner in which the monitor is blanked.

- |                  |  |
|------------------|--|
| V/H SYNC + Blank | This selection will cause the system to turn off the vertical and horizontal synchronization ports and write blanks to the video buffer. |
| Blank Screen     | This option only writes blanks to the video buffer.  |
| DPMS Support     | Initial display power management signaling.  |

- The choice: V/H SYNC + Blank, Blank Screen, or DPMS Support.

### MODEM Use IRQ

This determines the IRQ which the MODEM can use.

- The choice: 3, 4, 5, 7, 9, 10, 11, or N/A.

### Soft-Off by PWRBTN

Pressing the power button for more than 4 seconds forces the system to enter the Soft-Off state when the system has "hung".

- The choice: Instant-Off or Delay 4 Sec.

---

### State After Power Failure

This allows you to set whether you want your system to reboot after power has been interrupted.

- The choice: On, Off or Fomer State .

### IRQ/Event Activity Detect

Options are in its sub-menu.

Press <Enter> to enter the sub-menu of detailed options.

#### VGA

When this item enabled, you can set VGA to awaken the system.

- The choice: OFF or ON.

#### LPT & COM

When LPT & COM stays On, any activity from one of the listed system peripheral devices or IRQs wakes up the system.

- The choice: NONE, LPT, COM, or LPT/COM.

#### HDD & FDD

When HDD & FDD stays On, any activity from one of the listed system peripheral devices wakes up the system.

- The choice: OFF or ON.

#### PCI Master

When PCI Master stays On, any activity from one of the listed system peripheral devices wakes up the system.

- The choice: OFF, or ON

#### Power-On by PCI Card

This item enables/disables the power on function of PCI Card.

- The choice: Disabled or Enabled.

#### Modem Ring Resume

When this item enabled, any event occurring Modem Ring/activity of LAN will awaken a system which has been powered down.

- The choice: Disabled or Enabled.

#### RTC Alarm Resume

When this item enabled, your can set the date and time at which the RTC (real-time clock) alarm awakens the system from Suspend mode.

- The choice: Disabled or Enabled.

---

Data (of Month)

This item selects the alarm date.

- Key in a DEC number:Min = 0, Max = 31.

Resume Time (hh:mm:ss)

This item selects the alarm Time.

[hh]

- Key in a DEC number:Min = 0, Max = 23.

[mm/ss]

- Key in a DEC number:Min = 0, Max = 59.

#### IRQs Activity Monitoring

Primary INTR

Press Enter to on/off the wake up ability of a specified IRQ.

- The choice: OFF, or ON.

In the following is a list of IRQ's, Interrupt ReQuests, which can be exempted much as the COM ports and LPT ports above can. When an I/O device wants to gain the attention of the operating system, it signals this by causing an IRQ to occur. When the operating system is ready to respond to the request, it interrupts itself and performs the service.

When On mode exist, activity will neither prevent the system from going into a power management mode nor awaken it.

IRQ3 (COM 2)

IRQ4 (COM 1)

IRQ5 (LPT 2)

IRQ6 (Floppy Disk)

IRQ7 (LPT 1)

IRQ8 (RTC Alarm)

IRQ9 (IRQ2 Redir)

IRQ10 (Reserved)

IRQ11 (Reserved)

IRQ12 ( PS / 2 Mouse )

IRQ13 (Coprocessor)

IRQ14 (Hard Disk)

IRQ15 (Reserved)

- The choice: Disabled or Enabled.

---

## PnP/PCI Configuration

Phoenix - AwardBIOS CMOS Setup Utility		Item Help
PnP/PCI Configurations		
PNP OS Installed	[No]	Menu Level ▶ Select Yes if you are using a Plug and Play capable operating system Select No if you need the BIOS to configure non-boot devices
Reset Configuration Data	[Disabled]	
Resources Controlled By	[Auto(ESCD)]	
x IRQ Resources	Press Enter	
PCI/UGA Palette Snoop	[Disabled]	
Assign IRQ For UGA	[Enabled]	
Assign IRQ For USB	[Enabled]	
↑↓→←:Move Enter:Select +/~/PU/PD:Value F10:Save ESC:Exit F1:General Help		
F5: Previous Values F6: Fail-Safe Defaults F7: Optimized Defaults		

This section describes the configuration of PCI bus system. PCI or Personal Computer Interconnection is a system which allows I/O devices to operate at the speed CPU itself keeps when CPU communicating with its own special components. This section covers some very technical items, and it is strongly recommended that only experienced users should make any changes to the default settings.

### PNP OS Installed

This item allows you to determine PnP OS is installed or not.

- The choice: Yes or No.

### Reset Configuration Data

Normally, you leave this field Disabled. Select Enabled to reset Extended System Configuration Data (ESCD) when you exit from Setup if you have installed a new device or software and the system reconfiguration has caused such a serious conflict that the operating system can not boot.

- The choice: Enabled or Disabled .

### Resource controlled By

The Award Plug-and-Play BIOS has the capacity to automatically configure all of the boot and Plug-and-Play compatible devices. However, this capability means absolutely nothing unless you are using a Plug-and-Play operating system such as Windows 95. If you set this field to "manual" , choose specific resources by going into each of the sub-menu that follows this field (a sub-menu is proceeded by a ">").

- The choice: Auto(ESCD) or Manual.

---

### IRQ Resources

When resources are controlled manually, assign each system interrupt a type, depending on the type of device using the interrupt.

IRQ3/4/5/7/9/10/11/12/14/15 assigned

This item allows you to determine the IRQ assigned to the ISA bus and is not available to any PCI slot. Legacy ISA for devices is compliant with the original PC AT bus specification; PCI/ISA PnP for devices is compliant with the Plug-and-Play standard whether designed for PCI or ISA bus architecture.

➤ The choice: PCI Device or Reserved.

### PCI/VGA Palette Snoop

It determines whether the MPEG ISA/VESA VGA Cards can work with PCI/VGA or not. If you have MPEG ISA/VESA VGA Cards and PCI/VGA Card worked, Enable this field. Otherwise, please Disable it.

➤ The choice: Enabled or Disabled.

### Assign IRQ For VGA

This item allows the user to set VGA IRQ Routing table Enabled or Disabled.

➤ The choice: Enabled or Disabled.

### Assign IRQ For USB


This item allows the user the option to assign an IRQ to on-board USB controller.

Since the on-board controller is always enabled, if no IRQ is assigned to it, there will be a question mark report on the system device under Windows95/98.

➤ The choice: Enabled or Disabled.

---

☞ **PC Health Status**

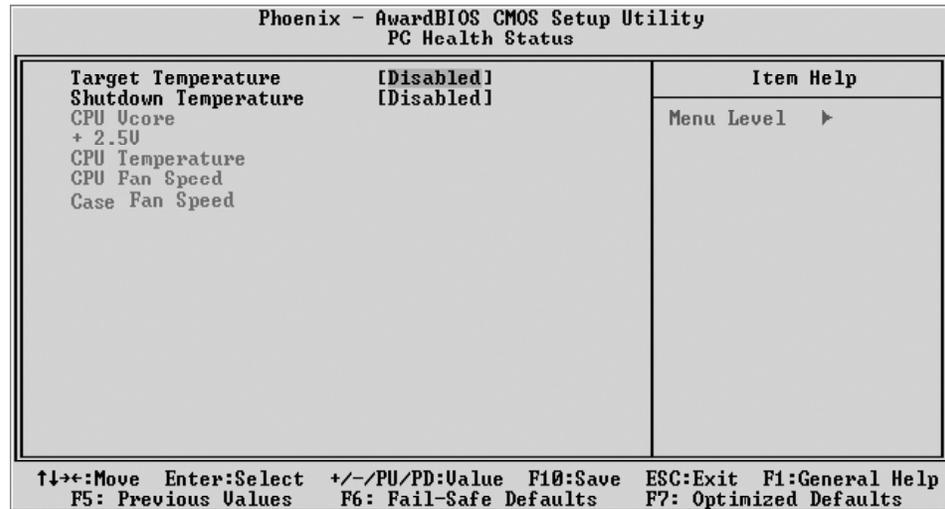

Target Temperature

This item is for CPU Throttling switch. When the CPU reached it's target temperature, the CPU Throttling will be activated. Enabling this item will protect your CPU not to overheat, but it will reduce the CPU performance.

- The choice: Disabled, 50°C, 55°C, 60°C, 65°C, 70°C, 75°C, 80°C.

Shutdown Temperature

Enables you to set the maximum temperature the system can reach before powering down.

- The choice: Disabled, 60°C/140°F, 65°C/149°F, 70°C/158°F.

System Component Characteristics


These fields provide you with information about the systems current operating status. You cannot make changes to these fields.

The fields include

- CPU Vcore
- + 2.5V
- CPU Temperature
- CPU Fan Speed
- Case Fan Speed

---

☞ **Frequency/Voltage Control**

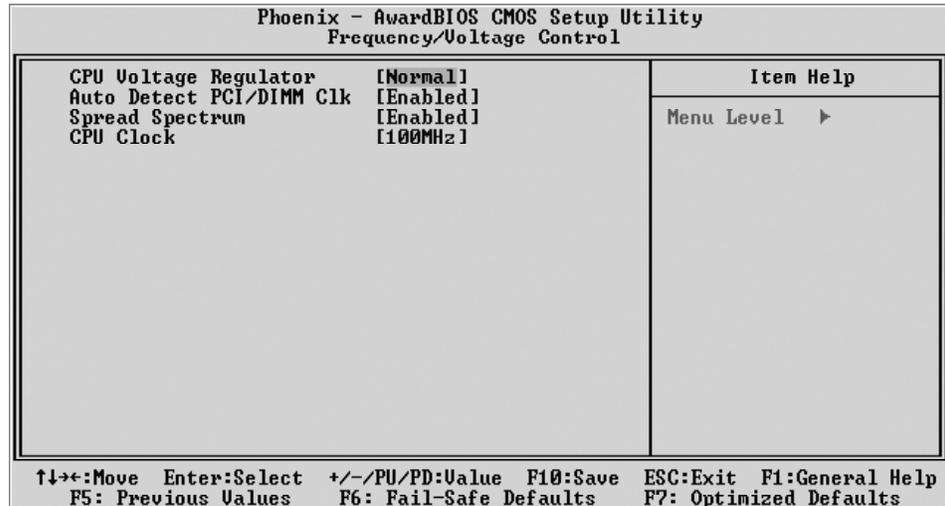

CPU Voltage Regulator

This item show the voltage set after fine tuning.

- The choice: Normal, + 25mV, + 50mV or + 75mV.

Auto Detect DIMM/PCI Clk

This item allows you to enable/disable auto detection DIMM/PCI Clock.

- The choice: Enabled or Disabled.

Spread Spectrum

This item allows you to enable/disable the spread spectrum.

- The choice: Enabled or Disabled.

CPU Clock

This item allows the user to adjust CPU Host Clock and is only for overclocking only.

---

☞ **Load Fail-Safe Defaults**

When you press <Enter> on this item, you will get a confirmation dialog box with a message similar to:

Load Fail-Safe Defaults (Y/N) ? N

Pressing 'Y' loads the BIOS default values for the most stable, minimal performance system operations.

☞ **Load Optimized Defaults**

When you press <Enter> on this item, you will get a confirmation dialog box with a message similar to:


Load Optimized Defaults (Y/N) ? N

Pressing 'Y' loads the default values that are factory-set for optimal performance system operation.

---

## **Supervisor/User Password Setting**

You can set either supervisor or user password, or both of them. The differences between them are:

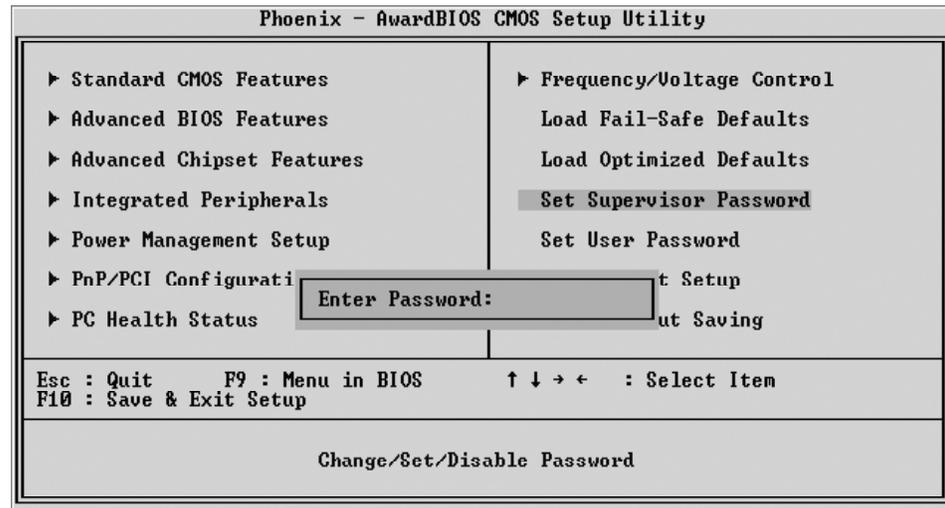

### Supervisor Password and User Password

The options on the Password screen menu make it possible to restrict access to the Setup program by enabling you to set passwords for two different access modes: Supervisor mode and User mode.

In general, Supervisor mode has full access to the Setup options, whereas User mode has restricted access to the options. By setting separate Supervisor and User password, a system supervisor can limit who can change critical Setup values.

### Enter Password

Type the password up to eight characters, and press <Enter>. The password typed now will clear any previously entered password from CMOS memory. You will be asked to confirm the password. Type the password again and press <Enter>. You may also press <Esc> to abort the selection and not enter a password.

To disable password, just press <Enter> when you are prompted to enter password. A message will confirm the password being disabled. Once the password is disabled, the system will boot and you can enter Setup freely.

---

### Password Disable

If you select System at Security Option of BIOS Features Setup Menu, you will be prompted in entering the password whenever the system is rebooted or you try to enter Setup. If you select Setup at Security Option of BIOS Features Setup Menu, you will be prompted only when you try to enter Setup.

Warning : Retain a record of your password in a safe place. If you forget the password, the only way to access the system is to clear CMOS, please refer to "Clear CMOS" on page 26.

### **Save & Exit Setup**

Pressing <Enter> on this item asks for confirmation:

Save to CMOS and EXIT (Y/N)? Y

Pressing "Y" stores the selections made in the menus of CMOS - a special section of memory that stays on after you turn your system off. The next time you boot your computer, the BIOS configures your system according to the Setup selections stored in CMOS. After saving the values the system is restarted again.

### **Exit Without Saving**

Pressing <Enter> on this item asks for confirmation:

Quit without saving (Y/N)? Y

This allows you to exit from Setup without storing in CMOS any change. The previous selections remain in effect. This exits from the Setup utility and restarts your computer.