

## **FCC Information and Copyright**

This equipment has been tested and found to comply with the limits of a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. There is no guarantee that interference will not occur in a particular installation.

The vendor makes no representations or warranties with respect to the contents here and specially disclaims any implied warranties of merchantability or fitness for any purpose. Further the vendor reserves the right to revise this publication and to make changes to the contents here without obligation to notify any party beforehand.

Duplication of this publication, in part or in whole, is not allowed without first obtaining the vendor's approval in writing.

The content of this user's manual is subject to be changed without notice and we will not be responsible for any mistakes found in this user's manual. All the brand and product names are trademarks of their respective companies.

---

---

## Table of Contents

---

---

<b>Chapter 1: Introduction</b> .....	<b>1</b>
1.1 Before You Start.....	1
1.2 Package Checklist.....	1
1.3 Motherboard Features.....	2
1.4 Rear Panel Connectors (Ver 3.x).....	4
1.5 Rear Panel Connectors (Ver 1.x).....	4
1.6 Motherboard Layout (Ver 3.x).....	5
1.7 Motherboard Layout (Ver 1.x).....	6
<b>Chapter 2: Hardware Installation</b> .....	<b>7</b>
2.1 Installing Central Processing Unit (CPU).....	7
2.2 FAN Headers.....	8
2.3 Installing System Memory.....	10
2.4 Connectors and Slots.....	12
<b>Chapter 3: Headers &amp; Jumpers Setup</b> .....	<b>14</b>
3.1 How to Setup Jumpers.....	14
3.2 Detail Settings.....	14
<b>Chapter 4: NVIDIA RAID Functions</b> .....	<b>24</b>
4.1 Operation System.....	24
4.2 Raid Arrays.....	24
4.3 How RAID Works.....	24
<b>Chapter 5: Useful Help</b> .....	<b>26</b>
5.1 Driver Installation Note .....	26
5.2 Award BIOS Beep Code.....	27
5.3 Extra Information.....	27
5.4 Troubleshooting.....	29
<b>Chapter 6: WarpSpeeder™</b> .....	<b>30</b>
6.1 Introduction.....	30
6.2 System Requirement.....	30
6.3 Installation.....	31
6.4 WarpSpeeder™.....	32
<b>Appendices: SPEC In Other Language</b> .....	<b>38</b>
German.....	38
France.....	40
Italian.....	42
Spanish.....	44
Portuguese.....	46
Polish.....	48
RUSSIAN.....	50
ARABIC.....	52
JAPANESE.....	54

## **CHAPTER 1: INTRODUCTION**

### **1.1 BEFORE YOU START**

Thank you for choosing our product. Before you start installing the motherboard, please make sure you follow the instructions below:

- Prepare a dry and stable working environment with sufficient lighting.
- Always disconnect the computer from power outlet before operation.
- Before you take the motherboard out from anti-static bag, ground yourself properly by touching any safely grounded appliance, or use grounded wrist strap to remove the static charge.
- Avoid touching the components on motherboard or the rear side of the board unless necessary. Hold the board on the edge, do not try to bend or flex the board.
- Do not leave any unfastened small parts inside the case after installation. Loose parts will cause short circuits which may damage the equipment.
- Keep the computer from dangerous area, such as heat source, humid air and water.

### **1.2 PACKAGE CHECKLIST**


- ✦ FDD Cable X 1
- ✦ HDD Cable X 1
- ✦ Rear I/O Panel for ATX Case X 1
- ✦ User's Manual X 1
- ✦ Fully Setup Driver CD X 1
- ✦ Serial ATA Cable X 1 (optional)
- ✦ Serial ATA Power Cable X 1 (optional)
- ✦ USB 2.0 Cable X1 (optional)
- ✦ S/PDIF out Cable X 1 (optional)

### 1.3 MOTHERBOARD FEATURES


	Ver 3.x	Ver 1.x
CPU	Socket AM2 AMDAthlon 64 / Athlon 64 FX / Sempron processors AMD 64 Architecture enables 32 and 64 bit computing Supports Hyper Transport and Cool'nQuiet	Socket AM2 AMDAthlon 64 / Athlon 64 FX / Sempron processors AMD 64 Architecture enables 32 and 64 bit computing Supports Hyper Transport and Cool'nQuiet
FSB	Supports up to 1000 MHz Bandwidth Support HyperTransport	Supports up to 1000 MHz Bandwidth Support HyperTransport
Chipset	GeForce 6100 nForce 410	GeForce 6100 nForce 410
Graphics	Integrated in GeForce 6100 Chipset Max Shared Video Memory is 256 MB	Integrated in GeForce 6100 Chipset Max Shared Video Memory is 256 MB
Super I/O	ITE 8712F / 8716F Provides the most commonly used legacy Super I/O functionality Low Pin Count Interface Environment Control initiatives, H/W Monitor Fan Speed Controller ITE's "Smart Guardian" function	ITE 8712F / 8716F Provides the most commonly used legacy Super I/O functionality Low Pin Count Interface Environment Control initiatives, H/W Monitor Fan Speed Controller ITE's "Smart Guardian" function
Main Memory	DIMM Slots x 4 Each DIMM supports 256/512MB & 1GB DDR2 Max Memory Capacity 4GB Dual Channel Mode DDR2 memory module Supports DDR2 400 / 533 / 667 / 800 Registered DIMM and ECC DIMM is not supported	DIMM Slots x 4 Each DIMM supports 256/512MB & 1GB DDR2 Max Memory Capacity 4GB Dual Channel Mode DDR2 memory module Supports DDR2 400 / 533 / 667 / 800 Registered DIMM and ECC DIMM is not supported
IDE	Integrated IDE Controller Ultra DMA 33 / 66 / 100 / 133 Bus Master Mode supports PIO Mode 0~4,	Integrated IDE Controller Ultra DMA 33 / 66 / 100 / 133 Bus Master Mode supports PIO Mode 0~4,
SATA II	Integrated Serial ATA Controller Data transfer rates up to 3 Gb/s. SATA Version 2.0 specification compliant.	Integrated Serial ATA Controller Data transfer rates up to 3 Gb/s. SATA Version 2.0 specification compliant.
LAN	Realtek 8100C 10 / 100 Mb/s Auto-Negotiation	Realtek 8201CL PHY 10 / 100 Mb/s Auto-Negotiation

	Ver 3.x	Ver 1.x
Sound	ALC 850 8 channels audio out AC 97Version 2.3	ALC 655 / 658 (optional) 6 channels audio out AC 97Version 2.3
Slots	PCI slot x2 PCI Express x16 slot x1 PCI Express x 1 slot x1	PCI slot x2 PCI Express x16 slot x1 PCI Express x 1 slot x1
On Board Connector	Floppy connector x1 Printer Port connector x1 IDE Connector x2 SATA Connector x2 Front Panel Connector x1 Front Audio Connector x1 CD-in Connector x1 S/PDIF out connector x1 CPU Fan header x1 System Fan header x3 Chassis open header (optional) x1 CMOS clear header x1 USB connector x2 Power Connector (24pin) x1 Power Connector (4pin) x1	Floppy connector x1 Printer Port connector x1 IDE Connector x2 SATA Connector x2 Front Panel Connector x1 Front Audio Connector x1 CD-in Connector x1 S/PDIF out connector x1 CPU Fan header x1 System Fan header x1 Chassis open header (optional) x1 CMOS clear header x1 USB connector x2 Power Connector (24pin) x1 Power Connector (4pin) x1
Back Panel I/O	PS/2 Keyboard x1 PS/2 Mouse x1 Serial Port x1 VGA port x1 LAN port x1 USB Port x4 Audio Jack x6	PS/2 Keyboard x1 PS/2 Mouse x1 Serial Port x1 VGA port x1 LAN port x1 USB Port x4 Audio Jack x3
Board Size	244 x 244 (mm)	210 x 244 (mm)
Special Features	NVIDIA nTunes RAID 0 / 1 support	NVIDIA nTunes RAID 0 / 1 support
OS Support	Windows 2K / XP Biostar Reserves the right to add or remove support for any OS With or without notice.	Windows 2K / XP Biostar Reserves the right to add or remove support for any OS With or without notice.

### 1.4 REAR PANEL CONNECTORS (VER 3.X)

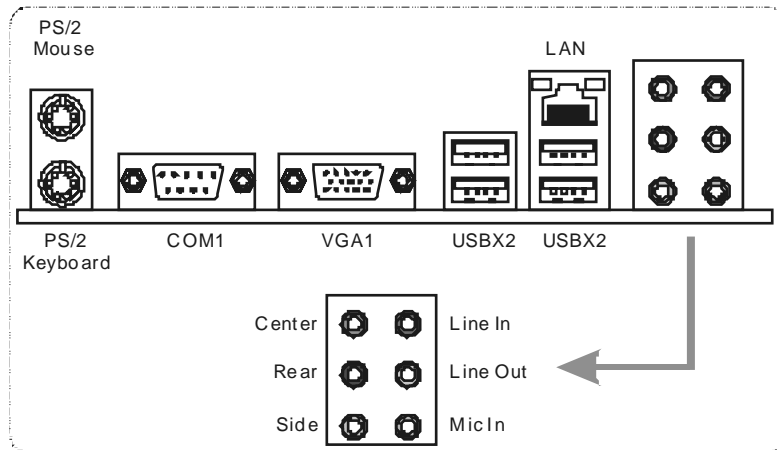


### 1.5 REAR PANEL CONNECTORS (VER 1.X)

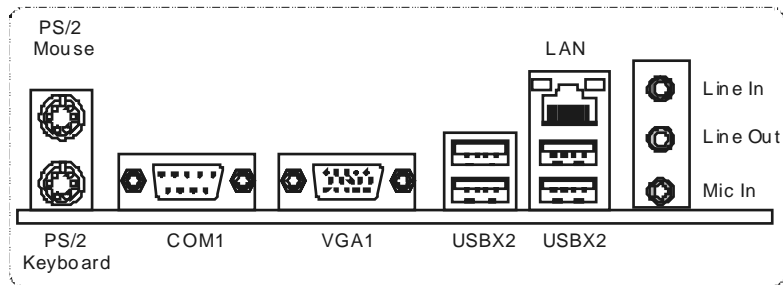



## 1.7 MOTHERBOARD LAYOUT (VER1.x)

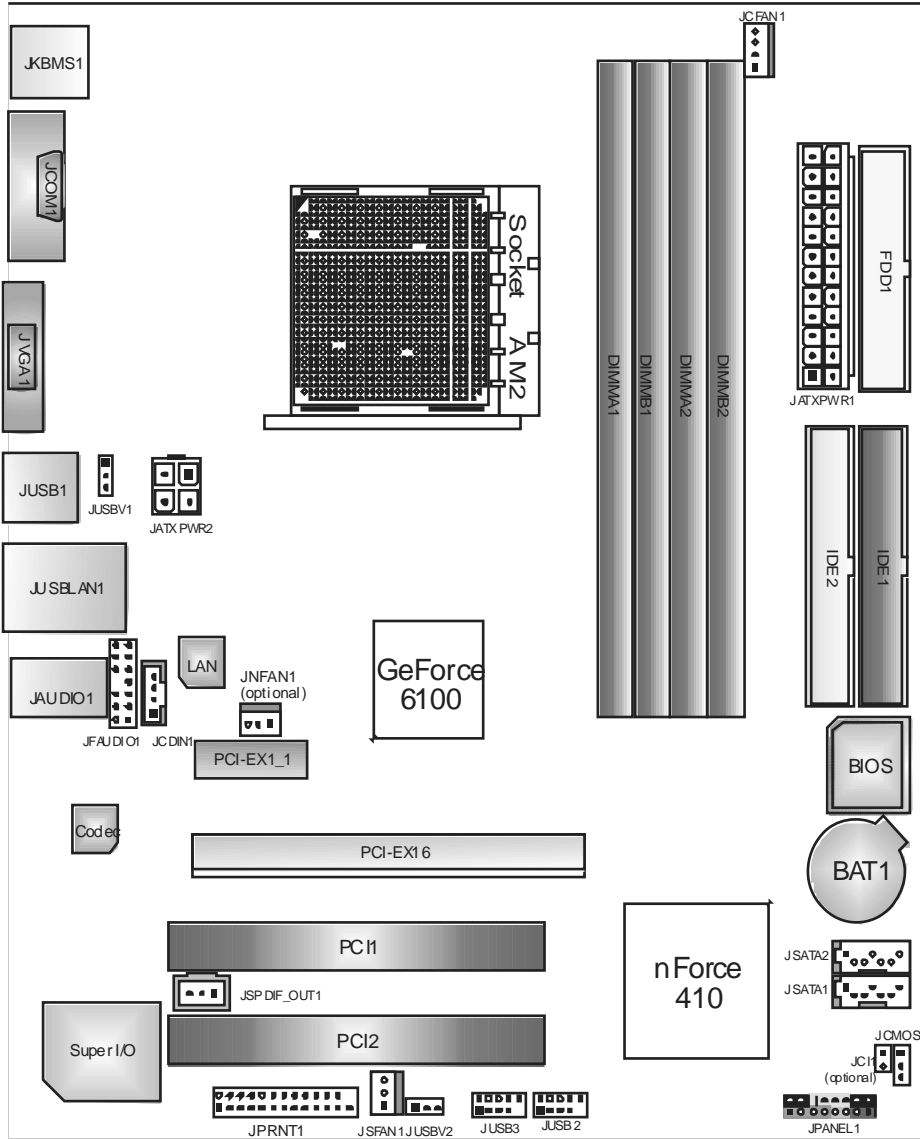


**Note:** ■ represents the 1<sup>st</sup> pin.




## **CHAPTER 2: HARDWARE INSTALLATION**


### **2.1 INSTALLING CENTRAL PROCESSING UNIT (CPU)**

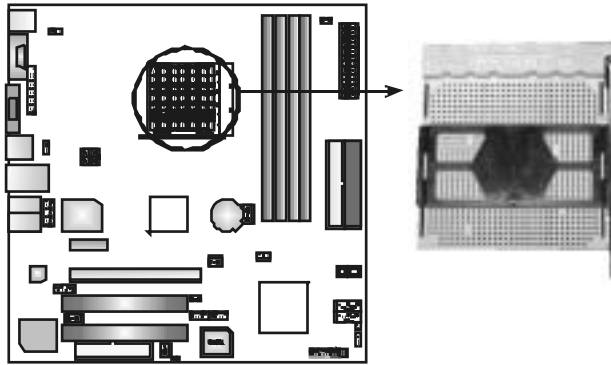

**Step 1:** Remove the socket protection cap.

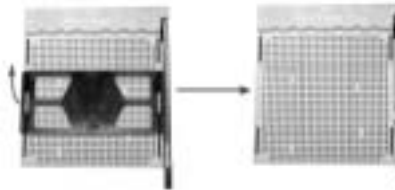


**Step 2:** Pull the lever toward direction A from the socket and then raise the lever up to a 90-degree angle.

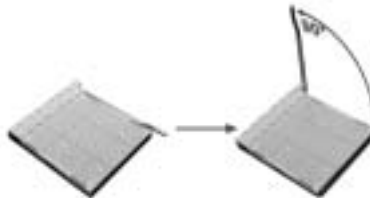

**Step 3:** Look for the white triangle on socket, and the gold triangle on CPU should point forwards this white triangle. The CPU will fit only in the correct orientation.



**Step 4:** Hold the CPU down firmly, and then close the lever toward direct B to complete the installation.

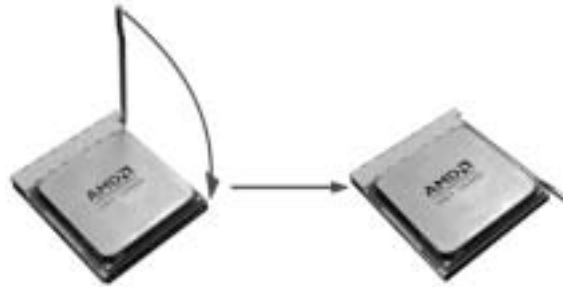


**Step 5:** Put the CPU Fan on the CPU and buckle it. Connect the CPU FAN power cable to the JCFAN1. This completes the installation.

## 2.2 FAN HEADERS

These fan headers support cooling-fans built in the computer. The fan cable and connector may be different according to the fan manufacturer. Connect the fan cable to the connector while matching the black wire to pin#1.


### JCFAN1: CPU Fan Header

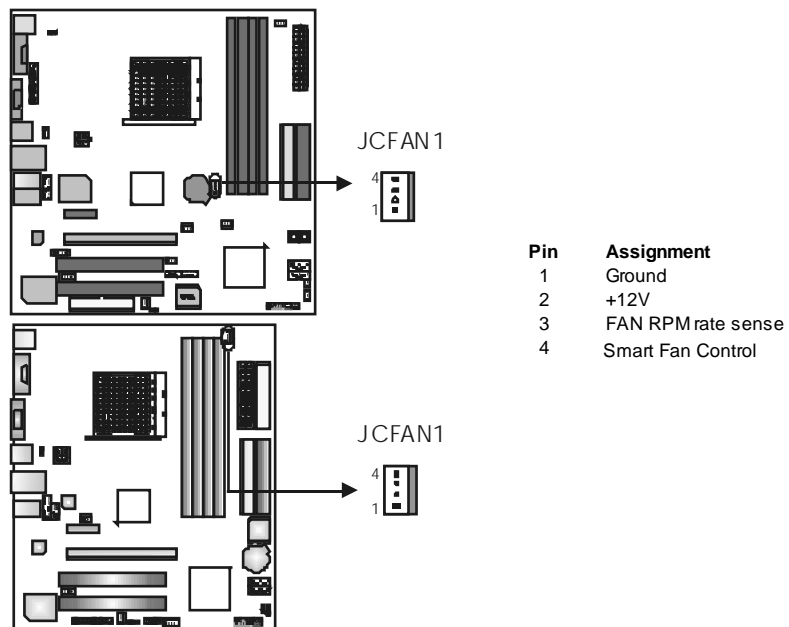

**JNFAN1: North Bridge Fan Header (Optional for Ver 1.x)**

**JSFAN1: System Fan Header**

**JSFAN2: System Fan Header (Only for Ver 3.x)**

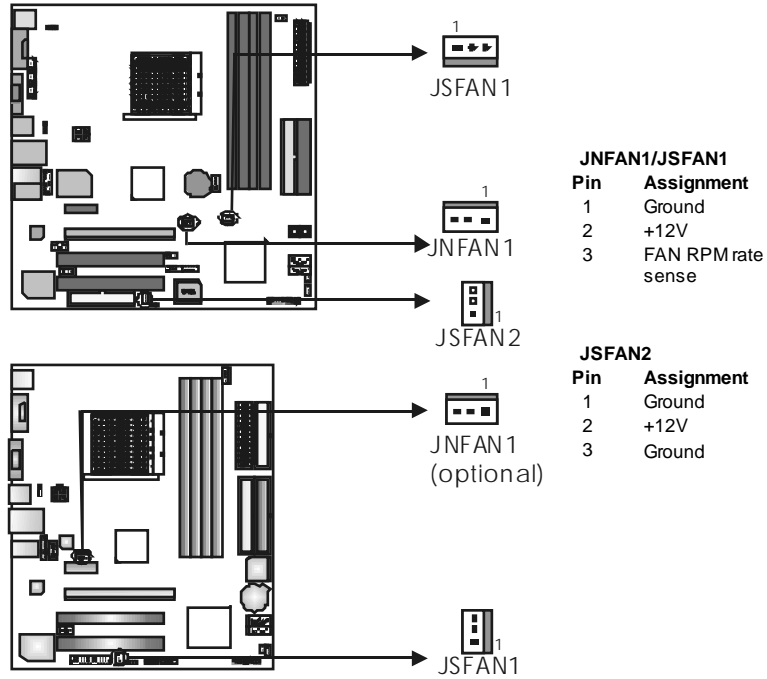


**Note:**


The JCFAN1 Supports 4-pin head connector, and JSFAN1/JSFAN2/JNFAN1 support 3-pin head connector. When connecting with wires onto connectors, please note that the red wire is the positive and should be connected to pin#2, and the black wire is Ground and should be connected to GND.

JCFAN1 Supports smart fan function


## 2.3 INSTALLING SYSTEM MEMORY

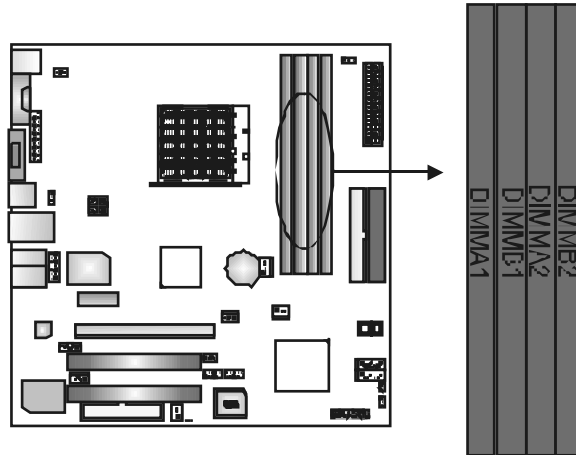

1. Unlock a DIMM slot by pressing the retaining clips outward. Align a DIMM on the slot such that the notch on the DIMM matches the break on the Slot.

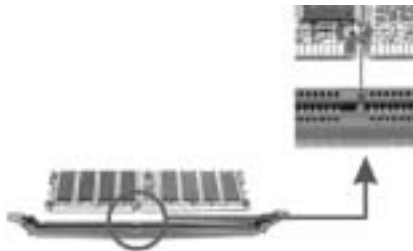

2. Insert the DIMM vertically and firmly into the slot until the retaining chip snap back in place and the DIMM is properly seated.



### B. Memory Capacity

DIMM Socket Location	DDR Module	Total Memory Size
DIMMA1	256MB/512MB/1024MB	Max is 4GB.
DIMMB1	256MB/512MB/1024MB	
DIMMA2	256MB/512MB/1024MB	
DIMMB2	256MB/512MB/1024MB	

---

---

### ***C. Dual Channel Memory installation***

To trigger the Dual Channel function of the motherboard, the memory module must meet the following requirements:

Install memory module of the same density in pairs, shown in the following table.

<b>Dual Channel Status</b>	<b>DIMMA1</b>	<b>DIMMB1</b>	<b>DIMMA2</b>	<b>DIMMB2</b>
Enabled	O	O	X	X
Enabled	X	X	O	O
Enabled	O	O	O	O


(O means memory installed, X means memory not installed.)

The DRAM bus width of the memory module must be the same (x8 or x16)

## 2.4 CONNECTORS AND SLOTS

### FDD1: Floppy Disk Connector


The motherboard provides a standard floppy disk connector that supports 360K, 720K, 1.2M, 1.44M and 2.88M floppy disk types. This connector supports the provided floppy drive ribbon cables.

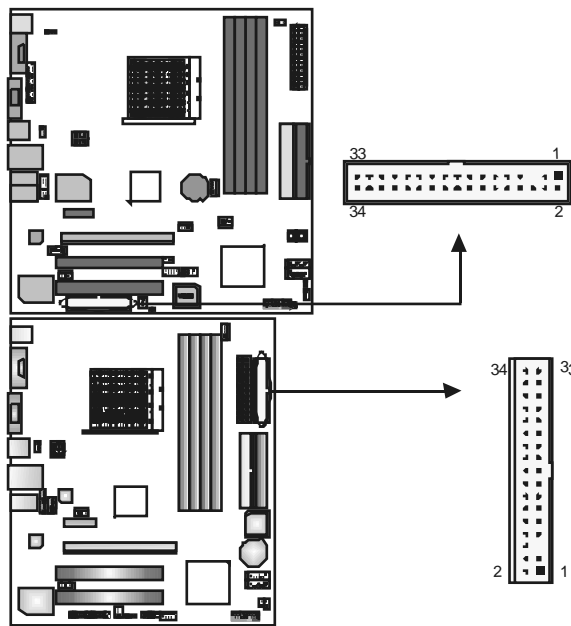

### IDE1/IDE2: Hard Disk Connectors

The motherboard has a 32-bit Enhanced PCI IDE Controller that provides PIO Mode 0-4, Bus Master, and Ultra DMA 33/66/100/133 functionality. It has two HDD connectors IDE1 (primary) and IDE2 (secondary).

The IDE connectors can connect a master and a slave drive, so you can connect up to four hard disk drives. The first hard drive should always be connected to IDE1.

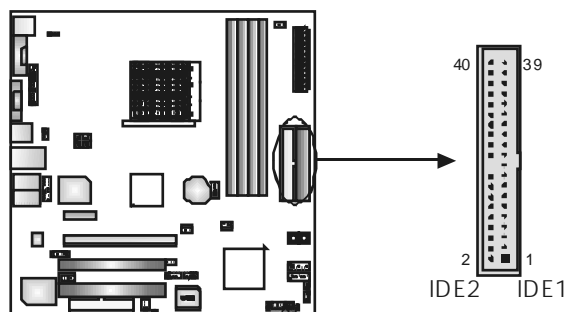


**PCI-Ex16: PCI-Express x16 Slot**

- PCI-Express 1.0a compliant.
- Maximum theoretical realized bandwidth of 4GB/s simultaneously per direction, for an aggregate of 8GB/s totally.


**PCI-Ex1\_1: PCI-Express x1 Slot**

- PCI-Express 1.0a compliant.
- Data transfer bandwidth up to 250MB/s per direction; 500MB/s in total.
- PCI-Express supports a raw bit-rate of 2.5Gb/s on the data pins.
- 2X bandwidth over the traditional PCI architecture.

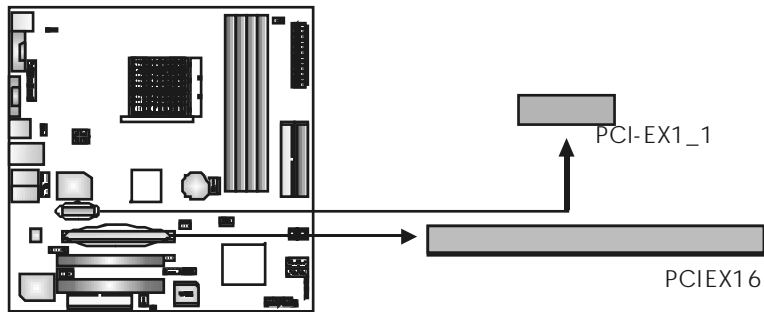

**PCI1~PCI2: Peripheral Component Interconnect Slots**

This motherboard is equipped with 2 standard PCI slots. PCI stands for Peripheral Component Interconnect, and it is a bus standard for expansion cards. This PCI slot is designated as 32 bits.

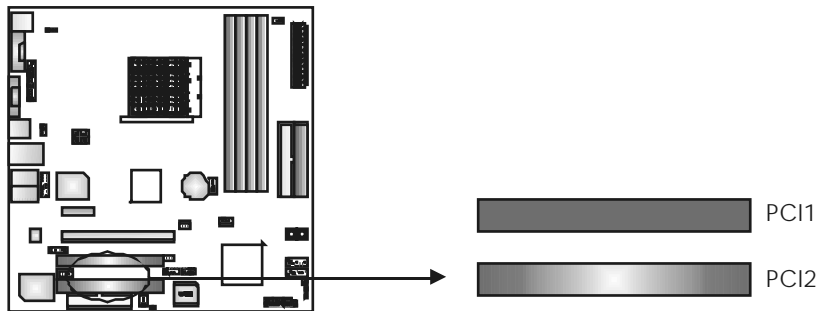

## CHAPTER 3: HEADERS & JUMPERS SETUP

### 3.1 HOW TO SETUP JUMPERS


The illustration shows how to set up jumpers. When the jumper cap is placed on pins, the jumper is “close”, if not, that means the jumper is “open”.



### 3.2 DETAIL SETTINGS

#### JPANEL1: Front Panel Header

This connector includes Power-on, Reset, HDD LED, Power LED, Sleep button, and speaker. It allows user to connect the PC case's front panel switch functions.

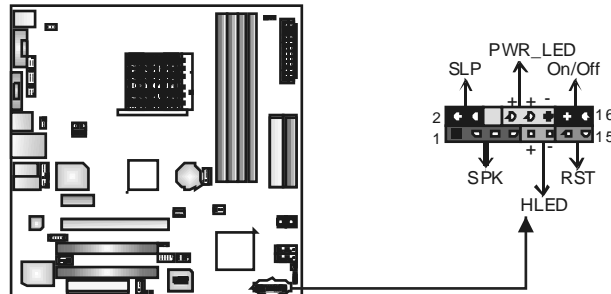


Pin	Assignment	Function	Pin	Assignment	Function
1	+5V	Speaker Connector	2	Sleep control	Sleep button
3	N/A		4	Ground	N/A
5	N/A		6	N/A	
7	Speaker		8	Power LED (+)	Power LED
9	HDD LED (+)	10	Power LED (+)		
11	HDD LED (-)	12	Power LED (-)		
13	Ground	Reset button	14	Power button	Power-on button
15	Reset control		16	Ground	



**JIR1: IrDA Connector (Optional for Ver 3.x only)**

The motherboard has a Infrared header that supports infrared signal transmitting and receiving device.

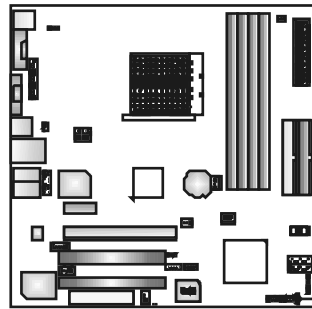



Pin	Assignment
1	+5V
2	IRTX
3	Ground
4	IRRX

IR(optional)



**ATX Power Source Connector: JATXPWR1**


JATXPWR1 allows user to connect 24-pin power connector on the ATX power supply.

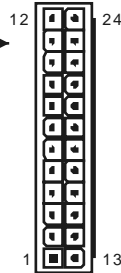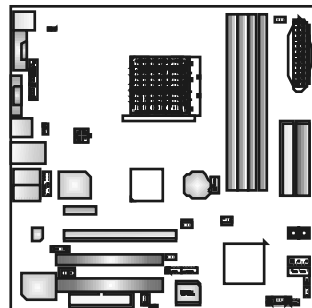

Pin	Assignment	Pin	Assignment
1	+3.3V	13	+3.3V
2	+3.3V	14	-12V
3	Ground	15	Ground
4	+5V	16	PS_ON
5	Ground	17	Ground
6	+5V	18	Ground
7	Ground	19	Ground
8	PW_OK	20	NC
9	Standby Voltage+5V	21	+5V
10	+12V	22	+5V
11	+12V	23	+5V
12	+3.3V	24	Ground

### JATXPWR2: ATX Power Source Connector


By connecting this connector, it will provide +12V to CPU power circuit.

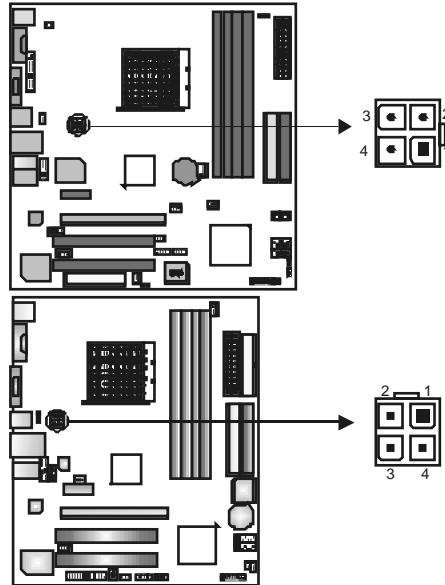

Pin	Assignment
1	+12V
2	+12V
3	Ground
4	Ground

### JUSB2/JUSB3: Headers for USB 2.0 Ports at Front Panel

This header allows user to connect additional USB cable on the PC front panel, and also can be connected with internal USB devices, like USB card reader.

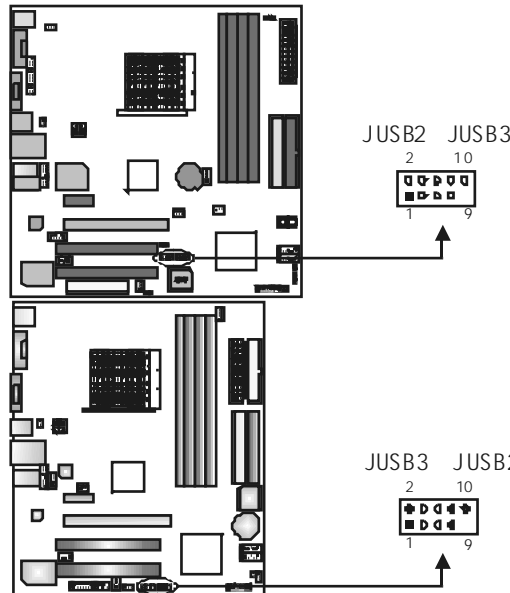

Pin	Assignment
1	+5V (fused)
2	+5V (fused)
3	USB-
4	USB-
5	USB+
6	USB+
7	Ground
8	Ground
9	Key
10	NC

**JUSBV1/JUSBV2: Power Source Headers for USB Ports**

**Pin 1-2 Close:**


JUSBV1: +5V for USB ports at JUSBLAN1.

JUSBV2: +5V for USB ports at front panel (JUSB2/JUSB3).

**Pin 2-3 Close:**

JUSBV1: USB ports at JUSBLAN1 are powered by +5V standby voltage.

JUSBV2: USB ports at front panel (JUSB2/JUSB3) are powered by +5V standby voltage.

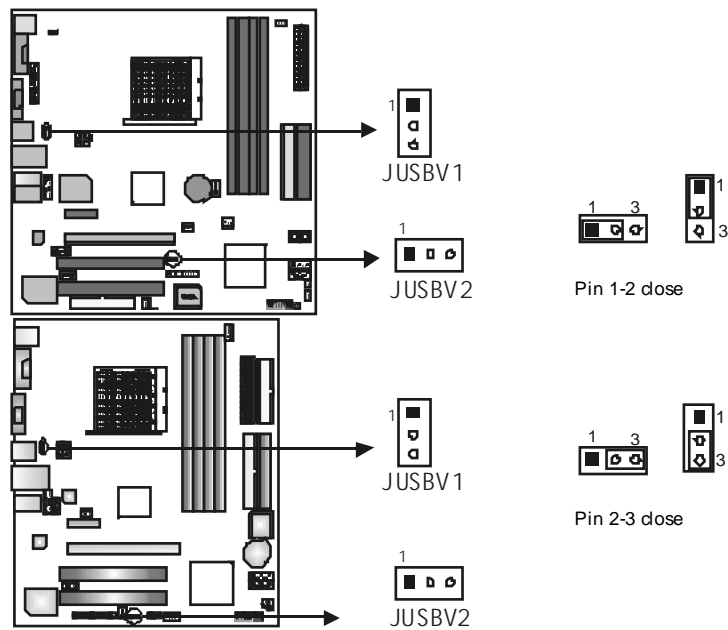


**Note:**

In order to support this function "Power-On system via a USB device," "JUSBV1/ JUSBV2" jumper cap should be placed on Pin 2-3 individually.

### JFAUDIO1: Front Panel Audio Header


This header allows user to connect the front audio output cable with the PC front panel. It will disable the output on back panel audio connectors.

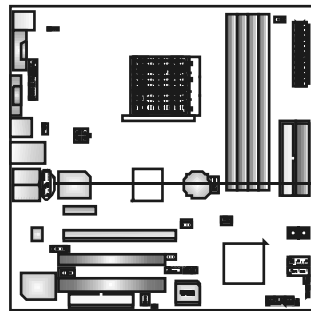


Pin	Assignment
1	Mic in/center
2	Ground
3	Mic power/Bass
4	Audio power
5	Right line out/ Speaker out Right
6	Right line out/ Speaker out Right
7	Reserved
8	Key
9	Left line out/ Speaker out Left
10	Left line out/ Speaker out Left
11	Right line in/ Rear speaker Right
12	Right line in/ Rear speaker Right
13	Left line in/ Rear speaker Left
14	Left line in/ Rear speaker Left

### JCDIN1: CD-ROM Audio-in Connector

This connector allows user to connect the audio source from the variety devices, like CD-ROM, DVD-ROM, PCI sound card, PCI TV turner card etc..

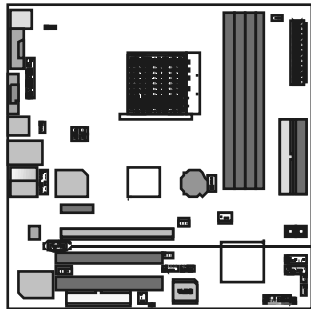


Pin	Assignment
1	Left Channel Input
2	Ground
3	Ground
4	Right Channel Input

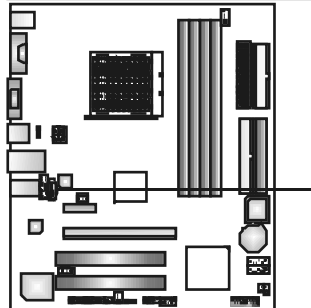

**JCMOS1: Clear CMOS Header**

By placing the jumper on pin2-3, it allows user to restore the BIOS safe setting and the CMOS data, please carefully follow the procedures to avoid damaging the motherboard.

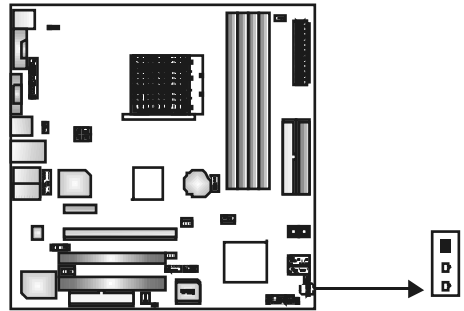

**Pin 1-2 Close:**  
Normal Operation (default).


**Pin 2-3 Close:**  
Clear CMOS data.

**※ Clear CMOS Procedures:**

1. Remove AC power line.
2. Set the jumper to "Pin 2-3 close".
3. Wait for five seconds.
4. Set the jumper to "Pin 1-2 close".
5. Power on the AC.
6. Reset your desired password or clear the CMOS data.

**JCI1: Chassis Open Header (optional)**


This connector allows system to monitor PC case open status. If the signal has been triggered, it will record to the CMOS and show the message on next boot-up.

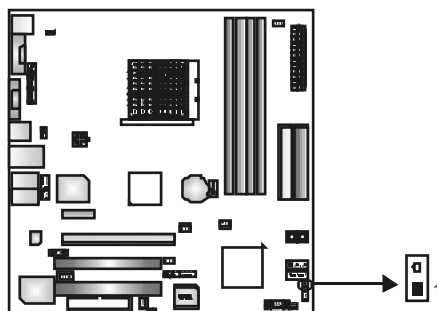

Pin	Assignment
1	Case open signal
2	Ground

### JSATA1~JSATA2: Serial ATA Connectors


The motherboard has a PCI to SATA Controller with 2 channels SATA interface, it satisfies the SATA 2.0 spec and with transfer rate of 3.0Gb/s.

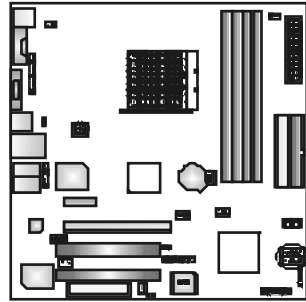

Pin	Assignment
1	Ground
2	TX+
3	TX-
4	Ground
5	RX-
6	RX+
7	Ground

### JSPDIF\_OUT1: Digital Audio-out Connector

This connector allows user to connect the PCI bracket SPDIF output header.

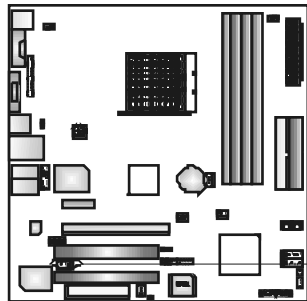

Pin	Assignment
1	+5V
2	SPDIF_OUT
3	Ground




**Power Source Selection Headers for Keyboard/Mouse: JKBMSV1 (Only for Ver 3.x)**

**Pin 1-2 Close:**

JKBMSV1: +5V for PS/2 keyboard and mouse.




**Pin 2-3 Close:**

JKBMSV1: PS/2 keyboard and mouse are powered with +5V standby voltage.

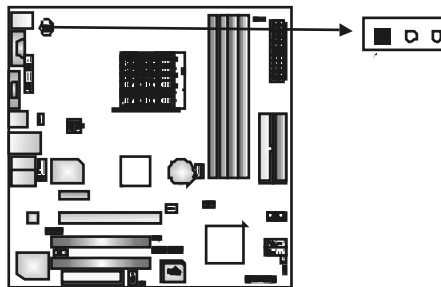

**Header to adjust Memory Voltage: JDDR\_II>2.2V (Only for Ver 3.x)**

When adjusting Memory Voltage, please place the jumper to pin2-3 Closed. The Default setting is Pin 1-2 Closed.

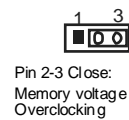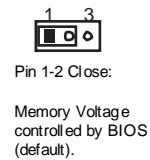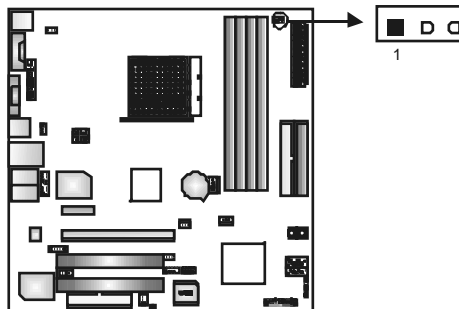


**Note:**

1. When "JDDR\_II>2.2V" jumper cap is placed on Pin 1-2, memory voltage can be manually adjusted under CMOS setup.
2. When "JDDR\_II>2.2V" jumper cap is placed on Pin 2-3, memory voltage will be fixed at 2.2V automatically, and can't be adjusted under COMS setup.

Before setting memory voltage or erclocking, please ensure that y our DDRII memory modules are able to support 2.2V. (Consulting your DDR supplier)

### On-Board LED Indicators (Only for Ver 3.x)

There are 2 LED indicators on the motherboard to show system status.

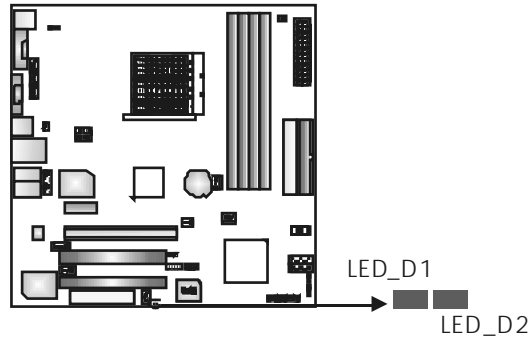


#### LED\_D1 and LED\_D2:

These 2 LED indicate system power on diagnostics.  
Please refer to the table below for different messages:

LED D1	LED D2	Message
ON	ON	Normal
ON	OFF	VGA Error
OFF	ON	Memory Error
OFF	OFF	Abnormal: CPU / Chipset error.

### On-Board Buttons (Optional for Ver 3.x only)

There are 2 on-board buttons.

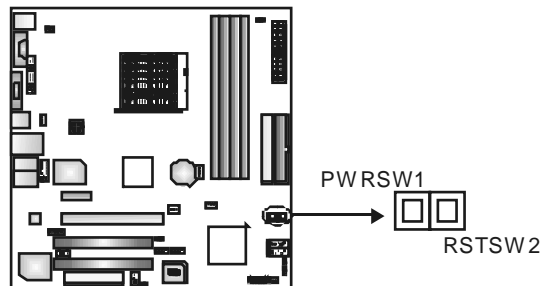

#### PWRSW1:

This is an on-board Power On/Off button.


#### RSTSW2:

This is an on-board Reset button.



**JPRNT1: Printer Port Connector**

This header allows you to connector printer on the PC.

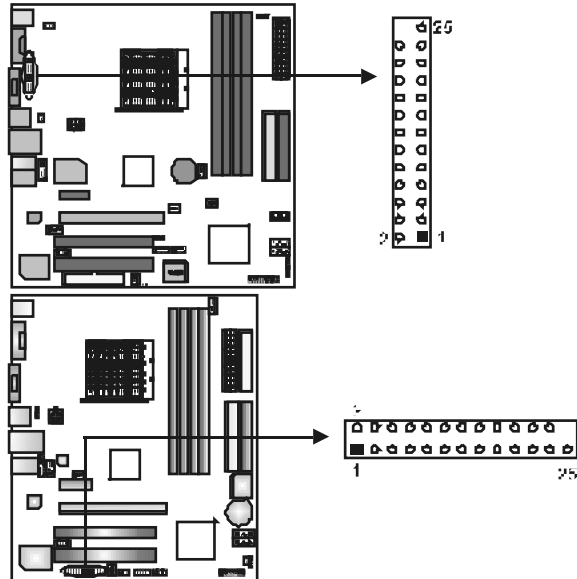

Pin	Assignment	Pin	Assignment
1	-Strobe	14	Ground
2	-ALF	15	Data 6
3	Data 0	16	Ground
4	-Error	17	Data 7
5	Data 1	18	Ground
6	-Init	19	-ACK
7	Data 2	20	Ground
8	-Scltin	21	Busy
9	Data 3	22	Ground
10	Ground	23	PE
11	Data 4	24	Ground
12	Ground	25	SCLT
13	Data 5		

## CHAPTER 4: NVIDIA RAID FUNCTIONS

### 4.1 OPERATION SYSTEM

- Supports Windows XP Home/Professional Edition, and Windows 2000 Professional.

### 4.2 RAID ARRAYS

NVRAID supports the following types of RAID arrays:

**RAID 0:** RAID 0 defines a disk striping scheme that improves disk read and write times for many applications.

**RAID 1:** RAID 1 defines techniques for mirroring data.


### 4.3 How RAID WORKS

#### **RAID 0:**

The controller “stripes” data across multiple drives in a RAID 0 array system. It breaks up a large file into smaller blocks and performs disk reads and writes across multiple drives in parallel. The size of each block is determined by the stripe size parameter, which you set during the creation of the RAID set based on the system environment. This technique reduces overall disk access time and offers high bandwidth.

#### **Features and Benefits**

- **Drives:** Minimum 1, and maximum is up to 6 or 8. Depending on the platform.
- **Uses:** Intended for non-critical data requiring high data throughput, or any environment that does not require fault tolerance.
- **Benefits:** provides increased data throughput, especially for large files. No capacity loss penalty for parity.
- **Drawbacks:** Does not deliver any fault tolerance. If any drive in the array fails, all data is lost.
- **Fault Tolerance:** No.

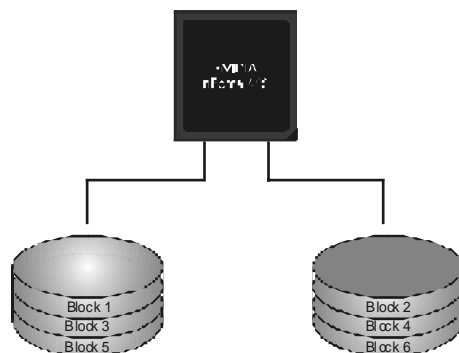


**RAID 1:**

Every read and write is actually carried out in parallel across 2 disk drives in a RAID 1 array system. The mirrored (backup) copy of the data can reside on the same disk or on a second redundant drive in the array. RAID 1 provides a hot-standby copy of data if the active volume or drive is corrupted or becomes unavailable because of a hardware failure.

RAID techniques can be applied for high-availability solutions, or as a form of automatic backup that eliminates tedious manual backups to more expensive and less reliable media.

**Features and Benefits**

- **Drives:** Minimum 2, and maximum is 2.
- **Uses:** RAID 1 is ideal for small databases or any other application that requires fault tolerance and minimal capacity.
- **Benefits:** Provides 100% data redundancy. Should one drive fail, the controller switches to the other drive.
- **Drawbacks:** Requires 2 drives for the storage space of one drive. Performance is impaired during drive rebuilds.
- **Fault Tolerance:** Yes.

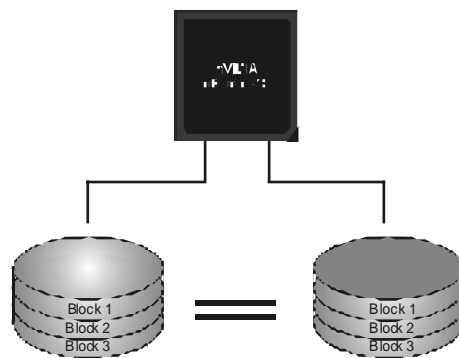


※ For more detailed setup information, please refer to the Driver CD, or go to [http://www.nvidia.com/page/pg\\_20011106217193.html](http://www.nvidia.com/page/pg_20011106217193.html) to download NVIDIA nForce Tutorial Flash.

## CHAPTER 5: USEFUL HELP

### 5.1 DRIVER INSTALLATION NOTE

After you installed your operating system, please insert the Fully Setup Driver CD into your optical drive and install the driver for better system performance.

You will see the following window after you insert the CD

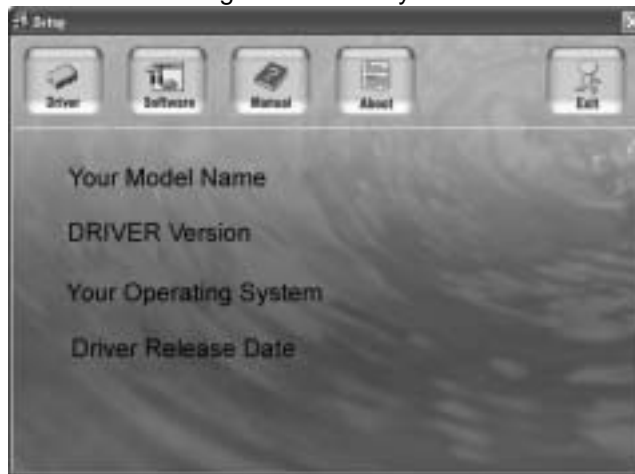

The setup guide will auto detect your motherboard and operating system.

**Note:**

If this window didn't show up after you insert the Driver CD, please use file browser to locate and execute the file **SETUP.EXE** under your optical drive.

#### **A. Driver Installation**

To install the driver, please click on the Driver icon. The setup guide will list the compatible driver for your motherboard and operating system. Click on each device driver to launch the installation program.

#### **B. Software Installation**

To install the software, please click on the Software icon. The setup guide will list the software available for your system, click on each software title to launch the installation program.

#### **C. Manual**

Aside from the paperback manual, we also provide manual in the Driver CD. Click on the Manual icon to browse for available manual.

**Note:**

You will need Acrobat Reader to open the manual file. Please download the latest version of Acrobat Reader software from <http://www.adobe.com/products/acrobat/readstep2.html>


## 5.2 AWARD BIOS BEEP CODE

Beep Sound	Meaning
One long beep followed by two short beeps	Video card not found or video card memory bad
High-low siren sound	CPU overheated System will shut down automatically
One Short beep when system boot-up	No error found during POST
Long beeps every other second	No DRAM detected or install

## 5.3 EXTRA INFORMATION

### A. BIOS Update

After you fail to update BIOS or BIOS is invaded by virus, the Boot-Block function will help to restore BIOS. If the following message is shown after boot-up the system, it means the BIOS contents are corrupted.

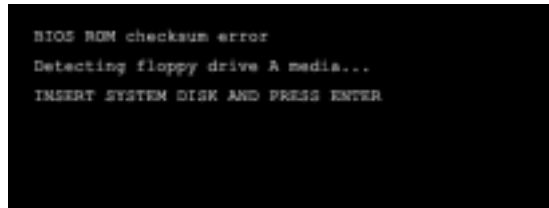

In this Case, please follow the procedure below to restore the BIOS:

1. Make a bootable floppy disk.
2. Download the Flash Utility "AWDFLASH.exe" from the Biostar website: [www.biostar.com.tw](http://www.biostar.com.tw)
3. Confirm motherboard model and download the respectively BIOS from Biostar website.
4. Copy "AWDFLASH.exe" and respectively BIOS into floppy disk.
5. Insert the bootable disk into floppy drive and press Enter.
6. System will boot-up to DOS prompt.
7. Type "*Awdflash xxxx.bf/sn/py/r*" in DOS prompt.  
(xxxx means BIOS name.)
8. System will update BIOS automatically and restart.
9. The BIOS has been recovered and will work properly.

### **B. CPU Overheated**

If the system shutdown automatically after power on system for seconds, that means the CPU protection function has been activated.

When the CPU is over heated, the motherboard will shutdown automatically to avoid a damage of the CPU, and the system may not power on again.

In this case, please double check:

1. The CPU cooler surface is placed evenly with the CPU surface.
2. CPU fan is rotated normally.
3. CPU fan speed is fulfilling with the CPU speed.

After confirmed, please follow steps below to relief the CPU protection function.

1. Remove the power cord from power supply for seconds.
2. Wait for seconds.
3. Plug in the power cord and boot up the system.

Or you can:

1. Clear the CMOS data.  
(See "Close CMOS Header: JCMOS1" section)
2. Wait for seconds.
3. Power on the system again.

## 5.4 TROUBLESHOOTING

Probable	Solution
<ol style="list-style-type: none"> <li>No power to the system at all. Power light don't illuminate, fan inside power supply does not turn on.</li> <li>Indicator light on key board does not turn on.</li> </ol>	<ol style="list-style-type: none"> <li>Make sure power cable is securely plugged in.</li> <li>Replace cable.</li> <li>Contact technical support.</li> </ol>
System inoperative. Keyboard lights are on, power indicator lights are lit, and hard drive is spinning.	Using even pressure on both ends of the DIMM, press down firmly until the module snaps into place.
System does not boot from hard disk drive, can be booted from optical drive.	<ol style="list-style-type: none"> <li>Check cable running from disk to disk controller board. Make sure both ends are securely plugged in; check the drive type in the standard CMOS setup.</li> <li>Backing up the hard drive is extremely important. All hard disks are capable of breaking down at any time.</li> </ol>
System only boots from optical drive. Hard disk can be read and applications can be used but booting from hard disk is impossible.	<ol style="list-style-type: none"> <li>Back up data and applications files.</li> <li>Reformat the hard drive. Re-install applications and data using backup disks.</li> </ol>
Screen message says "Invalid Configuration" or "CMOS Failure."	Review system's equipment. Make sure correct information is in setup.
Cannot boot system after installing second hard drive.	<ol style="list-style-type: none"> <li>Set master/slave jumpers correctly.</li> <li>Run SETUP program and select correct drive types. Call the drive manufacturers for compatibility with other drives.</li> </ol>

## **CHAPTER 6: WARPSPEEDER™**



### **6.1 INTRODUCTION**

[WarpSpeeder™], a new powerful control utility, features three user-friendly functions including Overclock Manager, Overvoltage Manager, and Hardware Monitor.

With the Overclock Manager, users can easily adjust the frequency they prefer or they can get the best CPU performance with just one click. The Overvoltage Manager, on the other hand, helps to power up CPU core voltage and Memory voltage. The cool Hardware Monitor smartly indicates the temperatures, voltage and CPU fan speed as well as the chipset information. Also, in the About panel, you can get detail descriptions about BIOS model and chipsets. In addition, the frequency status of CPU, memory, AGP and PCI along with the CPU speed are synchronically shown on our main panel.

Moreover, to protect users' computer systems if the setting is not appropriate when testing and results in system fail or hang, [WarpSpeeder™] technology assures the system stability by automatically rebooting the computer and then restart to a speed that is either the original system speed or a suitable one.


### **6.2 SYSTEM REQUIREMENT**

OS Support: Windows 98 SE, Windows Me, Windows 2000, Windows XP  
DirectX: DirectX 8.1 or above. (The Windows XP operating system includes DirectX 8.1. If you use Windows XP, you do not need to install DirectX 8.1.)



### 6.3 INSTALLATION

1. Execute the setup execution file, and then the following dialog will pop up. Please click "Next" button and follow the default procedure to install.

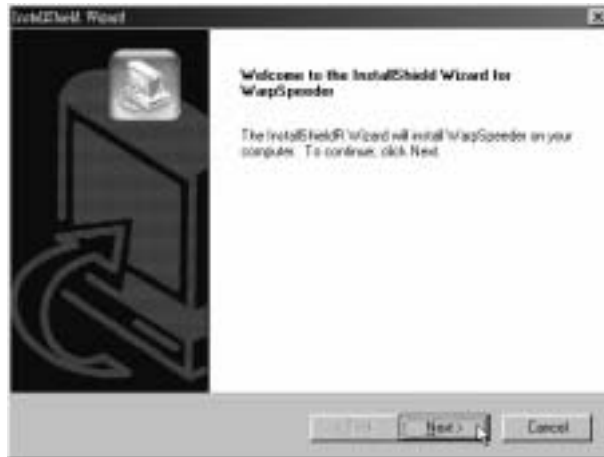

2. When you see the following dialog in setup procedure, it means setup is completed. If the "Launch the WarpSpeeder Tray Utility" checkbox is checked, the Tray Icon utility and [WarpSpeeder™] utility will be automatically and immediately launched after you click "Finish" button.




#### Usage:

The following figures are just only for reference, the screen printed in this user manual will change according to your motherboard on hand.

## 6.4 WARPSPEDER™

### 1. **Tray Icon:**

Whenever the Tray Icon utility is launched, it will display a little tray icon on the right side of Windows Taskbar.

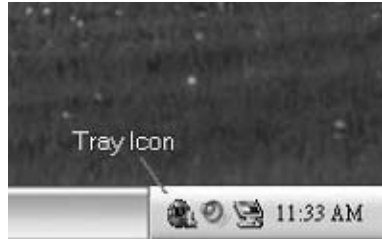

This utility is responsible for conveniently invoking [WarpSpeeder™] Utility. You can use the mouse by clicking the left button in order to invoke [WarpSpeeder™] directly from the little tray icon or you can right-click the little tray icon to pop up a popup menu as following figure. The “Launch Utility” item in the popup menu has the same function as mouse left-click on tray icon and “Exit” item will close Tray Icon utility if selected.



## 2. Main Panel

If you click the tray icon, [WarpSpeeder™] utility will be invoked. Please refer to the following figure; the utility's first window you will see is Main Panel.


### Main Panel contains features as follows:

- Display the CPU Speed, CPU external dock, Memory dock, AGP dock, and PCI dock information.
- Contains About, Voltage, Overclock, and Hardware Monitor Buttons for invoking respective panels.
- With a user-friendly Status Animation, it can represent 3 overclock percentage stages:

Man walking → overclock percentage from 100% ~ 110 %

Panther running → overclock percentage from 110% ~ 120%

Car racing → overclock percentage from 120% ~ above

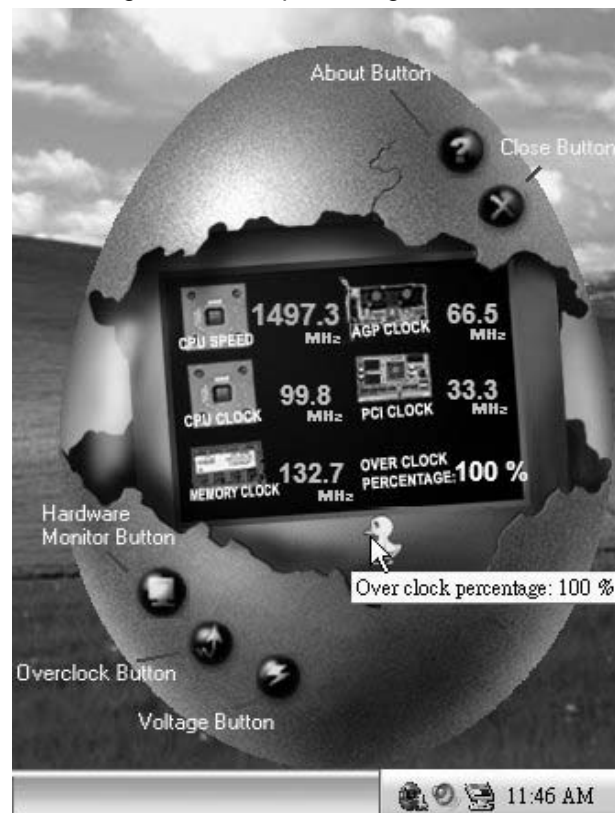

### 3. Voltage Panel

Click the Voltage button in Main Panel, the button will be highlighted and the Voltage Panel will slide out to up as the following figure.

In this panel, you can decide to increase CPU core voltage and Memory voltage or not. The default setting is "No". If you want to get the best performance of overlocking, we recommend you click the option "Yes".



#### 4. Overclock Panel

Click the Overclock button in Main Panel, the button will be highlighted and the Overclock Panel will slide out to left as the following figure.



**Overclock Panel contains the these features:**

- “-3MHz button”, “-1MHz button”, “+1MHz button”, and “+3MHz button”:  
provide user the ability to do real-time overclock adjustment.

**Warning:**

Manually overclock is potentially dangerous, especially when the overlocking percentage is over 110 %. We strongly recommend you verify every speed you overclock by click the Verify button. Or, you can just click Auto overclock button and let [WarpSpeeder™] automatically gets the best result for you.

- “Recovery Dialog button”: Pop up the following dialog. Let user select a restoring way if system need to do a fail-safe reboot.



- c. "Auto-overclock button": User can click this button and [WarpSpeeder™] will set the best and stable performance and frequency automatically. [WarpSpeeder™] utility will execute a series of testing until system fail. Then system will do fail-safe reboot by using Watchdog function. After reboot, the [WarpSpeeder™] utility will restore to the hardware default setting or load the verified best and stable frequency according to the Recovery Dialog's setting.
- d. "Verify button": User can click this button and [WarpSpeeder™] will proceed a testing for current frequency. If the testing is ok, then the current frequency will be saved into system registry. If the testing fail, system will do a fail-safe rebooting. After reboot, the [WarpSpeeder™] utility will restore to the hardware default setting or load the verified best and stable frequency according to the Recovery Dialog's setting.

**Note:**

Because the testing programs, invoked in Auto-overclock and Verify, include DirectDraw, Direct3D and DirectShow tests, the DirectX 8.1 or newer runtime library is required. And please make sure our display card's color depth is High color (16 bit) or True color (24/32 bit) that is required for Direct3D rendering.

**5. Hardware Monitor Panel**

Click the Hardware Monitor button in Main Panel, the button will be highlighted and the Hardware Monitor panel will slide out to left as the following figure.


In this panel, you can get the real-time status information of your system. The information will be refreshed every 1 second.



## 6. About Panel

Click the “about” button in Main Panel, the button will be highlighted and the About Panel will slide out to up as the following figure.

In this panel, you can get model name and detail information in hints of all the chipset that are related to overclocking. You can also get the mainboard’s BIOS model and the Version number of [WarpSpeeder™] utility.

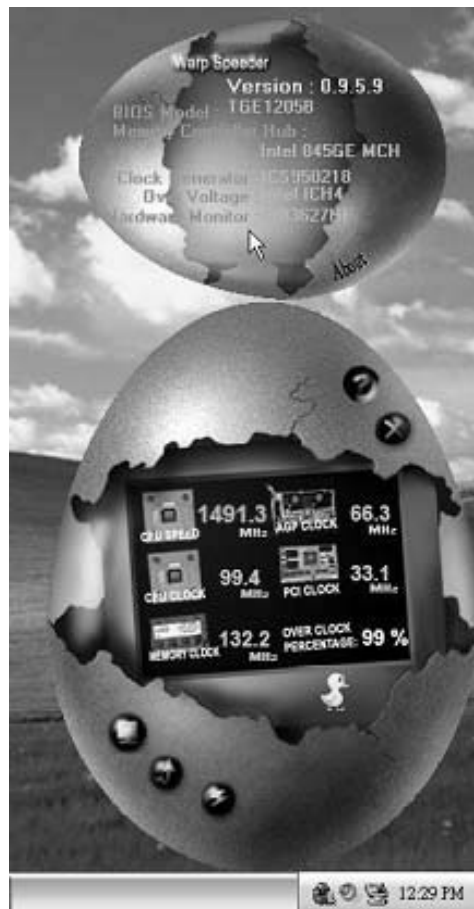

### Note:

Because the overclock, overvoltage, and hardware monitor features are controlled by several separate chipset, [WarpSpeeder™] divide these features to separate panels. If one chipset is not on board, the correlative button in Main panel will be disabled, but will not interfere other panels’ functions. This property can make [WarpSpeeder™] utility more robust.

## APPENDENCIES: SPEC IN OTHER LANGUAGE

### GERMAN

	Ver 3.x	Ver 1.x
CPU	Sockel AM2 AMD Athlon 64 / Athlon 64 FX / Sempron Prozessoren Die AMD 64-Architektur unterstützt eine 32-Bit- und 64-Bit-Datenverarbeitung Unterstützt Hyper Transport und Cool'n'Quiet	Sockel AM2 AMD Athlon 64 / Athlon 64 FX / Sempron Prozessoren Die AMD 64-Architektur unterstützt eine 32-Bit- und 64-Bit-Datenverarbeitung Unterstützt Hyper Transport und Cool'n'Quiet
FSB	Unterstützt HyperTransport mit einer Bandbreite von bis zu 1000 MHz	Unterstützt HyperTransport mit einer Bandbreite von bis zu 1000 MHz
Chipsatz	GeForce 6100 nForce 410	GeForce 6100 nForce 410
Super E/A	ITE 8712F / 8716F Bietet die häufig verwendeten alten Super E/A-Funktionen. Low Pin Court-Schnittstelle Umgebungskontrolle, Hardware-Überwachung Lüfterdrehzahl-Controller "Smart Guardian"-Funktion von ITE	ITE 8712F / 8716F Bietet die häufig verwendeten alten Super E/A-Funktionen. Low Pin Court-Schnittstelle Umgebungskontrolle, Hardware-Überwachung Lüfterdrehzahl-Controller "Smart Guardian"-Funktion von ITE
Arbeitsspeicher	DDR2 DIMM-Steckplätze x 4 Jeder DIMM unterstützt 256/512MB & 1GB DDR2. Max. 4GB Arbeitsspeicher Dual-Kanal DDR2 Speichermodul Unterstützt DDR2 400 / 533 / 667 / 800 registrierte DIMMs. ECC DIMMs werden nicht unterstützt.	DDR2 DIMM-Steckplätze x 4 Jeder DIMM unterstützt 256/512MB & 1GB DDR2. Max. 4GB Arbeitsspeicher Dual-Kanal DDR2 Speichermodul Unterstützt DDR2 400 / 533 / 667 / 800 registrierte DIMMs. ECC DIMMs werden nicht unterstützt.
Grafik	Integrierter GeForce 6100-Chipsatz Max. 256 MB gemeinsam benutzter Videospeicher	Integrierter GeForce 6100-Chipsatz Max. 256 MB gemeinsam benutzter Videospeicher
IDE	Integrierter IDE-Controller Ultra DMA 33 / 66 / 100 / 133 Bus Master-Modus Unterstützt PIO-Modus 0~4,	Integrierter IDE-Controller Ultra DMA 33 / 66 / 100 / 133 Bus Master-Modus Unterstützt PIO-Modus 0~4,
SATA II	Integrierter Serial ATA-Controller Datentransfer rate bis zu 3Gb/s Konform mit der SATA-Spezifikation Version 2.0.	Integrierter Serial ATA-Controller Datentransfer rate bis zu 3Gb/s Konform mit der SATA-Spezifikation Version 2.0.
LAN	Realtek 8100C 10 / 100 Mb/s Auto-Negotiation	Realtek 8201CL PHY 10 / 100 Mb/s Auto-Negotiation



	Ver 3.x	Ver 1.x
Audio-Codec	ALC 850 8-Kanal-Audioausgabe AC'97 Version 2.3	ALC 655 / 658 (optional) 6-Kanal-Audioausgabe AC'97 Version 2.3
Steckplätze	PCI-Steckplatz x2 PCI Express x16 Steckplatz x1 PCI Express x 1-Steckplatz x1	PCI-Steckplatz x2 PCI Express x16 Steckplatz x1 PCI Express x 1-Steckplatz x1
Onboard-Anschluss	Diskettenlaufwerkanschluss x1 Druckeranschluss Anschluss x1 IDE-Anschluss x2 SATA-Anschluss x2 Fronttafelanschluss x1 Front-Audioanschluss x1 CD-IN-Anschluss x1 S/PDIF-Ausgangsanschluss x1 CPU-Lüfter-Sockel x1 System-Lüfter-Sockel x3 "Gehäuse offen"-Sockel (optional) x1 "CMOS löschen"-Sockel x1 USB-Anschluss x2 Stromanschluss (24-polig) x1 Stromanschluss (4-polig) x1	Diskettenlaufwerkanschluss x1 Druckeranschluss Anschluss x1 IDE-Anschluss x2 SATA-Anschluss x2 Fronttafelanschluss x1 Front-Audioanschluss x1 CD-IN-Anschluss x1 S/PDIF-Ausgangsanschluss x1 CPU-Lüfter-Sockel x1 System-Lüfter-Sockel x1 "Gehäuse offen"-Sockel (optional) x1 "CMOS löschen"-Sockel x1 USB-Anschluss x2 Stromanschluss (24-polig) x1 Stromanschluss (4-polig) x1
Rückseiten-E/A	PS/2-Tastatur x1 PS/2-Maus x1 Serieller Anschluss x1 VGA-Anschluss x1 LAN-Anschluss x1 USB-Anschluss x4 Audioanschluss x6	PS/2-Tastatur x1 PS/2-Maus x1 Serieller Anschluss x1 VGA-Anschluss x1 LAN-Anschluss x1 USB-Anschluss x4 Audioanschluss x3
Platinengröße	244 mm (B) X 244 mm (L)	210 mm (B) X 244 mm (L)
Sonderfunktionen	NVIDIA nTunes Unterstützt RAID 0 / 1	NVIDIA nTunes Unterstützt RAID 0 / 1
OS-Unterstützung	Windows 2K / XP Biostar behält sich das Recht vor, ohne Ankündigung die Unterstützung für ein Betriebssystem hinzuzufügen oder zu entfernen.	Windows 2K / XP Biostar behält sich das Recht vor, ohne Ankündigung die Unterstützung für ein Betriebssystem hinzuzufügen oder zu entfernen.

## FRANCE

	Ver 3.x	Ver 1.x
UC	Socket AM2 Processeurs AMD Athlon 64 / Athlon 64 FX / Sempron L'architecture AMD 64 permet le calcul 32 et 64 bits Prend en charge Hyper Transport et Cod'nQuiet	Socket AM2 Processeurs AMD Athlon 64 / Athlon 64 FX / Sempron L'architecture AMD 64 permet le calcul 32 et 64 bits Prend en charge Hyper Transport et Cod'nQuiet
Bus frontal	Prend en charge Hyper Transport jusqu'à une bande passante de 1000MHz	Prend en charge Hyper Transport jusqu'à une bande passante de 1000MHz
Chipset	GeForce 6100 nForce 410	GeForce 6100 nForce 410
Graphiques	Intégré dans la chipset GeForce 6100 Mémoire vidéo partagée maximale de 256 Mo	Intégré dans la chipset GeForce 6100 Mémoire vidéo partagée maximale de 256 Mo
Super E/S	ITE 8712F / 8716F Fournit la fonctionnalité de Super E/S patrimoniales la plus utilisée. Interface à faible compte de broches Initiatives de contrôle environnementales, Moniteur de matériel Contrôleur de vitesse de ventilateur Fonction "Garden intelligent" de l'ITE	ITE 8712F / 8716F Fournit la fonctionnalité de Super E/S patrimoniales la plus utilisée. Interface à faible compte de broches Initiatives de contrôle environnementales, Moniteur de matériel Contrôleur de vitesse de ventilateur Fonction "Garden intelligent" de l'ITE
Mémoire principale	Fentes DDR2 DIMM x 4 Chaque DIMM prend en charge des DDR2 de 256/512 Mo et 1Go Capacité mémoire maximale de 4 Go Module de mémoire DDR2 à mode à double voie Prend en charge la DDR2 400 / 533 / 667 / 800 Les DIMM à registres et DIMM avec code correcteurs d'erreurs ne sont pas prises en charge	Fentes DDR2 DIMM x 4 Chaque DIMM prend en charge des DDR2 de 256/512 Mo et 1Go Capacité mémoire maximale de 4 Go Module de mémoire DDR2 à mode à double voie Prend en charge la DDR2 400 / 533 / 667 / 800 Les DIMM à registres et DIMM avec code correcteurs d'erreurs ne sont pas prises en charge
IDE	Contrôleur IDE intégré Mode principale de Bus Ultra DMA 33 / 66 / 100 / 133 Prend en charge le mode PIO 0~4,	Contrôleur IDE intégré Mode principale de Bus Ultra DMA 33 / 66 / 100 / 133 Prend en charge le mode PIO 0~4,
SATA II	Contrôleur Serial ATA intégré : Taux de transfert jusqu'à 3 Go/s. Conforme à la spécification SATA Version 2.0	Contrôleur Serial ATA intégré : Taux de transfert jusqu'à 3 Go/s. Conforme à la spécification SATA Version 2.0
LAN	Realtek 8100C 10 / 100 Mb/s négociation automatique	Realtek 8201CL PHY 10 / 100 Mb/s négociation automatique

	Ver 3.x	Ver 1.x
Codec audio	ALC 850 Sortie audio à 8 voies AC'97 Version 2.3	ALC 655 / 658 (optional) Sortie audio à 6 voies AC'97 Version 2.3
Fentes	Fente PCI x2 Slot PCI Express x16 x1 Slot PCI Express x 1 x1	Fente PCI x2 Slot PCI Express x16 x1 Slot PCI Express x 1 x1
Connecteur embarqué	Connecteur de disquette x1 Connecteur de Port d'imprimante x1 Connecteur IDE x2 Connecteur SATA x2 Connecteur du panneau avant x1 Connecteur Audio du panneau avant x1 Connecteur d'entrée CD x1 Connecteur de sortie S/PDIF x1 Embâse de ventilateur UC x1 Embâse de ventilateur système x3 Embâse d'ouverture de châssis x1 (optional) Embâse d'effacement CMOS x1 Connecteur USB x2 Connecteur d'alimentation x1 (24 broches) Connecteur d'alimentation x1 (4 broches)	Connecteur de disquette x1 Connecteur de Port d'imprimante x1 Connecteur IDE x2 Connecteur SATA x2 Connecteur du panneau avant x1 Connecteur Audio du panneau avant x1 Connecteur d'entrée CD x1 Connecteur de sortie S/PDIF x1 Embâse de ventilateur UC x1 Embâse de ventilateur système x1 Embâse d'ouverture de châssis x1 (optional) Embâse d'effacement CMOS x1 Connecteur USB x2 Connecteur d'alimentation x1 (24 broches) Connecteur d'alimentation x1 (4 broches)
E/S du panneau arrière	Clavier PS/2 x1 Souris PS/2 x1 Port série x1 Port VGA x1 Port LAN x1 Port USB x4 Fiche audio x6	Clavier PS/2 x1 Souris PS/2 x1 Port série x1 Port VGA x1 Port LAN x1 Port USB x4 Fiche audio x3
Dimensions de la carte	244 mm (l) X 244 mm (H)	210 mm (l) X 244 mm (H)
Fonctionnalités spéciales	NVIDIA nTunes Prise en charge RAID 0 / 1	NVIDIA nTunes Prise en charge RAID 0 / 1
Support SE	Windows 2K / XP Biostar se réserve le droit d'ajouter ou de supprimer le support de SE avec ou sans préavis.	Windows 2K / XP Biostar se réserve le droit d'ajouter ou de supprimer le support de SE avec ou sans préavis.

**ITALIAN**

	Ver 3.x	Ver 1.x
CPU	Socket AM2 Processori AMD Athlon 64 / Athlon 64 FX / Sempron L'architettura AMD 64 abilita la computazione 32 e 64 bit Supporto di Hyper Transport e Cool'n'Quiet	Socket AM2 Processori AMD Athlon 64 / Athlon 64 FX / Sempron L'architettura AMD 64 abilita la computazione 32 e 64 bit Supporto di Hyper Transport e Cool'n'Quiet
FSB	Supporto di Hyper Transport fino a 1000 MHz di larghezza di banda	Supporto di Hyper Transport fino a 1000 MHz di larghezza di banda
Chipset	GeForce 6100 nForce 410	GeForce 6100 nForce 410
Grafica	Integrata nel Chipset GeForce 6100 La memoria video condivisa massima è di 256MB	Integrata nel Chipset GeForce 6100 La memoria video condivisa massima è di 256MB
Super I/O	ITE 8712F / 8716F Fornisce le funzionalità legacy Super I/O usate più comunemente. Interfaccia LPC (Low Pin Count) Funzioni di controllo dell'ambiente: Monitoraggio hardware Controller velocità ventolina Funzione "Smart Guardian" di ITE	ITE 8712F / 8716F Fornisce le funzionalità legacy Super I/O usate più comunemente. Interfaccia LPC (Low Pin Count) Funzioni di controllo dell'ambiente: Monitoraggio hardware Controller velocità ventolina Funzione "Smart Guardian" di ITE
Memoria principale	Alloggi DIMM DDR 2 x 4 Ciascun DIMM supporta DDR2 256/512MB e 1GB Capacità massima della memoria a 4GB Modulo di memoria DDR2 a canale doppio Supporto di DDR2 400 / 533 / 667 / 800 DIMM registrati e DIMM ECC non sono supportati	Alloggi DIMM DDR 2 x 4 Ciascun DIMM supporta DDR2 256/512MB e 1GB Capacità massima della memoria a 4GB Modulo di memoria DDR2 a canale doppio Supporto di DDR2 400 / 533 / 667 / 800 DIMM registrati e DIMM ECC non sono supportati
IDE	Controller IDE integrato Modalità Bus Master Ultra DMA 33 / 66 / 100 / 133 Supporto modalità PIO Mode 0-4	Controller IDE integrato Modalità Bus Master Ultra DMA 33 / 66 / 100 / 133 Supporto modalità PIO Mode 0-4
SATA II	Controller Serial ATA integrato Velocità di trasferimento dei dati fino a 3 Gb/s. Compatibile specifiche SATA Versione 2.0.	Controller Serial ATA integrato Velocità di trasferimento dei dati fino a 3 Gb/s. Compatibile specifiche SATA Versione 2.0.
LAN	Realtek 8100C Negoziazione automatica 10 / 100 Mb/s	Realtek 8201CL PHY Negoziazione automatica 10 / 100 Mb/s

	Ver 3.x	Ver 1.x
Codec audio	ALC 850 Uscita audio 8 canali AC'97 Versione 2.3	ALC 655 / 658(optional) Uscita audio 6 canali AC'97 Versione 2.3
Alloggi	Alloggio PCI x2 Alloggio PCI Express x16 x1 Alloggio PCI Express x1 x1	Alloggio PCI x2 Alloggio PCI Express x16 x1 Alloggio PCI Express x1 x1
Connettori su scheda	Connettore floppy x1 Connettore Porta stampante x1 Connettore IDE x2 Connettore SATA x2 Connettore pannello frontale x1 Connettore audio frontale x1 Connettore CD-in x1 Connettore output SPDIF x1 Collettore ventolina CPU x1 Collettore ventolina sistema x3 Collettore apertura telaio x1 (optional) Collettore cancellazione CMOS x1 Connettore USB x2 Connettore alimentazione (24 pin) x1 Connettore alimentazione (4 pin) x1	Connettore floppy x1 Connettore Porta stampante x1 Connettore IDE x2 Connettore SATA x2 Connettore pannello frontale x1 Connettore audio frontale x1 Connettore CD-in x1 Connettore output SPDIF x1 Collettore ventolina CPU x1 Collettore ventolina sistema x1 Collettore apertura telaio x1 (optional) Collettore cancellazione CMOS x1 Connettore USB x2 Connettore alimentazione (24 pin) x1 Connettore alimentazione (4 pin) x1
I/O pannello posteriore	Tastiera PS/2 x1 Mouse PS/2 x1 Porta seriale x1 Porta VGA x1 Porta LAN x1 Porta USB x4 Connettore audio x6	Tastiera PS/2 x1 Mouse PS/2 x1 Porta seriale x1 Porta VGA x1 Porta LAN x1 Porta USB x4 Connettore audio x3
Dimensioni scheda	244 mm (larghezza) x 244 mm (altezza)	210 mm (larghezza) x 244 mm (altezza)
Caratteristiche speciali	nTunes NVIDIA Supporto RAID 0 / 1	nTunes NVIDIA Supporto RAID 0 / 1
Sistemi operativi supportati	Windows 2K / XP Biostar si riserva il diritto di aggiungere o rimuovere il supporto di qualsiasi sistema operativo senza preavviso.	Windows 2K / XP Biostar si riserva il diritto di aggiungere o rimuovere il supporto di qualsiasi sistema operativo senza preavviso.

## SPANISH

	Ver 3.x	Ver 1.x
CPU	<p>Conector AM2</p> <p>Procesadores AMD Athlon 64 / Athlon 64 FX / Sempron</p> <p>La arquitectura AMD 64 permite el procesamiento de 32 y 64 bits</p> <p>Soporta las tecnologías Hyper Transport y Cool'nQuiet</p>	<p>Conector AM2</p> <p>Procesadores AMD Athlon 64 / Athlon 64 FX / Sempron</p> <p>La arquitectura AMD 64 permite el procesamiento de 32 y 64 bits</p> <p>Soporta las tecnologías Hyper Transport y Cool'nQuiet</p>
FSB	Admite HyperTransport con un ancho de banda de hasta 1000 MHz	Admite HyperTransport con un ancho de banda de hasta 1000 MHz
Conjunto de chips	GeForce 6100 nForce 410	GeForce 6100 nForce 410
Gráficos	Integrados en el conjunto de chips GeForce 6100 Memoria máxima de vídeo compartida de 256 MB	Integrados en el conjunto de chips GeForce 6100 Memoria máxima de vídeo compartida de 256 MB
Súper E/S	<p>ITE 8712F / 8716F</p> <p>Le ofrece las funcionalidades heredadas de uso más común Súper E/S.</p> <p>Interfaz de cuenta Low Pin</p> <p>Iniciativas de control de entorno, Monitor hardware</p> <p>Controlador de velocidad de ventilador</p> <p>Función "Guarda inteligente" de ITE</p>	<p>ITE 8712F / 8716F</p> <p>Le ofrece las funcionalidades heredadas de uso más común Súper E/S.</p> <p>Interfaz de cuenta Low Pin</p> <p>Iniciativas de control de entorno, Monitor hardware</p> <p>Controlador de velocidad de ventilador</p> <p>Función "Guarda inteligente" de ITE</p>
Memoria principal	<p>Ranuras DIMM DDR2 x 4</p> <p>Cada DIMM admite DDR de 256/512MB y 1GB</p> <p>Capacidad máxima de memoria de 4GB</p> <p>Módulo de memoria DDR2 de canal Doble</p> <p>Admite DDR2 de 400 / 533 / 667 / 800</p> <p>No admite DIMM registrados o DIMM compatibles con ECC</p>	<p>Ranuras DIMM DDR2 x 4</p> <p>Cada DIMM admite DDR de 256/512MB y 1GB</p> <p>Capacidad máxima de memoria de 4GB</p> <p>Módulo de memoria DDR2 de canal Doble</p> <p>Admite DDR2 de 400 / 533 / 667 / 800</p> <p>No admite DIMM registrados o DIMM compatibles con ECC</p>
IDE	<p>Controlador IDE integrado</p> <p>Modo bus maestro Ultra DMA 33/ 66 / 100/ 133</p> <p>Soporta los Modos PIO 0~4,</p>	<p>Controlador IDE integrado</p> <p>Modo bus maestro Ultra DMA 33/ 66 / 100/ 133</p> <p>Soporta los Modos PIO 0~4,</p>
SATA II	<p>Controlador ATA Serie Integrado</p> <p>Tasas de transferencia de hasta 3 Gb/s.</p> <p>Compatible con la versión SATA 2.0.</p>	<p>Controlador ATA Serie Integrado</p> <p>Tasas de transferencia de hasta 3 Gb/s.</p> <p>Compatible con la versión SATA 2.0.</p>
Red Local	<p>Realtek 8100C</p> <p>Negociación de 10 / 100 Mb/s</p>	<p>Realtek 8201CL PHY</p> <p>Negociación de 10 / 100 Mb/s</p>

	Ver 3.x		Ver 1.x	
Códex de sonido	ALC 850		ALC 655 / 658 (opcional)	
	Salida de sonido de 8 canales		Salida de sonido de 6 canales	
	AC'97 Versión 2.3		AC'97 Versión 2.3	
Ranuras	Ranura PCI	X2	Ranura PCI	X2
	Ranura PCI Express x16	X1	Ranura PCI Express x16	X1
	Ranura PCI express x 1	X1	Ranura PCI express x 1	X1
Conectores en placa	Conector disco flexible	X1	Conector disco flexible	X1
	Conector Puerto de impresora	X1	Conector Puerto de impresora	X1
	Conector IDE	X2	Conector IDE	X2
	Conector SATA	X2	Conector SATA	X2
	Conector de panel frontal	X1	Conector de panel frontal	X1
	Conector de sonido frontal	X1	Conector de sonido frontal	X1
	Conector de entrada de CD	X1	Conector de entrada de CD	X1
	Conector de salida S/PDIF	X1	Conector de salida S/PDIF	X1
	Cabecera de ventilador de CPU	X1	Cabecera de ventilador de CPU	X1
	Cabecera de ventilador de sistema	X3	Cabecera de ventilador de sistema	X1
	Cabecera de chasis abierto (opcional)	X1	Cabecera de chasis abierto (opcional)	X1
	Cabecera de borrado de CMOS	X1	Cabecera de borrado de CMOS	X1
	Conector USB	X2	Conector USB	X2
	Conector de alimentación (24 patillas)	X1	Conector de alimentación (24 patillas)	X1
Conector de alimentación (4 patillas)	X1	Conector de alimentación (4 patillas)	X1	
Panel trasero de E/S	Teclado PS/2	X1	Teclado PS/2	X1
	Ratón PS/2	X1	Ratón PS/2	X1
	Puerto serie	X1	Puerto serie	X1
	Puerto VGA	X1	Puerto VGA	X1
	Puerto de red local	X1	Puerto de red local	X1
	Puerto USB	X4	Puerto USB	X4
Conector de sonido	X6	Conector de sonido	X3	
Tamaño de la placa	244 mm. (A) X 244 Mm. (H)		210mm. (A) X 244 Mm. (H)	
Funciones especiales	NVIDIA nTunes Admite RAID 0 / 1		NVIDIA nTunes Admite RAID 0 / 1	
Soporte de sistema operativo	Windows 2K / XP Bióstar se reserva el derecho de añadir o retirar el soporte de cualquier SO con o sin aviso previo.		Windows 2K / XP Bióstar se reserva el derecho de añadir o retirar el soporte de cualquier SO con o sin aviso previo.	

**PORTUGUESE**

	Ver 3.x	Ver 1.x
CPU	Socket AM2 Processadores AMD Athlon 64 / Athlon 64 FX / Sempron A arquitetura AMD 64 permite uma computação de 32 e 64 bits Suporta as tecnologias Hyper Transport e Cool'nQuiet	Socket AM2 Processadores AMD Athlon 64 / Athlon 64 FX / Sempron A arquitetura AMD 64 permite uma computação de 32 e 64 bits Suporta as tecnologias Hyper Transport e Cool'nQuiet
FSB	Suporta a tecnologia HyperTransport com uma largura de banda até 1000MHz	Suporta a tecnologia HyperTransport com uma largura de banda até 1000MHz
Chipset	GeForce 6100 nForce 410	GeForce 6100 nForce 410
Placa gráfica	Integrada no chipset GeForce 6100 Memória de vídeo máxima partilhada: 256 MB	Integrada no chipset GeForce 6100 Memória de vídeo máxima partilhada: 256 MB
Especificação do Super I/O	ITE 8712F / 8716F Proporciona as funcionalidades mais utilizadas em termos da especificação Super I/O. Interface LPC (Low Pin Count). Iniciativas para controlo do ambiente Monitorização do hardware Controlador da velocidade da ventoinha Função "Smart Guardian" da ITE	ITE 8712F / 8716F Proporciona as funcionalidades mais utilizadas em termos da especificação Super I/O. Interface LPC (Low Pin Count). Iniciativas para controlo do ambiente Monitorização do hardware Controlador da velocidade da ventoinha Função "Smart Guardian" da ITE
Memória principal	Ranuras DIMM DDR2 x 4 Cada módulo DIMM suporta uma memória DDR2 de 256/512 MB & 1 GB Capacidade máxima de memória: 4 GB Módulo de memória DDR2 de canal duplo Suporta módulos DDR2 400 / 533 / 667 / 800 Os módulos DIMM registados e os DIMM ECC não são suportados	Ranuras DIMM DDR2 x 4 Cada módulo DIMM suporta uma memória DDR2 de 256/512 MB & 1 GB Capacidade máxima de memória: 4 GB Módulo de memória DDR2 de canal duplo Suporta módulos DDR2 400 / 533 / 667 / 800 Os módulos DIMM registados e os DIMM ECC não são suportados
IDE	Controlador IDE integrado Modo Bus master Ultra DMA 33 / 66 / 100 / 133 Suporta o modo PIO 0~4,	Controlador IDE integrado Modo Bus master Ultra DMA 33 / 66 / 100 / 133 Suporta o modo PIO 0~4,
SATA II	Controlador Serial ATA integrado Velocidades de transmissão de dados até 3 Gb/s. Compatibilidade com a especificação SATA versão 2.0.	Controlador Serial ATA integrado Velocidades de transmissão de dados até 3 Gb/s. Compatibilidade com a especificação SATA versão 2.0.
LAN	Realtek 8100C Auto negociação de 10 / 100Mb/s	Realtek 8201CL PHY Auto negociação de 10 / 100Mb/s



	Ver 3.x	Ver 1.x
Codec de som	ALC 850 Saída de áudio de 8 canais AC'97 Versão 2.3	ALC 655 / 658 (opcional) Saída de áudio de 6 canais AC'97 Versão 2.3
Ranhuras	Ranhura PCI x2 Ranhura PCI Express x16 x1 Ranhura PCI Express x 1 x1	Ranhura PCI x2 Ranhura PCI Express x16 x1 Ranhura PCI Express x 1 x1
Conectores na placa	Conector da unidade de disquetes x1 Conector da para impressora x1 Conector IDE x2 Conector SATA x2 Conector do painel frontal x1 Conector de áudio frontal x1 Conector para entrada de CDs x1 Conector de saída S/PDIF x1 Conector da ventoinha da CPU x1 Conector da ventoinha do sistema x3 Conector para detecção da abertura do chassis (opcional) x1 Conector para limpeza do CMOS x1 Conector USB x2 Conector de alimentação (24 pinos) x1 Conector de alimentação (4 pinos) x1	Conector da unidade de disquetes x1 Conector da para impressora x1 Conector IDE x2 Conector SATA x2 Conector do painel frontal x1 Conector de áudio frontal x1 Conector para entrada de CDs x1 Conector de saída S/PDIF x1 Conector da ventoinha da CPU x1 Conector da ventoinha do sistema x1 Conector para detecção da abertura do chassis (opcional) x1 Conector para limpeza do CMOS x1 Conector USB x2 Conector de alimentação (24 pinos) x1 Conector de alimentação (4 pinos) x1
Entradas/Saídas no painel traseiro	Teclado PS/2 x1 Rato PS/2 x1 Porta série x1 Porta VGA x1 Porta LAN x1 Porta USB x4 Tomada de áudio x6	Teclado PS/2 x1 Rato PS/2 x1 Porta série x1 Porta VGA x1 Porta LAN x1 Porta USB x4 Tomada de áudio x3
Tamanho da placa	244 mm (L) X 244 mm (A)	210 mm (L) X 244 mm (A)
Características especiais	nTunes da NVIDIA Suporta as funções RAID 0 / 1	nTunes da NVIDIA Suporta as funções RAID 0 / 1
Sistemas operativos suportados	Windows 2K / XP A Biostar reserva-se o direito de adicionar ou remover suporte para qualquer sistema operativo com ou sem aviso prévio.	Windows 2K / XP A Biostar reserva-se o direito de adicionar ou remover suporte para qualquer sistema operativo com ou sem aviso prévio.

**POLISH**

	Ver 3.x	Ver 1.x
Procesor	Socket AM2 AMDAthlon 64 / Athlon 64 FX / Sempron Procesory Architektura AMD 64 umożliwia przetwarzanie 32 i 64 bitowe Obsługa Hyper Transport oraz Cool'n'Quiet	Socket AM2 AMDAthlon 64 / Athlon 64 FX / Sempron Procesory Architektura AMD 64 umożliwia przetwarzanie 32 i 64 bitowe Obsługa Hyper Transport oraz Cool'n'Quiet
FSB	Obsługa HyperTransport oszerokości pasma do 1000 MHz	Obsługa HyperTransport oszerokości pasma do 1000 MHz
Chipset	GeForce 6100 nForce 410	GeForce 6100 nForce 410
Grafika	Zintegrowana w chipsecie GeForce 6100 Maks. wielkość współdzielonej pamięci video wynosi 256MB	Zintegrowana w chipsecie GeForce 6100 Maks. wielkość współdzielonej pamięci video wynosi 256MB
Pamięć główna	Gniazda DDR2 DIMM x 4 Każde gniazdo DIMM obsługuje moduły 256/512MB oraz 1GB DDR2 Maks. wielkość pamięci 4GB Moduł pamięci DDR2 z trybem podwójnego kanału Obsługa DDR2 400 / 533 / 667 / 800 Brak obsługi Registered DIMM oraz ECC DIMM	Gniazda DDR2 DIMM x 4 Każde gniazdo DIMM obsługuje moduły 256/512MB oraz 1GB DDR2 Maks. wielkość pamięci 4GB Moduł pamięci DDR2 z trybem podwójnego kanału Obsługa DDR2 400 / 533 / 667 / 800 Brak obsługi Registered DIMM oraz ECC DIMM
Super I/O	ITE 8712F / 8716F Zapewnia najbardziej powszechne funkcje Super I/O. Interfejs Low Pin Court Funkcje kontroli warunków pracy, Monitor H/W Kontroler prędkości wentylatora Funkcja ITE "Smart Guardian"	ITE 8712F / 8716F Zapewnia najbardziej powszechne funkcje Super I/O. Interfejs Low Pin Court Funkcje kontroli warunków pracy, Monitor H/W Kontroler prędkości wentylatora Funkcja ITE "Smart Guardian"
IDE	Zintegrowany kontroler IDE Ultra DMA 33 / 66 / 100 / 133 Tryb Bus Master obsługa PIO tryb 0~4,	Zintegrowany kontroler IDE Ultra DMA 33 / 66 / 100 / 133 Tryb Bus Master obsługa PIO tryb 0~4,
SATA II	Zintegrowany kontroler Serial ATA Transfer danych do 3 Gb/s. Zgodność ze specyfikacją SATA w wersji 2.0.	Zintegrowany kontroler Serial ATA Transfer danych do 3 Gb/s. Zgodność ze specyfikacją SATA w wersji 2.0.
LAN	Realtek 8100C 10 / 100 Mb/s z automatyczną negocjacją szybkości	Realtek 8201CL PHY 10 / 100 Mb/s z automatyczną negocjacją szybkości

## GeForce 6 100 AM2

	Ver 3.x	Ver 1.x
Kodek dźwiękowy	ALC 850 8 kanałowe wyjście audio AC'97 w wersji 2.3	ALC 655 / 658 (opcja) 6 kanałowe wyjście audio AC'97 w wersji 2.3
Gniazda	Gniazdo PCI x2 Gniazdo PCI Express x16 x1 Gniazdo PCI Express x 1 x1	Gniazdo PCI x2 Gniazdo PCI Express x16 x1 Gniazdo PCI Express x 1 x1
Złącza wbudowane	Złącze napędu dyskiętek x1 Złącze Port drukarki x1 Złącze IDE x2 Złącze SATA x2 Złącze panela przedniego x1 Przednie złącze audio x1 Złącze wejścia CD x1 Złącze wyjścia S/PDIF x1 Złącze głośnikowe wentylatora procesora x1 Złącze głośnikowe wentylatora systemowego x3 Złącze głośnikowe otwarcia obudowy (opcja) x1 Złącze głośnikowe kasowania CMOS x1 Złącze USB x2 Złącze zasilania (24 pinowe) x1 Złącze zasilania (4 pinowe) x1	Złącze napędu dyskiętek x1 Złącze Port drukarki x1 Złącze IDE x2 Złącze SATA x2 Złącze panela przedniego x1 Przednie złącze audio x1 Złącze wejścia CD x1 Złącze wyjścia S/PDIF x1 Złącze głośnikowe wentylatora procesora x1 Złącze głośnikowe wentylatora systemowego x1 Złącze głośnikowe otwarcia obudowy (opcja) x1 Złącze głośnikowe kasowania CMOS x1 Złącze USB x2 Złącze zasilania (24 pinowe) x1 Złącze zasilania (4 pinowe) x1
Back Panel I/O	Klawiatura PS/2 x1 Mysz PS/2 x1 Port szeregowy x1 Port VGA x1 Port LAN x1 Port USB x4 Gniazdo audio x6	Klawiatura PS/2 x1 Mysz PS/2 x1 Port szeregowy x1 Port VGA x1 Port LAN x1 Port USB x4 Gniazdo audio x3
Wymiary płyty	244 mm (S) X 244 mm (W)	210 mm (S) X 244 mm (W)
Funkcje specjalne	NVIDIA nTunes. Obsługa RAID 0 / 1	NVIDIA nTunes. Obsługa RAID 0 / 1
Obsługa systemu operacyjnego	Windows 2K / XP Biostar zastrzega sobie prawo dodawania lub odwoływania obsługi dowolnego systemu operacyjnego bez powiadomienia.	Windows 2K / XP Biostar zastrzega sobie prawo dodawania lub odwoływania obsługi dowolnego systemu operacyjnego bez powiadomienia.

## RUSSIAN

	Ver 3.x	Ver 1.x
CPU (центральный процессор)	Гнездо AM2 Процессоры AMD Athlon 64 / Athlon 64 FX / Sempron Архитектура AMD 64 разрешает обработку данных на 32 и 64 бит Поддержка Hyper Transport и Cool'nQuiet	Гнездо AM2 Процессоры AMD Athlon 64 / Athlon 64 FX / Sempron Архитектура AMD 64 разрешает обработку данных на 32 и 64 бит Поддержка Hyper Transport и Cool'nQuiet
FSB	Поддержка HyperTransport с пропускной способностью до 1000 МГц	Поддержка HyperTransport с пропускной способностью до 1000 МГц
Набор микросхем	GeForce 6100 nForce 410	GeForce 6100 nForce 410
Графика	Встроенная в набор микросхем GeForce 6100 Максимальная совместно используемая видеопамять составляет 256 МБ	Встроенная в набор микросхем GeForce 6100 Максимальная совместно используемая видеопамять составляет 256 МБ
Основная память	Слоты DDR2 DIMM x 4 Каждый модуль DIMM поддерживает 256/512 МБ & 1 ГБ DDR2 Максимальная ёмкость памяти 4 ГБ Модуль памяти с двухканальным режимом DDR2 Поддержка DDR2 400 / 533 / 667 / 800 Не поддерживает зарегистрированные модули DIMM and ECC DIMM	Слоты DDR2 DIMM x 4 Каждый модуль DIMM поддерживает 256/512 МБ & 1 ГБ DDR2 Максимальная ёмкость памяти 4 ГБ Модуль памяти с двухканальным режимом DDR2 Поддержка DDR2 400 / 533 / 667 / 800 Не поддерживает зарегистрированные модули DIMM and ECC DIMM
Super I/O	ITE 8712F / 8716F Обеспечивает наиболее используемые действующие функциональные возможности Super I/O. Интерфейс с низким количеством выводов Инициативы по охране окружающей среды, Аппаратный монитор Регулятор скорости Функция ITE "Smart Guardian" (Интеллектуальная защита)	ITE 8712F / 8716F Обеспечивает наиболее используемые действующие функциональные возможности Super I/O. Интерфейс с низким количеством выводов Инициативы по охране окружающей среды, Аппаратный монитор Регулятор скорости Функция ITE "Smart Guardian" (Интеллектуальная защита)
IDE	Встроенное устройство управления встроенными интерфейсами устройств Режим "хвояина" шины Ultra DMA 33 / 66 / 100 / 133 Поддержка режима PIO 0~4,	Встроенное устройство управления встроенными интерфейсами устройств Режим "хвояина" шины Ultra DMA 33 / 66 / 100 / 133 Поддержка режима PIO 0~4,
SATA II	Встроенное последовательное устройство управления ATA скорость передачи данных до 3 гигабит/с. Соответствие спецификации SATA версия 2.0.	Встроенное последовательное устройство управления ATA скорость передачи данных до 3 гигабит/с. Соответствие спецификации SATA версия 2.0.
Локальная сеть	Realtek 8100C Автоматическое согласование 10 / 100 Мб/с	Realtek 8201CL PHY Автоматическое согласование 10 / 100 Мб/с

## GeForce 6 100 AM2

	Ver 3.x	Ver 1.x
Звуковой кодек	ALC850 Восьмиканальный звуковой выход AC'97 Версия 2.3	ALC 655 / 658 (дополнительно) Шестиканальный звуковой выход AC'97 Версия 2.3
Слоты	Слот PCI x2 Слот PCI Express x16 x1 Слот PCI Express x 1 x1	Слот PCI x2 Слот PCI Express x16 x1 Слот PCI Express x 1 x1
Встроенный разъём	Разъём НГМД x1 Разъём Порт подключения принтера x1 Разъём IDE x2 Разъём SATA x2 Разъём на лицевой панели x1 Входной звуковой разъём x1 Разъём ввода для CD x1 Разъём вывода для S/PDIF x1 Контактирующее приспособление вентилятора центрального процессора x1 Контактирующее приспособление вентилятора системы x3 Шасси открытого контактирующего приспособления (дополнительно) x1 Открытое контактирующее приспособление CMOS x1 USB-разъём x2 Разъём питания (24 вывод) x1 Разъём питания (4 вывод) x1	Разъём НГМД x1 Разъём Порт подключения принтера x1 Разъём IDE x2 Разъём SATA x2 Разъём на лицевой панели x1 Входной звуковой разъём x1 Разъём ввода для CD x1 Разъём вывода для S/PDIF x1 Контактирующее приспособление вентилятора центрального процессора x1 Контактирующее приспособление вентилятора системы x1 Шасси открытого контактирующего приспособления (дополнительно) x1 Открытое контактирующее приспособление CMOS x1 USB-разъём x2 Разъём питания (24 вывод) x1 Разъём питания (4 вывод) x1
Задняя панель средств ввода-вывода	Клавиатура PS/2 x1 Мышь PS/2 x1 Последовательный порт x1 Порт VGA x1 Порт LAN x1 USB-порт x4 Гнездо для подключения наушников x6	Клавиатура PS/2 x1 Мышь PS/2 x1 Последовательный порт x1 Порт VGA x1 Порт LAN x1 USB-порт x4 Гнездо для подключения наушников x3
Размер панели	244 мм (Ш) X 244мм (В)	210 мм (Ш) X 244мм (В)
Специальные технические характеристики	NVIDIA nTune Поддержка RAID 0/ 1	NVIDIA nTune Поддержка RAID 0/ 1
Поддержка OS	Windows 2K / XP Biostar сохраняет за собой право добавлять или удалять средства обеспечения для OS с или без предварительного уведомления.	Windows 2K / XP Biostar сохраняет за собой право добавлять или удалять средства обеспечения для OS с или без предварительного уведомления.

## ARABIC

Ver 1.x	Ver 3.x	
AM2 مقبس AMD Athlon 64 / Athlon 64 FX / Sempron معالجات إجراء العمليات لحاسوبية بسعة 32 و 64 بت AMD 64 تمكين تقنية Hyper Transport و Cod'n'Quiet تدعم تقنية	AM2 مقبس AMD Athlon 64 / Athlon 64 FX / Sempron معالجات إجراء العمليات لحاسوبية بسعة 32 و 64 بت AMD 64 تمكين تقنية Hyper Transport و Cod'n'Quiet تدعم تقنية	وحدة لمعالجة المركبة
تردد 1000 بتتردد يصل إلى Hyper Transport تدعم تقنية	تردد 1000 بتتردد يصل إلى Hyper Transport تدعم تقنية	النقل الأمامي لجيني
GeForce 6100 nForce 410	GeForce 6100 nForce 410	مجموعة لشرايح
GeForce 6100 منمجة في رقاق ميجا بايت 256 أقصى سعة لذاكرة لفيبرو لمشوكة	GeForce 6100 منمجة في رقاق ميجا بايت 256 أقصى سعة لذاكرة لفيبرو لمشوكة	بطاقة الرسوميات
4 عدد فتحة DDR2 DIMM ميجا 256/512 سعة DDR2 دعم ذاكرة من نوع DIMM تدعم كل فتحة بليت و 1 جيجا بايت سعة ذاكرة قصوى 4 جيجا بايت مزوجة لفتحة DDR2 وحدة ذاكرة 4 400 / 533 / 667 / 800 ساعات DDR2 تدعم الذاكرة من نوع ميجا بايت ECC ونك التي لا تتوافق مع DIMM لا تدعم رقائق الذاكرة	4 عدد فتحة DDR2 DIMM ميجا 256/512 سعة DDR2 دعم ذاكرة من نوع DIMM تدعم كل فتحة بليت و 1 جيجا بايت سعة ذاكرة قصوى 4 جيجا بايت مزوجة لفتحة DDR2 وحدة ذاكرة 4 400 / 533 / 667 / 800 ساعات DDR2 تدعم الذاكرة من نوع ميجا بايت ECC ونك التي لا تتوافق مع DIMM لا تدعم رقائق الذاكرة	الذاكرة الرئيسية
ITE 8712F / 8716F الأكثر لتخدلما، Super I/O يوفر وظيفة Low Pin Count Interface تدعم تقنية وسائل لتحكم في البيئة مراقب لمعومة حللة الأجهزة مراقب في سرعة لمروحة ITE من "Smart Guardian" وظيفة	ITE 8712F / 8716F الأكثر لتخدلما، Super I/O يوفر وظيفة Low Pin Count Interface تدعم تقنية وسائل لتحكم في البيئة مراقب لمعومة حللة الأجهزة مراقب في سرعة لمروحة ITE من "Smart Guardian" وظيفة	Super I/O
متكامل IDE متحكم Ultra DMA 33 / 66 / 100 / 133 نقل بتقنية وضع رئيسي PIO Mode 0~4 دعم وضع	متكامل IDE متحكم Ultra DMA 33 / 66 / 100 / 133 نقل بتقنية وضع رئيسي PIO Mode 0~4 دعم وضع	منفذ IDE
متكامل Serial ATA متحكم نقل البيانات بسرعات تصل إلى 3 جيجابت/ثانية. 2.0 الإصدار SATA مطابقة لمواصفات	متكامل Serial ATA متحكم نقل البيانات بسرعات تصل إلى 3 جيجابت/ثانية. 2.0 الإصدار SATA مطابقة لمواصفات	ATA IIS
Realtek 8201CL PHY تقويض قطني 100/10 ميجا بايت / ثمانية و 1 جيجا بت/ثانية	Realtek 8100C تقويض قطني 100/10 ميجا بايت / ثمانية و 1 جيجا بت/ثانية	شبكة داخلية

## GeForce 6 100 AM2

Ver 1.x		Ver 3.x		
ALC655 / 658 (اختياري) قنوات لخرج الصوت 6 AC'97 من 2.3 الإصدار		ALC850 قنوات لخرج الصوت 8 AC'97 من 2.3 الإصدار		كوديك الصوت
عدد 2 فتحة PCI		عدد 2 فتحة PCI		الفتحات
عدد 1 فتحة PCI Express x 16		عدد 1 فتحة PCI Express x 16		
عدد 1 فتحة PCI Express x 1		عدد 1 فتحة PCI Express x 1		
عدد 1 مقعد محرك أقراص مرنة		عدد 1 مقعد محرك أقراص مرنة		الغلاف على سطح اللوحة
عدد 1 مقعد طابعة		عدد 1 مقعد طابعة		
عدد 2 مقعد IDE		عدد 2 مقعد IDE		
عدد 2 مقعد SATA		عدد 2 مقعد SATA		
عدد 1 مقعد اللوحة الأممية		عدد 1 مقعد اللوحة الأممية		
عدد 1 مقعد الصوت الأممي		عدد 1 مقعد الصوت الأممي		
عدد 1 مقعد CD-IN		عدد 1 مقعد CD-IN		
عدد 1 مقعد خرج S/PDIF		عدد 1 مقعد خرج S/PDIF		
عدد 1 وصلة مروحة وحدة المعالجة المركزية		عدد 1 وصلة مروحة وحدة المعالجة المركزية		
عدد 1 وصلة مروحة للظلم		عدد 3 وصلة مروحة للظلم		
عدد 1 وصلة فتح الهيكل (اختياري)		عدد 1 وصلة فتح الهيكل (اختياري)		
عدد 1 وصلة مسح CMOS		عدد 1 وصلة مسح CMOS		
عدد 2 مقعد USB		عدد 2 مقعد USB		
عدد 1 مقعد توصيل الطاقة (24دوس)		عدد 1 مقعد توصيل الطاقة (24دوس)		
عدد 1 مقعد توصيل الطاقة (4دبليس)		عدد 1 مقعد توصيل الطاقة (4دبليس)		
عدد 1 لوحة مفاتيح PS/2		عدد 1 لوحة مفاتيح PS/2		منافذ دخل/خرج اللوحة الخلفية
عدد 1 مؤس PS/2		عدد 1 مؤس PS/2		
عدد 1 مقعد تسلسلي		عدد 1 مقعد تسلسلي		
عدد 1 مقعد VGA		عدد 1 مقعد VGA		
عدد 1 مقعد شبكة لتصل محلية		عدد 1 مقعد شبكة لتصل محلية		
عدد 4 منافذ USB		عدد 4 منافذ USB		
عدد 3 مقيس صوت		عدد 6 مقيس صوت		
NVIDIA nTune RAID 0 / 1 تدعم تقنية		NVIDIA nTune RAID 0 / 1 تدعم تقنية		مزايا خاصة
210مم (عرض) X 244مم (ارتفاع)		244مم (عرض) X 244مم (ارتفاع)		حجم اللوحة
Windows 2K / XP بخطها في نسخة أو إزالة دعم لتي نظام تشغيل باخطل أو Biostar تحفظ بيون إخطل.		Windows 2K / XP بخطها في نسخة أو إزالة دعم لتي نظام تشغيل باخطل أو Biostar تحفظ بيون إخطل.		دعم أنظمة تشغيل

## JAPANESE

	Ver 3.x	Ver 1.x
CPU	Socket AM2 AMDAthlon 64 / Athlon 64 FX / Sempron プロセッサ AMD 64アーキテクチャでは、32ビットと64ビット計算が可能です ハイパートランスポートとクールアンドクワイアットをサポートします	Socket AM2 AMDAthlon 64 / Athlon 64 FX / Sempron プロセッサ AMD 64アーキテクチャでは、32ビットと64ビット計算が可能です ハイパートランスポートとクールアンドクワイアットをサポートします
FSB	1000 MHz のバンド幅までハイパートランスポートをサポートします	1000 MHz のバンド幅までハイパートランスポートをサポートします
チップセット	GeForce 6100 nForce 410	GeForce 6100 nForce 410
グラフィックス	GeForce 6100 チップセットに統合 最大の共有ビデオメモリは256MBです	GeForce 6100 チップセットに統合 最大の共有ビデオメモリは256MBです
メインメモリ	DDR2 DIMMスロット x 4 各DIMMは 256/512MB & 1GB DDR2をサポート 最大メモリ容量4GB デュアル チャンネルモードDDR2メモリモジュール DDR2 400 / 533 / 667 / 800をサポート 登録済みDIMMとECC DIMMはサポートされません	DDR2 DIMMスロット x 4 各DIMMは 256/512MB & 1GB DDR2をサポート 最大メモリ容量4GB デュアル チャンネルモードDDR2メモリモジュール DDR2 400 / 533 / 667 / 800をサポート 登録済みDIMMとECC DIMMはサポートされません
Super I/O	ITE 8712F / 8716F もっとも一般に使用されるレガシーSuper I/O機能を採用しています。 低ピンカウントインターフェイス 環境コントロールインシニアチップ、 H/Wモニター ファン速度コントローラ / モニター ITEの「スマートガーディアン」機能	ITE 8712F / 8716F もっとも一般に使用されるレガシーSuper I/O機能を採用しています。 低ピンカウントインターフェイス 環境コントロールインシニアチップ、 H/Wモニター ファン速度コントローラ / モニター ITEの「スマートガーディアン」機能
IDE	統合IDEコントローラ Ultra DMA 33 / 66 / 100 / 133バスマスタモード PIO Mode 0~4のサポート、	統合IDEコントローラ Ultra DMA 33 / 66 / 100 / 133バスマスタモード PIO Mode 0~4のサポート、
SATA II	統合シリアルATAコントローラ 最高3 Gb/秒のデータ転送速度 SATAバージョン2.0仕様に準拠。	統合シリアルATAコントローラ 最高3 Gb/秒のデータ転送速度 SATAバージョン2.0仕様に準拠。
LAN	Realtek 8100C 10 / 100 Mb/秒および1Gb/秒のオートネゴシエーション	Realtek 8201CL PHY 10 / 100 Mb/秒および1Gb/秒のオートネゴシエーション



GeForce 6 100 AM2

	Ver 3.x	Ver 1.x
サウンド Codec	ALC850 8チャンネルオーディオアウト AC'97バージョン2.3	ALC 655 / 658 (オプション) 6チャンネルオーディオアウト AC'97バージョン2.3
スロット	PCIスロット x2 PCI Express x16スロット x1 PCI Express x 1スロット x1	PCIスロット x2 PCI Express x16スロット x1 PCI Express x 1スロット x1
オンボードコ ネクタ	フロッピーコネクタ x1 プリンタポートコネクタ x1 IDEコネクタ x2 SATAコネクタ x2 フロントパネルコネクタ x1 フロントオーディオコネクタ x1 CDインコネクタ x1 S/PDIFアウトコネクタ x1 CPUファンヘッダ x1 システムファンヘッダ x3 シャーシオープンヘッダ(オプション) x1 CMOS クリアヘッダ x1 USBコネクタ x2 電源コネクタ(24ピン) x1 電源コネクタ(4ピン) x1	フロッピーコネクタ x1 プリンタポートコネクタ x1 IDEコネクタ x2 SATAコネクタ x2 フロントパネルコネクタ x1 フロントオーディオコネクタ x1 CDインコネクタ x1 S/PDIFアウトコネクタ x1 CPUファンヘッダ x1 システムファンヘッダ x1 シャーシオープンヘッダ(オプション) x1 CMOS クリアヘッダ x1 USBコネクタ x2 電源コネクタ(24ピン) x1 電源コネクタ(4ピン) x1
背面パネル I/O	PS/2キーボード x1 PS/2マウス x1 シリアルポート x1 VGAポート x1 LANポート x1 USBポート x4 オーディオジャック x6	PS/2キーボード x1 PS/2マウス x1 シリアルポート x1 VGAポート x1 LANポート x1 USBポート x4 オーディオジャック x3
ボードサイズ	244 mm (幅) X 244 mm (高さ)	210 mm (幅) X 244 mm (高さ)
特殊機能	NVIDIA nTunes RAID 0 / 1 のサポート	NVIDIA nTunes RAID 0 / 1 のサポート
OSサポート	Windows 2K / XP Bicstarは事前のサポートなしにOSサポートを追加ま たは削除する権利を留保します。	Windows 2K / XP Bicstarは事前のサポートなしにOSサポートを追加ま たは削除する権利を留保します。

2006/10/19

# **GeForce 6100 AM2 BIOS Setup**

---

<b>1 BIOS Setup (Ver 3.x) .....</b>	<b>1</b>
<b>1.1 Main Menu .....</b>	<b>3</b>
<b>1.2 Standard CMOS Features .....</b>	<b>7</b>
<b>1.3 Advanced BIOS Features .....</b>	<b>9</b>
<b>1.4 Advanced Chipset Features.....</b>	<b>16</b>
<b>1.5 Integrated Peripherals.....</b>	<b>19</b>
<b>1.6 Power Management Setup .....</b>	<b>25</b>
<b>1.7 PnP/PCI Configurations.....</b>	<b>28</b>
<b>1.8 PC Health Status .....</b>	<b>31</b>
<b>1.9 Over Clock Navigator Engine.....</b>	<b>33</b>
<b>1.10 CMOS Reload Program(C.R.P.).....</b>	<b>39</b>
<b>2 BIOS Setup (Ver 1.x) .....</b>	<b>40</b>
<b>2.1 Main Menu .....</b>	<b>42</b>
<b>2.2 Standard CMOS Features.....</b>	<b>46</b>
<b>2.3 Advanced BIOS Features .....</b>	<b>48</b>
<b>2.4 Advanced Chipset Features.....</b>	<b>53</b>
<b>2.5 Integrated Peripherals.....</b>	<b>56</b>
<b>2.6 Power Management Setup .....</b>	<b>63</b>
<b>2.7 PnP/PCI Configurations.....</b>	<b>66</b>
<b>2.8 PC Health Status .....</b>	<b>69</b>
<b>2.9 Frequency/ Voltage Control .....</b>	<b>72</b>

# ***GeForce 6100 AM2 BIOS Setup***

---

## **1 BIOS Setup (Ver 3.x)**

### **Introduction**

The purpose of this manual is to describe the settings in the Award™ BIOS Setup program on this motherboard. The Setup program allows users to modify the basic system configuration and save these settings to CMOS RAM. The power of CMOS RAM is supplied by a battery so that it retains the Setup information when the power is turned off.

Basic Input-Output System (BIOS) determines what a computer can do without accessing programs from a disk. This system controls most of the input and output devices such as keyboard, mouse, serial ports and disk drives. BIOS activates at the first stage of the booting process, loading and executing the operating system. Some additional features, such as virus and password protection or chipset fine-tuning options are also included in BIOS.

The rest of this manual will guide you through the options and settings in BIOS Setup.

### **Plug and Play Support**

This AWARD BIOS supports the Plug and Play Version 1.0A specification and ESCD (Extended System Configuration Data) write.

### **EPA Green PC Support**

This AWARD BIOS supports Version 1.03 of the EPA Green PC specification.

### **APM Support**

This AWARD BIOS supports Version 1.1&1.2 of the Advanced Power Management (APM) specification. Power management features are implemented via the System Management Interrupt (SMI). Sleep and Suspend power management modes are supported. Power to the hard disk drives and video monitors can also be managed by this AWARD BIOS.

### **ACPI Support**

Award ACPI BIOS support Version 1.0 of Advanced Configuration and Power interface specification (ACPI). It provides ASL code for power management and device configuration capabilities as defined in the ACPI specification, developed by Microsoft, Intel and Toshiba.

# **GeForce 6100 AM2 BIOS Setup**

---

## **PCI Bus Support**

This AWARD BIOS also supports Version 2.1 of the Intel PCI (Peripheral Component Interconnect) local bus specification.

## **DRAM Support**

DDR SDRAM (Double Data Rate Synchronous DRAM) is supported.

## **Supported CPUs**

This AWARD BIOS supports the AMD CPU.

## **Using Setup**

Use the arrow keys to highlight items in most of the place, press <Enter> to select, use the <PgUp> and <PgDn> keys to change entries, press <F1> for help and press <Esc> to quit. The following table provides more detail about how to navigate in the Setup program by using the keyboard.

<b>Keystroke</b>	<b>Function</b>
Up arrow	Move to previous item
Down arrow	Move to next item
Left arrow	Move to the item on the left (menu bar)
Right arrow	Move to the item on the right (menu bar)
Move Enter	Move to the item you desired
PgUp key	Increase the numeric value or make changes
PgDn key	Decrease the numeric value or make changes
+ Key	Increase the numeric value or make changes
- Key	Decrease the numeric value or make changes
Esc key	Main Menu – Quit and not save changes into CMOS Status Page Setup Menu and Option Page Setup Menu – Exit Current page and return to Main Menu
F1 key	General help on Setup navigation keys
F5 key	Load previous values from CMOS
F7 key	Load the optimized defaults
F10 key	Save all the CMOS changes and exit

---

# GeForce 6100 AM2 BIOS Setup

---


## 1.1 Main Menu

Once you enter Award BIOS™ CMOS Setup Utility, the Main Menu will appear on the screen. The Main Menu allows you to select from several setup functions. Use the arrow keys to select among the items and press <Enter> to accept and enter the sub-menu.

**!! WARNING !!**

For better system performance, the BIOS firmware is being continuously updated. The BIOS information described in this manual (Figure 1, 2, 3, 4, 5, 6, 7, 8, 9) is for your reference only. The actual BIOS information and settings on board may be slightly different from this manual.

■ Figure 1: Main Menu

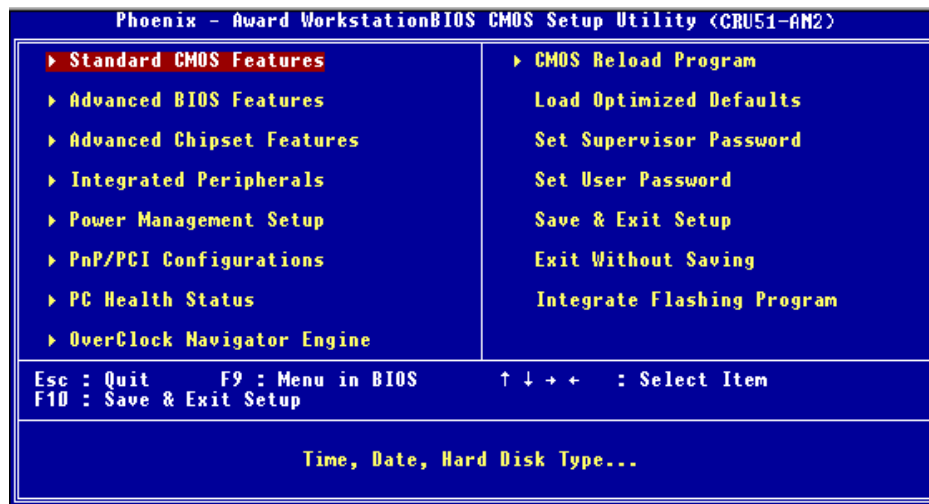

# ***GeForce 6100 AM2 BIOS Setup***

---

## **Standard CMOS Features**

This submenu contains industry standard configurable options.

## **Advanced BIOS Features**

This submenu allows you to configure advanced features of the BIOS.

## **Advanced Chipset Features**

This submenu allows you to configure special chipset features.

## **Integrated Peripherals**

This submenu allows you to configure certain IDE hard drive options and Programmed Input/ Output features.

## **Power Management Setup**

This submenu allows you to configure the power management features.

## **PnP/PCI Configurations**

This submenu allows you to configure certain “Plug and Play” and PCI options.

## **PC Health Status**

This submenu allows you to monitor the hardware of your system.

## **Frequency/ Voltage Control**

This submenu allows you to change CPU Vcore Voltage and CPU/PCI clock. (However, we suggest you to use the default setting. Changing the voltage and clock improperly may damage the CPU or M/B!)

# ***GeForce 6100 AM2 BIOS Setup***

---

## **Load Optimized Defaults**

This selection allows you to reload the BIOS when problem occurs during system booting sequence. These configurations are factory settings optimized for this system. A confirmation message will be displayed before defaults are set.

Load Optimized Defaults (Y/N)? N

## **Set Supervisor Password**

Setting the supervisor password will prohibit everyone except the supervisor from making changes using the CMOS Setup Utility. You will be prompted with to enter a password.

Enter Password:

## **Set User Password**

If the Supervisor Password is not set, then the User Password will function in the same way as the Supervisor Password. If the Supervisor Password is set and the User Password is set, the "User" will only be able to view configurations but will not be able to change them.

Enter Password:

## **Save & Exit Setup**

Save all configuration changes to CMOS (memory) and exit setup. Confirmation message will be displayed before proceeding.

SAVE to CMOS and EXIT (Y/N)? Y

## ***GeForce 6100 AM2 BIOS Setup***

---

### **Exit Without Saving**

Abandon all changes made during the current session and exit setup. Confirmation message will be displayed before proceeding.

Quit Without Saving (Y/N)? N

### **Upgrade BIOS**

This submenu allows you to upgrade bios.

BIOS UPDATE UTILITY (Y/N)? N




# GeForce 6100 AM2 BIOS Setup

## 1.2 Standard CMOS Features

The items in Standard CMOS Setup Menu are divided into several categories. Each category includes no, one or more than one setup items. Use the arrow keys to highlight the item and then use the <PgUp> or <PgDn> keys to select the value you want in each item.

■ **Figure 2: Standard CMOS Setup**

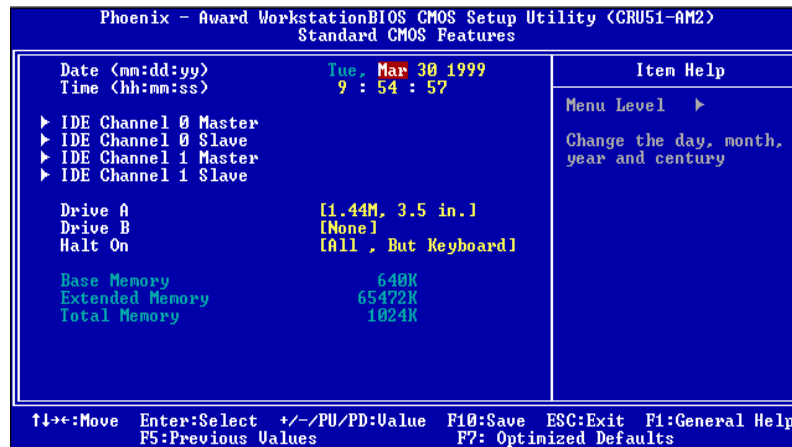

### Main Menu Selections

This table shows the items and the available options on the Main Menu.

Item	Options	Description
Date	mm : dd : yy	Set the system date. Note that the 'Day' automatically changes when you set the date.
Time	hh : mm : ss	Set the system internal clock.
IDE Primary Master	Options are in its sub menu.	Press <Enter> to enter the sub menu of detailed options
IDE Primary Slave	Options are in its sub menu.	Press <Enter> to enter the sub menu of detailed options.
IDE Secondary Master	Options are in its sub menu.	Press <Enter> to enter the sub menu of detailed options.

## **GeForce 6100 AM2 BIOS Setup**


---

<b>Item</b>	<b>Options</b>	<b>Description</b>
IDE Secondary Slave	Options are in its sub menu.	Press <Enter> to enter the sub menu of detailed options.
Drive A Drive B	360K, 5.25 in 1.2M, 5.25 in 720K, 3.5 in 1.44M, 3.5 in 2.88M, 3.5 in None	Select the type of floppy disk drive installed in your system.
Video	EGA/VGA CGA 40 CGA 80 MONO	Select the default video device.
Halt On	All Errors No Errors All, but Keyboard All, but Diskette All, but Disk/ Key	Select the situation in which you want the BIOS to stop the POST process and notify you.
Base Memory	N/A	Displays the amount of conventional memory detected during boot up.
Extended Memory	N/A	Displays the amount of extended memory detected during boot up.
Total Memory	N/A	Displays the total memory available in the system.

# GeForce 6100 AM2 BIOS Setup


## 1.3 Advanced BIOS Features

■ Figure 3: Advanced BIOS Setup

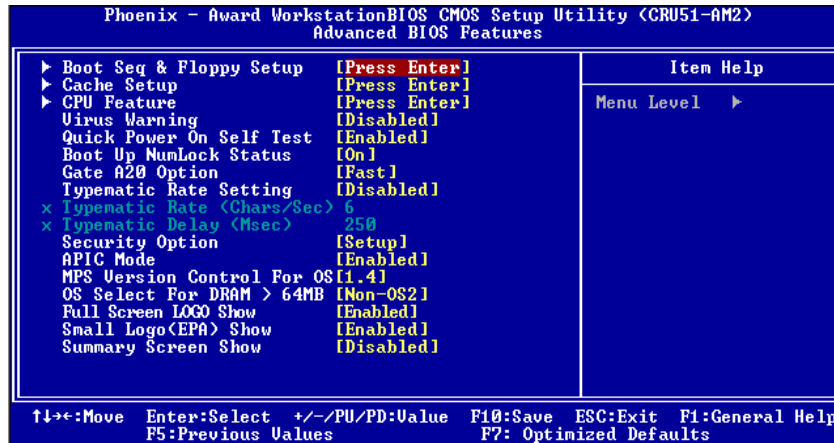

### Boot Seq & Floppy Setup


This item allows you to setup boot sequence & Floppy.

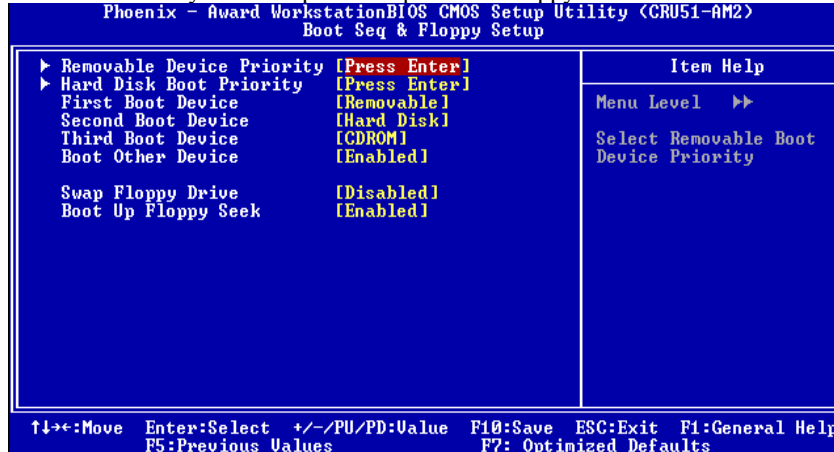

# GeForce 6100 AM2 BIOS Setup

## Removable Device Priority


Select Removable Boot Device Priority.

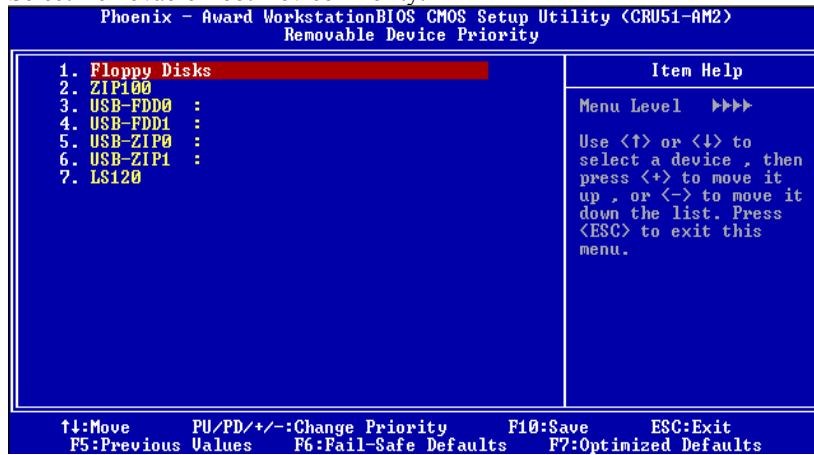

The Choices: Floppy Disks, Zip100, USB-FDD0, USB-FDD1, USB-ZIP0, USB-ZIP1, LS120.

## Hard Disk Boot Priority

The BIOS will attempt to arrange the Hard Disk boot sequence automatically. You can change the Hard Disk booting sequence here.

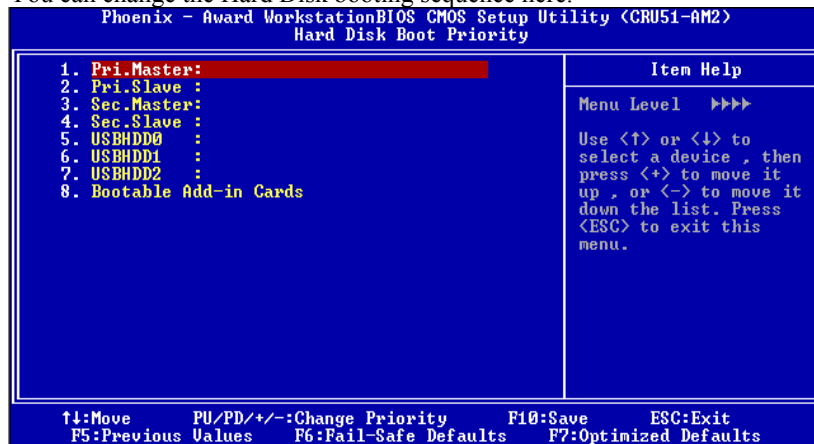

The Choices: Pri. Master, Pri. Slave, Sec. Master, Sec. Slave, USB HDD0, USB HDD1, USB HDD2, and Bootable Add-in Cards.

# GeForce 6100 AM2 BIOS Setup

---

## First/Second/Third Boot Device

The BIOS will attempt to load the operating system in this order.

**The Choices:** Floppy, LS120, HDD-0, SCSI, CDROM, HDD-1, HDD-2, HDD-3, ZIP100, LAN, HPT370, Disabled.

## Boot Other Device

When enabled, BIOS will try to load the operating system from other device when it failed to load from the three devices above.

**The Choices:** Enabled (default), Disabled

## Swap Floppy Drive

For systems with two floppy drives, this option allows you to swap logical drive assignments.


**The Choices:** Disabled (default), Enabled.

## Boot Up Floppy Seek

When enabled, System will test the floppy drives to determine if they have 40 or 80 tracks during boot up. Disabling this option reduces the time it takes to boot-up.

**The Choices:** Enabled (default), Disabled.

## Cache Setup

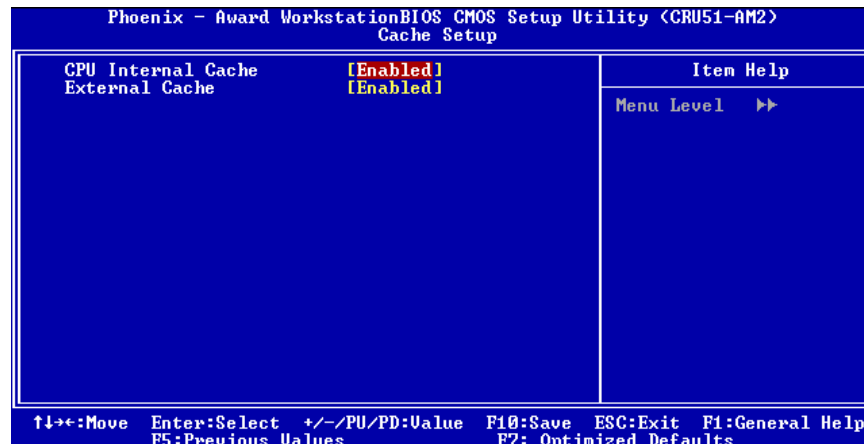

# GeForce 6100 AM2 BIOS Setup

---

## CPU Internal Cache

Depending on the CPU/chipset in use, you may be able to increase memory access time with this option.


- Enabled** (default) Enable cache.
- Disabled Disable cache.

## External Cache

This option enables or disables “Level 2” secondary cache on the CPU, which may improve performance.

- Enabled** (default) Enable cache.
- Disabled Disable cache.

## CPU Feature

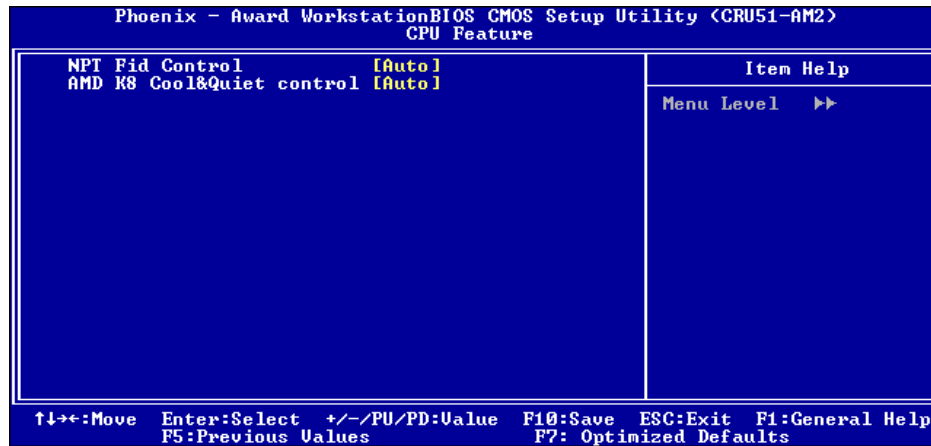

## NPT Fid Control

The Choices: Auto (default), x4 800, x5 1000, x6 1200, x7 1400, x8 1600, x9 1800, x10 2000.

## AMD K8 Cool&Quiet control

The Choices: Auto (default).

# **GeForce 6100 AM2 BIOS Setup**

---

## **Virus Warning**

This option allows you to choose the VIRUS Warning feature that is used to protect the IDE Hard Disk boot sector. If this function is enabled and an attempt is made to write to the boot sector, BIOS will display a warning message on the screen and sound an alarm beep.

**Disabled** (default) Virus protection is disabled.  
Enabled Virus protection is activated.

## **Quick Power On Self Test**

Enabling this option will cause an abridged version of the Power On Self-Test (POST) to execute after you power up the computer.

Disabled Normal POST.  
**Enabled** (default) Enable quick POST.

## **Boot Up NumLock Status**

Selects the NumLock State after the system switched on.

The Choices:

**On** (default) Numpad is number keys.  
Off Numpad is arrow keys.

## **Gate A20 Option**

Select if chipset or keyboard controller should control Gate A20.

Normal A pin in the keyboard controller controls GateA20.

**Fast** (default) Lets chipset control Gate A20.

## **Typematic Rate Setting**

When a key is held down, the keystroke will repeat at a rate determined by the keyboard controller. When enabled, the typematic rate and typematic delay can be configured.

**The Choices:** Disabled (default), Enabled.

## **Typematic Rate (Chars/Sec)**

Sets the rate at which a keystroke is repeated when you hold the key down.

**The Choices:** 6 (default), 8, 10, 12, 15, 20, 24, 30.

# ***GeForce 6100 AM2 BIOS Setup***

---

## **Typematic Delay (Msec)**

Sets the delay time after the key is held down before it begins to repeat the keystroke.

**The Choices:** 250 (default), 500, 750, 1000.

## **Security Option**

This option will enable only individuals with passwords to bring the system online and/or to use the CMOS Setup Utility.

**System:** A password is required for the system to boot and is also required to access the Setup Utility.

**Setup (default):** A password is required to access the Setup Utility only. This will only apply if passwords are set from the Setup main menu.

## **APIC MODE**

Selecting Enabled enables APIC device mode reporting from the BIOS to the operating system.

**The Choices:** Enabled (default), Disabled.

## **MPS Version Control For OS**

The BIOS supports version 1.1 and 1.4 of the Intel multiprocessor specification. Select version supported by the operation system running on this computer.

**The Choices:** 1.4 (default), 1.1.

## **OS Select For DRAM > 64MB**

A choice other than Non-OS2 is only used for OS2 systems with memory exceeding 64MB.

**The Choices:** Non-OS2 (default), OS2.

## **Small Logo(EPA) Show**

This item allows you to select whether the “Small Logo” shows. Enabled (default) “Small Logo” shows when system boots up. Disabled No “Small Logo” shows when system boots

**The Choices:** Enabled (default), Disabled



## ***GeForce 6100 AM2 BIOS Setup***

---

### **Summary Screen Show**

This item allows you to enable/disable the summary screen. Summary screen means system configuration and PCI device listing.


**The Choices:** **Disabled** (default), Enabled.

# GeForce 6100 AM2 BIOS Setup

## 1.4 Advanced Chipset Features

This submenu allows you to configure the specific features of the chipset installed on your system. This chipset manage bus speeds and access to system memory resources, such as DRAM. It also coordinates communications with the PCI bus. The default settings that came with your system have been optimized and therefore should not be changed unless you are suspicious that the settings have been changed incorrectly.

### ■ Figure 4. Advanced Chipset Setup

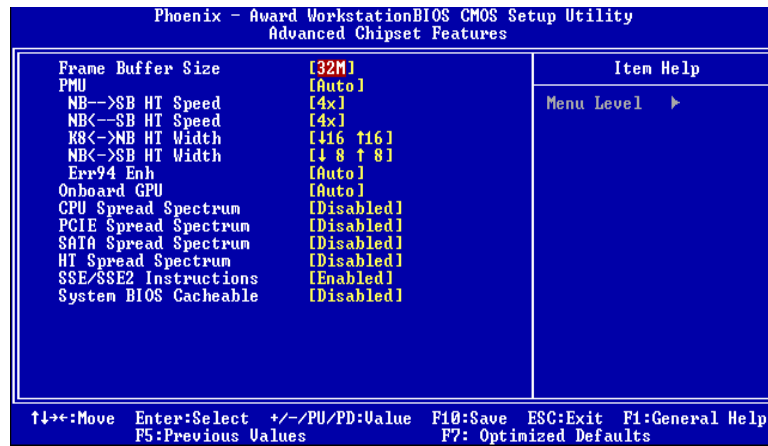

### Frame Buffer Size

The Choices: 32M (default), 16M, 64M, 128M, Disabled.

### PMU

The Choices: Auto (default), Disabled.

### NB-->SB HT Speed

The Choices: 4X (default).1X, 2X, 3X, 5X.

### NB<--SB HT Speed

The Choices: 4X (default).1X, 2X, 3X, 5X.

# ***GeForce 6100 AM2 BIOS Setup***

---

## **K8<->NB HT Width**

The Choices: ↓ 16 ↑ 16 (default), ↓ 8 ↑ 8.

## **NB<->SB HT Width**

The Choices: ↓ 8 ↑ 8 (default), ↓ 16 ↑ 16.

## **Err94 Enh**

This item allows you to enable/disable the “sequential Prefetch Feature” of K8 CPU.

The Choices: **Auto** (default), Disabled.

## **Onboard GPU**

The Choices: **Auto** (default), Always Enable.

## **CPU Spread Spectrum**

The Choices: **Disabled** (default), Center, Down.

## **PCIE Spread Spectrum**

This item allows you to disable \ enable the SATA spread spectrum function.

The Choices: **Disabled** (default), Enabled.

## **SATA Spread Spectrum**

This item allows you to disable \ enable the SATA spread spectrum function.

The Choices: **Disabled** (default), Enabled.

## **HT Spread Spectrum**

The Choices: **Disabled** (default), Center, Down.

## **SSE/SSE2 Instructions**

The Choices: **Enabled** (default), Disabled.

## ***GeForce 6100 AM2 BIOS Setup***

---

### **System BIOS Cacheable**


Selecting the “Disabled ” option allows caching of the system BIOS ROM at F0000h-FFFFFh which can improve system performance. However, any programs writing to this area of memory will cause conflicts and result in system errors.

**The Choices:** **Disabled** (default), Enabled.

# GeForce 6100 AM2 BIOS Setup


## 1.5 Integrated Peripherals

■ Figure 5. Integrated Peripherals

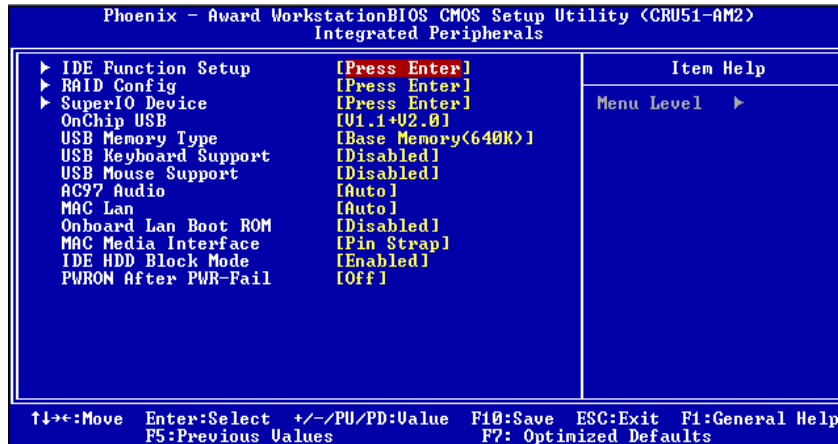

### IDE Function Setup

Highlight the “Press Enter” label next to the “VIA OnChip IDE Device” label and press enter key will take you a submenu with the following options:

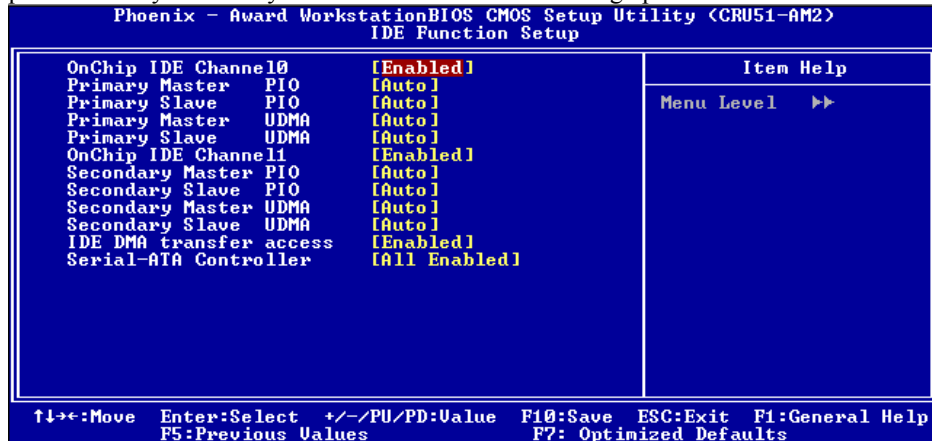

# **GeForce 6100 AM2 BIOS Setup**

---

## **On-chip IDE Channel 0/1**

The motherboard chipset contains a PCI IDE interface with support for two IDE channels. Select “Enabled” to activate the first and/or second IDE interface. Select “Disabled” to deactivate an interface if you are going to install a primary and/or secondary add-in IDE interface.

**The Choices:** Enabled (default), Disabled.

## **IDE Primary/Secondary/Master/Slave PIO**

The IDE PIO (Programmed Input / Output) fields let you set a PIO mode (0-4) for each of the IDE devices that the onboard IDE interface supports. Modes 0 to 4 will increase performance progressively. In Auto mode, the system automatically determines the best mode for each device.

**The Choices:** Auto (default), Mode0, Mode1, Mode2, Mode3, Mode4.

## **IDE Primary/Secondary/Master/Slave UDMA**

Ultra DMA function can be implemented if it is supported by the IDE hard drives in your system. As well, your operating environment requires a DMA driver (Windows 95 or OSR2 may need a third party IDE bus master driver). If your hard drive and your system software both support Ultra DMA, select Auto to enable BIOS support.

**The Choices:** Auto (default), Disabled.

## **IDE DMA Transfer Access**

This item allows you to enable or disable the IDE DMA transfer access.


**The Choices:** Enabled (default), Disabled.

## **Serial-ATA Controller**

**The Choices:** All Enabled (default).

# GeForce 6100 AM2 BIOS Setup

## RAID Config

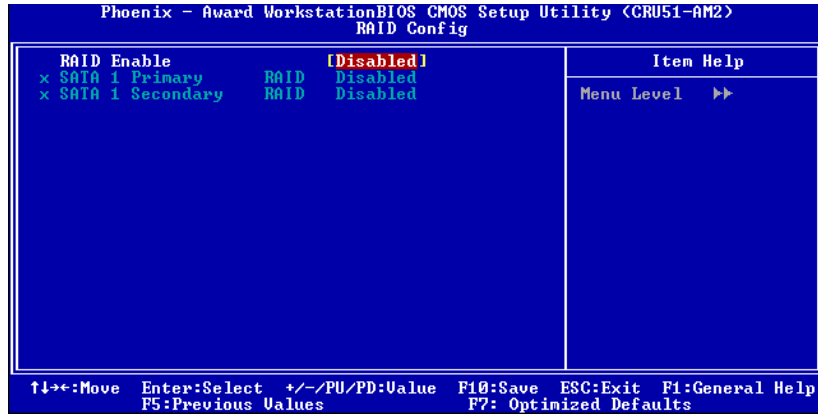

### RAID Enable

This option allows you to enable or disable RAID function.

The Choices: Disabled (default), Enabled.


### SATA 1/2 Primary/Secondary RAID

This option allows you to enable or disable SATA A Primary/Secondary RAID.

The Choices: Disabled (default), Enabled.

## Super IO Device

Press Enter to configure the Super I/O Device.

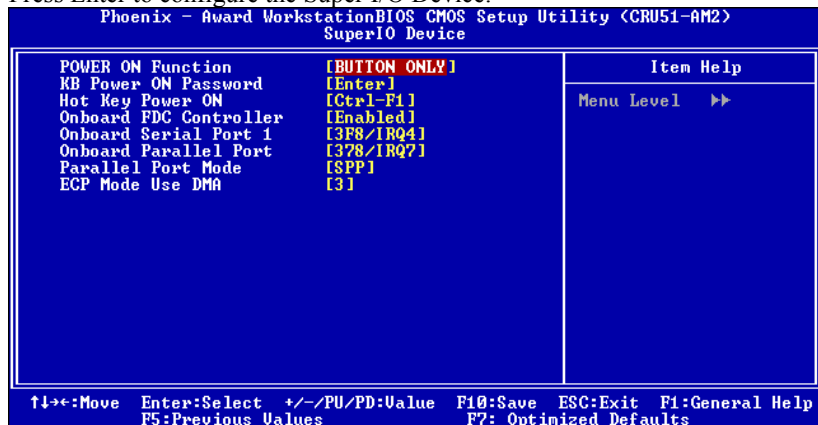

---

# GeForce 6100 AM2 BIOS Setup

---

## Power On Function

This item allows you to choose the power on method.

**The Choices:** **Button Only** (default), Password, Hot Key, Mouse Left, Mouse Right, Any Key, Keyboard 98.

## KB Power on Password

Input password and press Enter to set the Keyboard power on password.

## HOT Key power ON

Choose the Hot Key combination to boot up the system.

**The Choices:** **Ctrl-F1** (default), Ctrl-F2, Ctrl-F3, Ctrl-F4, Ctrl-F5, Ctrl-F6, Ctrl-F7, Ctrl-F8, Ctrl-F9, Ctrl-F10, Ctrl-F11, Ctrl-F12.

## Onboard FDC Controller

Select enabled if your system has a floppy disk controller (FDC) installed on the system board and you wish to use it. If you installed another FDC or the system uses no floppy drive, select disabled in this field.

**The Choices:** **Enabled** (default), Disabled.

## Onboard Serial Port 1

Select an address and corresponding interrupt for the first and second serial ports.

**The Choices:** **3F8/IRQ4** (default), Disabled, 2F8/IRQ3, 3E8/IRQ4, 2E8/IRQ3, Auto.

## Onboard Parallel Port

This item allows you to determine access onboard parallel port controller with which I/O Address.

**The Choices:** **378/IRQ7** (default), 278/IRQ5, 3BC/IRQ7, Disabled.

## Parallel Port Mode

This item allows you to determine how the parallel port should function. The default value is SPP.

**The Choices:**

<b>SPP</b> (default)	Using Parallel port as Standard Printer Port.
<b>EPP</b>	Using Parallel Port as Enhanced Parallel Port.
<b>ECP</b>	Using Parallel port as Extended Capabilities Port.
<b>ECP+EPP</b>	Using Parallel port as ECP & EPP mode.

## ECP Mode Use DMA

Select a DMA Channel for the port.

**The Choices:** **3** (default), 1.



# ***GeForce 6100 AM2 BIOS Setup***

---

## **OnChip USB**

This option should be enabled if your system has a USB installed on the system board. You may need to disable this feature if you add a higher performance controller.

**The Choices:** V1.1+V2.0 (default), Disabled, V1.1

## **USB Memory Type**

**The Choices:** Base Memory<640k>(default).

## **USB Keyboard Support**

This item allows you to enable or disable the USB Keyboard Legacy Support.

Enabled                      Enable USB Keyboard Support.

**Disabled** (default)      Disable USB Keyboard Support.

## **USB Mouse Support**

This item allows you to enable or disable the USB Mouse Legacy Support.

Enabled                      Enable USB Mouse Support.

**Disabled** (default)      Disable USB Mouse Support.

## **AC97 Audio**

This item allows you to enable or disable to support AC97 Audio.

**The Choices:** Auto (default), Disabled.

## **MAC LAN**

This option allows you to control the onboard MAC LAN.

**The Choices:** Auto (default), Disabled.

## **Onboard LAN Boot ROM**

This item allows you to enable or disable the Onboard LAN Boot ROM.

**The Choices:** Disabled (default), Enabled.

# ***GeForce 6100 AM2 BIOS Setup***

---

## **MAC Media Interface**

This option allows you to control the onboard MAC Media Interface.

**The Choices:** Pin Strap (default), Disabled

## **IDE HDD Block Mode**

Block mode is also called block transfer, multiple commands, or multiple sectors read / write. If your IDE hard drive supports block mode (most new drives do), select Enabled for automatic detection of the optimal number of block mode (most new drives do), select Enabled for automatic detection of the optimal number of block read / write per sector where the drive can support.

**The Choices:** Enabled (default), Disabled.

## **POWER After PWR-Fail**

This setting specifies how your system should behave after a power fail or interrupts occurs. By choosing off will leave the computer in the power off state. Choosing On will reboot the computer. Former-Sts will restore the system to the status before power failure or interrupt occurs.


**The Choices:** Off (default), On, Former-Sts.

# GeForce 6100 AM2 BIOS Setup

## 1.6 Power Management Setup

The Power Management Setup Menu allows you to configure your system to utilize energy conservation and power up/power down features.

### ■ Figure 6. Power Management Setup

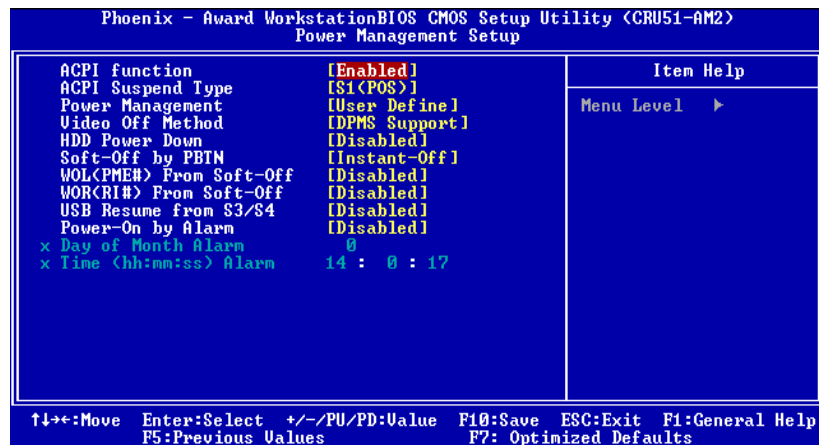

### ACPI Function

This item displays the status of the Advanced Configuration and Power Management (ACPI).

**The Choices:** Enabled (default), Disabled.

### ACPI Suspend Type

The item allows you to select the suspend type under the ACPI operating system.

**The Choices:** S1 (POS) (default) Power on Suspend  
S3 (STR) Suspend to RAM  
S1 & S3 POS+STR

# **GeForce 6100 AM2 BIOS Setup**

---

## **Power Management**

This category allows you to select the power saving method and is directly related to the following modes:

1. HDD Power Down.
2. Suspend Mode.

There are three options of Power Management, three of which have fixed mode settings

*Min. Power Saving*

Minimum power management.

Suspend Mode = 1 hr.

HDD Power Down = 15 min

*Max. Power Saving*

Maximum power management only available for sl CPU's.

Suspend Mode = 1 min.

HDD Power Down = 1 min.

**User Define** (default)

Allow you to set each option individually.

When you choose user define, you can adjust each of the item from 1 min. to 1 hr. except for HDD Power Down which ranges from 1 min. to 15 min.

## **Video Off Method**

This option determines the manner when the monitor goes blank.

V/H SYNC+Blank

This selection will cause the system to turn off the vertical and horizontal synchronization ports and write blanks to the video buffer.

Blank Screen

This option only writes blanks to the video buffer.

**DPMS**(default)

Initial display power management signaling.

## **HDD Power Down**

When enabled, the hard-disk drives will power down after a set time of system inactivity. All other devices remain active.

**The Choices:** **Disabled** (default), 1 Min, 2 Min, 3 Min, 4 Min, 5 Min, 6 Min, 7 Min, 8 Min, 9 Min, 10 Min, 11 Min, 12 Min, 13 Min, 14 Min, 15Min.

# **GeForce 6100 AM2 BIOS Setup**

---

## **Soft-Off by PWR-BTN**

This item determines the behavior of system power button. Instant off turn off the power immediately, and Delay 4 Sec. will require you to press and hold the power button for 4 seconds to cut off the system power.

**The Choices:** Delay 4 Sec, **Instant-Off** (default).

## **WOL(PME#)/ From Soft-Off**

This item allows you to enable or disable Wake On LAN from Soft-Off function.

**The Choices:** **Disabled** (default), Enabled.

## **WOR(RI#) From Soft-Off**

This item allows you to enable or disable Wake On Ring from Soft-Off function.

**The Choices:** **Disabled** (default), Enabled.

## **USB Resume from S3/S4**

This item allows you to wake up from S3 with USB device.

**The Choices:** **Disabled** (default), Enabled.

## **Power-On by Alarm**

This function is for setting date and time for your computer to boot up. When enabled, you can choose the date and time to boot up the system.

**The Choices:** **Disabled** (default), Enabled.

### **Date (of Month) Alarm**

You can choose which month the system will boot up.

### **Time (hh:mm:ss) Alarm**

You can choose the system boot up time, input hour, minute and second to specify.


**Note: If you have change the setting, you must let the system boot up until it goes to the operating system, before this function will work.**

# GeForce 6100 AM2 BIOS Setup

## 1.7 PnP/PCI Configurations

This section describes configuring the PCI bus system. PCI, or Personal Computer Interconnect, is a system which allows I/O devices to operate at speeds nearing the speed of the CPU itself uses when communicating with its own special components. This section covers some very technical items and it is strongly recommended that only experienced users should make any changes to the default settings.

■ **Figure 7: PnP/PCI Configurations**

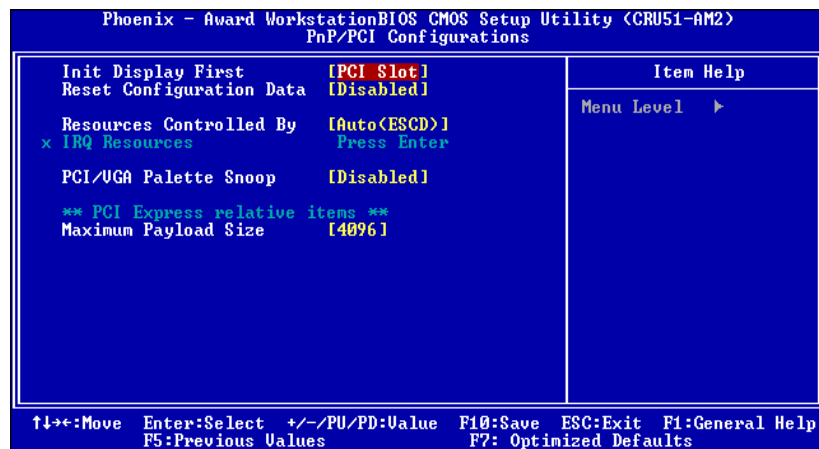

### Init Display First

This item allows you to decide to active whether PCI Slot or on-chip VGA first.  
**The Choices:** PCEX, PCI Slot (default).

# **GeForce 6100 AM2 BIOS Setup**

---

## **Reset Configuration Data**

The system BIOS supports the PnP feature which requires the system to record which resources are assigned and protects resources from conflict.

Every peripheral device has a node, which is called ESCD. This node records which resources are assigned to it. The system needs to record and update ESCD to the memory locations. These locations are reserved in the system BIOS. If the Disabled (default) option is chosen, the system's ESCD will update only when the new configuration varies from the last one. If the Enabled option is chosen, the system is forced to update ESCDs and then is automatically set to the "Disabled" mode.

The above settings will be shown on the screen only if "Manual" is chosen for the resources controlled by function.

Legacy is the term, which signifies that a resource is assigned to the ISA Bus and provides non-PnP ISA add-on cards. PCI / ISA PnP signify that a resource is assigned to the PCI Bus or provides for ISA PnP add-on cards and peripherals.

**The Choices:** Disabled (default), Enabled.

## **Resources Controlled By**

By Choosing "Auto(ESCD)" (default), the system BIOS will detect the system resources and automatically assign the relative IRQ and DMA channel for each peripheral. By Choosing "Manual", the user will need to assign IRQ & DMA for add-on cards. Be sure that there are no IRQ/DMA and I/O port conflicts.

**The Choices:** Auto (ESCD) (default), Manual.

# **GeForce 6100 AM2 BIOS Setup**

---

## **IRQ Resources**

This submenu will allow you to assign each system interrupt a type, depending on the type of device using the interrupt. When you press the “Press Enter” tag, you will be directed to a submenu that will allow you to configure the system interrupts. This is only configurable when “Resources Controlled By” is set to “Manual”.

IRQ-3	assigned to PCI Device
IRQ-4	assigned to PCI Device
IRQ-5	assigned to PCI Device
IRQ-7	assigned to PCI Device
IRQ-9	assigned to PCI Device
IRQ-10	assigned to PCI Device
IRQ-11	assigned to PCI Device
IRQ-12	assigned to PCI Device
IRQ-14	assigned to PCI Device
IRQ-15	assigned to PCI Device

## **PCI / VGA Palette Snoop**

Some old graphic controllers need to “snoop” on the VGA palette and then map it to their display as a way to provide boot information and VGA compatibility. This item allows such snooping to take place.

**The Choices:** Disabled (default), Enabled

## **Maximum Payload Size**

Set the maximum payload size for Transaction packets (TLP).


**The Choice:** 4096 (default.), 128, 256, 512, 1024, 2048.



# GeForce 6100 AM2 BIOS Setup

## 1.8 PC Health Status

■ Figure 8: PC Health Status

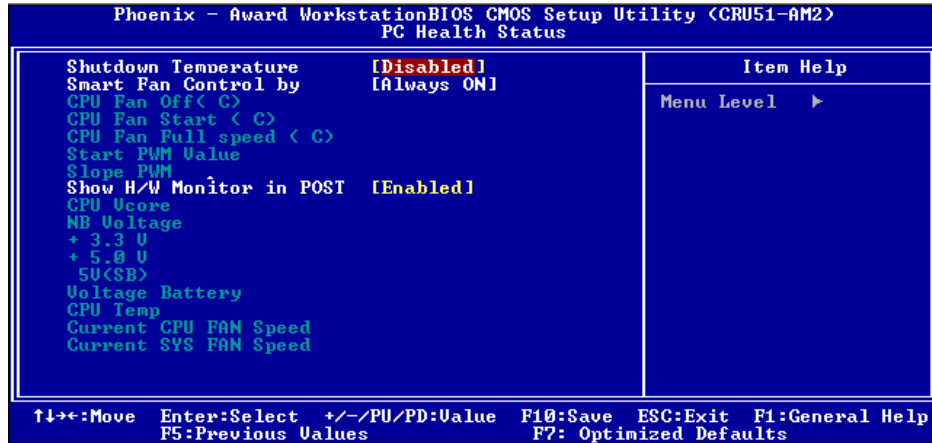

### Shutdown Temperature

This item allows you to set up the CPU shutdown Temperature. This item is only effective under Windows 98 ACPI mode.

**The Choices:** Disabled (default), 70°C/ 158°F, 75°C/ 167°F, 80°C/ 176°F.

### CPU FAN Control by

The Choice “smart” can make your CPU FAN to reduce noise.

**The Choices:** SMART, Always On (default).

### Show H/W Monitor in POST

If your computer contains a monitoring system, it will show PC health status during POST stage. The item offers several different delay times.


**The Choices:** Enabled (default), Disabled.

### CPU Vcore, NB Voltage, +3.3V, +5.0V, 5V (SB), Voltage Battery

Detect the system’s voltage status automatically.

# GeForce 6100 AM2 BIOS Setup

## Current CPU Temp

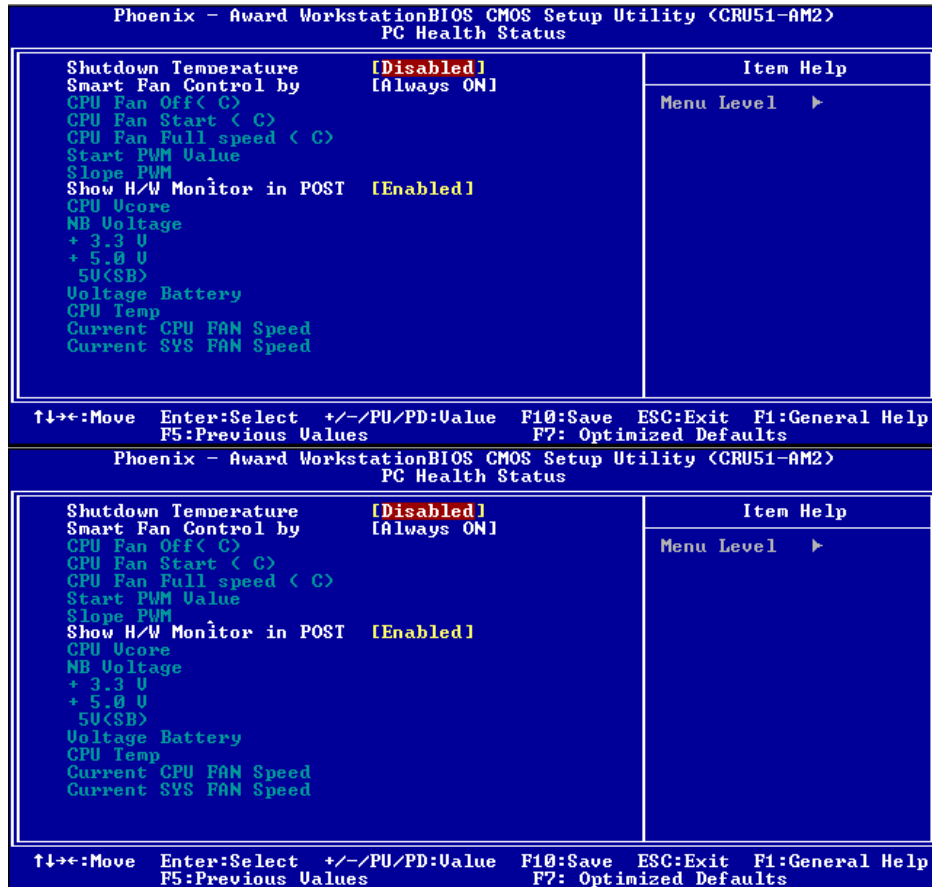

This field displays the current temperature of CPU.

## Current CPU FAN Speed

This field displays the current speed of CPU fan.

## Current SYS FAN Speed

This field displays the current speed SYSTEM fan.

# GeForce 6100 AM2 BIOS Setup

## 1.9 Over Clock Navigator Engine

### OverClock Navigator

OverClock .Navigator is designed for beginners in overlock field.

Based on many test and experiments from Biostar Engineer Team, OverClock Navigator provides 3 default overlock configurations that are able to raise the system performance

**The Choices:** Normal (default), Automate Overclock, Manual Overclock

### Auto OverClock System

```
Phoenix - Award WorkstationBIOS CMOS Setup Utility (CRU51-AM2)
OverClock Navigator Engine

Overclock Navigator      [Automate Overclock]
===== Automate Overclock System =====
Auto Overclock System   [V6 -Tech Engine]
===== Manual Overclock System =====
** CPU Spec Voltage **  1.350V
** NB/SB Spec Voltage ** 1.52V
** HT Spec Voltage **   1.23V
** Memory Spec Voltage ** 2.60V
x CPU Voltage           StartUp
x NB/SB Voltage Regulator 1.52V
x HT Voltage Regulator  1.23V
x Memory Voltage        2.60V

x CPU Frequency         200
x HT Frequency          Auto
x PCIE Clock            100Mhz
x DRAM Configuration   Press Enter
Watch dog times(times) [3]
Integated Memory Test  [Disabled]

Item Help
Menu Level  >

↑↓++:Move  Enter:Select  +/-/PU/PD:Value  F10:Save  ESC:Exit  F1:General Help
F5:Previous Values          F7: Optimized Defaults
```

The Overclock Navigator provides 3 different engines helping you to overlock your system. These engines will boost your system performance to different level.

**The Choices:**

V6 Tech Engine

This setting will raise about 5%~10% of whole system performance.

V8 Tech Engine

This setting will raise about 15%~25% of whole system performance.

V12 Tech Engine

This setting will raise about 25%~30% of whole system performance.

## GeForce 6100 AM2 BIOS Setup

### Cautions:

1. Not every AMD CPU performs the above overclock setting ideally; the difference may vary with the installed CPU model.
2. From BET experiment, the Atholon64 FX CPU is not suitable for this A.O.S. feature.

### Manual Overclock System (M.O.S.)

```
Phoenix - Award WorkstationBIOS CMOS Setup Utility (CRU51-AM2)
OverClock Navigator Engine

Overclock Navigator [Automate Overclock]
===== Automate Overclock System =====
Auto Overclock System [U6 -Tech Engine]
===== Manual Overclock System =====
** CPU Spec Voltage ** 1.350V
** NB/SB Spec Voltage ** 1.52V
** HT Spec Voltage ** 1.23V
** Memory Spec Voltage ** 2.60V
CPU Voltage Regulator [Startup]
NB/SB Voltage Regulator [1.24V]
HT Voltage Regulator [1.23V]
Memory Voltage [1.85V]

CPU Frequency [200]
HT Frequency [Auto]
PCIe Clock [100Mhz]
DRAM Configuration [Press Enter]
Watch dog times(times) [3]
Integrated Memory Test [Disabled]

Item Help
Menu Level >

↑↓←→:Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit F1:General Help
F5:Previous Values F7: Optimized Defaults
```

MOS is designed for experienced overclock users.

It allows users to customize personal overclock setting.

#### Note:

Based on our test results; the overclock function achieved the best performance on AMD 3000+ CPU

### CPU Voltage Reguqltor

This item allows you to select CPU Voltage Control.

**The Choices:** StartUp (default), 1.725V, 1.700V, 1.675V, 1.650V, 1.625V, 1.600V etc.

### NB/SB Voltage Ragurator

**The Choices:** 1.24V (default).1.27V, 1.32V, 1.36V

### HT Voltage Regulator

**The Choices:** 1.23V (default).1.25V, 1.30V, 1.35V.

# GeForce 6100 AM2 BIOS Setup

## Memory Voltage

The Choices: 1.85V (default), 1.90V, 1.95V, 2.00V

## CPU Frequency

This item allows you to select the CPU Frequency.

The Choices: 200 to 450 with an interval of 1. (Default value is 200)

## HT Frequency

This item allows you to select the HT Frequency.

The Choices: 4x (default), 1x, 2x, 3x, 5x, Auto, x4.

## PCIE Clock

The Choices: 100MHz (default), 101MHz, 102MHz, 103MHz, 104MHz, 105MHz, 106MHz, 107MHz, etc.

## DRAM Configuration

Phoenix - Award Workstation BIOS CMOS Setup Utility (CRU51-AM2)	
DRAM Configuration	
	Item Help
Timing Mode	[Auto]
x Memory Clock value or Limi	DDR400
DRAM Bank (chip-select)Int	[Enabled]
DQS Training Control	[Perform DQS]
CKE base power down mode	[Enable]
CKE Based Powerdown	[per Channel]
Memclock tri-stating	[Disable]
Memory Hole Remapping	[Enable]
Bottom of UMA DRAM 31:24]	[FC]
DDRII Timing Item	[Disable]
x $T_{wr}$ Command Delay	3 bus clocks
x $T_{rfc0}$ for DIMM0	75ns
x $T_{rfc1}$ for DIMM1	75ns
x $T_{rfc1}$ for DIMM2	75ns
x $T_{rfc1}$ for DIMM3	75ns
x $\langle T_{wr} \rangle$ Write Recovery	6 bus clocks
x $\langle T_{rip} \rangle$ Precharge Time	3 Clocks
x $\langle T_{rc} \rangle$ Row Cycle Time	26 bus clocks
x $\langle T_{rcd} \rangle$ RAS to CAS R/W Delay	6 clocks

↑↓←→:Move    Enter:Select    +/-/PU/PD:Value    F10:Save    ESC:Exit    F1:General Help  
F5:Previous Values    F7: Optimized Defaults

### Timing Mode

The Choices: Auto (Default), Manual.

### DRAM Bank (chip-select)Int

The Choices: Enable (Default), Disable.

# **GeForce 6100 AM2 BIOS Setup**

---

## **DQS Training Control**

The Choices: Perform DQS (Default), Skip DQS

## **CKE base power down mode**

The Choices: Enable (Default), Disable.

## **CKE base power down**

The Choices: per Channel (Default), Per CS.

## **Memclock tri-stating**

The Choices: Disable (Default), Enable.

## **Memory Hole Remapping**

The Choices: Enable (Default), Disable.

## **Bottom of UMA DRAM 31:24**

The Choices: FC (Default), key in a HEX number between 0000~ 00FC

## **DDRII Timing Item**

The Choices: Disable (Default), Enable.

## **Twtr Command Delay**

The Choices: 3 bus Clocks (Default), 1 bus Clock, 2 bus clocks.

## **Trfc0 for DIMM0**

The Choices: 75ns (Default), 105ns, 127.5ns, 195ns, 327.5ns.

## **Trfc0 for DIMM1**

The Choices: 75ns (Default), 105ns, 127.5ns, 195ns, 327.5ns.

## **Trfc0 for DIMM2**

The Choices: 75ns (Default), 105ns, 127.5ns, 195ns, 327.5ns.

## **Trfc0 for DIMM3**

The Choices: 75ns (Default), 105ns, 127.5ns, 195ns, 327.5ns.

## **(Twr) Write Recovery**

The Choices: 6 bus Clocks(Default), 3 bus Clocks, 4 bus clocks, 5 bus clocks..

## **(Trip) Precharge Time**

The Choices: 3 Clocks(Default), 2 Clock.

## **(Trc) Row Cycle Time**

The Choices: 26 bus Clocks(Default), 11~26 bus Clocks..

## GeForce 6100 AM2 BIOS Setup

### (Trcd) RAS to CAS R/W Delay

The Choices: 6 Clocks(Default), 3 Clocks, 4 clocks, 5 clocks..

### (Trrd) RAS to RAS Delay

The Choices: 5 Clocks(Default), 2 Clocks, 3 clocks, 4 clocks..

### (Trp) Row Precharge Time

The Choices: 6 Clocks(Default), 3 Clocks, 4clocks, 5clocks..

### (Tras)Minimum RAS Active T

The Choices: 18 bus Clocks(Default), 5~18 bus Clocks..

### Watch dog time(times)

The Choices: 3 (default).

### Integrated Memory Test

Integrated Memory Test allows users to test memory module compatibilities without additional device or software.

#### Step 1:

This item is disabled on default; change it to "Enable" to precede memory test.

```
Phoenix - Award WorkstationBIOS CMOS Setup Utility (CRU51-AM2)
OverClock Navigator Engine

Overclock Navigator      [Automate Overclock]
===== Automate Overclock System =====
Auto Overclock System    [V6 -Tech Engine]
===== Manual Overclock System =====
** CPU Spec Voltage **   1.350V
** NB/SB Spec Voltage ** 1.52V
** HT Spec Voltage **    1.23V
** Memory Spec Voltage ** 2.60V
x CPU Voltage             StartUp
x NB/SB Voltage Regulator 1.52V
x HT Voltage Regulator    1.23V
x Memory Voltage          2.60V

x CPU Frequency           200
x HT Frequency            Auto
x PCIE Clock              100Mhz
x DRAM Configuration      Press Enter
Watch dog times(times) > [3]
Integrated Memory Test    [Enabled]

Item Help
Menu Level  >

↑↓←→:Move  Enter:Select  +/-/PU/PD:Value  F10:Save  ESC:Exit  F1:General Help
F5:Previous Values      F7: Optimized Defaults
```

## GeForce 6100 AM2 BIOS Setup

### Step 2:

When the process is done, change the setting back from “Enabled” to “Disabled” to complete the test.

```
Phoenix - Award Workstation BIOS CMOS Setup Utility (CRU51-AM2)
OverClock Navigator Engine

Overclock Navigator [Automate Overclock]
===== Automate Overclock System =====
Auto Overclock System [U6 -Tech Engine]
===== Manual Overclock System =====
** CPU Spec Voltage ** 1.350V
** NB/SB Spec Voltage ** 1.52V
** HT Spec Voltage ** 1.23V
** Memory Spec Voltage ** 2.60V
x CPU Voltage StartUp
x NB/SB Voltage Regulator 1.52V
x HT Voltage Regulator 1.23V
x Memory Voltage 2.60V

x CPU Frequency 200
x HT Frequency Auto
x PCIE Clock 100Mhz
x DRAM Configuration Press Enter
Watch dog times(times) [3]
Integated Memory Test [Disabled]

Item Help
Menu Level >

↑↓←→:Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit F1:General Help
F5:Previous Values F7: Optimized Defaults
```




# GeForce 6100 AM2 BIOS Setup

---

## 1.10 CMOS Reload Program(C.R.P.)

The CMOS Reload Program (CRP) allows you to save different CMOS settings into BIOS-ROM. You may reload any saved CMOS setting to change system configurations. Moreover, you may save your ideal overclock setting for easier overclocking. There are 50 sets record addresses in total, and you may name the saved CMOS data individually.

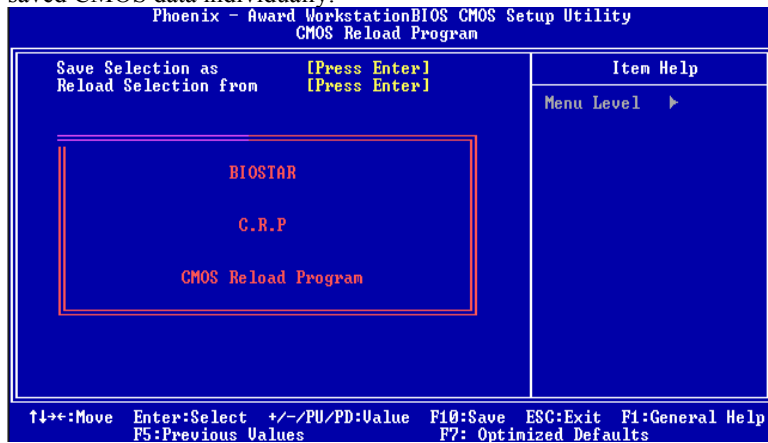

# **GeForce 6100 AM2 BIOS Setup**

---

## **2 BIOS Setup (Ver 1.x)**

### **Introduction**

The purpose of this manual is to describe the settings in the Award™ BIOS Setup program on this motherboard. The Setup program allows users to modify the basic system configuration and save these settings to CMOS RAM. The power of CMOS RAM is supplied by a battery so that it retains the Setup information when the power is turned off.

Basic Input-Output System (BIOS) determines what a computer can do without accessing programs from a disk. This system controls most of the input and output devices such as keyboard, mouse, serial ports and disk drives. BIOS activates at the first stage of the booting process, loading and executing the operating system. Some additional features, such as virus and password protection or chipset fine-tuning options are also included in BIOS.

The rest of this manual will to guide you through the options and settings in BIOS Setup.

### **Plug and Play Support**

This AWARD BIOS supports the Plug and Play Version 1.0A specification and ESCD (Extended System Configuration Data) write.

### **EPA Green PC Support**

This AWARD BIOS supports Version 1.03 of the EPA Green PC specification.

### **APM Support**

This AWARD BIOS supports Version 1.1&1.2 of the Advanced Power Management (APM) specification. Power management features are implemented via the System Management Interrupt (SMI). Sleep and Suspend power management modes are supported. Power to the hard disk drives and video monitors can also be managed by this AWARD BIOS.

### **ACPI Support**

Award ACPI BIOS support Version 1.0 of Advanced Configuration and Power interface specification (ACPI). It provides ASL code for power management and device configuration capabilities as defined in the ACPI specification, developed by Microsoft, Intel and Toshiba.

---

# GeForce 6100 AM2 BIOS Setup

---

## **PCI Bus Support**

This AWARD BIOS also supports Version 2.1 of the Intel PCI (Peripheral Component Interconnect) local bus specification.

## **DRAM Support**

DDR SDRAM (Double Data Rate Synchronous DRAM) is supported.

## **Supported CPUs**

This AWARD BIOS supports the AM2 CPU.

## **Using Setup**

Use the arrow keys to highlight items in most of the place, press <Enter> to select, use the <PgUp> and <PgDn> keys to change entries, press <F1> for help and press <Esc> to quit. The following table provides more detail about how to navigate in the Setup program by using the keyboard.

<b>Keystroke</b>	<b>Function</b>
Up arrow	Move to previous item
Down arrow	Move to next item
Left arrow	Move to the item on the left (menu bar)
Right arrow	Move to the item on the right (menu bar)
Move Enter	Move to the item you desired
PgUp key	Increase the numeric value or make changes
PgDn key	Decrease the numeric value or make changes
+ Key	Increase the numeric value or make changes
- Key	Decrease the numeric value or make changes
Esc key	Main Menu – Quit and not save changes into CMOS Status Page Setup Menu and Option Page Setup Menu – Exit Current page and return to Main Menu
F1 key	General help on Setup navigation keys
F5 key	Load previous values from CMOS
F7 key	Load the optimized defaults
F10 key	Save all the CMOS changes and exit

# GeForce 6100 AM2 BIOS Setup

## 2.1 Main Menu

Once you enter Award BIOS™ CMOS Setup Utility, the Main Menu will appear on the screen. The Main Menu allows you to select from several setup functions. Use the arrow keys to select among the items and press <Enter> to accept and enter the sub-menu.

**!! WARNING !!**

For better system performance, the BIOS firmware is being continuously updated. The BIOS information described in this manual (Figure 1, 2, 3, 4, 5, 6, 7, 8, 9) is for your reference only. The actual BIOS information and settings on board may be slightly different from this manual.

■ Figure 1: Main Menu



# ***GeForce 6100 AM2 BIOS Setup***

---

## **Standard CMOS Features**

This submenu contains industry standard configurable options.

## **Advanced BIOS Features**

This submenu allows you to configure advanced features of the BIOS.

## **Advanced Chipset Features**

This submenu allows you to configure special chipset features.

## **Integrated Peripherals**

This submenu allows you to configure certain IDE hard drive options and Programmed Input/ Output features.

## **Power Management Setup**

This submenu allows you to configure the power management features.

## **PnP/PCI Configurations**

This submenu allows you to configure certain “Plug and Play” and PCI options.

## **PC Health Status**

This submenu allows you to monitor the hardware of your system.

## **Frequency/ Voltage Control**

This submenu allows you to change CPU Vcore Voltage and CPU/PCI clock. (However, we suggest you to use the default setting. Changing the voltage and clock improperly may damage the CPU or M/B!)

---

## **GeForce 6100 AM2 BIOS Setup**

---

### **Load Optimized Defaults**

This selection allows you to reload the BIOS when problem occurs during system booting sequence. These configurations are factory settings optimized for this system. A confirmation message will be displayed before defaults are set.

Load Optimized Defaults (Y/N)? N

### **Set Supervisor Password**

Setting the supervisor password will prohibit everyone except the supervisor from making changes using the CMOS Setup Utility. You will be prompted with to enter a password.

Enter Password:

### **Set User Password**

If the Supervisor Password is not set, then the User Password will function in the same way as the Supervisor Password. If the Supervisor Password is set and the User Password is set, the "User" will only be able to view configurations but will not be able to change them.

Enter Password:

### **Save & Exit Setup**

Save all configuration changes to CMOS (memory) and exit setup. Confirmation message will be displayed before proceeding.

SAVE to CMOS and EXIT (Y/N)? Y

### **Exit Without Saving**

Abandon all changes made during the current session and exit setup. Confirmation

## ***GeForce 6100 AM2 BIOS Setup***

---

message will be displayed before proceeding.

Quit Without Saving (Y/N)? N

### **Upgrade BIOS**

This submenu allows you to upgrade bios.


BIOS UPDATE UTILITY (Y/N)? N

# GeForce 6100 AM2 BIOS Setup

## 2.2 Standard CMOS Features

The items in Standard CMOS Setup Menu are divided into several categories. Each category includes no, one or more than one setup items. Use the arrow keys to highlight the item and then use the <PgUp> or <PgDn> keys to select the value you want in each item.

■ **Figure 2: Standard CMOS Setup**

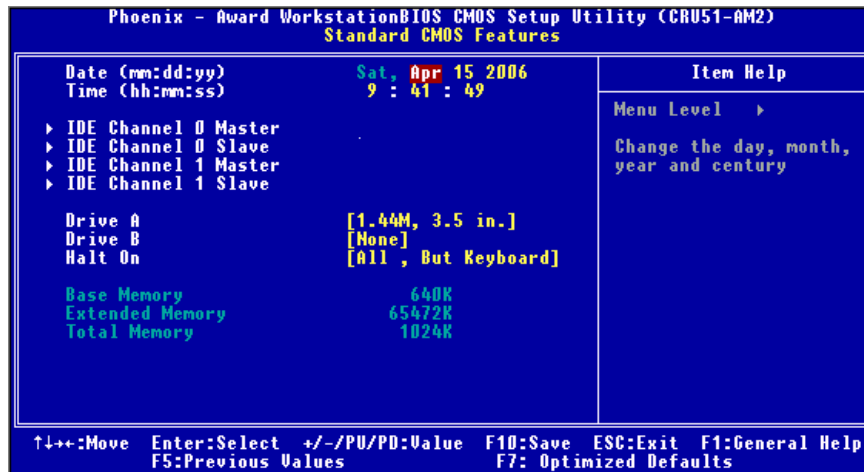

### Main Menu Selections

This table shows the items and the available options on the Main Menu.

Item	Options	Description
Date	mm : dd : yy	Set the system date. Note that the 'Day' automatically changes when you set the date.
Time	hh : mm : ss	Set the system internal clock.
IDE Primary Master	Options are in its sub menu.	Press <Enter> to enter the sub menu of detailed options
IDE Primary Slave	Options are in its sub menu.	Press <Enter> to enter the sub menu of detailed options.



## **GeForce 6100 AM2 BIOS Setup**


---

<b>Item</b>	<b>Options</b>	<b>Description</b>
IDE Secondary Master	Options are in its sub menu.	Press <Enter> to enter the sub menu of detailed options.
IDE Secondary Slave	Options are in its sub menu.	Press <Enter> to enter the sub menu of detailed options.
Drive A Drive B	360K, 5.25 in 1.2M, 5.25 in 720K, 3.5 in 1.44M, 3.5 in 2.88M, 3.5 in None	Select the type of floppy disk drive installed in your system.
Video	EGA/VGA CGA 40 CGA 80 MONO	Select the default video device.
Halt On	All Errors No Errors All, but Keyboard All, but Diskette All, but Disk/ Key	Select the situation in which you want the BIOS to stop the POST process and notify you.
Base Memory	N/A	Displays the amount of conventional memory detected during boot up.
Extended Memory	N/A	Displays the amount of extended memory detected during boot up.
Total Memory	N/A	Displays the total memory available in the system.

# GeForce 6100 AM2 BIOS Setup

## 2.3 Advanced BIOS Features


■ Figure 3: Advanced BIOS Setup

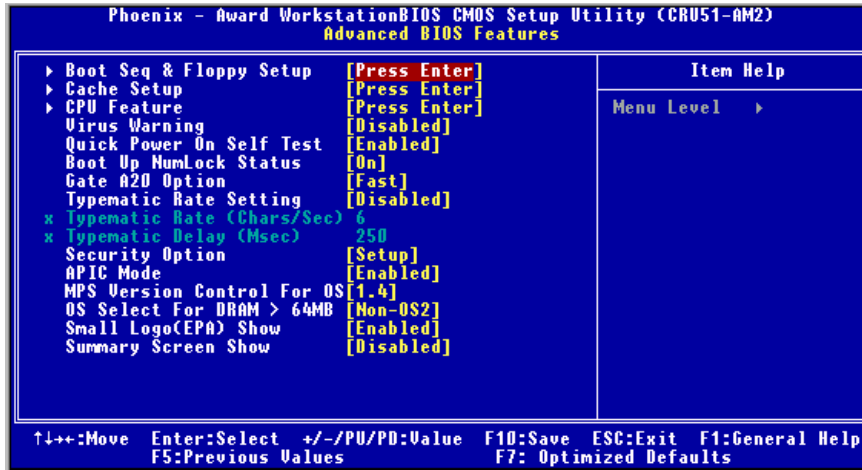

# GeForce 6100 AM2 BIOS Setup


## Boot Seq & Floppy Setup

This item allows you to setup boot sequence & Floppy.

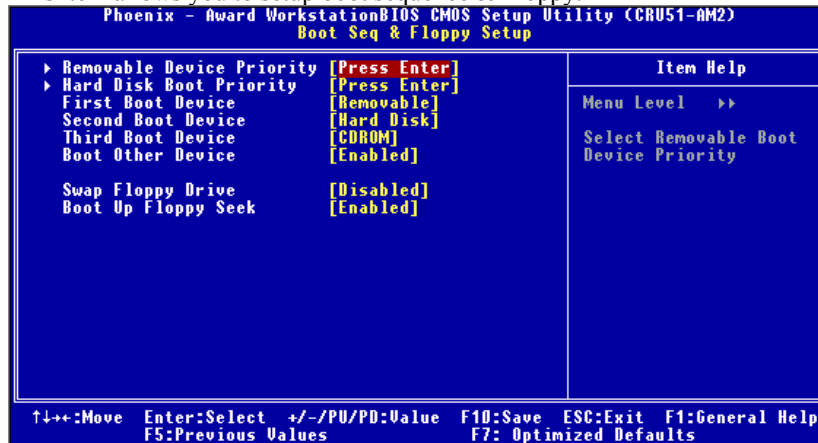

## Removable Device Priority

Select Removable Boot Device Priority.

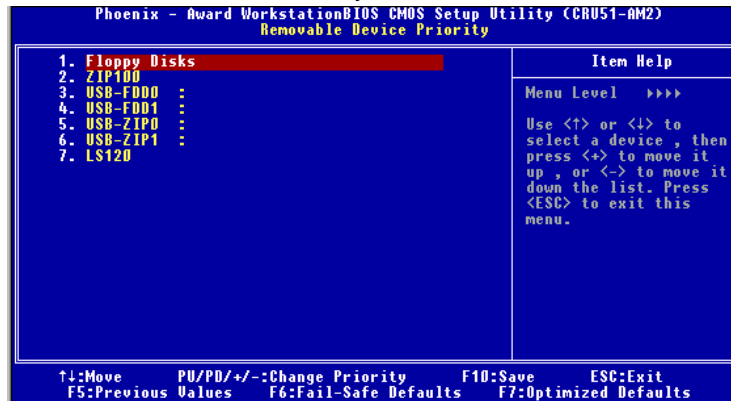

The Choices: Floppy Disks, Zip100, USB-FDD0, USB-FDD1, USB-ZIP0, USB-ZIP1, LS120.

---


# GeForce 6100 AM2 BIOS Setup

---

## Hard Disk Boot Priority

The BIOS will attempt to arrange the Hard Disk boot sequence automatically.

You can change the Hard Disk booting sequence here.

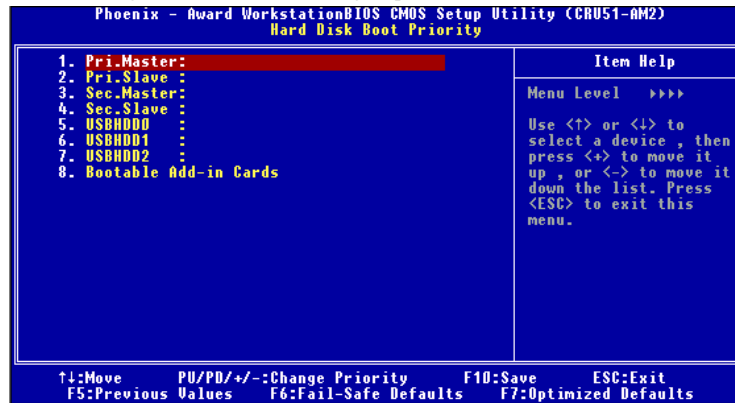

The Choices: Pri. Master, Pri. Slave, Sec. Master, Sec. Slave, USB HDD0, USB HDD1, USB HDD2, and Bootable Add-in Cards.

## First/Second/Third Boot Device

The BIOS will attempt to load the operating system in this order.

The Choices: Floppy, LS120, HDD-0, SCSI, CDROM, HDD-1, HDD-2, HDD-3, ZIP100, LAN, HPT370, Disabled.

## Boot Other Device

When enabled, BIOS will try to load the operating system from other device when it failed to load from the three devices above.

The Choices: Enabled (default), Disabled

## Swap Floppy Drive

For systems with two floppy drives, this option allows you to swap logical drive assignments.

The Choices: Disabled (default), Enabled.

## Boot Up Floppy Seek


When enabled, System will test the floppy drives to determine if they have 40 or 80 tracks during boot up. Disabling this option reduces the time it takes to boot-up.

The Choices: Enabled (default), Disabled.

# GeForce 6100 AM2 BIOS Setup

---

## Cache Setup

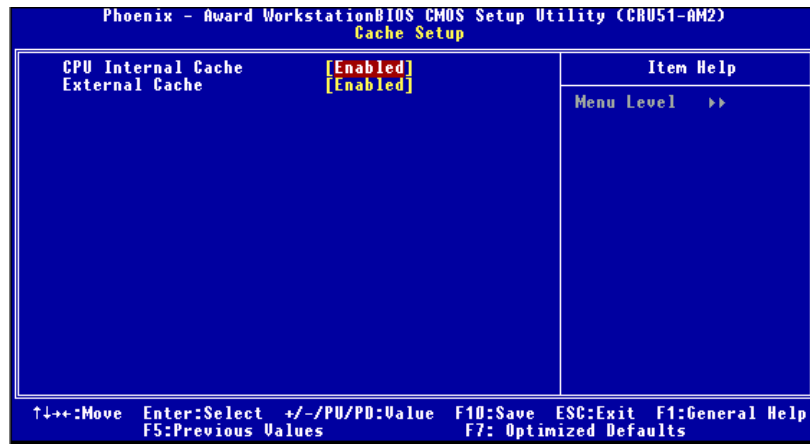

### **CPU Internal Cache**

Depending on the CPU/chipset in use, you may be able to increase memory access time with this option.

- Enabled** (default) Enable cache.
- Disabled Disable cache.

### **External Cache**


This option enables or disables “Level 2” secondary cache on the CPU, which may improve performance.

- Enabled** (default) Enable cache.
- Disabled Disable cache.

# GeForce 6100 AM2 BIOS Setup

---

## CPU Feature

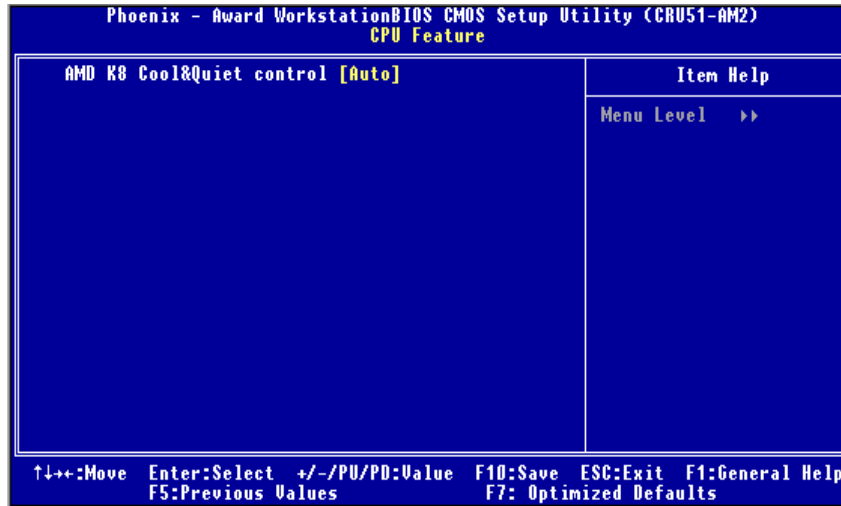

## AMD K8 Cool&Quiet Control

This function supports AMD Cool 'n' Quick function.


**The Choices:** Auto (default), Disable.

# GeForce 6100 AM2 BIOS Setup

## 2.4 Advanced Chipset Features

This submenu allows you to configure the specific features of the chipset installed on your system. This chipset manage bus speeds and access to system memory resources, such as DRAM. It also coordinates communications with the PCI bus. The default settings that came with your system have been optimized and therefore should not be changed unless you are suspicious that the settings have been changed incorrectly.

### ■ Figure 4. Advanced Chipset Setup

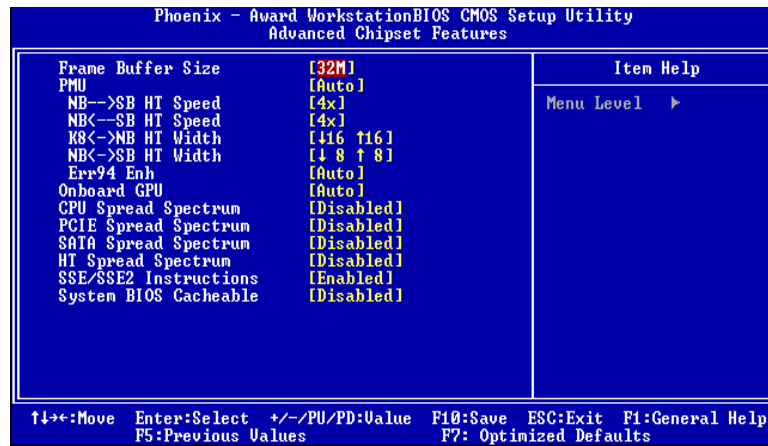

### Frame Buffer Size

The Choices: 32M (default), 16M, 64M, 128M, Disabled.

### PMU

The Choices: Auto (default), Disabled.

### NB-->SB HT Speed

The Choices: 4X (default). 1X, 2X, 3X, 5X.

### NB<--SB HT Speed

The Choices: 4X (default). 1X, 2X, 3X, 5X.

# ***GeForce 6100 AM2 BIOS Setup***

---

## **K8<->NB HT Width**

The Choices: ↓ 16 ↑ 16 (default), ↓ 8 ↑ 8.

## **NB<->SB HT Width**

The Choices: ↓ 8 ↑ 8 (default), ↓ 16 ↑ 16.

## **Err94 Enh**

This item allows you to enable/disable the “sequential Prefetch Feature” of K8 CPU.

The Choices: **Auto** (default), Disabled.

## **Onboard GPU**

The Choices: **Auto** (default), Always Enable.

## **CPU Spread Spectrum**

The Choices: **Disabled** (default), Center, Down.

## **PCIE Spread Spectrum**

This item allows you to disable \ enable the SATA spread spectrum function.

The Choices: **Disabled** (default), Enabled.

## **SATA Spread Spectrum**

This item allows you to disable \ enable the SATA spread spectrum function.

The Choices: **Disabled** (default), Enabled.

## **HT Spread Spectrum**

The Choices: **Disabled** (default), Center, Down.

## **SSE/SSE2 Instructions**

The Choices: **Enabled** (default), Disabled.



## ***GeForce 6100 AM2 BIOS Setup***

---

### **System BIOS Cacheable**


Selecting the “Disabled ” option allows caching of the system BIOS ROM at F0000h-FFFFFh which can improve system performance. However, any programs writing to this area of memory will cause conflicts and result in system errors.

**The Choices:** **Disabled** (default), Enabled.

# GeForce 6100 AM2 BIOS Setup

## 2.5 Integrated Peripherals


■ Figure 5. Integrated Peripherals

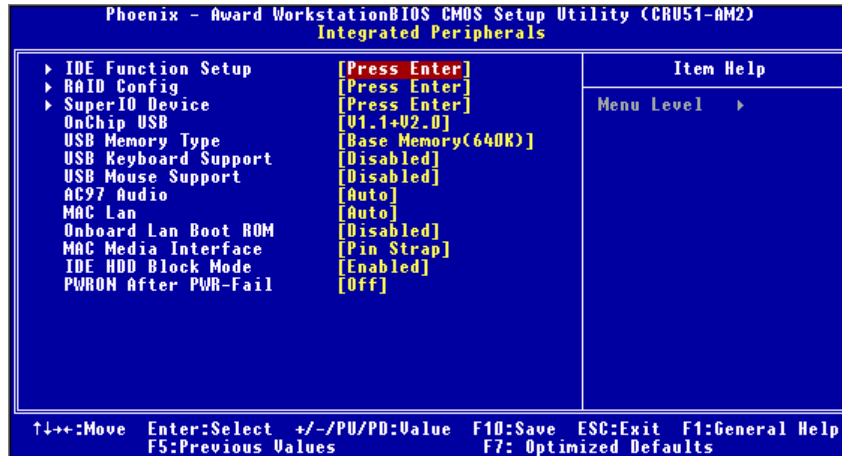

# GeForce 6100 AM2 BIOS Setup

## IDE Function Setup

Highlight the “Press Enter” label next to the “VIA OnChip IDE Device” label and press enter key will take you a submenu with the following options:

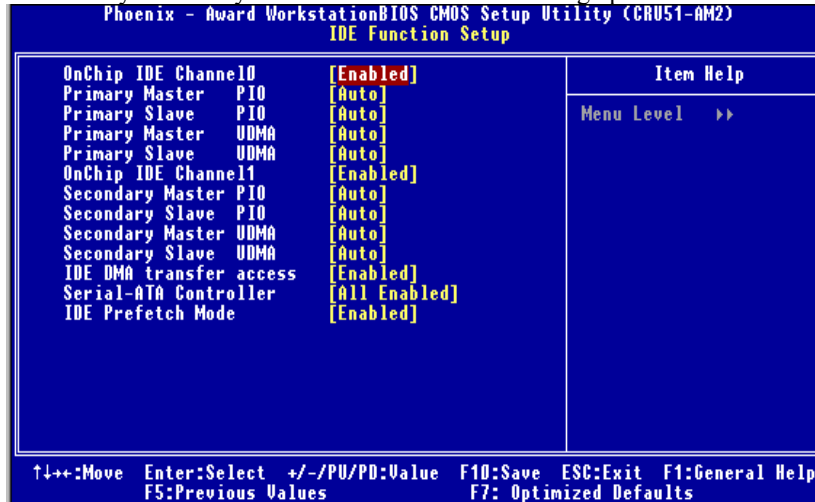

### On-chip IDE Channel 0/1

The motherboard chipset contains a PCI IDE interface with support for two IDE channels. Select “Enabled” to activate the first and/or second IDE interface. Select “Disabled” to deactivate an interface if you are going to install a primary and/or secondary add-in IDE interface.

**The Choices:** Enabled (default), Disabled.

### IDE Primary/Secondary/Master/Slave PIO

The IDE PIO (Programmed Input / Output) fields let you set a PIO mode (0-4) for each of the IDE devices that the onboard IDE interface supports. Modes 0 to 4 will increase performance progressively. In Auto mode, the system automatically determines the best mode for each device.

**The Choices:** Auto (default), Mode0, Mode1, Mode2, Mode3, Mode4.

### IDE Primary/Secondary/Master/Slave UDMA

Ultra DMA function can be implemented if it is supported by the IDE hard drives in your system. As well, your operating environment requires a DMA driver (Windows 95 or OSR2 may need a third party IDE bus master driver). If your hard drive and your system software both support Ultra DMA, select Auto to enable BIOS support.

**The Choices:** Auto (default), Disabled.

## GeForce 6100 AM2 BIOS Setup

---

### IDE DMA Transfer Access

This item allows you to enable or disable the IDE DMA transfer access.

**The Choices:** Enabled (default), Disabled.

### OnChip SATA Controller

This option allows you to enable the on-chip Serial ATA.


**The Choices:** Disabled, All Disabled (default).

### IDE Prefetch Mode

The “onboard” IDE drive interfaces supports IDE prefetch function for faster drive access. If the interface on your drive does not support prefetching, or if you install a primary and/or secondary add-in IDE interface, set this option to “Disabled”.

**The Choices:** Enabled (default), Disabled.

## RAID Config

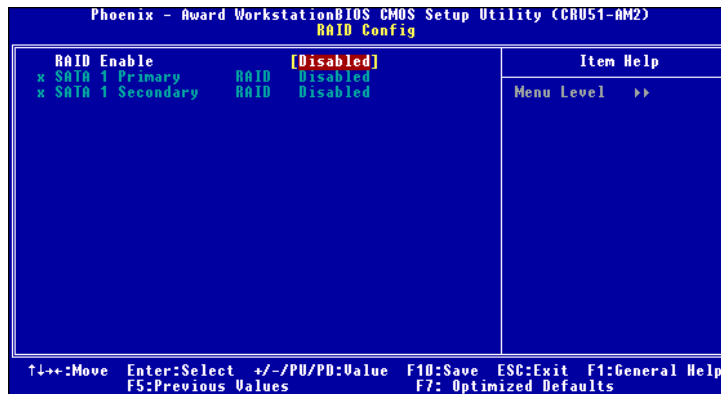

### RAID Enable

This option allows you to enable or disable RAID function.

**The Choices:** Disabled (default), Enabled.

### SATA 1/2 Primary/Secondary RAID


This option allows you to enable or disable SATA A Primary/Secondary RAID.

**The Choices:** Disabled (default), Enabled.

# GeForce 6100 AM2 BIOS Setup

## Super IO Device

Press Enter to configure the Super I/O Device.

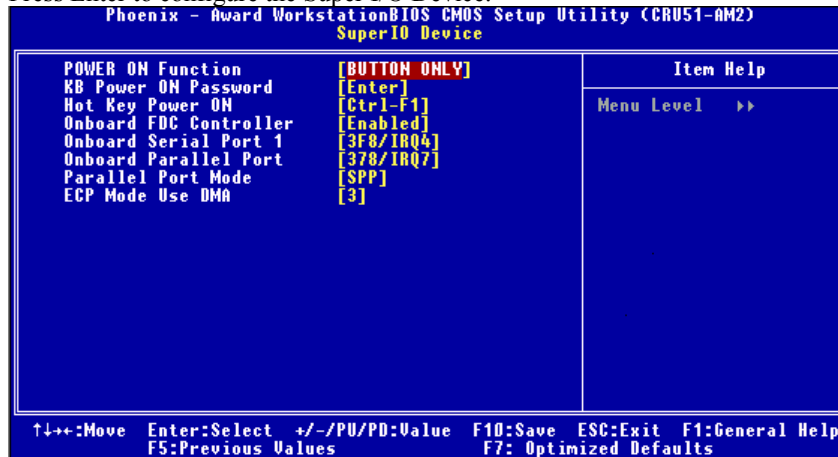

### Power On Function

This item allows you to choose the power on method.

**The Choices:** Button Only (default), Password, Hot Key, Mouse Move / Click, Mouse Double Click, Any Key, Keyboard 98.

### KB Power on Password

Input password and press Enter to set the Keyboard power on password.

### HOT Key power ON

Choose the Hot Key combination to boot up the system.

**The Choices:** Ctrl-F1 (default), Ctrl-F2, Ctrl-F3, Ctrl-F4, Ctrl-F5, Ctrl-F6, Ctrl-F7, Ctrl-F8, Ctrl-F9, Ctrl-F10, Ctrl-F11, Ctrl-F12.

### Onboard FDC Controller

Select enabled if your system has a floppy disk controller (FDC) installed on the system board and you wish to use it. If you installed another FDC or the system uses no floppy drive, select disabled in this field.

**The Choices:** Enabled (default), Disabled.

# **GeForce 6100 AM2 BIOS Setup**

---

## **Onboard Serial Port 1**

Select an address and corresponding interrupt for the first and second serial ports.

**The Choices:** 3F8/IRQ4 (default), Disabled, 2F8/IRQ3, 3E8/IRQ4, 2E8/IRQ3, Auto.

## **Onboard Parallel Port**

This item allows you to determine access onboard parallel port controller with which I/O Address.

**The Choices:** 378/IRQ7 (default), 278/IRQ5, 3BC/IRQ7, Disabled.

## **Parallel Port Mode**

This item allows you to determine how the parallel port should function. The default value is SPP.

### **The Choices:**

SPP (default)	Using Parallel port as Standard Printer Port.
EPP	Using Parallel Port as Enhanced Parallel Port.
ECP	Using Parallel port as Extended Capabilities Port.
ECP+EPP	Using Parallel port as ECP & EPP mode.

## **ECP Mode Use DMA**

Select a DMA Channel for the port.

**The Choices:** 3 (default), 1.

## **OnChip USB**

This option should be enabled if your system has a USB installed on the system board. You may need to disable this feature if you add a higher performance controller.

**The Choices:** V1.1+V2.0 (default), Disabled, V1.1

## **USB Memory Type**

The item allows you select the type of USB Memory.

**The Choices:** SHADOW, **Base Memory(640K)** (default).

# **GeForce 6100 AM2 BIOS Setup**

---

## **USB Keyboard Support**

This item allows you to enable or disable the USB Keyboard Legacy Support.

Enabled                      Enable USB Keyboard Support.  
**Disabled** (default)      Disable USB Keyboard Support.

## **USB Mouse Support**

This item allows you to enable or disable the USB Mouse Legacy Support.

Enabled Enable              USB Mouse Support.  
**Disabled** (default)      Disable USB Mouse Support.

## **Onboard AC97 Audio**

This item allows you to enable or disable to support AC97 Audio.

**The Choices:** **Auto** (default), Disabled.

## **MAC LAN**

This option allows you to control the onboard MAC LAN.

**The Choices:** **Auto** (default), Disabled.

## **Onboard LAN Boot ROM**

This item allows you to enable or disable the Onboard LAN Boot ROM.

**The Choices:** **Disabled** (default), Enabled.

## **MAC Media Interface**

**The Choices:** **Pin Strap** (default).MII.

## **IDE HDD Block Mode**

Block mode is also called block transfer, multiple commands, or multiple sector read / write. If your IDE hard drive supports block mode (most new drives do),select Enabled for automatic detection of the optimal number of block mode(most new drives do), select Enabled for automatic detection of the optimalnumber of block read / write per sector where the drive can support.

**The Choices:** **Enabled** (default), Disabled.

## ***GeForce 6100 AM2 BIOS Setup***

---

### **POWER After PWR-Fail**

This setting specifies how your system should behave after a power fail or interrupts occurs. By choosing off will leave the computer in the power off state. Choosing On will reboot the computer. Former-Sts will restore the system to the status before power failure or interrupt occurs.

**The Choices:** Off (default), On, Former-Sts.





# **GeForce 6100 AM2 BIOS Setup**

---

## **Power Management**

This category allows you to select the power saving method and is directly related to the following modes:

1. HDD Power Down.
2. Suspend Mode.

There are three options of Power Management, three of which have fixed mode settings

*Min. Power Saving*

Minimum power management.

Suspend Mode = 1 hr.

HDD Power Down = 15 min

*Max. Power Saving*

Maximum power management only available for sl CPU's.

Suspend Mode = 1 min.

HDD Power Down = 1 min.

**User Define** (default)

Allow you to set each option individually.

When you choose user define, you can adjust each of the item from 1 min. to 1 hr. except for HDD Power Down which ranges from 1 min. to 15 min.

## **Video Off Method**

This option determines the manner when the monitor goes blank.

V/H SYNC+Blank

This selection will cause the system to turn off the vertical and horizontal synchronization ports and write blanks to the video buffer.

Blank Screen

This option only writes blanks to the video buffer.

**DPMS Support** (default)

Initial display power management signaling.

## **HDD Power Down**

When enabled, the hard-disk drives will power down after a set time of system inactivity. All other devices remain active.

**The Choices:** **Disabled** (default), 1 Min, 2 Min, 3 Min, 4 Min, 5 Min, 6 Min, 7 Min, 8 Min, 9 Min, 10 Min, 11 Min, 12 Min, 13 Min, 14 Min, 15Min.

# ***GeForce 6100 AM2 BIOS Setup***

---

## **Soft-Off by PWR-BTN**

This item determines the behavior of system power button. Instant off turn off the power immediately, and Delay 4 Sec. will require you to press and hold the power button for 4 seconds to cut off the system power.

**The Choices:** Delay 4 Sec, **Instant-Off** (default).

## **WOL(PME#)/ From Soft-Off**

This item allows you to enable or disable Wake On LAN from Soft-Off function.

**The Choices:** **Disabled** (default), Enabled.

## **WOR(RI#) From Soft-Off**

This item allows you to enable or disable Wake On Ring from Soft-Off function.

**The Choices:** **Disabled** (default), Enabled.

## **USB Resume from S3/S4**

This item allows you to wake up from S3 with USB device.

**The Choices:** **Disabled** (default), Enabled.

## **Power-On by Alarm**

This function is for setting date and time for your computer to boot up. When enabled, you can choose the date and time to boot up the system.

**The Choices:** **Disabled** (default), Enabled.

Date (of Month) Alarm

You can choose which month the system will boot up.

Time (hh:mm:ss) Alarm

You can choose the system boot up time, input hour, minute and second to specify.


Note: If you have change the setting, you must let the system boot up until it goes to the operating system, before this function will work.

# GeForce 6100 AM2 BIOS Setup

## 2.7 PnP/PCI Configurations

This section describes configuring the PCI bus system. PCI, or Personal Computer Interconnect, is a system which allows I/O devices to operate at speeds nearing the speed of the CPU itself uses when communicating with its own special components. This section covers some very technical items and it is strongly recommended that only experienced users should make any changes to the default settings.

■ **Figure 7: PnP/PCI Configurations**

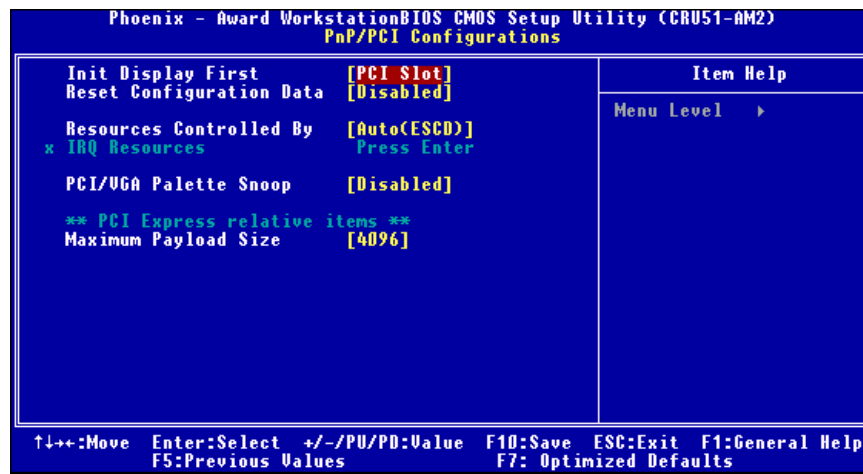

# **GeForce 6100 AM2 BIOS Setup**

---

## **Init Display First**

This item allows you to decide to active whether PCI Slot or on-chip VGA first.

**The Choices:** PCEx, Onboard ,**PCI Slot** (default).

## **Reset Configuration Data**

The system BIOS supports the PnP feature which requires the system to record which resources are assigned and protects resources from conflict.

Every peripheral device has a node, which is called ESCD. This node records which resources are assigned to it. The system needs to record and update ESCD to the memory locations. These locations are reserved in the system BIOS. If the Disabled (default) option is chosen, the system's ESCD will update only when the new configuration varies from the last one. If the Enabled option is chosen, the system is forced to update ESCDs and then is automatically set to the "Disabled" mode.

The above settings will be shown on the screen only if "Manual" is chosen for the resources controlled by function.

Legacy is the term, which signifies that a resource is assigned to the ISA Bus and provides non-PnP ISA add-on cards. PCI / ISA PnP signify that a resource is assigned to the PCI Bus or provides for ISA PnP add-on cards and peripherals.

**The Choices:** **Disabled** (default), Enabled.

## **Resources Controlled By**

By Choosing "**Auto(ESCD)**" (default), the system BIOS will detect the system resources and automatically assign the relative IRQ and DMA channel for each peripheral. By Choosing "Manual", the user will need to assign IRQ & DMA for add-on cards. Be sure that there are no IRQ/DMA and I/O port conflicts.

**The Choices:** **Auto (ESCD)** (default), Manual.

# **GeForce 6100 AM2 BIOS Setup**

---

## **IRQ Resources**

This submenu will allow you to assign each system interrupt a type, depending on the type of device using the interrupt. When you press the “Press Enter” tag, you will be directed to a submenu that will allow you to configure the system interrupts. This is only configurable when “Resources Controlled By” is set to “Manual”.

IRQ-3	assigned to PCI Device
IRQ-4	assigned to PCI Device
IRQ-5	assigned to PCI Device
IRQ-7	assigned to PCI Device
IRQ-9	assigned to PCI Device
IRQ-10	assigned to PCI Device
IRQ-11	assigned to PCI Device
IRQ-12	assigned to PCI Device
IRQ-14	assigned to PCI Device
IRQ-15	assigned to PCI Device

## **PCI / VGA Palette Snoop**

Some old graphic controllers need to “snoop” on the VGA palette and then map it to their display as a way to provide boot information and VGA compatibility. This item allows such snooping to take place.

**The Choices:** **Disabled** (default), Enabled.

## **Maximum Payload Size**


Set the maximum payload size for Transaction packets (TLP).

**The Choice:** **4096** (default.), 128, 256, 512, 1024, 2048.

# GeForce 6100 AM2 BIOS Setup

## 2.8 PC Health Status

■ Figure 8: PC Health Status

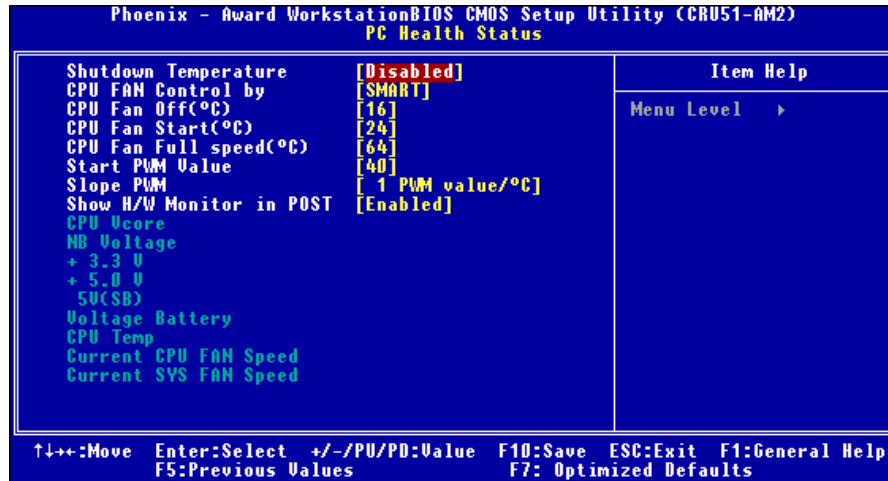

### Shutdown Temperature

This item allows you to set up the CPU shutdown Temperature. This item is only effective under Windows 98 ACPI mode.

**The Choices:** Disabled (default) , 60°C/140F, 65°C/149F, 70°C/158F.

### CPU FAN Control by

Choose “smart” to reduce the noise caused by CPU FAN.

**The Choices:** Smart (default), Always On.

### CPU Fan Off<°C>

If the CPU Temperature is lower than the set value, FAN will turn off.

**The Choices:** 16 (default).

Min= 0, Max= 127, you can key in a DEC number.

---

## **GeForce 6100 AM2 BIOS Setup**

---

### **CPU Fan Start<°C>**

CPU fan starts to work under smart fan function when arrive this set value.

**The Choices:** 24 (default).

Min= 0, Max= 127, you can key in a DEC number.

### **CPU Fan Full speed <°C>**

When CPU temperature is reach the set value, the CPU fan will work under Full Speed.

**The Choices:** 64 (default).

Min= 0, Max= 127, you can key in a DEC number.

### **Start PWM Value**

When CPU temperature arrives to the set value, the CPU fan will work under Smart Fan Function mode. The range is from 0~127, with an interval of 1.

**The Choices:** 40 (default).

Min= 0, Max= 127, you can key in a DEC number.

### **Slope PWM**

Increasing the value of slope PWM will raise the speed of CPU fan.

**The Choices:** 0 PWM Value/°C, 1 PWM Value/°C (default), 2 PWM Value/°C, 4 PWM Value/°C, 8 PWM Value/°C, 16 PWM Value/°C, 32 PWM Value/°C, 64PWM Value/°C.

### **Show H/W Monitor in POST**

If you computer contains a monitoring system, it will show PC health status during POST stage. The item offers several different delay times.

**The Choices:** Enabled (default), Disabled.

### **CPU Vcore, NB Voltage, +3.3V, +5.0V, 5V (SB), Voltage Battery**

Detect the system's voltage status automatically.

### **Current CPU Temp**

This field displays the current temperature of CPU.



## ***GeForce 6100 AM2 BIOS Setup***

---

### **Current CPU FAN Speed**

This field displays the current speed of CPU fan.

### **Current SYS FAN Speed**


This field displays the current speed of SYSTEM fan.

# GeForce 6100 AM2 BIOS Setup

---

## 2.9 Frequency/ Voltage Control

■ Figure 9: Frequency/ Voltage Control

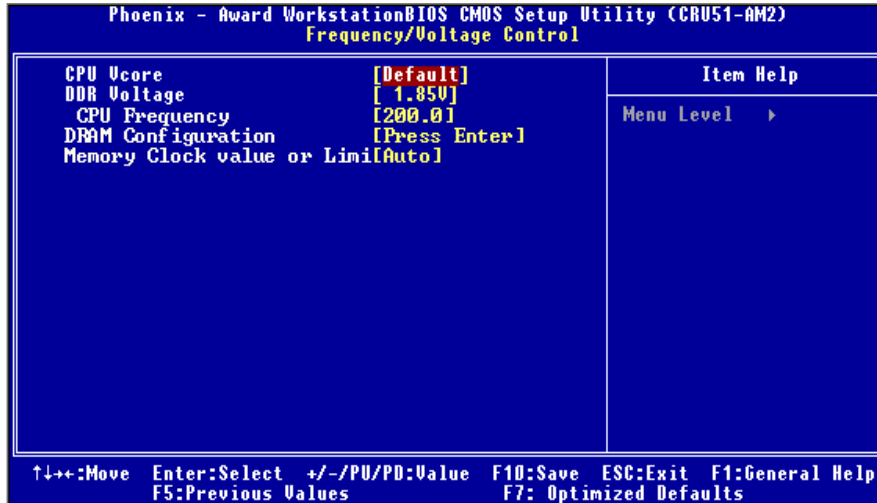

### CPU Vcore

This item allows you to select CPU Vcore.

**The Choices:** **Default** (default), +0.15V,+0.10V,+0.05V.

### DDR Voltage

This item allows you to select DDR Voltage Regulator

**The Choices:** **1.85V** (default), 1.90V, 1.95V,2.0V.

### CPU Frequency

This item allows you to select the CPU Frequency

**The Choices:** **200** (default), 201, 202, 203, 204, 205, 206, 207. 208, 209 ... 450  
( Max is 450)

# GeForce 6100 AM2 BIOS Setup

## DRAM Configuration

Phoenix - Award Workstation BIOS CMOS Setup Utility (N55SA-A21)	
DRAM Configuration	
DQS Training Control	[Perform DQS]
CKE base power down mode	[Enabled]
CKE based power down	[Per Channel]
Memclock tri-stating	[Disabled]
Memory Hole Remapping	[Enabled]
Bottom of UMA DRAM [31:24]	[FC]
DDRII Timing Item	[Disabled]
x TwTr Command Delay	3 bus clocks
x Trfc0 for DIMM0	75ns
x Trfc1 for DIMM1	75ns
x Trfc2 for DIMM2	75ns
x Trfc3 for DIMM3	75ns
x (Twr) Write Recovery Time	6 bus clocks
x (Trtp) Precharge Time	3 Clocks
x (Trc) Row Cycle Time	26 bus clocks
x (Trcd)RAS to CAS R/W Delay	6 clocks
x (Trrd)RAS to RAS Delay	5 clocks
x (Trp)Row Precharge Time	6 clocks
x (Tras) Minimum RAS Active T	18 bus clocks

↑↓←→:Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit F1:General Help  
F5:Previous Values F7: Optimized Defaults

### DQS Training Control

The Choices: Perform DQS (default), Skip DQS.

### CKE base power down mode

The Choices: Enabled (default), Disabled.

### CKE based power down

The Choices: Per Channel (default), Per CS.

### Memclock tri-stating

The Choices: Disabled (default), Enabled.

### Memory Hole Remapping

The Choices: Enabled (default), Disabled.

### Auto Optimize Bottom IO

The Choices: Enabled (default), Disabled.

### Bottom of [31:24] IO space

The Choices: C0 (default).

### DDRII Timing Item

The Choices: Disabled (default), Enabled.

### TwTr Command Delay

The Choices: 3 bus clocks (default).

## **GeForce 6100 AM2 BIOS Setup**

---

**TrTfc0 for DIMM0**

The Choices: 75ns (default).

**TrTfc1 for DIMM1**

The Choices: 75ns (default)

**TrTfc2 for DIMM2**

The Choices: 75ns (default)

**TrTfc3 for DIMM3**

The Choices: 75ns (default)

**<Twr> Write Recovery Time**

The Choices: 6 bus clocks (default).

**<Trtp> Precharge Time**

The Choices: 3 clocks (default).

**<Trc> Row Cycle Time**

The Choices: 26 bus clocks (default).

**<Trcd> RAS to CAS R/W Delay**

The Choices: 6 clocks (default).

**<Trrd> RAS to RAS Delay**

The Choices: 5 clocks (default).

**<Trp> Row Precharge Time**

The Choices: 6 clocks (default).

**<Tras> Minimum RAS Active T**

The Choices: 18 bus clocks (default).