# **User's Manual**

## **HE-840**

Half-size ISA-bus Embedded 5x86-133 CPU Card with AMD Am5x86-133 MHz CPU, 8 MB EDO DRAM, Flat Panel / CRT SVGA, 10/100 Mbps LAN Interfaces, Four Serial Ports and DiskOnChip Socket

### HE-840 User's Manual Version 1.0

Copyright<sup>©</sup> 2002,. All rights reserved. This document is copyrighted and all rights are reserved. The information in this document is subject to change without prior notice to make improvements to the products.

This document contains proprietary information and protected by copyright. No part of this document may be reproduced, copied, or translated in any form or any means without prior written permission of the manufacturer.

All trademarks and/or registered trademarks contains in this document are property of their respective owners.

S/N: OPMHE840-10

# **Packing List**

| Hardware                    |     |
|-----------------------------|-----|
| HE-840VL CPU Card           | X 1 |
| Cable Kit                   |     |
| IDE Flat Cable              |     |
| FDD Cable                   |     |
| DB25 LPT Port Cable         |     |
| Dual DB9 COM Port Cable     | X 2 |
| Printed Matter and Software |     |
| User's Manual               | X 1 |
| Driver Disk Kit             | X 1 |

## **Table of Contents**

| Chapter 1. | Introduction                         | 2  |
|------------|--------------------------------------|----|
| 1.1        | Product Overview                     | 2  |
| 1.2        | Specifications                       | 3  |
| 1.3        | Component Placement                  | 6  |
| Chapter 2. | Hardware Setup                       | 7  |
| 2.1        | Connectors and Jumpers Location      | 7  |
| 2.2        | Jumpers Settings                     | 8  |
| 2.3        | Connectors                           | 9  |
| 2.4        | Switches & Indicators Pin Assignment | 10 |
| 2.5        | LCD Connector Pin Assignment         | 11 |
| Chapter 3. | BIOS Setup                           | 12 |
| Chapter 4. | Driver installation                  | 13 |

## **Chapter 1. Introduction**

### 1.1 Product Overview

The HE-840 Single Board Computer is an all-in-one industrial half-size ISA-bus CPU card. It integrated with embedded AMD Am5x86-133 CPU and 8 MB of EDO DRAM, PCI-based flat panel / CRT SVGA, 10/100 Mbps Fast Ethernet interfaces, 4 serial ports and DiskOnChip embedded flash disk socket.

#### **Embedded 486 Level CPU**

AMD Am5x86-133 CPU provides the embedded platform with 486DX5 architecture at 133 MHz of working frequency.

### **Integrated System Memory**

Onboard 8 MB of EDO DRAM and one 72-pin SIMM expansive slot supports additional 32 MB of memory.

### Flat Panel SVGA Interface

PCI-based C&T 69000 flat panel / CRT SVGA with 2 MB of on-die video memory supports flat panel and CRT display.

#### **Fast Ethernet Interface**

PCI-based 10/100 Mbps Fast Ethernet interface, 10Base-T/100Base-TX, auto-switching Fast Ethernet, full duplex, IEEE 802.3U compliant.

#### **Four Serial Ports**

Four serial ports include three RS-232C and one jumper selectable RS-232C/485 ports with high speed 16C550 compatible UART with 16 byte FIFO and BIOS enabled/disabled.

#### **DiskOnChip Interface**

32-pin M-systems DiskOnChip 2000 socket supports 2 to 288 MB embedded solid state of flash disk.

### 1.2 Specifications

### **General Specification**

- CPU (installed): AMD Am5x86-133 embedded CPU with jumper selectable speed (75/100/133) for the low power, low temperature operation
- **Chipset**: ALi 1487 / 1489
- **BIOS**: AWARD PCI/ISA PnP system BIOS
- Green Function: power saving options supported in BIOS. DOZE / STANDBY / SUSPEND modes
- L2 Cache: 128 KB pipelined Burst
- DRAM Memory: 8 MB up to 40MB EDO DRAM, with onboard 8 MB of EDO DRAM and one 72-pin single sided SIMM slot supports up to 32 MB of expansive EDO DRAM
- Bus Interface: ISA and PC/104
- Data Bus: 16-bit
- **Bus Speed**: ISA, PC/104 8.3MHz
- DMA Channels: 7Interrupt Levels: 16
- Interrupt Levels : 15
- PCI Enhanced IDE: supports two ports and up to four ATAPI devices.
  Supports IDE PIO mode up to Mode 4 and DMA mode 2.
- Watchdog Timer: generates an NMI or system RESET when your application loses control over the system. The timer interval is: 1, 2, 10, 20, 110 and 220 seconds.
- Real-time Clock: Benchmarq bq3287AMT (Dallas DS-12B887 compatible) RTC. CMOS data backup of BIOS setup and BIOS default.
- Keyboard and Mouse Connectors:
  - External 6-pin mini DIN for PS/2 Mouse on bracket
  - External 6-pin mini DIN for PS/2 Keyboard on bracket
  - Onboard 5-pin box header connector for AT keyboard

### **High Speed Multi-I/O**

• **Chipset** : ALi 5113

- Serial Ports: three high speed RS-232C ports (COM1, COM3, COM4) and one jumper selectable RS-232C/485 port (COM2). All with high speed 16C550 compatible UART with 16 byte FIFO and BIOS enabled/disabled.
- Floppy Disk Drive interface: up to two floppy drives, 5.25" (360 KB or 1.2 MB) and 3.5" (720 KB, 1.44MB or 2.88 MB), BIOS enabled/disabled.
- Bi-directional Parallel Port : SPP, EPP and ECP mode, BIOS enabled/disabled.

#### Flat Panel / CRT SVGA Interface

• Chipset: PCI-based C&T69000 with 2 MB of on-die video memory

BIOS : combined with system BIOS

• Display Type : CRT, TFT, DSTN, SSTN, EL, Plasma Quarter VGA

Display Mode :

| VGA Type | Resolution  | Color               | Refresh Rate |
|----------|-------------|---------------------|--------------|
| SVGA     | 800 x 600   | True Color / 24 bpp | 60/75/85 Hz  |
| XGA      | 1024 x 768  | High Color / 16 bpp | 60/75/85 Hz  |
| SXGA     | 1280 x 1024 | 256 Color / 8 bpp   | 60 Hz        |

#### Connectors :

- onboard 50-pin box header for Flat Panel display

- external 15-pin D-sub connector on bracket for CRT

### Flash Disk DiskOnChip 2000

Package : Single Chip Flash Disk in 32-pin DIP JEDEC

• Capacity : up to 288 MB

Data Reliability : ECC/EDC error correction

• Memory Window: 8 KByte

### **Environmental and Power**


Power Requirement: +5V (4.75~5.25 V) @ 1.8A typical (onboard CPU and EDORAM), +/-12 V

• Board Dimension : 185mm x 122mm (L x W)

• Board Weight : 0.24Kg

• Operating Temperature : 0 to  $60^{\circ}$ C (32 to  $140^{\circ}$ F)


## 1.3 Component Placement

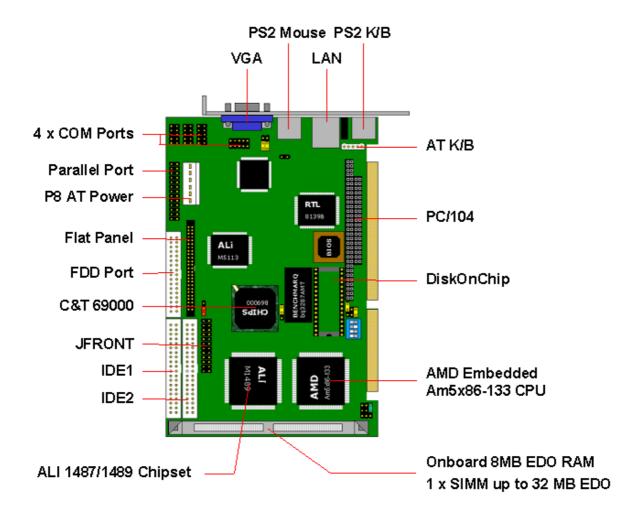

6 HE-840 User's Manual

## **Chapter 2. Hardware Setup**

## 2.1 Connectors and Jumpers Location

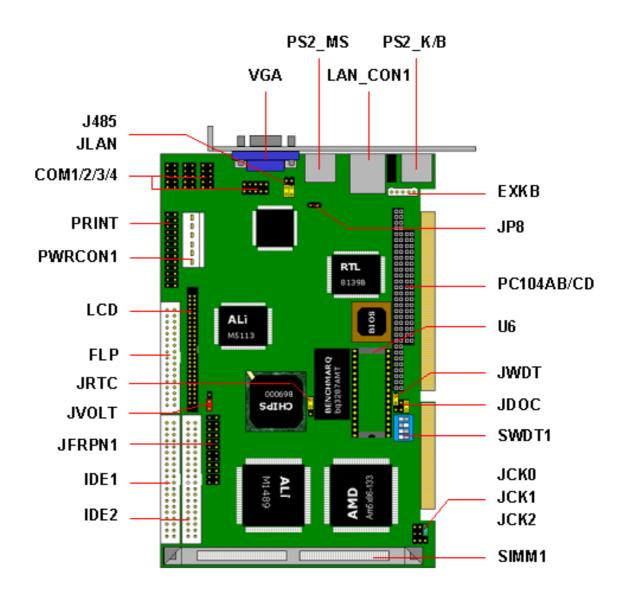

# 2.2 Jumpers Settings


| JCK0/1/2 | CPU Spe  | ed                        |            |               |       |
|----------|----------|---------------------------|------------|---------------|-------|
| JCK0     | JCK1     | JCK2                      | Speed      |               |       |
| OFF      | OFF      | 2-3                       | 133 MH     | Z             |       |
| OFF      | OFF      | 1-2                       | 100 MH     | Z             |       |
| 2-3      | 2-3      | 2-3                       | 75 MHz     |               |       |
| JRTC     | RTC/COI  | MS Operatio               | n          |               |       |
| 1-2      | Clear CC | MS                        |            |               |       |
| 2-3      | Normal C | peration                  |            |               |       |
| JWDT     | Watchdo  | g Timer Set               | ting       |               |       |
| 1-2      | IO Check | (                         |            |               |       |
| 2-3      | Reset    |                           |            |               |       |
| OFF      | Disable  |                           |            |               |       |
|          |          |                           |            |               |       |
| SWDT1    | Watchdo  | g Timer Tim               | eout Value | Setting       |       |
| 1        | 2        | 3                         | 4          | Timeout (Seco | onds) |
| OFF      | OFF      | ON                        | OFF        | 1             |       |
| OFF      | OFF      | ON                        | ON         | 2             |       |
| OFF      | ON       | ON                        | OFF        | 10            |       |
| OFF      | ON       | ON                        | ON         | 20            |       |
| ON       | OFF      | OFF                       | OFF        | 110           |       |
| ON       | OFF      | OFF                       | ON         | 220           |       |
| JDOC     | DiskOnC  | hip Address               | Setting    |               |       |
| 1-2      | D000h    |                           |            |               |       |
| 2-3      | D800h    |                           |            |               |       |
| OFF      | Disable  |                           |            |               |       |
| J485     | COM2 R   | S-232C/485 N              | Mode Selec | tion          |       |
| 1-2      | RS-232C  |                           |            |               |       |
| 2-3      | RS-485   |                           |            |               |       |
| JVOLT    | Flat Pan | el V <sub>cc</sub> Voltag | je Setting |               |       |
| 1-2      | 5 Volt   |                           | _          |               |       |
| 2-3      | 3.3 Volt |                           |            |               |       |
|          |          |                           |            |               |       |

**Default Setting** 

## 2.3 Connectors

| IDE1       | 40-pin Primary IDE Port                |
|------------|--|
| IDE2       | 40-pin Secondary IDE Port              |
| FLP        | 34-pin FDD Port                        |
| PRINT      | 26-pin Parallel Port                   |
| LCD        | 50-pin Flat Panel Connector            |
| JP8        | 2-pin RS485 COM2 Serial Port           |
| EXKB       | 5-pin AT Keyboard Connector            |
| PWRCON1    | 6-pin P8 AT Power Connector            |
| COM1       | 10-pin COM1 RS-232C Serial Port        |
| COM2       | 10-pin COM2 RS-232C Serial Port        |
| COM3       | 10-pin COM3 RS-232C Serial Port        |
| COM4       | 10-pin COM4 RS-232C Serial Port        |
| SIMM1      | 72-pin SIMM Slot                       |
| U6         | 32-pin DiskOnChip Socket               |
| PC104AB/CD | PC/104 Connector                       |
| JFRPN1     | Switched and Indicators                |
| VGA        | DB15 Female VGA Port on Bracket        |
| PS2_K/B    | 6-pin MiniDIN PS/2 Keyboard on Bracket |
| PS2_MS     | 6-pin MiniDIN PS/2 Mouse on Bracket    |
| LAN_CON1   | RJ45 LAN Port on Bracket               |
|            |  |

## 2.4 Switches & Indicators Pin Assignment

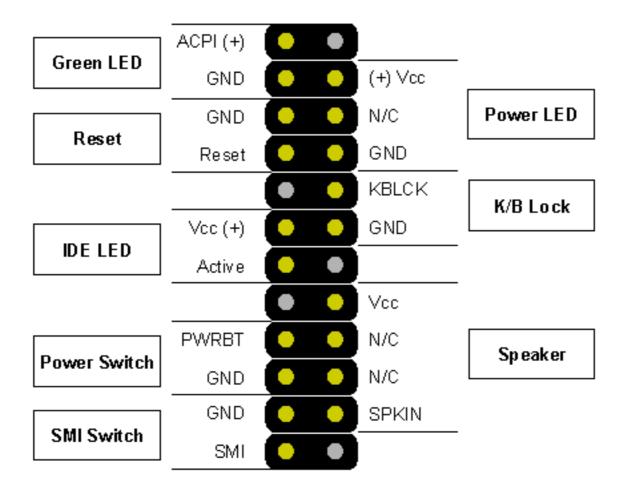

10

# 2.5 LCD Connector Pin Assignment

Connector: LCD

Type: onboard 50-pin box header

| Pin | Signal                | Pin | Signal |
|-----|-----------------------|-----|--------|
| 1   | +12V                  | 2   | +12V   |
| 3   | GND                   | 4   | GND    |
| 5   | V <sub>CC</sub> (LCD) | 6   | ENAVDD |
| 7   | ENAVEE                | 8   | GND    |
| 9   | P0                    | 10  | P1     |
| 11  | P2                    | 12  | P3     |
| 13  | P4                    | 14  | P5     |
| 15  | P6                    | 16  | P7     |
| 17  | P8                    | 18  | P9     |
| 19  | P10                   | 20  | P11    |
| 21  | P12                   | 22  | P13    |
| 23  | P14                   | 24  | P15    |
| 25  | P16                   | 26  | P17    |
| 27  | P18                   | 28  | P19    |
| 29  | P20                   | 30  | P21    |
| 31  | P22                   | 32  | P23    |
| 33  | P24                   | 34  | P25    |
| 35  | SHFCLK                | 36  | FLM    |
| 37  | M                     | 38  | LP     |
| 39  | GND                   | 40  | ENABKL |
| 41  | P26                   | 42  | P27    |
| 43  | P28                   | 44  | P29    |
| 45  | P30                   | 46  | P31    |
| 47  | P32                   | 48  | P33    |
| 49  | P34                   | 50  | P35    |

## **Chapter 3. BIOS Setup**

The single board computer uses the Award BIOS for the system configuration. The Award BIOS in the single board computer is a customized version of the industrial standard BIOS for IBM PC AT-compatible computers. It supports Intel x86 and compatible CPU architecture based processors and computers. The BIOS provides critical low-level support for the system central processing, memory and I/O sub-systems.

The BIOS setup program of the single board computer let the customers modify the basic configuration setting. The settings are stored in a dedicated battery-backed memory, NVRAM, retains the information when the power is turned off. If the battery runs out of the power, then the settings of BIOS will come back to the default setting.

The BIOS section of the manual is subject to change without notice and is provided here for reference purpose only. The settings and configurations of the BIOS are current at the time of print, and therefore they may not be exactly the same as that displayed on your screen.

12

## **Chapter 4. Driver installation**

You can use the auto run menu of this CD Disc. The screen shows as you BIOS ID then please choose your preferred mode of this installation program:

Detect and select your motherboard type automatically. Select motherboard type on your own manually.

The CD Driver Disk for Single Board Computer's Chipset Setup includes drivers for IDE, VGA, and LAN interfaces.