

# LS-37L


---

3.5 inch Desktop Miniboard

**User's Manual**

**Edition 2.0**

**2022/11/15**

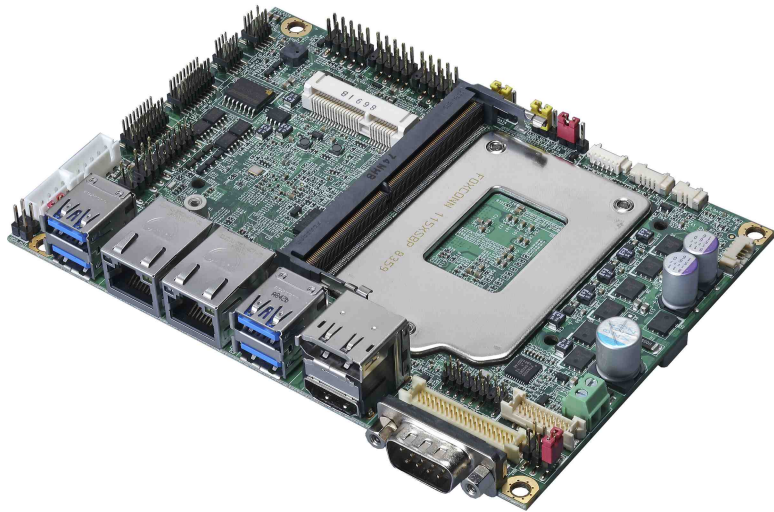

## Copyright

Copyright 2021, all rights reserved. This document is copyrighted and all rights are reserved. The information in this document is subject to change without prior notice to make improvements to the products.

This document contains proprietary information and protected by copyright. No part of this document may be reproduced, copied, or translated in any form or any means without prior written permission of the manufacturer.

All trademarks and/or registered trademarks contains in this document are property of their respective owners.

## Disclaimer

The company shall not be liable for any incidental or consequential damages resulting from the performance or use of this product.

The company does not issue a warranty of any kind, express or implied, including without limitation implied warranties of merchantability or fitness for a particular purpose.

The company has the right to revise the manual or include changes in the specifications of the product described within it at any time without notice and without obligation to notify any person of such revision or changes.

## Trademark

All trademarks are the property of their respective holders.

---


Any questions please visit our website at <http://www.commell.com.tw>

## Packing List:

Please check the package content before you starting using the board.



1 x LS-37L 3.5 inch Miniboard

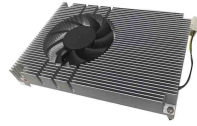

1 x Cooler Fan  
(OHSF-37L / 2181010033 )



1 xDC Input Power Cable  
(OALDC-B / 1040513)



1 x SATA Power Cable  
(OALSATA15-2PJ / 1040613)



1 x SATA CABLE  
(OALSATA3-H10-L35 / 1040523)




1 x PS/2 Keyboard & Mouse cable  
(OALPS2/KM / 1040131)




1 x VGA Cable  
(OALVGA-SNB-7) / (1040557)




1 x DVI module  
(BADPDVI\_A & OALDVI-DF13)  
(4120008011 & 1040483)

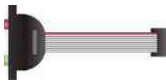

1 x Audio cable  
(OALPJ-HDUNB / 1040123)

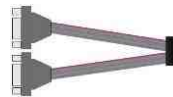

1 x Dual COM cable  
(OALES-BKU2NB / 1040090)

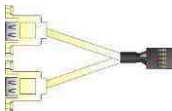

1 xUSB2.0 cable  
(OALUSBA-3 / 1040173) (Optional)



1 x Driver CD and Mini card screw  
(Including User's Manual)

## Index

<b>Chapter 1 &lt;Introduction&gt;</b> .....	4
1.1 <Product Overview>.....	4
1.2 <Product Specification> .....	5
1.3 <Block Diagram>.....	6
<b>Chapter 2 &lt;Hardware setup&gt;</b> .....	7
2.1 <Connector Location and Reference> .....	7
2.1.1 <Internal connectors list> .....	8
2.1.2 <External connectors list>.....	8
2.2 <CPU, Heatsink and Memory installation guide> .....	9
2.2.1 <CPU installation> .....	9
2.2.2 <Cooler Fan installation> .....	10
2.2.3 <Memory Setup> .....	12
2.3 <Jumper Location and Reference> .....	13
2.3.1 <Jumper list> .....	13
2.3.2 <Clear CMOS and Power on type selection>.....	14
2.4 <I/O interface> .....	14
2.4.1 <Serial ATA interface> .....	14
2.4.2 <Ethernet interface>.....	15
2.4.3 <Display interface> .....	15
2.4.4 <Serial Port interface> .....	18
2.4.5 <USB interface>.....	21
2.4.6 <Audio interface> .....	22
2.4.7 <Expansion slot>.....	23
2.4.8 <Front panel switch and indicator> .....	24
2.4.9 <GPIO and Other interface> .....	25
2.5 <Power supply> .....	27
2.5.1 <Power input> .....	27
2.5.2 <Power output>.....	28
<b>Appendix A &lt;Flash BIOS&gt;</b> .....	29
<b>Appendix B &lt;LCD Panel Type select&gt;</b> .....	30
<b>Appendix C &lt;Programmable Watch Dog Timer&gt;</b> .....	32
<b>Appendix D &lt;Hardware Monitor&gt;</b> .....	34
<b>Appendix E &lt;Programmable GPIO&gt;</b> .....	35
<b>Appendix F &lt;RAID Setting&gt;</b> .....	36
<b>Appendix G &lt;Setup ADP-3355,ADP-3460&gt;</b> .....	37
Contact information .....	37

# Chapter 1 <Introduction>

## 1.1 <Product Overview>

**LS-37L** is 3.5 inch Miniboard which supports 8th & 9th Gen Intel® Core™, Pentium® and Celeron® processor families with Intel® Q370 Chipset, integrated HD Graphics , DDR4 memory, Realtek High Definition Audio, Intel Gigabit LAN, Serial ATA3

### **Intel Coffee Lake-S Processor with Intel® Q370 Chipset**

8th & 9th Gen Intel® Core™, Pentium® and Celeron® processor families are new generation and multi-core processor built on 14 nanometer process.

It provides new Graphics support 3 independent displays, Memory is support up to 32GB of DDR4, better performance, flexibility and more enhanced security that is suitable for a variety of intelligent systems the ideal choice.

### **Flexible Expansion Interface**

It includes 1 x Minicard slot, 2 x RS232/RS485/RS422, 4 x USB3.1 Gen2, and 4 x USB2.0.

### **Coffee Lake only support Windows10 64bit, Linux**

Intel only supports Windows 10 64bit. It may lose some drivers if you use other Windows version.

## 1.2 <Product Specification>

### System

Processor	Support 8th & 9th Gen Intel® Core™ Desktop Processors, FCLGA1151 package (Support up to 65W TDP)(Note1)
Chipset	Intel® Q370
Memory	1 x DDR4 DIMM 2666 MHz up to 32GB, Support Non-ECC, unbuffered memory (i3, Pentium, Celeron CPU support 2400 MHz only)
Watchdog Timer	Generates a system reset with internal timer for 1min/s - 255min/s
Real Time Clock	Chipset integrated RTC with onboard lithium battery
Expansion	1 x MiniPCIe (support mSATA)

### Graphics

Chipset	Intel® UHD Graphics
Display Interface	1 x DisplayPort(Optional), 1 x HDMI 1 x DVI, 1 x LVDS, 1 x VGA

### LAN

Chip	1 x Intel® I219-LM Gigabit PHY LAN (Support iAMT12.0) 1 x Intel® I210-AT Gigabit LAN
------	---

### I/O


Serial ATA	2 x SATA3 interface with 600MB/s transfer rate
Audio	Realtek ALC262 HD Audio
Internal I/O	2 x SATA3, 4 x USB2.0 3 x RS232, 2 x RS232/485/422 1 x DVI, 1 x VGA , 1 x LVDS, 1 x LCD inverter, 1 x GPIO, 1 x Audio, 1 x PS/2, 1 x SMBus
Rear I/O	1 x DisplayPort, 1 x HDMI 4 x USB3.1 Gen2, 2 x LAN, 1 x RS232

### Mechanical & Environmental

Power Requirement	DC input 9-25V
Size	146mm x 101mm (L x W)
Temperature	Operating within 0°C~60°C (32°F~140°F) Storage within -20°C~80°C (-4°F~176°F)
Relative Humidity	10%~90%, non-condensing



Note1: 8 cores TDP 65W CPU is not supported.(E.g. i7-9700E)

### 1.3 <Block Diagram>

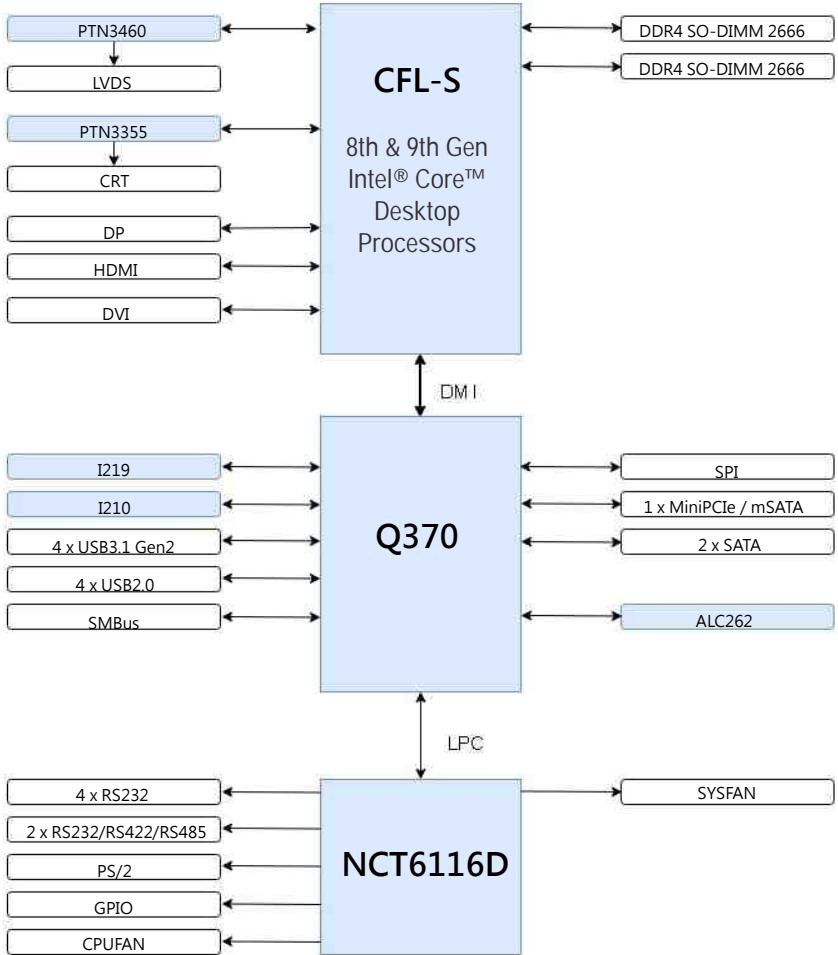

# Chapter 2 <Hardware setup>

## 2.1 <Connector Location and Reference>

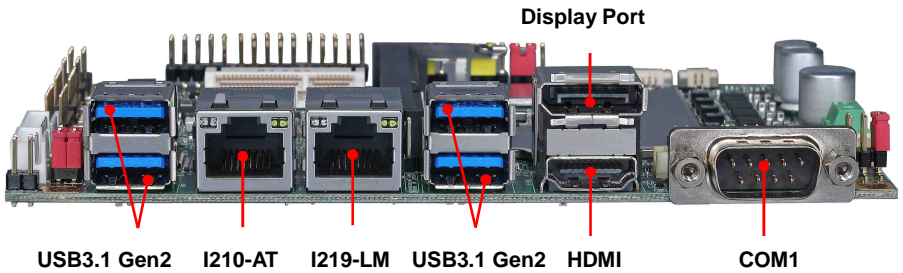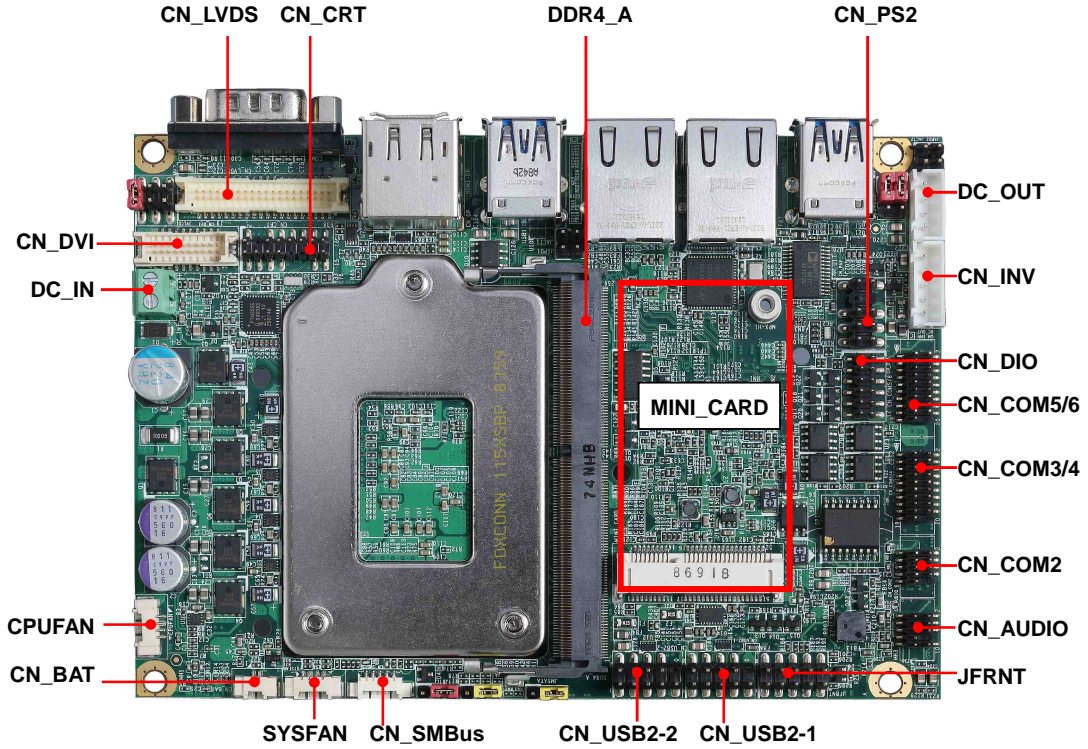



## 2.1.1 <Internal connectors list>

Connector	Function
DDR4_A	260-pin DDR4 SO-DIMM slot
CN_SATA3-1/2	10-pin Serial ATA3 connector
CN_AUDIO	5 x 2-pin audio pin header
CN_LVDS	20 x 2-pin LVDS connector
CN_INV	5-pin LCD inverter connector
CN_DVI	10 x 2-pin DVI connector
CN_CRT	16-pin VGA connector
CN_COM 3/4	20-pin RS232/RS422/485 connector
CN_COM 5/6	20-pin RS232 connector
CN_USB 2-1/2-2	5 x 2-pin USB2.0 pin header
CN_PS2	5 x 2-pin PS/2 pin header
CN_DIO	6 x 2-pin digital I/O connector
CN_SMBus	5-pin SMBus connector
CN_BAT	2-pin Battery connector
CPUFAN	4-pin CPU fan connector
SYSFAN	4-pin system fan connector
MINI_CARD	52-pin MiniPCIe card slot
JFRNT	14-pin front panel switch/indicator connector
DC_IN	2-pin power input Terminal Block

## 2.1.2 <External connectors list>

Connector	Function
Display Port	DisplayPort connector
HDMI	HDMI connector
USB3.1 Gen2 1/2	USB3.1 Gen2 connector
LAN 1/2	RJ45 connector
COM1	DB9 Serial port connector

## 2.2 <CPU, Heatsink and Memory installation guide>

### 2.2.1 <CPU installation>

LS-37L has a LGA1151 CPU socket onboard; please check following steps to install the processor properly.


**Attention If LS-37L needs RMA, please Keep CPU socket cover on the CPU Socket.**

**Warning If CPU Socket internal Pin damage, We could not provide warranty.**




8th generation Intel® Core™, Pentium® and Celeron® processor , FCLGA1151 package


1. Lift this bar

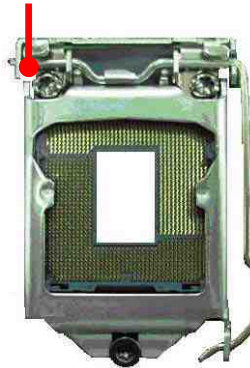

2. Uncover this plate

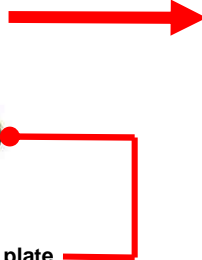

Checked point

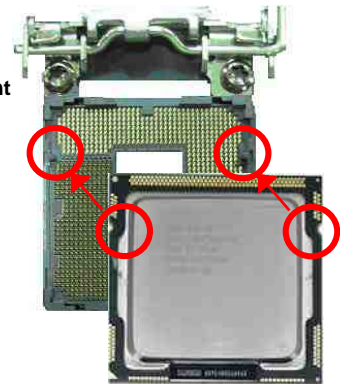

3. Place the CPU on the top of the pins

4. Cover this plate




5. Lock this bar




## 2.2.2 <Cooler Fan installation>


Step1. Apply Thermal Paste on the CPU.

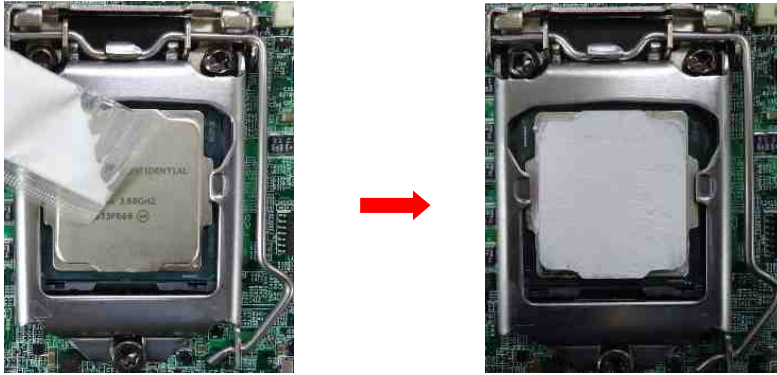


Step2. Mount the Heatsink after aligning.

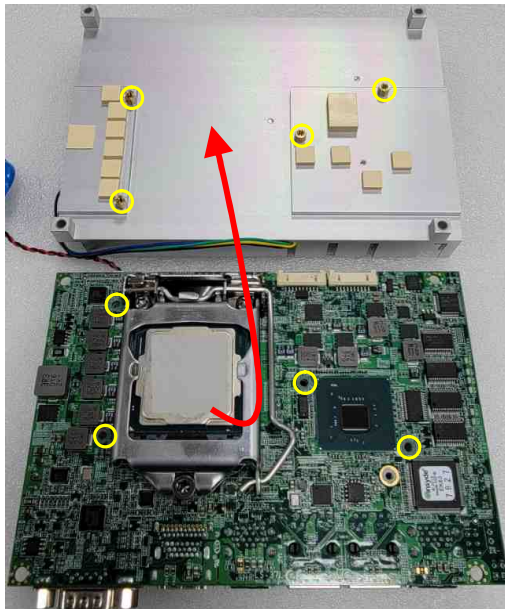

**Step3. Screw on the Heatsink.**

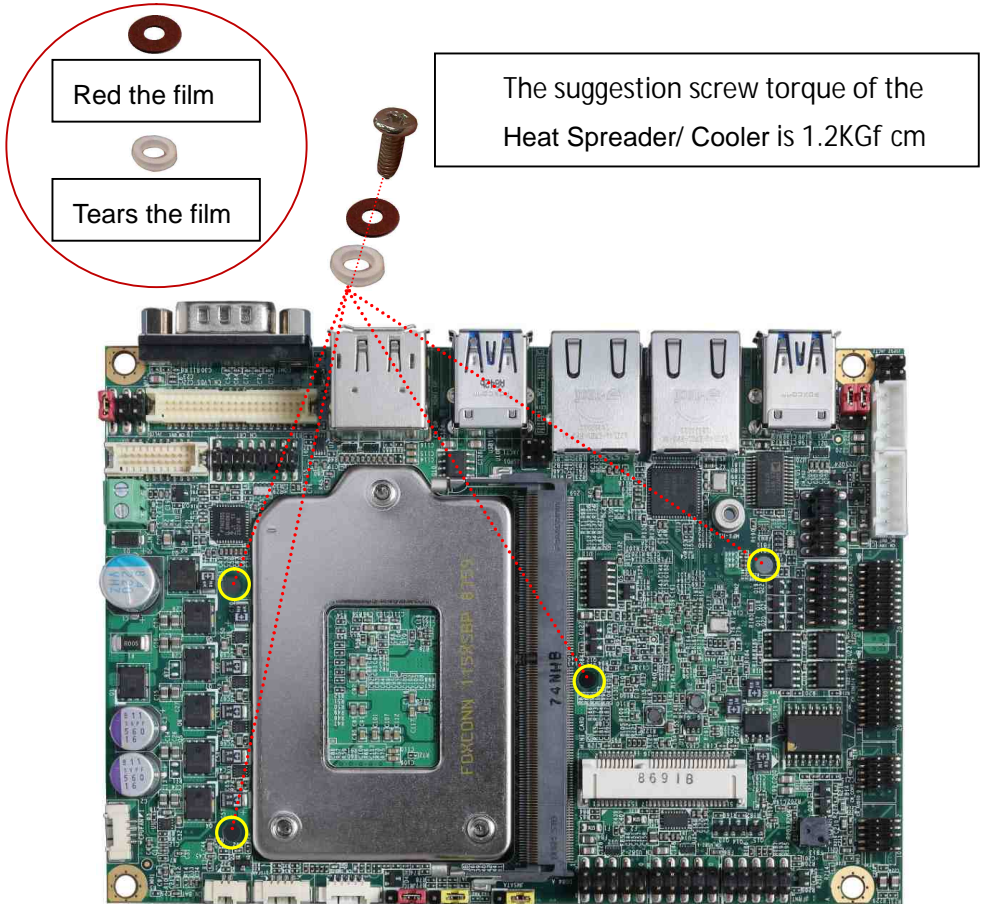

**Step4. Install Fan, finish.**

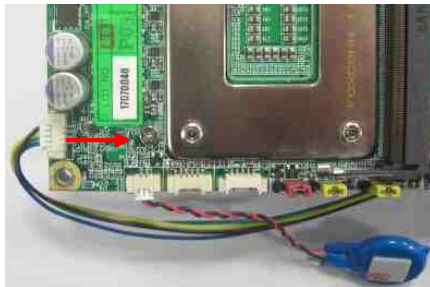


### 2.2.3 <Memory Setup>


LS-37L has 260-pin DDR4 DIMM support up to 32GB of memory capacity and 1.2 Voltage. The memory frequency supports 2666 MHz. Only Non-ECC memory is supported.

**In the process, the board must be powered off.**


1. Put the memory tilt into the slot. Note the Memory notch key aligned slot key.
2. Then press down till lock into the mounting notch.

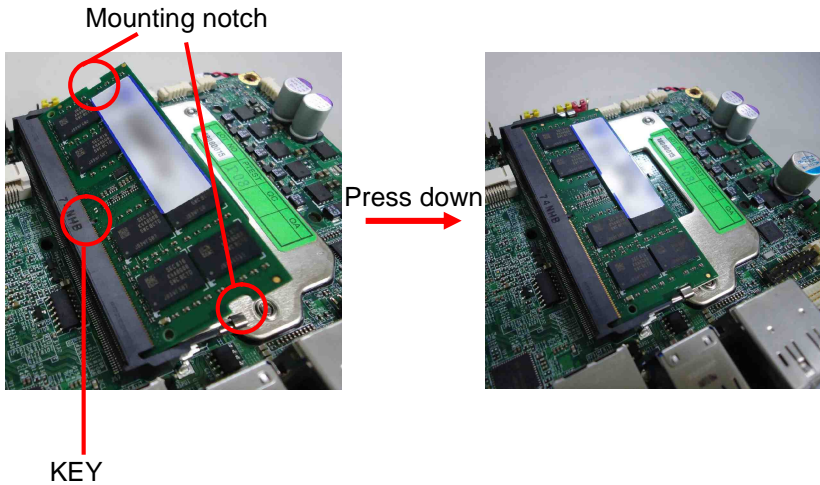

3. To remove the memory, push outward on both sides of the latch.

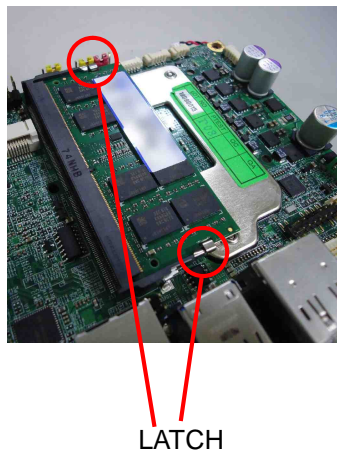

## 2.3 <Jumper Location and Reference>

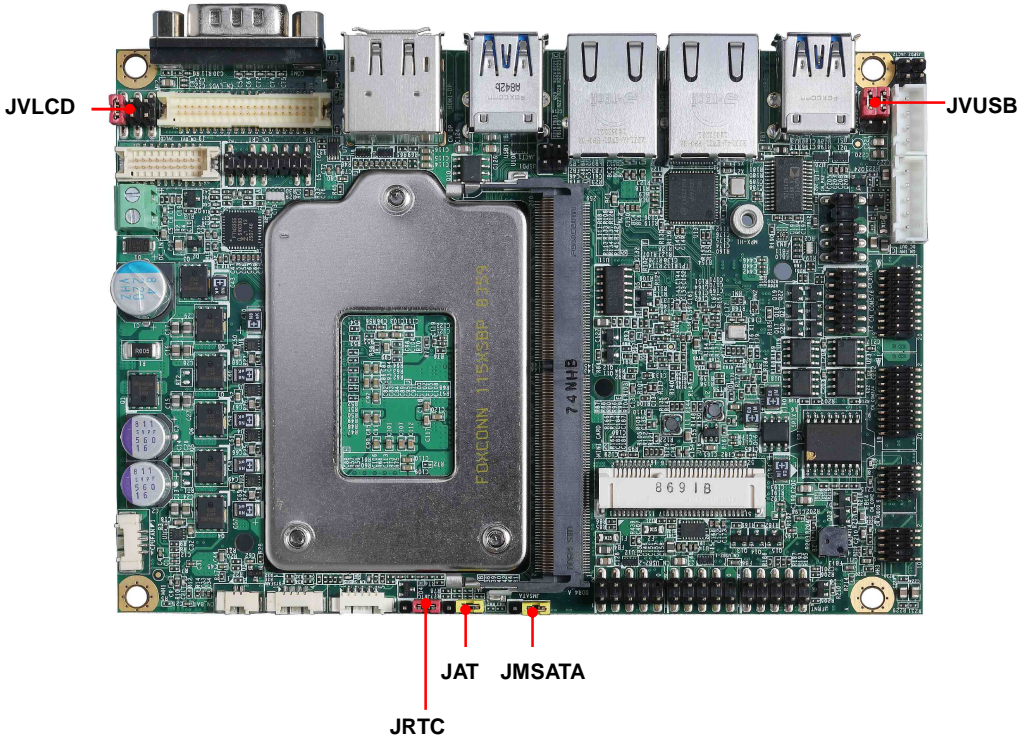

### 2.3.1 <Jumper list>

Jumper	Function
JAT	Power mode select
JRTC	CMOS Normal/Clear Setting
JVLCD	Panel Voltage Setting
JMSATA	MiniCard mSATA Setting
JVUSB	USB Voltage Setting

## 2.3.2 <Clear CMOS and Power on type selection>

The board's data of CMOS can be setting in BIOS. If the board refuses to boot due to inappropriate CMOS settings, here is how to proceed to clear (reset) the CMOS to its default values.

**JAT:** AT/ATX mode select jumper

Jumper settings	Function
1-2	AT mode
2-3	ATX mode (Default)



**JRTC:** Clear CMOS data jumper

Jumper settings	Function
1-2	Clear CMOS
2-3	Normal (Default)




## 2.4 <I/O interface>

### 2.4.1 <Serial ATA interface>

**CN\_SATA3-1/2:** SATA3 10-pin connector

Pin	Signal
1	GND
2	TX+
3	TX-
4	GND
5	NA
6	NA
7	GND
8	RX-
9	RX+
10	GND

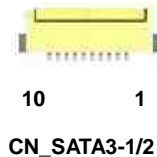


**CN\_SATA3-2 CN\_SATA3-1**



### 2.4.2 <Ethernet interface>


The board provide I219-LM PHY Gigabit Ethernet and I210-AT Gigabit Ethernet on rear I/O. Intel I219-LM and I210 supports operation at 10/100/1000 Mb/s data rates, with IEEE802.3 compliance and Wake-On-LAN supported.

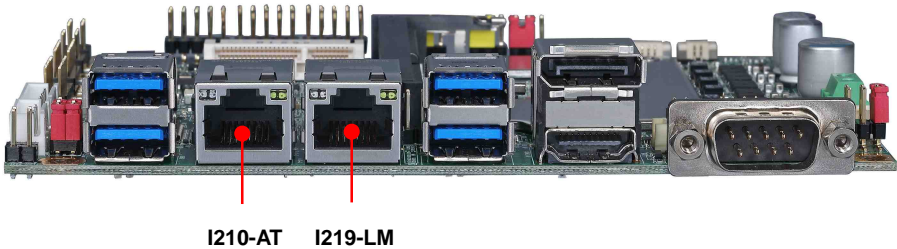


### 2.4.3 <Display interface>

Based on the 8th & 9th Gen CPU with built-in HD Graphics 630, VGA and DVI up to **1920x1080@60Hz**, DisplayPort up to **4096x2304@60Hz** , HDMI up to **4096x2304@24Hz** on rear IO. About the internal Display, LVDS (PTN3460) up to **1920x1200@60Hz** support 18/24-bit color depth and single/dual channel. About select LCD Panel Type in BIOS, please refer **Appendix B**.

The built-in HD Graphics support triple display function with clone mode and extended mode.

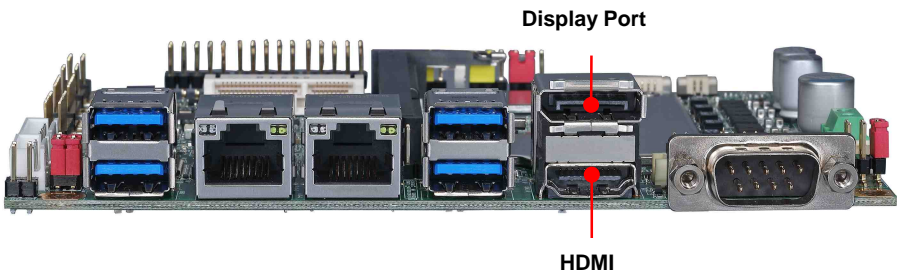

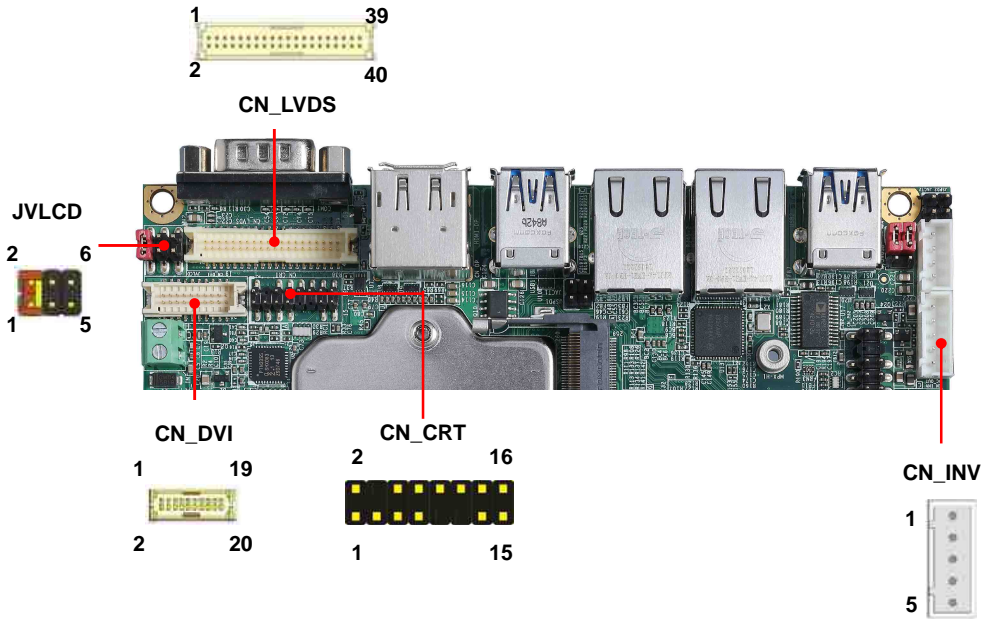


**CN\_CRT:** VGA 16-pin connector (Pitch 2.00 mm)

Pin	Signal	Pin	Signal
1	BR	2	BG
3	BB	4	NC
5	IOGND1	6	IOGND1
7	IOGND1	8	IOGND1
9	NC	10	IOGND1
11	NC	12	5VCDA
13	5HSYNC	14	5VSYNC
15	5VCLK	16	NC

**CN\_DVI:** DVI on board 20-pin connector

Pin	Signal	Pin	Signal
1	+5V	2	N/C
3	HPD	4	Ground
5	TMDSTX0N	6	TMDSTX0P
7	Ground	8	TMDSTX1N
9	TMDSTX1P	10	Ground
11	TMDSTX2N	12	TMDSTX2P
13	Ground	14	Ground
15	TMDSTXCP	16	Ground

17	DVI_DA	18	DVI_SL
19	N/C	20	N/C

**CN\_LVDS:** LVDS 40-pin connector (Model: HIROSE DF13-40DP-1.25V compatible)

Pin	Signal	Pin	Signal
2	Set by JVLCD	1	Set by JVLCD
4	Detect (Active low)	3	GND
6	A_LVDS_0-	5	B_LVDS_0-
8	A_LVDS_0+	7	B_LVDS_0+
10	GND	9	GND
12	A_LVDS_1-	11	B_LVDS_1-
14	A_LVDS_1+	13	B_LVDS_1+
16	GND	15	GND
18	A_LVDS_2-	17	B_LVDS_2-
20	A_LVDS_2+	19	B_LVDS_2+
22	GND	21	GND
24	A_LVDS_CLK-	23	B_LVDS_3-
26	A_LVDS_CLK+	25	B_LVDS_3+
28	GND	27	GND
30	A_LVDS_3-	29	B_LVDS_CLK-
32	A_LVDS_3+	31	B_LVDS_CLK+
34	GND	33	GND
36	LVDS_DDCSCL	35	NC
38	LVDS_DDCSDA	37	NC
40	NC	39	NC

**Pin4 only need to be connected to GND**


**CN\_INV:** LVDS 5-pin Backlight power connector

Pin	Signal
1	12V
2	Backlight Control
3	GND
4	GND
5	Enable Backlight

**JVLCD:** LVDS panel power select jumper

Jumper settings	Function
1-2	3.3V (Default)
2-3	5V
5-6	12V

### 2.4.4 <Serial Port interface>

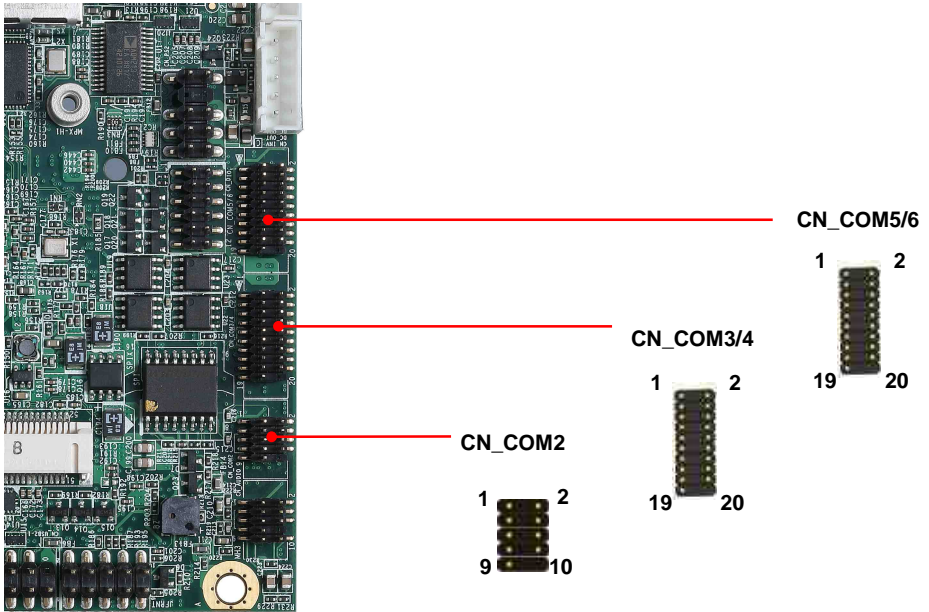

**COM1: DB9 connector**

Pin	Signal	Pin	Signal
1	DCD	2	RXD
3	TXD	4	DTR
5	GND	6	DSR
7	RTS	8	CTS
9	RI		

**COM2:** RS232 9-pin header

Pin	Signal	Pin	Signal
1	DCD	2	RXD
3	TXD	4	DTR
5	GND	6	DSR
7	RTS	8	CTS
9	RI		

**COM3/4:** RS232/422/485 20-pin header (Pitch 2.54 x 1.27mm)

Pin	Signal	Pin	Signal
1	DCD1/ 422TX-/ 485-	2	RXD1/ 422TX+/ 485+
3	TXD1	4	DTR1
5	GND	6	DSR1/ 422RX+
7	RTS1	8	CTS1/ 422RX-
9	RI1	10	NC
11	DCD2/ 422TX-/ 485-	12	RXD2/ 422TX+/ 485+
13	TXD2	14	DTR2
15	GND	16	DSR2/ 422RX+
17	RTS2	18	CTS2/ 422RX-
19	RI2	20	Key

**COM3/4** RS-232/422/485 can set by BIOS.

You can find the setting from

On **Front Page** screen, click Setup Utility

On **Advanced** screen, click SIO NCT6116D

Then click RS232/RS422/RS485 Setting

RS232/RS422/RS485 Setting		
Input/Output mode	Input	Disable
	Output	Enable RS232/RS422/RS485 Setting
PEI Phase Output value	High	RS422/RS485
	Low	RS232 (Default)
Dxe Phase Output value (After PEI Phase)	High	RS422/RS485
	Low	RS232 (Default)

**PEI** : Pre-EFI Initialization, **DXE**: Driver Execution Environment

RS-485 cable modification:

CN\_COM3/4 RTX- Data- : short Pin1& Pin8

CN\_COM3/4 RTX+ Data+ : short Pin2& Pin6


CN\_COM3/4 RTX- Data- : short Pin11& Pin18

CN\_COM3/4 RTX+ Data+ : short Pin12& Pin16

**COM5/6:** RS232 20-pin header (Pitch 2.54 x 1.27mm)


Pin	Signal	Pin	Signal
1	DCD1	2	RXD1
3	TXD1	4	DTR1
5	GND	6	DSR1
7	RTS1	8	CTS1
9	RI1	10	NC
11	DCD2	12	RXD2
13	TXD2	14	DTR2
15	GND	16	DSR2
17	RTS2	18	CTS2
19	RI2	20	Key

## 2.4.5 <USB interface>

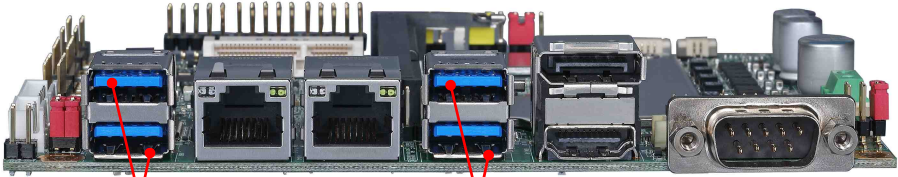

USB3.1 Gen2 (Left)


USB3.1 Gen2 (Right)

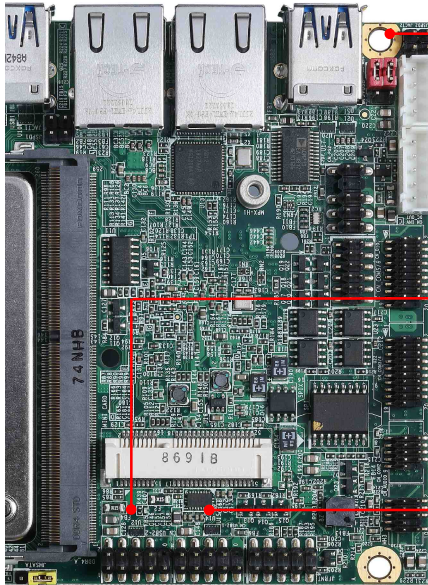


JVUSB



CN\_USB2-2

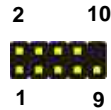

CN\_USB2-1

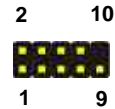

**CN\_USB 2-1/2-2:** USB2.0 10-pin header (Pitch 2.54 mm)


Pin	Signal	Pin	Signal
1	5VSB	2	5VSB
3	DATA0-	4	DATA1-
5	DATA0+	6	DATA1+
7	GND	8	GND
9	GND	10	Key

**JVUSB: 6-pin Power select jumper**

Pin	Description
1-3 & 2-4	5V_SB (Default)
3-5 & 4-6	5V

**Effective patterns of connection: 1-3 & 2-4 or 3-5 & 4-6**


**JVUSB can control USB3.1 Gen2 (Right) power.**

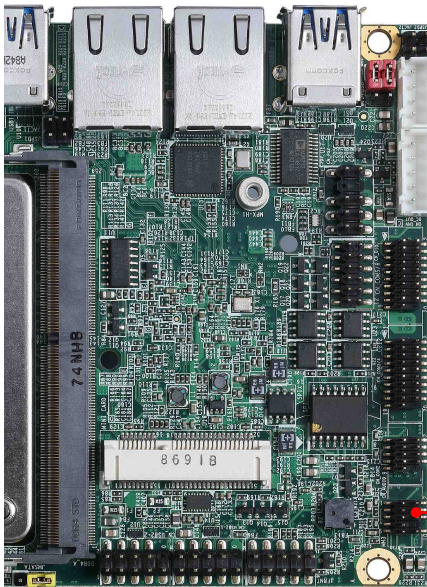**2.4.6 <Audio interface>**

**CN\_AUDIO**


**CN\_AUDIO: Front panel audio 10-pin header (Pitch 2.54mm)**

Pin	Signal	Pin	Signal
1	MIC_L	2	GND
3	MIC_R	4	NC
5	FP_OUT_R	6	MIC_DETECT
7	SENSE	8	Key
9	FP_OUT_L	10	FP_OUT_DETECT
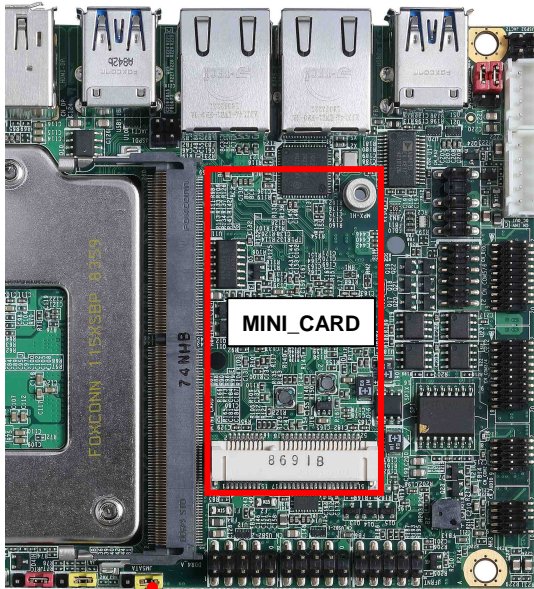
## 2.4.7 <Expansion slot>



1 3  
 JMSATA

MINI\_CARD has some special design to compatible our mini-PCIe card.  
 (ex: MPX-574D2, MPX-210D2 etc)


MINI\_CARD supports mSATA by JMSATA

### JMSATA: Setting MINI\_CARD to support PCIe/mSATA

Jumper settings	Function
1-2	Support mSATA
2-3	Normal operation (Default)




## 2.4.8 <Front panel switch and indicator>

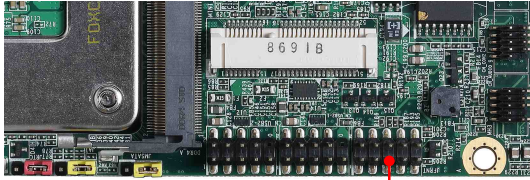

**JFRNT:** Front panel switch and indicator 14-pin header (Pitch 2.54mm)

Pin	Signal	Pin	Signal
1	Power_ON-	2	Power_ON+
3	Speaker-	4	Speaker+
5	HDD_LED-	6	HDD_LED+
7	Power_LED-	8	Power_LED+
9	Reset+	10	Reset-

### 2.4.9 <GPIO and Other interface>

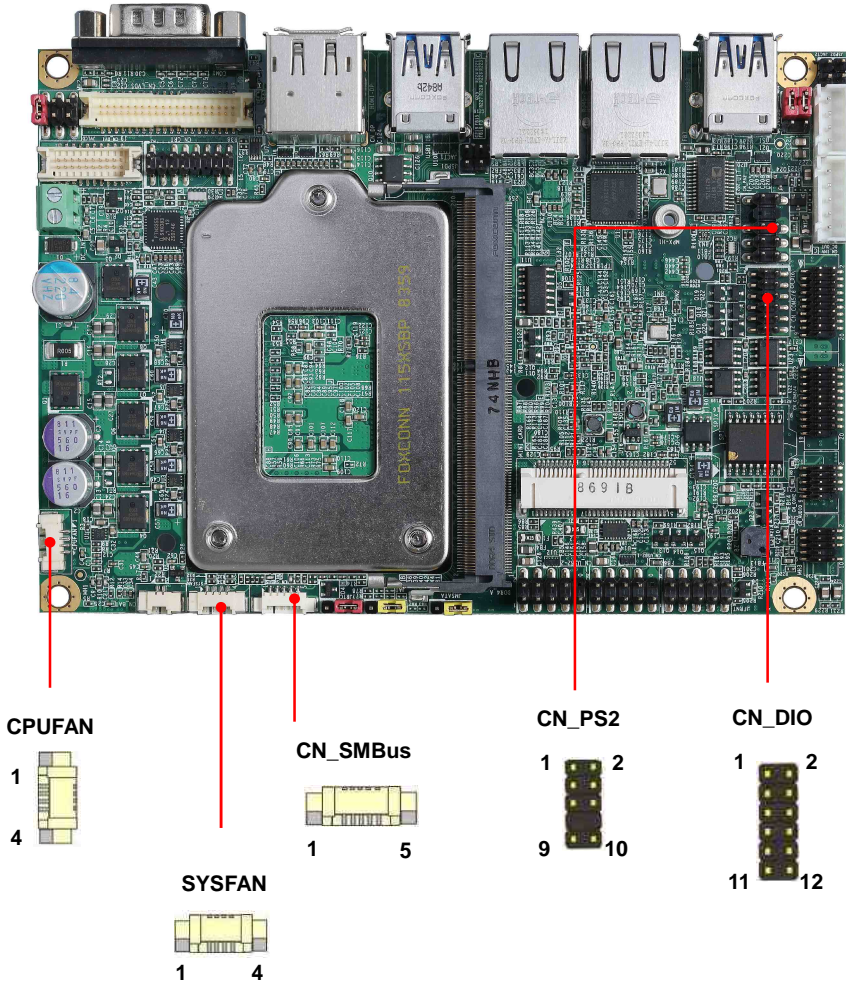

When using GPIO function

Press Delete to enter BIOS Setup menu

On **Front Page** screen, click Setup Utility

On **Advanced** screen, click SIO NCT6116D, then click GPIO 4 Configuration



Internal Resistance: Select output type, Push pull or Open drain

Input/Output mode: Select GPIO pin mode, Input or Output

PEI Phase output value: GPIO output value in BIOS PEI phase

DXE Phase output value: GPIO output value in BIOS DXE phase

As Input: **TTL-level**.

### GPIO DC characteristics

Parameter	SYM	MIN	TYP	MAX	UNIT	Conditions
Input Low Voltage	$V_{IL}$			0.8	V	
Input High Voltage	$V_{IH}$	2.0			V	
Output Low Voltage	$V_{OL}$			0.4	V	$I_{OL} = 12\text{mA}$
Input High Leakage	$I_{LH}$			+10	$\mu\text{A}$	$V_{IN} = 3.3\text{V}$
Input Low Leakage	$I_{LIL}$			-10	$\mu\text{A}$	$V_{IN} = 0\text{V}$

Please refer to **Appendix E** to program the configuration register

**CN\_DIO**: GPIO 12-pin header (Pitch 2.00mm)

Pin	Signal	Pin	Signal
1	GND	2	GND
3	GPIO0	4	GPIO4
5	GPIO1	6	GPIO5
7	GPIO2	8	GPIO6
9	GPIO3	10	GPIO7
11	5V	12	12V

**CN\_PS/2:** PS/2 10-pin header (Pitch 2.54mm)

Pin	Signal	Pin	Signal
1	KB_DATA	2	M_DATA
3	NC	4	NC
5	GND	6	GND
7	VCC	8	VCC
9	KB_CLK	10	M_CLK

**CN\_SMBus:** SMBus 5-pin connector (Pitch 2.54mm)


Pin	Signal
1	5V
2	NC
3	SMBDAT
4	SMBCLK
5	GND

**CPUFAN & SYSFAN:** cooler fan 4-pin connector

Pin	1	2	3	4
Signal	GND	12V	Sensor	Control

## 2.5 <Power supply>

### 2.5.1 <Power input>

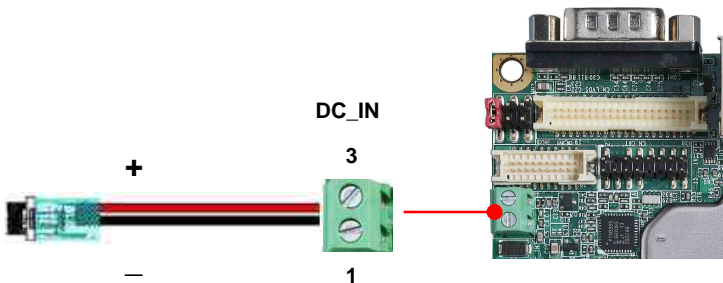


**DC\_IN:** Terminal Block 2-pin power connector

Pin	Signal	Pin	Signal
1	GND	3	Power in

The power support 9~25V wide voltage input.

## 2.5.2 <Power output>

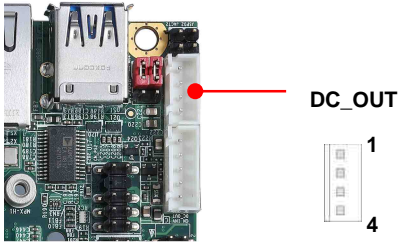

**DC\_OUT:** SATA power 4-pin connector

Pin	Signal
1	12V
2	GND
3	GND
4	5V

# Appendix A <Flash BIOS>

## A.1 <Flash tool>

The board is based on Insyde BIOS and can be updated easily by the BIOS auto flash tool. You can download the tool online at the address below:

[FPT Tool](#)

The tool's file name is "FPT.exe", it's the utility that can write the data into the BIOS flash chip and update the BIOS.

## A.2 <Flash BIOS process>

1. Press Del to Enter BIOS Menu
2. On Front Page screen, click Setup Utility
3. On Advanced screen, click PCH-IO Configuration, then click Security Configuration
4. Set BIOS Lock to [Disabled], then save changes.



5. Please make a boot-able Disk which could booting into DOS environment.
6. Un-zip attached files and copy it into boot-able Disk.
7. Power on the system and flash the BIOS under the DOS environment.

The instruction will be "C:/fpt\_-savemac\_-f\_XXXX.BIN"

Note: a. Underscore means Space

b. xxxx.bin means the BIOS file that you want to update


8. Please turn off the system and clean CMOS by Jumper.
9. Turn on the system and update BIOS successful.

## Appendix B <LCD Panel Type select>


According to your panel, it needs to select the correct resolution in the BIOS. If there is no fit for your panel type, please provide feedback for us to make an OEM model.

Find the setting from


Front Page-> Setup Utility

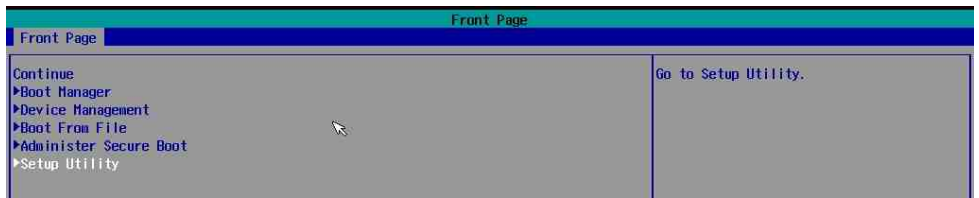

Advanced → LVDS Configuration

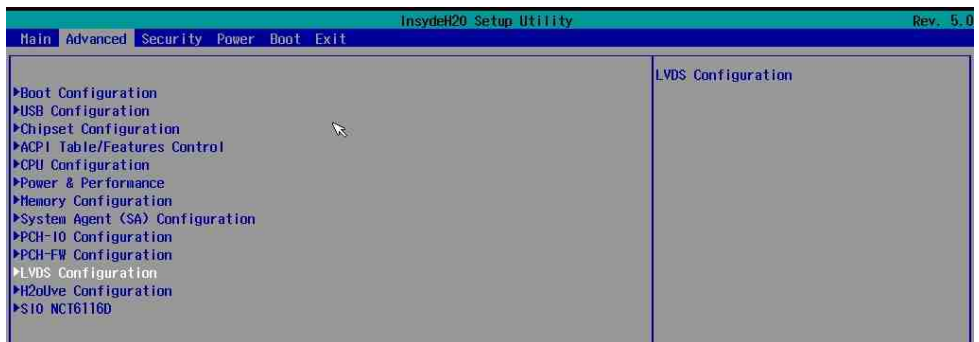


Set 18bit /24bit, Single /Dual channel in LVDS configuration

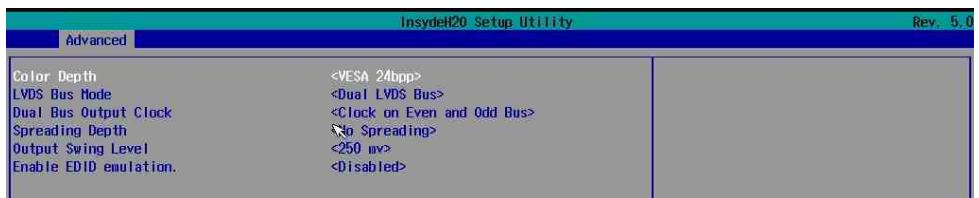

Advanced Ú SA configuration Ú Graphics configuration Ú

LCD control Ú LCD Panel Type

There are 16 resolutions in LCD Panel Type. (For Dual boot and Legacy boot)

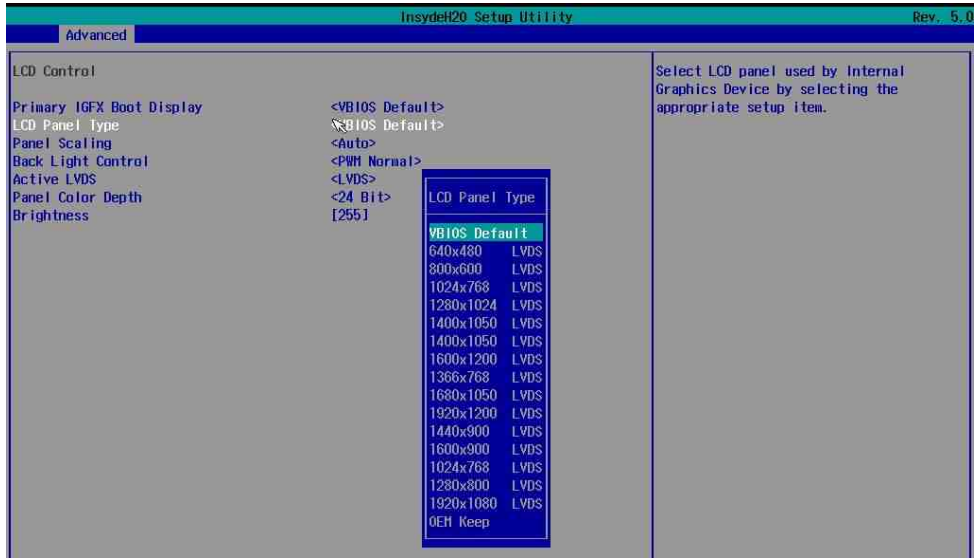




# Appendix C <Programmable Watch Dog Timer>

The watchdog timer makes the system auto-reset while it stops to work for a period. The integrated watchdog timer can be setup as system reset mode by program. You can select Timer setting in the BIOS, after setting the time options, the system will reset according to the period of your selection.

Find the setting from

Advanced → SIO NCT6116D

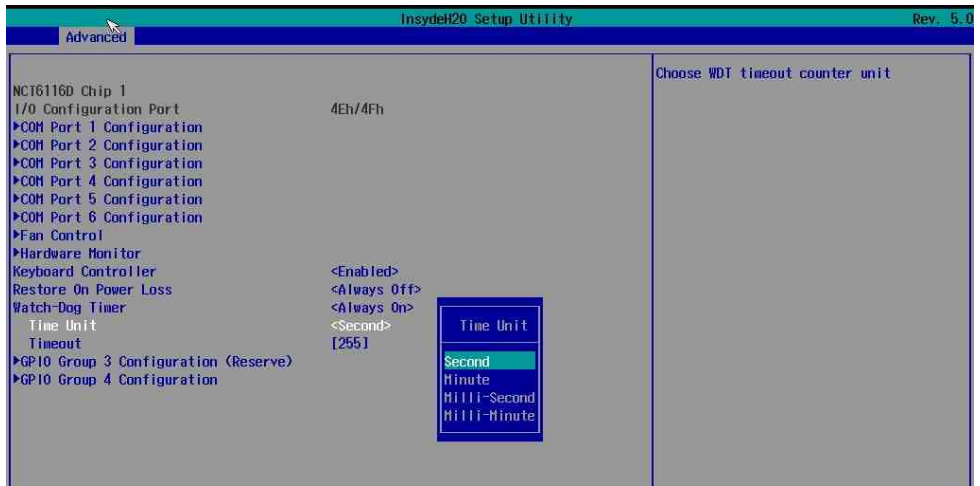

**Timeout value range**

1 to 255 Minute and Second

**Program sample**

Watchdog timer setup as system reset with 5 second of timeout

```
-o 4E 87      ;enter configuration
-o 4E 87
-o 4E 07
-o 4F 08      ;select Logical Device
-o 4E 30
-o 4F 01      ; activate WDTO# function
-o 4E F0
-o 4F 00      ;set "00" is second mode, set "08" is minute mode
-o 4E F1
-o 4F 05      ;00h: Timeout Disable
                ;01h: Timeout occurs after 1 minute only
                ;02h: Timeout occurs after 2 second/minute
                ;03h: Timeout occurs after 3 second/minute
                ;
                ;FFh: Timeout occurs after 255 second/minute
                (The deviation is approx 1 second.)
```

For further information, please refer to Nuvoton NCT6116D datasheet

# Appendix D <Hardware Monitor>

Find the setting from

Advanced → SIO NCT6116D → Hardware Monitor

InsydeH2O Setup Utility		Rev. 5.0
Advanced		
CPU OVT		
OVT	<Disabled>	
Voltage		
CPUVCORE	1.048 V	
12V	11.985 V	
5V	5.040 V	
3.3V	3.312 V	
VBAT	2.960 V	
Temperature		
SYSTEM	31.5 °C/ 88.7 °F	
CPUIN	30.5 °C/ 86.9 °F	
Fan Speed		
SYSTEMFAN	3191 RPM	
CPUFAN	1566 RPM	

## Appendix E <Programmable GPIO>

The GPIO' can be programmed with the MS-DOS debug program using simple IN/OUT commands.

GPIO	0	1	2	3	4	5	6	7
bit	0	1	2	3	4	5	6	7

- o 4E 87 ;enter configuration
- o 4E 87
- o 4E 07
- o 4F 07 ;select Logical Device
- o 4E 30
- o 4F 10 ;activate GPIO function (The board use GPIO4)
- o 4E F0
- o 4F XX ;set "01" GPIO as input, set "00" GPIO as output
- o 4E F1
- o 4F XX ;if set GPIO as output, this register's value can be set "00~ FF"

### Optional

- o 4E F2
- o 4F XX ;set "01", the respective bit are inverted (Both input and output)
- ;set "00", the respective bit are normal


For further information, please refer to Nuvoton NCT6116D datasheet

## Appendix F <RAID Setting>

When use RAID function, it need to enter the BIOS set RAID mode first.

Advanced ú PCH-IO Configuration ú SATA and RST Configuration

ú SATA Mode Selection

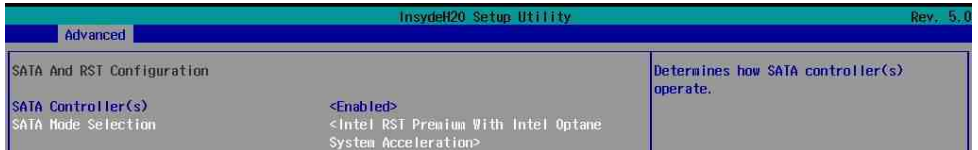

Advanced ú PCH-IO Configuration ú SATA and RST Configuration

ú Software Feature Mask Configuration

Set Use RST Legacy OROM ú [Enable]



Then press F10 to save the setting.

At boot time, press <CTRL + I> to enter the RAID configuration menu.



## Appendix G <Setup ADP-3355,ADP-3460>

LS-37LT have a 2nd VGA or 2nd LVDS, it's no need install extra driver.

For further information, please refer to the manual.

ADP-3355 manual [Link](#)

ADP-3460 manual [Link](#)

### Contact information

Any advice or comment about our products and service, or anything we can help you please don't hesitate to contact with us. We will do our best to support you for your products, projects and business.

#### Taiwan Commate computer Inc.

<b>Address</b>	19F., NO.94, Sec. 1, Xintai 5 <sup>th</sup> Rd., Xizhi Dist., New Taipei City 22102, Taiwan.
<b>TEL</b>	+886-2-26963909
<b>Website</b>	<a href="http://www.commell.com.tw">www.commell.com.tw</a>
<b>E-mail</b>	<a href="mailto:info@commell.com.tw">info@commell.com.tw</a> (General information) <a href="mailto:tech@commell.com.tw">tech@commell.com.tw</a> (Technical Support)

**Commell is a brand name of Taiwan Commate computer Inc.**