

LT3-L1

SINGLE BOARD COMPUTER

User`s Manual

Version 1.0

Copyright Notice

This publication is protected by copyright and all rights are reserved. No part of it may be reproduced or transmitted by any means or in any form, without prior consent of the original manufacturer.

The information in this document has been carefully checked and is believed to be accurate. However, the original manufacturer assumes no responsibility for any inaccuracies that may appear in this manual. In no event will the original manufacturer be liable for direct, indirect, special, exemplary, incidental, incidental or consequential damages resulting from any defect or omission in this manual, even if advised of possibility of such damages. The material contained herein is for informational purposes only.

Acknowledgments

Award is a registered trademark of Award Software International, Inc. IBM, PS/2 are trademarks of International Business Machines Corporation.

Intel, Pentium4 are registered trademarks of Intel Corporation.

Microsoft Windows is a registered trademark of Microsoft Corporation.

All other product names or trademarks are properties of their respective owners.

Contents

Introduction	1
Chapter 1 Features & Specifications	2
Features	3
Specifications.....	4
Chapter 2 Jumper setting & Connectors.....	9
Jumpers on the LT3-L1	10
Jumper Locations on the LT3-L1	11
JP1: COM1 Power Pin (Pin9).....	12
JP2: CF Card Mode Selection	12
LVDSCH_NUM:.....	12
JP3: LCD PANEL Power Selection	13
JP4: Clear CMOS RAM Data.....	13
COM2MODE1: RS232/RS422/RS485 Protocol Selection	14
AT MODE: AT Mode Selection	14
PWRMODE: AT Mode Selection	15
Connectors on the LT3-L1.....	16
Connector Locations on the LT3-L1	17
Front Panel Connector	18
BACKLIGHT Connector	19
IrDA Connector.....	20
SATA1, SATA2 Connectors	20
DRVPWR1 Connector	20
IDE1 Connector.....	21
COM1 Serial Port	22
COM2 Serial Port	22
COM3, COM4 Serial Ports	23
DIO Connector	23
LPT Port Connector.....	24
PS/2 Keyboard & Mouse Connector	25
VGA Connector.....	26
CPU Fan Power Connector	26
System Fan Power Connector.....	26
ATX Power Connector	27
AUDIO Connector.....	28

USB12 Connectors	28
USB34 Connectors	28
LAN- RJ45 Connector	29
LAN RJ45 LEDs	29
LVDS LCD Connector	30

Chapter 3 BIOS Setup 31

BIOS Introduction.....	32
Starting Setup	32
Using Setup	33
Getting Help	34
In Case of Problems	34
Main Menu.....	35
<i>Standard CMOS Features</i>	<i>35</i>
<i>Advanced BIOS Features</i>	<i>35</i>
<i>Advanced Chipset Features.....</i>	<i>36</i>
<i>Integrated Peripherals</i>	<i>36</i>
<i>Power Management Setup.....</i>	<i>36</i>
<i>PnP / PCI Configuration.....</i>	<i>36</i>
<i>PC Health Status</i>	<i>36</i>
<i>Frequency/Voltage Control.....</i>	<i>36</i>
<i>Load Fail-Safe Defaults</i>	<i>36</i>
<i>Load Optimized Defaults.....</i>	<i>36</i>
<i>Supervisor / User Password.....</i>	<i>36</i>
<i>Save & Exit Setup.....</i>	<i>36</i>
<i>Exit Without Save</i>	<i>36</i>
Standard CMOS Setup	37
Channel 0 HDDs / Channel 1 HDDs.....	39
Drive A / Drive B	41
Video	41
Halt On	41
Advanced BIOS Features	42
CPU Feature	43
Delay Prior to Thermal.....	43
Thermal Management	43
TM2 Bus Ratio.....	43
TM2 Bus VID	44
Hard Disk Boot Priority	44
Bootable Add-in Cards.....	44
Virus Warning.....	44
CPU L1 & L2 Cache	45
CPU L2 Cache ECC Checking	45

Quick Power On Self Test.....	45
First/Second/Third/Other Boot Device.....	45
Swap Floppy Drive.....	45
Boot Up Floppy Seek	45
Boot Up NumLock Status	46
Typematic Rate Setting	46
Typematic Rate (Chars/Sec).....	46
Typematic Delay (Msec)	46
Security Option.....	46
MPS Version Control For OS.....	47
OS Select For DRAM > 64MB	47
Video BIOS Shadow	47
Advanced Chipset Features	48
DRAM Settings	48
DRAM Clock/Drive Control.....	49
Current FSB Frequency	49
Current DRAM Frequency	49
DRAM Clock.....	49
DRAM Timing	49
SDRAM CAS Latency [DDR/DDR2].....	49
Precharge to Active(Trp).....	49
Active to Precharge(Tras).....	50
AGP & P2P Bridge Control.....	50
AGP Aperture Size	50
VGA Share Memory Size.....	50
Direct Frame Buffer	50
Select Display Device.....	50
Panel Type	51
CPU & PCI Bus Control.....	51
PCI Master 0 WS Write.....	51
PCI Delay Transaction	51
Memory Hole.....	51
System BIOS Cacheable.....	52
Video RAM Cacheable.....	52
Power-Supply Type	52
Init Display First.....	52
Integrated Peripherals	53
VIA OnChip IDE Device.....	53
SATA Controller	54
SATA Controller Mode.....	54
IDE DMA transfer access.....	54

OnChip IDE Channel1	54
IDE Prefetch Mode	54
Secondary Master/Slave PIO	54
Secondary Master/Slave UDMA.....	54
IDE HDD Block Mode.....	54
VIA OnChip PCI Device	55
Azalia HDA Controller	55
SuperIO Device.....	55
Onboard Serial Port 1/Port 2	56
UART Mode Select.....	56
RxD, TxD Active	56
IR Transmission Delay.....	56
UR2 Duplex Mode	56
Onboard Parallel Port.....	56
Parallel Port Mode.....	56
EPP Mode Select.....	56
ECP Mode Use DMA.....	56
PWRON After PWR-Fail.....	57
Onboard Serial Port 3/Port 4	57
Serial Port 3/Port 4 Use IRQ.....	57
Watch Dog Timer Select.....	57
USB Device Setting.....	57
USB 1.0 Controller.....	57
USB 2.0 Controller.....	58
USB Operation Mode.....	58
USB Keyboard Function	58
USB Mouse Function	58
USB Storage Function.....	58
Power Management Setup.....	59
ACPI Function	59
ACPI Suspend Type.....	59
Power Management Option.....	60
HDD Power Down	60
Suspend Mode.....	60
Video Off Option	60
Video Off Method.....	61
MODEM Use IRQ	61
Soft-Off by PWRBTN.....	61
Run VGABIOS if S3 Resume.....	61
Ac Loss Auto Restart	61
Wakeup Event Detect	61

Modem Ring Resume	62
RTC Alarm Resume	62
Date (of Month).....	62
Resume Time (hh:mm:ss).....	62
PnP/PCI Configuration Setup	63
PNP OS Installed.....	63
Reset Configuration Data	63
Resources Controlled By	64
IRQ Resources	64
IRQ-3/IRQ-4/IRQ-5/IRQ-7/IRQ-9/IRQ-10/IRQ-11/IRQ-1/ IRQ-14/IRQ-15 assigned to.....	65
DMA Resources	65
DMA-0/ DMA-1/ DMA-3/ DMA-5/DMA-6/ DMA-7 assigned to	65
PCI/VGA Palette Snoop	66
Assign IRQ For VGA.....	66
Assign IRQ For USB.....	66
PC Health Status.....	67
CPU Warning Temperature	67
Current System Temp.....	67
Current CPUDIE Temp.	67
Current CPU Temperature.....	67
Current CPUFAN Speed	68
Current SYSFAN Speed.....	68
Vcore/1.5V/3.3V/5V/12V/VBAT/5VSB Voltages	68
Shutdown Temperature	68
Frequency/Voltage Control.....	69
Spread Spectrum.....	69
Load Fail-Safe Defaults.....	70
Load Optimized Defaults	70
Supervisor/User Password Setting	71
Exit Selecting.....	72
Save & Exit Setup	72
Exit Without Saving	72
 CHAPTER 4 Appendix.....	 73
A. I/O Port Address Map.....	74
B. Interrupt Request Lines (IRQ)	75
C. POST Beep	76

Introduction

This manual is designed to give you information on the LT3-L1 Single Board Computer card. The topics covered in this manual are as follows:

- ✓ **Features**
- ✓ **Specification**
- ✓ **Jumper setting and Connectors**
- ✓ **BIOS Setup**
- ✓ **Appendix**

Chapter 1

Features & Specifications

Features	3
Specifications	4

Features

- Support both VIA C7 and EDEN NanoBGA2 CPU in V4 bus for either High performance or Low Power.
- Compact design with Rich I/O functions for Panel PC, Thin-client terminal and Automation.
- Multiple I/O support, up to four USB2.0 ports, four COM ports and 1 x 8-bits DIO. COM1 can be powered by either 5V or 12V.
- Support LVDS LCD up to dual 24-bits channel. The resolution can be up to 1600x1200. Dual Independent display and rotation supported by Drivers.
- Dedicated LCD inverter connector with LCD Brightness control by software. Software ready for Windows XP/2K.
- Dual 10/100M LAN Design with Remote Boot and Wake Up on LAN support.
- High-Definition 3D Audio Codec on board with internal connection for Line-OUT, Line-IN and Microphone.
- Support versatile storage devices: 2.5”HDD, Compact Flash, DOM module in 44pins.
- COM2 supports RS232/422/485, selectable by jumpers.
- Dual SATA-II ports, support IDE mode, RAID0 and RAID1.
- Bundle Low noise CPU cooler for C7 1.5GHz or higher speed CPU. FANLESS CPU heat sink available for EDEN 1.0GHz or lower speed CPU.
- One PC104 socket supports 16-bits ISA bus PC104 Module.
- One Compact Flash Socket for CF Flash Card support.

Specifications

- **Processor Support:**
 - VIA nanoBGA2 V4 interface CPU mounted on board.
 - Support VIA C7 High performance CPU 1.5G, 1.6G, 1.8G and 2.0GHz.
 - Support VIA EDEN (V4) Low Power CPU 400M, 500M, 600M, 800M, 1.0G, 1.2G, 1.5GHz.

- **Major Chipset:**
 - VIA CX700M chipset.
 - RealTek RTL8101 Fast Ethernet LAN chip.
 - Winbond 83627HF Super I/O.
 - ALC888 High-Definition Audio chip.

- **System Memory:**
 - One DDR2 SO-DIMM 200-pins Sockets support DDR 400/533 unregistered non-ECC up to 1.0 GB.

- **Video Controller:**
 - CX700 Integrated S3 Graphic Engine with MPEG2/MPEG4 decoder.
 - One 15-Pins D-Sub Female connector on external I/O ports for CRT Displays.
 - One 40-pins connector for Dual 18/24-bits LVDS LCD displays.
 - One 5-pins JST connector for Inverter power and brightness control.

- **Super I/O:**
 - Winbond 83627HF LPC I/F Super I/O chip.
 - Four COM ports: One in D-Sub and three in 2x5 2mm box-header, support standard RS-232 protocols.
 - COM1 Pin9 is powered with either 5V or 12V by jumpers.
 - COM2 is RS232/422/485 selectable by jumpers.
 - 1 x LPT port supports SPP/ECP/EPP mode in 2x13 pinheader.
 - 1 x IrDA port.
 - Two USB2.0 Type-A ports on rear panel for external access and two on one 2x5 box-header for internal devices access.
 - PS2 Keyboard/mouse connector with 6-pins wafer for internal or external access.

-
- **Hardware Monitor:**
 - 83627HF integrated hardware monitor chip to monitor Voltages, temperatures and FAN speed.
 - Temperature Monitor: CPU thermal diode, one sensor close to CPU socket, one sensor close to 83627HF chip.
 - One CPU FAN for CPU cooler and one SYS FAN for chassis FAN. FAN speed is monitored.

 - **10/100M Ethernet:**
 - Two Realtek RTL8101Ls on board for dual 10/100M Ethernet connection.
 - Support Wake Up-on-LAN.
 - Two LAN connectors are RJ45 connectors on external I/O ports. RJ45 connectors with Link, Activity and Speed LED indicators.
 - Remote Boot Agent is supported with PXE and RPL protocol.

 - **PIDE and SATA:**
 - PIDE controller build in CX700 support up to UltraDMA mode 6 or ATA133 speed.
 - One standard 44-pins box-header support 2.5" HDD, Slim CD-ROM or DOM Flash Disk.
 - One Compact Flash-II socket on Bottom Side. Jumper selectable as Master or Slave device.
 - Two SATA connectors from CX700 support SATA-I and SATA-II devices. Two SATA HDDs can be configured as RAID0 or RAID1 through Option- ROM or Windows Utilities.

 - **PC-104:**
 - One PCI-104 16-bits ISA bus socket to adapt standard PC104 ISA modules.

 - **Watchdog Timer:**
 - The disable/enable selection can be programmed in BIOS setup. The timeout interval can be set up through programmed I/O address 300h/301h.
 - The timeout event will generate the RESET.

 - **CMOS:**
 - On-board RTC with 242 bytes of Battery-back CMOS RAM.
 - One 3-pins Jumper/2mm to clear CMOS data.

-
- **Audio:**
 - RealTek ALC888 High-Definition Audio chip on-board.
 - One 2x5 pin-header for Line-Out, Line-In and Microphone.

 - **DIO:**
 - Use 83627HF GPIO port for Digital I/O control. Support 8-In and 8-out.

 - **BIOS:**
 - Award Standard PnP Flash BIOS 6.0.
 - 4Mbit FlashROM with BootBlock for Fail-safe.
 - BIOS utility for field update.
 - VBIOS for LCD panel support and LAN remote BootROM integrated.

 - **Power Connector:**
 - Support both AT mode or ATX mode operation.
 - One 4-Pins power connector for +5V and +12V system power input.
 - One ATX Auxiliary 4-pins connector for 5VSB and ATX power control.

 - **Software Compatibility:**
 - Microsoft windows: NT4.0, Win XP, Win 2K Prof, Win2K Server, Win2003, .NET.
 - Linux RedHat 7.2, 7.3, 8.0, 9.0.
 - DOS 6.0 and 6.22.
 - QNX v6.2, WinCE 5.0.

 - **Cooling:**
 - Two cooling FAN connectors close to CPU for CPU cooler and System FAN.
 - Flat Heat-sink on top of chipset.
 - Fanless CPU heat sink for EDEN 1.0GHz or lower speed CPU.
 - Low noise CPU cooler for C7 1.5GHz or higher speed CPU.

 - **Others:**
 - One Buzzer (9mm) on-board for beep message.

 - **Operating Temperature:**
 - 0~60°C Operation Range.
 - Relative Humidity: 5~95%, non-condensing.

-
- **Dimensions:**
 - 145mm(W) x 102mm(L).
 - 3.5” Little Board Standard Dimension.

This page is intentionally left blank.

Chapter 2

Jumper setting & Connectors


Jumpers on the LT3-L1	10
Connectors on the LT3-L1	16

Jumpers on the LT3-L1

The jumpers on the LT3-L1 allow you to configure your Single Board Computer card according to the needs of your applications. If you have doubts about the best jumper configuration for your needs, contact your dealer or sales representative. The following table lists the jumpers on LT3-L1 and their respective functions.


Jumper Locations on the LT3-L1	11
JP1: COM1 Power Pin (Pin9).....	12
JP2: CF Card Mode Selection	12
LVDSCH_NUM:.....	12
JP3: LCD PANEL Power Selection	13
JP4: Clear CMOS RAM Data.....	13
COM2MODE1: RS232/RS422/RS485 Protocol Selection	14
AT MODE: AT Mode Selection	14
PWRMODE: AT Mode Selection	15

Jumper Locations on the LT3-L1

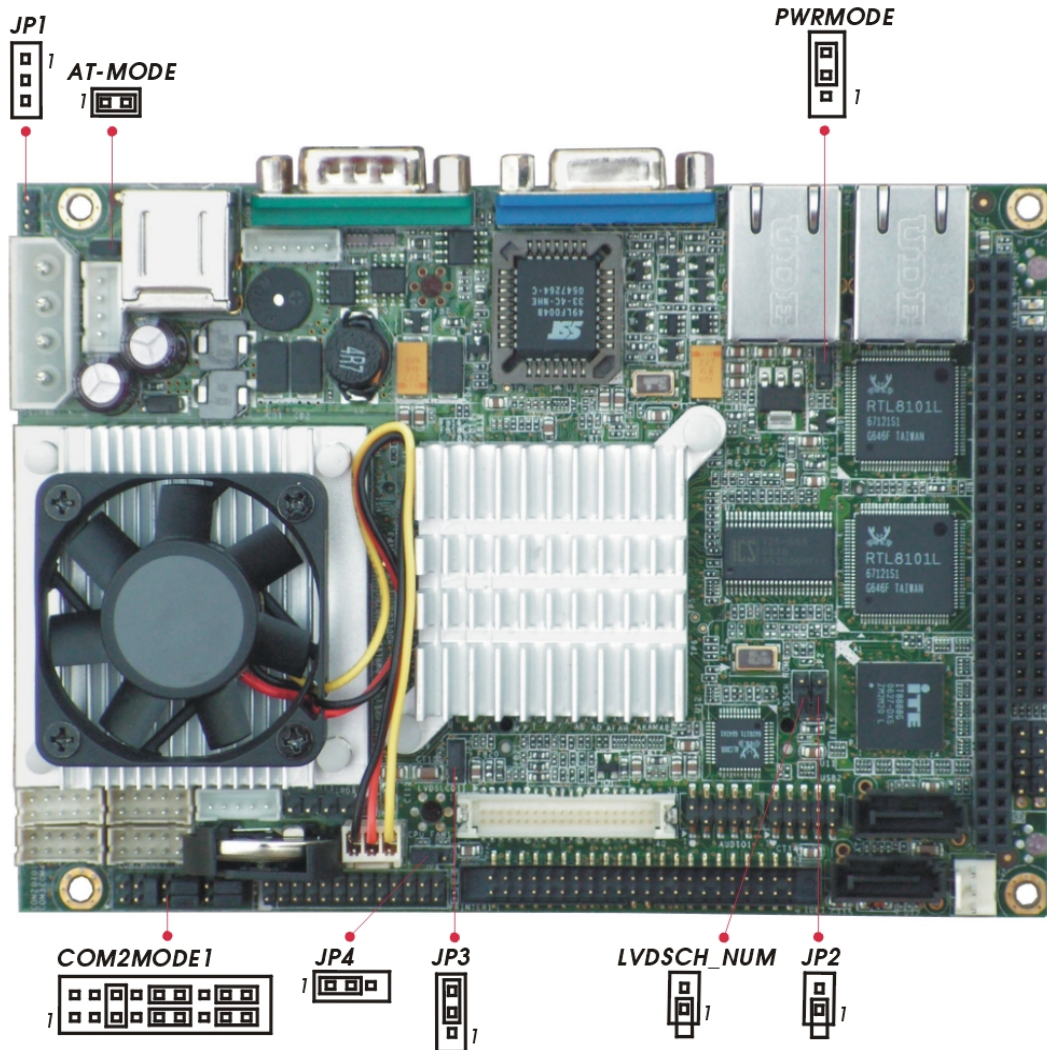


JP1: COM1 Power Pin (Pin9)

JP1 can be used to select the COM supply power: +5V or +12V.
JP1: COM1 Pin9 power

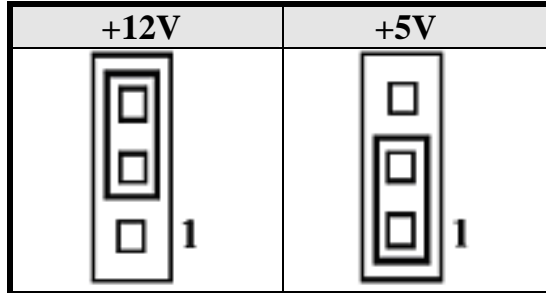


JP2: CF Card Mode Selection

This Jumper is to select the CF works as Secondary Channel Master device or Slave device.

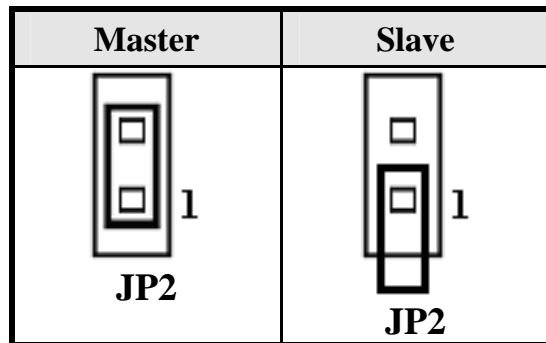


LVDSCH_NUM:

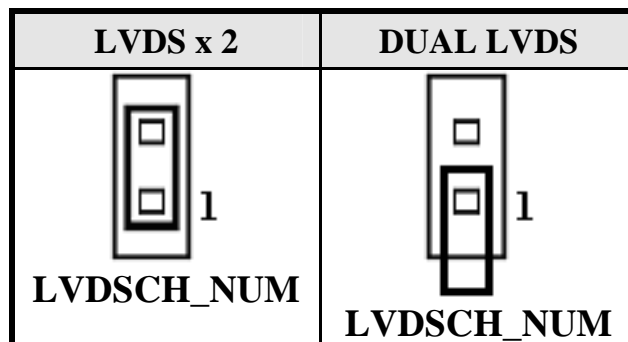

JP3: LCD PANEL Power Selection

JP3 can be used to select the Panel LCD supply power: +3.3V or +5V. The default setting is on +3.3V. User need to check the LCD panel spec and adjust this jumper to make Panel work in specified power rail.

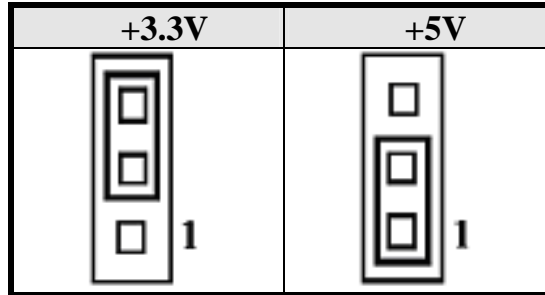

JP4: Clear CMOS RAM Data

This 3-pins Jumper allows the user to disconnect the built-in 3V battery power to clear the information stored in the CMOS RAM. To clear the CMOS data: (1) Turn off the system power, (2) Remove Jumper cap from pin1&2, (3) Short the pin2 and pin3 for three seconds, (4) Put Jumper cap back to pin1 & 2. (5) Turn on your computer, (6) Hold Down <Delete> during boot up and enter BIOS setup to enter your preferences.

JP4	Setting	Function
<p>1</p>	Pin 1-2 Short/Closed	Normal Operation (default)
<p>1</p>	Pin 2-3 Short/Closed	Clear CMOS Content




COM2MODE1: RS232/RS422/RS485 Protocol Selection

COM2 support multi-protocols includes RS232, RS422 and RS485, while COM1, COM3. COM4 support diffused RS232 protocol.



The Protocols of COM2 can be set up through jumpers.

COM2MODE1: COM2 Protocols selection.

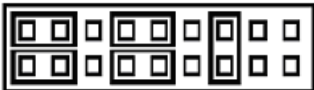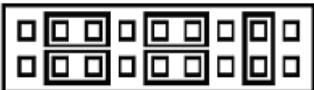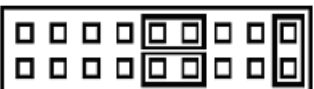
The pin-out for each mode is illustrated on next chapter.

COM2MODE1		I/F TYPE
17	1	RS-232
		
18	2	RS-422
17	1	
		
18	2	RS-485
17	1	
		
18	2	


AT MODE: AT Mode Selection

AT Mode	ATX Mode
	
1	1


PWRMODE: AT Mode Selection

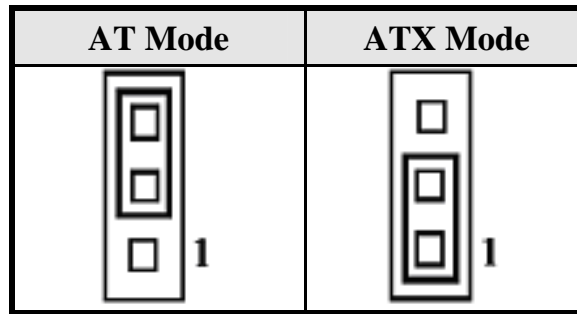

When PWRMODE are chosen as AT Mode, please make sure short Pin3 & Pin4 of ATX-PWR. The setting is illustrated as below :

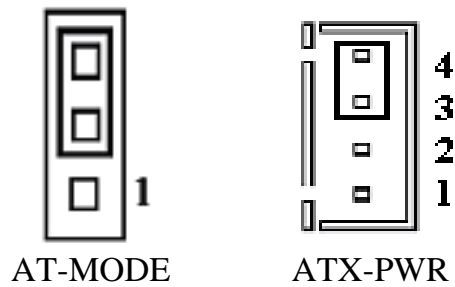

When PWRMODE are chosen as ATX Mode, you will need a cable to connect control signal and 5VSB standby power from backplane to ATX-PWR connector on LT3-L1. In the mean time, you will need to short Pin1 & Pin2 on PWRMODE selection jumper.

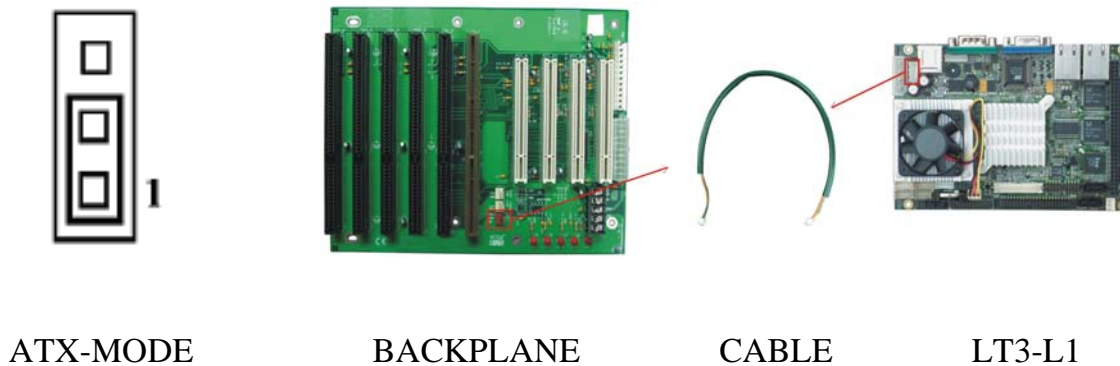


Connectors on the LT3-L1

The connectors on the LT3-L1 allows you to connect external devices such as keyboard, floppy disk drives, hard disk drives, printers and etc. The following table lists the connectors on LT3-L1 and their respective page number.


Connector Locations on the LT3-L1	17
Front Panel Connector	18
BACKLIGHT Connector	19
IrDA Connector	20
SATA1, SATA2 Connectors	20
DRVPWR1 Connector	20
IDE1 Connector	21
COM1 Serial Port	22
COM2 Serial Port	22
COM3, COM4 Serial Ports	23
DIO Connector	23
LPT Port Connector	24
PS/2 Keyboard & Mouse Connector	25
VGA Connector	26
CPU Fan Power Connector	26
System Fan Power Connector	26
ATX Power Connector	27
AUDIO Connector	28
USB12 Connectors	28
USB34 Connector	28
LAN- RJ45 Connector	29
LAN RJ45 LEDs	29
LVDS LCD Connector	30

Connector Locations on the LT3-L1

(1)

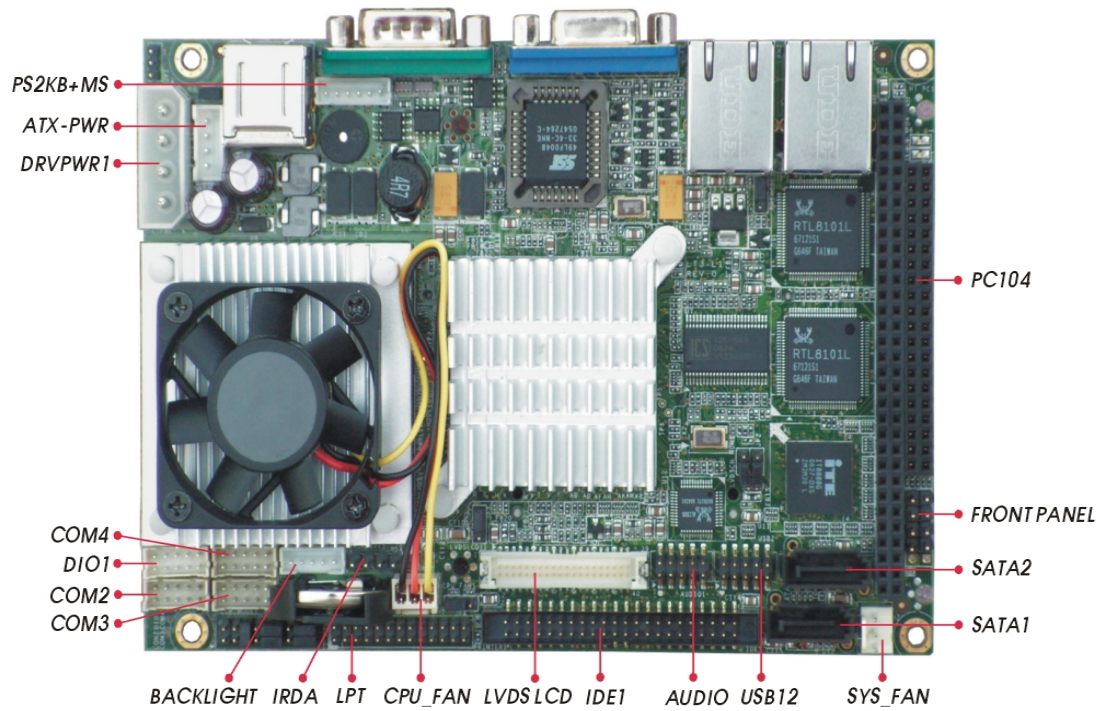


(2)

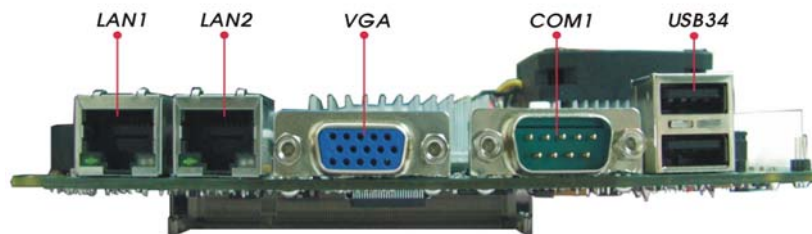


Front Panel Connector

The front panel of the case has a control panel, which provides light indication of the computer activities and switches to change the computer status.

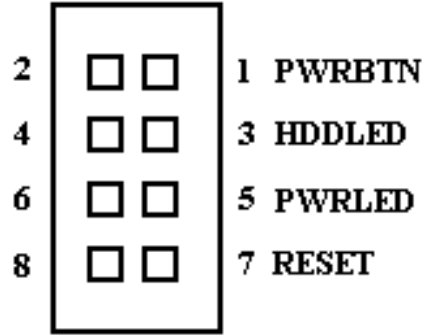

➤ ATX Power ON/OFF Button


This 2-pins connector acts as the “Power Supply On/Off Switch” on the LT3-L1 single board computer card. When pressed, the switch will force the single board computer card to power on. When pressed again, it will force the single board computer card to power off.

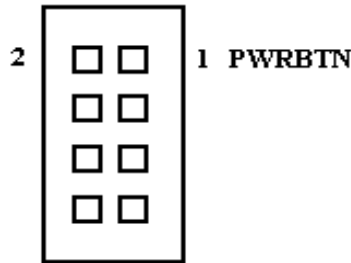

PWR BTN Pin #	Signal Name
1	5VSB
2	PWRBTN

➤ IDE Hard Disk LED Connector


This connector connects to the hard drive activity LED on control panel. This LED will flash when the HDD is being accessed.

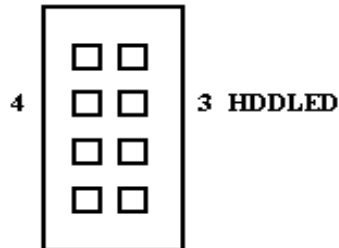

IDE LED Pin #	Signal Name
3	VCC
4	HDDLED

➤ **Power-On LED**


This connector allows users to connect to Front Panel Power indicator.

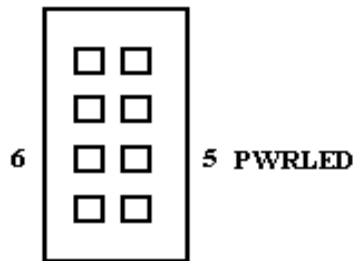

PWR LED Pin #	Signal Name
5	PWRLED
6	Ground


➤ **RESET Switch**

The reset switch allows the user to reset the system without turning the main power switch off and then on. Orientation is not required when making a connection to this header.

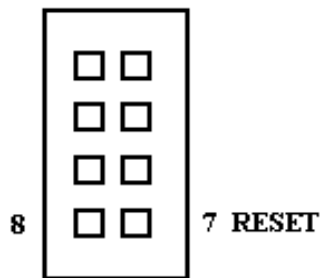

RESET Pin #	Signal Name
7	SYS_RST
8	Ground


BACKLIGHT Connector

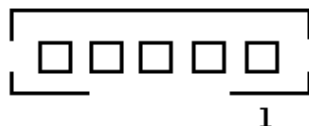

Pin #	Signal Name
1	+12V
2	GND
3	Brightness
4	ON/OFF
5	GND


IrDA Connector

This connector is used for an IrDA connector for wireless communication.

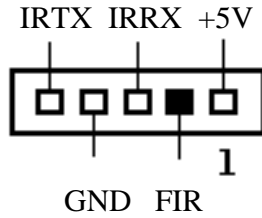


IrDA Pin #	Signal Name
1	+5V
2	FIR
3	Ir RX
4	Ground
5	Ir TX

SATA1, SATA2 Connectors

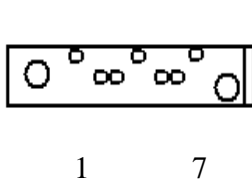

Pin #	Signal Name
1	GND
2	SATARX+
3	SATARX-
4	GND
5	SATATX-
6	SATATX+
7	GND


DRVPWR1 Connector

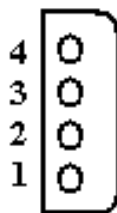

Signal Name	Pin #	Pin #	Signal Name
+12V	1	2	GND
GND	3	4	+5V

IDE1 Connector


Primary IDE Connector

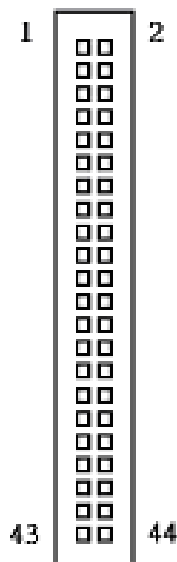

Signal Name	Pin #	Pin #	Signal Name
Reset IDE	1	2	Ground
Host data 7	3	4	Host data 8
Host data 6	5	6	Host data 9
Host data 5	7	8	Host data 10
Host data 4	9	10	Host data 11
Host data 3	11	12	Host data 12
Host data 2	13	14	Host data 13
Host data 1	15	16	Host data 14
Host data 0	17	18	Host data 15
Ground	19	20	Key
DRQ0	21	22	Ground
Host IOW	23	24	Ground
Host IOR	25	26	Ground
IOCHRDY	27	28	Host ALE
DACK0	29	30	Ground
IRQ14	31	32	No connect
Address 1	33	34	P66DET
Address 0	35	36	Address 2
Chip select 0	37	38	Chip select 1
Activity	39	40	Ground
+5V	41	42	+5V
GND	43	44	No connect

COM1 Serial Port

COM1, a 9-pin D-Sub male connector, is the onboard COM1 serial port of the LT3-L1. The following table shows its pin assignments.

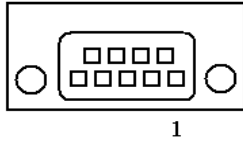


Pin #	RS232 Mode Signal Name
1	DCD, Data carrier detect
2	RXD, Receive data
3	TXD, Transmit data
4	DTR, Data terminal ready
5	GND, ground
6	DSR, Data set ready
7	RTS, Request to send
8	CTS, Clear to send
9	+5V, +12V

Pin9 is power pin to support devices required power. The voltage can be selected by jumper JP1.

COM2 Serial Port


COM2, a 10-pins box-header connector, is the onboard COM2 serial port of the LT3-L1. The following table shows its pin assignments.

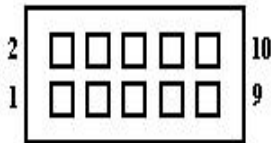

Pin #	RS232 Mode Signal Name	RS422/RS485 Mode Signal Name
1	DCD, Data carrier detect	TX- (422/485)
2	RXD, Receive data	TX+ (422/485)
3	TXD, Transmit data	RX+ (422)
4	DTR, Data terminal ready	RX- (422)
5	GND, ground	GND
6	DSR, Data set ready	N.C.
7	RTS, Request to send	N.C.
8	CTS, Clear to send	N.C.
9	+5V, Ring-IN or +12V	N.C.
10	N.C.	N.C.

COM3, COM4 Serial Ports


COM3, COM4 are 10-pins box-header connectors and the onboard COM3, COM4 serial ports of the LT3-L1. The following table shows its pin assignments.

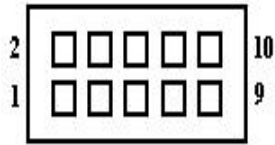

Pin #	RS232 Mode Signal Name
1	DCD, Data carrier detect
2	RXD, Receive data
3	TXD, Transmit data
4	DTR, Data terminal ready
5	GND, ground
6	DSR, Data set ready
7	RTS, Request to send
8	CTS, Clear to send
9	Ring-IN
10	N.C.

DIO Connector


DIO port supports 8 digital I/O bits. Each bit can be configured as Input or output individually. All bits are 5V tolerant.

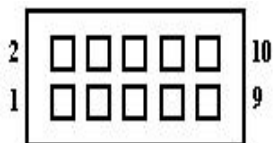

Signal Name	Pin #	Pin #	Signal Name
GND	1	2	VCC
DIO_0	3	4	DIO_4
DIO_1	5	6	DIO_5
DIO_2	7	8	DIO_6
DIO_3	9	10	DIO_7

LPT Port Connector


The following table describes the pin out assignments of this connector.

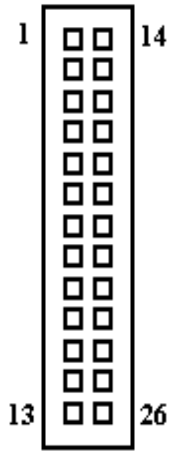

Signal Name	Pin #	Pin #	Signal Name
Line printer strobe	1	14	AutoFeed
PD0, parallel data 0	2	15	Error
PD1, parallel data 1	3	16	Initialize
PD2, parallel data 2	4	17	Select
PD3, parallel data 3	5	18	Ground
PD4, parallel data 4	6	19	Ground
PD5, parallel data 5	7	20	Ground
PD6, parallel data 6	8	21	Ground
PD7, parallel data 7	9	22	Ground
ACK, acknowledge	10	23	Ground
Busy	11	24	Ground
Paper empty	12	25	Ground
Select	13	N/A	N/A


PS/2 Keyboard & Mouse Connector

The following table describes the pin assignment of PS/2 Keyboard and Mouse connector with 6-pins wafer for internal or external access.

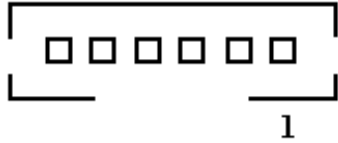

Pin #	Signal Name
1	RKBCLK
2	RKBDAT
3	RMSCLK
4	RMSDAT
5	RKBVCC
6	KBGND

To attach PS/2 Keyboard and mouse, users need to connect with the JST-B-6B cable first, then connect through a PS/2 1-to-2 Y-cable and plug into this Mini-Din connector. All the LT3-L1 boards come with a JST-B-6B cable and a Y-cable.

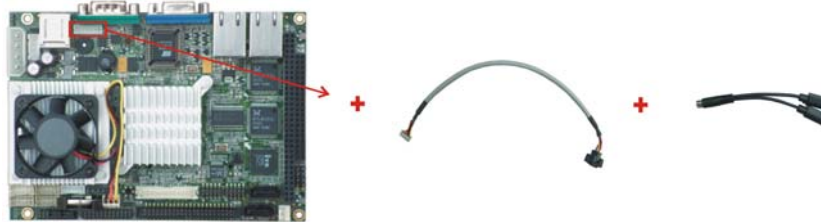


LT3-L1

JST-B-6B Cable

Y-Cable

VGA Connector


The pin assignments of VGA CRT connector are as follows:

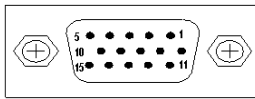

Signal Name	Pin #	Pin #	Signal Name
Red	1	2	Green
Blue	3	4	N.C.
GND	5	6	GND
GND	7	8	GND
N.C.	9	10	GND
N.C.	11	12	DDC_DATA
HSYNC	13	14	VSYNC
DDC_CLK	15		

CPU Fan Power Connector

This is a 3-pin header for the CPU fan.

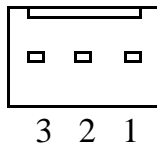

Pin #	Signal Name
1	Ground
2	FANPWR1
3	VCC

System Fan Power Connector

This is a 3-pin header for the system fan.



Pin #	Signal Name
1	Ground
2	FANPWR2
3	VCC


ATX Power Connector

This is a four-pin connector to supports the ATX power and corresponding back-plane. When your back-plane is configured to perform ATX power supply Soft-on/off function, you have to connect the control signals and stand-by power on this connector to your back-plane by a corresponding cable.




Pin #	Signal Name
1	PWR_GD
2	5V_SB (standby +5V)
3	PS-ON (soft on/off)
4	GND


When PWRMODE are chosen as AT Mode, please make sure short Pin3 & Pin4 of ATX-PWR. The setting is illustrated as below :

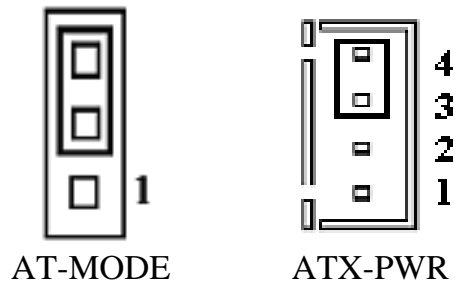

When PWRMODE are chosen as ATX Mode, you will need a cable to connect control signal and 5VSB standby power from backplane to ATX-PWR connector on LT3-L1. In the mean time, you will need to short Pin1 & Pin2 on PWRMODE selection jumper.

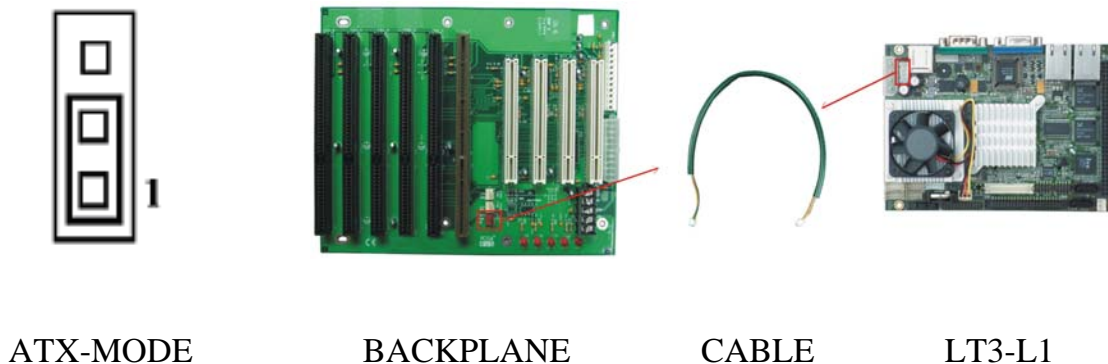


AUDIO Connector

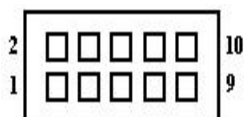

Signal Name	Pin #	Pin #	Signal Name
JDO	1	2	NC
MIC1-IN-L	3	4	MIC1-IN-R
GND	5	6	GND
LINEOUT-L	7	8	LINE-IN-L
LINEOUT-R	9	10	LINE-IN-R

USB12 Connectors


The following table shows the pin outs of the USB12 connector.

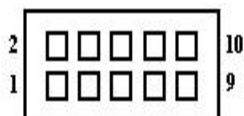

Signal Name	Pin #	Pin #	Signal Name
N.C.	1	2	VCC
GND	3	4	USB0-
USB1+	5	6	USB0+
USB1-	7	8	GND
VCC	9	10	N.C.

USB34 Connectors


The following table shows the pin outs of the USB34 connectors.

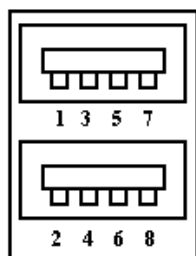

Signal Name	Pin #	Pin #	Signal Name
+5V	1	2	+5V
RUSB-	3	4	RUSB-
RUSB+	5	6	RUSB+
GND	7	8	GND

LAN- RJ45 Connector


This connector is for the 10/100Mbps Ethernet capability of the CPU card. The figure below shows the pin out assignments of this connector and its corresponding input jack.

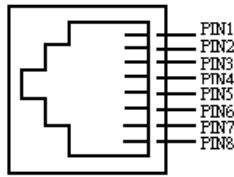


Pin #	Signal Name
1	MDI0+
2	MDI0-
3	MDI1+
4	MDI1-
5	MDI2+
6	MDI2-
7	MDI3+
8	MDI3-

LAN RJ45 LEDs

The LAN_LEDs on top of RJ45 are to display the current network connection status. The green color LED on the right-hand side shows the link status and TX/RX activity.

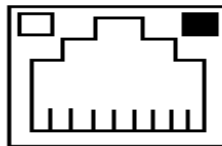


LNK/ACT	STATUS
GREEN	Link
OFF	Disconnected

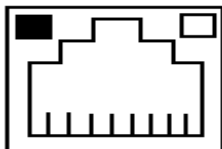

SPEED	MODE
GREEN	100 Mbps
OFF	10 Mbps

LVDS LCD Connector

The LCD panel, inverter for LCD LAMP, Touch-screen Serial Interface must be connected to this LVDS header, using the below described connector:

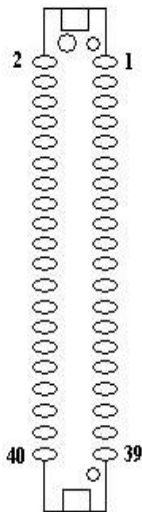

Signal Name	Pin #	Pin #	Signal Name
+12V	1	2	+12V
GND	3	4	GND
LCDVDD 5V/3.3V	5	6	LCDVDD 5V/3.3V
GND	7	8	GND
BRIGHTNES	9	10	BCKLITE_ON
LVDS_GND	11	12	LVDS_GND
CHA_TX0+	13	14	CHB_TX0+
CHA_TX0-	15	16	CHB_TX0-
LVDS_GND	17	18	LVDS_GND
CHA_TX1+	19	20	CHB_TX1+
CHA_TX1-	21	22	CHB_TX1-
LVDS_GND	23	24	LVDS_GND
CHA_TX2+	25	26	CHB_TX2+
CHA_TX2-	27	28	CHB_TX2-
LVDS_GND	29	30	LVDS_GND
CHA_TXC+	31	32	CHB_TXC+
CHA_TXC-	33	34	CHB_TXC-
LVDS_GND	35	36	LVDS_GND
CHA_TX3+	37	38	CHB_TX3+
CHA_TX3-	39	40	CHB_TX3-

Chapter 3 BIOS Setup

This chapter describes the different settings available in the Award BIOS that comes with the LT3-L1 card. The topics covered in this chapter are as follows:

BIOS Introduction.....	32
Main Menu.....	35
Standard CMOS Setup.....	37
Advanced BIOS Features.....	42
Advanced Chipset Features.....	48
Integrated Peripherals.....	53
Power Management Setup.....	59
PnP/PCI Configurations.....	63
PC Health Status.....	67
Frequency/Voltage Control.....	69
Load Fail-Safe Defaults.....	70
Load Optimized Defaults.....	70
Supervisor/User Password Setting.....	71
Exit Selecting.....	72

BIOS Introduction

This Chapter discusses Award™ Setup program built into the LT3-L1 BIOS. The Setup program allows users to modify the basic system configuration. This special information is then stored in battery-backed RAM so that it retains the Setup information when the power is turned off.

The AwardBIOS™ installed in LT3-L1 is a custom version of an industry standard BIOS. This means that it supports VIA C7/EDEN in a standard IBM-AT compatible input/output system. The BIOS provides critical low-level support for standard devices such as disk drives and serial and parallel ports.

It also adds non-standard, features such as virus and password protection as well as special support for detailed fine-tuning of the chipset controlling the entire system.

The rest of this chapter is intended to guide you through the process of configuring your system using Setup.

Starting Setup

The AwardBIOS™ is immediately activated when you first power on the computer. The BIOS reads the system information contained in the CMOS and begins the process of checking out the system and configuring it. When it finishes, the BIOS will seek an operating system on one of the disks and then launch and turn control over to the operating system.

While the BIOS is in control, the Setup program can be activated in one of two ways:

1. By pressing immediately after switching the system on, or
2. By pressing the key when the following message appears briefly at the bottom of the screen during the POST (Power On Self-Test).

Press DEL to enter SETUP.

If the message disappears before you respond and you still wish to enter Setup, restart the system to try again by turning it OFF then ON or pressing the "RESET" button on the system case. You may also restart by simultaneously pressing <Ctrl>, <Alt>, and <Delete> keys. If you

do not press the keys at the correct time and the system does not boot, an error message will be displayed and you will again be asked to...

PRESS F1 TO CONTINUE, DEL TO ENTER SETUP

Using Setup

In general, you use the arrow keys to highlight items, press <Enter> to select, use the PageUp and PageDown keys to change entries, press <F1> for help and press <Esc> to quit. The following table provides more detail about how to navigate in the Setup program using the keyboard.

Key	Function
Up Arrow	Move to the previous item
Down Arrow	Move to the next item
Left Arrow	Move to the item on the left (menu bar)
Right Arrow	Move to the item on the right (menu bar)
Esc	Main Menu: Quit without saving changes Submenus: Exit Current page to the next higher level menu
Move Enter	Move to the item you desired
PgUp key	Increase the numeric value or make changes
PgDn key	Decrease the numeric value or make changes
+ key	Increase the numeric value or make changes
- key	Decrease the numeric value or make changes
Esc key	Main Menu -- Quit and not save changes into CMOS Status Page Setup Menu and Option Page Setup Menu -- Exit current page and return to Main Menu
F1 key	General help on Setup navigation keys
F5 key	Load previous values from CMOS
F6 key	Load the fail-safe defaults from BIOS default table
F7 key	Load the optimized defaults
F10 key	Save all the CMOS changes and exit

Navigating through the menu bar

Use the left and right arrow keys to choose the menu you want to be in.

To display a sub menu

Use the arrow keys to move the cursor to the sub menu you want. Then press <Enter>. A “>” pointer marks all sub menus.

Getting Help

Press F1 to pop up a small help window that describes the appropriate keys to use and the possible selections for the highlighted item. To exit the Help Window press <Esc> or the F1 key again.

In Case of Problems

If, after making and saving system changes with Setup, you discover that your computer no longer is able to boot, the AwardBIOS™ supports an override to the CMOS settings which resets your system to its defaults.

The best advice is to only alter settings that you thoroughly understand. To this end, we strongly recommend that you avoid making any changes to the chipset defaults. These defaults have been carefully chosen by both Award and LT3-L1 manufacturer to provide the absolute maximum performance and reliability. Even a seemingly small change to the chipset setup has the potential for causing you to use the override.

Advanced Chipset Features

Use this menu to change the values in the chipset registers and optimize your system's performance.

Integrated Peripherals

Use this menu to specify your settings for integrated peripherals.

Power Management Setup

Use this menu to specify your settings for power management.

PnP / PCI Configuration

Use this menu to set up the PnP/PCI configuration.

PC Health Status

Use this menu to display the CPU temperature, FAN speed and voltages.

Frequency/Voltage Control

Use this menu to specify your settings for frequency/voltage control.

Load Fail-Safe Defaults

Use this menu to load the BIOS default values for the minimal/stable performance for your system to operate.

Load Optimized Defaults

Use this menu to load the BIOS default values that are factory settings for optimal performance system operations. While Award has designed the custom BIOS to maximize performance, the factory has the right to change these defaults to meet their needs.

Supervisor / User Password

Use this menu to set User and Supervisor Passwords.

Save & Exit Setup

Save CMOS value changes to CMOS and exit setup.

Exit Without Save

Abandon all CMOS value changes and exit setup.

Standard CMOS Setup

The items in Standard CMOS Setup Menu are divided into 10 categories. Each category includes no, one or more than one setup items. Use the arrow keys to highlight the item and then use the <PgUp> or <PgDn> keys to select the value you want in each item.

Phoenix – AwardBIOS CMOS Setup Utility		Item Help
Standard CMOS Features		
Date(mm:dd:yy)	Wed, Mar 21 2007	
Time(hh:mm:ss)	14 : 23 : 51	
➤ IDE Channel 0 Master	[None]	Menu Level ➤
➤ IDE Channel 0 Slave	[None]	Change the day, month, year and century
➤ IDE Channel 1 Master	[None]	
➤ IDE Channel 1 Slave	[None]	
Drive A	[None]	
Drive B	[None]	
Video	[EGA/VGA]	
Halt On	[No Errors]	
Base Memory	640K	
Extended Memory	980992K	
Total Memory	982016K	

↑↓→←: Move Enter: Select +/-/PU/PD: Value F10: Save ESC: Exit F1: General Help
F5: Previous Values F6: Fail-safe Defaults F7: Optimized Defaults

This table shows the selections that you can make on the Standard CMOS Menu

Item	Options	Description
Date	Month DD YYYY	Set the system date. Note that the 'Day' automatically changes when you set the date
Time	HH: MM: SS	Set the system time
IDE Channel 0 Master	Options are in its sub menu	Press <Enter> to enter the sub menu of detailed options
IDE Channel 0 Slave	Options are in its sub menu	Press <Enter> to enter the sub menu of detailed options
IDE Channel 1 Master	Options are in its sub menu	Press <Enter> to enter the sub menu of detailed options
IDE Channel 1 Slave	Options are in its sub menu	Press <Enter> to enter the sub menu of detailed options
Drive A Drive B	None 360K, 5.25 in 1.2M, 5.25 in 720K, 3.5 in 1.44M, 3.5 in 2.88M, 3.5 in	Select the type of floppy disk drive installed in your system
Video	EGA/VGA CGA 40 CGA 80 MONO	Select the default video device
Halt On	All Errors No Errors All, But Keyboard All, But Diskette All, But Disk/Key	Select the situation in which you want the BIOS to stop the POST process and notify you
Base Memory	N/A	Displays the amount of conventional memory detected during boot up
Extended Memory	N/A	Displays the amount of extended memory detected during boot up
Total Memory	N/A	Displays the total memory available in the system

Channel 0 HDDs / Channel 1 HDDs

The IDE adapters control the hard disk drive. Use a separate sub menu to configure each hard disk drive. Figure 2 shows the IDE Channel 0/ Channel 1 master and slave sub menu.

Phoenix – AwardBIOS CMOS Setup Utility		
IDE Channel 0 Master		
IDE HDD Auto-Detection	[Press Enter]	Item Help
IDE Channel 0 Master	[Auto]	
Access Mode	[Auto]	Menu Level >>
Capacity	0 MB	To auto-detect the HDD's size, head... on this channel
Cylinder	0	
Head	0	
Precomp	0	
Landing Zone	0	
Sector	0	
↑↓→←: Move Enter: Select +/-/PU/PD: Value F10: Save ESC: Exit F1: General Help F5: Previous Values F6: Fail-safe Defaults F7: Optimized Defaults		

Use the legend keys to navigate through this menu and exit to the main menu. Use the Table listed below to configure the hard disk.

Item	Options	Description
IDE HDD Auto-detection	Press Enter	Press Enter to auto-detect the HDD on this channel. If detection is successful, it fills the remaining fields on this menu.
IDE Channel 0 Master	None Auto Manual	Selecting 'manual' lets you set the remaining fields on this screen. Selects the type of fixed disk. "User Type" will let you select the number of cylinders, heads, etc. Note: PRECOMP=65535 means NONE!
Capacity	Auto Display your disk drive size	Disk drive capacity (Approximated). Note that this size is usually slightly greater than the size of a formatted disk given by a disk checking program.
Access Mode	CHS LBA Large Auto	Choose the access mode for this hard disk
The following options are selectable only if the 'IDE Channel 0 Master' item is set to 'Manual'		
Cylinder	Min = 0 Max = 65535	Set the number of cylinders for this hard disk.
Head	Min = 0 Max = 255	Set the number of read/write heads
Precomp	Min = 0 Max = 65535	**** Warning: Setting a value of 65535 means no hard disk
Landing zone	Min = 0 Max = 65535	****
Sector	Min = 0 Max = 255	Number of sectors per track

Drive A / Drive B

These fields identify the types of floppy disk drive A or drive B that has been installed in the computer. The available specifications are:

None	360KB	1.2MB	720KB	1.44MB	2.88MB
	5.25 in.	5.25 in.	3.5 in.	3.5 in.	3.5 in.

Video

This field selects the type of video display card installed in your system. You can choose the following video display cards:

EGA/VGA	For EGA, VGA, SEGA, SVGA or PGA monitor adapters. (default)
CGA 40	Power up in 40 column mode.
CGA 80	Power up in 80 column mode.
MONO	For Hercules or MDA adapters.

Halt On

This field determines whether the system will halt if an error is detected during power up.

All Errors	Whenever the BIOS detects a non-fatal error, the system will stop and you will be prompted.
No Errors	The system boot will not be halted for any error that may be detected. (default)
All, But Keyboard	The system boot will not be halted for a keyboard error; it will stop for all other errors
All, But Diskette	The system boot will not be halted for a disk error; it will stop for all other errors.
All, But Disk/Key	The system boot will not be halted for a keyboard or disk error; it will stop for all others.

Advanced BIOS Features

This section allows you to configure your system for basic operation. You have the opportunity to select the system's default speed, boot-up sequence, keyboard operation, shadowing and security.

Phoenix – AwardBIOS CMOS Setup Utility		
Advanced BIOS Features		
➤ CPU Feature	[Press Enter]	Item Help
➤ Hard Disk Boot Priority	[Press Enter]	
Virus Warning	[Disabled]	Menu Level ➤
CPU L1 & L2 Cache	[Enabled]	
CPU L2 Cache ECC Checking	[Enabled]	Allows you to choose the
Quick Power On Self Test	[Enabled]	VIRUS warning feature for
First Boot Device	[USB-FDD]	IDE Hard Disk boot sector
Second Boot Device	[Hard Disk]	protection. If this function is
Third Boot Device	[CDROM]	enabled and someone attempt
Boot Other Device	[Enabled]	to write data into this area,
Swap Floppy Drive	[Disabled]	BIOS will show a warning
Boot Up Floppy Seek	[Enabled]	message on screen and alarm
Boot Up NumLock Status	[Off]	beep
Typematic Rate Setting	[Disabled]	
x Typematic Rate (Chars/Sec)	6	
x Typematic Delay (Msec)	250	
Security Option	[Setup]	
MPS Version Control For OS	[1.4]	
OS Select For DRAM > 64MB	[Non-OS2]	
Video BIOS Shadow	[Enabled]	
↑↓→←: Move Enter: Select +/-/PU/PD: Value F10: Save ESC: Exit F1: General Help F5: Previous Values F6: Fail-safe Defaults F7: Optimized Defaults		

CPU Feature

Phoenix – AwardBIOS CMOS Setup Utility		
CPU Feature		
Delay Prior to Thermal	[16 Min]	Item Help
Thermal Management	[Thermal Monitor 1]	
X TM2 Bus Ratio	15 X	Menu Level >
X TM2 Bus VID	1G V	

↑↓→←: Move Enter: Select +/-/PU/PD: Value F10: Save ESC: Exit F1: General Help
F5: Previous Values F6: Fail-safe Defaults F7: Optimized Defaults

Delay Prior to Thermal

Delay Prior To Thermal is set at 16 minutes as default, which means the board will wait 16 minutes before it activates the processor's integrated thermal control circuit.

The choice: 4 Min , 8 Min, 16 Min, 32 Min.

Thermal Management

The CPU Thermal Management is as TM1 as default.

Thermal Monitor 1: When CPU over-heated, the CPU internal clock begin on die frequency throttling.

Thermal Monitor 2: When CPU over-heated, the CPU output VID will adjust Vcore to designated voltage. In the meantime, the core frequency speed will also slow down to (FSB MHz X Bus Ratio) MHz.

The choice: Thermal Monitor 1, Thermal Monitor 2.

TM2 Bus Ratio

Represents the frequency (bus ratio of the throttled performance statethat will be initiated when the on-diesensor gose from not hot to hot.

The choice: Min = 15
Max = 15

Key in a DEC number :

TM2 Bus VID

Represents the voltage of the throttled performance state that will be initiated when the on die sensor goes from not hot to hot.

The choice: 0.700V, 0.716V, 0.732V, 0.748V, 0.764V, 0.780V, 0.796V, 0.812V, 0.828V, 0.844V, 0.860V, 0.876V, 0.892V, 0.908V, 0.924V, 0.940V, 0.956V, 0.972V, 0.988V, 1.004V.

Hard Disk Boot Priority

Phoenix – AwardBIOS CMOS Setup Utility	
Hard Disk Boot Priority	
1. Bootable Add-in Cards	Item Help
	Menu Level ➤ Use <↑> or <↓> to select a device, then press <+> to move it up, or <-> to move it down the list. Press <ESC> to exit this menu.
↑↓: Move PU/PD/+/-: Change Priority F10: Save ESC: Exit F5: Previous Values F6: Fail-safe Defaults F7: Optimized Defaults	

Bootable Add-in Cards

Use <↑> or <↓> to select a device, then press <+> to move it up, or <-> to move it down the list. Press <ESC> to exit this menu.

Virus Warning

Allows you to choose the VIRUS Warning feature for IDE Hard Disk boot sector protection. If this function is enabled and someone attempt to write data into this area, BIOS will show a warning message on screen and alarm beep.

Enabled	Activates automatically when the system boots up causing a warning message to appear when anything attempts to access the boot sector or hard disk partition table.
Disabled	No warning message will appear when anything attempts to access the boot sector or hard disk partition table.

CPU L1 & L2 Cache

These two categories speed up memory access. However, it depends on CPU/chipset design.

Enabled	Enable cache
Disabled	Disable cache

CPU L2 Cache ECC Checking

The choice: Enabled, Disabled.

Quick Power On Self Test

Allows the system to skip certain tests while booting. This will decrease the time needed to boot the system.

Enabled	Enable quick POST
Disabled	Normal POST

First/Second/Third/Other Boot Device

The BIOS attempts to load the operating system from the devices in the sequence selected in these items.

The Choice: Floppy, LS120, Hard Disk, ZIP100, CDROM, Disabled, Enabled, USB-FDD, USB-ZIP, USB-CDROM, Legacy LAN.

Swap Floppy Drive

If the system has two floppy drives, choose enable to assign physical drive B to logical drive A and vice-versa.

The choice: Enabled, Disabled.

Boot Up Floppy Seek

Enabled tests floppy drives to determine whether they have 40 or 80 tracks.

The choice: Enabled, Disabled.

Boot Up NumLock Status

Selects power on state for NumLock.

The choice: On, Off.

Typematic Rate Setting

Keystrokes repeat at a rate determined by the keyboard controller. When enabled, the typematic rate and typematic delay can be selected.

The choice: Enabled, Disabled.

Typematic Rate (Chars/Sec)

Sets the number of times a second to repeat a keystroke when you hold the key down.

The choice: 6, 8, 10, 12, 15, 20, 24, 30.

Typematic Delay (Msec)

Sets the delay time after the key is held down before it begins to repeat the keystroke.

The choice: 250, 500, 750, 1000.

Security Option

Select whether the password is required every time the system boots or only when you enter setup.

System	The system will not boot and access to Setup will be denied if the correct password is not entered at the prompt.
Setup	The system will boot, but access to Setup will be denied if the correct password is not entered at the prompt.

Note: To disable security, select PASSWORD SETTING at Main Menu and then you will be asked to enter password. Do not type anything and just press <Enter>, it will disable security. Once the security is disabled, the system will boot and you can enter Setup freely.

MPS Version Control For OS

The choice: 1.1, 1.4.

OS Select For DRAM > 64MB

Select OS2 only if you are running OS/2 operating system with greater than 64MB of RAM on the system.

The choice: Non-OS2, OS2.

Video BIOS Shadow

Enabled copies Video BIOS to shadow RAM Improves performance.

The choice: Enabled, Disabled.

Advanced Chipset Features

Phoenix – AwardBIOS CMOS Setup Utility		
Advanced Chipset Features		
➤ DRAM Clock/Drive Control	[Press Enter]	Item Help
➤ AGP & P2P Bridge Control	[Press Enter]	
➤ CPU & PCI Bus Control	[Press Enter]	Menu Level ➤
Memory Hole	[Disabled]	
System BIOS Cacheable	[Enabled]	
Video RAM Cacheable	[Disabled]	
Power-Supply Type	[AT]	
Init Display First	[PCI Slot]	
↑↓→←: Move Enter: Select +/-/PU/PD: Value F10: Save ESC: Exit F1: General Help F5: Previous Values F6: Fail-safe Defaults F7: Optimized Defaults		

This section allows you to configure the system based on the specific features of the installed chipset. This chipset manages bus speeds and access to system memory resources, such as DRAM and the external cache. It also coordinates communications between the conventional ISA bus and the PCI bus. It must be stated that these items should never need to be altered. The default settings have been chosen because they provide the best operating conditions for your system. The only time you might consider making any changes would be if you discovered that data was being lost while using your system.

DRAM Settings

The first chipset settings deal with CPU access to dynamic random access memory (DRAM). The default timings have been carefully chosen and should only be altered if data is being lost. Such a scenario might well occur if your system had mixed speed DRAM chips installed so that greater delays may be required to preserve the integrity of the data held in the slower memory chips.

DRAM Clock/Drive Control

Phoenix – AwardBIOS CMOS Setup Utility		
DRAM Clock/Drive Control		
Current FSB Frequency	100MHz	Item Help
Current DRAM Frequency	266MHz	
DRAM Clock	[By SPD]	Menu Level ➤
DRAM Timing	[Auto By SPD]	
X SDRAM CAS Latency [DDR/DDR	2.5/ 4	
X Precharge to Active (Trp)	4T	
X Active to Precharge (Tras)	07T	

↑↓→←: Move Enter: Select +/-/PU/PD: Value F10: Save ESC: Exit F1:General Help
F5: Previous Values F6: Fail-safe Defaults F7: Optimized Defaults

Current FSB Frequency

The choice: 100MHz.

Current DRAM Frequency

The choice: 266MHz.

DRAM Clock

The choice: By SPD, 200MHz, 266MHz, 333MHz.

DRAM Timing

The choice: Manual, Auto By SPD.

SDRAM CAS Latency [DDR/DDR2]

The choice: 1.5/ 2, 2/ 3, 2.5/ 4, 3/ 5.

Precharge to Active(Trp)

The choice: 2T, 3T, 4T, 5T.

Active to Precharge(Tras)

The choice: 05T, 06T, 07T, 08T, 09T, 10T, 11T, 12T, 13T, 14T, 15T, 16T, 17T, 18T, 19T, 20T.

AGP & P2P Bridge Control

Phoenix – AwardBIOS CMOS Setup Utility		
AGP & P2P Bridge Control		
AGP Aperture Size	[128M]	Item Help
VGA Share Memory Size	[64M]	
Direct Frame Buffer	[Enabled]	Menu Level >
Select Display Device	[CRT+LCD]	
Panel Type	[02]	

↑↓→←: Move Enter: Select +/-/PU/PD: Value F10: Save ESC: Exit F1: General Help
F5: Previous Values F6: Fail-safe Defaults F7: Optimized Defaults

AGP Aperture Size

The choice: 32M, 64M, 128M, 256M, 512M, 1G.

VGA Share Memory Size

The choice: Disabled, 8M, 16M, 32M, 64M, 128M.

Direct Frame Buffer

The choice: Enabled, Disabled.

Select Display Device


The choice: CRT, LCD, TV, DVI, HDTV, CRT+LCD, CRT+TV, CRT+DVI, CRT+HDTV, DVI+HDTV, LCD+DVI, TV+DVI.

Panel Type

The choice: Min=0000
Max=000F

Key in a HEX number:

CPU & PCI Bus Control

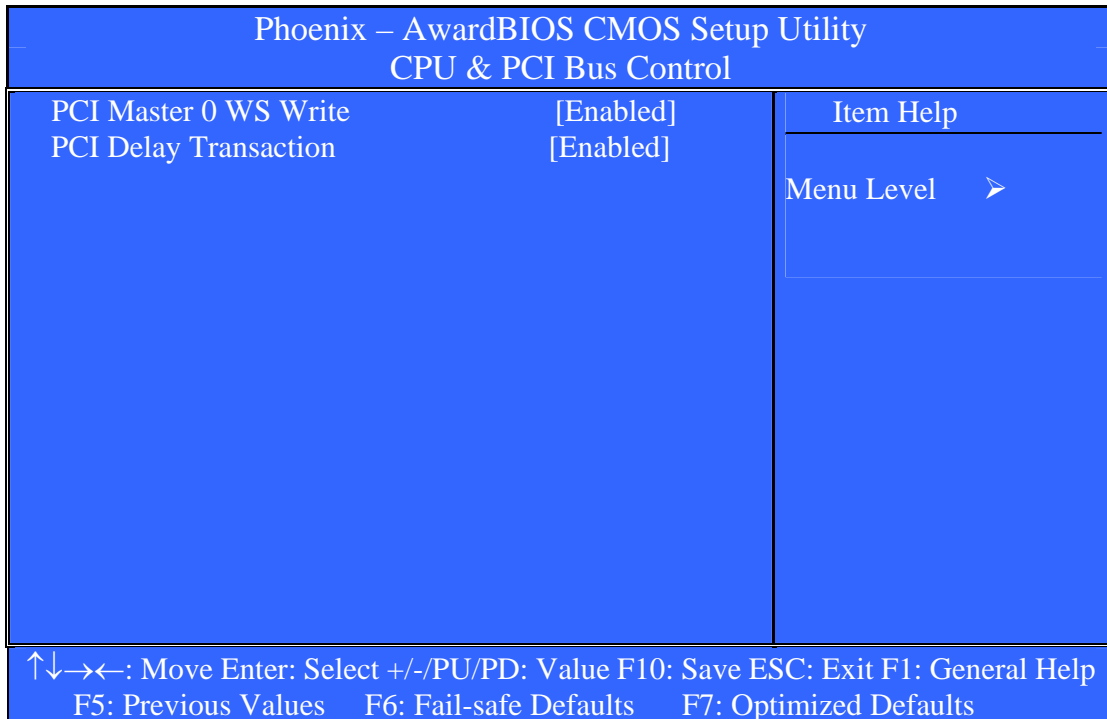

PCI Master 0 WS Write

The choice: Enabled, Disabled.

PCI Delay Transaction

The choice: Enabled, Disabled.

Memory Hole

In order to improve performance, certain space in memory can be reserved for ISA cards. This field allows you to reserve 15MB to 16MB memory address space to ISA expansion cards. This makes memory from 15MB and up unavailable to the system. Expansion cards can only access memory up to 16MB. The default of this field is set to *Disabled*.

The choice: Disabled, 15M-16M.

System BIOS Cacheable

Selecting *Enabled* allows caching of the system BIOS ROM at F0000h-FFFFFh, resulting in better system performance. However, if any program writes to this memory area, a system error may result.

The choice: Enabled, Disabled.

Video RAM Cacheable

The choice: Enabled, Disabled.

Power-Supply Type

The choice: AT, ATX.

Init Display First

The choice: PCI Slot, AGP.

Integrated Peripherals

Phoenix – AwardBIOS CMOS Setup Utility		
Integrated Peripherals		
➤ VIA OnChip IDE Device	[Press Enter]	Item Help
➤ VIA OnChip PCI Device	[Press Enter]	
➤ SuperIO Device	[Press Enter]	
PWRON After PWR-Fail	[Off]	Menu Level ➤
Onboard Serial Port 3	[3E8]	
Serial Port 3 Use IRQ	[IRQ3]	
Onboard Serial Port 4	[2E8]	
Serial Port 4 Use IRQ	[IRQ4]	
Watch Dog Timer Select	[Disabled]	
➤ USB Device Setting	[Press Enter]	
↑↓→←: Move Enter: Select +/-/PU/PD: Value F10: Save ESC: Exit F1: General Help F5: Previous Values F6: Fail-safe Defaults F7: Optimized Defaults		

VIA OnChip IDE Device

Phoenix – AwardBIOS CMOS Setup Utility		
VIA OnChip IDE Device		
SATA Controller	[Enabled]	Item Help
SATA Controller Mode	[IDE]	
IDE DMA transfer access	[Enabled]	
OnChip IDE Channel1	[Enabled]	Menu Level ➤
IDE Prefetch Mode	[Enabled]	
Secondary Master PIO	[Auto]	
Secondary Slave PIO	[Auto]	
Secondary Master UDMA	[Auto]	
Secondary Slave UDMA	[Auto]	
IDE HDD Block Mode	[Enabled]	
↑↓→←: Move Enter: Select +/-/PU/PD: Value F10: Save ESC: Exit F1: General Help F5: Previous Values F6: Fail-safe Defaults F7: Optimized Defaults		

SATA Controller

The choice: Enabled, Disabled.

SATA Controller Mode

The choice: IDE, RAID.

IDE DMA transfer access

The choice: Enabled, Disabled.

OnChip IDE Channel1

The choice: Enabled, Disabled.

IDE Prefetch Mode

The choice: Enabled, Disabled.

Secondary Master/Slave PIO

The choice: Auto, Mode 0, Mode 1, Mode 2, Mode 3, Mode 4.

Secondary Master/Slave UDMA

The choice: Auto, Disabled.

IDE HDD Block Mode

If your IDE hard drive supports block mode select Enabled for automatic detection of the optimal number of block read/writes per sector the drive can support.

The choice: Enabled, Disabled.

VIA OnChip PCI Device

Phoenix – AwardBIOS CMOS Setup Utility		
VIA OnChip PCI Device		
Azalia HDA Controller	[Auto]	Item Help
		Menu Level >
↑↓→←: Move Enter: Select +/-/PU/PD: Value F10: Save ESC: Exit F1: General Help F5: Previous Values F6: Fail-safe Defaults F7: Optimized Defaults		

Azalia HDA Controller

The choice: Auto, Disabled.

SuperIO Device

Phoenix – AwardBIOS CMOS Setup Utility		
SuperIO Device		
Onboard Serial Port 1	[3F8/IRQ4]	Item Help
Onboard Serial Port 2	[2F8/IRQ3]	
UART Mode Select	[Normal]	
X RxD , TxD Active	Hi , Lo	Menu Level >
X IR Transmission Delay	Enabled	
X UR2 Duplex Mode	Half	
Onboard Parallel Port	[378/IRQ7]	
Parallel Port Mode	[SPP]	
X EPP Mode Select	EPP1.7	
X ECP Mode Use DMA	3	
↑↓→←: Move Enter: Select +/-/PU/PD: Value F10: Save ESC: Exit F1: General Help F5: Previous Values F6: Fail-safe Defaults F7: Optimized Defaults		

Onboard Serial Port 1/Port 2

Select an address and corresponding interrupt for the first and second serial ports.

The choice: 3F8/IRQ4, 2F8/IRQ3, 3E8/IRQ4, 2E8/IRQ3, Disabled, Auto.

UART Mode Select

The choice: IrDA, ASKIR, Normal.

RxD, TxD Active

The choice: Hi, Hi Hi, Lo Lo, Hi Lo, Lo.

IR Transmission Delay

The choice: Enabled, Disabled.

UR2 Duplex Mode

The choice: Full, Half.

Onboard Parallel Port

This item allows you to determine onboard parallel port controller I/O address setting.

The choice: 378/IRQ7, 278/IRQ5, 3BC/IRQ7, Disabled.

Parallel Port Mode

Select an operating mode for the onboard parallel (printer) port. Select *Normal*, *Compatible*, or *SPP* unless you are certain your hardware and software both support one of the other available modes.

The choice: SPP, EPP, ECP, ECP+EPP, Normal.

EPP Mode Select

Select EPP port type 1.7 or 1.9.

The choice: EPP1.7, EPP 1.9.

ECP Mode Use DMA

Select a DMA channel for the parallel port for use during ECP mode.

The choice: 3, 1.

PWRON After PWR-Fail

The choice: Off, On, Former-Sts.

Onboard Serial Port 3/Port 4

The choice: 3E8, 2E8, Disabled.

Serial Port 3/Port 4 Use IRQ

The choice: IRQ3, IRQ4, IRQ5, IRQ7, IRQ9, IRQ10, IRQ11.

Watch Dog Timer Select

The choice: Enable, Disabled.

USB Device Setting

Phoenix – AwardBIOS CMOS Setup Utility		
USB Device Setting		
USB 1.0 Controller	[Enabled]	Item Help
USB 2.0 Controller	[Enabled]	
USB Operation Mode	[High Speed]	Menu Level ➤
USB Keyboard Function	[Enabled]	
USB Mouse Function	[Disabled]	[Enable] or [Disable]
USB Storage Function	[Enabled]	Universal Host Controller Interface for Universal Serial Bus.
*** USB Mass Storage Device Boot Setting ***		
↑↓→←: Move Enter: Select +/-/PU/PD: Value F10: Save ESC: Exit F1: General Help F5: Previous Values F6: Fail-safe Defaults F7: Optimized Defaults		

USB 1.0 Controller

[Enable] or [Disable] Universal Host Controller Interface for Universal Serial Bus.

The choice: Enabled, Disabled.

USB 2.0 Controller

[Enable] or [Disable] Enhanced Host Controller Interface for Universal Serial Bus.

The choice: Enabled, Disabled.

USB Operation Mode

Auto decide USB device operation mode.

The choice: [High speed]: If USB device was high speed device, then it operated on high speed mode. If USB device was full/low speed device, then it operated on full/low speed mode.

[Full/Low Speed]: All of USB device operated on full/low speed mode.

USB Keyboard Function

[Enable] or [Disable] Legacy support of USB Keyboard.

The choice: Enabled, Disabled.

USB Mouse Function

[Enable] or [Disable] Legacy support of USB Mouse.

The choice: Enabled, Disabled.

USB Storage Function

[Enable] or [Disable] Legacy support of USB Mass Storage.

The choice: Enabled, Disabled.

Power Management Setup

The Power Management Setup allows you to configure your system to most effectively save energy while operating in a manner consistent with your own style of computer use.

Phoenix – AwardBIOS CMOS Setup Utility		
Power Management Setup		
ACPI function	[Enabled]	Item Help
ACPI Suspend Type	[S1(POS)]	
Power Management Option	[User Define]	Menu Level ➤
HDD Power Down	[Disable]	
Suspend Mode	[Disable]	
Video off Option	[Suspend -> Off]	
Video off Method	[V/H SYNC+Blank]	
MODEM Use IRQ	[3]	
Soft-Off by PWRBTN	[Instant-Off]	
Run VGABIOS if S3 Resume	[Auto]	
Ac Loss Auto Restart	[Off]	
➤ Wakeup Event Detect	[Press Enter]	

↑↓→←: Move Enter: Select +/-/PU/PD: Value F10: Save ESC: Exit F1: General Help
F5: Previous Values F6: Fail-safe Defaults F7: Optimized Defaults

ACPI Function

This item allows you to enabled/disabled the Advanced Configuration and Power Management (ACPI).

The choice: Enabled, Disabled.

ACPI Suspend Type

The choice: S1(POS), S3(STR), S1&S3.

Power Management Option

This category allows you to select the type (or degree) of power saving and is directly related to the following modes:

1. HDD Power Down
2. Suspend Mode

There are three selections for Power Management, three of which have fixed mode settings.

Min. Power Saving	Minimum power management. Suspend Mode = 1 hr., and HDD Power Down = 15 min.
Max. Power Saving	Maximum power management. Suspend Mode = 1 min., and HDD Power Down = 1 min.
User Define	Allows you to set each mode individually. The Suspend mode ranges are from 1 min. to 1 hr. The HDD Power Down ranges are from 1 min. to 15 min. and disable.

HDD Power Down

The choice: Disable, 1 Min, 2 Min, 3 Min, 4 Min, 5 Min, 6 Min, 7 Min, 8 Min, 9 Min, 10 Min, 11 Min, 12 Min, 13 Min, 14 Min, 15 Min.

Suspend Mode

The choice: 1Min, 2Min, 4Min, 6Min, 8Min, 10Min, 20Min, 30Min, 40Min, 1Hour, Disable.

Video Off Option

The choice: Always On, Suspend -> Off.

Video Off Method

This determines the manner in which the monitor is blanked.

V/H SYNC+Blank	This selection will cause the system to turn off the vertical and horizontal synchronization ports and write blanks to the video buffer.
Blank Screen	This option only writes blanks to the video buffer.
DPMS Support	Initial display power management signaling. Allows the BIOS to control video display card if it supports the DPMS feature.

MODEM Use IRQ

The choice: NA, 3, 4, 5, 7, 9, 10, 11.

Soft-Off by PWRBTN

The choice: Instant-Off, Delay 4 Sec.

Run VGABIOS if S3 Resume

The choice: Auto, Yes, No.

Ac Loss Auto Restart

The choice: Off, On, Former-Sts.

Wakeup Event Detect

Phoenix – AwardBIOS CMOS Setup Utility		
Wakeup Event Detect		
Modem Ring Resume	[By OS]	Item Help
RTC Alarm Resume	[Disabled]	Menu Level >
X Date (of Month)	0	
X Resume Time (hh : mm : ss)	0 : 0 : 0	

↑↓→←: Move Enter: Select +/-/PU/PD: Value F10: Save ESC: Exit F1: General Help
 F5: Previous Values F6: Fail-safe Defaults F7: Optimized Defaults

Modem Ring Resume

The choice: Enabled, By OS.

RTC Alarm Resume

The choice: Enabled, Disabled.

Date (of Month)

The choice: Min= 0
Max= 31

Key in a DEC number:

Resume Time (hh:mm:ss)

The choice: hh : Min= 0
Max= 23

Key in a DEC number:
mm : Min= 0
Max= 59

Key in a DEC number:
ss : Min= 0
Max= 59

Key in a DEC number:

PnP/PCI Configuration Setup

This section describes configuring the PCI bus system. PCI, or **Personal Computer Interconnect**, is a system which allows I/O devices to operate at speeds nearing the speed the CPU itself uses when communicating with its own special components. This section covers some very technical items and it is strongly recommended that only experienced users should make any changes to the default settings.

Phoenix – AwardBIOS CMOS Setup Utility PnP/PCI Configurations		
PNP OS Installed	[No]	Item Help
Reset Configuration Data	[Disabled]	
Resources Controlled By	[Auto(ESCD)]	Menu Level ➤
X IRQ Resources	Press Enter	Select Yes if you are using a Plug and Play capable operating system Select No if you need the BIOS to configure non-boot devices
X DMA Resources	Press Enter	
PCI/VGA Palette Snoop	[Disabled]	
Assign IRQ For VGA	[Enabled]	
Assign IRQ For USB	[Enabled]	
** PCI Express relative items **		
↑↓→←: Move Enter: Select +/-/PU/PD: Value F10: Save ESC: Exit F1: General Help F5: Previous Values F6: Fail-safe Defaults F7: Optimized Defaults		

PNP OS Installed

Select Yes if you are using a Plug and Play capable operating system. Select No if you need the BIOS to configure non-boot devices.

The choice: No, Yes.

Reset Configuration Data

Default is Disabled. Select Enabled to reset Extended System Configuration Data (ESCD) when you exit Setup if you have installed a new add-on and the system reconfiguration has caused such a serious conflict that the OS cannot boot.

The choice: Enabled, Disabled.

Resources Controlled By

BIOS can automatically configure all the boot and Plug and Play compatible devices. If you choose Auto, you cannot select IRQ DMA and memory base address fields, since BIOS automatically assigns them.

The choice: Auto (ESCD), Manual.

IRQ Resources

When resources are controlled manually, assign each system interrupt a type, depending on the type of device using the interrupt. This item allows you to determine the IRQ assigned to the ISA bus and is not available to any PCI slot. Legacy ISA for devices compliant with the original PC AT bus specification, PCI/ISA PnP for devices compliant with the Plug and Play standard whether designed for PCI or ISA bus architecture.

Phoenix – AwardBIOS CMOS Setup Utility		
IRQ Resources		
IRQ-3 assigned to	[PCI/ISA PnP]	Item Help
IRQ-4 assigned to	[PCI/ISA PnP]	
IRQ-5 assigned to	[PCI/ISA PnP]	Menu Level ➤
IRQ-7 assigned to	[PCI/ISA PnP]	
IRQ-9 assigned to	[PCI/ISA PnP]	
IRQ-10 assigned to	[PCI/ISA PnP]	Legacy ISA for devices compliant with the original PC AT bus specification, PCI/ISA PnP for devices compliant with the Plug and Play standard whether designed for PCI or ISA bus architecture
IRQ-11 assigned to	[PCI/ISA PnP]	
IRQ-12 assigned to	[PCI/ISA PnP]	
IRQ-14 assigned to	[PCI/ISA PnP]	
IRQ-15 assigned to	[PCI/ISA PnP]	

↑↓→←: Move Enter: Select +/-/PU/PD: Value F10: Save ESC: Exit F1: General Help
F5: Previous Values F6: Fail-safe Defaults F7: Optimized Defaults

**IRQ-3/IRQ-4/IRQ-5/IRQ-7/IRQ-9/IRQ-10/IRQ-11/IRQ-12/
IRQ-14/IRQ-15 assigned to**

Legacy ISA for devices compliant with the original PC AT bus specification, PCI/ISA PnP for devices compliant with the Plug and Play standard whether designed for PCI or ISA bus architecture.

The Choice: Legacy ISA and PCI/ISA PnP.

DMA Resources

When resources are controlled manually, assign each system DMA channel a type, depending on the type of device using the DMA channel.

Phoenix – AwardBIOS CMOS Setup Utility		
DMA Resources		
DMA-0 assigned to	[PCI/ISA PnP]	Item Help
DMA-1 assigned to	[PCI/ISA PnP]	
DMA-3 assigned to	[PCI/ISA PnP]	Menu Level ➤
DMA-5 assigned to	[PCI/ISA PnP]	
DMA-6 assigned to	[PCI/ISA PnP]	Legacy ISA for devices compliant with the original PC AT bus specification, PCI/ISA PnP for devices compliant with the Plug and Play standard whether designed for PCI or ISA bus architecture
DMA-7 assigned to	[PCI/ISA PnP]	
↑↓→←: Move Enter: Select +/-/PU/PD: Value F10: Save ESC: Exit F1: General Help F5: Previous Values F6: Fail-safe Defaults F7: Optimized Defaults		

DMA-0/ DMA-1/ DMA-3/ DMA-5/DMA-6/ DMA-7 assigned to

Legacy ISA for devices compliant with the original PC AT bus specification, PCI/ISA PnP for devices compliant with the Plug and Play standard whether designed for PCI or ISA bus architecture.

The Choice: Legacy ISA and PCI/ISA PnP.

PCI/VGA Palette Snoop

Leave this field at *Disabled*.

The choice: Enabled, Disabled.

Assign IRQ For VGA

The choice: Enabled, Disabled.

Assign IRQ For USB

The choice: Enabled, Disabled.

PC Health Status

This section helps you to get more information about your system including CPU temperature, FAN speed and voltages. It is recommended that you contact with your motherboard supplier to get proper value about your setting of the CPU temperature.

Phoenix – AwardBIOS CMOS Setup Utility		
PC Health Status		
CPU Warning Temperature	[Disabled]	Item Help
Current System Temp .	55°C / 131°F	Menu Level ➤
Current CPUDIE Temp .	30°C / 86°F	
Current CPU Temperature	31°C / 87°F	
Current CPUFAN Speed	6308 RPM	
Current SYSFAN Speed	0 RPM	
Vcore	1.12V	
+1.5V	1.53V	
+3.3V	3.48V	
+5V	5.21V	
+12V	12.46V	
VBAT(V)	3.26V	
5VSB(V)	4.94V	
Shutdown Temperature	[Disabled]	
↑↓→←: Move Enter: Select +/-/PU/PD: Value F10: Save ESC: Exit F1: General Help F5: Previous Values F6: Fail-safe Defaults F7: Optimized Defaults		

CPU Warning Temperature

Select the CPU over-heated warning temperature.

The choice: Disabled, 50°C/122°F, 53°C/127°F, 56°C/133°F, 60°C/140°F, 63°C/145°F, 66°C/151°F, 70°C/158°F.

Current System Temp.

Shows System Temperature.

Current CPUDIE Temp.

Shows CPUDIE Temperature.

Current CPU Temperature

Shows Board Temperature.

Current CPUFAN Speed

Shows CPUFAN speed.

Current SYSFAN Speed

Shows SYSFAN speed.

Vcore/1.5V/3.3V/5V/12V/VBAT/5VSB Voltages

Shows Power rails voltage.

Shutdown Temperature

The choice: Disabled, 60°C/140°F, 65°C/149°F, 70°C/158°F, 75°C/167°F.

Frequency/Voltage Control

Phoenix – AwardBIOS CMOS Setup Utility	
Frequency/Voltage Control	
Spread Spectrum [0.25%]	Item Help
	Menu Level >
↑↓→←: Move Enter: Select +/-/PU/PD: Value F10: Save ESC: Exit F1: General Help F5: Previous Values F6: Fail-safe Defaults F7: Optimized Defaults	

Spread Spectrum

The choice: Disabled, 0.20%, 0.25%, 0.35%.

Load Fail-Safe Defaults

When you press <Enter> on this item you get a confirmation dialog box with a message similar to:

Load Fail-Safe Defaults (Y/N) ? N

Pressing 'Y' loads the BIOS default values for the most stable, minimal-performance system operations.

Load Optimized Defaults

When you press <Enter> on this item you get a confirmation dialog box with a message similar to:

Load Optimized Defaults (Y/N) ? N

Pressing 'Y' loads the default values that are factory settings for optimal performance system operations.

Supervisor/User Password Setting

You can set either supervisor or user password, or both of them. The differences between are:

supervisor password : can enter and change the options of the setup menus.

user password : just can only enter but do not have the right to change the options of the setup menus. When you select this function, the following message will appear at the center of the screen to assist you in creating a password.

ENTER PASSWORD:

Type the password, up to eight characters in length, and press <Enter>. The password typed now will clear any previously entered password from CMOS memory. You will be asked to confirm the password. Type the password again and press <Enter>. You may also press <Esc> to abort the selection and not enter a password.

To disable a password, just press <Enter> when you are prompted to enter the password. A message will confirm the password will be disabled. Once the password is disabled, the system will boot and you can enter Setup freely.

PASSWORD DISABLED.

When a password has been enabled, you will be prompted to enter it every time you try to enter Setup. This prevents an unauthorized person from changing any part of your system configuration.

Additionally, when a password is enabled, you can also require the BIOS to request a password every time your system is rebooted. This would prevent unauthorized use of your computer.

You determine when the password is required within the BIOS Features Setup Menu and its Security option. If the Security option is set to "System", the password will be required both at boot and at entry to Setup. If set to "Setup", prompting only occurs when trying to enter Setup.

Exit Selecting

Save & Exit Setup

Pressing <Enter> on this item asks for confirmation:

SAVE to CMOS and EXIT (Y/N)? Y

Pressing “Y” stores the selections made in the menus in CMOS – a special section of memory that stays on after you turn your system off. The next time you boot your computer, the BIOS configures your system according to the Setup selections stored in CMOS. After saving the values the system is restarted again.

Exit Without Saving

Pressing <Enter> on this item asks for confirmation:

Quit Without Saving (Y/N)? N

This allows you to exit Setup without storing in CMOS any change. The previous selections remain in effect. This exits the Setup utility and restarts your computer.

CHAPTER 4 Appendix

I/O Port Address Map.....	74
Interrupt Request Lines(IRQ)	75
POST Beep.....	76

A. I/O Port Address Map

Each peripheral device in the system is assigned a set of I/O port addresses which also becomes the identity of the device. There are a total of 1K port address space available. The following table lists the I/O port addresses used on the Industrial CPU Card.

Address	Device Description
000h - 01Fh	DMA Controller #1
020h - 03Fh	Interrupt Controller #1
040h - 05Fh	Timer
060h - 06Fh	Keyboard Controller
070h - 07Fh	Real Time Clock, NMI
080h - 09Fh	DMA Page Register
0A0h - 0BFh	Interrupt Controller #2
0C0h - 0DFh	DMA Controller #2
0F0h	Clear Math Coprocessor Busy Signal
0F1h	Reset Math Coprocessor
1F0h - 1F7h	IDE Interface
278 - 27F	Parallel Port #2(LPT2)
2F8h - 2FFh	Serial Port #2(COM2)
2B0 - 2DF	Graphics adapter Controller
378h - 3FFh	Parallel Port #1(LPT1)
360 - 36F	Network Ports
3B0 - 3BF	Monochrome & Printer adapter
3C0 - 3CF	EGA adapter
3D0 - 3DF	CGA adapter
3F0h - 3F7h	Floppy Disk Controller
3F8h - 3FFh	Serial Port #1(COM1)

B. Interrupt Request Lines (IRQ)

There are a total of 15 IRQ lines available on the Industrial CPU Card. Peripheral devices use interrupt request lines to notify CPU for the service required. The following table shows the IRQ used by the devices on the Industrial CPU Card.

Level	Function
IRQ0	System Timer Output
IRQ1	Keyboard
IRQ2	Interrupt Cascade
IRQ3	Serial Port #2
IRQ4	Serial Port #1
IRQ5	Reserved
IRQ6	Floppy Disk Controller
IRQ7	Parallel Port #1
IRQ8	Real Time Clock
IRQ9	Software Redirected to Int 0Ah
IRQ10	Reserved
IRQ11	Reserved
IRQ12	PS/2 Mouse
IRQ13	80287
IRQ14	Primary IDE
IRQ15	Secondary IDE

C. POST Beep

Currently there are two kinds of beep codes in BIOS. This code indicates that a **video error** has occurred and the BIOS cannot initialize the video screen to display any additional information. This beep code consists of a single long beep followed by two short beeps.

The other code indicates that your **DRAM error** has occurred. This beep code consists of a single long beep repeatedly.