

5ED5/5EDM

**586 CPU Supported PCI Mainboard
User's Guide & Technical Reference**

**SOYO**TM

About This Guide

This User's Guide is for assisting system manufacturers and end users in setting up and installing the mainboard. Information in this guide has been carefully checked for reliability; however, no guarantee is given as to the correctness of the contents. The information in this document is subject to change without notice.

Copyright Notice

Copyright 1997, Soyo Computer Inc. All rights reserved. This manual is copyrighted by Soyo Computer Inc. You may not reproduce, transmit, transcribe, store in a retrieval system, or translate into any language, in any form or by any means, electronic, mechanical, magnetic, optical, chemical, manual, or otherwise, any part of this publication without express written permission of Soyo Computer Inc.

Trademarks

Soyo is a registered trademark of Soyo Computer Inc. All trademarks are the property of their owners.

Disclaimer

Soyo Computer Inc. makes no representations or warranties regarding the contents of this manual. We reserve the right to revise the manual or make changes in the specifications of the product described within it at any time without notice and without obligation to notify any person of such revision or change. The information contained in this manual is provided for general use by our customers. Our customers should be aware that the personal computer field is the subject of many patents. Our customers should ensure that they take appropriate action so that their use of our products does not infringe upon any patents. It is the policy of Soyo Computer Inc. to respect the valid patent rights of third parties and not to infringe upon or assist others to infringe upon such rights.

Restricted Rights Legend

Use, duplication, or disclosure by the Government is subject to restrictions set forth in subparagraph (c)(1)(ii) of the Rights in Technical Data and Computer Software clause at 252.277-7013.

Product Rights

Product mentioned in this manual are mentioned for identification purpose only. Product names appearing in this manual may or may not be registered trademarks or copyrights of their respective companies.

If you need any further information, please come to our home page on internet. The address is "<http://www.soyo.com.tw>".

Edition: November 1997

Version 1.0

5ED5/5EDM SERIAL

FC Tested To Comply
With FCC Standards
FOR HOME OR OFFICE USE

Table of Contents

Chapter 1: Introduction	1
Key Features	1
Unpacking the Mainboard	2
Electrostatic Discharge Precautions	2
Mainboard Layout w/ Default Settings	3
Chapter 2: Hardware Setup	5
Jumpers	5
JP5: CMOS Clear Jumper	5
JP22: CPU Burst Mode Jumper	6
JP1: Smart Detect CPU Voltage Auto/Manual Jumper	6
JP37: DIMM Voltage Jumper	7
CPU Type Configuration	8
P54C/P55C Series CPUs Settings	8
P54C/P55C Series CPUs Settings (Continued)	9
AMD K5/K6 Series CPUs Setting	10
Cyrix 6x86/L/MX Series CPUs Setting	11
Memory Configuration	12
Memory Configuration Table	12
RAM Bank Installation Notice	12
Cache Configuration	13
Cache Size and RAM Locations	13
Multi I/O Port Addresses	13
Connectors	14
Front Panel Connectors	14
Back Panel Connectors	15
Other Connectors	15
Chapter 3: BIOS Setup	18
Standard CMOS Setup	19
BIOS Features Setup	21
Chipset Features Setup	24
Power Management Setup	27
PNP/PCI Configuration Setup	30
Load Setup Defaults	32
Load BIOS Defaults	32
Integrated Peripherals	33
Supervisor Password	35
User Password	36
IDE HDD Auto Detection	37

Quick Installation Guide	38
Motherboard Layout	38
CPU Voltage and Frequency Jumper Settings	38
Voltage Settings: JP30	38
CPU Frequency Settings: SW1	38
Memory Configuration	38
Additional Jumper Settings	39
Settings for Various Processors: SW1 & JP30	39

1 Introduction

The ETEQ 82C662X PCI mainboard is a high-performance ATX form-factor system board that supports P54C/P55C family CPUs. This mainboard is fully compatible with industry standards and adds many technical enhancements.

Key Features

- CPU
 - Supports P54C/P55C family CPUs running at 75~233 MHz speeds; Cyrix 6x86/6x86L/6x86MX CPUs running at PR150~PR266 speeds; and AMD K5/K6 CPUs running at P75~PR300 speeds
 - Supports Socket 7 for upgrade
 - Supports P54C/P55C series SMM Mode and CPU Stop Clock
 - Supports **MMX** technology and Smart Detect CPU Voltage function
- L2 Cache Controller
 - On-board **512K/1M** Pipeline Burst SRAMs Cache
- DRAM Controller
 - Supports 2 strips of 72-pin FPM/EDO SIMM (symmetrical/asymmetrical addressing)
 - Supports **3 strips** of 168-pin EDO/SDRM **Unbuffered DIMM**
 - **Comes with three DIMM banks, supports 8/16/32/64/128 MB unbuffered DIMMs**
 - Memory configuration for DIMM is from 8MB to 384 MB; for SIMM is from 8MB to 64MB
- BUS Controller
 - Compliant to PCI specifications v2.1
 - Five 32-bit PCI slots, two ISA slots, and **one AGP slot**
 - **Onboard USB (Universal Serial Bus) port**
- Peripheral Controller
 - System BIOS with “Plug and Play” function
 - Onboard PCI Master IDE controller and floppy controller
 - Onboard supports two high speed UARTS (w/i 16550 FIFO), one ECP/EPP/SPP multi-mode parallel port, and one PS/2 mouse port
 - **Onboard FLASH Memory for easy upgrade BIOS**
 - Easy installation of ETEQ E-IDE/ATAPI CD-ROM Bus Master Drivers included
 - Onboard IR function

Unpacking the Mainboard

The mainboard package contains:

- The EQ82C662X Mainboard
- One CD (including Manuals/Drivers/Utilities)

Note: Do not unpack the mainboard until you are ready to install it.

Follow the precautions below while unpacking the mainboard.

1. Before handling the mainboard, ground yourself by grasping an unpainted portion of the system's metal chassis.
2. Remove the mainboard from its anti-static packaging and place it on a grounded surface, component side up.
3. Check the mainboard for damage. If any chip appears loose, press carefully to seat it firmly in its socket.

Do not apply power if the mainboard appears damaged. If there is damage to the board contact your dealer immediately.

Electrostatic Discharge Precautions

Make sure you ground yourself before handling the mainboard or other system components. Electrostatic discharge can easily damage the components. Note that you must take special precaution when handling the mainboard in dry or air-conditioned environments.

Take these precautions to protect your equipment from electrostatic discharge:

- Do not remove the anti-static packaging until you are ready to install the mainboard and other system components.
- Ground yourself before removing any system component from its protective anti-static packaging. To ground yourself grasp the expansion slot covers or other unpainted portions of the computer chassis.
- Frequently ground yourself while working, or use a grounding strap.
- Handle the mainboard by the edges and avoid touching its components.

Mainboard Layout w/ Default Settings

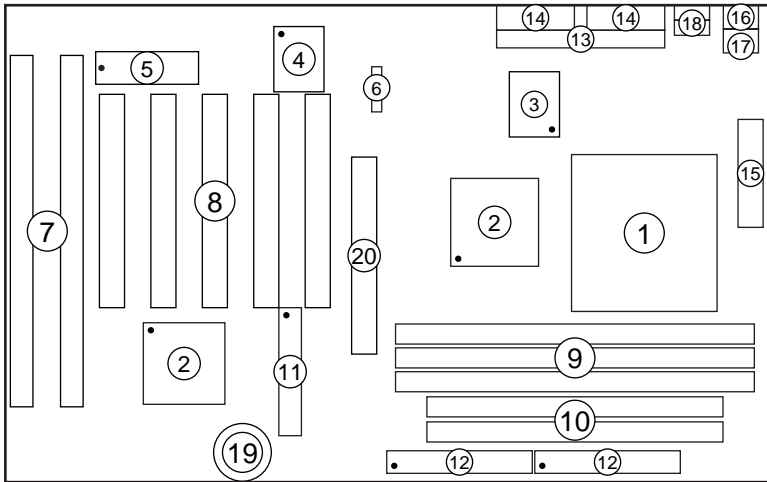


Figure 1-1. Mainboard Layout

- | | |
|-------------------------|-----------------------------|
| 1. ZIF socket 7 | 11. Floppy Connector |
| 2. EQ82C662X Chipset | 12. IDE1/IDE2 Connector |
| 3. Pipelined Burst SRAM | 13. Parallel Port Connector |
| 4. Super I/O Chip | 14. COM1/COM2 Connector |
| 5. PnP FLASH BIOS | 15. ATX Power Connector |
| 6. TAG SRAM | 16. PS/2 KB Connector |
| 7. ISA Slots | 17. PS/2 Mouse Connector |
| 8. PCI Slots | 18. USB Connectors |
| 9. Unbuffered DIMM Bank | 19. 3 Volt. Lithium Battery |
| 10. SIMM Bank | 20. AGP Port |

Default settings are as follows: Pentium 133MHz CPU, 512K Pipelined Burst cache, On-board PCI E-IDE Enabled, 2 high speed UARTS Enabled (w/ 16550 FIFO), 1 EPP/ECP port (ECP + EPP mode), 5V SIMM/3.3V DIMM, and AT power supply.

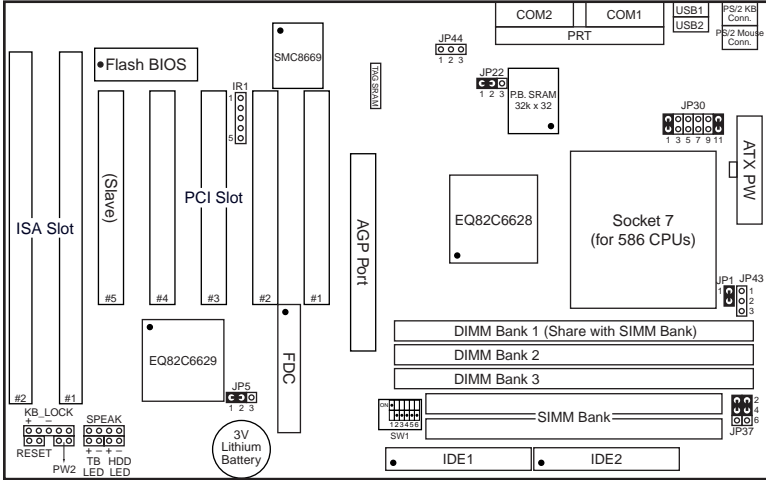


Figure 1–2. Regular Mainboard Default Setting

Note: Make sure the system is well ventilated to prevent overheating and ensure system stability.

2 Hardware Setup

This chapter is designed for Normal edition mainboard use only and it explains how to configure the mainboard's hardware. After you install the mainboard, you can set jumpers, install memory on the mainboard, and make case connections. Refer to this chapter whenever you upgrade or reconfigure your system.

CAUTION: *Turn off power to the mainboard, system chassis, and peripheral devices before performing any work on the mainboard or system.*



Jumpers

This mainboard uses different colors of jumper caps to identify different functions of the jumpers:

Jumper Cap Color	White	Black	Blue	Red	Green
Function	clear CMOS	CPU burst mode	Smart Detect CPU voltage	DIMM voltage	CPU Voltage



JP5: CMOS Clear Jumper

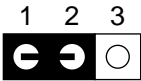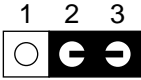Clear the CMOS memory by momentarily shorting pin 2–3; then shorting pin 1–2 to retain new settings.

CMOS Setting	JP5
Retain CMOS data (default)	
Clear CMOS data	

JP22: CPU Burst Mode Jumper

Due to different designs, there are two kinds of CPU burst modes: Interleave Burst and Linear Burst. Select the correct mode according to the CPU you are using.

CPU Burst Mode	JP22
Interleave (for P54C/P55C and AMD K5/K6 CPU)	1 2 3 
Linear (for Cyrix 6x86/L/MX CPU)	1 2 3 

When using a Cyrix series of CPUs, follow the below procedures after select the burst mode:



1. Press <Delete> key to enter the BIOS setup menu during the boot-up,
2. Select “Chipset Features Setup”,
3. Set the “Linear Burst” to “Enabled”,
4. Press <Esc> to go back to the main menu and choose “Save & Exit Setup” to reboot your computer.

JP1: Smart Detect CPU Voltage Auto/Manual Jumper

For P54C/P55C and Cyrix 6x86/L CPUs, this board automatically detects and adjusts the CPU voltage to the proper voltage. JP1 is reserved for a few older non-Intel CPUs which can not be detect correctly. If you run into problems while detecting the voltage of older CPUs, remove the jumper cap to correct it.

JP37: DIMM Voltage Jumper

There are two kinds of DIMM voltages in the market—3.3V and 5V—and most of SDRAM DIMMS are 3.3V. Choose the correct voltage according to the DIMM that you are using.

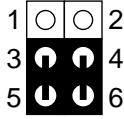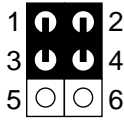DIMM Voltage	JP37 Setting
5V	
3.3V (Default)	

Caution: *Do not change this jumper to 5V setting unless you are sure that your DIMMs are 5V. The wrong setting may cause the system malfunction.*

CPU Type Configuration

SW1 and JP30 are the only switches/jumpers that you need to set for your CPU on this mainboard. Make sure that you know the type of CPU that you are installing and refer to the proper settings which are listed below. If you have a higher frequency CPU then the one listed below, see the “Quick Installation Guide” for more SW1 information.

- SW1: Frequency Setting.** Some newer CPUs may not be included in this section, please refer to the Appendix for more information.
- JP30: Voltage Setting.** There are two kinds of CPU voltages currently on the market—Single and Dual. The CPUs which fall under the single voltage category are: P54C, AMD-K5, and Cyrix 6x86. The CPUs which fall under the dual voltage category are: P55C, AMD-K6, and Cyrix 6x86L/MX. This board is designed to detect the CPU voltage automatically for P54C and P55C CPUs due to the Smart Detect CPU Voltage function, and therefore, there is no need to move any jumpers to set the voltage for P54C/P55C CPUs.

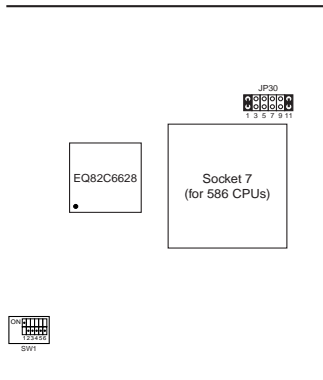














Figure 2–1. Location of JP30 and SW1

P54C/P55C Series CPUs Settings

















CPU	Frequency Setting (SW1)	Voltage Setting (JP30)
P54C–75MHz	External : 50MHz Ratio : 1.5x	Single Voltage 3.52V (default)
P54C–90MHz	External : 60MHz Ratio : 1.5x	
P54C–100MHz	External : 66MHz Ratio : 1.5x	

P54C/P55C Series CPUs Settings (Continued)

CPU	Frequency Setting (SW1)	Voltage Setting (JP30)
P54C-120MHz	 External : 60MHz Ratio : 2.0x	 JP30 Single Voltage 3.52V (default)
P54C-133MHz (default)	 External : 66MHz Ratio : 2.0x	
P54C-150MHz	 External : 60MHz Ratio : 2.5x	
P54C-166MHz	 External : 66MHz Ratio : 2.5x	
P54C-180MHz	 External : 60MHz Ratio : 3.0x	
P54C-200MHz	 External : 66MHz Ratio : 3.0x	
P55C-166MHz (MMX)	 External : 66MHz Ratio : 2.5x	 JP30 DualVoltage 2.8V (default)
P55C-180MHz (MMX)	 External : 60MHz Ratio : 3.0x	
P55C-200MHz (MMX)	 External : 66MHz Ratio : 3.0x	
P55C-233MHz (MMX)	 External : 66MHz Ratio : 3.5x	













Note: The voltage setting for 3.52V and 2.8V are the same due to the Smart Detect CPU Voltage technology.

AMD K5/K6 Series CPUs Setting

CPU	Frequency Setting (SW1)	Voltage Setting (JP30)
AMD K5-PR75	 External : 50MHz Ratio : 1.5x	 Single Voltage 3.52V (default)
AMD K5-PR90	 External : 60MHz Ratio : 1.5x	
AMD K5-PR100	 External : 66MHz Ratio : 1.5x	
AMD K5-PR120	 External : 60MHz Ratio : 1.5x	
AMD K5-PR133	 External : 66MHz Ratio : 1.5x	
AMD K5-PR166	 External : 66MHz Ratio : 2.5x	
AMD K6-PR166	 External : 66MHz Ratio : 2.5x	 Dual Voltage 2.9V
AMD K6-PR180	 External : 60MHz Ratio : 3.0x	
AMD K6-PR200	 External : 66MHz Ratio : 3.0x	
AMD K6-PR233	 External : 66MHz Ratio : 3.5x	 Dual Voltage 3.2V
AMD K6-PR266	 External : 66MHz Ratio : 4.0x	 Dual Voltage 2.1V
AMD K6-PR300	 External : 66MHz Ratio : 4.5x	

Note: The voltage of AMD may vary from market to market. Please ask your CPU provider for detail.

Cyrrix 6x86/L/MX Series CPUs Setting

CPU	Frequency Setting (SW1)	Voltage Setting (JP30)
Cyrrix 6x86/6x86L -PR150	 External : 60MHz Ratio : 2.0x	JP30  JP30 Single Voltage : 3.52V (default) Dual Voltage : 2.8V (default)
Cyrrix 6x86/6x86L -PR166	 External : 66MHz Ratio : 2.0x	JP30  JP30 Single Voltage : 3.52V (default) Dual Voltage : 2.8V (default)
Cyrrix 6x86/6x86L -PR200	 External : 75MHz Ratio : 2.0x	
Cyrrix 6x86MX -PR166	 External : 60MHz Ratio : 2.5x	
Cyrrix 6x86MX -PR200	 External : 66MHz Ratio : 2.5x	JP30  JP30 Dual Voltage : 2.9V
Cyrrix 6x86MX -PR233	 External : 75MHz Ratio : 2.5x	
Cyrrix 6x86MX -PR233	 External : 66MHz Ratio : 3.0x	
Cyrrix 6x86MX -PR266	 External : 75MHz Ratio : 3.0x	
Cyrrix 6x86MX -PR266	 External : 66MHz Ratio : 3.5x	

- Note: 1. There are two kinds of Cyrrix MX-PR233/266 CPUs as you could see on the above list. Make sure the type of your CPU first from your CPU provider and then set the SW1 and JP30.
2. The voltage setting for 3.52V and 2.8V are the same due to the Smart Detect CPU Voltage technology.

Memory Configuration

The mainboard supports one bank of **72-pin 5V FPM/EDO/Burst EDO DRAM (SIMM)**, and **three strips of 168-pin 3.3V/5V Unbuffered DIMM modules**. The mainboard requires SIMM of at least 70ns access time.

The mainboard supports SIMM bank and DIMM banks from 4 to 128 MB with no other restrictions on memory configurations. You can install memory in any combination without having to rely on a memory configuration table. Memory configuration is thus “**Table-Free**” in any memory bank. You must install two SIMM modules to complete a bank.

Memory Configuration Table

	SIMM Bank	DIMM Bank		
	Bank 0	DIMM 1	DIMM 2	DIMM 3
RAM Type	FPM/EDO	FPM/BEDO /SDRAM	FPM/EDO/ SDRAM	FPM/EDO/ SDRAM
Single RAM Module Size (MB)	4/8/16/32/64	4/8/16/32/64 /128	4/8/16/32/64 /128	4/8/16/32/64 /128

Note: Do not install FPM or EDO SIMM/DIMM when you already installed SDRAM type of DIMM.

RAM Bank Installation Notice

Due to the RAS line share architecture of ETEQ chipset, do not install SIMM bank with DIMM1. All other combinations are acceptable.

Cache Configuration

The mainboard has a write-back caching scheme with built-in 512KB or 1MB Level 2 Pipelined Burst cache onboard to improve the system performance.

Cache Size and RAM Locations

Cache Size	Cache RAM	TAG RAM	Cacheable Range
512KB	64k x 64 on U4	16K x 8 on U4	64 MB
1MB	64k x 64 u4, U8	U11	128MB

Multi I/O Port Addresses

Default settings for multi-I/O port addresses are shown in the table below.

Port	I/O Address	IRQ	Status
LPT1*	378H	7	ECP + EPP
COM1	3F8H	4	
COM2	2F8H	3	

- * If default I/O port addresses conflict with other I/O cards (e.g. sound cards or I/O cards), you must adjust one of the I/O addresses to avoid address conflict. (You can adjust these I/O addresses from the BIOS.)

Note: Some sound cards have a default IRQ setting for IRQ7, which may conflict with printing functions. If this occurs do not use sound card functions at the same time you print.

Connectors

Attach the mainboard to case devices via connectors on the mainboard. Refer to Figure 1-1 for connector locations and connector pin positions.


Front Panel Connectors

Connector's Name	Description
HD LED	IDE device LED connector: Attach a 2-pin IDE drive LED cable to this connector. The LED lights when an IDE device is active.
KB_LOCK	Keylock & Power LED connector: It is a 5-pin connector for a lock that may be installed on the system case for enabling or disabling the keyboard. It also attaches to the case's Power LED. Pin 1, 3 are for power LED and pin 4, 5 are for keylock.
PW2	ATX power on/off switch connector: Attach a 2-pin momentary type switch to this connector for turning on or off your ATX power supply.
RESET	Hardware reset switch connector: Attach 2-pin hardware reset switch to it. Closing the reset switch restarts the system.
SPEAK	PC speaker connector: Attach a 4-pin PC speaker cable from the case to this connector.
TB LED	Turbo LED connector: Attach a 2-pin turbo LED cable to it. The LED lights when the system is in turbo mode. Manufacture default has set the board in turbo mode due to most of hardware and software are compliance to turbo mode.

Back Panel Connectors

Connector's Name	Description
COM1/ COM2	COM1/COM2 serial port connectors: Attach COM1/COM2 device cables to these connectors.
PS/2 Keyboard Connector	PS/2 keyboard port connector: A 6-pin female PS/2 keyboard connector is located at the rear of the board. Plug the PS/2 keyboard jack into this connector.
PRT	Parallel port connector: A 26-pin female connector is located at the rear of the board. Plug the parallel port device cable into this connector.
USB1/2	USB ports connectors: Two female connector is located at the rear of the board. Plug the USB devices jack into this connector.

Other Connectors

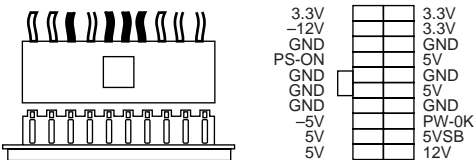Connector's Name	Description																														
ATX PW	<p>ATX power supply connector: It is a twenty-pin male header connector. Plug the connector from the power directly onto the board connector while making sure the pin1 is in its position. The mainboard requires a power supply with at least 200 watts and a “power good” signal.</p>  <p>The diagram shows a 20-pin male header connector with a notch on the left side. To its right is a 20-pin female header with the following pinout:</p> <table border="1" style="display: inline-table; vertical-align: middle;"> <tr><td>3.3V</td><td></td><td>3.3V</td></tr> <tr><td>-12V</td><td></td><td>3.3V</td></tr> <tr><td>GND</td><td></td><td>GND</td></tr> <tr><td>PS-ON</td><td></td><td>5V</td></tr> <tr><td>GND</td><td></td><td>GND</td></tr> <tr><td>GND</td><td></td><td>5V</td></tr> <tr><td>GND</td><td></td><td>GND</td></tr> <tr><td>-5V</td><td></td><td>PW-0K</td></tr> <tr><td>5V</td><td></td><td>5VSB</td></tr> <tr><td>5V</td><td></td><td>12V</td></tr> </table>	3.3V		3.3V	-12V		3.3V	GND		GND	PS-ON		5V	GND		GND	GND		5V	GND		GND	-5V		PW-0K	5V		5VSB	5V		12V
3.3V		3.3V																													
-12V		3.3V																													
GND		GND																													
PS-ON		5V																													
GND		GND																													
GND		5V																													
GND		GND																													
-5V		PW-0K																													
5V		5VSB																													
5V		12V																													
	<p><i>Note:</i> Make sure that the ATX power supply can take at least 10mAmp load on the 5V StandBy lead (5VSB) to meet the standard ATX specification.</p>																														

Fan (JP43)	<p>CPU cooling fan connector: Attach a 3-pin CPU cooling fan cable to this connector. Make sure the pin assignment of the fan matches this connector or you may damage the system. This fan will stop when the system is into the suspend mode, if you enable the Suspend Mode in the BIOS setup.</p> <div data-bbox="558 341 742 579" style="border: 1px solid black; padding: 5px; margin: 10px auto; width: fit-content;"> <p style="text-align: center;">CPU Cooling Fan Pin Assignment</p> <table style="width: 100%; border-collapse: collapse;"> <tr> <td style="text-align: center; width: 20px;">1</td> <td style="text-align: center; width: 20px;">⊖</td> <td style="border-left: 1px solid black; width: 10px;"></td> <td style="text-align: center;">GND</td> </tr> <tr> <td style="text-align: center;">2</td> <td style="text-align: center;">⊖</td> <td style="border-left: 1px solid black;"></td> <td style="text-align: center;">12V</td> </tr> <tr> <td style="text-align: center;">3</td> <td style="text-align: center;">⊖</td> <td style="border-left: 1px solid black;"></td> <td style="text-align: center;">Empty</td> </tr> </table> </div>	1	⊖		GND	2	⊖		12V	3	⊖		Empty								
1	⊖		GND																		
2	⊖		12V																		
3	⊖		Empty																		
IDE1/IDE2	<p>Primary/Secondary IDE device connectors: Attach the IDE device cables to these connectors.</p>																				
IR	<p>Infrared device connector: Attach a 5-pin infrared device cable to this connector for enabling the infrared transfer function. This mainboard meets the specification of ASKIAR and HPSIR.</p> <div data-bbox="558 794 742 1067" style="border: 1px solid black; padding: 5px; margin: 10px auto; width: fit-content;"> <p style="text-align: center;">IR Connector Pin Assignment</p> <table style="width: 100%; border-collapse: collapse;"> <tr> <td style="text-align: center; width: 20px;">1</td> <td style="text-align: center; width: 20px;">⊖</td> <td style="border-left: 1px solid black; width: 10px;"></td> <td style="text-align: center;">VCC</td> </tr> <tr> <td style="text-align: center;">2</td> <td style="text-align: center;">⊖</td> <td style="border-left: 1px solid black;"></td> <td style="text-align: center;">Empty</td> </tr> <tr> <td style="text-align: center;">3</td> <td style="text-align: center;">⊖</td> <td style="border-left: 1px solid black;"></td> <td style="text-align: center;">IRRX</td> </tr> <tr> <td style="text-align: center;">4</td> <td style="text-align: center;">⊖</td> <td style="border-left: 1px solid black;"></td> <td style="text-align: center;">GND</td> </tr> <tr> <td style="text-align: center;">5</td> <td style="text-align: center;">⊖</td> <td style="border-left: 1px solid black;"></td> <td style="text-align: center;">IRTX</td> </tr> </table> </div>	1	⊖		VCC	2	⊖		Empty	3	⊖		IRRX	4	⊖		GND	5	⊖		IRTX
1	⊖		VCC																		
2	⊖		Empty																		
3	⊖		IRRX																		
4	⊖		GND																		
5	⊖		IRTX																		

JP44	<p>Wake-on-LAN connector: Attach a 3-pin connector from the LAN card which supports the Wake-On-LAN (WOL) function. This function lets users wake up the connected computer through the LAN card. (The cable should be included with the LAN card.)</p> <div data-bbox="558 312 742 587" style="border: 1px solid black; padding: 5px; margin: 10px auto; width: fit-content;"><p style="text-align: center;">Wake-on-LAN Pin Assignment</p><table style="margin: auto;"><tr><td style="text-align: center;">5V</td><td style="text-align: center;">GND</td><td style="text-align: center;">SENSOR</td></tr><tr><td style="text-align: center;">⊖</td><td style="text-align: center;">⊖</td><td style="text-align: center;">⊖</td></tr><tr><td style="text-align: center;">1</td><td style="text-align: center;">2</td><td style="text-align: center;">3</td></tr></table></div>	5V	GND	SENSOR	⊖	⊖	⊖	1	2	3
5V	GND	SENSOR								
⊖	⊖	⊖								
1	2	3								

3 BIOS Setup

The mainboard's BIOS setup program is the ROM PCI/ISA BIOS from Award Software Inc. Enter the Award BIOS program's Main Menu as follows:

1. Turn on or reboot the system. After a series of diagnostic checks, you are asked to press DEL to enter Setup.
2. Press the key to enter the Award BIOS program and the main screen appears:

ROM PCI/ISA BIOS
CMOS SETUP UTILITY
AWARD SOFTWARE, INC.

STANDARD CMOS SETUP	INTEGRATED PERIPHERALS
BIOS FEATURES SETUP	SUPERVISOR PASSWORD
CHIPSET FEATURES SETUP	USER PASSWORD
POWER MANAGEMENT SETUP	IDE HDD AUTO DETECTION
PNP/PCI CONFIGURATION	SAVE & EXIT SETUP
LOAD SETUP DEFAULTS	EXIT WITHOUT SAVING
LOAD BIOS DEFAULTS	
Esc : Quit	↑ ↓ → ← : Select Item
F10 : Save & Exit Setup	(Shift) F2 : Change Color
Time, Date, Hard Disk Type...	

3. Choose an option and press <Enter>. Modify the system parameters to reflect the options installed in the system. (See the following sections.)
4. Press <ESC> at anytime to return to the Main Menu.
5. In the Main Menu, choose "SAVE AND EXIT SETUP" to save your changes and reboot the system. Choosing "EXIT WITHOUT SAVING" ignores your changes and exits the program.

The Main Menu options of the Award BIOS are described in the sections that follow.

Standard CMOS Setup

Run the Standard CMOS Setup as follows.

1. Choose “STANDARD CMOS SETUP” from the Main Menu. A screen appears.

ROM PCI/ISA BIOS
STANDARD CMOS SETUP
AWARD SOFTWARE, INC.

Date (mm:dd:yy) : Fri, Feb 1 1995																	
Time (hh:mm:ss) : 7 : 30 : 33																	
HARD DISKS	TYPE	SIZE	CYLS	HEAD	PRECOMP	LANDZ	SECTOR	MODE									
Primary Master	: AUTO	0	0	0	0	0	0	0	AUTO								
Primary Slave	: None	0	0	0	0	0	0	0	----								
Secondary Master	: None	0	0	0	0	0	0	0	----								
Secondary Slave	: None	0	0	0	0	0	0	0	----								
Drive A : 1.44M, 3.5 in.					<table border="1"> <tr> <td>Base Memory:</td> <td>640K</td> </tr> <tr> <td>Extended Memory:</td> <td>3328K</td> </tr> <tr> <td>Other Memory:</td> <td>128K</td> </tr> <tr> <td colspan="2">Total Memory: 4096K</td> </tr> </table>					Base Memory:	640K	Extended Memory:	3328K	Other Memory:	128K	Total Memory: 4096K	
Base Memory:	640K																
Extended Memory:	3328K																
Other Memory:	128K																
Total Memory: 4096K																	
Drive B : None																	
Floppy 3 Mode Support : Disabled																	
Video : EGA/VGA																	
Halt On : All Errors																	
Esc : Quit			↑ ↓ → ← : Select Item			PU/PD/+/- : Modify											
F11 : Help			(Shift) F2 : Change Color			F3 : Toggle Calendar											

2. Use arrow keys to move between items and select values. Modify selected fields using PgUp/PgDn/+/- keys. Some fields let you enter values directly.

Date (mm/dd/yy) Type the current date.

Time (hh:mm:ss) Type the current time.

Primary (Secondary) First, choose the type of hard disk that you already installed:

Master & Slave

- Auto – BIOS detects hard disk type automatically (default)
- 1 ~ 46 – Selects standard hard disk type
- User – User defines the type of hard disk.

Next, choose hard disk mode:

- Auto – BIOS detects hard disk mode automatically (default)
- Normal – Normal IDE hard disk (smaller than 528MB)
- LBA – Enhanced-IDE hard disk (larger than 528MB)

Primary (Secondary) Master & Slave (Continued)	<p>Large – Large IDE hard disk (for certain hard disk)</p> <p><i>Note: If you have any questions on your hard disk type or mode, ask your hard disk provider or previous user for details.</i></p>						
Drive A & B	<p>Choose 360KB , 5 1/4 in., 1.2MB , 5 1/4 in., 720KB , 3 1/2 in., 1.44M , 3 1/2 in.(default), 2.88 MB, 3 1/2 in. or Not installed</p>						
Floppy 3 Mode Support	<p>Choose Disabled (default) or Enabled. When enables this function, the system will support 720KB/1.25MB/1.44MB 3 different modes floppy diskette.</p> <p><i>Note: This function is for a special disk drive which happens to be popular in Japan.</i></p>						
Video	<p>Choose Monochrome, Color 40x25, VGA/EGA (default), Color 80x25</p>						
Halt On	<p>When BIOS detects system errors, this function will stop the system. Choose one of the following options to make system halt.</p> <table border="0" style="margin-left: 40px;"> <tr> <td data-bbox="425 973 638 1005">All Errors (default)</td> <td data-bbox="677 973 890 1005"> All, But Diskette</td> </tr> <tr> <td data-bbox="425 1005 537 1037">No Errors</td> <td data-bbox="677 1005 890 1037"> All, But Keyboard</td> </tr> <tr> <td></td> <td data-bbox="677 1037 890 1069"> All, But Disk/Key</td> </tr> </table>	All Errors (default)	All, But Diskette	No Errors	All, But Keyboard		All, But Disk/Key
All Errors (default)	All, But Diskette						
No Errors	All, But Keyboard						
	All, But Disk/Key						

3. When you finish, press the <ESC> key to return to the Main Menu.

BIOS Features Setup

Run the BIOS Features Setup as follows.

1. Choose “BIOS FEATURES SETUP” from the Main Menu and a screen with a list of items appears. (The screen below shows the BIOS default settings.)

ROM PCI/ISA BIOS BIOS FEATURES SETUP AWARD SOFTWARE, INC.			
Virus Warning	: Disabled	Video BIOS Shadow	: Enabled
CPU Internal Cache	: Enabled	C8000-CBFFF Shadow	: Disabled
External Cache	: Enabled	CC000-CFFFF Shadow	: Disabled
Quick Power on Self Test	: Enabled	D0000-D3FFF Shadow	: Disabled
Boot Sequence	: A,C,SCSI	D4000-D7FFF Shadow	: Disabled
Swap Floppy Drive	: Disabled	D8000-DBFFF Shadow	: Disabled
Boot Up Floppy Seek	: Disabled	DC000-DFFFF Shadow	: Disabled
Boot Up NumLock Status	: On		
Boot Up System Speed	: High		
Gate A20 Option	: Fast		
Typematic Rate Setting	: Disable		
Typematic Rate (Chars/Sec)	: 6		
Typematic Delay (Msec)	: 250		
Security Option	: Setup	ESC : Quit	↑ ↓ → ← : Select Item
PCI/VGA Palette Snoop	: Disabled	F1 : Help	PU/PD/+/- : Modify
Assign IRQ For VGA	: Enabled	F5 : Old Values (Shift)	F2 : Color
OS Select for DRAM >64MB	: Non-OS2	F6 : Load BIOS Defaults	
Report No FDD For WIN95	: Yes	F7 : Load Setup Defaults	

2. Use the arrow keys to move between items and to select values. Modify the selected fields using the PgUp/PgDn/+/- keys. <F> keys are explained below:
 - <F1>: “Help” gives options available for each item.
 - Shift <F2>: Change color.
 - <F5>: Get the old values. These values are the values with which the user started the current session.
 - <F6>: Load all options with the BIOS Setup default values.
 - <F7>: Load all options with the Power-On default values.

A short description of screen items follows:

CPU Internal Cache This option enables/disables the CPU’s internal cache. (The Default setting is Enabled.)

External Cache This option enables/disables the external cache memory. (The Default setting is Enabled.)

Quick Power On Self Test Enabled provides a fast POST at boot-up .

- Boot Sequence** Choose the boot device sequence as your need. For example, “A, C, SCSI” means BIOS will look for an operating system first from drive A, drive C, then SCSI device. Options of this function are:
 A, C, SCSI
 C, A, SCSI
 C, CD-ROM, A
 CD-ROM, C, A
 D, A, SCSI
 E, A, SCSI
 F, A, SCSI
 SCSI, A, C
 SCSI, C, A
 C only.
- Swap Floppy Drive** Enabled changes the sequence of the A: and B: drives. (The Default setting is Disabled.)
- Boot Up Num Lock Status** Choose **On** or **Off**. On puts numeric keypad in Num Lock mode at boot-up. Off puts this keypad in arrow key mode at boot-up.
- Typematic Rate Setting** Enable this option to adjust the keystroke repeat rate.
- Typematic Rate (Chars/Sec)** Choose the rate a character keeps repeating.
- Typematic Delay (Msec)** Choose how long after you press a key that a character begins repeating.
- Security Option** Choose **Setup** or **System**. Use this feature to prevent unauthorized system boot-up or use of BIOS Setup.
- “System” – Each time the system is booted the password prompt appears.
- “Setup” – If a password is set, the password prompt only appears if you attempt to enter the Setup program.

IDE Second Channel Control	Default setting is Enabled. Choose Disabled when you need to turn off the onboard IDE second channel.
PS/2 Mouse Function Control	Default setting is Disabled. You need to enable this function when the PS/2 mouse is attached.
PCI/VGA Palette Snoop	Enabled: The color of the monitor may be incorrect if uses with MPEG card. Enable this option to make the monitor normal. Disabled: Default setting.
OS Select for DRAM >64MB	OS2 – Choosing this when you are using OS/2 operation system. Non-OS/2 – Choosing this when you are using no-OS/2 operation system.
Video or Adapter BIOS Shadow	BIOS shadow copies BIOS code from slower ROM to faster RAM. BIOS can then execute from RAM. These 16K segments can be shadowed from ROM to RAM. BIOS is shadowed in a 16K segment if it is enabled and it has BIOS present.

3. After you have finished with the BIOS Features Setup program, press the <ESC> key and follow the screen instructions to save or disregard your settings.

Chipset Features Setup

The Chipset Features Setup option changes the values of the chipset registers. These registers control system options in the computer.

Note: Change these settings only if you are familiar with the Chipset.

Run the Chipset Features Setup as follows.

1. Choose "CHIPSET FEATURES SETUP" from the Main Menu and the following screen appears. (The screen below shows default settings.)

ROM PCI/ISA BIOS CHIPSET FEATURES SETUP AWARD SOFTWARE, INC.			
Auto Configuration	: Enabled	SDRAM CAS Latency Time	: 3
DRAM Speed Selection	: 60 ns	Auto Detect DIMM/PCI Clk	: Enabled
MA Wait State	: Slow	Spread Spectrum Modulated	: Disabled
EDO RAS# To CAS# Delay	: 3	CPU Warning Temperature	: Disabled
EDO RAS# Precharge Time	: 4		
EDO DRAM Read Burst	: x333		
EDO DRAM Write Bursts	: x333		
DRAM Data Integrity Mode	: Non-ECC		
CPU-TO-PCI IDE Posting	: Enabled		
System BIOS Cacheable	: Disabled		
Video BIOS Cacheable	: Disabled		
Video RAM Cacheable	: Disabled		
8 Bit I/O Recovery Time	: 1		
16 Bit I/O Recovery Time	: 1		
Memory Hole At 15M-16M	: Disabled		
Passive Release	: Enabled	ESC : Quit	↑ ↓ → ← : Select Item
Delayed Transaction	: Disabled	F1 : Help	PU/PD/+/- : Modify
AGP Aperture Size (MB)	: 64	F5 : Old Values (Shift)	F2 : Color
SDRAM RAS-to-CAS Delay	: Fast	F6 : Load BIOS Defaults	
SDRAM RAS Precharge Time	: Fast	F7 : Load Setup Defaults	

2. Use the arrow keys to move between items and select values. Modify selected fields using the PgUp/PgDn/+/- keys.

A short description of screen items follows:

Bank 0/1 DRAM Timing Choose 60ns, 70ns, Normal, Medium, Fast, or Turbo. Normal is the slowest and you must check the system stability before you change to the Fast or Turbo setting. Choose 60ns or 70ns only when you know the exact timing of the DRAM.

DRAM Read Pipeline Use the default setting.

Cache Rd + CPU Wt Pipeline Use the default setting.

Read Around Write	Use the default setting.
Linear Burst	Choose Enabled when you installed a Cyrix CPU and set JP22 to Linear mode.
Video BIOS Cacheable	Disabled – The ROM area F0000H-FFFFFH is not cached. Enabled – The ROM area F0000H-FFFFFH is cacheable if cache controller is enabled.
System BIOS Cacheable	Disabled – The video BIOS C0000H-C7FFFH is not cached. Enabled – The video BIOS C0000H-C7FFFH is cacheable if cache controller is enabled.
Memory Hole At 15Mb Addr	Choose Enabled or Disabled (default). Some interface cards will map their ROM address to this area. If this occurs, you should select Enabled, otherwise use Disabled.
AGP	Choose Enabled when you wish to use DRAM to extend the size of your AGP VGA card's VRAM.
AGP Aperture Size	AGP could use the DRAM as its video RAM. Choose the DRAM size that you want it to be used as video RAM. The range is from 4MB to 256MB.
OnChip USB	Default is Disabled. Enable this function when you use the USB device.
USB Keyboard Support	Enable this function when you use the USB keyboard, but notice that you need to use the regular keyboard first before getting in the BIOS setup.

**Spread Spectrum
Modulated**

Choose **Disabled** (default) or Enabled.
Select Enabled when uses Spread
Spectrum Modulated 1.5% or 6% for FCC
or DOC testing.

3. After you have finished with the Chipset Features Setup, press the <ESC> key and follow the screen instructions to save or disregard your settings.

Power Management Setup

The Power Management Setup option sets the system’s power saving functions.

Run the Power Management Setup as follows.

1. Choose “POWER MANAGEMENT SETUP” from the Main Menu and a screen with a list of items appears.

ROM PCI/ISA BIOS CMOS SETUP UTILITY POWER MANAGEMENT SETUP			
Power Management	: User Define	IRQ 8 Break Suspend	: Disabled
PM Control by APM	: Yes	** Reload global Timer Events **	
Video Off Method	: V/H SYNC+Blank	IRQ [3-7, 9-15],NMI	: Enabled
Video Off After	: Standby	Primary IDE 0	: Disabled
Modem Use IRQ	: 3	Primary IDE 1	: Disabled
Doze Mode	: Disabled	Secondary IDE 0	: Disabled
Standby Mode	: Disabled	Secondary IDE 1	: Disabled
Suspend Mode	: Disabled	Floppy Disk	: Disabled
HDD Power Down	: Disabled	Serial Port	: Enabled
Throttle Duty Cycle	: 62.5%	Parallel Port	: Disabled
ZZ Active in Suspend	: Disabled		
VGA Active Monitor	: Enabled		
Soft-Off by PWR-BTBN	: Instant-Off	ESC : Quit	↑ ↓ → ← : Select Item
CPU Fan Off In Suspend	: Enabled	F1 : Help	PU/PD/+/- : Modify
Resume by Ring	: Disabled	F5 : Old Values (Shift)F2 : Color	
Resume by Alarm	: Disabled	F6 : Load BIOS Defaults	
		F7 : Load Setup Defaults	

2. Use the arrow keys to move between items and to select values. Modify the selected fields using the PgUp/PgDn/+/- keys.

A short description of selected screen items follows:

Power Management	Options are as follows:
User Define –	Let’s you define the HDD and system power down times.
Disabled –	Disables the Green PC Features.
Min Saving –	Doze timer = 1 Hour Suspend timer = 1 Hour HDD Power Down = 15 Min
Max Saving –	Doze timer = 10 Sec Suspend timer = 10 Sec HDD Power Down = 1 Min

PM Control by APM	Choose Yes (default) or No . APM stands for Advanced Power Management. To use APM, you must run "power.exe" under DOS v6.0 or later version.
Video Off Option	<p>Susp, Stby→off: Video off when the system runs into Suspend or Standby mode.</p> <p>All Modes→off: Video off in all modes.</p> <p>Always On: Video never off.</p> <p>Suspend→off: Video off when system runs into the suspend mode.</p>
Video Off Method	Choose V/H Sync+Blank (default), Blank screen , or DPMS for the selected PM mode.
Conserve Mode	Use the default setting.
HDD Power Down	When the set time has elapsed, the BIOS sends a command to the HDD to power down, which turns off the motor. Time is adjustable from 1 to 15 minutes. The default setting is Disabled. Some older model HDDs may not support this advanced function.
Doze Mode	When the set time has elapsed, the BIOS sends a command to the system to enter doze mode (system clock drops to 33MHz). Time is adjustable from 10 seconds to 1 Hour.
Suspend Mode	The default is Disabled. Only an SL-Enhanced (or SMI) CPU can enter this mode. Time is adjustable from 10 seconds to 1 Hour. Under Suspend mode, the CPU stops completely (no instructions are executed.)
VGA	Choose Off (default) or On to disable or enable the power management.

LPT & COM	Choose LPT/COM (default) or LPT (COM) to enable the power management timer. Choose NONE to disable the power management timer.
HDD & FDD	Choose On (default) to enable the power management timer, or Off to disable the power management timer.
DMA/master	Choose Off (default) or On . If you choose the system “Off”, will not monitor the signal of DMA/master; and when you choose “On”, the system will not have SMI signal until the master is finished while the master is working.
Primary INTR	When On (default) is chosen, you can choose any IRQ #.
IRQ#	When set at “Primary” the processor will power down only after the BIOS detects a “no IRQ activity” during the time specified by the Suspend time. If set at “Secondary event” the system will distinguish whether an interrupt accesses and I/O address or not. If it does, the system enters the standby mode. If not, the system enters the dreaming mode; that is the system goes back full-on status but leaves the monitor blank. For instance, if the system connects to a LAN and receives an interrupt from its file server, the system will enter the dreaming mode to execute the corresponding calling routine.

3. After you have finished with the Power Management Setup, press the <ESC> key to return to the Main Menu.

PNP/PCI Configuration Setup

This option sets the mainboard's PCI Slots. Run this option as follows:

1. Choose "PNP/PCI CONFIGURATION SETUP" from the Main Menu and the following screen appears. (The screen below shows default settings.)

ROM PCI/ISA BIOS PNP/PCI CONFIGURATION AWARD SOFTWARE, INC.	
PNP OS Install : No	PCI IDE IRQ Map To : PCI-AUTO
Resources Controlled By : Manual	Primary IDE INT# : A
Reset Configuration Data : Disabled	Secondary IDE INT# : B
IRQ-3 assigned to : PCI/ISA PnP*	Used MEM Base Addr : N/A
IRQ-4 assigned to : PCI/ISA PnP*	Used MEM Length : 8K
IRQ-5 assigned to : PCI/ISA PnP*	Assign IRQ For USB : Enabled
IRQ-7 assigned to : PCI/ISA PnP*	
IRQ-9 assigned to : PCI/ISA PnP*	
IRQ-10 assigned to : PCI/ISA PnP*	
IRQ-11 assigned to : PCI/ISA PnP*	
IRQ-12 assigned to : PCI/ISA PnP*	
IRQ-14 assigned to : PCI/ISA PnP*	
IRQ-15 assigned to : PCI/ISA PnP*	
DMA-0 assigned to : PCI/ISA PnP*	
DMA-1 assigned to : PCI/ISA PnP*	
DMA-3 assigned to : PCI/ISA PnP*	
DMA-5 assigned to : PCI/ISA PnP*	
DMA-6 assigned to : PCI/ISA PnP*	
DMA-7 assigned to : PCI/ISA PnP*	
	ESC : Quit ↑↓ → ←: Select Item
	F1 : Help PU/PD/+/- : Modify
	F5 : Old Values (Shift)F2 : Color
	F6 : Load BIOS Defaults
	F7 : Load Setup Defaults

*: *These items will disappear when Resource Controlled. is Auto.*

2. Use the arrow keys to move between items and select values. Modify selected fields using the PgUp/PgDn/+/- keys.

A short description of screen items follows:

Resources Controlled By Manual – BIOS doesn't manage PCI/ISA PnP card (i.e., IRQ) automatically.

Auto – BIOS auto manage PCI and ISA PnP card (recommended).

Reset Configuration Data Disabled – Retain PnP configuration data in BIOS.

Enabled – Reset PnP configuration data in BIOS.

- | | |
|---------------------------------|--|
| IRQX and DMA assigned to | Choose PCI/ISA PnP or Legacy ISA . If the first item is set to Manual, you could choose IRQX and DMA assigned to PCI/ISA PnP card or ISA card. |
| PCI IRQ Activated By | Choose Edge or Level . Most PCI trigger signals are Level. This setting must match the PCI card. |
| PCI IDE IRQ Map To | Select PCI-AUTO , ISA , or assign a PCI SLOT number (depending on which slot the PCI IDE is inserted). The default setting is PCI-AUTO. If PCI-AUTO does not work, then assign an individual PCI SLOT number. |
| Primary IDE INT# | Choose INTA#, INTB#, INTC#, or INTD#. The default setting is INTA#. |
| Secondary IDE INT# | Choose INTA#, INTB#, INTC#, or INTD#. The default setting is INTB#. |
3. After you have finished with the PCI Slot Configuration, press the <ESC> key and follow the screen instructions to save or disregard your settings.

Load Setup Defaults

This item loads the system values you have previously saved. Choose this item and the following message appears:

“Load SETUP Defaults (Y/N)? N”

To use the SETUP defaults, change the prompt to “Y” and press <Enter>. This item is recommended if you need to reset the system setup.

Note: The SETUP Defaults are optimized for the most stabilized performance.

Load BIOS Defaults

Choose this item and the following message appears:

“Load BIOS Defaults (Y/N)?N”

To use the BIOS defaults, change the prompt to “Y” and press <Enter>.

Note: BIOS DEFAULTS values are adjusted for high performance. If you run into any problems after loading BIOS DEFAULTS, please load the SETUP DEFAULTS for the stable performance.

Integrated Peripherals

The Integrated Peripherals option changes the values of the chipset registers. These registers control system options in the computer.

Note: Change these settings only if you are familiar with the Chipset.

Run the Integrated Peripherals as follows.

1. Choose “Integrated Peripherals” from the Main Menu and the following screen appears. (The screen below shows default settings:)

ROM PCI/ISA BIOS INTEGRATED PERIPHERALS AWARD SOFTWARE, INC.			
IDE HDD Block Mode	: Enabled	RxD, TxD Active	: Hi, Lo
IDE Primary Master PIO	: Auto	IR Transmission Delay	: Enabled
IDE Primary Slave PIO	: Auto	Onboard Parallel Port	: 378/IRQ7
IDE Secondary Master PIO	: Auto	Parallel Port Mode	: ECP+EPP
IDE Secondary Slave PIO	: Auto	ECP Mode Use DMA	: 3
IDE Primary Master UDMA	: Auto	EPP Mode Select	: EPP1.9
IDE Primary Slave UDMA	: Auto		
IDE Secondary Master UDMA	: Auto		
IDE Secondary Slave UDMA	: Auto		
On-Chip Primary PCI IDE	: Enabled	ESC : Quit	↑ ↓ → ← : Select Item
On-Chip Secondary PCI IDE	: Enabled	F1 : Help	PU/PD/+/- : Modify
USB Keyboard Support	: Disabled	F5 : Old Values (Shift)F2 : Color	
KBC Input Clock	: 12MHz	F6 : Load BIOS Defaults	
Onboard FDC Controller	: Enabled	F7 : Load Setup Defaults	
Onboard Serial Port 1	: 3F8/IRQ4		
Onboard Serial Port 2	: 2F8/IRQ3		
UART Mode Select	: Normal		

2. Use the arrow keys to move between items and select values. Modify selected fields using the PgUp/PgDn/+/- keys.

A short description of screen items follows:

- On-chip IDE First Channel/** Enabled – Use the on-board IDE (default)
- On-chip IDE Second Channel** Disabled – Turn off the on-board IDE
- IDE Prefetch Mode** Use the default setting.
- IDE HDD Block Mode** Choose **Enabled** (default) or **Disabled**. Enabled invokes multi-sector transfer instead of one sector per transfer. Not all HDDs support this function.

IDE Primary Master PIO/ IDE Primary Slave PIO/ IDE Secondary Master PIO/ IDE Secondary Slave PIO	Choose Auto (default) or mode 0~4 . Mode 0 is the slowest speed, and HDD mode 4 is the fastest speed. For better performance and stability, we suggest you use the Auto setting to set the HDD control timing.
IDE Secondary Master UDMA IDE Secondary Slave UDMA	Choose Auto (default) or Disabled . When Auto is selected, it supports Ultra DMA Mode.
Onboard FDC Controller	Enabled – Use the on-board floppy controller (default). Disabled – Turn off the on-board floppy controller.
Onboard UART 1/ Onboard UART 2	Choose serial port 1 & 2's I/O address. Do not set port 1 & 2 to the same value except for Disabled. COM 1/3F8H COM3/3E8H COM 2/2F8H COM4/2E8H (default)
Onboard UART 2 Mode	Standard – (default) supports a serial infrared IrDA. HPSIR – supports HP serial infrared interface format ASKIR – supports a Sharp serial interface format.
IR Duplex Mode	Use the default setting (Half). This function shows up only when either HPSIR or ASKIR is chosen in the previous function (Onboard UART 2 Mode).
Onboard Parallel Port	Choose the printer I/O address: 378H/IRQ7 (default), 3BCH/IRQ7, 278H/IRQ5

Parallel Port Mode	Choose ECP + EPP (default), Normal or EPP , ECP mode. The mode depends on your external device that connects to this port.
ECP Mode Use DMA	Choose DMA3 (default) or DMA1 . This setting only works when the Onboard Printer Mode is set at the ECP mode.
Parallel Port EPP Type	Choose EPP specification Ver. 1.7 or 1.9 (default).

Supervisor Password

Based on the setting you made in the “Security Option” of the “BIOS FEATURES SETUP”, this Main Menu item lets you configure the system so that a password is required every time the system boots or an attempt is made to enter the Setup program. Change the password as follows:

1. Choose “SUPERVISOR PASSWORD” in the Main Menu and press <Enter>. The following message appears:

“Enter Password:”

2. Enter a password and press <Enter>. (If you do not wish to use the password function, you can just press <Enter> and a “Password disabled” message appears.)
3. After you enter your password, the following message appears prompting you to confirm the new password:

“Confirm Password:”

4. Re-enter your password and then Press <ESC> to exit to the Main Menu.

Important: *If you forget or lose the password, the only way to access the system is to set jumper JP5 to clear the CMOS RAM. All setup information is lost and you must run the BIOS setup program again.*

User Password

Based on the setting you made in the “Security Option” of the “BIOS FEATURES SETUP”, this Main Menu item lets you configure the system so that a password is required every time the system boots or an attempt is made to enter the Setup program. Change the password as follows:

1. Choose “USER PASSWORD” in the Main Menu and press <Enter>. The following message appears:

“Enter Password:”

2. Enter a password and press <Enter>. (If you do not wish to use the password function, you can just press <Enter> and a “Password disabled” message appears.)
3. After you enter your password, the following message appears prompting you to confirm the new password:

“Confirm Password:”

4. Re-enter your password and then Press <ESC> to exit to the Main Menu.
5. You are not allowed to change any setting in “CMOS SETUP UTILITY” except change user’s password.

Important: If you forget or lose the password, the only way to access the system is to set jumper JP5 to clear the CMOS RAM. All setup information is lost and you must run the BIOS setup program again.

IDE HDD Auto Detection

This Main Menu item automatically detects the hard disk type and configures the STANDARD CMOS SETUP accordingly.

Note: This function is only valid for IDE hard disks.

ROM PCI/ISA BIOS
CMOS SETUP UTILITY
AWARD SOFTWARE, INC.

HARD DISKS	TYPE	SIZE	CYLS	HEAD	PRECOMP	LANDZ	SECTOR	MODE
Primary Master	: None	0	0	0	0	0	0	----
Primary Slave	: None	0	0	0	0	0	0	----
Secondary Master	: None	0	0	0	0	0	0	----
Secondary Slave	: None	0	0	0	0	0	0	----


Do you accept this drive C (Y/N)? N

ESC : Skip

Quick Installation Guide

This Quick Installation Guide leaflet is designed for those people who are familiar with motherboard settings to set up this new motherboard in order to boot up the system. Refer back to the proper chapters if you have run in to any problems.

Motherboard Layout

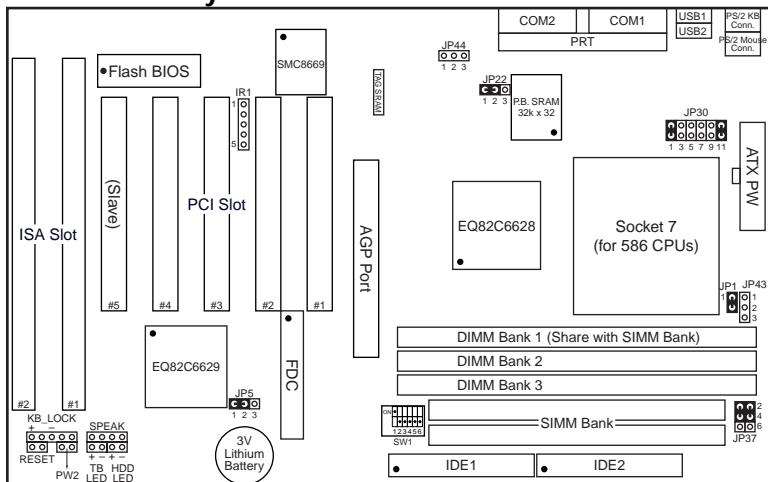

CPU Voltage and Frequency Jumper Settings

Voltage Settings: JP30

CPU Frequency Settings: SW1

	1-2	3-4	5-6	7-8	9-10	11-12	Multiplier	1	2	3	Frequency	4	5	6
Single 3.52V	close	open	open	open	open	close	1.5x/3.5x	off	off	off	50MHz	on	on	off
Single 3.3V	close	open	open	open	close	open	2.0x	on	off	off	60MHz	off	off	off
Dual 3.2V	close	open	open	close	open	open	2.5x	on	on	off	66MHz	on	off	off
Dual 2.9V	close	open	close	open	open	open	3.0x	off	on	off	75MHz	off	on	off
Dual 2.8V	close	open	open	open	open	close	4.0x	on	off	on				
							4.5x	on	on	on				
							5.0x	off	on	on				

Memory Configuration

	SIMM Bank	DIMM Bank			
	Bank 0	DIMM 1	DIMM 2	DIMM 3	
RAM Type	FPM/EDO	FPM/EDO/SDRAM	FPM/EDO/SDRAM	FPM/EDO/SDRAM	
Size (MB)	4/8/16/32/64	4/8/16/32/64/128	4/8/16/32/64/128	4/8/16/32/64/128	

Note: Do not use FPM or EDO SIMM/DIMM if you already use SDRAM. Do not use Bank0 and DIMM1 at the same time.

ETEQ Drivers Installation Guide

Part 1 : AGP Card

Follow the steps below to install the software for AGP VGA card :

1. Install Windows 95 OSR2 to your hard drive.
2. Browse the OSR2 CD-ROM after you successful install your system.
3. Change the directory to \OSR2\USBSUPP.
4. Excute the USBSUPP.EXE file to solve the question mark on USB under Device Manager.
5. Install the drivers that came with your AGP VGA card.
6. Restart your system.
7. Install DIRECT X 5 to the system.
8. Restart your system.
9. Shell to DOS prompt.
10. Make a new directory "VXD"
11. Find the ETEQVXD.EXE file from the floppy/CD-ROM that came with your motherboard.
12. Copy this file to the VXD directory.
13. Excute it and follow the instructions on screen.
14. Restart your system.
15. Open "Microsoft DirectX-5 SDK" icon then double click on "DirectX Viewer"
16. Switch to "DirectDraw Devices" then check if you can see any digit on the items below :
"Video", "Video [Local]", "Video [non-Local], and "Texture". If you can see the digits on these items, AGP VGA drivers are installed successfully.

Part 2 : South Bridge Identify Issue

ETEQ south bridge chipset can not be identified by Windows 95 and so it shows two question marks under Device Manager. Therefore, we provide drivers for you to solve this problem. Please find the ETEQACPI.EXE file from the floppy/CD-ROM that came with your motherboard and install it.

Part 3 : IDE Bus Master/Ultra DMA Drivers

If you have IDE devices that support Bus Master or Ultra DMA function, you need to install the drivers to enable these functions. Please find the ETEQIDE4.EXE file from the floppy/CD-ROM that came with your motherboard and install it.